

R&S® ESR

EMI Test Receiver

User Manual



This manual covers the following products:

- R&S ESR3 (1316.3003.03)
- R&S ESR7 (1316.3003.07)
- R&S ESR26 (1316.3003.26)
- R&S FSV-B9
- R&S ESR-B50 (1316.3584.02)
- R&S ESR-K53 (1316.3590.02)
- R&S ESR-K56 (1316.3610.02)

The contents of this manual correspond to firmware version 3.46 or higher.

Safety Instructions

Instrucciones de seguridad

Sicherheitshinweise

Consignes de sécurité

WARNING

Risk of injury and instrument damage

The instrument must be used in an appropriate manner to prevent personal injury or instrument damage.

- Do not open the instrument casing.
 - Read and observe the "Basic Safety Instructions" delivered as printed brochure with the instrument.
 - Read and observe the safety instructions in the following sections. Note that the data sheet may specify additional operating conditions.
 - Keep the "Basic Safety Instructions" and the product documentation in a safe place and pass them on to the subsequent users.
-

ADVERTENCIA

Riesgo de lesiones y daños en el instrumento

El instrumento se debe usar de manera adecuada para prevenir descargas eléctricas, incendios, lesiones o daños materiales.

- No abrir la carcasa del instrumento.
 - Lea y cumpla las "Instrucciones de seguridad elementales" suministradas con el instrumento como folleto impreso.
 - Lea y cumpla las instrucciones de seguridad incluidas en las siguientes secciones. Se debe tener en cuenta que las especificaciones técnicas pueden contener condiciones adicionales para su uso.
 - Guarde bien las instrucciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.
-

⚠️ WARNUNG**Gefahr von Verletzungen und Schäden am Gerät**

Betreiben Sie das Gerät immer ordnungsgemäß, um elektrischen Schlag, Brand, Verletzungen von Personen oder Geräteschäden zu verhindern.

- Öffnen Sie das Gerätegehäuse nicht.
 - Lesen und beachten Sie die "Grundlegenden Sicherheitshinweise", die als gedruckte Broschüre dem Gerät beiliegen.
 - Lesen und beachten Sie die Sicherheitshinweise in den folgenden Abschnitten; möglicherweise enthält das Datenblatt weitere Hinweise zu speziellen Betriebsbedingungen.
 - Bewahren Sie die "Grundlegenden Sicherheitshinweise" und die Produktdokumentation gut auf und geben Sie diese an weitere Benutzer des Produkts weiter.
-

⚠️ AVERTISSEMENT**Risque de blessures et d'endommagement de l'appareil**

L'appareil doit être utilisé conformément aux prescriptions afin d'éviter les électrocutions, incendies, dommages corporels et matériels.

- N'ouvrez pas le boîtier de l'appareil.
 - Lisez et respectez les "consignes de sécurité fondamentales" fournies avec l'appareil sous forme de brochure imprimée.
 - Lisez et respectez les instructions de sécurité dans les sections suivantes. Il ne faut pas oublier que la fiche technique peut indiquer des conditions d'exploitation supplémentaires.
 - Gardez les consignes de sécurité fondamentales et la documentation produit dans un lieu sûr et transmettez ces documents aux autres utilisateurs.
-

Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.



Contents

1	Preface	21
1.1	For Your Safety	21
1.2	Conventions Used in the Documentation	21
1.2.1	Typographical Conventions.....	21
1.2.2	Conventions for Procedure Descriptions.....	22
1.2.3	Notes on Screenshots.....	22
1.3	How to Use the Help System	22
2	Documentation Overview	25
2.1	Getting Started Manual	25
2.2	User Manuals and Help	25
2.3	Service Manual	25
2.4	Instrument Security Procedures	26
2.5	Basic Safety Instructions	26
2.6	Data Sheets and Brochures	26
2.7	Release Notes and Open Source Acknowledgment (OSA)	26
2.8	Application Notes, Application Cards, White Papers, etc	26
3	Quick Start	27
3.1	Front and Rear Panel View	27
3.1.1	Front Panel View.....	27
3.1.1.1	Function Keys on the Front Panel.....	28
3.1.1.2	Touchscreen Display.....	31
3.1.1.3	Connectors on the Front Panel.....	33
3.1.1.4	Optional Front Panel Connectors.....	34
3.1.2	Rear Panel View.....	35
3.1.2.1	Standard Rear Panel Connectors.....	36
3.1.2.2	Optional Rear Panel Connectors.....	38
3.2	Preparing for Use	39
3.2.1	Putting into Operation.....	39
3.2.1.1	Unpacking and Checking the Instrument.....	40
3.2.1.2	Accessory List.....	40
3.2.1.3	Placing or Mounting the Instrument.....	41

3.2.1.4	Connecting the AC Power.....	42
3.2.1.5	Changing the AC Supply Fuse.....	43
3.2.1.6	Using an Optional DC Power Supply.....	43
3.2.1.7	Switching the Instrument On and Off.....	44
3.2.1.8	Maintenance.....	45
3.2.1.9	Performing a Self Alignment and a Self Test.....	45
3.2.1.10	Checking the Supplied Options.....	46
3.2.2	Connecting USB Devices.....	46
3.2.3	Connecting an External Monitor.....	48
3.2.4	R&S ESR Setup.....	48
3.2.4.1	Selecting the Frequency Reference Signal.....	48
3.2.4.2	Setting the Date and Time.....	49
3.2.4.3	Aligning the Touchscreen.....	50
3.2.4.4	Setting the Screen Colors.....	50
3.2.4.5	Setting the Display Power Save Function.....	53
3.2.4.6	Selecting and Configuring Printers.....	54
3.2.5	Windows Operating System.....	56
3.2.5.1	Virus Protection.....	56
3.2.5.2	Service Packs and Updates.....	56
3.2.5.3	Login.....	57
3.2.5.4	Accessing the Start Menu.....	59
3.2.5.5	Accessing the Windows Taskbar.....	59
3.2.6	Configuring the GPIB Interface.....	59
3.3	Firmware Update and Installation of Firmware Options.....	60
3.3.1	Firmware Update.....	60
3.3.2	Activating Firmware Options.....	62
3.4	Basic Operations.....	63
3.4.1	Information in the Diagram Area.....	63
3.4.1.1	Channel Display.....	64
3.4.1.2	Display of Hardware Settings.....	64
3.4.1.3	Measurement Settings Information.....	65
3.4.1.4	Diagram-specific and Trace Information.....	66
3.4.1.5	Instrument and Status Information.....	69

3.4.2	Means of User Interaction.....	70
3.4.2.1	Toolbar.....	70
3.4.2.2	Touchscreen.....	72
3.4.2.3	On-screen Keyboard.....	72
3.4.2.4	Keypad.....	73
3.4.2.5	Rotary Knob.....	74
3.4.2.6	Arrow Keys, UNDO/REDO Keys.....	74
3.4.2.7	Softkeys.....	75
3.4.2.8	Context-sensitive Menus.....	76
3.4.2.9	Dialog Boxes.....	77
3.4.3	Setting Parameters.....	78
3.4.3.1	Entering Numeric Parameters.....	78
3.4.3.2	Entering Alphanumeric Parameters.....	78
3.4.3.3	Navigating in Dialog Boxes.....	80
3.4.4	Changing the Display.....	83
3.4.4.1	Changing the Focus.....	83
3.4.4.2	Switching between Split and Maximized Display.....	83
3.4.4.3	Soft and Mini Soft Front Panel Display.....	83
3.4.4.4	Enlarging the Display Area.....	86
3.4.4.5	Displaying the Toolbar.....	86
3.4.4.6	Zooming into the Diagram.....	87
3.4.4.7	Adding a Title to the Diagram Header.....	89
3.4.4.8	Removing the Diagram Footer.....	89
3.4.4.9	Selecting a Theme.....	90
3.4.4.10	Displaying and Setting the Date and Time.....	90
3.4.4.11	Changing the Display Update Rate.....	91
3.5	Basic Measurement Examples.....	91
3.5.1	Measuring a Sinusoidal Signal.....	91
3.5.1.1	Measuring the Level and Frequency Using Markers.....	92
3.5.1.2	Measuring the Signal Frequency Using the Frequency Counter.....	94
3.5.2	Measuring Harmonics of Sinusoidal Signals.....	96
3.5.3	Measuring Signal Spectra with Multiple Signals.....	99
3.5.3.1	Separating Signals by Selecting the Resolution Bandwidth.....	99

3.5.3.2	Measuring the Modulation Depth of an AM-Modulated Carrier (Span > 0).....	103
3.5.3.3	Measuring AM-Modulated Signals.....	104
3.5.4	Measurements in Zero Span.....	106
3.5.4.1	Measuring the Power Characteristic of Burst Signals.....	106
3.5.4.2	Measuring the Signal-to-Noise Ratio of Burst Signals.....	110
3.5.4.3	Measuring FM-Modulated Signals.....	113
3.5.5	Storing and Loading Instrument Settings.....	116
3.5.5.1	Storing an Instrument Configuration (without Traces).....	117
3.5.5.2	Storing Traces.....	118
3.5.5.3	Loading an Instrument Configuration (with Traces).....	118
3.5.5.4	Configuring Automatic Loading.....	118
3.6	Brief Introduction to Remote Control.....	119
3.6.1	Basic Steps in Remote Control Programming.....	119
3.6.1.1	Linking the Remote Control Library for Visual Basic.....	120
3.6.1.2	Initialization and Default State.....	122
3.6.1.3	Sending Simple Instrument Setting Commands.....	124
3.6.1.4	Switching to Manual Operation.....	124
3.6.1.5	Reading Out Instrument Settings.....	124
3.6.1.6	Marker Positioning and Readout.....	125
3.6.1.7	Command Synchronization.....	125
3.6.2	Detailed Programming Examples.....	127
3.6.2.1	Default Setting of the R&S ESR.....	127
3.6.2.2	Using Markers and Delta Markers.....	129
3.6.2.3	Reading Out Trace Data.....	134
3.6.2.4	Storing and Loading Instrument Settings.....	135
3.6.2.5	Configuring and Starting a Printout.....	137
4	Measurement Modes.....	140
4.1	Receiver Mode.....	140
4.2	Spectrum Mode.....	140
4.3	I/Q Analyzer Mode.....	141
4.4	Real Time Mode.....	141
4.5	Measurement Mode Root Menus (HOME Key).....	141
5	Receiver Mode.....	142

5.1	Measurements and Result Displays.....	142
5.1.1	Bargraph Measurement.....	142
5.1.2	IF Spectrum Analysis.....	143
5.1.3	Scans.....	144
5.1.3.1	Stepped Scans in the Frequency Domain.....	145
5.1.3.2	Time Domain Scans in the Frequency Domain.....	146
5.1.3.3	The Scan Table.....	146
5.1.3.4	Scan on a Fixed Frequency.....	148
5.1.4	Peak List and Data Reduction.....	148
5.1.5	Final Measurement.....	150
5.1.6	Spectrogram.....	151
5.1.6.1	How a Spectrogram Works.....	151
5.1.6.2	Color Map.....	152
5.1.7	Measurement Control.....	156
5.1.7.1	Running Scans and Measurements.....	156
5.1.7.2	Selecting the Result Display.....	156
5.1.7.3	Bargraph Control.....	157
5.1.7.4	Scan Control.....	158
5.1.7.5	Final Measurement Control.....	160
5.1.7.6	Measurement Settings.....	162
5.1.7.7	Spectrogram Configuration.....	164
5.2	Measurement Basics.....	166
5.2.1	Measurement Bandwidth.....	166
5.2.2	Detectors.....	167
5.2.3	Trace Modes.....	171
5.2.4	AF Demodulation.....	172
5.2.5	V-Networks Control (LISN).....	173
5.2.6	Transducers.....	174
5.2.7	Preamplifier.....	175
5.2.8	Exported Peak List.....	176
5.2.9	Formats for Returned Values: ASCII Format and Binary Format.....	177
5.3	Common Measurement Settings.....	178
5.3.1	Defining the Frequency and Span.....	179

5.3.2	Configuring the Level Display and the RF Input.....	181
5.3.3	Selecting the Bandwidth.....	184
5.3.4	Configuring the Scan.....	185
5.3.5	Configuring the Trigger	186
5.3.6	Controlling Inputs and Outputs.....	187
5.3.7	Test Automation.....	188
5.3.7.1	Overview	188
5.3.7.2	Scan Table.....	189
5.3.7.3	Peak Search.....	192
5.3.7.4	Peak Lists.....	194
5.3.7.5	Trace / Final Meas.....	195
5.3.7.6	LISN Settings.....	196
5.4	Common Analysis Functions.....	198
5.4.1	Trace Configuration.....	198
5.4.2	Markers.....	200
5.4.2.1	Controlling Markers.....	200
5.4.2.2	Positioning Markers.....	204
5.4.2.3	Markers in Spectrograms.....	207
5.4.3	(Limit) Lines.....	208
5.4.3.1	Softkeys of the Lines Menu.....	209
5.4.3.2	Display Lines.....	213
5.4.3.3	Limit Lines (Frequency/Time Lines).....	214
5.4.3.4	Working with Lines.....	215
5.4.3.5	Selecting a Limit Line.....	215
5.4.3.6	Creating a New Limit Line.....	216
5.4.3.7	Editing an Existing Limit Line.....	219
5.4.3.8	Creating a New Limit Line Based upon an Existing Limit Line.....	219
5.4.3.9	Activating/Deactivating a Limit Line.....	220
6	Spectrum Measurements.....	221
6.1	Measurements.....	221
6.1.1	Power Measurements – MEAS Key.....	221
6.1.1.1	Softkeys of the Power Measurement Menu.....	222
6.1.1.2	Measuring Channel Power and Adjacent-Channel Power.....	225

6.1.1.3	Measuring the Carrier-to-Noise Ratio.....	249
6.1.1.4	Measuring the Occupied Bandwidth.....	252
6.1.1.5	Measuring with Spectrum Emission Masks.....	256
6.1.1.6	Measuring Spurious Emissions.....	283
6.1.1.7	Measuring the Power in Zero Span.....	294
6.1.1.8	Performing EMI Measurements.....	297
6.1.1.9	CISPR APD Measurement (Amplitude Probability Distribution).....	307
6.1.1.10	Calculating Signal Amplitude Statistics.....	312
6.1.1.11	Measuring the Third Order Intercept Point (TOI).....	330
6.1.1.12	Measuring the AM Modulation Depth.....	336
6.1.1.13	Measuring Harmonic Distortion.....	337
6.1.2	Measurement Configuration – MEAS CONFIG Key.....	341
6.1.3	Performing Measurements – RUN SINGLE/RUN CONT Keys.....	341
6.2	Configuration.....	342
6.2.1	Initializing the Configuration – PRESET Key.....	342
6.2.1.1	Presetting the Instrument.....	342
6.2.1.2	Initial Configuration.....	343
6.2.2	Selecting the Frequency and Span – FREQ Key.....	344
6.2.2.1	Softkeys of the Frequency Menu.....	344
6.2.2.2	Specifying the Frequency Axis by the Start and Stop Frequency.....	348
6.2.2.3	Specifying the Frequency Axis by the Center Frequency and the Span.....	348
6.2.2.4	Specifying the Step Size for the Arrow Keys and the Rotary Knob.....	348
6.2.2.5	Modifying the Frequency Axis by an Offset.....	349
6.2.2.6	Tracking Signals (Span > 0).....	349
6.2.3	Setting the Frequency Span – SPAN Key.....	349
6.2.3.1	Softkeys of the Span Menu.....	350
6.2.3.2	Specifying the Span (Alternatives).....	350
6.2.4	Setting the Level Display and Configuring the RF Input – AMPT Key.....	351
6.2.4.1	Softkeys of the Amplitude Menu.....	351
6.2.4.2	Specifying the Amplitude.....	356
6.2.5	Defining Automatic Settings – AUTO SET Key.....	356
6.2.5.1	Softkeys of the Auto Set Menu.....	356
6.2.6	Setting the Bandwidths and Sweep Time – BW Key.....	360

6.2.6.1	Softkeys of the Bandwidth Menu.....	360
6.2.6.2	Specifying the Bandwidth.....	366
6.2.6.3	Selecting the Appropriate Filter Type.....	366
6.2.6.4	List of Available RRC and Channel Filters.....	367
6.2.7	Configuring the Sweep Mode – SWEEP Key.....	369
6.2.7.1	Softkeys of the Sweep Menu.....	369
6.2.7.2	Specifying the Sweep Settings.....	374
6.2.8	Triggering the Sweep – TRIG Key.....	374
6.2.8.1	Softkeys of the Trigger Menu.....	374
6.2.8.2	Specifying the Trigger Settings.....	381
6.2.8.3	Using Gated Sweep Operation.....	381
6.2.9	Input/Output Configuration – INPUT/OUTPUT Key.....	383
6.2.9.1	Softkeys of the Input/Output Menu.....	383
6.2.9.2	Using Active Probes for Input.....	385
6.3	Analysis.....	387
6.3.1	Trace Configuration.....	387
6.3.1.1	Softkeys of the Trace Menu.....	388
6.3.1.2	Configuring Traces.....	395
6.3.1.3	Specifying the Trace Settings.....	397
6.3.1.4	Description of the Averaging Method.....	397
6.3.1.5	Detector Overview.....	399
6.3.1.6	ASCII File Export Format.....	399
6.3.2	Spectrogram.....	402
6.3.2.1	Working with Spectrograms.....	402
6.3.2.2	Softkeys of the Spectrogram Menu.....	405
6.3.3	Markers.....	406
6.3.3.1	Controlling Markers.....	406
6.3.3.2	Positioning Markers (MKR→ Key).....	411
6.3.3.3	Performing Peak Searches with Markers – PEAK SEARCH Key.....	415
6.3.3.4	Measuring with Markers (MKR FUNC Key).....	416
6.3.4	Lines.....	429
6.4	Advanced Measurement Examples.....	430
6.4.1	Test Setup.....	430

6.4.2	Measurement of Harmonics.....	431
6.4.3	Measuring the Spectra of Complex Signals.....	433
6.4.3.1	Separating Signals by Selecting an Appropriate Resolution Bandwidth.....	433
6.4.3.2	Intermodulation Measurements.....	434
6.4.4	Measuring Signals in the Vicinity of Noise.....	436
6.4.4.1	Measurement Example – Measuring Level at Low S/N Ratios.....	437
6.4.5	Noise Measurements.....	441
6.4.5.1	Measuring Noise Power Density.....	442
6.4.5.2	Measurement of Noise Power within a Transmission Channel.....	444
6.4.5.3	Measuring Phase Noise.....	446
6.4.6	Measurements on Modulated Signals.....	448
6.4.6.1	Measuring Channel Power and Adjacent Channel Power.....	448
6.4.6.2	Amplitude Distribution Measurements.....	455
7	I/Q Analyzer.....	458
7.1	Softkeys and Parameters of the I/Q Analyzer Menu.....	459
7.2	Softkeys of the Amplitude Menu in I/Q Analyzer Mode.....	464
7.3	Softkeys of the Marker To Menu in I/Q Analyzer Mode.....	469
7.4	Softkeys of the Trigger Menu in I/Q Analyzer Mode.....	469
7.5	Working with I/Q Data.....	473
7.5.1	Sample Rate and Maximum Usable Bandwidth (RF Input).....	474
8	Tracking Generator.....	476
8.1	Softkeys of the Tracking Generator Menu.....	476
8.2	Connecting External Tracking Generators.....	481
8.2.1	Overview of Generators Supported by the R&S ESR.....	482
8.3	Configuring Tracking Generators.....	485
8.3.1	Internal Tracking Generator.....	485
8.3.2	External Tracking Generator.....	487
8.4	Tracking Generator Functions.....	492
8.4.1	Calibration mechanism.....	492
8.4.2	Calibrating for transmission and reflection measurement.....	493
8.4.3	Transmission measurement.....	494
8.4.4	Reflection measurement.....	494
8.4.5	Normalization.....	494

8.4.6	Modulation (internal Tracking Generator only).....	498
8.5	Displayed Information and Errors.....	500
9	System Configuration.....	502
9.1	Manual Operation – Local Menu.....	502
9.2	User-Defined Menu – USER key.....	503
9.3	Instrument Setup and Interface Configuration – SETUP Key.....	504
9.3.1	Softkeys of the Setup Menu.....	505
10	Data Management and Documentation.....	529
10.1	Saving and Recalling Settings Files – SAVE/RCL Key.....	529
10.1.1	Softkeys of the SAVE/RCL Menu.....	530
10.1.2	File Selection Dialog Boxes.....	536
10.1.3	Importing and Exporting I/Q Data.....	538
10.1.3.1	iq-tar File Format Specification.....	538
10.2	Measurement Documentation – PRINT Key.....	543
10.3	Working with Test Reports.....	546
10.3.1	Designing a Test Report Template.....	546
10.3.2	Creating a Test Report.....	549
11	Remote Control.....	553
11.1	Remote Control - Basics.....	553
11.1.1	Remote Control Interfaces and Protocols.....	553
11.1.1.1	VISA Libraries.....	555
11.1.1.2	Messages.....	555
11.1.1.3	LAN Interface.....	556
11.1.1.4	GPIB Interface (IEC 625/IEEE 418 Bus Interface).....	559
11.1.2	Starting a Remote Control Session.....	563
11.1.3	Returning to Manual Operation.....	564
11.1.4	SCPI Command Structure.....	564
11.1.4.1	Syntax for Common Commands.....	564
11.1.4.2	Syntax for Device-Specific Commands.....	565
11.1.4.3	SCPI Parameters.....	566
11.1.4.4	Overview of Syntax Elements.....	569
11.1.4.5	Structure of a Command Line.....	570

11.1.4.6	Responses to Queries.....	571
11.1.5	Command Sequence and Synchronization.....	572
11.1.5.1	Preventing Overlapping Execution.....	573
11.1.6	Status Reporting System.....	574
11.1.6.1	Hierarchy of Status Registers.....	574
11.1.6.2	Structure of a SCPI Status Register.....	575
11.1.6.3	Contents of the Status Register.....	577
11.1.6.4	Application of the Status Reporting System.....	589
11.1.6.5	Reset Values of the Status Reporting System.....	591
11.1.7	General Programming Recommendations.....	592
11.1.8	The IECWIN Tool.....	592
11.2	Controlling the R&S ESR Remotely.....	594
11.2.1	Operation with Windows Remote Desktop	594
11.2.1.1	Configuring the R&S ESR for Remote Operation.....	595
11.2.1.2	Configuring the Controller.....	596
11.2.1.3	Starting and Terminating Remote Operation.....	598
11.2.1.4	Deactivating the R&S ESR via Remote Operation.....	600
11.2.2	Operation with a VNC Client.....	600
11.2.3	Brief Introduction to Remote Control.....	601
11.2.3.1	Basic Steps in Remote Control Programming.....	601
11.2.3.2	Detailed Programming Examples.....	608
11.2.4	Remote Control Interfaces and Protocols.....	621
11.2.4.1	LAN Interface.....	621
11.2.5	Configuring the GPIB Interface.....	623
11.2.6	Setting Up a Network (LAN) Connection.....	623
11.2.6.1	Connecting the Instrument to the Network.....	624
11.2.6.2	Assigning the IP Address.....	625
11.2.6.3	Using Computer Names.....	628
11.2.6.4	Changing the Windows Firewall Settings.....	629
11.2.7	How to Configure the LAN Using the LXI Web Browser Interface.....	629
11.2.7.1	LAN Configuration.....	630
11.2.8	Configuring the Network.....	631
11.2.8.1	Operating the Instrument Without a Network.....	632

11.2.8.2	Creating Users.....	632
11.2.8.3	Changing the User Password.....	633
11.2.8.4	Mapping Network Drives.....	633
11.2.8.5	Sharing Directories (only with Microsoft Networks).....	635
11.3	Selecting the Operating Mode.....	635
11.4	Remote Commands in Receiver Mode.....	636
11.4.1	Measurements and Result Displays.....	637
11.4.1.1	Display Configuration.....	637
11.4.1.2	Bargraph Control.....	637
11.4.1.3	Scan Control.....	640
11.4.1.4	Final Measurements and Automated Test Sequence Control.....	642
11.4.1.5	Trace Data and Result Query.....	643
11.4.1.6	Fixed Frequency Scans.....	647
11.4.1.7	Demodulating Analog Signals.....	648
11.4.1.8	Spectrogram Control.....	649
11.4.2	Defining the Frequency.....	665
11.4.3	Configuring the Vertical Axis.....	667
11.4.4	Selecting the Bandwidth.....	670
11.4.5	Controlling Inputs and Outputs.....	672
11.4.6	Test Automation.....	673
11.4.6.1	General Scan Configuration.....	673
11.4.6.2	Scan Table.....	674
11.4.6.3	Peak Search.....	678
11.4.6.4	Peak Lists.....	681
11.4.6.5	Trace Configuration.....	682
11.4.6.6	LISN Settings.....	684
11.4.7	Working with Markers.....	687
11.4.7.1	Configuring Marker Functionality.....	687
11.4.7.2	Using Markers.....	691
11.4.7.3	Using Delta Markers.....	697
11.4.8	Limit Lines.....	703
11.4.8.1	Using Display Lines.....	703
11.4.8.2	Using Frequency Lines.....	704

11.4.8.3	Using Limit Lines.....	705
11.5	Remote Commands in Spectrum Analyzer Mode.....	719
11.5.1	Measurements and Result Displays.....	719
11.5.1.1	Controlling Power Measurements.....	719
11.5.1.2	Measuring Channel Power.....	727
11.5.1.3	Measuring the Occupied Bandwidth.....	748
11.5.1.4	Measuring Spurious Emissions.....	749
11.5.1.5	Testing Against a Spectrum Emission Mask.....	759
11.5.1.6	Performing EMI Measurements.....	778
11.5.1.7	Measuring the Modulation Depth.....	784
11.5.1.8	Measuring the Harmonic Distortion.....	786
11.5.1.9	Measuring the Carrier-to-Noise Ratio.....	790
11.5.1.10	Measuring the Third Order Intercept Point.....	790
11.5.1.11	Measuring Statistics.....	791
11.5.1.12	Measuring in the Time Domain.....	799
11.5.1.13	Measuring the Pulse Power.....	811
11.5.1.14	Performing List Evaluations.....	815
11.5.1.15	Probe Configuration.....	820
11.5.2	Configuring Spectrum Measurements.....	822
11.5.2.1	Frequency Settings.....	822
11.5.2.2	Automatic Measurement Configuration.....	827
11.5.2.3	Bandwidth Settings.....	830
11.5.2.4	Sweep Configuration.....	833
11.5.2.5	Trigger Configuration.....	836
11.5.2.6	Vertical Axis Configuration.....	843
11.5.3	Analyzing Spectrum Measurements.....	847
11.5.3.1	Trace Configuration.....	847
11.5.3.2	Spectrogram.....	856
11.5.3.3	Limit Lines.....	860
11.5.3.4	Markers.....	861
11.6	Remote Commands in I/Q Analyzer Mode.....	887
11.6.1	Using the I/Q Analyzer.....	887
11.6.2	I/Q Gating.....	899

11.7 Remote Commands to Control the Tracking Generator.....	900
11.7.1 Controlling the Internal Tracking Generator.....	900
11.7.2 Controlling the External Tracking Generator.....	907
11.8 Common Commands.....	915
11.9 System Configuration.....	919
11.9.1 General System Configuration.....	919
11.9.2 Checking the System Configuration.....	924
11.9.3 Coupling Parameters.....	927
11.9.4 Controlling In- and Outputs.....	931
11.9.5 Configuring the Reference Frequency.....	933
11.9.6 Calibrating the R&S ESR.....	935
11.9.7 Using Service Functions.....	938
11.10 Data Management.....	940
11.10.1 Managing Data Files.....	940
11.10.2 Saving and Restoring Customized Data.....	945
11.11 Using Transducers.....	949
11.12 Documentation.....	957
11.13 Working with Test Reports.....	966
11.13.1 Designing a Test Report Template.....	966
11.13.1.1 Selecting the Test Report Contents.....	966
11.13.1.2 Designing the Header of the Test Report.....	968
11.13.1.3 Defining the Contents of the Title Page.....	971
11.13.1.4 Managing Templates.....	972
11.13.2 Creating a Test Report.....	973
11.13.2.1 Configuring and Printing the Test Report.....	973
11.13.2.2 Adding and Removing Datasets.....	974
11.13.2.3 Selecting Datasets for the Report.....	975
11.13.3 Deprecated Commands (Test Report).....	976
11.14 Display Configuration.....	977
11.14.1 Controlling Display Elements.....	977
11.14.2 Selecting Items to Store and Restore.....	984
11.15 Network Connection.....	987
11.15.1 Configuring Network Connections.....	987

11.15.2	Emulating HP Instruments.....	991
11.16	Status Register.....	994
11.16.1	General Status Register Commands.....	994
11.16.2	Reading out the EVENT Part.....	995
11.16.3	Reading Out the CONDition Part.....	995
11.16.4	Controlling the ENABLE Part.....	996
11.16.5	Controlling the Negative Transition Part.....	996
11.16.6	Controlling the Positive Transition Part.....	997
11.17	Remote Control – Programming Examples.....	997
11.17.1	Service Request.....	999
11.17.1.1	Initiate Service Request.....	999
11.17.1.2	Waiting for the Arrival of a Service Request.....	1000
11.17.1.3	Waiting Without Blocking the Keyboard and Mouse.....	1001
11.17.1.4	Service Request Routine.....	1002
11.17.1.5	Reading Out the Output Buffer.....	1003
11.17.1.6	Reading Error Messages.....	1003
11.17.1.7	Evaluation of SCPI Status Registers.....	1004
11.17.1.8	Evaluation of Event Status Register.....	1005
11.17.2	Using Marker and Delta Marker.....	1006
11.17.2.1	Shape Factor Measurement (using n dB down).....	1006
11.17.2.2	Measuring the Third Order Intercept Point.....	1007
11.17.2.3	Measuring the AM Modulation Depth.....	1008
11.17.3	Limit Lines and Limit Test.....	1008
11.17.4	Measuring the Channel and Adjacent Channel Power.....	1010
11.17.5	Occupied Bandwidth Measurement.....	1013
11.17.6	Time Domain Power Measurement.....	1014
11.17.7	Fast Power Measurement on Power Ramps.....	1015
11.17.7.1	Power Measurement with Multi-Summary Marker.....	1015
11.17.7.2	Multi-Burst Power Measurement.....	1017
11.17.8	Fast Level Measurement Using Frequency Lists.....	1018
11.17.9	Level Correction of Transducers.....	1020
11.17.10	Measuring the Magnitude and Phase of a Signal.....	1021
11.17.11	Reading and Writing Files.....	1023

11.17.11.1	Reading a File from the Instrument.....	1023
11.17.11.2	Creating a File on the Instrument.....	1024
11.17.12	Spectrum Emission Mask Measurement.....	1024
11.17.12.1	Using Predefined Standard Wibro.....	1025
11.17.12.2	Defining 5 Ranges with all Parameters.....	1025
11.17.13	Spurious Emissions Measurement.....	1028
11.17.14	Averaging I/Q Data.....	1031
11.17.15	Using IQ Gating.....	1032
11.17.16	Usage of Four Spectrum Instances.....	1037
11.18	 GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E.....	1039
11.18.1	GPIB Languages.....	1040
11.18.2	Command Set of Models 8560E, 8561E, 8562E, 8563E, 8564E, 8565E, 8566A/B, 8568A/B, 8591E, 8594E, 71100C, 71200C, and 71209A.....	1041
11.18.3	Special Features of the Syntax Parsing Algorithms for 8566A and 8568A Models..	1065
11.18.4	Special Behavior of Commands.....	1066
11.18.5	Model-Dependent Default Settings.....	1067
11.18.6	Data Output Formats.....	1068
11.18.7	Trace Data Output Formats.....	1068
11.18.8	Trace Data Input Formats.....	1068
11.18.9	GPIB Status Reporting.....	1068
12	 Maintenance.....	1070
12.1	 Cleaning.....	1070
12.2	 Storing and Packing.....	1071
12.3	 List of Available Power Cables.....	1071
13	 Error Messages.....	1072
14	 Appendix: LAN Interface.....	1074
14.1	 Configuring the Network.....	1074
14.1.1	Changing the Computer Name.....	1075
14.1.2	Changing the Domain or Workgroup.....	1075
14.1.3	Operating the Instrument Without a Network.....	1076
14.1.4	Creating Users.....	1077
14.1.5	Changing the User Password.....	1077
14.1.6	Logging on to the Network.....	1077

14.1.7	Automatic Login Function.....	1078
14.1.8	Mapping Network Drives.....	1079
14.1.9	Sharing Directories (only with Microsoft Networks).....	1080
14.2	Operation with Windows Remote Desktop	1081
14.2.1	Configuring the R&S ESR for Remote Operation.....	1081
14.2.2	Configuring the Controller.....	1082
14.3	Operation with a VNC Client.....	1085
14.4	Starting and Terminating Remote Operation.....	1086
14.5	Deactivating the R&S ESR via Remote Operation.....	1088
	List of Commands.....	1089
	Index.....	1106

1 Preface

This chapter provides safety-related information, an overview of the user documentation and the conventions used in the documentation.

1.1 For Your Safety

The R&S ESR is designated for use in industrial, administrative, and laboratory environments. Use the R&S ESR only for its designated purpose. Observe the safety and usage instructions documented in the user manual, as well as operating conditions and performance limits stated in the data sheet.

The product documentation helps you use the R&S ESR safely and efficiently. Keep the product documentation in a safe place and pass it on to subsequent users.

Safety information is part of the product documentation. It warns you about potential dangers and gives instructions how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In the "Basic Safety Instructions", safety issues are grouped according to subjects. For example, one subject is electrical safety. The "Basic Safety Instructions" are delivered with the R&S ESR in different languages in print.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation. Always read the safety instructions carefully. Make sure to comply fully with them. Do not take risks and do not underestimate the potential danger of small details such as a damaged power cable.

1.2 Conventions Used in the Documentation

1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
[Keys]	Key and knob names are enclosed by square brackets.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.

Convention	Description
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.2.2 Conventions for Procedure Descriptions

When operating the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.2.3 Notes on Screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as many as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic usage scenarios.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

1.3 How to Use the Help System

Calling context-sensitive and general help

- ▶ To display the general help dialog box, press the [HELP] key on the front panel. The help dialog box "View" tab is displayed. A topic containing information about the current menu or the currently opened dialog box and its function is displayed.



For standard Windows dialog boxes (e.g. File Properties, Print dialog etc.), no context-sensitive help is available.

- ▶ If the help is already displayed, press the softkey for which you want to display help. A topic containing information about the softkey and its function is displayed.



If a softkey opens a submenu and you press the softkey a second time, the submenu of the softkey is displayed.

Contents of the help dialog box

The help dialog box contains four tabs:

- "Contents" - contains a table of help contents
- "View" - contains a specific help topic
- "Index" - contains index entries to search for help topics
- "Zoom" - contains zoom functions for the help display

To change between these tabs, press the tab on the touchscreen.

Navigating in the table of contents

- To move through the displayed contents entries, use the [UP ARROW] and [DOWN ARROW] keys. Entries that contain further entries are marked with a plus sign.
- To display a help topic, press the [ENTER] key. The "View" tab with the corresponding help topic is displayed.
- To change to the next tab, press the tab on the touchscreen.

Navigating in the help topics

- To scroll through a page, use the rotary knob or the [UP ARROW] and [DOWN ARROW] keys.
- To jump to the linked topic, press the link text on the touchscreen.

Searching for a topic

1. Change to the "Index" tab.
2. Enter the first characters of the topic you are interested in. The entries starting with these characters are displayed.
3. Change the focus by pressing the [ENTER] key.
4. Select the suitable keyword by using the [UP ARROW] or [DOWN ARROW] keys or the rotary knob.
5. Press the [ENTER] key to display the help topic.

The "View" tab with the corresponding help topic is displayed.

Changing the zoom

1. Change to the "Zoom" tab.
2. Set the zoom using the rotary knob. Four settings are available: 1-4. The smallest size is selected by number 1, the largest size is selected by number 4.

Closing the help window

- ▶ Press the [ESC] key or a function key on the front panel.

2 Documentation Overview

This section provides an overview of the R&S ESR user documentation. Unless specified otherwise, you find the documents on the R&S ESR product page at:

www.rohde-schwarz.com/manual/esr

2.1 Getting Started Manual

Introduces the R&S ESR and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc.

A printed version is delivered with the instrument. A PDF version is available for download on the Internet.

2.2 User Manuals and Help

Separate user manuals are provided for the base unit and the firmware applications:

- Base unit manual
Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- Manuals for (optional) firmware applications
Contains the description of the specific functions of a firmware application, including remote control commands. Basic information on operating the R&S ESR is not included.

The contents of the user manuals are available as help in the R&S ESR. The help offers quick, context-sensitive access to the complete information for the base unit and the firmware applications.

All user manuals are also available for download or for immediate display on the Internet.

2.3 Service Manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for download for registered users on the global Rohde & Schwarz information system (GLORIS):

<https://gloris.rohde-schwarz.com>).

2.4 Instrument Security Procedures

Deals with security issues when working with the R&S ESR in secure areas. It is available for download on the Internet.

2.5 Basic Safety Instructions

Contains safety instructions, operating conditions and further important information. The printed document is delivered with the instrument.

2.6 Data Sheets and Brochures

The data sheet contains the technical specifications of the R&S ESR. It also lists the options and their order numbers as well as optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

www.rohde-schwarz.com/brochure-datasheet/esr

2.7 Release Notes and Open Source Acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The open source acknowledgment document provides verbatim license texts of the used open source software.

www.rohde-schwarz.com/firmware/esr

2.8 Application Notes, Application Cards, White Papers, etc.

These documents deal with special applications or background information on particular topics.

www.rohde-schwarz.com/application/esr

3 Quick Start

Note: the following chapters are identical to those in the printed R&S ESR Quick Start Guide.

- [Front and Rear Panel View](#).....27
- [Preparing for Use](#).....39
- [Firmware Update and Installation of Firmware Options](#).....60
- [Basic Operations](#).....63
- [Basic Measurement Examples](#).....91
- [Brief Introduction to Remote Control](#).....119

3.1 Front and Rear Panel View

3.1.1 Front Panel View

The front panel of the R&S ESR is shown in [Figure 3-1](#). Each element (function keys and connectors) is described in more detail in the subsequent sections.



Figure 3-1: Front panel of the R&S ESR














No.	Description	See
1	General device functions e.g. Change mode, Setup, Default Settings, Help.	Chapter 3.1.1.1, "Function Keys on the Front Panel" , on page 28
2	USB connector for external devices, e.g. keyboard, mouse	Chapter 3.1.1.3, "Connectors on the Front Panel" , on page 33
3	ON/OFF switch	Chapter 3.2.1.7, "Switching the Instrument On and Off" , on page 44



No.	Description	See
4	Touchscreen; display area for measurement results	Chapter 3.1.1.2, "Touchscreen Display" , on page 31
5	Auxiliary functions to display Windows Start menu or on-screen keyboard	Chapter 3.1.1.1, "Function Keys on the Front Panel" , on page 28
6	Display options for screen	Chapter 3.4.4, "Changing the Display" , on page 83
7	Navigation options for screen menu	Chapter 3.4.2.6, "Arrow Keys, UNDO/REDO Keys" , on page 74
8	Measurement control settings, e.g. frequency, levels	Chapter 3.1.1.1, "Function Keys on the Front Panel" , on page 28
9	Marker functions	Chapter 3.1.1.1, "Function Keys on the Front Panel" , on page 28
10	Measurement configuration	Chapter 3.1.1.1, "Function Keys on the Front Panel" , on page 28
11	Measurement start	Chapter 3.1.1.1, "Function Keys on the Front Panel" , on page 28
12	Numeric keyboard, units and data entry keys	Chapter 3.4.2.4, "Keypad" , on page 73
13	Rotary knob	Chapter 3.4.2.5, "Rotary Knob" , on page 74
14	Arrow keys	Chapter 3.4.2.6, "Arrow Keys, UNDO/REDO Keys" , on page 74
15	Undo/redo functions	Chapter 3.4.2.6, "Arrow Keys, UNDO/REDO Keys" , on page 74
16	AF output with volume control	Chapter 3.1.1.4, "Optional Front Panel Connectors" , on page 34
17	Noise source control	Chapter 3.1.1.3, "Connectors on the Front Panel" , on page 33
18	Supply voltage for measurement accessories	Chapter 3.1.1.4, "Optional Front Panel Connectors" , on page 34
19	Probe power connector (supply voltage for measurement accessories)	Chapter 3.1.1.3, "Connectors on the Front Panel" , on page 33
20	Tracking generator output, optional	Chapter 3.1.1.4, "Optional Front Panel Connectors" , on page 34
21	RF input 2	Chapter 3.1.1.4, "Optional Front Panel Connectors" , on page 34
22	RF input 1	Chapter 3.1.1.3, "Connectors on the Front Panel" , on page 33

3.1.1.1 Function Keys on the Front Panel

A detailed description of the corresponding menus and the other function keys is provided in chapter 6 "Instrument Functions" of the Operating Manual.

Table 3-1: Function keys

	Turns the instrument on and off.
	Restores the default configuration of the R&S ESR.
	Provides functionality to save, restore and manage instrument settings and other files.
	Provides functionality for general instrument configuration, for example: <ul style="list-style-type: none"> to configure the display to set the date and time to establish a LAN connection
	Provides functionality to configure printers and hardcopies.
	Displays the online help.
	Selects the operating mode or firmware application.
	Opens the Windows "Start" menu
	Turns the on-screen keyboard on and off. Repeatedly pressing the key changes the position of the keyboard (top or bottom of the display).
	Selects alphanumeric characters.
	Opens a dialog box to turn screen elements on or off.
	Switches between maximized and split display of focus area.
	Switches focus area between table and diagram.

	Allows you to define and use softkeys to load custom configurations.
	Opens the root menu of the current application.
FREQ (CHANNEL)	Provides functionality to define frequency parameters, for example: <ul style="list-style-type: none"> • the center or receiver frequency • the frequency offset (CHANNEL is for special applications)
SPAN	Provides functionality to configure the frequency span. In the realtime application, the span is coupled to the RBW and restricted to 40 MHz.
AMPT (SCALE)	Provides functionality to configure amplitude or level characteristics, for example: <ul style="list-style-type: none"> • the reference level • the attenuation • the input impedance • the scale of the level axis • the preamplifier
AUTO SET	Provides functionality to automatically define various parameters like the level or frequency.
BW	Provides functionality to define the resolution and video bandwidth. In the realtime application, the RBW is coupled to the span. Video bandwidth is not available.
SWEEP	Provides functionality to configure the sweep, for example: <ul style="list-style-type: none"> • the measurement time • the number of measurement points • the measurement mode (single or continuous measurements) In the realtime application, the number of measurement points is a fix value (801 points).
TRACE	Provides functionality to configure data acquisition and analyze measured data, for example: <ul style="list-style-type: none"> • the trace mode • the detector
TRIG	Provides functionality to configure triggered and gated measurements, for example:
MKR	Provides functionality to activate and position absolute and relative markers (markers and delta markers).
PEAK SEARCH	Performs a peak search for active markers. If no marker is active, Marker 1 is activated and the peak search is performed for it.
MKR FUNC	Provides additional analysis functions of the measurement markers, for example: <ul style="list-style-type: none"> • the frequency counter • the noise measurement • the phase noise measurement • the AM/FM audio demodulator In the realtime application, marker functions are not available.

MKR→	Provides functionality to position and control markers, for example: <ul style="list-style-type: none"> • to position the marker on the center frequency • to define the marker search area • to configure the peak excursion
MEAS	Provides the measurement functions, for example: <ul style="list-style-type: none"> • the bargraph measurement (in Receiver mode) • the scan and final measurement (in Receiver mode) • the AF demodulation (in Receiver mode) • IF analysis (in Receiver mode with option R&S ESR-K56) • the realtime spectrum (in Realtime mode) • the spectrogram measurement (in Realtime mode) • the persistence spectrum (in Realtime mode) • the channel power and ACLR measurement (in Spectrum mode) • the occupied bandwidth measurement (in Spectrum mode) • the Spectrum Emission Mask (SEM) measurement (in spectrum mode) • the spurious emission measurement (in spectrum mode) • the signal statistics (in spectrum mode)
MEAS CONFIG	Provides functionality to configure the measurement.
LINES	Provides functionality to control display and limit lines.
INPUT/OUTPUT	Provides functionality to configure inputs and outputs.
RUN SINGLE	Starts a single measurement.
RUN CONT	Starts a continuous measurement.
UNDO	Reverts the last operation.
REDO	Repeats previously reverted operation.

3.1.1.2 Touchscreen Display

All measurement results are displayed in the screen on the front panel. Additionally, the screen display provides status and setting information and allows you to switch between various measurement tasks. The screen is touch-sensitive, offering an alternative means of user interaction for quick and easy handling of the device.

NOTICE**Risk of touchscreen damage**

Inappropriate tools or excessive force can damage the touchscreen.

Observe the following instructions when operating the touchscreen:

- Never touch the screen with ball point pens or other sharp objects, use your fingers instead.
As an alternative, you can use a stylus pen with a smooth soft tip.
- Never apply excessive force to the screen. Touch it gently.
- Never scratch the screen surface, for example with a finger nail.
- Never rub the screen surface strongly, for example with a dust cloth.
For instructions on cleaning the screen, see the Maintenance chapter in the R&S ESR user manual.
For instructions on cleaning the screen, see [Chapter 12.1, "Cleaning"](#), on page 1070.

The [Figure 3-2](#) shows the touchscreen display of the R&S ESR. The individual elements are described in more detail in [Chapter 3.4, "Basic Operations"](#), on page 63.

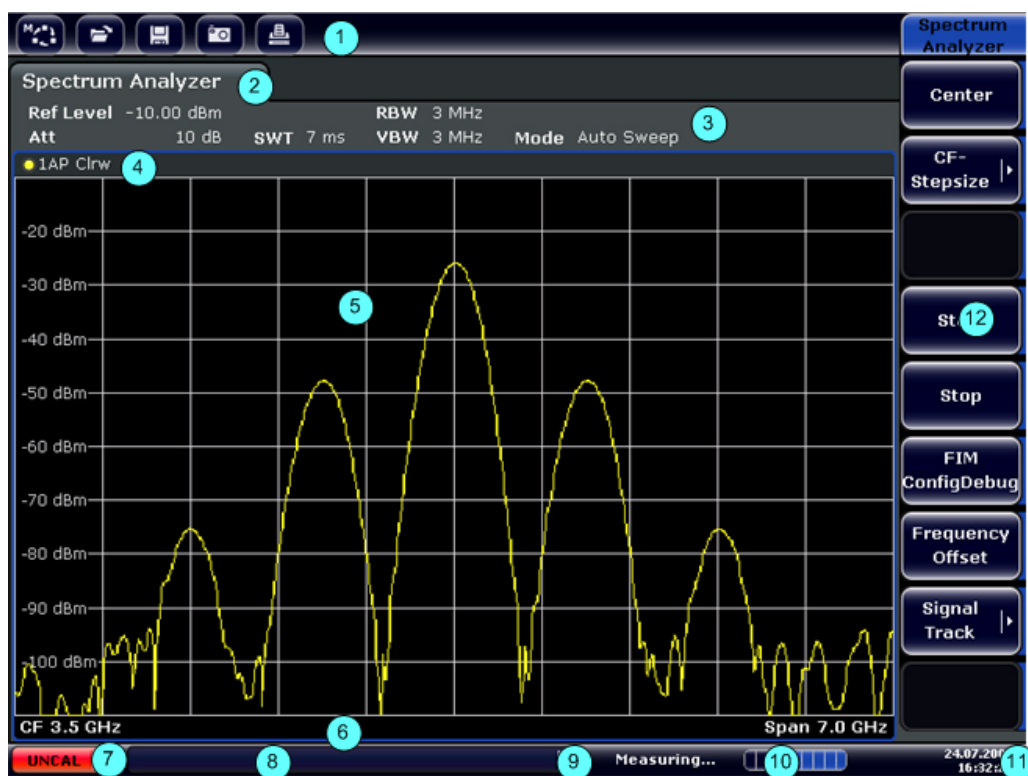


Figure 3-2: Touchscreen elements

- 1 = Toolbar with standard application functions, e.g. print, save/open file etc.
- 2 = Tabs for individual measurement tasks
- 3 = Channel information bar for current measurement settings
- 4 = Diagram header with diagram-specific (trace) information

- 5 = Measurement results area
- 6 = Diagram footer with diagram-specific information, depending on measurement mode
- 7 = Error indicator
- 8 = Error message, if available
- 9 = Device status
- 10 = Progress bar for measurement
- 11 = Date and time display
- 12 = Softkeys for menu access

3.1.1.3 Connectors on the Front Panel

This section describes the front connectors and interfaces of the R&S ESR. Optional connectors and interfaces are indicated by the option name in brackets. Most connectors on the front panel (except for USB) are located at the bottom right-hand side.



EMI impact on measurement results

Electromagnetic interference (EMI) may affect the measurement results.

To suppress generated electromagnetic interference (EMI):

- Use suitable shielded cables of high quality. For example, use double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Note the EMC classification in the data sheet.

USB

The front panel provides two female USB connectors to connect devices like an external keyboard or mouse. You can also connect a memory stick to save and restore instrument settings and measurement data.

NOISE SOURCE CONTROL

The noise source control female connector is used to provide the supply voltage for an external noise source, for example to measure the noise figure and gain of amplifiers and frequency converting DUTs.

Conventional noise sources require a voltage of +28 V in order to be switched on and 0 V to be switched off. The output supports a maximum load of 100 mA.

RF INPUT 50Ω

The R&S ESR provides two RF inputs for connection of a device under test (DUT) to the R&S ESR. The DUT is connected to the RF Input via cable and an appropriate connector (for example a male N connector).

The first RF Input supports a frequency range from 9 kHz to f_{\max} and an attenuation range from 0 dB to 75 dB. The second RF Input supports a frequency range from 9 kHz to 1 GHz and an attenuation range from 10 dB to 75 dB. Attenuation levels smaller than 10 dB are not possible at RF Input 2.

With option R&S ESR-B29, the minimum frequency is extended to 10 Hz at both RF inputs.

NOTICE**Risk of instrument damage**

Do not overload the input. For maximum allowed values, see the data sheet.

For AC-coupling, a DC input voltage of 50 V must never be exceeded. For DC-coupling, DC voltage must not be applied at the input. In both cases, noncompliance will destroy the input mixers.

When measuring unknown signals, do not use a 0 dB attenuation level. Otherwise, the input mixer may be damaged or destroyed.

PROBE POWER

The R&S ESR provides two connectors to supply accessories like transducers or probes with power.

The probe power connector on the left supports supply voltages of ± 10 V and ground. The maximum permissible current is 200 mA. This probe power connector is suitable, for example, for transducers from Rohde & Schwarz.

The probe power connector on the right supports supply voltages from +15 V to -12.6 V and ground. The maximum permissible current is 150 mA. This probe power connector is suitable, for example, for high-impedance probes from Agilent.

AF OUTPUT

Headphones equipped with a miniature jack plug can be connected to the AF output female connector. The internal impedance is 10 Ω . The output voltage can be set by using the volume control to the right of the female connector. If a plug is connected, the internal loudspeaker is automatically switched off.

CAUTION**Risk of hearing damage**

Before putting on the headphones, make sure that the volume setting is not too high to protect your hearing.

3.1.1.4 Optional Front Panel Connectors

Tracking Generator Output (GEN OUTPUT 50 Ω , Option R&S FSV-B9)

The R&S ESR is equipped with an optional tracking generator and therefore provides a tracking generator output connector.

The output of the tracking generator is connected to the DUT via a cable equipped with a male N connector. The female connector is available only with the tracking generator option (R&S FSV-B9).

NOTICE

Risk of damaging the tracking generator

To avoid damaging the tracking generator, make sure that the reverse power (i.e. input power caused, for example, by reflections in the test setup) never exceeds 1 W RF power. Do not apply a DC voltage at the output.

For details, refer to the data sheet.



Sensitive DUTs concerning matching

For DUTs with sensitive RF characteristics with regard to matching (VSWR) at the input, insert a 10 dB attenuator between the DUT and the tracking generator.

3.1.2 Rear Panel View

The rear panel of the R&S ESR is shown in [Figure 3-3](#). Each element is described in more detail in the subsequent sections.



Figure 3-3: R&S ESR rear panel

- 1 = LAN
- 2 = TRIGGER OUTPUT
- 3 = IF/VIDEO
- 4 = USB
- 5 = AUX PORT
- 6 = EXT TRIGGER / GATE IN
- 7 = MONITOR (VGA)
- 8 = REF IN

- 9 = REF OUT
- 10 = GPIB interface
- 11 = AC Power Supply Connection and Main Power Switch with fuse

3.1.2.1 Standard Rear Panel Connectors



EMI impact on measurement results

Electromagnetic interference (EMI) may affect the measurement results.

To suppress generated electromagnetic interference (EMI):

- Use suitable shielded cables of high quality. For example, use double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Note the EMC classification in the data sheet.

AC Power Supply Connection and Main Power Switch

The AC power supply connector and main power switch are located in a unit on the rear panel of the instrument.

The main power switch works as follows.

- Position "O": The instrument is disconnected from the AC power supply.
- Position "1": The instrument is supplied with power and in operation.

For more information see [Chapter 3.2.1.7, "Switching the Instrument On and Off"](#), on page 44.



Warm-up time for OCXO

When the instrument is switched on, the OCXO requires an extended warm-up time (see data sheet).

LAN

The LAN interface can be used to connect the R&S ESR to a local network for remote control, printouts and data transfer. The assignment of the RJ-45 connector supports twisted-pair category 5 UTP/STP cables in a star configuration (UTP stands for *unshielded twisted pair*, and STP for *shielded twisted pair*).

MONITOR (VGA)

The female VGA connector is used to connect an external monitor. Instructions on how to connect an external monitor are provided in [Chapter 3.2.3, "Connecting an External Monitor"](#), on page 48.

EXT TRIGGER / GATE IN

The female connector for external trigger/gate input is used to control the measurement by means of an external signal. The voltage levels can range from 0.5 to 3.5 V. The default value is 1.4 V. The typical input impedance is 10 k Ω .

REF IN

As a reference signal, you can either use the internal reference, or connect an external one. The setup menu is used to switch between the internal and an external reference. The REF IN female connector is used as an input for a 1-20 MHz reference signal. The required input level is 0-10 dBm.

REF OUT

This connector can be used to provide an external reference signal (e.g. the OCXO) to other devices that are connected to this instrument. The REF OUT female connector can output a 10 MHz reference signal with an output level of 0 dBm.

GPIB Interface

The GPIB interface is in compliance with IEEE488 and SCPI. A computer for remote control can be connected via this interface. To set up the connection, a shielded cable is recommended.

For more information refer to the User Manual, chapter 7 "Remote Control Basics".

TRIGGER OUTPUT

The female BNC connector can be used to provide a signal to another device. The signal is TTL compatible (0 V / 5 V).

You can control the trigger output with the functionality provided in the "In-/Output" menu ([INPUT/OUTPUT] key).

The trigger output also controls signals by the frequency mask trigger available in real-time mode (R&S ESR-K55).

IF/VIDEO

The female BNC connector can be used for various outputs:

- Intermediate frequency (IF) output of 32 MHz
- Video output (1 V)

You can select between IF and video output with the functionality provided in the "In-/Output" menu ([INPUT/OUTPUT] key).

USB

The rear panel provides two female USB connectors to connect devices like an external keyboard or mouse. You can also connect a memory stick to save and restore instrument settings and measurement data.

AUX PORT

The 9 pole SUB-D male connector provides control signals for controlling external devices. The voltage levels are of the TTL type (5 V).



Pin	Signal	Description
1	+5 V / max. 250 mA	Supply voltage for external circuits
2	I/O	Control Phase N
3	I/O	Controls the 150 kHz highpass filter
4	I/O	Controls Phase L3
5	I/O	not used
6	I/O	Controls Phase L1
7	I/O	Controls Phase L2
8	GND	Ground
9	READY FOR TRIGGER	Signal indicating that the instrument is ready to receive a trigger signal (Low active = 0 V)

NOTICE

Short-circuit hazard

Always observe the designated pin assignment. A short-circuit can damage the port.

3.1.2.2 Optional Rear Panel Connectors

OCXO option (R&S FSV-B4)

This option generates a very precise 10 MHz reference signal. If installed, this signal is used as an internal reference. It can also be used to synchronize other connected devices via the REF OUT connector.



Warm-up time for OCXO

When the instrument is switched on, the OCXO requires an extended warm-up time (see data sheet).

3.2 Preparing for Use

3.2.1 Putting into Operation

This section describes the basic steps to be taken when setting up the R&S ESR for the first time.

⚠ WARNING**Risk of injury due to disregarding safety information**

Observe the information on appropriate operating conditions provided in the data sheet to prevent personal injury or damage to the instrument. Read and observe the basic safety instructions provided with the instrument, in addition to the safety instructions in the following sections. In particular:

- Do not open the instrument casing.

NOTICE**Risk of instrument damage due to inappropriate operating conditions**

Specific operating conditions are required to ensure accurate measurements and to avoid damage to the instrument. Observe the information on appropriate operating conditions provided in the basic safety instructions and the instrument's data sheet.

NOTICE**Risk of instrument damage due to inappropriate operating conditions**

An unsuitable operating site or test setup can damage the instrument and connected devices. Before switching on the instrument, observe the information on appropriate operating conditions provided in the data sheet. In particular, ensure the following:

- All fan openings are unobstructed and the airflow perforations are unimpeded. The minimum distance from the wall is 10 cm.
 - The instrument is dry and shows no sign of condensation.
 - The instrument is positioned as described in the following sections.
 - The ambient temperature does not exceed the range specified in the data sheet.
 - Signal levels at the input connectors are all within the specified ranges.
 - Signal outputs are connected correctly and are not overloaded.
-

NOTICE**Instrument damage caused by electrostatic discharge**

Electrostatic discharge (ESD) can damage the electronic components of the instrument and the device under test (DUT). Electrostatic discharge is most likely to occur when you connect or disconnect a DUT or test fixture to the instrument's test ports. To prevent electrostatic discharge, use a wrist strap and cord and connect yourself to the ground, or use a conductive floor mat and heel strap combination.

**EMI impact on measurement results**

Electromagnetic interference (EMI) may affect the measurement results.

To suppress generated electromagnetic interference (EMI):

- Use suitable shielded cables of high quality. For example, use double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Note the EMC classification in the data sheet.

3.2.1.1 Unpacking and Checking the Instrument

To remove the instrument from its packaging and check the equipment for completeness, proceed as follows:

1. Pull off the polyethylene protection pads from the instrument's rear feet.
2. Carefully remove the pads from the instrument handles at the front.
3. Pull off the corrugated cardboard cover that protects the rear of the instrument.
4. Carefully unthread the corrugated cardboard cover at the front that protects the instrument handles and remove it.
5. Check the equipment for completeness using the delivery note and the accessory lists for the various items.
6. Check the instrument for any damage. If there is damage, immediately contact the carrier who delivered the instrument. Make sure not to discard the box and packing material.

**Packing material**

Retain the original packing material. If the instrument needs to be transported or shipped later, you can use the material to protect the control elements and connectors.

3.2.1.2 Accessory List

The instrument comes with the following accessories:

- Power cable
- Quick Start Guide

3.2.1.3 Placing or Mounting the Instrument

The R&S ESR is designed for use under laboratory conditions, either on a bench top or in a rack.

Bench Top Operation


If the R&S ESR is operated on a bench top, the surface should be flat. The instrument can be used in horizontal position, standing on its feet, or with the support feet on the bottom extended.

⚠ WARNING

Risk of injury if feet are folded out

The feet can fold in if they are not folded out completely or if the instrument is shifted. Collapsing feet can cause injury or damage the instrument.

- Fold the feet completely in or out to ensure stability of the instrument. Never shift the instrument when the feet are folded out.
- When the feet are folded out, do not work under the instrument or place anything underneath.
- The feet can break if they are overloaded. The overall load on the folded-out feet must not exceed 500 N.

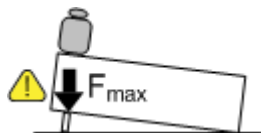


⚠ WARNING**Risk of injury when stacking instruments**

A stack of instruments can tilt over and cause injury if not stacked correctly. Furthermore, the instruments at the bottom of the stack can be damaged due to the load imposed by the instruments on top.

Observe the following instructions when stacking instruments:

- Never stack more than three instruments. If you need to stack more than three instruments, install them in a rack.
- The overall load imposed on the lowest instrument must not exceed 500 N.
- It is best if all instruments have the same dimensions (width and length). If you need to stack smaller instruments on the top, the overall load imposed on the lowest instrument must not exceed 250 N.
- If the instruments have foldable feet, fold them in completely.

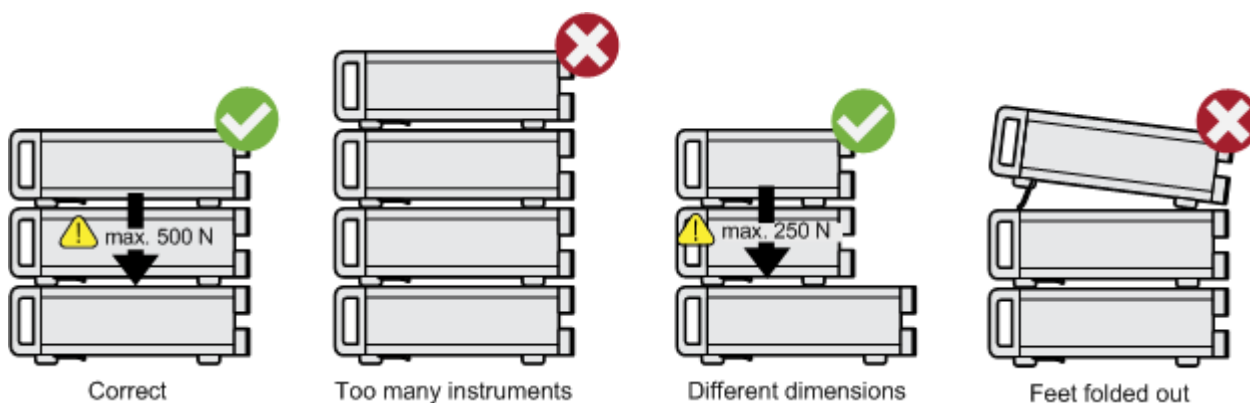**Rackmounting**

The R&S ESR can be installed in a rack using a rack adapter kit (for the order no., see data sheet). The installation instructions are part of the adapter kit.

NOTICE**Risk of instrument damage due to insufficient airflow in a rack**

If the instrument is run with insufficient airflow for a longer period, the instrument overheats, which can disturb the operation and even cause damage.

Make sure that all fan openings are unobstructed, that the airflow perforations are unimpeded, and that the minimum distance from the wall is 10 cm.

3.2.1.4 Connecting the AC Power

The R&S ESR is equipped with an AC power supply connector. The R&S ESR can be used with different AC power voltages and adapts itself automatically to it. Refer to the

datasheet for the requirements of voltage and frequency. The AC power connector is located on the rear panel of the instrument.



- ▶ Connect the R&S ESR to the AC power supply using the supplied power cable. Since the instrument is assembled in line with the specifications for safety class EN61010, it may only be connected to an outlet that has a ground contact.

3.2.1.5 Changing the AC Supply Fuse

Only fuses of the type IEC 60 127-T6.3H/250 V should be used. Those fuses are used for all of the specified nominal AC supply voltages.

Changing the AC supply fuses:

1. Disconnect the power cable.
2. Open the flap covering the voltage selector using a small screwdriver (or similar).
3. Remove the cylinder labelled with the nominal voltages. Remove both fuses and install the new ones. Reinsert the cylinder so that the value visible through the hole in the cover flap is the same nominal voltage as before.
4. Close the flap.

3.2.1.6 Using an Optional DC Power Supply

When only DC power is available, for example from a battery or in a vehicle, an optional DC power supply adapter (R&S FSV-B30) can be connected to the R&S ESR to operate the instrument with a DC voltage of 10 V to 28 V.

For installation instructions see the option's installation guide.

⚠ WARNING

Shock hazard due to power supply

If you use external power supplies to supply the equipment with DC safety extra low voltage (SELV), make sure the requirements for reinforced or double insulation are met, according to DIN/EN/IEC 61010 (UL61010, CAN CSA C22.2 No. 61010) or DIN/EN/IEC 60950 (UL60950, CAN CSA C22.2 No. 60950). Otherwise you may be injured due to electrical shock.

Before switching on the R&S ESR, switch on the DC power supply:

Switching the DC power supply on

1. Connect the R&S ESR DC power supply device to the DC power source (e.g. battery pack or vehicle) as described in the option's installation guide.
2. Set the switch on the DC power supply to "I". A green LED indicates that the DC power supply is ready for operation.
3. In case of overvoltage or undervoltage, the DC power supply switches off automatically. This state is indicated by means of a red LED.
4. Set the power switch on the rear panel to "I".
5. Press the [ON/OFF] key on the front panel. A green LED above the [ON/OFF] key indicates that the instrument is ready for operation.

Switching the DC power supply off

1. Press the [ON/OFF] key on the front panel of the R&S ESR and wait until the instrument has shut down.
2. Switch off the power switch on the rear panel of the R&S ESR.
3. Switch off the DC power supply.

3.2.1.7 Switching the Instrument On and Off

Switching the instrument on

If an optional DC power supply (R&S FSV-B30) is used, you must switch on these devices first; see [Chapter 3.2.1.6, "Using an Optional DC Power Supply"](#), on page 43.

1. Press the AC power switch on the rear panel to position "I".
The instrument is supplied with AC power.
2. Press the [ON/OFF] key on the front panel.
After booting, the instrument is ready for operation. A green LED above the [ON/OFF] key indicates this.



Warm-up time for OCXO

When the instrument is switched on, the OCXO requires an extended warm-up time (see data sheet).

Switching the instrument off

1. Press the [ON/OFF] key on the front panel.
2. Change the AC power switch on the rear panel to position "O", or disconnect the instrument from the AC power supply.
The R&S ESR changes into off mode.

NOTICE**Risk of losing data**

If you switch off the running instrument using the rear panel switch or by disconnecting the power cord, the instrument loses its current settings. Furthermore, program data can be lost.

Press the ON/STANDBY key first to shut down the application properly.

3.2.1.8 Maintenance

The R&S ESR does not require regular maintenance. Maintenance is essentially restricted to cleaning the R&S ESR. It is however advisable to check the nominal data from time to time.

NOTICE**Instrument damage caused by cleaning agents**

Cleaning agents contain substances such as solvents (thinners, acetone, etc.), acids, bases, or other substances. Solvents can damage the front panel labeling, plastic parts, or screens, for example.

Never use cleaning agents to clean the outside of the instrument. Use a soft, dry, lint-free dust cloth instead.

The storage temperature range for the R&S ESR is specified in the data sheet. The instrument must be protected against dust if it is to be stored for a long period.

When transporting or shipping the instrument, it is advisable to use the original packing material (especially the two protective covers for the front and rear panel).

3.2.1.9 Performing a Self Alignment and a Self Test**Operating temperature**

Before performing this functional test, make sure that the instrument has reached its operating temperature (for details, refer to the data sheet).

Performing a self alignment

1. Press the [SETUP] key.
2. Press the "Alignment" softkey.
3. Press the "Self Alignment" softkey.

Once the system correction values have been calculated successfully, a message is displayed.



To display the alignment results again later

- Press the [SETUP] key.
- Press the "Alignment" softkey.
- Press the "Show Align Results" softkey.

Performing a self test

The self test does not need to be repeated every time the instrument is switched on. It is only necessary when instrument malfunction is suspected.

1. Press the [SETUP] key.
2. Press the "More" softkey.
3. Press the "Service" softkey.
4. Press the "Selftest" softkey.

Once the instrument modules have been checked successfully, a message is displayed.

3.2.1.10 Checking the Supplied Options

The instrument may be equipped with both hardware and firmware options. In order to check whether the installed options correspond to the options indicated on the delivery note, proceed as follows.

1. Press the [SETUP] key.
2. Press the "System Info" softkey.
3. Press the "Versions + Options" softkey.

A list with hardware and firmware information is displayed.

4. Check the availability of the hardware options as indicated in the delivery note.
For an overview of the available options, refer to the datasheet.

3.2.2 Connecting USB Devices

The USB interfaces of the R&S ESR allow you to connect USB devices directly to the instrument. Increase the number of possible connections using USB hubs. Due to the large number of available USB devices, there is almost no limit to the expansions that are possible with the R&S ESR.

The following list shows various USB devices that can be useful:

- Memory stick for easy transfer of data to/from a computer (e.g. firmware updates)
- CD-ROM drives for easy installation of firmware applications
- Keyboard or mouse to simplify the entry of data, comments, filenames, etc.
- Printer for printing measurement results

- Power sensors, e.g. of the NRP Zxy family

Installing USB devices is easy under Windows, because all USB devices are plug&play. After a device is connected to the USB interface, the operating system automatically searches for a suitable device driver.

If Windows does not find a suitable driver, it prompts you to specify a directory that contains the driver software. If the driver software is on a CD, connect a USB CD-ROM drive to the instrument before proceeding.

When a USB device is then disconnected from the R&S ESR, Windows immediately detects the change in hardware configuration and deactivates the corresponding driver.

All USB devices can be connected to or disconnected from the instrument during operation.

Connecting a memory stick or CD-ROM drive

If installation of a memory stick or CD-ROM drive is successful, Windows informs you that the device is ready to use. The device is made available as a new drive and is displayed in Windows Explorer. The name of the drive depends on the manufacturer.

Connecting a keyboard

The keyboard is detected automatically when it is connected. The default input language is English – US.

Select "Start > Settings > Time & language > Region & language > Add a language" to configure the keyboard language. To access the Windows operating system, press the Windows key on the external keyboard.

Connecting a mouse

The mouse is detected automatically when it is connected.

Select "Start > Settings > Devices > Mouse & touchpad" to configure the mouse properties. To access the Windows operating system, press the Windows key on the external keyboard.

Connecting a printer

When printing a file, the instrument checks whether a printer is connected and turned on and whether the appropriate printer driver is installed. If necessary, printer driver installation is initiated. You only have to install a printer driver once.

To install a printer, select "Start > Settings > Devices > Add a printer or scanner". To access the Windows operating system, press the Windows key on the external keyboard.

You can load updated and improved driver versions or new drivers from an installation disk, USB memory stick or another external storage medium. If the instrument is integrated in a network, you can also install driver data stored in a network directory.

Select "Start > Settings > Devices > Device Manager > Update Device drivers" to install the driver.

3.2.3 Connecting an External Monitor

You can connect an external monitor to the "MONITOR" connector on the instrument's rear panel.

For details on the connector refer to "[MONITOR \(VGA\)](#)" on page 36.

1. Connect the external monitor to the R&S ESR.
2. Press the [SETUP] key.
3. Press the "General Setup" softkey.
4. Press the "More" softkey.
5. Press the "Configure Monitor" softkey.

The configuration of the connected monitor is determined and displayed in the standard Windows configuration dialog box.

6. In the configuration dialog box, you can switch from the internal monitor (laptop icon) to the external monitor (monitor icon), or both (double monitor icon).

If the external monitor is selected, the R&S ESR display is disabled. The screen content (measurement screen) formerly displayed on the R&S ESR is displayed on the external screen. If you select both monitors, the R&S ESR screen and the external screen are both active.

3.2.4 R&S ESR Setup

This section describes how to setup the instrument. It includes the following topics:

- [Selecting the Frequency Reference Signal](#).....48
- [Setting the Date and Time](#)..... 49
- [Aligning the Touchscreen](#).....50
- [Setting the Screen Colors](#)..... 50
- [Setting the Display Power Save Function](#).....53
- [Selecting and Configuring Printers](#).....54

3.2.4.1 Selecting the Frequency Reference Signal

You can switch the reference signal for frequency processing of the R&S ESR between the internal reference and an external reference signal at 10 MHz as follows:

1. Press the [SETUP] key.
2. Press the "Reference Int/Ext" softkey until it is in the desired state.



External reference signal

It is important that the external reference signal is deactivated when switching from external to internal reference to avoid interactions with the internal reference signal.

Remote commands:

```
ROSC:SOUR EXT
```

```
ROSC:EXT:FREQ 20
```

3.2.4.2 Setting the Date and Time

You can set the date and time for the internal real time clock as follows:

Opening the Date and Time Properties dialog box

1. Press the [SETUP] key.
2. Press the "General Setup" softkey.
3. Press the "Time + Date" softkey to open the "Date and Time Properties" dialog box.
The "Date & Time" tab is displayed.

Changing the date

1. Press the arrow on the "Month" field to display the list.
2. Select the month from the list.
3. Select the year by clicking on the up and down arrow buttons next to the "Year" field.
4. Select the day in the calendar display or enter the date via the keyboard.
5. Click "OK".

Remote command

```
SYST:DATE 2008,10,1
```

Changing the time

You can change hours, minutes and seconds independently of each other.

1. Select the hour, minute or seconds area of the "Time" field.
2. Enter the required setting via the keyboard or rotary knob.
3. Repeat these steps until the hour, minute and second settings are correct.
4. Click "OK".

Remote command

```
SYST:TIME 12,30,30
```

Changing the time zone

1. Select the "Time Zone" tab.
2. Press the arrow on the "Time Zone" field to display the list.
3. Select the required time zone from the list.

4. Optionally, select the "Automatically adjust clock for daylight saving changes" check box.
5. Click "OK".

3.2.4.3 Aligning the Touchscreen

When the device is delivered, the touchscreen is initially aligned. However, it may become necessary to adjust the alignment later, e.g. after an image update or after exchanging a hard disk. If you notice that touching a specific point on the screen does not achieve the correct response, try adjusting the alignment.



If the touchscreen is so out of order that you cannot navigate properly, connect an external mouse to the R&S ESR and follow the steps described below to start re-alignment.

1. Press the [SETUP] key.
2. Press the "Alignment" softkey.
3. Press the "Touchscreen Alignment" softkey.
4. Using a finger or any other pointing device, press the 4 markers on the screen.

The touchscreen is aligned according to the executed pointing operations.

3.2.4.4 Setting the Screen Colors

To change the colors of the displayed objects, two default color settings are provided. Alternatively, you can change the color of objects individually using predefined colors or using colors of your own definition.



Some color settings are defined by the selected theme, see [Chapter 3.4.4.9, "Selecting a Theme"](#), on page 90, and cannot be changed individually.

Displaying the Screen Colors Submenu

1. Press the [SETUP] key.
2. Press the "Display Setup" softkey.
3. Press the "More" softkey.
4. Press the "Screen Colors" softkey.

The "Screen Colors" submenu is displayed.

Using the Default Color Settings

To select the default setting for brightness, tint and color saturation of all screen objects:

1. In the "Screen Colors" submenu (see ["Displaying the Screen Colors Submenu"](#) on page 50), press the "Set to Default" softkey.

The "Set User Colors to Default" dialog box is displayed.

2. Select one of the default color sets. The color schemes are selected in such a manner that all screen elements are visible optimally regardless whether viewed from above or below. In the instrument's default setting, "Default Colors 1" is active.

Remote commands:

```
DISP:CMAP:DEF1
```

```
DISP:CMAP:DEF2
```

Using the Predefined Color Set

1. In the screen colors submenu (see ["Displaying the Screen Colors Submenu"](#) on page 50), press the "Select Screen Color Set" softkey.

The "Select Screen Color Set" dialog box is displayed.

2. Select the "User Defined Colors" option.

3. In the screen colors submenu, press the "Select Object" softkey.

The "Screen Color Setup" dialog box is displayed.



4. Press the arrow on the "Selected Object" list and select the object for which you want to change the color setting.
5. Select the color you want to use for the object. The defined color is displayed in the "Preview" box.
6. Repeat the steps for all objects that you want to change in color.
7. To change to user-defined colors, press the "Userdefined Colors" softkey. For details refer to ["Defining and Using a User-Defined Color Set"](#) on page 52.
8. Click "OK" to accept the new settings and to close the dialog box.

Remote command:

```
DISP:CMAP1 ... 41:PDEF <color>
```

Defining and Using a User-Defined Color Set

1. In the screen colors submenu (see ["Displaying the Screen Colors Submenu"](#) on page 50), press the "Select Screen Color Set" softkey.
The "Select Screen Color Set" dialog box is displayed.
2. Select the "User Defined Colors" option.
3. In the "Screen Colors" submenu, press the "Select Object" softkey.
The "Screen Color Setup" dialog box is displayed.



4. Press the arrow on the "Selected Object" list and select the object for which you want to change the color setting.
5. In the color palette, select the color you want to use for the object, or enter values for tint, saturation and brightness.
The defined color is displayed in the "Preview" box.
Note: In the continuous color spectrum ("Tint") red is represented by 0% and blue by 100%.
6. Repeat the steps for all objects for which you want to change the color.
7. To change to predefined colors, press the "Predefined Colors" softkey. For details refer to ["Using the Predefined Color Set"](#) on page 51.
8. Click "OK" to accept the new settings and to close the dialog box.

Remote command:

```
DISP:CMAP1 ... 41:HSL <hue>,<sat>,<lum>
```

3.2.4.5 Setting the Display Power Save Function

The R&S ESR provides a feature for automatically switching off its screen after a user-defined period of time. The background lighting is disabled if no entries are made from the front panel after the selected response time (key, softkey and rotary knob).

Activating display power save

1. Press the [SETUP] key.
2. Press the "Display Setup" softkey.
3. Press the "More" softkey.
4. Press the "Display Pwr Save On/Off" softkey.
The power save mode is activated ("On" is highlighted), and the dialog box to enter the response time is displayed.
5. Enter the desired response time in minutes and confirm the entry with the [ENTER] key.
The screen is disabled (turns dark) after the selected period of time.

Deactivating Display Power Save

- ▶ In the "Display Setup" submenu, press the "Display Pwr Save On/Off" softkey again.
"Off" is highlighted and the power save mode is switched off.


3.2.4.6 Selecting and Configuring Printers

You can printout your measurement results using a local printer or a network printer. The instrument supports two independent printout settings. This allows you to quickly switch between output to a file and a printer.

Configuring the Printer and the Printout

1. Press the [PRINT] key.
2. Press the "Device Setup" softkey.

The "Hardcopy Setup" dialog box is displayed.

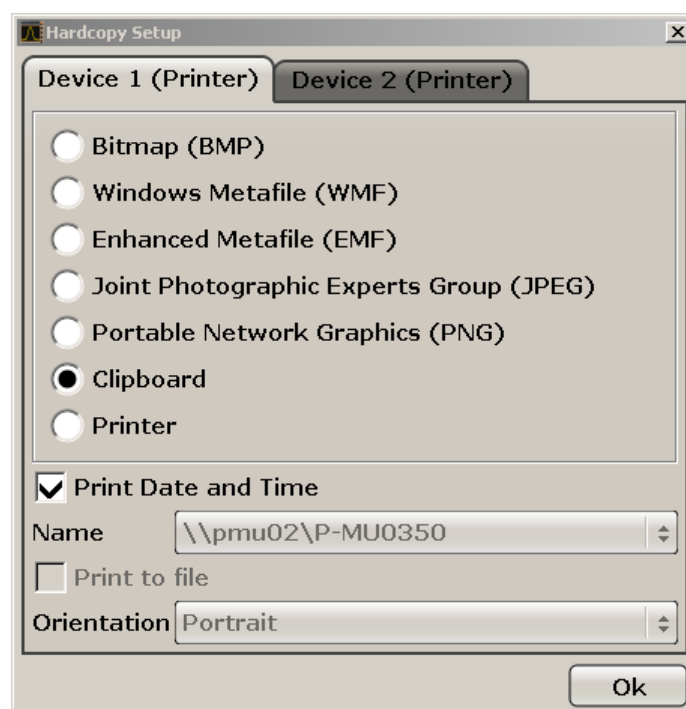

3. To change the tab in order to define the second print setting, press the tab on the screen.
4. Define the output by selecting the required options.
 - To save the hardcopy in an image file, select one of the image types. Depending on the image type, the color depth varies (e.g. 4-bit for BMP, 24-bit for PNG and JPEG).
 - To copy the image to the clipboard, select the "Clipboard" option.
 - To use a preconfigured network printer, select the "Printer" option.

Note: The "Name", "Print to File" and "Orientation" fields are only available if the "Printer" option is selected. You can perform the following steps only with the "Printer" option selected.
5. In the "Name" field, select the desired printer type.

6. To redirect the output to a postscript file rather than a printer, select the "Print to file" option.
7. In the "Orientation" field, select the desired orientation.
8. Optionally, activate the "Print Date and Time" option to add this information to the printout.
9. Click "OK" to accept the settings and to close the dialog box.

Selecting the Printout Colors

1. Press the [PRINT] key.
2. Press the "Colors" softkey.
3. To print in color, press the "Select Print Color Set" softkey to select the color set. The "Select Print Color Set" dialog box is displayed.
4. Select the color set by using the arrow keys and confirm your selection by pressing the [ENTER] key.
 - "Screen Colors (Print)" option: The current screen colors are used for the printout. Independently of the current screen colors, the background is printed in white and the grid in black.
Remote command: `HCOP : CMAP : DEF1`
 - "Optimized Colors" option: This setting improves the color clarity of the printout. Trace 1 is printed in blue, trace 2 in black, trace 3 in bright green, trace 4 in pink, trace 5 in sea green, trace 6 in dark red, and the markers in sky blue. The background is printed in white and the grid in black. The other colors correspond to the screen colors of the default color setting of the "Setup" menu.
Remote command: `HCOP : CMAP : DEF2`
 - "User Defined Colors" option: You define and use your own color set for the printout. For details how to proceed refer to ["Defining and Using a User-Defined Color Set"](#) on page 52.
Remote command: `HCOP : CMAP : DEF3`
 - "Screen Colors (Hardcopy)" option: The current screen colors without any changes for a hardcopy. For details on the output format see ["Configuring the Printer and the Printout"](#) on page 54 .
Remote command: `HCOP : CMAP : DEF4`
5. If you want a black-and-white printout, press the "Color On/Off" softkey to switch off the color. In the black-and-white printout, all background colors are printed out in white and all color lines in black. This allows you to improve contrast on the printout.
Remote command: `HCOP : DEV : COL ON`

3.2.5 Windows Operating System

The instrument contains the Microsoft Windows operating system which has been configured according to the instrument's features and needs. Changes in the system setup are only required when peripherals like keyboard or a printer are installed or if the network configuration does not comply with the default settings. After the R&S ESR is started, the operating system boots and the instrument firmware is started automatically.

To ensure that the instrument software functions properly, certain rules must be adhered to concerning the operating system.

NOTICE

Risk of rendering instrument unusable

The instrument is equipped with the Microsoft Windows operating system. You can install additional software on the instrument, however, additional software can impair instrument function. Thus, run only programs that Rohde & Schwarz has tested for compatibility with the instrument software.

The drivers and programs used on the instrument under Microsoft Windows are adapted to the instrument. Only install update software released by Rohde & Schwarz to modify existing instrument software.

The following program packages have been tested:

- Symantec Endpoint Security – virus-protection software
- FileShredder - for reliable deletion of files on the hard disk

3.2.5.1 Virus Protection

Take appropriate steps to protect your instruments from infection. Use strong firewall settings and scan any removable storage device used with a Rohde & Schwarz instrument regularly. It is also recommended that you install anti-virus software on the instrument. Rohde & Schwarz does NOT recommend running anti-virus software in the background ("on-access" mode) on Windows-based instruments, due to potentially degrading instrument performance. However, Rohde & Schwarz does recommend running it during non-critical hours.

For details and recommendations, see the following Rohde & Schwarz white paper:

- [1EF96: Malware Protection Windows 10](#)

3.2.5.2 Service Packs and Updates

Microsoft regularly creates security updates and other patches to protect Windows-based operating systems. These are released through the Microsoft Update website and associated update server. Instruments using Windows, especially those that connect to a network, should be updated regularly.

For details and recommendations, see the Rohde & Schwarz White Paper [1EF96: Malware Protection Windows 10](#).

3.2.5.3 Login

Microsoft Windows requires that users identify themselves by entering a user name and password in a login window. By default, the R&S ESR provides two user accounts:

- **"Instrument"**: an administrator account with unrestricted access to the computer/domain
- **"NormalUser"**: a standard user account with limited access

Automatic login

For the administrator account, an automatic login function is active by default. If activated, login is carried out automatically for the administrator (with full access) in the background when the R&S ESR is started, without having to enter a password. This function is active until you explicitly deactivate it or change the password.

For information on how to deactivate or reactivate the automatic login, refer to ["Automatic Login Function"](#) on page 57.

Passwords

For all default user accounts, the initial password is *894129*. Note that this password is very weak, and it is recommended that you change the password for both users after initial login.

You can change the password in Microsoft Windows for any user at any time via "Start > Settings > Account > SignIn Options > Password > Change".



Changing the password and use of auto-login function

Note that when you change the default passwords, the default auto-login function no longer works! Reactivate it manually as described in ["Reactivating the automatic login function"](#) on page 58.

Automatic Login Function

When shipped, the instrument automatically logs on the default "Instrument" user to Microsoft Windows using the default password.

Switching users when using the automatic login function

Which user account is used is defined during login. If automatic login is active, the login window is not displayed. However, you can also switch the user account to be used when the automatic login function is active.



1. Press the "Windows" key or the [CTRL + ESC] key combination on your keyboard to access the operating system of the R&S ESR (see also [Chapter 3.2.5.4, "Accessing the Start Menu"](#), on page 59).
2. Press [CTRL + ALT + DEL], then select "Sign out".

The "Login" dialog box is displayed, in which you can enter the different user account name and password.

Deactivating the automatic login function

To deactivate the automatic login function, perform the following steps:



1. Press the "Windows" key or the [CTRL + ESC] key combination on your keyboard to access the operating system of the R&S ESR (see also [Chapter 3.2.5.4, "Accessing the Start Menu"](#), on page 59).
2. In the "Start" menu, select "All applications > Windows System > Run". The "Run" dialog box is displayed.
3. Enter the command `C:\R_S\INSTR\USER\NO_AUTOLOGIN.REG`.
4. Press the [ENTER] key to confirm.
This command deactivates the automatic login function. The next time you switch on the instrument, the operating system prompts you to enter your user name and password before it starts the firmware.

Adapting the automatic login function to a new password

If you change the "Instrument" user's password, which is used during automatic login, this function no longer works. Adapt the settings for the command that activates the auto login function first.

1. Open the `C:\R_S\INSTR\USER\NO_AUTOLOGIN.REG` file in any text editor (e.g. Notepad).
2. In the line `"DefaultPassword"="894129"`, replace the default password (894129) by the new password for automatic login.
3. Save the changes to the file.

Reactivating the automatic login function



1. Press the "Windows" key or the [CTRL + ESC] key combination on your keyboard to access the operating system of the R&S ESR (see also [Chapter 3.2.5.4, "Accessing the Start Menu"](#), on page 59).
2. In the "Start" menu, select "All applications > Windows System > Run". The "Run" dialog box is displayed.
3. Enter the command `C:\R_S\INSTR\USER\AUTOLOGIN.REG`.
4. Press the [ENTER] key to confirm.
This command reactivates automatic login function. It is active the next time the instrument reboots.

3.2.5.4 Accessing the Start Menu


The Windows "Start" menu provides access to the Microsoft Windows functionality and installed programs.

To open the "Start" menu:



- ▶ In Windows 10:
Press the "Windows" key or the [CTRL + ESC] key combination on your (external) keyboard.

The Windows "Start Menu" provides access to the Microsoft Windows functionality and other installed programs.

- ▶ Select the "Windows"  icon in the toolbar.
The R&S ESR opens the "Start Menu".
In addition, the taskbar becomes visible.
When you connect an external keyboard, you can access the "Start Menu" using the "Windows" key or the [Ctrl] + [Esc] key combination.

All necessary system settings can be defined in the "Start > Settings" menu (for required settings refer to the Microsoft Windows documentation and to the hardware description).

3.2.5.5 Accessing the Windows Taskbar

The Windows taskbar also provides quick access to commonly used programs, for example Paint or WordPad. IECWIN, the auxiliary remote control tool provided free of charge and installed by Rohde & Schwarz, is also available from the taskbar.



For details on the IECWIN tool, see the "Network and Remote Control" chapter of the R&S ESR user manual.



To open the taskbar, press the "Windows" key or the [CTRL + ESC] key combination on your keyboard.

3.2.6 Configuring the GPIB Interface

A GPIB interface is integrated on the rear panel of the instrument. You can set the GPIB address and the ID response string. The GPIB language is set as SCPI by default and cannot be changed for the R&S ESR.

For details on the GPIB interface see "[GPIB Interface](#)" on page 37).

Displaying the GPIB submenu

1. Press the [SETUP] key.
2. Press the "General Setup" softkey.

3. Press the "GPIB" softkey.

The submenu for setting the parameters of the remote control interface is displayed.

Setting the GPIB address

- ▶ In the "GPIB" menu, press the "GPIB Address" softkey.

The edit dialog box for the GPIB address is displayed. The setting range is from 0 to 30. If SCPI is selected as the GPIB language, the default address is 20.

Remote command:

```
SYST:COMM:GPIB:ADDR 20
```

Setting the default ID response string

- ▶ In the "GPIB" menu, press the "ID String Factory" softkey to select the default response to the *IDN? command.

Setting a user-defined ID response string

- ▶ In the "GPIB" menu, press the "ID String User" softkey to enter a user-defined response to the *IDN? command. The maximum length of the output string is 36 characters.

3.3 Firmware Update and Installation of Firmware Options

This chapter describes how to update the firmware and how to activate optional firmware packages.



Updating the firmware or installing optional firmware requires administrator rights (see [Chapter 3.2.5.3, "Login"](#), on page 57).

3.3.1 Firmware Update

You can install a new firmware version using one of the following methods:

- Copying the files to the instrument using USB devices (e.g. a memory stick), GPIB, or LAN
- Using the "Remote Installation" feature in a LAN network

Copying the files to the instrument

1. Press the [SETUP] key.
2. Press the "More" softkey.

3. Press the "Firmware Update" softkey.
The "Firmware Update" dialog box is displayed.
4. Enter the drive name and directory via the keypad.
Example: The installation files are stored on a memory stick in the `Update` directory. After you insert the memory stick, it will be detected as drive `D:`. Therefore, the required path specification is `D:\UPDATE`.
5. If you install via LAN using the Remote Desktop application, enter the drive name and directory or press the "Browse" button to locate the directory:
 - a) In the displayed dialog box, select the drive.
 - b) On the selected drive, select the folder that contains the installation file (*.exe).
 - c) Press the "Select" button to confirm your selection and go back to the "Firmware Update" dialog box.
6. Press "Execute"
The installation program will guide you through the installation.
7. After the firmware update, the "UNCAL" status display indicates the necessity of a self alignment. Perform a self alignment (for details refer to [Chapter 3.2.1.9, "Performing a Self Alignment and a Self Test"](#), on page 45).
Remote command: `SYST:FIRM:UPD 'D:\FW_UPDATE'`

Performing a remote installation from a Windows PC

This method requires a LAN connection from the instrument to a Windows PC (see [Chapter 11.2.6.1, "Connecting the Instrument to the Network"](#), on page 624).

1. Run the `Setup.exe` file on your PC.
2. Select "Remote Installation" and click the "Next" button.
3. Select the packages you want to install and click the "Next" button.
4. Your LAN subnet is scanned and all found instruments are listed.
Note: The setup procedure communicates with the instrument via LAN, which means the file must pass the firewall. Therefore, add the `Setup.exe` file to your firewall rules, then restart the scan by clicking "Rescan".
5. Select the instruments you want to update. You can select up to 5 instruments to update at the same time.
Note: All instruments in your LAN structure are included in the list. Make sure you select the correct instruments!
To display further options, click the "Options" button.
6. Start installation by clicking "Install".
7. Confirm that you want to reboot the instrument in order to activate the firmware update. The instrument restarts automatically.

3.3.2 Activating Firmware Options

Firmware options are enabled by entering license keys as described here.

To activate firmware options

1. Press the [SETUP] key.
2. Press the "More" softkey.
3. Press the "Option Licenses" softkey.
4. Press the "Install Option" softkey.
An edit dialog box is displayed.
5. Enter the option key number using the keypad.
6. Press the [ENTER] key.
If validation is successful, the message "option key valid" is displayed. If the validation fails, the option software is not installed.
7. Reboot the instrument.



With time-limited licenses, a message box appears if an option is about to expire. Press the "OK" button to resume using the R&S ESR. If an option has already expired, a message box appears for you to confirm. In this case, all instrument functions are unavailable (including remote control) until the R&S ESR is rebooted.

Alternatively, you can activate options using an XML file.

To activate firmware options using an XML file

1. Press the [SETUP] key.
2. Press the "More" softkey.
3. Press the "Option Licenses" softkey.
4. Press the "Install Option by XML" softkey.
An edit dialog box is displayed.
5. Enter or browse for the name of an XML file on the instrument that contains the option key.
6. Press "Select."
If validation is successful, the message "option key valid" is displayed. If the validation fails, the option software is not installed.
7. Reboot the instrument.

3.4 Basic Operations


This chapter gives an overview on how to work with the R&S ESR. It describes what kind of information is displayed in the diagram area, how to operate the R&S ESR via the front panel keys and other interaction methods, and how to use the Online Help.



Note the [Conventions Used in the Documentation](#) concerning procedure descriptions and terminology described at the beginning of this manual.

3.4.1 Information in the Diagram Area

The following figure shows a measurement diagram during analyzer operation. All different information areas are labeled. They are explained in more detail in the following sections.

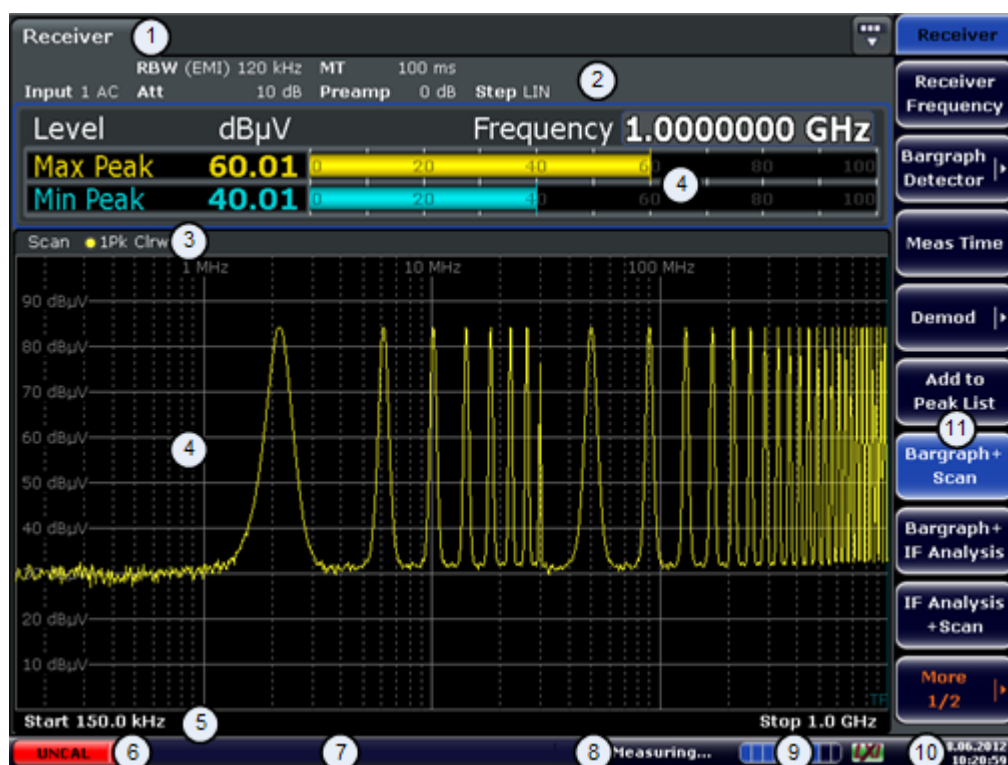


- 1 = Operation mode tabs
- 2 = Hardware information
- 3 = Header of the result display containing trace information
- 4 = Result display
- 5 = Footer of the result display containing general measurement settings
- 6 = Calibration status
- 7 = Error messages
- 8 = Measurement status information

- 9 = Measurement progress bar
- 10 = Date and time
- 11 = Softkeys

3.4.1.1 Channel Display

Using the R&S ESR you can handle several different measurement tasks (channels) at the same time (although they can only be performed asynchronously). For each channel, a separate tab is displayed on the screen. In order to switch from one channel display to another, simply press the corresponding tab.



 
The  icon on the tab label indicates that the displayed trace no longer matches the current instrument settings. This may be the case, for example, if a trace is frozen and the instrument settings are changed. As soon as a new measurement is performed, the icon disappears.

To start a new channel

1. Click the icon in the toolbar at the top of the screen (see also [Chapter 3.4.2.1, "Toolbar"](#), on page 70 on how to display the toolbar).
2. Select the softkey for the required measurement mode.
A new tab is displayed for the new channel.

3.4.1.2 Display of Hardware Settings

Information on hardware settings are displayed in the channel bar above the diagram.

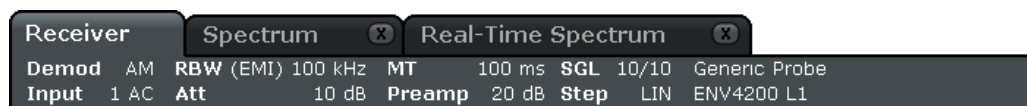

Invalid settings

A bullet next to the hardware setting indicates that user-defined settings are used, not automatic settings. A green bullet indicates this setting is valid and the measurement is correct. A red bullet indicates an invalid setting that does not provide useful results. It is the user's responsibility to remedy such a situation.



Editing settings in the channel bar

All settings that are displayed in the channel bar can easily be edited by touching the setting in the display (with a finger or mouse pointer). The corresponding (edit) dialog box is displayed where you can edit the setting.

In receiver mode, the R&S ESR shows the following settings:


Demod	Active AF demodulation.
Input	Number of the RF Input and the type of coupling currently used.
RBW	Resolution bandwidth currently used.
Att	Current (RF) attenuation level.
MT	Measurement time currently used.
Preamp	Current preamplification level.
SGL	Current scan count.
Step	Current frequency step mode.
no label	Active transducer factor.
no label	Active LISN.

In spectrum mode, the R&S ESR shows the following settings:

Ref Level	Reference level
Att	RF attenuation level.
Ref Offset	Reference level offset
SWT	Sweep time that has been set. If the sweep time does not correspond to the value for automatic coupling, a bullet is displayed in front of the field. The color of the bullet turns red if the sweep time is set below the value for automatic coupling. In addition, the UNCAL flag is shown. In this case, the sweep time must be increased.
RBW	Resolution bandwidth that has been set. If the bandwidth does not correspond to the value for automatic coupling, a green bullet appears in front of the field.
VBW	Video bandwidth that has been set. If the bandwidth does not correspond to the value for automatic coupling, a green bullet is displayed in front of the field.
Compatible	Compatible device mode (FSP, FSU, default; default not displayed)
Mode	Indicates which sweep mode type is selected: <ul style="list-style-type: none"> • "Auto FFT": automatically selected FFT sweep mode • "Auto sweep": automatically selected swept sweep mode • "FFT": manually selected FFT sweep mode • "Sweep": manually selected swept sweep mode

3.4.1.3 Measurement Settings Information

In addition to the common hardware settings, the channel bar above the diagram also displays information on instrument settings that affect the measurement results even though this is not immediately apparent from the display of the measured values. This information is displayed in gray font and only when applicable for the current measurement, as opposed to the common hardware settings that are always displayed.

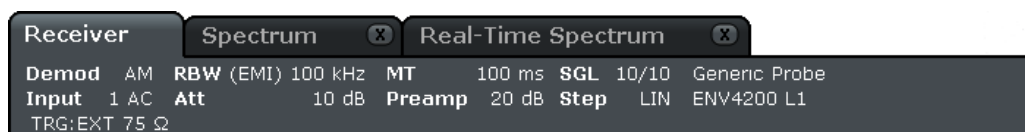

In Receiver mode, the R&S ESR shows the following information.

TRG	Trigger source (for details see trigger settings in the "TRIG" menu in the Operating manual) <ul style="list-style-type: none"> • EXT: External • VID: Video
75 Ω	The input impedance of the instrument is set to 75 Ω.

In Spectrum mode, the following types of information may be displayed, if applicable.

Label	Description
SGL	The sweep is set to single sweep mode.
Sweep Count	The current signal count for measurement tasks that involve a specific number of subsequent sweeps (see "Sweep Count" setting in "Sweep" menu in the Operating manual)
TRG	Trigger source (for details see trigger settings in the "TRIG" menu in the Operating manual) <ul style="list-style-type: none"> • EXT: External • VID: Video • RFP: RF power • IFP: IF power • TIM: Time • SQL: Squelch
6dB/RRC/CHN	Filter type for sweep bandwidth (see BW menu in the Operating manual)
PA	The preamplifier is activated.
GAT	The frequency sweep is controlled via the [EXT TRIG/GATE IN] connector.
TDF	A transducer factor is activated.
75 Ω	The input impedance of the instrument is set to 75 Ω.
FRQ	A frequency offset ≠ 0 Hz is set.
DC/AC	An external DC or AC calibration signal is in use.
Inp	Input source: digital I/Q (option R&S FSV-B17 only)

3.4.1.4 Diagram-specific and Trace Information

Diagram-specific information, e.g. concerning traces, is indicated in the diagram header and footer.

Trace information in diagram header

The diagram header (above the diagram) contains the following trace information:



The header may contain a user-defined introductory title, see [Chapter 3.4.4.7, "Adding a Title to the Diagram Header"](#), on page 89.




Editing settings in the diagram header

All settings that are displayed in the diagram header can easily be edited by selecting the setting in the display (by tapping or clicking). The corresponding (edit) dialog box is displayed in which you can edit the setting.

Norm/NCor

Correction data is not used.

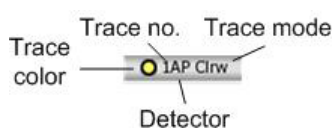

Trace color		Color of trace display in diagram
Trace no.		Trace number (1 to 6)
Detector		Selected detector:
	AP	AUTOPEAK detector
	Pk	MAX PEAK detector
	Mi	MIN PEAK detector
	Sa	SAMPLE detector
	Av	AVERAGE detector
	Rm	RMS detector
	QP	QUASISPEAK detector
	CA	CISPR Average detector
	RA	RMS Average detector
Trace Mode		Sweep mode:
	Clrw	CLEAR/WRITE
	Max	MAX HOLD
	Min	MIN HOLD
	Avg	AVERAGE (Lin/Log/Pwr)
	View	VIEW

Marker information in Diagram Grid

The x and y axis positions of the last 2 markers or delta markers that were set, as well as their index, are displayed within the diagram grid, if available. The value in the

square brackets after the index indicates the trace to which the marker is assigned. (Example: M1[1] defines marker 1 on trace 1.) For more than 2 markers, a separate marker table is displayed beneath the diagram.

The marker function information is not available in realtime mode.

If applicable, the active measurement function for the marker and its main results are indicated, as well. The functions are indicated with the following abbreviations:

FXD	Reference fixed marker active
PHNoise	Phase noise measurement active
CNT	Frequency counter active
TRK	Signal track active
NOise	Noise measurement active
MDepth	Measurement of the AM modulation depth active
TOI	TOI measurement active

Marker Information in Marker Table

In addition to the marker information displayed within the diagram grid, a separate marker table may be displayed beneath the diagram. This table provides the following information for all active markers:

Type	Marker type: N (normal), D (delta), T (temporary, internal), PWR (power sensor)
Dgr	Diagram number
Trc	Trace to which the marker is assigned
Stimulus	x-value of the marker
Response	y-value of the marker
Func	Activated marker or measurement function
Func .Result	Result of the active marker or measurement function

Mode-dependant Information in Diagram Footer

The diagram footer (beneath the diagram) contains the following information, depending on the current mode:

Mode	Label	Information
FREQ	CF	Center frequency (between start and stop)
	Span	Frequency span
SPAN	CF (1.0 ms/)	Zero span

For most modes, the number of sweep points shown in the display are indicated in the diagram footer. In zoom mode, the (rounded) number of currently displayed points are indicated.

The diagram footer can be removed from the display temporarily, see [Chapter 3.4.4.8, "Removing the Diagram Footer"](#), on page 89.

3.4.1.5 Instrument and Status Information

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram.



Hiding the status bar

You can hide the status bar display, e.g. in order to enlarge the display area for the measurement results.

1. Press the [DISPLAY] key.
2. In the "Display Settings" dialog box, select "Status Bar State: Off".
The status bar is no longer displayed.


- To display the status bar again, select "Status Bar State: On".

SCPI command:

```
DISP:SBAR:STAT OFF
```

The following information is displayed:

Instrument status

	The instrument is configured for operation with an external reference.
---	--

Error information

If errors or irregularities are detected, a keyword and an error message, if available, are displayed in the status bar.



The following keywords are used:

UNCAL	One of the following conditions applies: <ul style="list-style-type: none"> • Correction data has been switched off. • No correction values are available. This occurs, for example, if a firmware update is performed followed by a cold start of the instrument. • Record the correction data by performing a self alignment
OVL	Overload of the input mixer. <ul style="list-style-type: none"> • Increase the RF attenuation (for RF input). • Reduce the input level (for digital input)
IFOVL	Overload of the IF signal path after the input mixer. <ul style="list-style-type: none"> • Increase the reference level.
LOUNL	Error in the instrument's frequency processing hardware was detected.

NO REF	Instrument was set to an external reference but no signal was detected on the reference input.
OVEN	OCXO reference frequency (option R&S FSV-B4) has not yet reached its operating temperature. The message usually disappears a few minutes after power has been switched on.

Progress

The progress of the current operation is displayed in the status bar.



Date and time

The date and time settings of the instrument are displayed in the status bar.



3.4.2 Means of User Interaction

The instrument provides a user interface for operation that does not require an external keyboard, using the following means of interaction:

- [Chapter 3.4.2.1, "Toolbar"](#), on page 70
- [Chapter 3.4.2.2, "Touchscreen"](#), on page 72
- [Chapter 3.4.2.3, "On-screen Keyboard"](#), on page 72
- [Chapter 3.4.2.5, "Rotary Knob"](#), on page 74
- [Chapter 3.4.2.6, "Arrow Keys, UNDO/REDO Keys"](#), on page 74
- [Chapter 3.4.2.7, "Softkeys"](#), on page 75
- [Chapter 3.4.2.9, "Dialog Boxes"](#), on page 77

All tasks necessary to operate the instrument can be performed using this user interface. Apart from instrument specific keys, all other keys that correspond to an external keyboard (e.g. arrow keys, ENTER key) operate conform to Microsoft.

For most tasks, there are at least 2 alternative methods to perform them:

- Using the touchscreen
- Using other elements provided by the front panel, e.g. the keypad, rotary knob, or arrow and position keys

3.4.2.1 Toolbar

Standard functions can be performed via the icons in the toolbar at the top of the screen, if available (see [Chapter 3.4, "Basic Operations"](#), on page 63). By default, this toolbar is not displayed.

Displaying the toolbar

- ▶ Press the "Toolbar" icon to the right of the tabs in the display to toggle the toolbar on or off.



Alternatively:

1. Press the [SETUP] key.
2. Press the "Display Setup" softkey.
3. Press the "Tool Bar State On/Off" softkey.
Or:
4. Press the [DISPLAY] key.
5. In the "Display Settings" dialog box, select "Tool Bar State: On".
The toolbar is displayed at the top of the screen.

Remote:

```
DISP:TBAR:STAT ON
```

The following functions are available:

Table 3-2: Standard Application Functions in the Toolbar

Icon	Description
	Opens the "Select Mode" menu (see Chapter 3.4.1.1, "Channel Display" , on page 64)
	Opens an existing measurement (settings) file
	Stores the current measurement file
	Prints the current measurement screen
	Saves the current measurement screen as a file (screenshot)
	Reverts last operation.
	Repeats previously reverted operation.
	Selection mode: the cursor can be used to select (and move) markers in a zoomed display
	Zoom mode: displays a dotted rectangle in the diagram that can be expanded to define the zoom area. Can be repeated several times.
	Zoom off: the diagram is displayed in its original size

3.4.2.2 Touchscreen

A touchscreen is a screen that is touch-sensitive, i.e. it reacts in a specified way when a particular element on the screen is tapped by a finger or a pointing device, for example. Any user interface elements that can be clicked on by a mouse pointer can also be tapped on the screen to trigger the same behavior, and vice versa. Using the touchscreen, the following tasks (amongst others) can be performed by the tap of your finger:

- Changing a setting
- Changing the display
- Moving a marker
- Zooming into a diagram
- Saving or printing results and settings

To imitate a right-click by mouse using the touchscreen, for example to open a context-sensitive menu for a specific item, press the screen for about 1 second.

Deactivating and Activating the Touchscreen Function

The touchscreen function can be deactivated, e.g. when the instrument is being used for demonstration purposes and tapping the screen should not provoke an action.


1. Press the [DISPLAY] key.
2. In the dialog box, select one of the following options:
 - "Touchscreen ON": touchscreen function is active for the entire screen
 - "Touchscreen OFF": touchscreen is deactivated for the entire screen
 - "DIAGRAM TOUCH OFF": touchscreen is deactivated for the diagram area of the screen, but active for the surrounding softkeys, toolbars and menus.

SCPI command:

```
DISP:TOUCH:STAT OFF
```

3.4.2.3 On-screen Keyboard

The on-screen keyboard is an additional means of interacting with the instrument without having to connect an external keyboard.

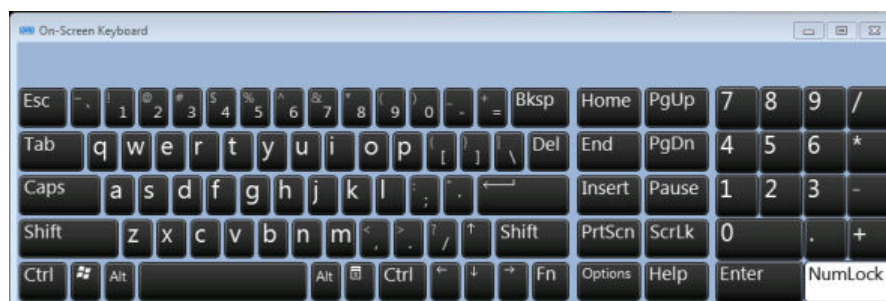

The on-screen keyboard display can be switched on and off as desired using the "On-Screen Keyboard" function key beneath the screen.



When you press this key, the display switches between the following options:

- Keyboard displayed at the top of the screen
- Keyboard displayed at the bottom of the screen
- No keyboard displayed



You can use the TAB key on the on-screen keyboard to move the focus from one field to another in dialog boxes.

3.4.2.4 Keypad




The keypad is used to enter alphanumeric parameters. It contains the following keys:

- Alphanumeric keys
Enters numbers and (special) characters in edit dialog boxes. For details refer to [Chapter 3.4.3.1, "Entering Numeric Parameters"](#), on page 78 and [Chapter 3.4.3.2, "Entering Alphanumeric Parameters"](#), on page 78.
- Decimal point
Inserts a decimal point "." at the cursor position.
- Sign key
Changes the sign of a numeric parameter. In the case of an alphanumeric parameter, inserts a "-" at the cursor position.
- Unit keys (GHz/-dBm MHz/dBm, kHz/dB and Hz/dB)
These keys add the selected unit to the entered numeric value and complete the entry.
In the case of level entries (e.g. in dB) or dimensionless values, all units have the value "1" as multiplying factor. Thus, they have the same function as an ENTER key. The same is true for an alphanumeric entry.
- ESC key
Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. In dialog boxes that contain a "Cancel" button it activates that button.
For "Edit" dialog boxes the following mechanism is used:
 - If data entry has been started, it retains the original value and closes the dialog box.
 - If data entry has not been started or has been completed, it closes the dialog box.
- BACKSPACE key
 - If an alphanumeric entry has already been started, this key deletes the character to the left of the cursor.

- If no input field is currently active, the most recently entered value is undone, i.e. the previous value is retrieved. Thus, you can toggle between two values (e.g. spans).
- ENTER key
 - Concludes the entry of dimensionless entries. The new value is accepted.
 - With other entries, this key can be used instead of the "Hz/dB" unit key.
 - In a dialog box, presses the default or focused button.
 - In a dialog box, activates the edit mode for the focused area, if available. For details on the edit mode refer to [Chapter 3.4.3.3, "Navigating in Dialog Boxes"](#), on page 80.
 - In a dialog box, activates or deactivates the selected option of the focused area, if the edit mode is active.

3.4.2.5 Rotary Knob

	<p>The rotary knob has several functions:</p> <ul style="list-style-type: none"> • Increments (clockwise direction) or decrements (counter-clockwise direction) the instrument parameter at a defined step width in the case of a numeric entry. • Shifts the selection bar within focused areas (e.g. lists), if the edit mode is activated. • Shifts markers, limit lines, etc on the screen. • Acts like the ENTER key, when it is pressed. For details refer to Chapter 3.4.3.3, "Navigating in Dialog Boxes", on page 80. • Moves the scroll bar vertically, if the scroll bar is focused and the edit mode is activated. <p>For details on the edit mode refer to Chapter 3.4.3.3, "Navigating in Dialog Boxes", on page 80.</p>
--	---

3.4.2.6 Arrow Keys, UNDO/REDO Keys

The arrow keys are used for navigation. The [UNDO]/[REDO] keys support you during input.



UPARROW/DNARROW keys

The [UPARROW] or [DNARROW] keys do the following:

- In a numeric edit dialog box, increase or decrease the instrument parameter.
- In a list, scroll forward and backward through the list entries.
- In a table, move the selection bar vertically.
- In windows or dialog boxes with vertical scroll bar, move the scroll bar.

LEFTARROW/RIGHTARROW keys

The [LEFTARROW] or [RIGHTARROW] keys do the following:

- In an alphanumeric edit dialog box, move the cursor.
- In a list, scroll forward and backward through the list entries.
- In a table, move the selection bar horizontally.
- In windows or dialog boxes with horizontal scroll bar, move the scroll bar.

UNDO/REDO keys

- The [UNDO] key reverts the previously performed action, i.e. the status before the previous action is retrieved.
The undo function is useful, for example, if you are performing a zero span measurement with several markers and a limit line defined and accidentally click the "ACP" softkey. In this case, very many settings would be lost. However, if you press [UNDO] immediately afterwards, the previous status is retrieved, i.e. the zero span measurement and all settings.
- The [REDO] key repeats the previously reverted action, i.e. the most recently performed action is repeated.



The [UNDO] function is not available after a [PRESET] or "RECALL" operation. When these functions are used, the history of previous actions is deleted.

3.4.2.7 Softkeys

Softkeys are virtual keys provided by the software. Thus, more functions can be provided than those that can be accessed directly via the function keys on the device. Softkeys are dynamic, i.e. depending on the selected function key, a different list of softkeys is displayed on the right side of the screen

A list of softkeys for a certain function key is also called a menu. Each softkey can either represent a specific function, or a submenu that in turn represents several softkeys.

Selecting softkeys

- ▶ A particular softkey is selected by pressing the key on the screen with a finger, mouse pointer or other pointing device.



Softkeys can only be operated via the screen, there are (usually) no corresponding function keys.

Navigating in softkey menus

- The "More" softkey indicates that the menu contains more softkeys than can be displayed at once on the screen. When pressed, it displays the next set of softkeys.

- If the softkey label contains a ">" symbol, it represents a submenu of further softkeys. When you press it, the submenu is displayed.
- The "Up" key switches to the next higher level of the menu.
- The start menu of the current measurement mode is accessed directly by pressing the [HOME] key on the front panel.

Softkey actions

A softkey performs one of the following actions when pressed:

- Opens a dialog box to enter data.
- Switches a function on or off.
- Opens a submenu (only softkeys with a ">" symbol).

Recognizing the softkey status by color

In the factory configuration, a softkey is highlighted orange when a corresponding dialog box is open. If it is a toggle softkey, the current state is highlighted blue. If an instrument function is not available temporarily due to a specific setting, the associated softkey is deactivated and its text is colored gray.

Some softkeys belong to a certain (firmware) option. If this option is not implemented in your device, the associated softkeys are not displayed.

Hiding softkeys

You can hide the softkey display, e.g. when using remote control, in order to enlarge the display area for the measurement results. When you press a function key on the front panel, the softkeys are displayed temporarily, enabling you to perform a certain task with the softkeys. They are then automatically hidden again when they have not been used for a specified time. Any edit dialog boxes required for entry remain in the display.


1. Press the [DISPLAY] key.
 2. In the "Display Settings" dialog box, select "Softkey Bar State: Off".
The softkeys are no longer displayed.
- To display the softkeys again, select "Softkey Bar State: On".

Remote:

```
DISP:SKEY:STAT OFF
```

3.4.2.8 Context-sensitive Menus

Markers and traces in the display, as well as the information in the channel bar, have context-sensitive menus. If you right-click on a marker or trace in the display, or information in the channel bar (or touch it for about 1 second), a menu is displayed which contains the same functions as the corresponding softkey. This is useful, for example, when the softkey display is hidden (see [Chapter 3.4.2.7, "Softkeys"](#), on page 75).

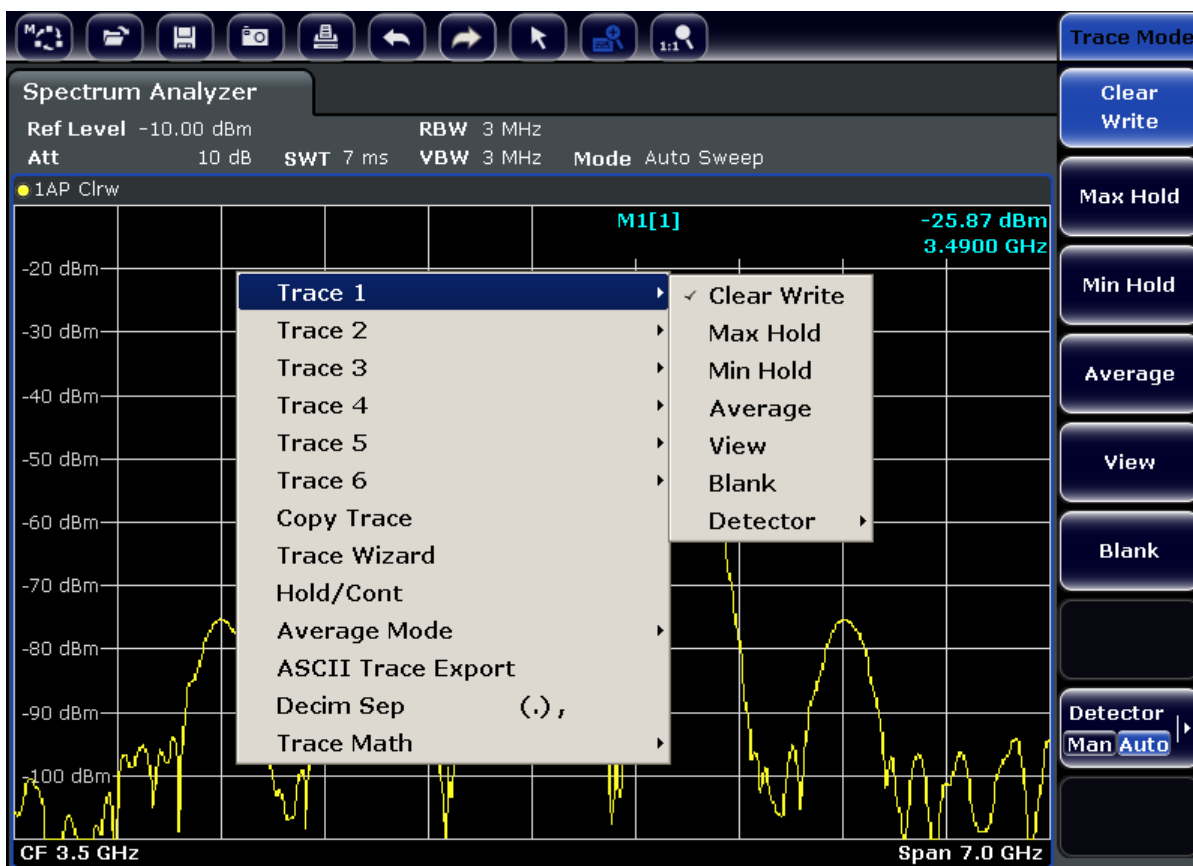

If a menu entry contains an arrow to the right of it, a submenu is available for that entry.

- ▶ To close the menu, press the ESC key or click in the display outside of the menu.

3.4.2.9 Dialog Boxes

In most cases, the R&S ESR dialog boxes are designed to enter a numeric value. In the documentation, these dialog boxes are called "edit dialog boxes". Dialog boxes that are not only designed for parameter entry have a more complex structure and, in the documentation, are called "dialog boxes". The navigation in Windows dialog boxes differs in some aspects from the navigation in R&S ESR dialog boxes. For details, see [Chapter 3.4.3.3, "Navigating in Dialog Boxes"](#), on page 80.

The following figure shows an example of a edit dialog box:

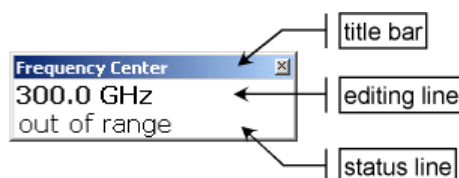


Figure 3-4: Edit dialog box for parameter entry

The title bar shows the name of the parameter that was selected. The entry is performed in the editing line. When the dialog box is displayed, the focus is on the editing line and it contains the currently used parameter value and its unit. The optional third line shows status and error messages which always refer to the current entry.

3.4.3 Setting Parameters

This section describes how to perform the following basic tasks in the R&S ESR:

- [Chapter 3.4.3.1, "Entering Numeric Parameters"](#), on page 78
- [Chapter 3.4.3.2, "Entering Alphanumeric Parameters"](#), on page 78
- [Chapter 3.4.3.3, "Navigating in Dialog Boxes"](#), on page 80

3.4.3.1 Entering Numeric Parameters

If a field requires numeric input, the keypad provides only numbers.

1. Enter the parameter value using the keypad, or change the currently used parameter value by using the rotary knob (small steps) or the UPARROW or DNARROW keys (large steps).
2. After entering the numeric value via keypad, press the corresponding unit key. The unit is added to the entry.
3. If the parameter does not require a unit, confirm the entered value by pressing the ENTER key or one of the unit keys. The editing line is highlighted in order to confirm the entry.

3.4.3.2 Entering Alphanumeric Parameters

If a field requires alphanumeric input, you can use the on-screen keyboard to enter numbers and (special) characters (see also [Chapter 3.4.2.3, "On-screen Keyboard"](#), on page 72).

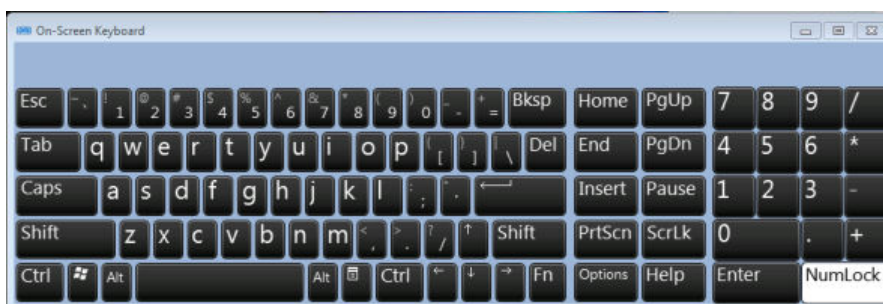


Figure 3-5: On-screen keyboard

Alternatively, you can use the keypad. Every alphanumeric key provides several characters and one number. The decimal point key (.) provides special characters, and the

sign key (-) toggles between capital and small letters. For the assignment refer to [Table 3-3](#).

Entering numbers and (special) characters via the keypad

1. Press the key once to enter the first possible value.
2. All characters available via this key are displayed.
3. To choose another value provided by this key, press the key again, until your desired value is displayed.
4. With every key stroke the next possible value of this key is displayed. If all possible values have been displayed, the series starts with the first value again. For information on the series refer to [Table 3-3](#).
5. To change from capital to small letters and vice versa, press the sign key (-).
6. When you have chosen the desired value, wait for 2 seconds (to use the same key again), or start the next entry by pressing another key.

Entering a blank

- ▶ Press the "Space" bar, or press the "0" key and wait 2 seconds.

Correcting an entry:

1. Using the arrow keys, move the cursor to the right of the entry you want to delete.
2. Press the [BACKSPACE] key.
3. The entry to the left of the cursor is deleted.
4. Enter your correction.

Completing the entry

- ▶ Press the [ENTER] key or the rotary knob.

Aborting the entry

- ▶ Press the [ESC] key.
The dialog box is closed without changing the settings.


Table 3-3: Keys for alphanumeric parameters

Key name (upper inscription)	Series of (special) characters and number provided
7	7 μ Ω ° € ¥ \$ ¢
8	A B C 8 Ä Æ Å Ç
9	D E F 9 É

Key name (upper inscription)	Series of (special) characters and number provided
4	G H I 4
5	J K L 5
6	M N O 6 Ñ Ö
1	P Q R S 1
2	T U V 2 Ü
3	W X Y Z 3
0	<blank> 0 – @ + / \ < > = % &
.	. * : _ , ; ' ' ? () #
–	<toggles between capital and small letters>

3.4.3.3 Navigating in Dialog Boxes

Some of the dialog boxes are not only for parameter entry, and therefore have a more complex structure. The following figure shows an example.

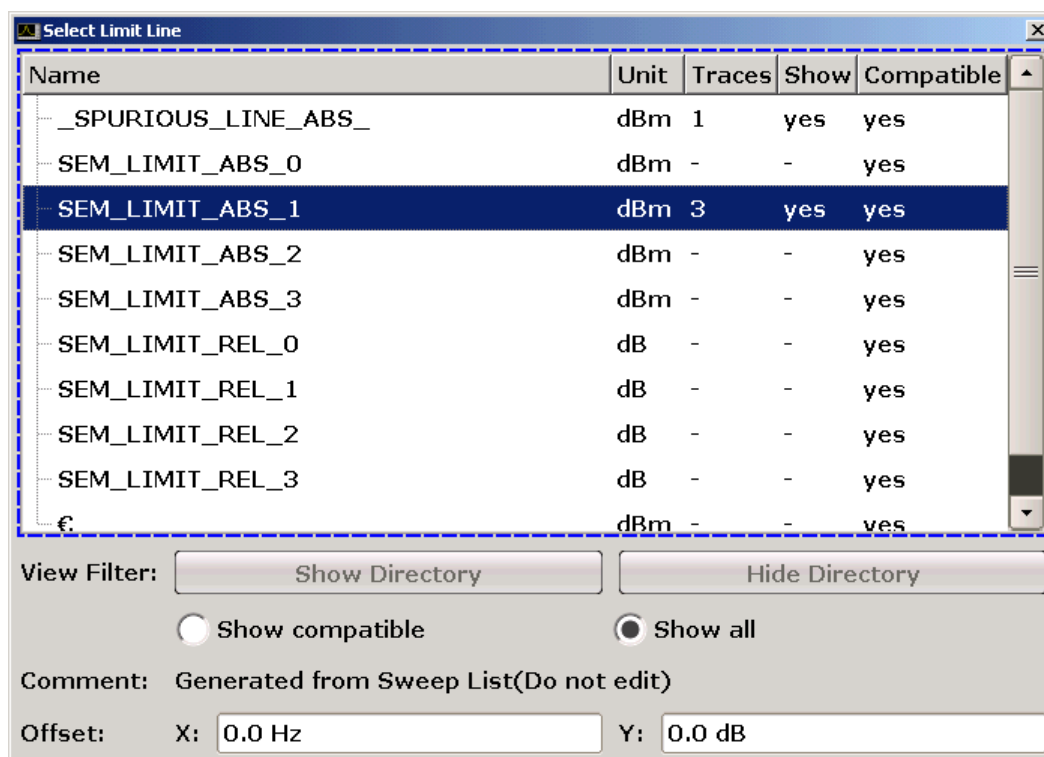

Changing the focus

The focus on the graphical user interface is moved by pressing an element on the screen, or via the rotary knob. The focused area is marked with a blue frame (see [Figure 3-6](#)). If this area consists of more than one element, e.g. lists of options or tables,

you must first switch to the edit mode in order to make changes. A focused area in the edit mode is marked with a dashed blue frame (see [Figure 3-7](#)).

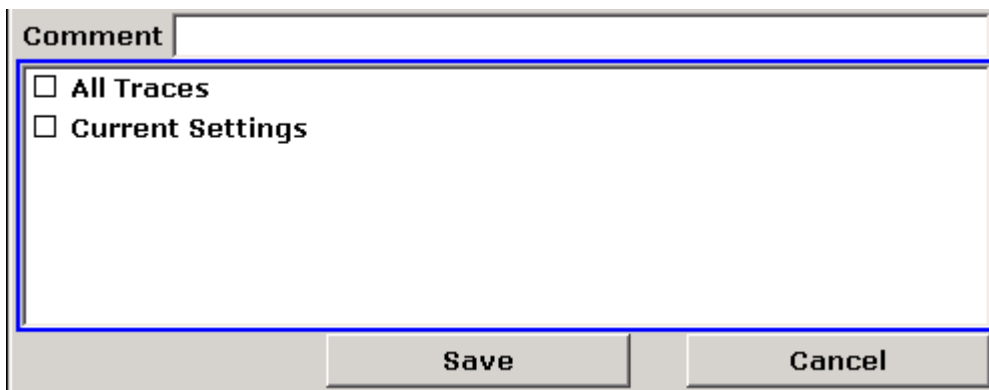


Figure 3-6: Focused area

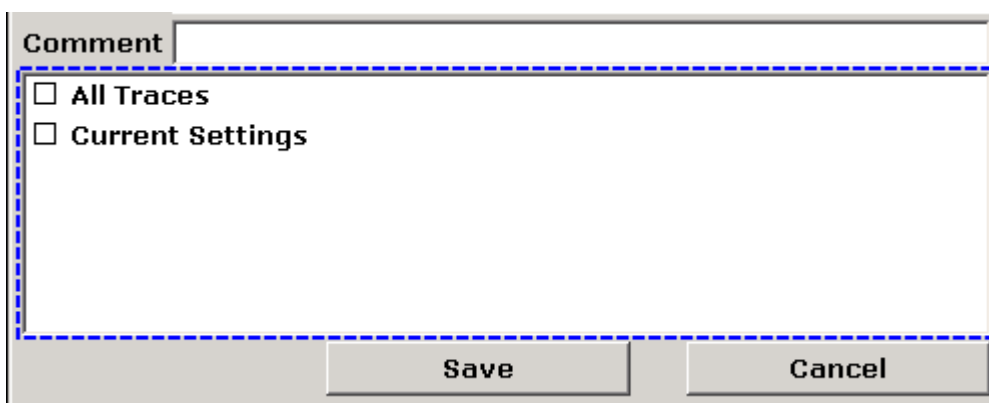


Figure 3-7: Focused area in edit mode



Edit mode

When using the touchscreen for focus changes, all focused areas are in the edit mode automatically, if available. Otherwise, you must switch to edit mode manually.

Switching to edit mode

1. Press the [ENTER] key.
2. To quit the edit mode, press the [ESC] key.

Working in dialog boxes

- To edit alphanumeric parameters, use the keypad or the on-screen keyboard. For details see [Chapter 3.4.3.1, "Entering Numeric Parameters"](#), on page 78 and [Chapter 3.4.3.2, "Entering Alphanumeric Parameters"](#), on page 78. If you edit fields, the edit mode is activated automatically when you start typing.
- To move the focus to the next interface element (e.g. field, option, list), press it on the screen, or turn the rotary knob.

- To select or deselect an option, press the option on the screen.
Alternatively:
 - If the focused area consists of more than one option and the edit mode is not active, change into the edit mode.
 - Scroll through the list of options using the arrow keys or the rotary knob (only for vertical direction) until the option you want to activate or deactivate is highlighted.
 - Press the rotary knob or the [ENTER] key to confirm your selection.
The option is activated or deactivated, depending on its previous setting.
 - To leave the edit mode, press the [ESC] key.
- To open a drop-down list, press the arrow next to the list. Alternatively, press the [ENTER] key or the rotary knob. When opened, the list is in edit mode.
- To select an entry without opening a drop-down list, use the arrow keys to browse through the list entries.
- To select a list entry, press the entry on the screen.
Alternatively:
 - If the edit mode is not active, change into the edit mode.
 - Scroll through the list using the arrow keys or the rotary knob until the list entry you want to select is highlighted.
 - Confirm your choice by pressing the rotary knob or the [ENTER] key.
If a drop-down list was opened, it is closed.
- To change from one tab to the next, press the tab on the screen.
- To press a button in a dialog box, press the button on the screen.
Alternatively:
 - Place the focus on the desired button using the rotary knob.
 - Confirm your choice by pressing the rotary knob or the [ENTER] key.
- To close the dialog box and accept the changes, press the "OK" button.
- To close the dialog box without accepting the changes, press the [ESC] key or the "Cancel" button.

Particularities in Windows dialog boxes

In some cases, e.g. if you want to install a printer, original Windows dialog boxes are used. In these dialog boxes, the navigation behavior is different to the one you are used to from R&S ESR applications. In the following, the important differences and useful tips are listed:

- The rotary knob and function keys do not work. Do not use them. Use the touch-screen instead.

3.4.4 Changing the Display

3.4.4.1 Changing the Focus

Any selected function is always performed on the currently focussed element in the display, e.g. a dialog field, diagram, or table row. Which element is focussed is indicated by a blue frame (diagram, window, table) or is otherwise highlighted (softkey, marker etc.). Moving the focus is most easily done by tapping on the element on the touchscreen. Alternatively, use the "Tab" key on the on-screen keyboard or the rotary knob to move the focus from one element to the next on the display.



To move the focus on the screen between any displayed diagrams or tables, press the "Change focus" function key on the front panel. The focus moves from the diagram to the first table to the next table etc. and then back to the diagram.

3.4.4.2 Switching between Split and Maximized Display



In some measurement modes, a table with markers or measurement results is displayed beneath the diagram. In this case, you may wish to maximize the diagram or table display in order to see more details.

Press the [SPLIT/MAXIMIZE] key on the front panel to switch between a split screen and a full screen (maximized display). In maximized display, the table or diagram currently focused is maximized. In split display, both the diagram and any available tables are displayed in one screen.

SCPI command:

```
DISP:WIND:SIZE
```

[DISPlay\[:WINDow<n>\]\[:SUBWindow<m>\]:SIZE](#) on page 981

3.4.4.3 Soft and Mini Soft Front Panel Display


When working with an external monitor or operating via remote control on a computer, it is useful to be able to interact with the R&S ESR without requiring the keypad and keys located on the front panel of the instrument. Therefore, a "Soft Front Panel" display is available, which simulates the entire front panel of the instrument (except for the external connectors) on the screen. You can switch between "normal" screen display and extended display. In the extended display, the keys and other hardware controls of the instrument are simulated on the screen.

If you require a Soft Front Panel but do not want to lose too much space for results in the display area, a mini soft Front Panel is available. The mini version displays only the hardkeys in a separate window in the display area. This window can be closed automatically after pressing a key, or remain open, as desired. Using the Mini Front Panel,

the R&S ESR interface is fully operable from a monitor with a resolution of 1024x768 pixels.

Switching to soft Front Panel display

1. Press the SETUP key.
2. Press the "General Setup" softkey.
3. Press the "More" softkey.
4. Press the "Soft Front Panel" softkey.
Alternatively:
5. Press the [DISPLAY] key.
6. In the "Display Settings" dialog box, select "Front Panel State: On".
The extended display appears on the screen.

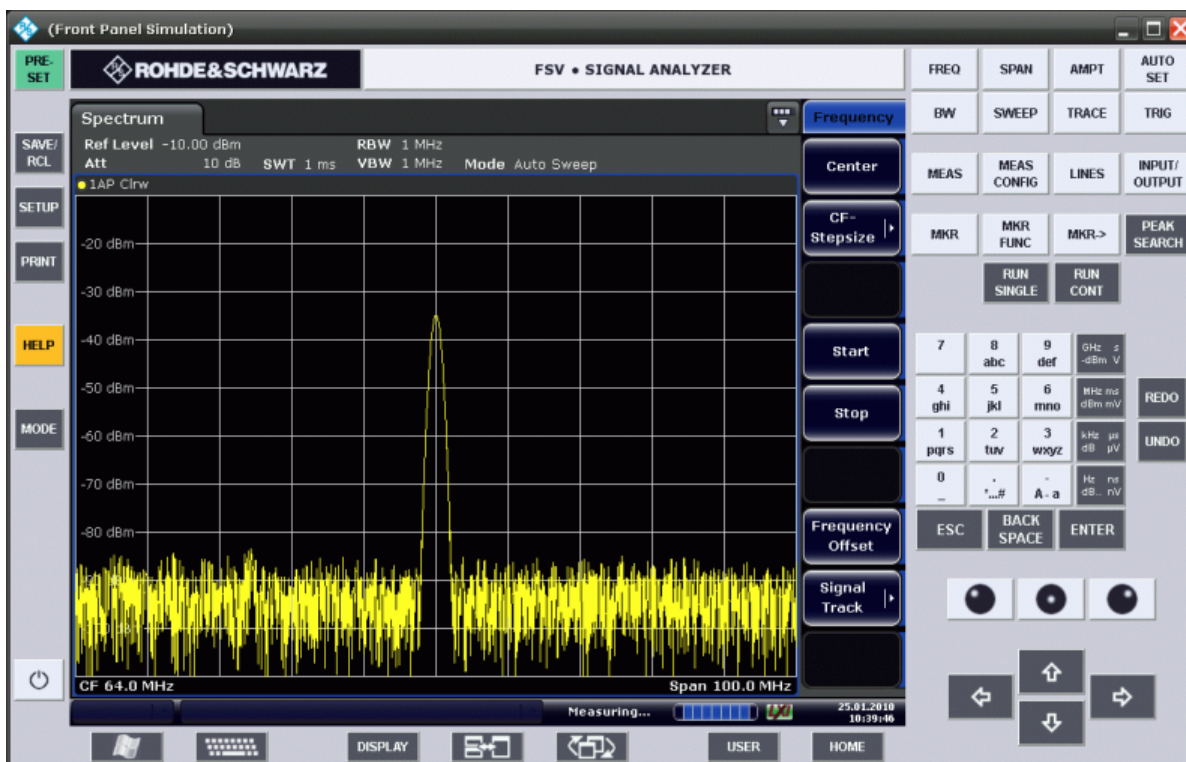




Using the F6 key you can toggle the Front Panel display on and off.

Remote: SYST:DISP:FPAN:STAT ON

Working with the Soft Front Panel

Basic operation with the soft Front Panel is identical to normal operation. To activate a key, either press the key on the touchscreen, or click on it with the mouse pointer. To simulate the use of the rotary knob, use the additional keys displayed between the keypad and the arrow keys:


Icon	Function
	Turn left
	Enter
	Turn right

Switching to Mini Front Panel display

1. Press the [DISPLAY] key.
2. In the "Display Settings" dialog box, select "Mini Front Panel State: On".
The "Mini Front Panel" window appears on the screen. It can be moved anywhere on the screen where it does not interfere with your current task.



Using the key combination [ALT + M] you can toggle the Mini Front Panel display on and off.

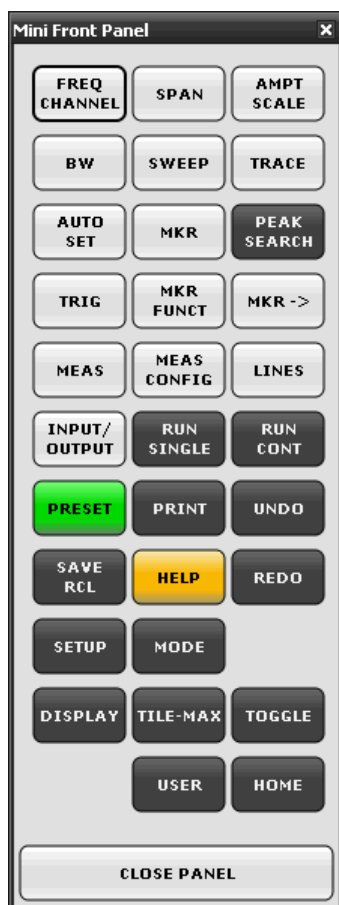


Auto close option

By default, the "Auto close" option is activated and the Mini Front Panel window closes automatically after you select a key. This is useful if you only require the Front Panel display to press a single function key.

If you want the window to remain open, deactivate the "Auto close" option. You can close the window manually by clicking "Close Panel" or the key combination [ALT + M].

3.4.4.4 Enlarging the Display Area

	<p>You can enlarge the screen display area if you are using an external monitor or the Soft and Mini Soft Frontpanel display (see Chapter 3.4.4.3, "Soft and Mini Soft Front Panel Display", on page 83). To do so, drag the lower right corner of the window to the required size. In standard display, a small icon is displayed in the lower right corner of the screen.</p>
---	---

3.4.4.5 Displaying the Toolbar

Standard file functions can be performed via the icons in the toolbar at the top of the screen (see the [Chapter 3.4.2.1, "Toolbar"](#), on page 70). By default, this toolbar is not displayed.

To display the toolbar:

1. Press the DISPLAY key.
2. Under "Select Tool Bar State", select "On".

Alternatively:

1. Press the SETUP key.
2. Press the "Display Setup" softkey.
3. Press the "Tool Bar State On/Off" softkey.

The toolbar is displayed at the top of the screen.

3.4.4.6 Zooming into the Diagram


You can zoom into the diagram to visualize the measurement results in greater detail. Using the touchscreen or a mouse pointer you can easily define the area to be enlarged.


**Zoom and the number of sweep points**

Note that zooming is merely a visual tool, it does not change any measurement settings, such as the number of sweep points!

You should increase the number of sweep points before zooming, as otherwise the function has no real effect (see the "Sweep Points" softkey, described in the Operating Manual and online help).

To zoom into the diagram

1. Display the toolbar as described in [Chapter 3.4.4.5, "Displaying the Toolbar"](#), on page 86.
2.  Click on the "Zoom On" icon in the toolbar.
A dotted rectangle is displayed in the diagram.

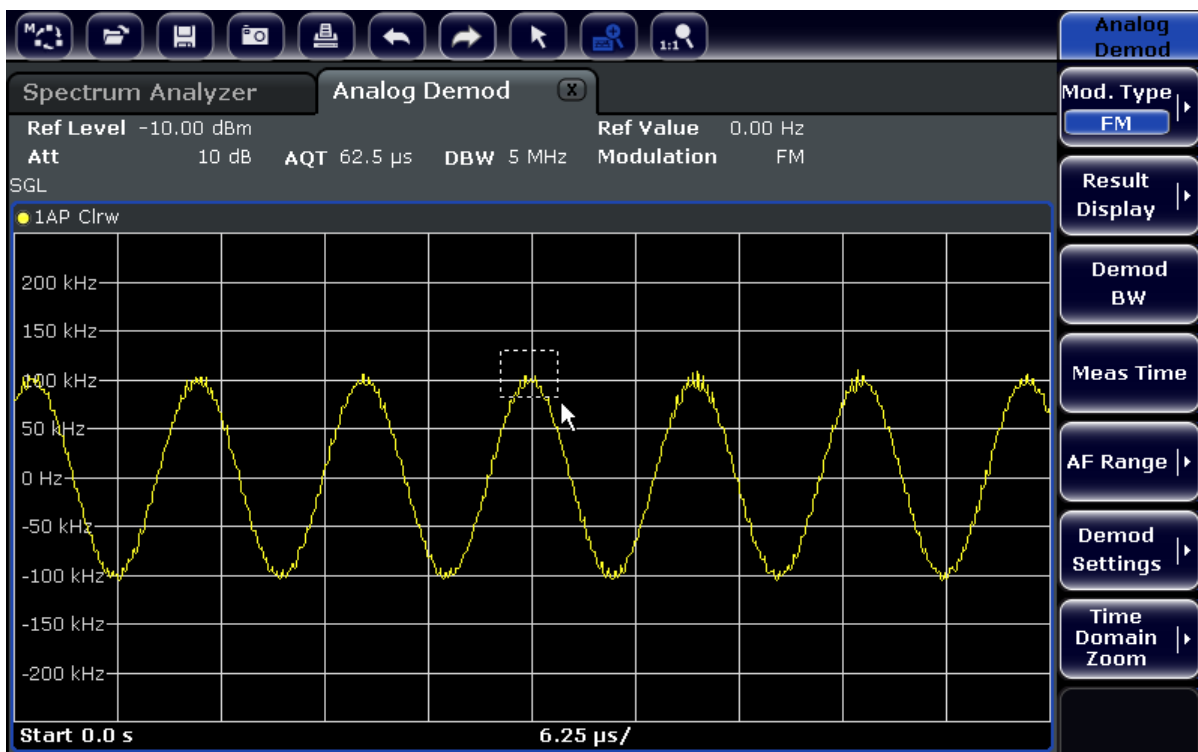

3. Drag the lower right corner of the rectangle (either via touchscreen or a mouse pointer) to define the area in the diagram to be enlarged.
4. Repeat these steps, if necessary, to enlarge the diagram further.



Scrolling in the zoomed display

You can scroll the diagram area to display the entire diagram using the scrollbars at the right and at the bottom of the diagram.



To return to selection mode in the diagram

While you are in zoom mode, touching the screen changes the zoom area. In order to select or move a trace or marker, you must switch back to selection mode:



- ▶ Click on the "Selection mode" icon in the toolbar.

To return to original display



- ▶ Click on the "Zoom Off" icon in the toolbar.
A dotted rectangle is displayed in the diagram.

Remote commands:

1. Activate the zoom mode:
`DISP:ZOOM ON`
2. Define the zoom area:
`DISP:ZOOM:AREA 5,30,20,100`
3. Hide the overview window:
`DISP:ZOOM:OVER OFF`

3.4.4.7 Adding a Title to the Diagram Header

You can add an introductory title to the trace information in the diagram header.

1. Press the SETUP key.
2. Press the "Display Setup" softkey.
3. Press the "Screen Title On/Off" softkey.
An edit dialog box is displayed.
4. Enter the title and press "ENTER".
The title is displayed at the beginning of the diagram header.

3.4.4.8 Removing the Diagram Footer

Some additional diagram-specific information is displayed in the diagram footer (see [Chapter 3.4.1.4, "Diagram-specific and Trace Information"](#), on page 66). This footer can be removed from display if necessary.

1. Press the SETUP key.
2. Press the "Display Setup" softkey.
3. Press the "Annotation On/Off" softkey.

The footer is displayed beneath the diagram or removed from display.

3.4.4.9 Selecting a Theme

You can select a theme for the screen display. The theme defines the colors used for keys and screen elements, for example. The default theme is "BlueOcean".

Selecting a theme

1. Press the SETUP key.
2. Press the "Display Setup" softkey.
3. Press the "More" softkey.
4. Press the "Theme Selection" softkey. A list of available themes is displayed.
5. Select the desired theme from the list.

The screen display changes according to the selected theme.

SCPI command:

```
DISPlay:THEME:SElect
```

3.4.4.10 Displaying and Setting the Date and Time

You can switch the date and time display in the diagram footer on or off. By default, it is displayed. You can also switch between German and US format.

Switching the date and time display off

1. Press the SETUP key.
2. Press the "Display Setup" softkey.
3. Press the "Time+Date" softkey to "Off".

Changing the format

1. Press the SETUP key.
2. Press the "Display Setup" softkey.
3. Press the "Time+Date Format" softkey until the required format is selected.

Setting the date and time

To set the date and time, click on the date and time display in the diagram footer. The standard Windows "Date and Time Properties" dialog is displayed and you can set the correct date and time.

3.4.4.11 Changing the Display Update Rate

When performance is poor due to slow data transfer (for example during remote control), it may be helpful to decrease the frequency with which the screen display is updated.

To decrease the display update rate

1. Press the [DISPLAY] key.
The "Display Settings" dialog box is opened.
2. Under "Display Update Rate", select "Slow".
The display is updated less frequently, and performance for measurements should improve. When data transfer is no longer a problem, you can set the update rate back to "Fast" in the same way.

3.5 Basic Measurement Examples

The following measurement examples are intended as an introduction to operating the R&S ESR. The User Manual contains additional and more advanced examples. Refer to chapter "Advanced Measurement Examples" to find the following topics:

- High-Sensitivity Harmonics Measurements
- Separating Signals by Selecting an Appropriate Resolution Bandwidth
- Intermodulation Measurements
- Measuring Signals in the Vicinity of Noise
- Measuring Noise Power Density
- Measurement of Noise Power within a Transmission Channel
- Measuring Phase Noise
- Measuring Channel Power and Adjacent Channel Power

For a more detailed description of the basic operating steps, e.g. selecting menus and setting parameters, refer to [Chapter 3.4, "Basic Operations"](#), on page 63.

3.5.1 Measuring a Sinusoidal Signal

One of the most common measurement tasks that can be handled by using a signal analyzer is determining the level and frequency of a signal. When measuring an unknown signal, you can usually start with the presettings.

⚠ WARNING**High input values**

If levels higher than +30 dBm (=1 W) are expected or are possible, a power attenuator must be inserted before the RF input of the analyzer. If this is not done, signal levels exceeding 30 dBm can damage the RF attenuator or the input mixer. The total power of all occurring signals must be taken into account.

Test setup

- Connect the RF output of the signal generator to the RF input of R&S ESR.

Table 3-4: Signal generator settings (e.g. R&S SMU)

Frequency	128 MHz
Level	-30 dBm

3.5.1.1 Measuring the Level and Frequency Using Markers

The level and frequency of a sinusoidal signal can be measured easily by using the marker function. The R&S ESR always displays its amplitude and frequency at the marker position. The frequency measurement uncertainty is determined by the frequency reference of the R&S ESR, the resolution of the marker frequency display and the number of sweep points.

1. Reset the instrument by pressing the [PRESET] key.
2. Select "Spectrum" mode.
3. Connect the signal to be measured to the *RF INPUT* analyzer input on the instrument front panel.
4. Set the center frequency to *128 MHz*.
 - a) Press the [FREQ] key.
The dialog box for the center frequency is displayed.
 - b) In the dialog box, enter *128* using the numeric keypad and confirm the entry with the MHz key.
5. Reduce the frequency span to *1 MHz*.
 - a) Press the [SPAN] key.
 - b) In the dialog box, enter *1* using the numeric keypad and confirm the entry by pressing the [MHz] key.

Note: Coupled settings. When the frequency span is defined, the resolution bandwidth, the video bandwidth and the sweep time are automatically adjusted, because these functions are defined as coupled functions in the presets.

6. Measure the level and frequency using the marker by pressing the [MKR] key.
The marker is activated and automatically set on the maximum of the trace.

The level and frequency values measured by the marker are displayed in the marker field at the top edge of the screen. They can be taken as the measurement result.

M1[1]	-30.00 dBm
	128.00000 MHz

The field header indicates the number of the marker (Marker 1) and the trace on which the marker is located ([1] = Trace 1).

Note: Performing a peak search. When a marker is initially activated, it automatically performs the peak search function (as shown in the example).

If a marker was already active, you have to press the [Peak Search] key on the front panel or the "Peak" softkey in the [MKR >] menu in order to set the currently active marker to the maximum of the displayed signal.

Increasing the Frequency Resolution

The frequency resolution of the marker is predefined by the pixel resolution of the trace. A trace uses 691 pixels, i.e. if the frequency span is 1 MHz, each pixel corresponds to a span of approx. 1.4 kHz. This corresponds to a maximum uncertainty of +/- 0.7 kHz.

You can increase the pixel resolution of the trace by reducing the frequency span.

Reducing the frequency span to 10 kHz

1. Press the [SPAN] key.
2. Using the numeric keypad, enter *10* in the dialog box and confirm the entry with the [kHz] key.

The generator signal is measured using a span of 10 kHz. The pixel resolution of the trace is now approx. 14 Hz (10 kHz span / 691 pixels) , i.e. the precision of the marker frequency display increases to approx. ± 7 Hz.

Setting the Reference Level

With signal analyzers, the reference level is the level at the upper limit of the diagram. To achieve the widest dynamic range possible for a spectrum measurement, use the entire level span of the signal analyzer. In other words, the highest level that occurs in the signal should be located at the top edge of the diagram (=reference level) or immediately below it.



Low Reference Levels

If the selected reference level is lower than the highest signal that occurs in the spectrum, the signal path in the R&S ESR is overloaded.

In this case, the message "IFOVL" is displayed in the error message field.

In the presettings, the value of the reference level is -10 dBm. If the input signal is -30 dBm, the reference level can be reduced by 20 dB without causing the signal path to be overloaded.

Reducing the reference level by 20 dB

1. Press the [AMPT] key.
The amplitude menu is displayed. The "Ref Level" softkey is highlighted in red to indicate that it is activated for data entry. The dialog box for the reference level is also opened.
2. Using the numeric keypad, enter 30 and confirm the entry with the [- dBm] key.
The reference level is set to -30 dBm. The maximum of the trace is near the maximum of the measurement diagram. However, the increase in the displayed noise is not substantial. Thus, the distance between the signal maximum and the noise display (=dynamic range) has increased.

Setting the marker level equal to the reference level

The marker can also be used to shift the maximum value of the trace directly to the top edge of the diagram. If the marker is located at the maximum level of the trace (as in this example), the reference level can be moved to the marker level as follows:

1. Press the [MKR] key.
2. Press the "Ref Lvl = Mkr Lvl" softkey.

The reference level is set equal to the measured level where the marker is located.

Thus, setting the reference level is reduced to two keystrokes.

3.5.1.2 Measuring the Signal Frequency Using the Frequency Counter

The built-in frequency counter allows you to measure the frequency more accurately than measuring it with the marker. The frequency sweep is stopped at the marker, and the R&S ESR measures the frequency of the signal at the marker position.

In the following example, the frequency of the generator at 128 MHz is shown by using the marker.

Prerequisite

In this example, a precise frequency measurement is to be performed. Therefore, connect the signal generator's "Ref OUT" connector to the analyzer's "Ref IN" connector.

1. Set the signal analyzer to the default state by pressing the [PRESET] key.
The R&S ESR is set to its default state.
2. Select "Spectrum" mode.
3. Set the center frequency and the span.
 - a) Press the [FREQ] key and enter 128 MHz.
The center frequency of the R&S ESR is set to 128 MHz.

- b) Press the [SPAN] key and enter 1 MHz.
The frequency span of the R&S ESR is set to 1 MHz.
4. In the "Setup" menu, select "Reference Ext".
5. Activate the marker by pressing the [MKR] key.
The marker is activated and set to the signal maximum. The level and the frequency of the marker are displayed in the marker field (diagram header or marker table).
6. Activate the frequency counter by pressing the "Sig Count On/Off" softkey in the "MKR FUNC" menu.
The result of frequency counting is displayed in the selected resolution in the marker field.

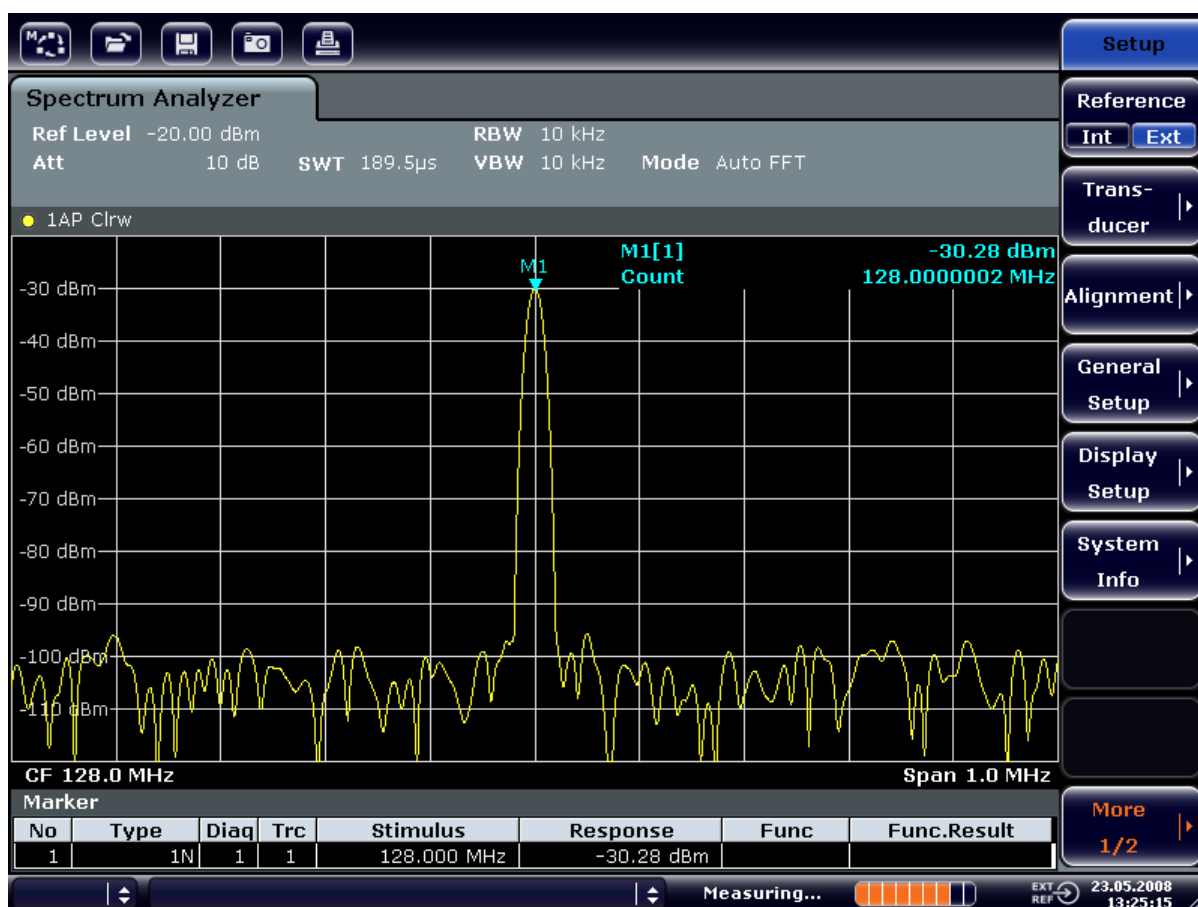


Figure 3-8: Measurement of the frequency with the frequency counter



Prerequisites for using the internal frequency counter

In order to obtain a correct result when measuring the frequency with the internal frequency counter, an RF sinusoidal signal or a spectral line must be available. The marker must be located more than 25 dB above the noise level to ensure that the specified measurement accuracy is adhered to.

3.5.2 Measuring Harmonics of Sinusoidal Signals

Measuring the harmonics of a signal is a very common task that can be performed optimally by using a Signal and Spectrum Analyzer.

In the following example, the generator signal with 128 MHz and -20 dBm is used again.

Measuring the Suppression of the First and Second Harmonic of an Input Signal

1. Set the signal analyzer to the default state by pressing the [PRESET] key.
The R&S ESR is in the default state.
2. Select "Spectrum" mode.
3. Set the start frequency to 100 MHz and the stop frequency to 400 MHz.
 - a) Press the [FREQ] key.
 - b) Press the "Start" softkey and enter *100 MHz*.
 - c) Press the "Stop" softkey and enter *400 MHz*.
The R&S ESR displays the fundamental and the first and second harmonics of the input signal.
4. To average (smooth) the noise, reduce the video bandwidth.
 - a) Press the [BW] key.
 - b) Press the "Video BW Manual" softkey and enter *100 kHz*.
5. Set the attenuation to 0 dB.
 - a) Press the [AMPT] key.
 - b) Press the "RF Atten Manual" softkey.
 - c) Enter *0 dB* in the edit dialog box.
6. Activate the marker by pressing the [MKR] key.
"Marker 1" is activated and positioned to the signal maximum (fundamental at 128 MHz). The level and frequency of the marker is displayed in the marker field.
7. Activate the delta marker and measure the harmonic suppression.
 - a) In the "MKR" menu, press the "Marker 2" softkey.
"Marker 2" is activated as a delta marker ("D2 [1]"). It is automatically set on the largest harmonic of the signal. The frequency offset and level offset from marker 1 are displayed in the channel information bar.

- b) In the "MKR" menu, press the "Marker 3" softkey. "Marker 3" is activated as a delta marker ("D3 [1]"). It is automatically set on the next largest harmonic of the signal. The frequency offset and level offset from marker 1 on the fundamental are displayed in the channel information bar (see Figure 3-9).

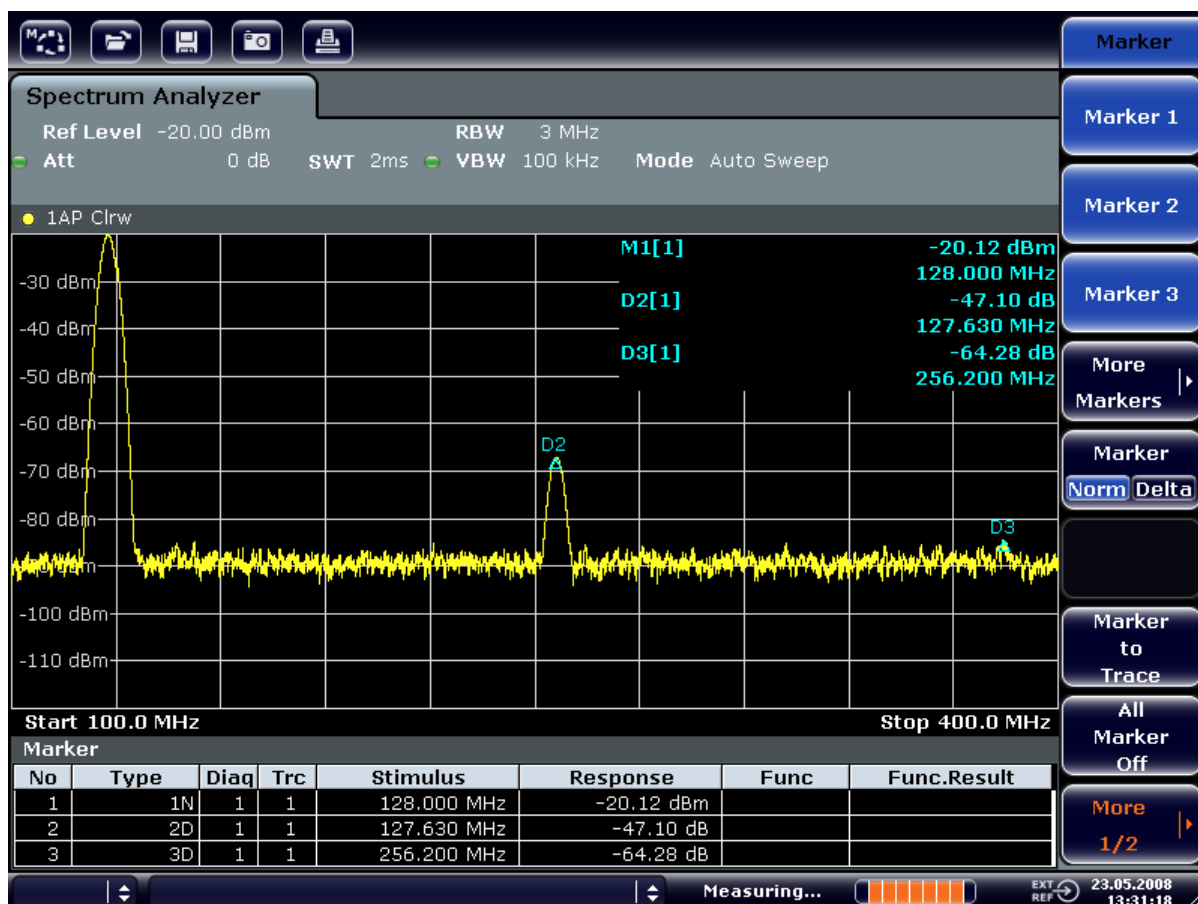


Figure 3-9: Measuring the harmonic suppression of the internal reference generator.

Delta markers D2 [1] and D3 [1] show the offset of the first and second harmonics from the fundamental.

Reducing Noise

The signal analyzer offers three methods to differentiate the harmonics of a signal from the noise effectively:

- Reducing the video bandwidth
- Averaging the trace
- Reducing the resolution bandwidth

Reducing the video bandwidth and averaging the traces cause the noise from the analyzer or the DUT to be reduced, depending on which component is larger. Both averaging methods reduce the measurement uncertainty, particularly in the case of small signal-to-noise ratios, because the measurement signal is also separated from the noise.

Reducing the noise by reducing the video bandwidth

1. Press the [BW] key.
2. Press the "Video BW Manual" softkey.
3. Reduce the video bandwidth to 1 kHz (for example), by entering *1 kHz*.
This smoothes the noise significantly, and the sweep time is increased to 200 ms. In other words, the measurement will take significantly more time. The video bandwidth that is displayed is marked with a bullet to indicate that it is no longer coupled to the resolution bandwidth (see [Figure 3-10](#)).



Figure 3-10: Suppression of noise during harmonics measurement by reducing video bandwidth

4. Recouple the video bandwidth to the resolution bandwidth.
 - a) Press the [BW] key.
 - b) Press the "Video BW Auto" softkey.

Reducing the noise by averaging the trace

1. Press the [TRACE] key.
2. Press the "Trace Wizard" softkey.

3. For "Trace 1", press the button in the "Trace Mode" column and select "Average" from the list.
The noise component of the trace is smoothed by averaging 10 successive traces.
4. Switch off trace averaging by pressing the button in the "Trace Mode" column and selecting "Clear Write" from the list.

Reducing the noise by reducing the measurement bandwidth

The noise is reduced in proportion to the bandwidth by reducing the resolution bandwidth, i.e. reducing the resolution bandwidth by a factor of 10 also reduces the noise by a factor of 10 (which corresponds to 10 dB). The amplitude of sinusoidal signals is not affected by reducing the resolution bandwidth.

1. Set the resolution bandwidth to 10 kHz.
 - a) Press the [BW] key.
 - b) Press the "Res BW Manual" softkey and enter *10 kHz*.
The noise decreases by approx. 25 dB compared to the previous setting. Since the video bandwidth is coupled to the resolution bandwidth, it is reduced to 30 kHz in proportion to the resolution bandwidth. This causes the sweep time to increase to 3.0 seconds.
2. Reset the resolution bandwidth (couple it to the span) by pressing the "Res BW Auto" softkey in the "BW" menu.

3.5.3 Measuring Signal Spectra with Multiple Signals

3.5.3.1 Separating Signals by Selecting the Resolution Bandwidth

A basic feature of a Signal and Spectrum Analyzer is the ability to separate the spectral components of a mixture of signals. The resolution at which the individual components can be separated is determined by the resolution bandwidth. Selecting a resolution bandwidth that is too large may make it impossible to distinguish between spectral components, i.e. they are displayed as a single component.

An RF sinusoidal signal is displayed using the passband characteristic of the defined resolution filter (RBW). Its specified bandwidth is the 3 dB bandwidth of the filter.

Two signals with the same amplitude can be resolved if the resolution bandwidth is smaller than or equal to the frequency spacing of the signal. If the resolution bandwidth is equal to the frequency spacing, the spectrum display shows a level drop of 3 dB precisely in the center of the two signals. Decreasing the resolution bandwidth makes the level drop larger, which thus makes the individual signals clearer.

Higher spectral resolution at a narrower bandwidth is accomplished through longer sweep times at the same span. Reducing the resolution bandwidth by a factor of 3 increases the sweep time by a factor of 9.

Example:

Separating Two Signals

The two signals have a level of -30 dBm each at a frequency spacing of 30 kHz

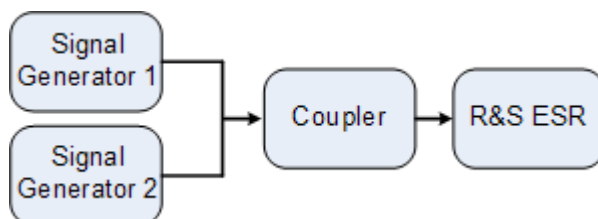


Table 3-5: Signal generator settings (e.g. R&S SMU)

	Level	Frequency
Signal generator 1	-30 dBm	128,00 MHz
Signal generator 2	-30 dBm	128,03 MHz

1. Set the signal analyzer to the default state by pressing the [PRESET] key.
The R&S ESR is set to its default state.
2. Select "Spectrum" mode.
3. Set the center frequency to 128.015 MHz and the frequency span to 300 kHz.
 - a) Press the [FREQ] key and enter 128.015 MHz.
 - b) Press the [SPAN] key and enter 300 kHz.
4. Set the resolution bandwidth to 30 kHz and the video bandwidth to 1 kHz.
 - a) Press the [BW] key
 - b) Press the "Res BW Manual" softkey and enter 30 kHz.
 - c) Press the "Video BW Manual" softkey and enter 1 kHz.

Note: Larger video bandwidths. The video bandwidth is set to 1 kHz in order to make the level drop in the center of the two signals clearly visible. At larger video bandwidths, the video voltage that results from envelope detection is not sufficiently suppressed. This produces additional voltages, which are visible in the trace, in the transition area between the two signals.

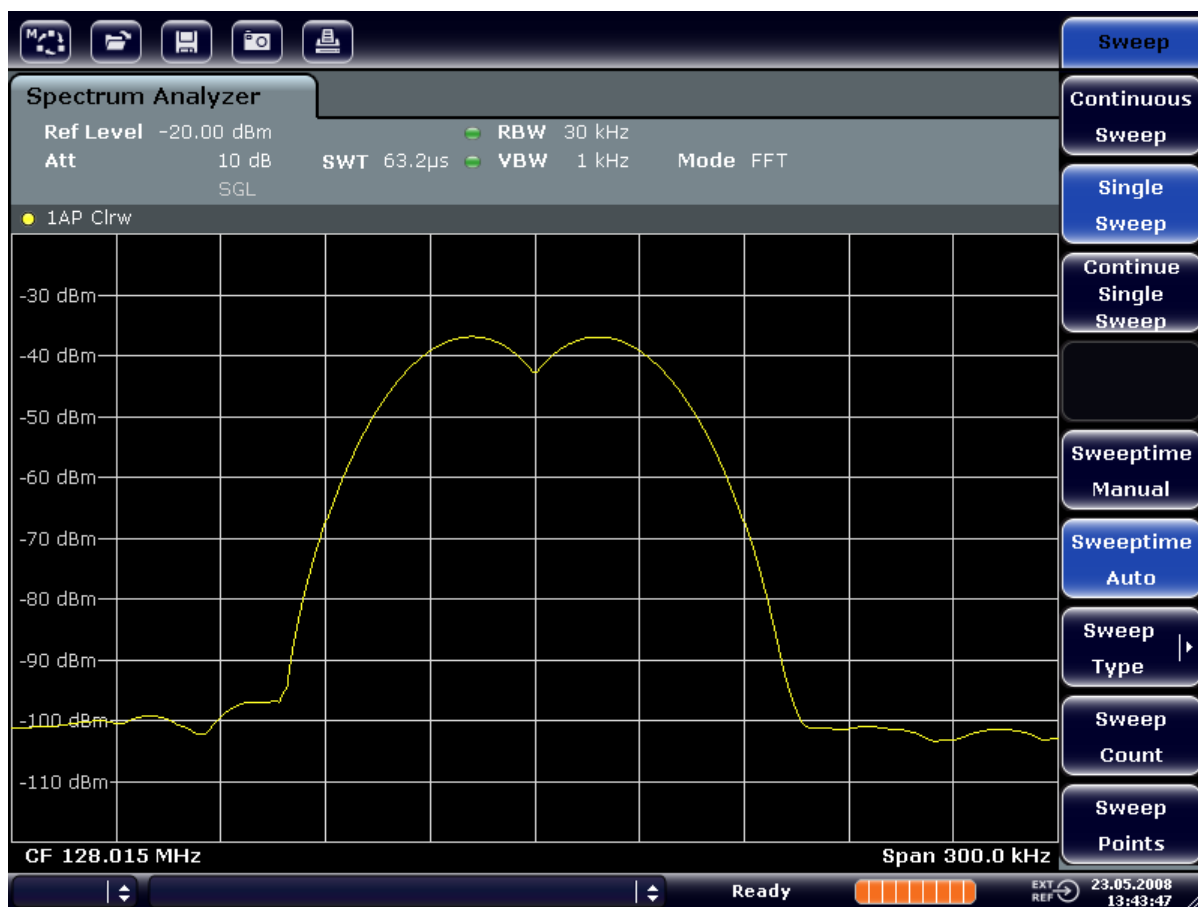


Figure 3-11: Measurement of two equally-leveled RF sinusoidal signals with the resolution bandwidth which corresponds to the frequency spacing of the signals

Matching generator and R&S ESR frequencies

The level drop is located exactly in the center of the screen only if the generator frequencies match the frequency display of the R&S ESR exactly. To achieve exact matching, the frequencies of the generators and the R&S ESR must be synchronized.

5. Set the resolution bandwidth to 100 kHz. To do so, in the bandwidth menu, press the "Res BW Manual" softkey and enter 100 kHz.

It is no longer possible to clearly distinguish the two generator signals.



Figure 3-12: Measurement of two equally-leveled RF sinusoidal signals with a resolution bandwidth which is larger than their frequency spacing

Note: Reducing the resolution bandwidth. The resolution bandwidth (RBW) can be reduced again by turning the rotary knob counterclockwise, thus yielding a higher frequency resolution.

6. Set the resolution bandwidth to 1 kHz. To do so, in the bandwidth menu, press the "Res BW Manual" softkey and enter 1 kHz.
The two generator signals are shown with high resolution. However, the sweep time becomes longer. At smaller bandwidths, the noise display decreases simultaneously (10 dB decrease in noise floor for a decrease in bandwidth by a factor of 10).

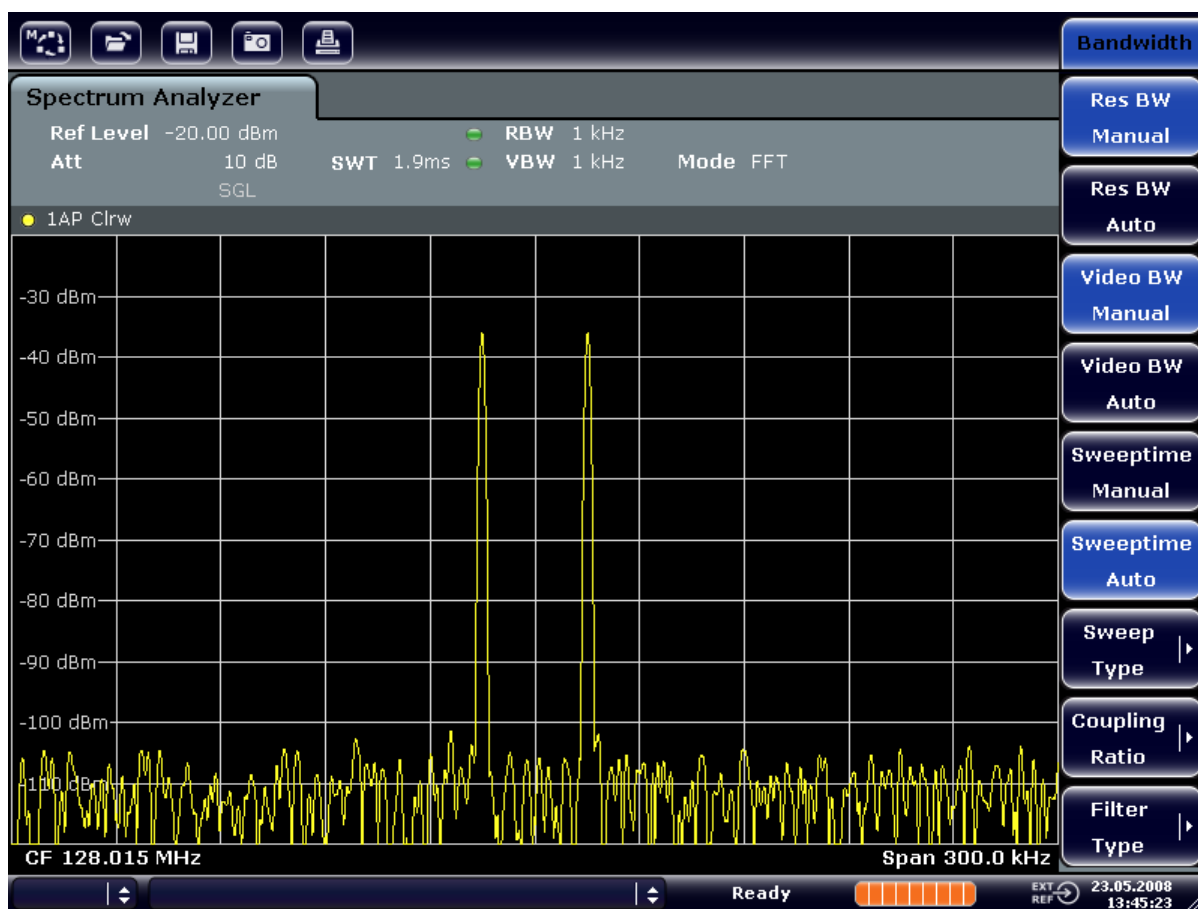


Figure 3-13: Measurement of two equally-leveled RF sinusoidal signals with a resolution bandwidth (1 kHz) which is significantly smaller than their frequency spacing

3.5.3.2 Measuring the Modulation Depth of an AM-Modulated Carrier (Span > 0)

In the frequency range display, the AM side bands can be resolved with a narrow bandwidth and measured separately. The modulation depth of a carrier modulated with a sinusoidal signal can then be measured. Since the dynamic range of a signal analyzer is very large, extremely small modulation depths can also be measured precisely. For this purpose, the R&S ESR provides measurement routines that output the modulation depth numerically in % directly.

Test setup

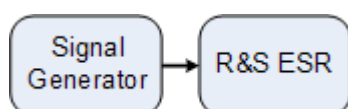 


Table 3-6: Signal generator settings (e.g. R&S SMU)

Frequency	128 MHz
Level	-30 dBm
Modulation	50 % AM, 10 kHz AF

1. Set the signal analyzer to the default state by pressing the [PRESET] key.
The R&S ESR is set to its default state.
2. Select "Spectrum" mode.
3. Set the center frequency to 128 MHz and span to 50 kHz.
 - a) Press the [FREQ] key and enter *128 MHz*.
 - b) Press the [SPAN] key and enter *50 kHz*.
4. Activate the marker function for measuring the AM modulation depth.
 - a) Press the [MEAS] key.
 - b) Press the "More" key.
 - c) Press the "AM Mod Depth" softkey.
The R&S ESR automatically sets a marker to the carrier signal in the center of the diagram and one delta marker each to the upper and lower AM sidebands. The R&S ESR calculates the AM modulation depth from the level differences of the delta markers to the main marker and outputs the numeric value in the marker field.

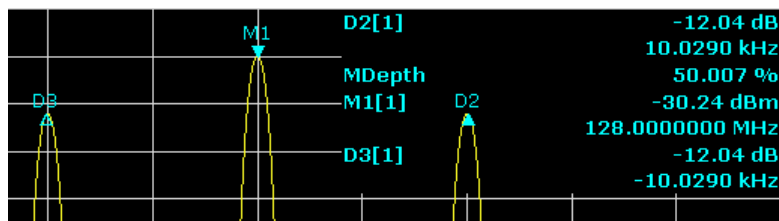


Figure 3-14: Measurement of the AM modulation depth

The modulation depth is displayed as "MDepth". The frequency of the AF signal can be obtained from the frequency display of the delta marker.

3.5.3.3 Measuring AM-Modulated Signals

The signal analyzer rectifies the RF input signal and displays it as a magnitude spectrum. The rectification also demodulates AM-modulated signals. The AF voltage can be displayed in zero span if the modulation sidebands fall within the resolution bandwidth.

Displaying the AF of an AM-modulated signal (Zero Span)

Test setup

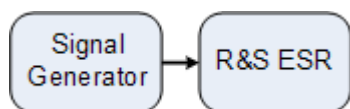 


Table 3-7: Signal generator settings (e.g. R&S SMU)

Frequency	128 MHz
Level	-30 dBm
Modulation	50 % AM, 1 kHz AF

1. Set the signal analyzer to the default state by pressing the [PRESET] key.
The R&S ESR is set to its default state.
2. Select "Spectrum" mode.
3. Set the center frequency to 128 MHz and the span to 0 Hz.
 - a) Press the [FREQ] key and enter *128 MHz*.
 - b) Press the [SPAN] key and enter *0 Hz* or press the "Zero Span" softkey.
4. Set the sweep time to 2.5 ms.
 - a) Press the [SWEEP] key.
 - b) Press the "Sweeptime Manual" softkey.
 - c) Enter *2.5 ms*.
5. Set the reference level to +6 dBm and the display range to linear.
 - a) Press the [AMPT] key and enter *6 dBm*.
 - b) Press the "Range" softkey.
 - c) Press the "Range Linear %" softkey.
6. Set triggering in response to the AF signal by using the video trigger to produce a static image.
 - a) Press the [TRIG] key.
 - b) Press the "Trg/Gate Source" softkey and select "Video" using the arrow keys.
 - c) Press the "Trg/Gate Level" softkey and enter *50%*.
The trigger level is displayed as a horizontal line across the entire measurement diagram. The R&S ESR displays the 1 kHz AF signal as a static image in zero span. Use a headset to listen to the AF.
7. Activate the internal AM demodulator.
 - a) Press the [MKR FUNC] key.
 - b) Press the "Marker Demod" softkey.
The R&S ESR automatically switches on the AM audio demodulator. A 1 kHz tone can be heard over headset. If necessary, use the volume control knob for AF OUTPUT on the front panel to turn up the volume.

3.5.4 Measurements in Zero Span

For radio transmission systems that use the TDMA method (e.g. GSM or IS136), transmission quality is determined not only by spectral characteristics but also by characteristics in zero span. A timeslot is assigned to each user since several users share the same frequency. Smooth operation is ensured only if all users adhere exactly to their assigned timeslots.

Both the power during the send phase as well as the timing and duration of the TDMA burst, and rise and fall times of the burst, are important.

3.5.4.1 Measuring the Power Characteristic of Burst Signals

To measure power in zero span, the R&S ESR offers easy-to-use functions that measure the power over a predefined time.

Measuring the Power of a GSM Burst During the Activation Phase

Test setup



Table 3-8: Signal generator settings (e.g. R&S SMU)

Frequency	890 MHz
Level	0 dBm
Modulation	GSM, one timeslot activated

1. Set the signal analyzer to the default state by pressing the [PRESET] key. The R&S ESR is set to its default state.
2. Select "Spectrum" mode.
3. Set the center frequency to 890 MHz, the span to 0 Hz and the resolution bandwidth to 1 MHz.
 - a) Press the [FREQ] key and enter *890 MHz*.
 - b) Press the [SPAN] key and enter *0 Hz*, or press the "Zero Span" softkey.
4. Set the reference level of the R&S ESR to 10 dBm (= level of the signal generator +10 dB) and set the attenuation to 20 dB.
 - a) Press the [AMPT] key.
 - b) Enter *10 dBm*.
 - c) Press the "Rf Atten Manual" softkey.
 - d) Enter *20 dB*.
5. Set the sweep time to 1 ms.
 - a) Press the [SWEEP] key.

- b) Press the "Sweeptime Manual" softkey and enter *1 ms*.
The R&S ESR shows the GSM burst continuously across the display.
6. By using the video trigger, set triggering on the rising edge of the burst.
 - a) Press the [TRIG] key.
 - b) Press the "Trg/Gate Source" softkey and select "Video" using the arrow keys.
 - c) Press the "Trg/Gate Level" softkey and enter *70%*.
The R&S ESR shows a static image with the GSM burst at the start of the trace. The trigger level is displayed as a horizontal line labeled with the absolute level for the trigger threshold in the measurement diagram.
7. Configure power measurement in zero span.
 - a) Press the [MEAS] key.
 - b) Press the "Time Domain Power" softkey to open the submenu.
 - c) Switch the "Limits" softkey to "On."
 - d) Press the "Left Limit" softkey.
 - e) By turning the rotary knob clockwise, move the vertical line to the start of the burst.
 - f) Press the "Right Limit" softkey.
 - g) By turning the rotary knob counterclockwise, set the second vertical line to the end of the burst.

The R&S ESR displays the average (mean) power during the activation phase of the burst.

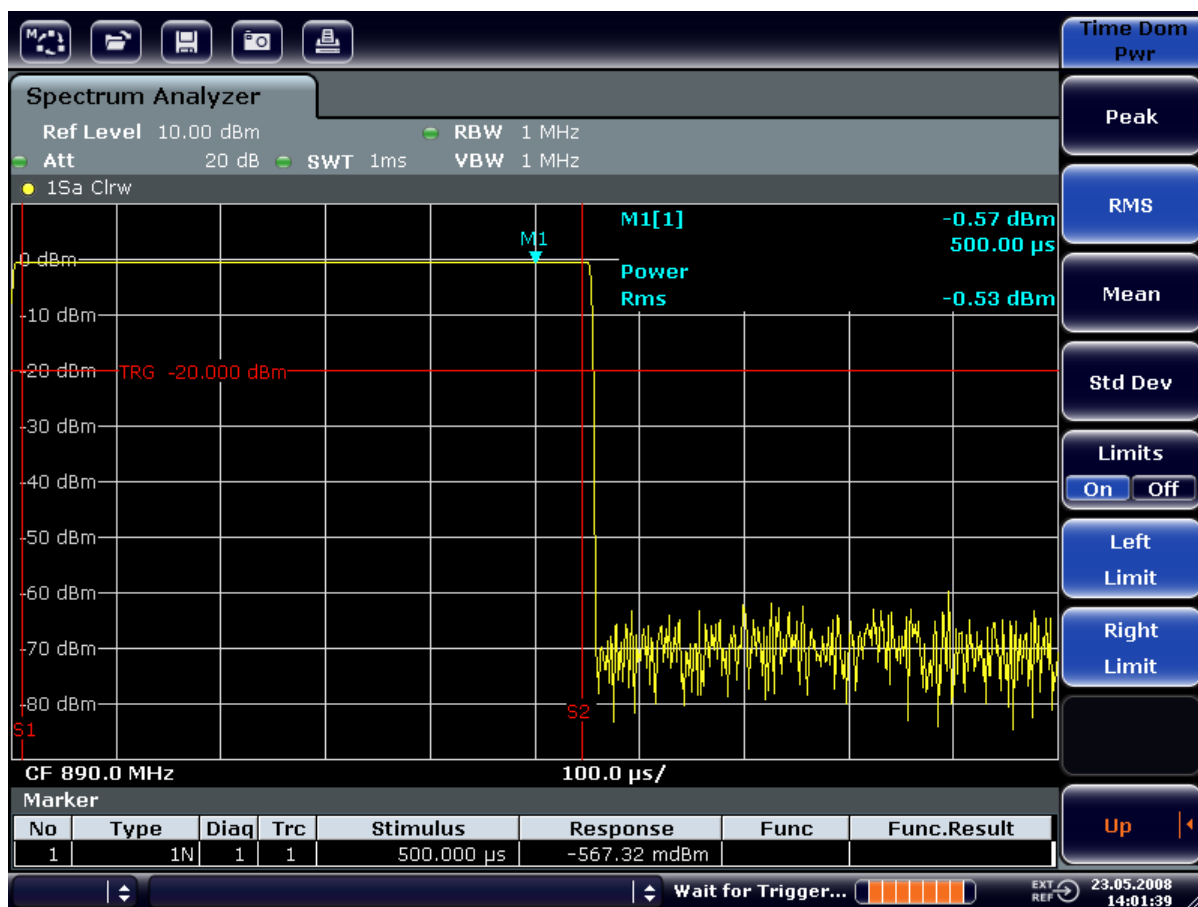


Figure 3-15: Measurement of the average power during the burst of a GSM signal

Measuring the Edges of a GSM Burst with High Time Resolution

Because of the high time resolution of the R&S ESR at the 0 Hz display range, the edges of TDMA bursts can be measured precisely. The edges can be shifted to the screen area by using the trigger offset.

Test setup



Table 3-9: Signal generator settings (e.g. R&S SMU)

Frequency	890 MHz
Level	0 dBm
Modulation	GSM, one timeslot activated

The measurement is based on the setting in the example above for measuring the power of the GSM during the activation phase.

1. Switch off the power measurement.

- a) Press the [MEAS] key.
 - b) Press the "All Functions Off" softkey.
2. Increase the time resolution to 100 μ s.
 - a) Press the [SWEEP] key.
 - b) Press the "Sweeptime Manual" softkey and enter 100 μ s.
 3. Using the trigger softkey, shift the rising edge of the GSM burst to the center of the screen.
 - a) Press the [TRIG] key.
 - b) Press the "Trigger Offset" softkey.
 - c) By turning the rotary knob counterclockwise, move the trigger offset until the burst edge can be seen in the center of the screen, or enter -50 μ s.
The R&S ESR displays the rising edge of the GSM burst.

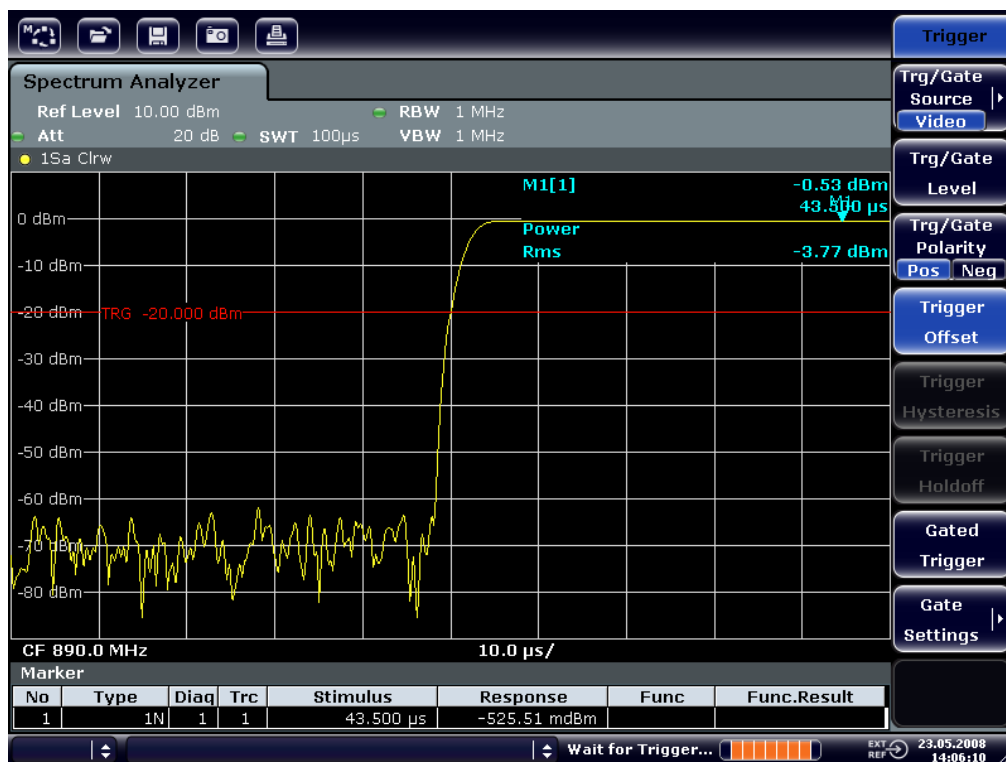


Figure 3-16: Rising edge of the GSM burst displayed with high time resolution

4. Using the trigger offset, move the falling edge of the burst to the center of the screen. To do so, switch the "Trg/Gate Polarity" softkey to "Neg".
The R&S ESR displays the falling edge of the GSM burst.



Figure 3-17: Falling edge of the GSM burst displayed with high time resolution

3.5.4.2 Measuring the Signal-to-Noise Ratio of Burst Signals

When TDMA transmission methods are used, the signal-to-noise ratio or the deactivation dynamic range can be measured by comparing the power values during the activation phase and the deactivation phase of the transmission burst. For this purpose, the R&S ESR provides the function for measuring absolute and relative power in zero span. In the following example, the measurement is performed using a GSM burst.

Signal-to-Noise Ratio of a GSM Signal

Test setup

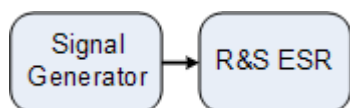 


Table 3-10: Signal generator settings (e.g. R&S SMU)

Frequency	890 MHz
Level	0 dBm
Modulation	GSM, one time slot is switched on

1. Set the signal analyzer to the default state by pressing the [PRESET] key.
The R&S ESR is set to its default state.
2. Select "Spectrum" mode.
3. Set the center frequency to 890 MHz, the span to 0 Hz and the resolution bandwidth to 1 MHz.
 - a) Press the [FREQ] key and enter *890 MHz*.
 - b) Press the [SPAN] key and enter 0 Hz or press the "Zero Span" softkey.
 - c) Press the [BW] key.
 - d) Press the "Res BW Manual" softkey and enter *1 MHz*.
4. Set the reference level of the R&S ESR to 0 dBm (= level of the signal generator) by pressing the [AMPT] key and entering *0 dBm*.
5. Set the sweep time to 2 ms.
 - a) Press the [SWEEP] key.
 - b) Press the "Sweeptime Manual" softkey and enter *2 ms*.
The R&S ESR shows the GSM burst continuously across the display.
6. Use the trigger source "Video" and the trigger polarity "Pos" to trigger on the rising edge of the burst and shift the start of burst to the center of the screen.
 - a) Press the [TRIG] key.
 - b) Press the "Trg/Gate Source" softkey and select "Video" using the arrow keys.
 - c) Press the "Trg/Gate Level" softkey and enter *70%*.
The R&S ESR shows a static image with the GSM burst at the start of the trace.
 - d) Press the "Trigger Offset" softkey and enter *-1 ms*.
The R&S ESR shows the GSM burst in the right half of the measurement diagram.
7. Configure the power measurement in zero span.
 - a) Press the [MEAS] key.
 - b) Press the "Time Domain Power" softkey to open the submenu.
 - c) Switch the "Limits" softkey to "On."
 - d) Press the "Left Limit" softkey.
 - e) Using the rotary knob, move the vertical line to the start of the burst.
 - f) Press the "Right Limit" softkey.

- g) Using the rotary knob, move the second vertical line to the end of the burst.
The R&S ESR displays the power during the activation phase of the burst.

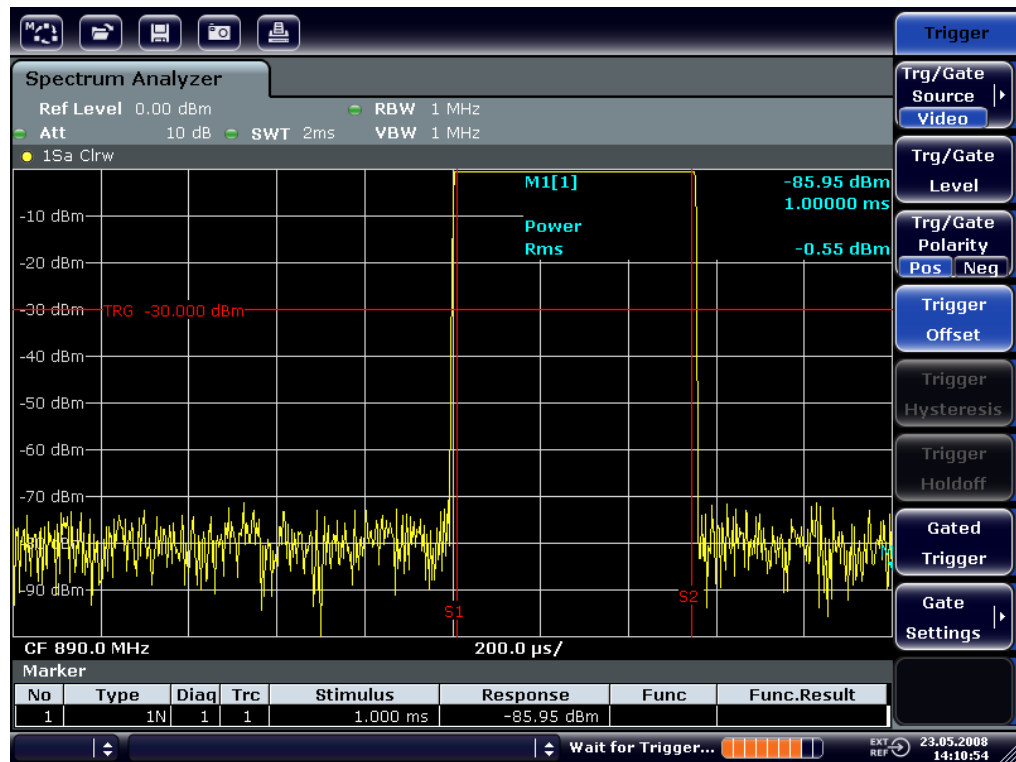


Figure 3-18: Power measurement during the activation phase of the burst

8. Measure the power during the deactivation phase of the burst.
a) Press the [TRIG] key.

- b) Switch the "Trg/Gate Polarity" softkey to "Neg."
 The R&S ESR initiates triggering in response to the falling edge of the burst. This shifts the burst to the left-hand half of the measurement diagram. The power is measured in the deactivation phase. The start of the burst is shifted to the center of the screen and the power during the deactivation phase is measured.

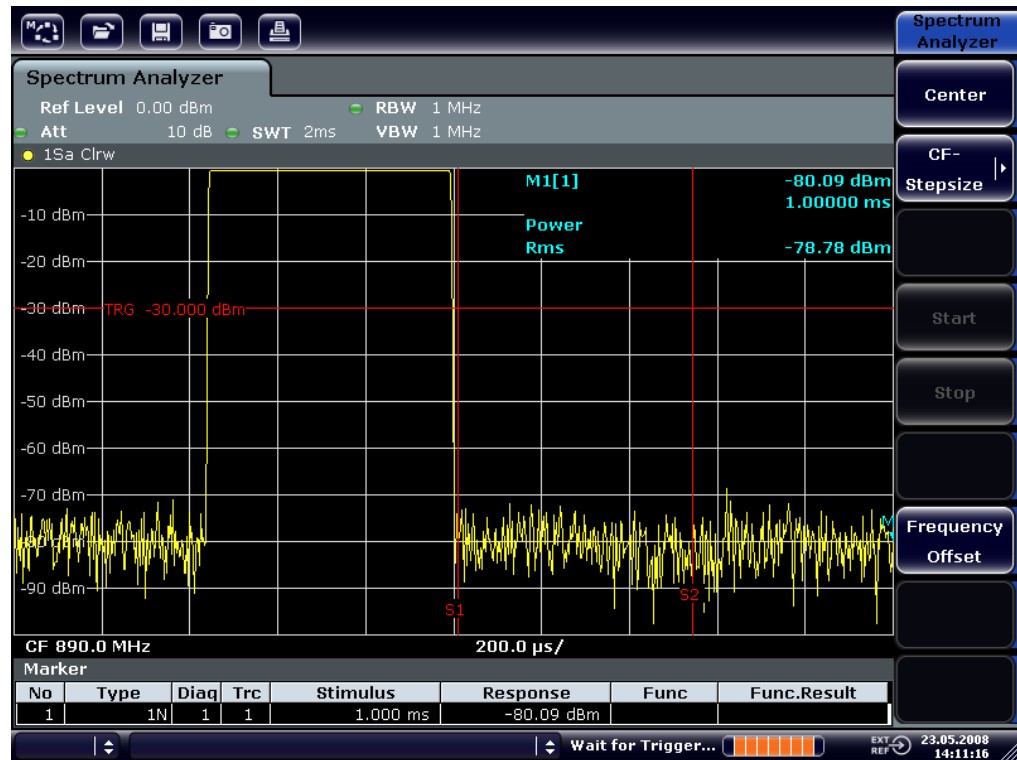


Figure 3-19: Measurement of the signal-to-noise ratio of a GSM burst signal in zero span.

3.5.4.3 Measuring FM-Modulated Signals

Since signal analyzers can display only the magnitude of the measurement signal by using the envelope detector, the modulation of FM-modulated signals cannot be measured directly as in the case of AM-modulated signals. The voltage at the output of the envelope detector remains constant for FM-modulated signals as long as the frequency deviation of the signal is located within the flat part of the passband characteristic of the employed resolution filter. Amplitude variation occurs only if the instantaneous frequency extends into a falling edge of the filter curve. This behavior can be used to demodulate FM-modulated signals. The center frequency of the analyzer is set in such a manner that the nominal frequency of the measurement signal is located on a filter edge (below or above the center frequency). The resolution bandwidth and the frequency offset must be selected in such a manner that the instantaneous frequency is located in the linear part of the filter edge. As a result, the frequency variation of the FM-modulated signal is transformed into an amplitude variation that can be displayed on screen in zero span.

Displaying the AF of an FM-Modulated Carrier

Test setup

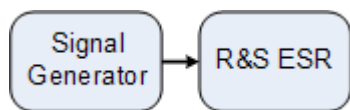 


Table 3-11: Signal generator settings (e.g. R&S SMU)

Frequency	128 MHz
Level	-20 dBm
Modulation	FM 0 kHz deviation (i.e. FM modulation is deactivated), 1 kHz AF

1. Set the signal analyzer to the default state by pressing the [PRESET] key. The R&S ESR is set to its default state.
2. Select "Spectrum" mode.
3. Set the center frequency to 127.50 MHz and the span to 300 kHz.
 - a) Press the [FREQ] key and enter *127.50 MHz*.
 - b) Press the [SPAN] key and enter *300 kHz*.
4. Set the resolution bandwidth to 300 kHz.
 - a) Press the [BW] key.
 - b) Press the "Res BW Manual" softkey and enter *300 kHz*.
 - c) Press the "Video BW Manual" softkey and enter *30 kHz*.
5. Set the display range to 20 dB and shift the filter trace to the center of the screen.
 - a) Press the [AMPT] key.
 - b) Press the "Range" softkey
 - c) Press the "Range Log Manual" softkey and enter *20 dB*.
 - d) Press the "Up ↑" softkey.
 - e) Press the "More" softkey.
 - f) Switch the "Grid" softkey to "Rel".
 - g) Press the "Up ↑" softkey.
 - h) Press the "Ref Level" softkey.

- i) Using the rotary knob, set the reference level such that the filter edge at the center frequency intersects the -10 dB level line.
The filter edge of the 300 kHz filter is displayed. This corresponds to the demodulator characteristic for FM signals with a steepness of approx. 18 dB/140 kHz. This can be verified using the marker and delta marker.

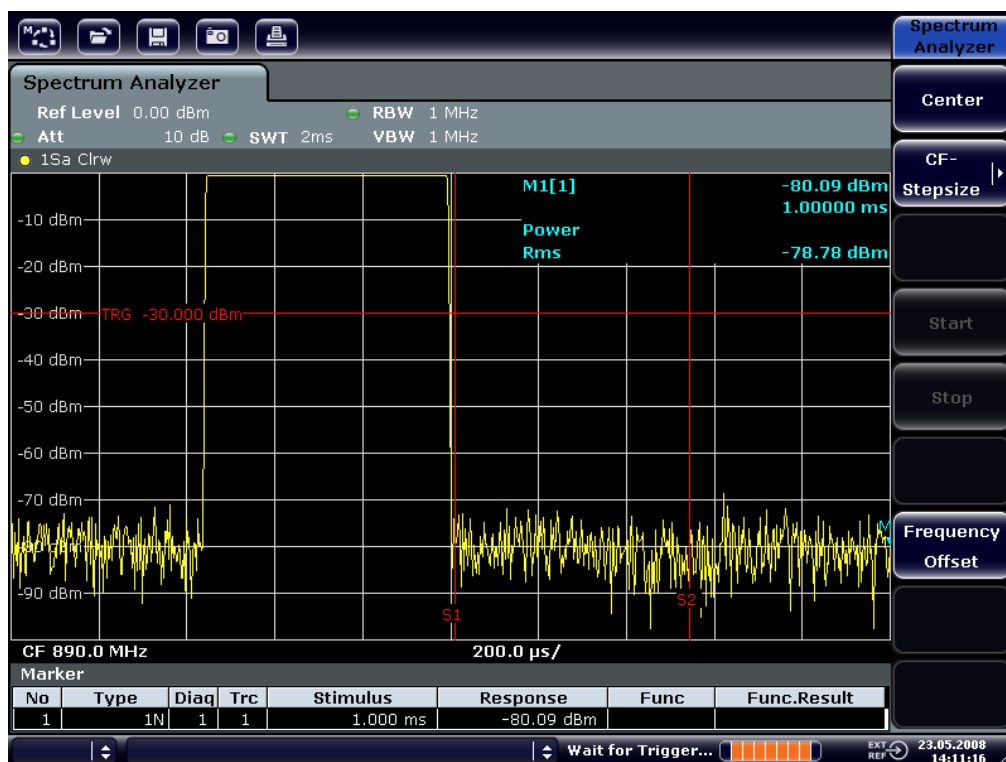


Figure 3-20: Display of the filter edge of the 300 kHz filter as an FM discriminator characteristic

6. Set the FM deviation to 50 kHz on the signal generator.
7. Set the span to 0 Hz on the R&S ESR.
 - a) Press the [SPAN] key.
 - b) Press the "Zero Span" softkey.
The demodulated FM signal is displayed. The signal crosses the screen continuously.
8. Establish a stable display using video triggering.
 - a) Press the [TRIG] key.
 - b) Press the "Trg/Gate Source" softkey and select "Video" using the arrow keys.

- c) Press the "Trg/Gate Level" softkey and enter 50%.
 A static image for the FM AF signal is produced.
 Result: (-10 (5) dB; this yields a deviation of 100 kHz when the steepness of the demodulator characteristic is 5 dB/100 kHz.

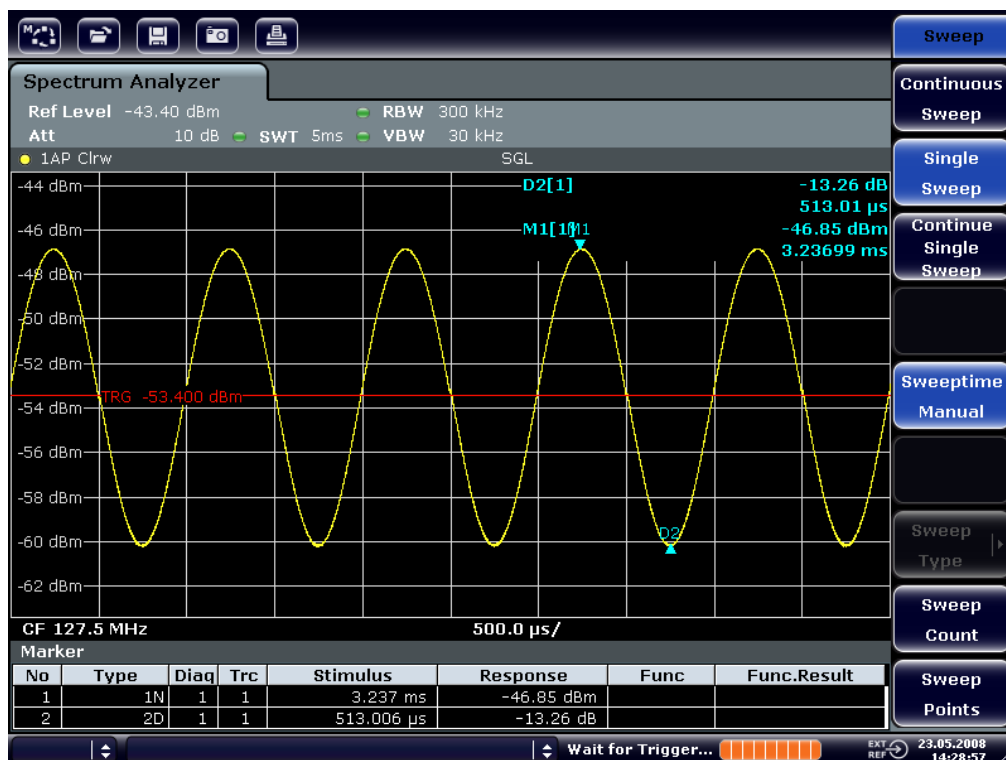


Figure 3-21: Demodulated FM signal

9. Determine the deviation.
- Press the [MKR] key.
 Marker 1 is activated and placed on the peak of the curve.
 - Press the "Marker 2" softkey.
 - Press the [MKR] key.
 - Press the "More" softkey.
 - Press the "Min" softkey.
 Marker 2 (delta marker) is placed on the minimum of the curve. The level difference is 13.3 dB, which corresponds to the peak-to-peak deviation. With the filter slope of 18 dB/140 kHz, the deviation can be calculated as follows:

$$\text{deviation} = \frac{1}{2} \times \frac{13.3 \times 140}{18} \text{ kHz} = \frac{1}{2} 103 \text{ kHz} = 51.7 \text{ kHz}$$

3.5.5 Storing and Loading Instrument Settings


The R&S ESR can store complete instrument settings together with instrument configurations and measurement data in a settings file. The data is stored on the built-in hard

disk or - if selected - on a USB device (e.g. memory stick) or on a network drive. The hard disk has the drive letter C:.

In the default state, the current settings are stored. This includes the settings of the measurement functions, the activated limit lines and the active transducer factor.

3.5.5.1 Storing an Instrument Configuration (without Traces)

1. Press the [SAVE/RCL] key.
2. Press the "Save" softkey.
The dialog box for instrument configurations is displayed. The File Name field is in edit mode and contains a suggestion for a new name.

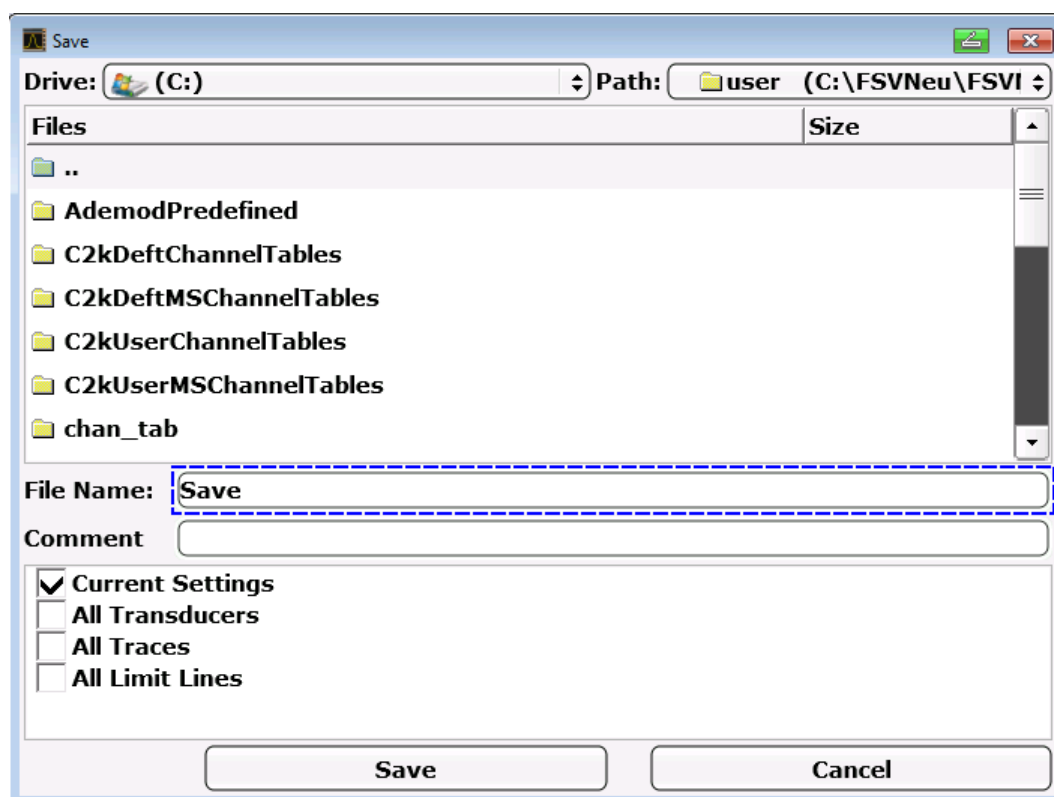

3. To change the suggested name, enter a name for the settings file to be stored. The name may contain letters and digits. For details on alphanumeric entries see [Chapter 3.4.3.2, "Entering Alphanumeric Parameters"](#), on page 78.
4. To store the file in a directory different to the default directory, select the required path in the Files area. If the path is not changed, the default path for the instrument configurations (C:\R_S\Instr\user) is used.

Note: The selected directory is automatically used for any further save and recall operations.

5. Press the "Save File" softkey.
The settings file is stored and the dialog box is closed.

3.5.5.2 Storing Traces

Before you can store traces, you must first select the corresponding item entry. To do so, proceed as follows:

1. Press the [SAVE/RCL] key.
2. Press the "Save" softkey.
3. To change the suggested name, enter a file name.
4. Select the "All Traces" option.
5. Press the "SAVE" button.

3.5.5.3 Loading an Instrument Configuration (with Traces)

1. Press the [SAVE/RCL] key.
2. Press the "Recall" softkey.
3. If necessary, select the path under which the file to be loaded is stored.
4. Define the settings file to be loaded. One of the following ways is possible:
 - Click in the `File Name` field and enter the file name via the keyboard or keypad.
 - Select the file from the selection list using the touchscreen or mouse.

Alternatively:

- a) Press the "Select File" softkey.
The focus is set on the files list.
 - b) Using the rotary knob or arrow keys, focus the settings file to be loaded and confirm by pressing the rotary knob or the [ENTER] key.
5. To load traces, select the "All Traces" option.
Note: The "All Traces" option is only available if the selected file contains traces.
 6. Press the "Recall" button in the dialog box, or the "Recall File" softkey.
The settings file is loaded. During loading, the R&S ESR detects which items the selected settings file contains and, if applicable, ignores any items that were selected but are not available.

3.5.5.4 Configuring Automatic Loading

If the R&S ESR is switched on in the factory default state, it loads the instrument settings that it had when switched off (provided that it was switched off using the [ON /

OFF] key on the front panel; see [Chapter 3.2.1.7, "Switching the Instrument On and Off"](#), on page 44. If the instrument is preset, it loads the presets.

You can alter these settings and define a settings file to be loaded. This requires performing the following procedure. Be aware that the chosen settings file is loaded both while booting and presetting.

1. Press the [SAVE/RCL] key.
2. Press the "Startup Recall" softkey.
3. Press the "Startup Recall (On/Off)" softkey to activate the recall function.
4. Press the "Select Dataset" softkey.
The "Startup Recall" dialog box is displayed.
5. If necessary, select the path under which the file to be loaded is stored.
6. Select the settings file to be loaded (DFL file).
7. Press the "Select" button in the dialog box.

3.6 Brief Introduction to Remote Control

The instrument can be remote-controlled via the network (LAN interface). For details on configuring the LAN interface see [Chapter 11.2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 623.

For details on setting the interface see [Chapter 3.2.6, "Configuring the GPIB Interface"](#), on page 59.

The following programming examples are structured hierarchically, i.e. the later examples are based on the preceding ones. This allows you to easily assemble a well-functioning program by using the modules of the program examples. More complex examples are provided in the User Manual, chapter "Remote Control - Programming Examples"

3.6.1 Basic Steps in Remote Control Programming

The following examples explain how to program the instrument and can be used as a basis for solving enhanced programming tasks.

Visual Basic was used as the programming language. However, the programs can be implemented in other languages as well.



Using backslashes

In programming languages such as C, C++ or programs such as MATLAB or NI Interactive Control, a backslash starts an escape sequence (e.g. "\n" is used to start a new line). In these programming languages and programs, two backslashes instead of one must be used in remote commands, e.g. in ["Storing Instrument Settings"](#) on page 136

instead of `M MEM:STOR:STAT 1, 'C:\USER\DATA\TEST1'`

use `M MEM:STOR:STAT 1, 'C:\\USER\\DATA\\TEST1'`

3.6.1.1 Linking the Remote Control Library for Visual Basic

Programming notes:


- **Outputting text using the print function**

Using the print method, this example displays the value of the variable `MyVar` in the "Immediate" window of the Visual Basic development environment. Note that the print method only applies to objects that can display text.


```
Debug.Print MyVar
```

- **Accessing the functions of the VISA32.DLL**

To enable users to create Visual Basic control applications, the `VISA32.BAS` file must be added to a project so that functions of the `VISA32.DLL` can be called. In addition, the `VPPTYPE.BAS` file must be added to the project. This file contains constants and definitions for error handling, timeout values, etc.

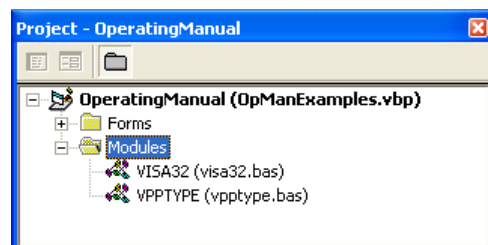

The modules `visa32.bas` and `vpptype.bas` can be found under `<VXIpnPath>\WinNT\include` (typically `C:\VXIpn\WinNt\include`). As an alternative, a reference to the `VISA32.DLL` can be added to the project.

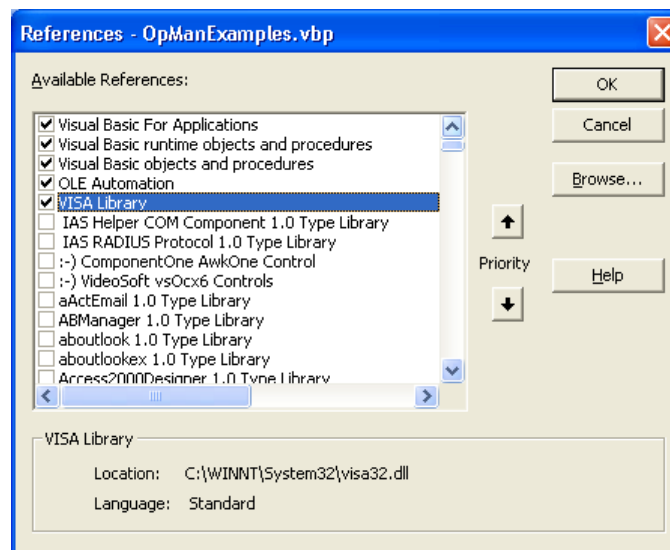

- **Creating a response buffer**

Since the DLL returns zero-terminated strings in responses, a string of sufficient length must be created before the functions `InstrRead()` and `ilrd()` are called, because Visual Basic inserts a length specification in front of the strings and this specification is not updated by the DLL. The following two means of creating the length specification for a string are provided:

```
Dim Rd as String * 100
```

```
Dim Rd as String
```

```
Rd = Space$(100)
```

- **Creating Wrapper Procedures for Writing and Reading**

Since the "VISA" functions require command and response strings and their corresponding length in two separate parameters, the main program code is easier to read and maintain if the read and write functions are encapsulated. Here, the procedure `InstrWrite()` encapsulates the function `viWrite()` and `InstrRead()` encapsulates `viRead()`. In addition, these wrappers include status checking:

```
Public Sub InstrWrite(ByVal vi As Long, ByVal Cmd As String)
    Dim status As Long
    Dim retCount As Long
    'Send command to instrument and check for status
    status = viWrite(vi, Cmd, Len(Cmd), retCount)
    'Check for errors - this will raise an error if status is not VI_SUCCESS
    CALL CheckError(vi, status)
End Sub

Public Sub InstrRead(ByVal vi As Long, Response As String, _
    ByVal count As Long, retCount As Long)
    Dim status As Long
    'Initialize response string
    Response = Space(count)
    '...and read
    status = viRead(vi, Response, count, retCount)
    'Check for errors - this will raise an error if status is not VI_SUCCESS
    CALL CheckError(vi, status)
```

```

    'adjust string length
Response = Left(Response, retCount)
End Sub

```

The following function illustrates status/error checking. The procedure raises an exception when a VISA error occurs:

```

Public Sub CheckError(ByVal vi As Long, status As Long)
Dim ErrorMessage As String * 1024

'Initialize error message string
ErrorMessage = ""
If (status < 0) Then
    'Query the error message from VISA
    If (viStatusDesc(vi, status, ErrorMessage) = VI_SUCCESS) Then
        Err.Description = ErrorMessage
    End If
    Err.Raise (status)
End If
End Sub

```

3.6.1.2 Initialization and Default State

At the start of each program, the global variables used by all subroutines must be created. The remote control and the instrument settings will then be changed to a defined default state. The two subroutines `InitController` and `InitDevice` are used for this.

Creating Global Variables

In Visual Basic, global variables are stored in modules (data extension `.BAS`). Thus, at least one module (e.g. `GLOBALS.BAS`) must be created that contains the variables used by all subroutines, e.g. the variables for device addresses used by the remote control driver.

For all example programs shown below, the file must contain the following instructions:

```

Global analyzer As Long
Global defaultRM As Long

```

Initializing the Remote Control Session

```

REM ----- Initializing the remote control session -----
Public SUB Initialize()
    Dim status As Long
    'CALL viOpenDefaultRM to get the resource manager handle
    'Store this handle in defaultRM. The function viStatusDesc
    'returns a text description of the status code returned by viOpenDefaultRM
    status = viOpenDefaultRM(defaultRM)
    status = viStatusDesc(defaultRM, status, Response)
    'Open the connection to the device and store the handle
    'Note: The timeout value in viOpen() applies only for opening the interface
    'For setting the communication timeout, set the VI_ATTR_TMO_VALUE attribute

```

```
'timeout values are in milliseconds
'This example assumes the instrument IP address 10.0.0.10
'If the network provides a name resolution mechanism, the hostname of
'the instrument can be used instead of the numeric IP address
'the resource string for GPIB would be "GPIB::20::INSTR''
status = viOpen(defaultRM, "TCPIP::10.0.0.10::INSTR'", 0, 1000, analyzer)
'status = viOpen(defaultRM, "TCPIP::<hostname>::INSTR'", 0, 1000, analyzer)
'status = viOpen(defaultRM, "GPIB::20::INSTR'", 0, 1000, analyzer)
'Set timeout value - here 5s
status = viSetAttribute(vi, VI_ATTR_TMO_VALUE, 5000)
END SUB
REM *****
```

Initializing the Instrument

Set the remote control status registers and instrument settings to the default state.

```
REM ----- Initializing the instrument -----
Public SUB InitDevice()
CALL InstrWrite(analyzer, "*CLS")      'Reset status register
CALL InstrWrite(analyzer, "*RST")     'Reset instrument
END SUB
REM*****
```

Switching the Screen Display On and Off

In the default setting, all remote control commands are carried out with the screen display switched off in order to attain optimum measurement speed. During the development phase of remote control programs, however, the screen display is required in order to visually check both the programming of the settings and the measurement results.

The following examples show functions with which the screen display can be switched on or off during remote control operation.

```
REM ----- Switching on the screen display -----
Public SUB DisplayOn()
CALL InstrWrite(analyzer, "SYST:DISP:UPD ON")
      'Switch on screen display
END SUB
REM*****
REM ----- Switching off the screen display -----
Public SUB DisplayOff()
CALL InstrWrite(analyzer, "SYST:DISP:UPD OFF")
      'Switch off screen display
END SUB
REM*****
```

Configuring the Power Save Function for the Display

During remote control operation, it is often unnecessary to display the measurement results on screen. Although the command `SYSTEM:DISPlay:UPDate OFF` switches off the display of the measurement results, thus significantly improving speed in remote

control operation, the display itself and the background lighting in particular remain switched on.

If you also want to switch off the display itself, you must use the power save function by setting the response time in minutes prior to activation.



The display is reactivated immediately when you press a key on the instrument's front panel.

```
Public SUB PowerSave()
CALL InstrWrite(analyzer, "DISPlay:PSAVE:HOLDoff 1")
    'Set response time to 1 minute
CALL InstrWrite(analyzer, "DISPlay:PSAVE ON")
    'Switch on Power Save function
```

3.6.1.3 Sending Simple Instrument Setting Commands

This example shows how the center frequency, span and reference level of the instrument are set.

```
REM ----- Instrument setting commands -----
PUBLIC SUB SimpleSettings()
CALL InstrWrite(analyzer, "FREQUENCY:CENTER 128MHz")
    'Center frequency 128 MHz
CALL InstrWrite(analyzer, "FREQUENCY:SPAN 10MHZ")
    'Set span to 10 MHz
CALL InstrWrite(analyzer, "DISPLAY:TRACE:Y:RLEVEL -10dBm")
    'Set reference level to -10dBm
END SUB
REM *****
```

3.6.1.4 Switching to Manual Operation

```
REM ----- Switching instrument to manual operation -----
CALL viGpibControlREN(analyzer, VI_GPIB_REN_ADDRESS_GTL)
    'Set instrument to Local state
REM *****
```

3.6.1.5 Reading Out Instrument Settings

The settings made above can now be read out. To do so, the abbreviated commands are used.

```
REM ----- Reading out instrument settings -----
PUBLIC SUB ReadSettings()
Dim retCount as Long
CFfrequency$ = SPACE$(20)    'Provide text variable (20 characters)
CALL InstrWrite(analyzer, "FREQ:CENT?")
    'Request center frequency
```

```

CALL InstrRead(analyzer, CFfrequency$, 20, retCount)
    'Read value
CR&S FSVan$ = SPACE$(20)    'Provide text variable (20 characters)
CALL InstrWrite(analyzer, "FREQ:SPAN?")
    'Request span
CALL InstrRead(analyzer, CR&S FSVan$, 20, retCount)
    'Read value
RLlevel$ = SPACE$(20)    'Provide text variable (20 characters)
CALL InstrWrite(analyzer, "DISP:TRAC:Y:RLEV?")
    'Request ref level setting
CALL InstrRead(analyzer, RLlevel$, 20, retCount)
    'Read value
REM ----- Displaying values in the Immediate window -----
Debug.Print "Center frequency: "; CFfrequency$,
Debug.Print "Span:           "; CR&S FSVan$,
Debug.Print "Reference level: "; RLlevel$,
END SUB
REM*****

```

3.6.1.6 Marker Positioning and Readout

```

REM ----- Example of marker function -----
PUBLIC SUB ReadMarker()
Dim retCount as Long
CALL InstrWrite(analyzer, "CALC:MARKER ON;MARKER:MAX")
    'Activate marker 1 and search for peak
MKmark$ = SPACE$(30)    'Provide text variable (30 characters)
CALL InstrWrite(analyzer, "CALC:MARK:X?;Y?")
    'Query frequency and level
CALL InstrRead(analyzer, MKmark$, 30, retCount)
    'Read value
REM ----- Displaying values in the Immediate window -----
Debug.Print "Marker frequency/level "; MKmark$,
END SUB
REM *****

```

3.6.1.7 Command Synchronization

The synchronization methods used in the following example are described in the Operating Manual, chapter "Remote Control - Basics", section "Command Sequence and Command Synchronization".

```

REM ----- Commands for command synchronization -----
PUBLIC SUB SweepSync()
Dim retCount as Long
Dim SRQWaitTimeout As Long
Dim eventType As Long
Dim eventVi As Long
REM The command INITiate[:IMMEDIATE] starts a single sweep if the

```



```

REM command INIT:CONT OFF has already been sent. The next command
REM must not be carried out until a full sweep has been completed.
CALL InstrWrite(analyzer, "INIT:CONT OFF")
REM ----- First method: Using *WAI -----
CALL InstrWrite(analyzer, "ABOR;INIT:IMM; *WAI")
REM ----- Second method: Using *OPC? -----
OpcOk$ = SPACE$(2)      'Provide space for *OPC? response
CALL InstrWrite(analyzer, "ABOR;INIT:IMM; *OPC?")
REM ----- In this case, the controller can use other instruments -----
CALL InstrRead(analyzer, OpcOk$, 2, retCount)
      'Wait for "1" from *OPC?
REM ----- Third method: Using *OPC -----
REM In order for the Service Request function to be used with a GPIB
REM driver from National Instruments, the setting "Disable
REM Auto Serial Poll" must be set to "yes" with IBCONF!
CALL InstrWrite(analyzer, "*SRE 32")      'Enable Service Request for ESR
CALL InstrWrite(analyzer, "*ESE 1")      'Set event enable bit for operation
      'complete bit
CALL viEnableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
      'Enable the event for service request
CALL InstrWrite(analyzer, "ABOR;INIT:IMM; *OPC")
      'Start sweep with Synchronization to OPC
SRQWaitTimeout = 5000      'Allow 5s for sweep completion
      'Now wait for the service request
CALL viWaitOnEvent(vi, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, _
      eventType, eventVi)
CALL viClose(eventVi)      'Close the context before continuing
CALL viDisableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE)
      'Disable subsequent events
REM Resume main program here.
END SUB
REM *****

```

Reading Output Buffers

```

REM ----- Subroutine for the individual STB bits -----
Public SUB Outputqueue()      'Reading the output queue
Dim retCount as Long
result$ = SPACE$(100)      'Create space for response
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Contents of Output Queue : "; result$
END SUB
REM *****

```

Reading Error Messages

```

REM ----- Subroutine for evaluating the error queue -----
Public SUB ErrorQueueHandler()
Dim retCount as Long
ERROR$ = SPACE$(100)      Subroutine for evaluating the error queue
CALL InstrWrite(analyzer, "SYSTEM:ERROR?")

```

```
CALL InstrRead(analyzer, ERROR$, 100, retCount)
Debug.Print "Error Description : "; ERROR$
END SUB
REM *****
```

3.6.2 Detailed Programming Examples

In the following sections, typical programming examples for setting measurement parameters and functions, general settings, printout and data management are provided.

3.6.2.1 Default Setting of the R&S ESR

The following settings provide typical examples of how to change the default setting of the R&S ESR.

Note that only some of the settings are necessary depending on the application example. In many cases, it is not necessary to set resolution bandwidth, video bandwidth and sweep time since these parameters are automatically calculated in the default setting when the span is changed. Likewise, the input attenuation is automatically calculated in the default setting as a function of the reference level. Last of all, the level detectors are linked to the selected trace mode in the default setting.

The settings automatically calculated in the default setting are indicated with an asterisk (*) in the following program example.

Setting the Remote Control Status Registers

```
REM *****
Public Sub SetupStatusReg()

'----- IEEE 488.2 status register -----
CALL InstrWrite(analyzer,"*CLS")      'Reset status registers
CALL InstrWrite(analyzer,"*SRE 168")  'Enable Service Request for
    'STAT:OPER-,STAT:QUES- and ESR-Register
CALL InstrWrite(analyzer,"*ESE 61")   'Set event enable bit for:
    'operation complete 'command-, execution-,
    'device dependent- and query error
'----- SCPI status register -----
CALL InstrWrite(analyzer,"STAT:OPER:ENAB 0")
    'Disable OPERATION Status reg
CALL InstrWrite(analyzer,"STAT:QUES:ENAB 0")
    'Disable questionable Statusreg
End Sub
REM *****
```

Default Settings for Measurements

```
REM *****
Public Sub SetupInstrument()
```

```

'----- Default setting f the R&S FSV -----
CALL SetupStatusReg 'Configure status registers
CALL InstrWrite(analyzer,"*RST") 'Reset instrument
CALL InstrWrite(analyzer,"SYST:DISP:UPD ON")
'ON: screen display on
'OFF: off (improved performance)
CALL InstrWrite(analyzer,"INIT:CONT OFF")
'Single sweep mode
'----- Frequency setting -----
CALL InstrWrite(analyzer,"FREQUENCY:CENTER 100MHz")
'Center frequency
CALL InstrWrite(analyzer,"FREQ:SPAN 1 MHz")
'Span
'----- Level setting -----
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:RLEV -20dBm")
'Reference level
CALL InstrWrite(analyzer,"INP:ATT 10dB")
'Input attenuation (*)
'----- Level scaling -----
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SPAC LOG")
'Log level axis
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL 100dB")
'Level range
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:MODE ABS")
'Absolute scaling
CALL InstrWrite(analyzer,"CALC:UNIT:POW DBM")
'y meas. unit
'----- Trace and detector setting -----
CALL InstrWrite(analyzer,"DISP:TRAC1:MODE AVER")
'Trace1 average
CALL InstrWrite(analyzer,"AVER:TYPE VID")
'Average mode video; "LIN" for linear
CALL InstrWrite(analyzer,"SWE:COUN 10")
'Sweep count
CALL InstrWrite(analyzer,"DISP:TRAC2 OFF")
'Trace2 blank
CALL InstrWrite(analyzer,"DISP:TRAC3 OFF")
'Trace3 blank
CALL InstrWrite(analyzer,"DISP:TRAC4 OFF")
'Trace4 blank
CALL InstrWrite(analyzer,"DISP:TRAC5 OFF")
'Trace5 blank
CALL InstrWrite(analyzer,"DISP:TRAC6 OFF")
'Trace6 blank
CALL InstrWrite(analyzer,"CALC:MATH:STAT OFF")
'Trace difference off
CALL InstrWrite(analyzer,"DET1 RMS")
'Detector Trace1 (*)
CALL InstrWrite(analyzer,"DET2:AUTO ON")

```

```

'Detector Trace2  (*)
CALL InstrWrite(analyzer,"DET3:AUTO ON")
'Detector Trace3  (*)
CALL InstrWrite(analyzer,"DET4:AUTO ON")
'Detector Trace4  (*)
CALL InstrWrite(analyzer,"DET5:AUTO ON")
'Detector Trace5  (*)
CALL InstrWrite(analyzer,"DET6:AUTO ON")
'Detector Trace6  (*)
'----- Bandwidths and sweep time -----
CALL InstrWrite(analyzer,"BAND:RES 100KHz")
'Resolution bandwidth (*)
CALL InstrWrite(analyzer,"BAND:VID 1MHz")
'Video bandwidth  (*)
CALL InstrWrite(analyzer,"SWE:TIME 100ms")
'Sweep time      (*)
END SUB

```

3.6.2.2 Using Markers and Delta Markers

The markers are used for marking points on traces, reading out measurement results and for selecting a display area quickly.

Marker Search Functions, Restricting the Search Range

The following example is based on an AM-modulated signal at 100 MHz that has the following characteristics:

Carrier signal level	-30 dBm
AF frequency	100 kHz
Modulation depth	50 %

Marker 1 and then delta marker 2 are set to the largest maximum points on the trace. The frequency and level are then read. In the following measurements, the instrument's default setting can be used for measurements (SetupInstrument).

```

REM *****
Public Sub MarkerSearch()
Dim retCount as Long
result$ = Space$(100)
CALL SetupInstrument 'Default Setting
'----- Peak search without search range limits-----
CALL InstrWrite(analyzer,"INIT:CONT OFF")
'Switch to single sweep
CALL InstrWrite(analyzer,"CALC:MARK:PEXC 6DB")
'Define peak excursion
CALL InstrWrite(analyzer,"CALC:MARK:STAT ON")
'Enable marker 1
CALL InstrWrite(analyzer,"CALC:MARK:TRAC 1")

```

```

      'Set marker 1 to trace 1
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:MAX;X?;Y?")
      'Marker to peak; read frequency and level
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Marker 1: ";result$
CALL InstrWrite(analyzer,"CALC:DELT2:STAT ON;MAX;MAX:LEFT")
      'Activate delta marker 2,
      'set to peak and then to next peak left
CALL InstrWrite(analyzer,"CALC:DELT2:X?;Y?")
      'Read delta marker 2 frequency and level
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Delta 2: ";result$
'----- Peak search with search range limit in x direction -----
CALL InstrWrite(analyzer,"CALC:MARK:X:SLIM:STAT ON;LEFT _
      0Hz;RIGHT 100.05MHz")
      'Activate search limit,
      'set at right below AF
CALL InstrWrite(analyzer,"CALC:DELT3:STAT ON;MAX;MAX:RIGHT")
      'Activate delta marker 3,
      'set to peak and then to next peak right
CALL InstrWrite(analyzer,"CALC:DELT3:X:REL?;:CALC:DELT3:Y?")
      'Read delta marker 3 frequency and level;
      'both must have a value of 0
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Print "Delta 3: ";result$
'----- Peak search with search range limit in y direction -----
CALL InstrWrite(analyzer,"CALC:THR:STAT ON")
CALL InstrWrite(analyzer,"CALC:THR -35DBM")
      'Activate threshold and set it above the AF
CALL InstrWrite(analyzer,"CALC:DELT3:STAT ON;MAX;MAX:NEXT")
      'Activate delta marker 3,
      'set to peak and then to next peak
      '=> is not found
CALL InstrWrite(analyzer,"CALC:DELT3:X:REL?;:CALC:DELT3:Y?")
      'Query and read delta marker 3
      'frequency and level;
      'both must have a value of 0
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Delta 3: ";result$
'---- Setting center frequency and reference level with markers -----
CALL InstrWrite(analyzer,"CALC:MARK2:FUNC:CENT")
      'Delta marker 2 -> marker and
      'center frequency = marker 2
CALL InstrWrite(analyzer,"CALC:MARK2:FUNC:REF")
      'Ref level = marker 2
CALL InstrWrite(analyzer,"INIT;*WAI")      'Sweep with sync

```

```
END SUB
REM *****
```

Frequency Counting

The following example is based on a signal at 100 MHz with a level of -30 dBm. Again, the instrument's default setting can be used (SetupInstrument). The purpose of frequency counting is to determine the exact frequency of the signal at 100 MHz.

```
REM *****
Public Sub MarkerCount()
Dim retCount as Long
CALL SetupInstrument 'Default setting
'----- Defining signal frequency with frequency counter -----
CALL InstrWrite(analyzer,"INIT:CONT OFF")
'Switch to single sweep
CALL InstrWrite(analyzer,"CALC:MARK:PEXC 6DB")
'Define peak excursion
CALL InstrWrite(analyzer,"CALC:MARK:STAT ON")
'Activate marker 1
CALL InstrWrite(analyzer,"CALC:MARK:TRAC 1")
'Set marker 1 to trace 1
CALL InstrWrite(analyzer,"CALC:MARK:X 100MHz")
'Set marker 1 to 100 MHz
CALL InstrWrite(analyzer,"CALC:MARK:COUNT ON")
'Activate frequency counter
CALL InstrWrite(analyzer,"INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:COUNT:FREQ?")
'Query and read measured frequency
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Marker Count Freq: ";result$
END SUB
REM *****
```

Working with a Fixed Reference Point

The following example is based on a signal at 100 MHz with a level of -20 dBm. Thus, the harmonics of the signal are located at 200 MHz, 300 MHz, etc. For high-quality signal sources, these harmonics may be located outside the dynamic range of the R&S ESR. Nevertheless, to measure the harmonic suppression, the level setting must be changed to higher sensitivity when measuring the harmonics. In this case, it may be necessary to suppress the carrier by using a notch filter in order to prevent the RF input of the R&S ESR from being overloaded.

Thus, two measurements with different level settings are performed in the following example. First, a high reference level is used on the carrier frequency, and then a low reference level is used on the frequency of the third harmonic.

The default setting of the R&S ESR for measurements ("SetupInstrument") is also used as a starting point here, after which adaptations for the measurement are carried out.

```

REM *****
Public Sub RefFixed()
Dim retCount as Long
CALL SetupInstrument 'Default setting
'----- Measuring the reference point -----
CALL InstrWrite(analyzer,"INIT:CONT OFF")
'Switch to single sweep
CALL InstrWrite(analyzer,"CALC:MARK:PEXC 6DB")
'Define peak excursion
CALL InstrWrite(analyzer,"CALC:MARK:STAT ON")
'Activate marker 1
CALL InstrWrite(analyzer,"CALC:MARK:TRAC 1")
'Set marker 1 to trace 1
CALL InstrWrite(analyzer,"INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:MAX")
'Set marker 1 to 100 MHz
CALL InstrWrite(analyzer,"CALC:DELT:FUNC:FIX ON")
'Define reference point
'----- Setting frequency, level and bandwidth for measuring harmonics -----
CALL InstrWrite(analyzer,"FREQ:CENT 400MHz;Span 1MHz")
'Set freq of 3rd harmonic
CALL InstrWrite(analyzer,"BAND:RES 1kHz")
'Set suitable RBW
CALL InstrWrite(analyzer,"SWEEP:TIME:AUTO ON")
'Couple sweep time
CALL InstrWrite(analyzer,"INP:ATT:AUTO ON")
'Select more sensitive level setting
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:RLEV -50dBm")
CALL InstrWrite(analyzer,"INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:DELT:MAX;X:REL?;Y?")
'Read delta marker
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
'Read frequency and level
Debug.Print "Deltamarker 1: "; result$
END SUB
REM *****

```

Measuring Noise and Phase Noise

When phase noise is measured, the noise power related to a bandwidth of 1 Hz is set in relation to the power of an adjacent carrier signal. A commonly used offset between the measured frequency and the carrier frequency is 10 kHz.

When noise is measured, the measured absolute level is related to a bandwidth of 1 Hz.

The following example is also based on a signal at 100 MHz with a level of -30 dBm. Two markers are used to determine both the noise and the phase noise at a 10 kHz offset from the carrier signal.

```

REM *****
Public Sub Noise()
Dim retCount as Long
'----- Default setting of the R&S FSV -----
CALL SetupStatusReg 'Configure status register
CALL InstrWrite(analyzer,"*RST") 'Reset instrument
CALL InstrWrite(analyzer,"INIT:CONT OFF")
'Single sweep mode
'----- Setting the frequency -----
CALL InstrWrite(analyzer,"FREQUENCY:CENTER 100MHz")
'Center frequency
CALL InstrWrite(analyzer,"FREQ:SPAN 100 kHz")
'Span
'----- Setting the level -----
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:RLEV -20dBm")
'Reference level
CALL InstrWrite(analyzer,"INIT;*WAI") 'Perform sweep with sync
'----- Setting the reference point -----
CALL InstrWrite(analyzer,"CALC:MARK:PEXC 6DB")
'Define peak excursion
CALL InstrWrite(analyzer,"CALC:MARK:STAT ON")
'Activate marker 1
CALL InstrWrite(analyzer,"CALC:MARK:TRAC 1")
'Set marker 1 to trace 1
CALL InstrWrite(analyzer,"CALC:MARK:MAX")
'Set marker 1 to 100 MHz
CALL InstrWrite(analyzer,"CALC:DELT:FUNC:PNO ON")
'Define reference point for phase noise
'----- Measuring the phase noise -----
CALL InstrWrite(analyzer,"CALC:DELT:X 10kHz")
'Position delta marker
CALL InstrWrite(analyzer,"CALC:DELT:FUNC:PNO:RES?")
'Query and output phase noise result
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Phase Noise [dBc/Hz]: "; result$
'----- Measuring the noise -----
CALL InstrWrite(analyzer,"CALC:MARK:X 99.96MHz")
'Position marker 1
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:NOIS:RES?")
'Query and output result
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Print "Noise [dBm/Hz]: "; result$
END SUB
REM *****

```


3.6.2.3 Reading Out Trace Data

In the following example, the trace data obtained with the default setting is read from the instrument and displayed in a list on the screen. Readout occurs first in binary format and then in ASCII format, once with the span > 0 and once with the span = 0.

In binary format, the header of the message with the length specification is evaluated and used to calculate the x-axis values.

In ASCII format, merely the list of level values is output.

Binary data is read out in three steps:

1. The number of digits in the length specification is read out.
2. The length specification itself is read out.
3. The trace data itself is read out.

The procedure is required for programming languages that only support structures with data types of the same type (arrays, such as with Visual Basic), because the data types of the header and data sections are different in binary data.

The "VISA" library provides only a mechanism for reading into string buffers. In order to convert the data into an array of single precision values, the string contents must be copied into a buffer of that type. The following example uses an operating system function for the copy operation. The function declaration must be added to a module (.bas) as follows:



Array dimensions

The arrays for the measured data are dimensioned so they provide sufficient space for trace data of the R&S ESR (691 measurement points).

```
REM *****
Public Sub ReadTrace()
'----- Creating variables -----
Dim traceData(1400) As Single    'Buffer for floating point binary data
Dim digits As Byte              'Number of characters in
    'length specification
Dim traceBytes As Integer       'Len. of trace data in bytes
Dim traceValues As Integer      'No. of meas. values in buff.
Dim BinBuffer as String * 5600  'String buffer for binary data
Dim retCount as Long
asciiResult$ = Space$(28000)    'Buffer for ASCII trace data
result$ = Space$(100)          'Buffer for simple results
startFreq$ = Space$(100)       'Buffer for start frequency
span$ = Space$(100)            'Buffer for span
'----- Default setting of the R&S FSV -----
CALL SetupInstrument            'Default setting
CALL InstrWrite(analyzer,"INIT:CONT OFF")
    'Switch to single sweep
```

```

CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
'----- Defining the frequency range for output -----
CALL InstrWrite(analyzer,"FREQ:START?")    'Read start frequency
CALL InstrRead(analyzer,startFreq$, 100, retCount)
startFreq = Val(startFreq$)
CALL InstrWrite(analyzer,"FREQ:SPAN?")     'Read span
CALL InstrRead(analyzer,span$, 100, retCount)
span = Val(span$)
'----- Reading out in binary format -----
CALL InstrWrite(analyzer, "FORMAT REAL,32")
      'Set binary format
CALL InstrWrite(analyzer, "TRAC1? TRACE1")
      'Read trace 1
CALL InstrRead(analyzer, result$, 2, retCount)
      'Read and store length
digits = Val(Mid$(result$, 2, 1))         'spec. for number of characters
result$ = Space$(100)                     'Reinitialize buffer
CALL InstrRead(analyzer, result$, digits, retCount)
      'Read and store length
traceBytes = Val(Left$(result$, digits))
      'specification
CALL InstrRead(analyzer, BinBuffer, traceBytes, retCount)
      'Read trace data into buffer
CopyMemory traceData(0), ByVal BinBuffer, traceBytes
      'Copy data into float array
'----- Outputting binary data as frequency/level pairs -----
traceValues = traceBytes/4                'Single precision = 4 bytes
stepsize = span/traceValues               'Calculate frequency step size
For i = 0 To traceValues - 1
Debug.Print "Value["; i; "] = "; startFreq+stepsize*i; ", "; traceData(i)
Next i
'----- Default setting of zero span -----
CALL InstrWrite(analyzer,"FREQ:SPAN 0Hz")
      'Switch to zero span
CALL InstrWrite(analyzer,"INIT;*WAI")     'Perform sweep with sync
'----- Reading out in ASCII format -----
CALL InstrWrite(analyzer,"FORMAT ASCII")
      'Set ASCII format
CALL InstrWrite(analyzer,"TRAC1? TRACE1")
      'Read and output
CALL InstrRead(analyzer, asciiResult$)
Print "Contents of Tracel: ",asciiResult$  'trace 1
END SUB
REM *****

```

3.6.2.4 Storing and Loading Instrument Settings

Settings and measured data can be stored and loaded. You can define which data set is loaded when the instrument is preset or started.

Storing Instrument Settings

In the following example, the settings/measured data to be stored are defined initially, in which case only the hardware settings are stored. However, the selection commands for the other settings are specified with the state "OFF" for the sake of completeness.

```

REM *****
Public Sub StoreSettings()
' This subroutine selects the settings to be stored and creates the
' data record "TEST1" in the directory C:\R_S\Instr\user. It uses the default
' setting and resets the instrument after the setting is stored.
'----- Default settings of the R&S FSV -----
CALL SetupInstrument
CALL InstrWrite(analyzer,"INIT:CONT OFF")
' Change to single sweep
CALL InstrWrite(analyzer,"INIT;*WAI") ' Perform sweep with sync
'----- Selection of settings to be stored -----
CALL InstrWrite(analyzer,"MMEM:SEL:HWS ON")
' Store hardware settings
CALL InstrWrite(analyzer,"MMEM:SEL:TRAC OFF")
' Do not store any traces
CALL InstrWrite(analyzer,"MMEM:SEL:LIN:ALL OFF")
' Store only the activated limit lines
'----- Storing on the instrument -----
CALL InstrWrite(analyzer,"MMEM:STOR:STAT 1,'C:\R_S\Instr\user\TEST1'")
'----- Resetting the instrument -----
CALL InstrWrite(analyzer,"*RST")
END SUB
REM *****

```

Loading Instrument Settings

In the following example, the TEST1 data record stored under C:\R_S\Instr\user is loaded by the instrument:

```

REM *****
Public Sub LoadSettings()
' This subroutine loads the TEST1 data record in the directory
' C:\R_S\Instr\user.
'----- Default setting of the status register -----
CALL SetupStatusReg ' Configure status register
'----- Loading the data record -----
CALL InstrWrite(analyzer,"MMEM:LOAD:STAT 1,'C:\R_S\Instr\user\TEST1'")
'----- Perform measurement using loaded data record -----
CALL InstrWrite(analyzer,"DISP:TRAC1:MODE WRIT")
' Set trace to Clr/Write
CALL InstrWrite(analyzer,"INIT;*WAI") ' Start sweep
END SUB
REM *****

```

Setting the Data Record for Startup Recall

In the following example, the first step is to change the R&S ESR to the default state. In the next step, the TEST1 data record stored under C:\R_S\Instr\user is selected for the startup recall function, i.e. the data record is then set after each *RST, presetting and each time the instrument is started. For demonstration purposes, the command *RST is carried out again.

```
REM *****
Public Sub StartupRecallSettings()
'----- Resetting the R&S FSV -----
CALL InstrWrite(analyzer,"*RST")
'----- Default setting of the status register -----
CALL SetupStatusReg      'Configure status register
'----- Selecting the startup recall data record -----
CALL InstrWrite(analyzer,"MMEM:LOAD:AUTO 1,'C:\R_S\Instr\user\TEST1'")
'----- Activating the startup recall data record -----
CALL InstrWrite(analyzer,"*RST")
END SUB
REM *****
```

3.6.2.5 Configuring and Starting a Printout

The following example shows how to configure the output format and output device for printing out a measurement screen. The procedure is as follows:

1. Set the measurement you want for the printout.
2. Check which output devices are available on the instrument.
3. Select an output device.
4. Select the output interface.
5. Configure the output format.
6. Start the printout with synchronization to completion.

It is assumed that the desired setting is a signal at 100 MHz with a power of -20 dBm. It is also assumed that the sixth printer out of the available printers that are listed is the one you want. The printout is first output to the selected printer and then to a file.

```
REM *****
Public Sub HCopy()
Dim retCount as Long
Dim SRQWaitTimeout As Long
Dim eventType As Long
Dim eventVi As Long
Dim statusSRQ As Long
DIM Devices(100) as string      'Create buffer for printer name
FOR i = 0 TO 49
    Devices$(i) = Space$(50)    'Preallocate buffer for printer name
```

```

NEXT i
'----- Default setting of the R&S FSV -----
CALL SetupStatusReg 'Configure status register
CALL InstrWrite(analyzer,"*RST") 'Reset instrument
CALL InstrWrite(analyzer,"INIT:CONT OFF")
'Single sweep mode
CALL InstrWrite(analyzer,"SYST:DISP:UPD ON")
'Screen display on
'----- Measurement settings -----
CALL InstrWrite(analyzer,"FREQ:CENT 100MHz;SPAN 10MHz")
'Frequency setting
CALL InstrWrite(analyzer,"DISP:TRAC:Y:RLEV -10dBm")
'Reference level
CALL InstrWrite(analyzer,"INIT;*WAI") 'Perform measurement
'----- Querying the available output devices -----
CALL InstrWrite(analyzer,"SYST:COMM:PRIN:ENUM:FIRSt?")
'Read out and display first output device
CALL InstrRead(analyzer,Devices$(0), 50, retCount)
Debug.Print "Printer 0: "+Devices$(0)
For i = 1 to 99
    CALL InstrWrite(analyzer,"SYST:COMM:PRIN:ENUM:NEXT?")
    'Read out next printer name
    CALL InstrRead(analyzer,Devices$(i))
    IF Left$(Devices$(i),2) = "" THEN GOTO SelectDevice
    'Stop at end of list
    Debug.Print "Printer"+Str$(i)+" : " Devices$(i)
    'Display printer name
NEXT i
SelectDevice:
'---- Selection of output device, printer language and output interface ----
CALL InstrWrite(analyzer,"SYST:COMM:PRIN:SEL "+ Devices(6))
'Printer selection #6
CALL InstrWrite(analyzer,"HCOP:DEST 'SYST:COMM:PRIN'")
'Configuration: "Printout to
'printer interface"
CALL InstrWrite(analyzer,"HCOP:DEV:LANG GDI")
'Printers require printer language 'GDI'
'----- Selection of orientation (portrait/landscape) and colour/BW -----
CALL InstrWrite(analyzer,"HCOP:PAGE:ORI PORT")
'Portrait orientation
CALL InstrWrite(analyzer,"HCOP:DEV:COL OFF")
'Black-and-white printout
'----- Configuring and starting the printout -----
CALL InstrWrite(analyzer,"HCOP:ITEM:ALL")
'All screen contents
'CALL InstrWrite(analyzer,"HCOP:ITEM:TRAC:STAT ON")
'Alternative: only traces
CALL InstrWrite(analyzer,"*CLS") 'Reset status registers
CALL viEnableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
'Enable the event for service request

```

```

CALL InstrWrite(analyzer,"HCOP;*OPC")
  'Start printout
SRQWaitTimeout = 5000    'Allow 5s for completion
  'Now wait for the service request
statusSRQ = viWaitOnEvent(vi, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, _
  eventType, eventVi)
CALL viClose(eventVi)    'Close the context before continuing
CALL viDisableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE)
  'Disable subsequent events
IF NOT(statusSRQ = 0) THEN CALL Srq    'If SRQ not detected =>
  'Subroutine for evaluation
'---- Printout in WMF format (BMP format) to file -----
CALL InstrWrite(analyzer,"HCOP:DEST 'MMEM'")
  'Configuration: "Printout to file"
CALL InstrWrite(analyzer,"HCOP:DEV:LANG WMF")
  'WMF file format
'CALL InstrWrite(analyzer,"HCOP:DEV:LANG BMP")
  'BMP file format
CALL InstrWrite(analyzer,"MMEM:NAME 'C:\R_S\Instr\user\PRINT1.WMF'")
  'Define file name
CALL InstrWrite(analyzer,"*CLS")    'Reset Status registers
CALL viEnableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
  'Enable the event for service request
CALL InstrWrite(analyzer,"HCOP:IMMediate;*OPC")
  'Start printout
SRQWaitTimeout = 5000    'Allow 5s for completion
  ' Now wait for the service request
statusSRQ = viWaitOnEvent(vi, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, _
  eventType, eventVi)
CALL viClose(eventVi)    'Close the context before continuing
CALL viDisableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE)
  'Disable subsequent events
IF NOT(statusSRQ = 0) THEN CALL Srq    'If SRQ not detected =>
  'Subroutine for evaluation
END SUB
REM *****

```

4 Measurement Modes

The R&S ESR provides several measurement modes for different analysis tasks. When you activate a measurement mode, a new measurement channel is created. The channel determines the settings for that measurement mode. Each channel is displayed in a separate tab on the screen.

SCPI command:

`INSTRument[:SElect]` on page 636

To change the measurement mode

1. Press the MODE key.
A menu with the currently available measurement modes is displayed.
2. To activate a different mode, press the corresponding softkey.

4.1 Receiver Mode

In Receiver mode, the R&S ESR measures the signal level at a particular frequency. It also provides tools (e.g. detectors or bandwidths) necessary to measure the signal according to EMC standards. The Receiver mode is the default mode of the R&S ESR.

The R&S ESR also provides function for IF analysis if you have equipped your R&S ESR with firmware application R&S ESR-K56. IF analysis is not a separate measurement mode but is integrated into the Receiver mode.

For more information on functionality available for the Receiver mode see [Chapter 5, "Receiver Mode"](#), on page 142.

SCPI command:

`INST REC`

4.2 Spectrum Mode

In Spectrum mode the provided functions correspond to those of a conventional spectrum analyzer. The analyzer measures the frequency spectrum of the RF input signal over the selected frequency range with the selected resolution and sweep time, or, for a fixed frequency, displays the waveform of the video signal.

The Spectrum mode also provides spectrogram measurements. The spectrogram is not a separate measurement mode, but rather a trace evaluation mode. Note also that the Spectrogram available in Spectrum mode is independent of that available in real time mode. It provides similar functionality but uses different data acquisition methods.

For more information on functionality available for the Spectrum mode see [Chapter 6, "Spectrum Measurements"](#), on page 221.

SCPI command:

```
INST SAN
```

4.3 I/Q Analyzer Mode

The I/Q Analyzer mode provides measurement and display functions for digital I/Q signals.

For more information on functionality available for the I/Q Analyzer see [Chapter 7, "I/Q Analyzer"](#), on page 458.

SCPI command:

```
TRACe<n>:IQ[:STATe] on page 898
```

4.4 Real Time Mode

In Real Time mode, the R&S ESR performs measurements in the frequency spectrum of a test signal without losing any signal data. You can evaluate the measurement results in several result displays that are designed for the realtime analysis and complement one another.

Real Time analysis is available with firmware application R&S ESR-K55 and hardware option R&S ESR-B50.

For more information on functionality available for the Real Time mode see the separate User Manual available for download on the internet (<http://www2.rohde-schwarz.com/product/ESR.html>).

SCPI command:

```
INST RTIM
```

4.5 Measurement Mode Root Menus (HOME Key)

The HOME key provides a quick access to the root menu of the current measurement mode.

5 Receiver Mode

In receiver mode, the R&S ESR measures the level at the set frequency with a selected bandwidth and measurement time. Signal weighting is by means of detectors.

A frequency scan can be performed after setting the start and stop frequency and the step width. Scan subranges are defined in a table.

Functions for data reduction and the control of line impedance simulating network are available.

Preselection is always switched on in receiver mode.

5.1 Measurements and Result Displays

The R&S ESR provides several types of measurements.

- The bargraph result display shows the signal level on a single frequency.
- Fast prescans together with several data reduction methods are used to reduce the amount of data in the final measurements. The final measurement is then performed only on frequencies that have a high interferer level.
- The final measurement may be either automatic or in interactive mode. Automatic control functions for line impedance stabilization networks (LISN) are available.
- Time domain scans (option R&S ESR-K53) reduce the required overall measurement times enormously by using fast fourier transform (FFT) of frequency sections. Time domain scan may even eliminate the need for preliminary measurements.
- Fixed frequency mode for click analysis and IF spectrum analysis mode for manual tuning are available.
- The spectrogram result display provides an additional data evaluation method by showing the signals over time.

• Bargraph Measurement	142
• IF Spectrum Analysis	143
• Scans	144
• Peak List and Data Reduction	148
• Final Measurement	150
• Spectrogram	151
• Measurement Control	156

5.1.1 Bargraph Measurement

The bargraph result display shows the signal level on a single frequency. It is a basic result display that indicates the signal level numerically and graphically.

The length of the bar represents the signal level at the current receiver frequency evaluated with the currently selected detector.


Up to four bargraphs with different detector weighting can be displayed simultaneously. The R&S ESR assigns a different color to each detector. This provides an easy way to compare the signal level with different weighting factors.



- 1 = current level unit
- 2 = current receiver frequency
- 3 = detectors
- 4 = measured levels (numerically)
- 5 = measured levels (graphically)

The results in the bargraph are shown upon entering the receiver mode. Either single or continuous measurement can be selected. The level range is always 100 dB, the unit of the displayed signal level can be selected.

An enabled maxhold function shows the maximum level that has been measured for each active detector in addition to the live results. If a new maximum has been found, the result indication is updated accordingly. The display keeps the overall maximum level even after changing the frequency until a reset of the maxhold function.

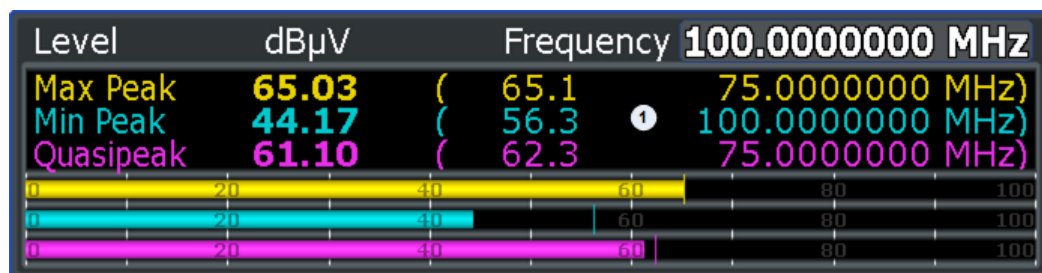

- 1 = maximum levels; note that the maximum and quasipeak peaks have been measured at frequency different to the current receiver frequency

5.1.2 IF Spectrum Analysis

The IF spectrum analysis is a very comfortable means for exact frequency tuning of the receiver and for identification of signals and of their bandwidth.

In IF spectrum analysis, the spectrum of the RF input signal is displayed in the vicinity of the receiver frequency. The center frequency of the displayed spectrum is always the current receive frequency.

The IF analysis provides a fast overview of the assignment of the spectrum adjacent to the measuring channel proper, or, with a large resolution bandwidth, the spectral distribution of a modulated signal in the channel. Interference of the received useful signal can also be detected quickly, whether it is CW interference appearing as unmodulated

carrier or pulse-like interference which is represented in the form of narrow horizontal lines on the screen.

The accuracy of the frequency axis corresponds to the reference used (internal or external). The frequency display range (span) can be selected between 1 kHz and 10 MHz in steps of 1, 2 and 5. With the bandwidths 10 Hz to 100 kHz in steps of 1, 3, 10 the frequency resolution can be matched to the span.

In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from samples recorded from the A/D-converter. Thus the receiver stays tuned to the center frequency. It may continue to measure with the selected measurement time and display the signal level with the bargraph. For example, the quasi-peak level measured with one second measurement time may be displayed in the upper half of the display while in the lower half the spectrum may be refreshed every few milliseconds.

The measurement time of the bargraph may be longer than the measurement time of the IF analysis. If the measurement time of the bargraph is set to a smaller value than the measurement time of the IF analysis, the bargraph will as often be refreshed as the display of the IF analysis.

The level display of the IF analysis is unweighted. It is independent of the selected detector for the bargraph measurement, e.g. average or quasi peak. A maximum of three traces can be displayed in parallel. The display mode "Clear / Write", "Max Hold", "Min Hold", "Average", "View" or "Blank" may be selected independent for each trace.



The displayed level values do not have the full accuracy of the instrument only at the center frequency. At all other frequencies, the level is typically lower due to the frequency response of the IF filter and the preselector.

The IF display does switch on the 6 dB EMI resolution bandwidth filters for the bargraph measurement. 3 dB or channel filters are not possible in the IF analysis mode. The maximum span for the IF analysis is limited to ten times the selected resolution bandwidth for the bar graph measurement. This is due to the dynamic range of the bar graph measurement.

5.1.3 Scans

In scan mode, the R&S ESR measures in a predefined frequency range with selectable step width and measurement time for each frequency.

A scan is either based on the current receiver settings or on the settings defined in the "Scan Table" (see [Chapter 5.1.3.3, "The Scan Table"](#), on page 146).

Transducer factors or transducer sets and limit lines can be defined and displayed separately and are not part of the scan data record.

The scanned frequency range is defined by the start and stop frequency set independently of the scan table. A scan table can thus be defined for each measurement task.

The scan can be performed as a single scan or continuously. In the case of single scan it is stopped when the stop frequency is reached. The continuous scan can be interrupted or terminated any time.

The maximal number of measured frequencies is limited to 4.000.000 per detector. The data can be stored for postprocessing. If the scan subranges are defined so that more than the possible values would be measured, a respective message is output upon the scan start. Afterwards the scan is performed up to the maximum value.

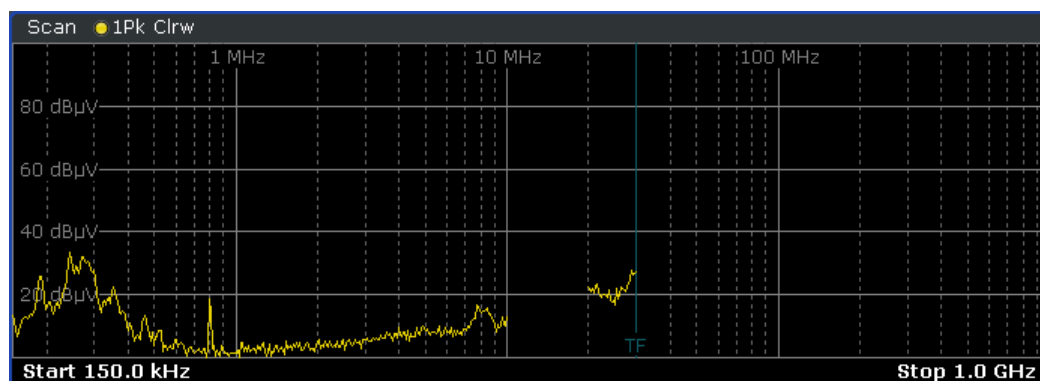


Figure 5-1: Scan on selected frequencies showing gaps in the trace

The R&S ESR offers three types of scans:

- **Stepped scan in the frequency domain**
In stepped scan mode, step width and frequency spacing (step mode) can be selected.
 - **Time domain scan in the frequency domain**
In time domain measurement systems, up to 30 MHz of the spectrum at the receiver input are measured in parallel by using fast fourier transform (FFT) of frequency sections. Time Domain scans require options R&S ESR-K53 and R&S ESR-B50.
 - **Fixed frequency scan on a single frequency**
This scan is carried out on a fixed frequency. It is used to examine the time characteristics of interferences, e.g. click analysis.
- | | |
|---|-----|
| • Stepped Scans in the Frequency Domain | 145 |
| • Time Domain Scans in the Frequency Domain | 146 |
| • The Scan Table | 146 |
| • Scan on a Fixed Frequency | 148 |

5.1.3.1 Stepped Scans in the Frequency Domain

In stepped scan mode, the step width and the frequency spacing (step mode) can be selected. Linear, logarithmic or automatic frequency spacing is available. In automatic mode, the step width is selected so that it is always smaller than the bandwidth.

EMI measurements may involve much time. Time saving procedures are explained in [Chapter 5.1.4, "Peak List and Data Reduction"](#), on page 148. They reduced the total measurement time by reducing the number of quasipeak measurements to a minimum.

Nevertheless, this time is still very long, often in the order of hours, especially for the CISPR radiated emissions tests. A way out of this situation can be time-domain measurements, see [Chapter 5.1.3.2, "Time Domain Scans in the Frequency Domain"](#), on page 146.

5.1.3.2 Time Domain Scans in the Frequency Domain

Time Domain scan are available with firmware application R&S ESR-K53 and hardware option R&S ESR-B50. Measurement results fully comply with CISPR 16-1-1 standards.

Time domain scan reduce the overall measurement time enormously. For applications like voltage tests, no preliminary measurement for data reduction is required, because the final measurement with the quasipeak detector is already fast enough. For more time consuming tests like field strength test with mast and turn table, prescans are still recommended. However, due to the increased measurement speed both in prescan and final scan, the overall measurement still is considerably reduced.

Whereas in conventional EMI measurement systems, only the spectrum within the measurement bandwidth can be measured during a certain measurement time of e.g. 100 ms, in this measurement systems, large parts of the spectrum at the receiver input can be measured in parallel using fast fourier transform (FFT) of frequency sections.

For measurements with prescan, the prescan is used to get a detailed overview of the emission spectrum. The prescan result is then analyzed and the critical frequencies can be determined. On the critical frequencies, if further maximization with antenna mast and turntable movement is needed, the R&S ESR can be used in its conventional measurement function with quasipeak and/or average detection.


5.1.3.3 The Scan Table

Either the current receiver settings or the settings defined in the Scan table are used for stepped or time domain scans.

In the scan table, up to 10 subranges can be defined within one scan. They need not be next to each other. The subranges are then scanned by R&S ESR one after the other. Measurement ranges should not overlap. The parameters to be measured in each subrange can be selected independently. For more information on the available range parameters see [Chapter 5.3.7.2, "Scan Table"](#), on page 189.

Example:

The graph below shows a scan performed in four subranges. The scan start at the start frequency of subrange 1. Between subrange 2 and 3 is a frequency gap, where no measurement is performed. In subrange 4, the part of the frequency range that is outside the overall scan range is also not considered for the scan results.

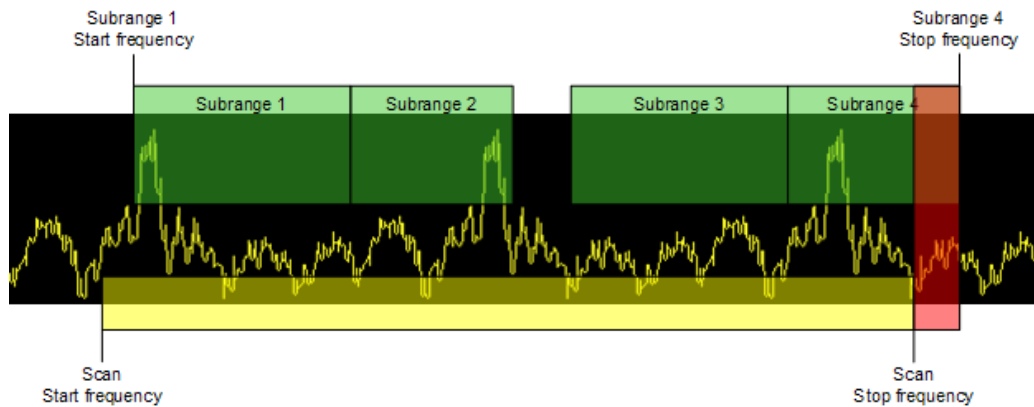

Scan Table

Scan Start	<input type="text" value="150.0 kHz"/>	Time Domain Scan	<input type="button" value="OFF"/> <input checked="" type="button" value="ON"/>
Scan Stop	<input type="text" value="2.0 GHz"/>	Adjust Axis	<input type="button" value="Delete Range"/>
Step Mode	<input type="text" value="AUTO"/>	Insert Range Before	<input type="button" value="Insert Range After"/>

	Range 1	Range 2	
Range Start	<input type="text" value="150.0 kHz"/>	<input type="text" value="30.0 MHz"/>	
Range Stop	<input type="text" value="30.0 MHz"/>	<input type="text" value="1.0 GHz"/>	
Step Size	<input type="text" value="2.25 kHz"/>	<input type="text" value="30.0 kHz"/>	
Res BW	<input type="text" value="9.0 kHz"/>	<input type="text" value="120.0 kHz"/>	
Meas Time	<input type="text" value="1.0 ms"/>	<input type="text" value="100.0 μs"/>	
Auto Ranging	<input type="button" value="OFF"/> <input checked="" type="button" value="ON"/>	<input type="button" value="OFF"/> <input checked="" type="button" value="ON"/>	
RF Attenuation	<input type="text" value="10 dB"/>	<input type="text" value="10 dB"/>	
Preamplifier	<input type="text" value="OFF"/>	<input type="text" value="OFF"/>	
RF Input	<input type="button" value="1"/> <input type="button" value="2"/>	<input type="button" value="1"/> <input type="button" value="2"/>	

- Range Start = Start frequency of the scan range. To avoid overlapping scan ranges, the stop frequency of the previous scan range is adjusted if necessary.
- Range Stop = Stop frequency of the scan range. To avoid overlapping scan ranges, the start range of the next scan range is adjusted if necessary.
- Stepsize = Frequency stepsize within the scan range. If you define a stepsize that is larger than the range itself, the R&S ESR only measures the start and stop frequencies of the scan range. The step size is available if the [Step Mode](#) is either linear or logarithmic. If the step mode is linear, the step size is a value in Hz. If the step mode is logarithmic, the step size is a percentage.
- Res BW = Measurement bandwidth used within the scan range, see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166. The R&S ESR displays an exclamation mark if the selected measurement bandwidth is not compatible to the bandwidth required by CISPR for the corresponding frequency range.
- Meas Time = Measurement time applied to the scan range, also see ["Final Measurement Time"](#) on page 196

- Auto Rang- = Turns automatic selection of the input attenuation on and off, see [Auto Range \(On Off\)](#)
ing
- RF Attenua- = Attenuation level at the RF input.
tion
- Preamplifier = Turns the preamplifier on and off. If you select "Auto", the preamplifier is also considered in
the auto ranging process.
- RF Input = Selects the RF input.

5.1.3.4 Scan on a Fixed Frequency

Fixed frequency scans are scans in the time domain, i.e. at a fixed frequency. Time domain analysis is generally used to examine the time characteristics of interferences. Evaluating the detected voltage with an oscilloscope is useful in order to correctly set the receiver measurement time. By doing so, you can determine whether and how strongly a narrowband interference fluctuates and whether it is amplitude-modulated or pulsed. You can also determine the pulse rate of a broadband interference. You can set the measurement time to a value that is greater than or equal to the reciprocal of the pulse rate.

Click rate analysis

A special application for fixed frequency scans is click rate analysis. Clicks are short and occasional interferences or pulses that usually occur in thermostat-controlled, software-controlled or other electrically controlled devices like washing machines or air conditioning devices.

The click characteristics of such a device are subject to the occurrence of successive pulses whose individual pulse heights cannot be assigned exactly by using the time constants of quasipeak weighting. This can be critical for these measurements, because it can lead to limits being exceeded. Using time domain analysis, you are able to determine the length, repetition rate and level of the clicks.

Because of their irregularity, different limits have to be applied than for periodic interferences. These limits are defined by the CISPR 14-1 and EN 55014-1 standards. Both standards define limits for RFI voltage with click rate weighting in the range from 150 kHz to 30 MHz.

You can perform this task according to the standards with the R&S ESR. It meets the requirements of the standards regarding the accuracy of pulse length measurements with pulse lengths of 10 ms or more. With a memory capacity of 2 million values per trace, it also has a large enough memory to completely record maximum peak and quasipeak data for at least 2 hours with a measurement time of 5 ms for each value that has been measured.

5.1.4 Peak List and Data Reduction

Peak List

The Peak Search function of the R&S ESR can be used to create a peak list containing only the measurement values of high interferers. In a fast prescan the signal is mea-

sured against a limit line, and the level values above the set margin are written into the peak list. The resulting peak list then is used for the final measurement where only the frequencies in the peak list are measured with the required detector.

If the scan uses the detector stipulated by the specifications, the peak list already provides the final measurement data.


Data Reduction using the Peak List

EMI measurements may involve much time because the time constants of up to 160 ms prescribed by the standard for the quasipeak weighting lead to long measurement times per each value. In addition, some standards stipulate procedures for finding local EMI maxima such as shifting the absorbing clamp, variation of the test antenna height and rotating the DUT. Measuring with quasipeak weighting at each frequency and for each setting of the test configuration would lead to unacceptably long measurement times. For this reason, a method is used which reduces the time-consuming measurements to a minimum with an optimum reliability of detection.

The interference spectrum is first pre-analyzed in a fast prescan to optimize the duration of the measurement. Data reduction follows so that the time-consuming final measurement is performed only at critical frequencies.

Several data reduction methods are used:

- Generating subrange maxima (search method "Subranges").
The whole frequency range is divided into equidistant frequency subranges. A selectable number of subrange maxima are determined for each subrange. In the final measurement, the interference spectrum is further analyzed at frequencies with the highest interference level of a frequency subrange.

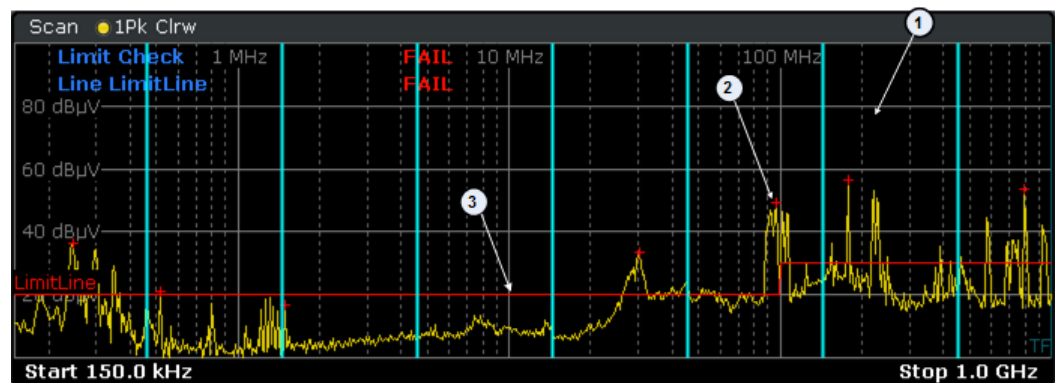

- 1 = Subrange
- 2 = Subrange maximum
- 3 = Limit line

- Determination of a specific number of peak values relative to the limit lines with the level values being independent of their frequency spectral distribution (search method "Peaks").
Determining the level maxima irrespective of their distribution in the frequency spectrum is suitable for measurement regulations that demand determination of the relatively highest level irrespective of the distribution in the measured frequency range, e.g. FCC.

If the prescan is performed in parallel with several detectors, typically Peak and Average, the maxima are determined separately for the two detectors so that the distribution of narrowband and wideband sources of interference can be taken into account. For example, the frequency of the maximum determined with the average detector can be used for the final measurement performed with the CISPR Avg detector and the frequency found in the prescan carried out with the peak detector is taken for the final measurement using the quasipeak detector.

Consideration of the limit lines ensures that the final measurement is not performed at frequencies at which the inference level is far below the limit value. A margin below the limit line can be defined (in dB). Peak values measured in the margin area are also considered in the final measurement. The margin is valid for all limit lines. Each limit line is allocated to a trace, i.e. different limit lines are taken for the different detectors.

If no limit lines are activated, the measurement procedure is as if all measured values would exceed the limit line.

Data Reduction by Editing the Peak List

As an alternative method, it is possible to preset a list of frequencies at which the final measurements are performed. A typical application is, for example, the statistical analysis of several units.

The peak list can be either edited manually or can be filled with desired values by adopting the marker values.

5.1.5 Final Measurement

A final measurement is performed after data reduction, thus reducing the overall measurement time.

The final measurement analyzes only the data that still remains after the preliminary measurement stages, in other words those frequencies that have been collected in the peak list. Detectors defined for the final measurement replace those that have been used during preliminary measurements.

Because the peak list contains a manageable set of frequencies only, the final measurement is also usable in combination with a configuration that requires long measurement times. It is then still possible to perform the measurement in a reasonable time frame.

During the final measurement, the R&S ESR performs a measurement on each frequency in the peak list. When done, it updates the preliminary results in the peak list with those found during the final measurement.

Automatic vs interactive final measurements

The R&S ESR provides two methods to perform a final measurement: an automatic and interactive final measurement.

An automatic final measurement measures all frequencies in the peak list automatically. The measurement can be interrupted or aborted, or the measurement mode can

be switched to interactive. Measurement settings can not be changed. The advantage is that the measurement runs on its own.

Control of the final measurement is possible in interactive final measurement mode.

In interactive final measurement mode, the R&S ESR stops on each frequency of the peak list. If required, the frequency can be fine tuned, e.g. if the interferer has shifted. For fine tuning, the bargraph display can be used to find the new peak value. The level measurement is performed only after initialization by the user.

It is possible to start with an automatic measurement and later change into interactive mode. Likewise, it is possible to start measuring in interactive mode and later change into automatic mode.

5.1.6 Spectrogram

In receiver mode, the R&S ESR provides a spectrogram result display for scans and for IF analysis. For both result displays, the spectrogram allows you to view and evaluate the signal characteristics over time.

5.1.6.1 How a Spectrogram Works

A spectrogram shows the spectral density of a signal in the frequency domain and over time simultaneously. It provides an overview of the spectrum over time and so allows for an easy detection of anomalies and interfering signals.

The horizontal axis represents the frequency span. The vertical axis represents time. Time in the spectrogram runs chronologically from top to bottom. Therefore, the top of the diagram is the most recently recorded data. A spectrogram also shows the power levels that have been measured. To display the level information, the R&S ESR maps different colors to each power level that has been measured.

Creating a spectrogram consists of several stages.

- Data acquisition based on the scan or the IF analysis
- Result coloring
- Data processing

The stages occur simultaneously.

Data acquisition

The spectrogram uses the traces of the scan or the IF analysis as its data basis. The data capture process is therefore the same as that of these two measurements.

Note that if you use the Scan or IF Analysis result displays, the R&S ESR saves spectrogram data even if the spectrogram result display is off.

After the data has been captured, the R&S ESR transforms the data of the traces into the spectrogram result display.

Result coloring

To get the final looks of the spectrogram, the R&S ESR applies colors to visualize the power levels in a two dimensional diagram.

Each color in the spectrogram corresponds to a particular power level that is shown in the color map in the title bar of the result display. The color the R&S ESR assigns to each power level depends on:

- the color scheme you have selected
- the (customized) color mapping settings

In the default configuration, the R&S ESR displays low power levels in 'cold' colors (blue, green etc.) and higher power levels in 'warm' colors (red, yellow etc.).

For more information, see [Chapter 5.1.6.2, "Color Map"](#), on page 152.

Data processing

Now that the data is available, the R&S ESR processes the data to display it in the spectrogram result display.

To understand the structure and contents of the spectrogram, it is best to look at it in combination with the scan or IF analysis result display. The data that is shown in the spectrogram is always based on the data of the scan or IF analysis trace.

The spectrogram is made up out of a number of horizontal lines, each one a pixel high, that are called (time) frames.

- When you use a spectrogram in combination with a scan, each frame corresponds to a single sweep of the frequency range you are scanning.
- When you use a spectrogram in combination with IF analysis, a single sweep may consist of several frames. The exact number of frames depends on the measurement time of the bargraph.

In the default state, a frame is added to the spectrogram after a sweep is done. As the spectrogram in the R&S ESR runs from top to bottom, the outdated frame(s) move down one position, so that the most recently recorded frame is always on top of the diagram.

The number of frames the R&S ESR can display simultaneously is only limited by the vertical screen size. The number of frames the R&S ESR stores in its memory is bigger. The maximum number of frames you can record is 100.000. The actual number, however, depends on the measurement configuration. With markers, you can navigate to any frame that has been saved.

Note that the contents of the spectrograms for scan and IF analysis are independent from one another: the R&S ESR saves the data you have already recorded and the current configuration when you switch to another result display. It keeps the data until you start a new measurement or the capture buffer is full.

5.1.6.2 Color Map

Colors are an important part of the spectrogram. Therefore, the R&S ESR provides various ways to customize the display for best viewing results.

You can access the Color Mapping dialog via the "Color Mapping" softkey or by tapping on the color map. For the spectrogram the R&S ESR maps power levels (dBm).

Selecting the color scheme

Before adjusting the details of the color map, you should select the color scheme you are most comfortable with. You can select from four different color schemes:

- 

The "Hot" color scheme shows the results in colors ranging from blue to red. Blue colors indicate low probabilities or levels respectively. Red colors indicate high ones.

- 

The "Cold" color scheme shows the results in colors ranging from red to blue. Red colors indicate low probabilities or levels respectively. Blue colors indicate high ones.

The "Cold" color scheme is the inverse "Hot" color scheme.

- 

The "Radar" color scheme shows the colors ranging from black over green to light turquoise with shades of green in between. Dark colors indicate low probabilities or levels respectively. Light colors indicate high ones.

- 

The "Grayscale" color scheme shows the results in shades of gray. Dark grays indicate low probabilities or levels respectively. Light grays indicate high ones.

If a result lies outside the defined range of the color map, it is colored in black at the lower end of the color range. On the upper end of the color range it is always the lightest color possible, regardless of differences in amplitude (e.g. black and blue in case of the "Cold" scheme).

Defining the Range of the Color Map

The current configuration could be a color map that you can optimize for better visualization of the measured signal, for example if the results cover only a small part of the color map. In the resulting trace, it would be hard to distinguish between values that are close together.


There are several ways to optimize the distribution of the colors over the results and then get the best viewing results.

Note that the following examples are based on the "Hot" color scheme.

The easiest way to adjust the colors is to use the color range sliders in the "Color Mapping" dialog.

In the histogram that is in the background of the color curve pane (grey bars), you can observe the distribution of measurement results. If no significant shifts in result distribution occur after evaluating this for a time, you can adjust the color map to the overall

shape of the measurement results. To do so and still cover the whole signal, move the sliders in a way that the first and last bar of the histogram are still inside the range. You can optimize the display further, if you suppress the noise by excluding the lower 10 to 20 dB of the distribution. Note that the color map has to cover at least 10% of the range of the horizontal axis.

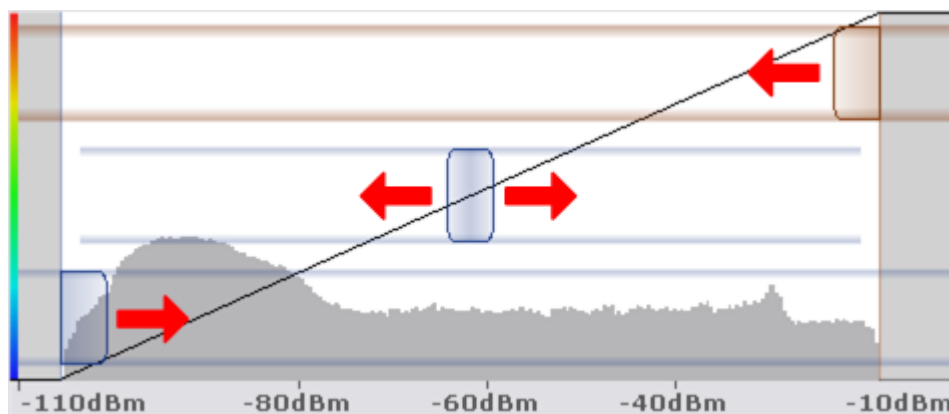

Alternatively, you can set the range in the numeric input field. In that field, you have to enter the distance from the right and left border as a percentage.

Example:

The color map starts at -100 dBm and ends at 0 dBm (i.e. a range of 100 dB). You, however, want the color map to start at -90 dBm. To do so, you have to enter 10% in the Start field. The R&S ESR shifts the start point 10% to the right, to -90 dBm.

In the spectrogram, cutting the range as far as possible is also a good way if you want to observe and put the focus on signals with a certain amplitude only. Then, only those signal amplitudes that you really want see are displayed. The rest of the display remains dark (or light, depending on the color scheme). It is also a good way to eliminate noise from the display. In the spectrogram you can do this easily by excluding the corresponding power levels at the low end of the power level distribution.

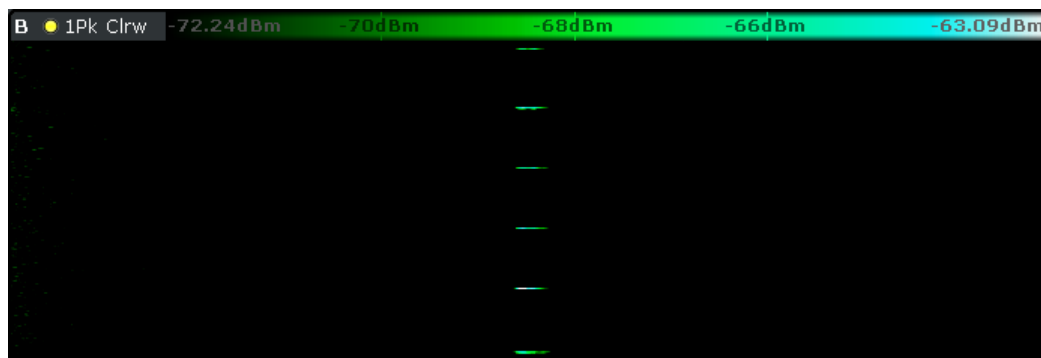


Figure 5-2: Spectrogram that shows the peaks of a pulsed signal only



Adjusting the reference level and level range

Changing the reference level and level range also affects the color scheme in the spectrogram.

Make sure, however, that you never adjust in a way that could overload the R&S ESR.

Defining the shape of the color curve

Now that the color scheme and range of the color map suit your needs, you can improve the color map even more by changing the shape of the color curve.

The color curve is a tool to shift the focus of the color distribution on the color map. By default, the color curve is linear. The color curve is linear, i.e. the colors on the color map are distributed evenly. If you shift the curve to the left or right, the distribution becomes non-linear. The slope of the color curve increases or decreases. One end of the color palette then covers a large amount results while the the other end distributes a lot of colors on relatively small result range.

You can use this feature to put the focus on a particular region in the diagram and to be able to detect small variations of the signal.

Example:



Figure 5-3: Linear color curve shape = 0

The color map above is based on a linear color curve. Colors are distributed evenly over the complete result range.



Figure 5-4: Non-linear color curve shape = -0.5

After shifting the color curve to the left (negative value), more colors cover the range from -105.5 dBm to -60 dBm (blue, green and yellow). In the color map based on the linear color curve, the same range is covered by blue and a few shades of green only. The range from -60 dBm to -20 dBm on the other hand is dominated by various shades of red, but no other colors. In the linear color map, the same range is covered by red, yellow and a few shades of green.

The result of shifting the color curve is that results in a particular result range (power levels in case of the spectrogram and densities in the case of the spectral histogram) become more differentiated.

You can adjust the color curve by moving the middle slider in the color curve pane to a place you want it to be. Moving the slider to the left shifts the focus in the direction of low values. Most of the colors in the color map are then concentrated on the low power levels (spectrogram) or densities (histogram), while only a few colors cover the upper end of the color map or high power levels or densities. Moving the slider to the right shifts the focus to the higher amplitudes or densities.

Alternatively, you can enter the shape of the color curve in the corresponding input field below the color curve pane. A value of 0 corresponds to a linear shape, negative values up to -1 shift the curve to the left, positive values up to 1 shift the curve to the right.

5.1.7 Measurement Control

Measurements in receiver mode allow you to control the course of the measurement. This way, you can make use of the automated test sequences but still be able to change the setup once the test sequence is already running.

- [Running Scans and Measurements](#)..... 156
- [Selecting the Result Display](#)..... 156
- [Bargraph Control](#)..... 157
- [Scan Control](#)..... 158
- [Final Measurement Control](#)..... 160
- [Measurement Settings](#)..... 162
- [Spectrogram Configuration](#)..... 164

5.1.7.1 Running Scans and Measurements

The [RUN SINGLE] and [RUN CONT] hardkeys initiate scans and measurements.

- RUN SINGLE starts a single scan or measurement. A single measurement lasts until the defined frequency range has been measured once under the configured conditions. When it has finished, the measurement stops.
In case of measurements in the time domain, a single measurement lasts until the defined measurement time has passed.
- RUN CONT starts a continuous scan or measurement. A continuous measurement lasts until it is interrupted or stopped.

SCPI command:

`INITiate<n>:CONTinuous` on page 641

`INITiate<n>[:IMMediate]` on page 641

5.1.7.2 Selecting the Result Display

The R&S ESR allows you to display the results in various combinations.

You can display up to three results simultaneously, for example the Bargraph, the Scan diagram and the Spectrogram.

The "Meas" menu contains the basic measurement settings and the selection of result displays.

- ▶ Press the [MEAS] key.
The R&S ESR opens the "Meas" menu.
- ▶ Press the "More Display Options" softkey.

The submenu contains more result displays.

Note that the Spectrogram is available for the Scan display and the IF Analysis. To add the Spectrogram, either Scan or IF Analysis have to be turned on already. If you are using the Scan and IF Analysis simultaneously, the Spectrogram is unavailable.

The Spectrogram of the Scan is independent of the Spectrogram available for IF Analysis and vice versa. Therefore you should regard the two Spectrograms as separate result displays. For more information see [Chapter 5.1.6, "Spectrogram"](#), on page 151.

Remote command:

[CALCulate<n>:FEED](#) on page 637

Bargraph + Scan

Shows the Bargraph and Scan result displays.

Bargraph + IF Analysis

Shows the Bargraph and IF Analysis result displays.

Bargraph

Turns the Bargraph result display on and off.

IF Analysis

Turns the IF Analysis result display on and off.

Scan

Turns the Scan result display on and off.

Spectrogram

Turns the Spectrogram result display on and off.

5.1.7.3 Bargraph Control

The "Measurement Configuration" menu contains functionality to configure the bargraph.

SCPI commands:

Querying the signal level:

["Querying bargraph results"](#) on page 644

Querying the upper and lower value of the bargraph scale:

[DISPlay:BARGraph:LEVel:LOWer?](#) on page 638

[DISPlay:BARGraph:LEVel:UPPer?](#) on page 638

Continuous Bargraph / Single Bargraph	158
Bargraph Maxhold	158
Maxhold Reset	158

Continuous Bargraph / Single Bargraph

Selects single or continuous bargraph measurements.

Continuous bargraph measurements continuously evaluate the signal level at the receiver frequency.

A single bargraph measurement evaluates the signal level at the receiver frequency once and then stops.

Remote command:

`INITiate<n>:CONTinuous` on page 641

Bargraph Maxhold

Turns the maxhold bargraph on and off. The maxhold bargraph shows the highest level that has been measured.

Remote command:

`DISPlay:BARGraph:PHOLd[:STATe]` on page 638

Maxhold Reset

Resets the maxhold bargraph.

After reset, collection of maximum values starts again.

Remote command:

`DISPlay:BARGraph:PHOLd:RESet` on page 638

5.1.7.4 Scan Control

At the start of a scan, the R&S ESR opens a softkey menu to control the measurement.

Interrupting a scan

The R&S ESR allows to interrupt a scan any time. If you interrupt it, the scan stops immediately. The scan stops at the frequency at which it was interrupted until it is continued. While the scan is stopped, the receiver settings can be changed, e.g. for a detailed analysis of the recorded trace. You have two options to continue the scan or you can abort it.

- Continue at a set receiver frequency - "Continue at Rec Frequency".
The receiver frequency can be set to a frequency that was already measured. As soon as the "Continue at Rec Frequency" softkey is pressed, the scan restarts at this frequency. This function can be used repeat part of the measurement.
- Continue at the hold frequency - "Continue at Hold"
Resumes the scan at the frequency it has been interrupted.
- Continue at a spectrogram frame - "Continue at Frame"
Resumes the scan at a spectrogram frame that was already recorded.
- Stop the scan - "Abort Scan"
Aborts the scan.

Hold Scan.....	159
Continue at Rec Frequency.....	159
Continue at Hold.....	159
Continue at Frame.....	159
Stop Scan.....	159

Hold Scan

Interrupts the scan and opens a submenu that contains functionality to control the scan.

Data that has already been collected is kept in the memory.

Remote command:

[HOLD](#) on page 640

Continue at Rec Frequency

Resumes the scan at a set receiver frequency.

After "Hold", the receiver frequency can be set to a frequency that was already measured, i.e. which is lower than the frequency at which the scan was interrupted. As soon as the "Continue at Rec Frequency" softkey is pressed, the scan restarts at this frequency. This function can be used repeat part of the measurement.

If a frequency is set that is higher than the frequency at which the scan was interrupted the scan continues at the frequency at which it was interrupted.

The scan is continued with the settings in the scan table.

Remote command:

[HOLD](#) on page 640

[\[SENSe:\] FREQuency:CENTer](#) on page 665

[INITiate<n>\[:IMMediate\]](#) on page 641

Continue at Hold

Resumes the scan at the frequency it was interrupted.

The scan is continued with the settings in the scan table.

Remote command:

[INITiate<n>:CONMeas](#) on page 640

Continue at Frame

Resumes the scan at a previously recorded spectrogram frame.

The data recorded between the selected frame and the current frame is recorded again, including minimum and maximum hold information.

Available for scans that are combined with a spectrogram measurement and the minimum or maximum hold trace mode.

Remote command:

not supported

Stop Scan

Aborts the scan.

Data that has already been collected is lost.

Remote command:

`ABORT` on page 640

5.1.7.5 Final Measurement Control

The final measurement is started in the "Test Automation" menu . The R&S ESR provides two methods to perform a final measurement: an automatic and interactive final measurement.

At the start of a final measurement, the R&S ESR opens a softkey menu to control the measurement.

The measurement configuration is as defined in the scan table.

Sequence for automatic final measurements

Generally, the automatic final measurements requires no interactions. however, the measurement can be interrupted, e.g. to change the mode or to analyze the signal in detail.

- ▶ Press the "Hold Final Measurement" softkey.

The R&S ESR interrupts the measurement. While the measurement is interrupted, the receiver settings can be changed in order to examine the signal in detail.

The interruption also changes the contents of the "Measurement" menu. Several actions are available:

- Switch the mode of the final measurement ("Automatic" or "Interactive").
- Resume the final measurement ("Measure").
The final measurement starts or continues at the next entry of the peak list.
- Abort the final measurement ("Stop Final Measurement").
The collected data is lost.

After all frequencies in the peak list have been measured, the R&S ESR opens the "Final Peak List" with the results for the final measurement.

Sequence for interactive final measurements

For an interactive final measurement, the R&S ESR initiates the following sequence.

1. The R&S ESR tunes to the first frequency in the peak list (or the next frequency).
2. The R&S ESR stops the measurement and positions a marker on the frequency.
3. If required, the frequency can be fine tuned, e.g. if the interferer has shifted. For fine tuning, the bargraph display can be used to find the new peak value.

In addition, you have several options:

- Skip the current frequency ("Skip Frequency")
Positions the marker on the next frequency in the peak list without performing a final measurement on the current frequency.
- Get maxhold result for the current frequency ("Get Maxhold")

Writes the maximum level that has been measured on this frequency during the prescan to the final peak list without performing a final measurement.

- Stop the final measurement ("Stop Final Meas")
4. The level measurement on the current frequency is initiated after you press the "Measure" softkey.
 5. After the final measurement on the current frequency is done, the R&S ESR replaces the scan result in the peak list with the result of the final measurement. If the frequency has drifted compared to the one of the prescan, it also updates the frequency in the peak list.
 6. The R&S ESR moves to the next frequency in the peak list, positions the marker on that frequency etc.
 7. After all frequencies in the peak list are finished, the R&S ESR opens the "Final Peak List" with the results for the final measurement.



Note that it is possible to start with an automatic measurement and later change into interactive mode. Likewise, it is possible to start measuring in interactive mode and later change into automatic mode.

Hold Final Measurement.....	161
Automatic Final.....	161
Interactive Final.....	161
Skip Frequency.....	162
Get Maxhold.....	162
Measure.....	162
Stop Final Measurement.....	162

Hold Final Measurement

Interrupts the final measurement and opens a submenu that contains functionality to control the final measurement.

Data that has already been collected is kept in the memory.

Remote command:

`HOLD` on page 640

Automatic Final

Selects an automatic final measurement.

See also [Chapter 5.1.5, "Final Measurement"](#), on page 150.

Remote command:

`[SENSe:] FMEasurement: AUTO` on page 643

Interactive Final

Selects interactive final measurements.

See also [Chapter 5.1.5, "Final Measurement"](#), on page 150.

Remote command:

`[SENSe:] FMEasurement: AUTO` on page 643

Skip Frequency

Skips the peak list entry the final measurement is due to measure next and proceeds with the next peak.

Available for interactive final measurements.

Remote command:

-

Get Maxhold

Uses the highest level that was measured during the scan for the final results instead of the signal level measured during the final measurement.

Remote command:

-

Measure

Initiates a final measurement on the current peak.

Available for interactive final measurements.

Remote command:

-

Stop Final Measurement

Aborts the final measurement.

Data that has already been collected is lost.

Remote command:

[ABORT](#) on page 640

5.1.7.6 Measurement Settings

The "Meas" menu contains the basic measurement settings and the selection of result displays ([Chapter 5.1.7.2, "Selecting the Result Display"](#), on page 156).

- ▶ Press the [MEAS] key.

The R&S ESR opens the "Measurement" menu.

Receiver Frequency.....	162
Bargraph Detector.....	163
L Couple to Scan Trace.....	163
Measurement Time.....	163
Demod.....	163
L Demod (On Off).....	163
L AM / FM.....	163
L Squelch.....	164
Add To Peak List.....	164
Test Automation.....	164

Receiver Frequency

Defines the receiver frequency.

The tuning frequency has to be set to at least twice the IF bandwidth.

When the tuning frequency is lower than twice the IF bandwidth, the IF bandwidth is automatically reduced so that this condition is met again.

Remote command:

`[SENSe:] FREQuency:CENTer` on page 665

Bargraph Detector

Opens a submenu to select the detector for the bargraph result display.

Each detector you select adds another bargraph to the result display. Up to four bargraphs at the same time are possible.

For more information see [Chapter 5.2.2, "Detectors"](#), on page 167.

Remote command:

`[SENSe:] DETector:RECeiver[:FUNction]` on page 639

Couple to Scan Trace ← Bargraph Detector

Couples or decouples the bargraph detector and scan detectors.

If on, the R&S ESR does as follows.

- Turns on a scan detector for every active bargraph.
If you add a new bargraph detector, the corresponding scan trace is automatically turned on.
- Matches the scan trace number to the number of the bargraph.
- Matches the color of the scan trace to a particular bargraph detector.

If you couple bargraph and scan trace, the R&S ESR replaces the detectors of all other active scan traces with the new detector type.

Remote command:

`DISPlay:BARGraph:TCOupling[:STATe]` on page 638

Measurement Time

Defines the measurement time for a scan and the bargraph.

Remote command:

`[SENSe:] SWEep:TIME` on page 639

Demod

Opens a submenu to configure AM or FM demodulation.

Demod (On Off) ← Demod

Turns demodulation at the receiver frequency on and off.

Remote command:

`[SENSe:] DEMod` on page 648

AM / FM ← Demod

Selects AM or FM demodulation.

Remote command:

`[SENSe:] DEMod` on page 648

Squelch ← Demod

Defines the minimum level for the signal to be demodulated.

For more information see [Chapter 5.2.4, "AF Demodulation"](#), on page 172.

Remote command:

Turning on the squelch:

[SENSe:] DEMod: SQUelch[:STATe] on page 649

Defining a squelch level:

[SENSe:] DEMod: SQUelch:LEVel on page 648

Add To Peak List

Adds the current receiver frequency to the peak list.

Remote command:

-

Test Automation

Opens a dialog box to configure automated test sequences.

For more information see [Chapter 5.3.7, "Test Automation"](#), on page 188.

Remote command:

-

5.1.7.7 Spectrogram Configuration

The "MeasConfig" menu contains functionality to configure the spectrogram.

The R&S ESR provides two spectrograms in receiver mode: one for scans and one for IF analysis. You can configure the spectrograms independently from one another. The R&S ESR saves the settings accordingly.

- ▶ Press the [MEAS CONFIG] key.

The R&S ESR opens the "MeasConfig" menu.

Clear Spectrogram	164
History Depth	164
Color Mapping	165
Trace to Spectrogram	165

Clear Spectrogram

Clears the contents of the spectrogram.

If you clear the spectrogram of either scan or IF analysis, the other one remains in the internal memory of the R&S ESR.

History Depth

Defines the amount of frames that the R&S ESR is able to store in its memory.


The R&S ESR can store a maximum of 100.000 frames. However, the actual size of the history buffer depends on the measurement configuration.

Using markers, you can recall the traces to any of the frames in the history buffer. The R&S ESR shows the trace to the frame the marker is currently on.

Color Mapping

Opens a dialog box to define the color map of the spectrogram.

For more information see [Chapter 5.1.6.2, "Color Map"](#), on page 152.

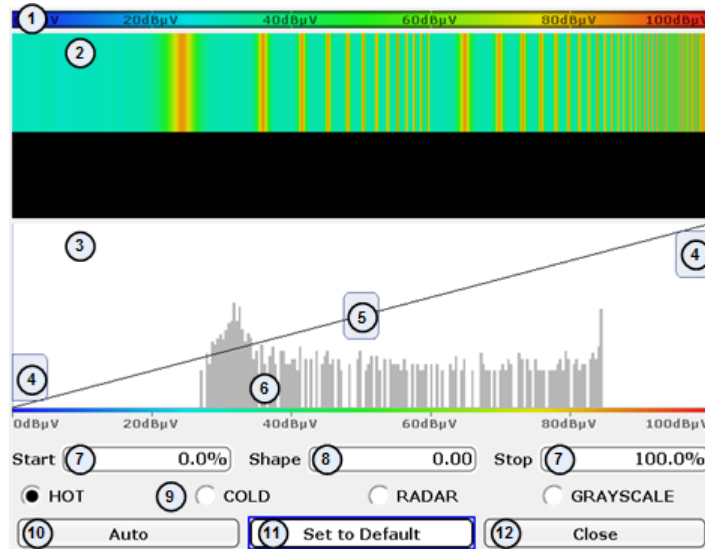

- 1 = Color map: shows the current color distribution
- 2 = Preview pane: shows a preview of the spectrogram with any changes that you make to the color scheme
- 3 = Color curve pane: graphic representation of all settings available to customize the color scheme
- 4 = Color range start and stop sliders: define the range of the color map (amplitudes for the spectrogram)
- 5 = Color curve slider: adjusts the focus of the color curve
- 6 = Histogram: shows the distribution of measured values
- 7 = Color range start and stop: numerical input to define the range of the color map
- 8 = Color curve: numerical input to define the shape of the color curve
- 9 = Color scheme selection
- 10 = Auto button: automatically sets the value range of the color map
- 11 = Default button: resets the color settings
- 12 = Close button: closes the dialog box

Remote command:

See ["Configuring Spectrograms"](#) on page 649

Trace to Spectrogram

Selects the trace the spectrogram is coupled to.

The availability depends on how many traces you are have turned on in the scan or IF analysis. You cannot assign a spectrogram to a "Blank" trace.

Remote command:

`CALCulate:SGRam:TRACe` on page 651

5.2 Measurement Basics

Measurement basics explain various terms and principles used in the context of EMI measurements. They also assist you in finding the right configuration for your measurement tasks.

• Measurement Bandwidth	166
• Detectors	167
• Trace Modes	171
• AF Demodulation	172
• V-Networks Control (LISN)	173
• Transducers	174
• Preamplifier	175
• Exported Peak List	176
• Formats for Returned Values: ASCII Format and Binary Format	177

5.2.1 Measurement Bandwidth

The measurement bandwidth ("RES BW") defines the bandwidth of the resolution filter. The RF signal is evaluated and displayed according to the bandpass characteristics of the resolution filter.

The receiver mode supports the following types of resolution filter.

- Filters with a 3 dB bandwidth (*normal filters*).
- Filters with a 6 dB bandwidth (*EMI filters*).
The 6 dB bandwidths are designed and required for EMI tests and measurements.

Note that the available bandwidth is limited by the current receiver frequency. The measurement bandwidth must be less than or equal to half of the current receiver frequency:

$$BW \leq f_{in} / 2$$



Additional 6 dB bandwidths

Installing option R&S ESR-B29 adds additional 6 dB bandwidths that are specified for and comply to MIL, DO and automotive standards.

The resolution filters are implemented as digital Gaussian bandpass filters. Concerning the attenuation characteristic, the filters behave like analog filters, but their measurement speed is much higher than the measurement speed of comparable analog filters. This is due to the fact that the transient response can be compensated because the filters have an accurately defined behavior.

The highest sensitivity is obtained at the smallest bandwidth (10 Hz). If the bandwidth is increased, the reduction in sensitivity is proportional to the change in bandwidth. Increasing the bandwidth by a factor of 3 increases the displayed noise by approx. 5 dB (4.77 dB precisely). If the bandwidth is increased by a factor of 10, the displayed noise increases by a factor of 10, i.e. 10 dB.

The higher spectral resolution with smaller bandwidths leads to longer measurement times at each frequency, because the measurement time has to allow the resolution filters to settle during a sweep at all signal levels and frequencies to be displayed.

For large measurement bandwidths, signal parts that are very far away (e.g. from a different signal) are considered in the measurement and distort the results. The displayed noise increases.

For small measurement bandwidths, the measurement time increases.



Bandwidths and detectors

If you use the Quasipeak, CISPR Average or RMS Average detector, the R&S ESR by default couples the resolution bandwidth to the receiver frequency.

If you need a different bandwidth, you can decouple the bandwidth from the frequency. When decoupled, you can select any of the supported CISPR bandwidths.

5.2.2 Detectors

The task of the detector is to determine which of the samples that have been recorded are displayed for each sweep point. The result obtained from the selected detector for a sweep point is displayed as the signal level at this frequency point in the trace.

The detectors of the R&S ESR are implemented as digital devices. All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.

The receiver mode of the R&S ESR provides several detectors, including detectors that are especially designed for and required by EMI applications.

You can use several detectors at the same time. The combined use of several detectors (multiple detection) is important for EMI measurements. This is due to specifications in the standards, for example commercial standards specify limits for quasipeak and average values. In that case, multiple detection requires only one measurement.



The R&S ESR allows you to use different detectors for the bargraph, scan and final measurement.

Maximum and Minimum peak detector

The max/min detector yields the maximum/minimum level occurred during the set measurement time. The peak detector is reset at the beginning of each measurement.

Regarding measurement time,

- unmodulated signals can be measured with the shortest possible measurement time.
- for pulses, the selected measurement time must be long enough for at least one pulse to occur during the measurement time.

The peak detectors are digital detectors. Therefore, discharging is irrelevant even with long measurement times.

Average detector

The average detector yields the average level of the samples of the samples measured during the set measurement time.

With average detection selected, the video voltage (envelope of IF signal) is averaged during the measurement time. Averaging is digital, i.e. the digitized values of the video voltage are summed up and divided by the number of samples at the end of the measurement time. This corresponds to a filtering with a rectangular window in the time domain and a filtering with $\sin x/x$ characteristic in the frequency domain.

With modulated signals the measurement time is determined by the lowest modulation frequency to be averaged. With pulse signals, the selected measurement time should be long enough for sufficient number of pulses (>10) to occur in the measurement window for averaging.

Regarding measurement time,

- with unmodulated signals the shortest possible measurement time can be selected.
- with modulated signals the measurement time is determined by the lowest modulation frequency to be averaged.
- with pulse signals, the selected measurement time should be long enough for sufficient number of pulses (>10) to occur in the measurement window for averaging.



Average and RMS detector in Time Domain Scan

Note that it is not possible to use the Average detector and the RMS detector at the same time when performing a Time Domain Scan.

RMS detector

The RMS detector evaluates the root mean square (RMS) value over the specified measurement time and displays the resulting value. The integration time is the specified measurement time.

Regarding measurement time,

- with unmodulated signals the shortest possible measurement time can be selected.
- with modulated signals the measurement time is determined by the lowest modulation frequency to be averaged.
- with pulse signals, the selected measurement time should be long enough for sufficient number of pulses (>10) to occur in the measurement window for averaging.



RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the measurement time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the measurement time should be increased to get more stable traces.

Sample detector

The sample detector displays the instantaneous value of the level at a pixel. It routes through the sampled data without any further evaluation.

The sample detector is used for IF analysis and for noise or phase noise marker calculation in analyzer mode. However, it is unreliable if the displayed span is much wider than the resolution bandwidth or if the tuning steps of the local oscillator are too large.

Quasipeak detector

The quasipeak detector yields the maximum detected value weighted to CISPR 16-1-1 that was detected during the measurement time.

Depending on the set frequency, the R&S ESR automatically selects the detectors and IF bandwidths defined for bands A, B and C/D listed in the following table:

	Band A	Band B	Band C/D
Frequency range	< 150 kHz	150 kHz to 30 MHz	> 30 MHz
Resolution bandwidth	200 Hz	9 kHz	120 kHz
Charge time constant	45 ms	1 ms	1 ms
Discharge time constant	500 ms	160 ms	550 ms
Time constant of the mechanical device	160 ms	160 ms	100 ms

The coupling of the resolution bandwidth to the frequency range with activated quasipeak detector can be cancelled using the "CISPR RBW uncoupled" softkey.

Regarding measurement time, the relatively long time constants used with quasipeak detectors entail long measurement times to obtain correct results.

- With unknown signals the measurement time should be at least 1 s. This ensures correct weighting of pulses down to a pulse frequency of 5 Hz.
- With known signals much shorter measurement times can be used. After internal switching, the R&S ESR waits until the measurement result has stabilized before it starts the actual measurement. Since the level does not change during a frequency scan, known signals (e.g. broadband RFI) can be correctly measured with a much shorter measurement time.

CISPR Average detector

The CISPR Average detector yields a weighted average signal level according to CISPR 16-1-1. The average value according to CISPR 16-1-1 is the maximum value of the linear average during the set measurement time.

The detector is used, for example, to measure pulsed sinusoidal signals with a low pulse frequency. It is calibrated with the rms value of an unmodulated sinusoidal signal. Averaging is with lowpass filters of the 2nd order (simulation of a mechanical instrument).

The lowpass time constants and the IF bandwidths are fixed depending on the frequency. The main parameters are listed in the following table:

	Band A	Band B	Band C/D	Band E
Frequency range	< 150 kHz	150 kHz to 30 MHz	30 MHz to 1 GHz	> 1 GHz
Resolution bandwidth	200 Hz	9 kHz	120 kHz	1 MHz
Time constant of the mechanical device	160 ms	160 ms	100 ms	100 ms

The coupling of the resolution bandwidth to the frequency range with activated CISPR average detector can be cancelled using the "CISPR RBW uncoupled" softkey.

Regarding measurement time, the relatively long time constants used with CISPR average and RMS average detector result in long measurement times in order to obtain a correct measurement result.

- With unknown signals the measurement time should be at least 1 s. This ensures correct weighting of pulses down to a pulse frequency of 5 Hz.
- With unmodulated sinusoidal signals as well as signals with high modulation frequency much shorter measurement times can be used.
- Slowly fluctuating signals or pulse signals require longer measurement times.



Measurement times shorter than 20 ms

With measurement times shorter than 20 ms the detector weighting changes to plain average weighting.

When you change the receiver frequency or the attenuation, the R&S ESR waits until the the lowpass filter has settled before starting the measurement. The measurement time in that case depends on the resolution bandwidth and the characteristics of the signal.

RMS Average detector

The RMS Average detector is a combination of the RMS detector (for pulse repetition frequencies above a corner frequency) and the Average detector (for pulse repetition frequencies below the corner frequency). It thus achieves a pulse response curve with the following characteristics: 10 dB/decade above the corner frequency and 20 dB/decade below the corner frequency. The average value is determined by lowpass filters of the 2nd order (simulation of a mechanical instrument).

The detector is used, for example, to measure broadband emissions and may replace the quasipeak detector in the future.

The filter bandwidth and time constants of the detector are coupled to the receiver frequency.

Table 5-1: RMS Average detector

	Band A	Band B	Band C/D	Band E
Frequency range	< 150 kHz	150 kHz to 30 MHz	30 MHz to 1 GHz	> 1 GHz
Resolution band-width	200 Hz	9 kHz	120 kHz	1 MHz
Time constant of the mechanical device	160 ms	160 ms	100 ms	100 ms
Corner frequency	10 Hz	100 Hz	100 Hz	1 kHz

Regarding measurement time, see CISPR Average detector.



Measurement times shorter than 20 ms

With measurement times shorter than 20 ms the detector weighting changes to plain RMS weighting.

5.2.3 Trace Modes

The traces can be activated individually for a measurement or frozen after a measurement has been performed. Traces that are not active are not visible. Each time the trace mode is changed, the selected trace memory is cleared.

Note that in Spectrum mode, the Max Hold and Min Hold modes are unavailable for statistics measurements.

Clear Write

Overwrite mode: the trace is overwritten by each sweep. This is the default setting. All available detectors can be selected.

Remote command:

`DISP:TRAC:MODE WRIT`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 683

Max Hold

The maximum value is determined over several sweeps and displayed. The R&S ESR saves the sweep result in the trace memory only if the new value is greater than the previous one.

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

Remote command:

`DISP:TRAC:MODE MAXH`, see `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 683

Min Hold

The minimum value is determined from several measurements and displayed. The R&S ESR saves the smallest of the previously stored/currently measured values in the trace memory.


This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

Remote command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 683

View

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S ESR automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 683

Blank

Hides the selected trace.

Remote command:

DISP:TRAC OFF, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 849

5.2.4 AF Demodulation

 CAUTION**Risk of hearing damage when using headphones**

To protect your hearing, make sure that the volume setting is not too high before putting on the headphones.

The volume for the headphones is controlled using the rotary knob next to the "AF Output" interface on the front panel of the instrument or with the [SYSTEM:SPEaker:VOLume](#) command.

The R&S ESR provides demodulators for AM and FM signals. With these demodulators, a displayed signal can be identified and monitor acoustically through the use of the internal loudspeaker or with headphones.

The R&S ESR demodulates the signal on the receiver frequency in a bandwidth corresponding to the resolution bandwidth to the audio output.

A squelch function that is linked to the video trigger defines the level that the signal must at least have to be demodulated. If you turn the squelch on, the R&S ESR automatically turns on the video trigger. The squelch level and trigger level are the same.

5.2.5 V-Networks Control (LISN)

For measurements with power lines, the R&S ESR provides functionality to directly control a line impedance stabilization network (LISN). The configuration is then taken into account in the scan and final measurement.

You can connect the LISN with an adapter (R&S EZ-27, order no. 1142.8271.02) to the userport that controls the phases during the scan and the final measurement. The R&S ESR supports several V-networks.

- Four-line V-networks
 - R&S ESH2-Z5
 - R&S ENV4200
 - R&S ENV432
- Two-line V-networks
 - R&S ESH3-Z5
 - R&S ENV216

For the R&S ENV216 network, a 150 kHz high pass filter is available for protection of the input.

After selecting the type of network, you can define the phase you want to test for interferences. Phase N and L1 are available for two-line networks. Four-line networks in addition have access to phase L2 and L3.

- During scans, you can control several phases simultaneously.
- During final measurements the R&S ESR supports the control of several phases. When you select more than one phase, the R&S ESR measures all phase combinations and determines the maximum value.

For an automatic phase selection with the networks, a connection between the R&S ESR and network has to be established with a control line. To connect the control line to the R&S ESR, adapter R&S EZ-27 is required. The following illustrations show the right PIN assignment.

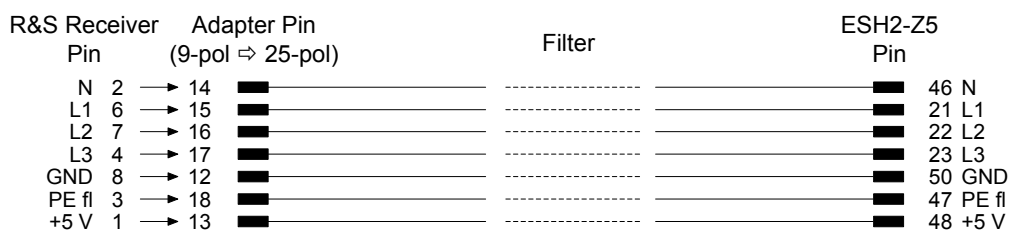


Figure 5-5: Connection from R&S ESR to R&S ESH2-Z5

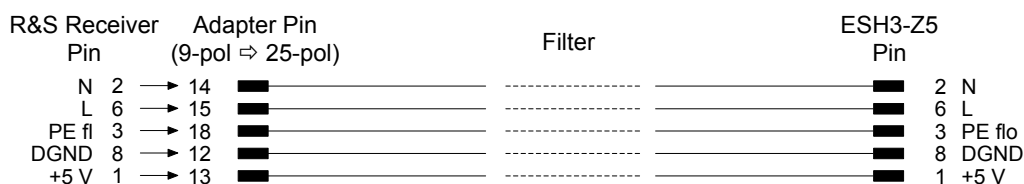


Figure 5-6: Connection from R&S ESR to R&S ESH3-Z5

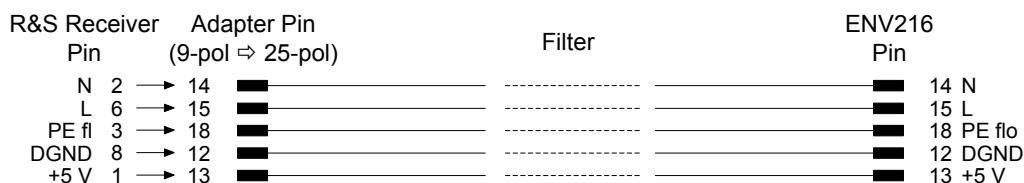


Figure 5-7: Connection from R&S ESR to R&S ESH216

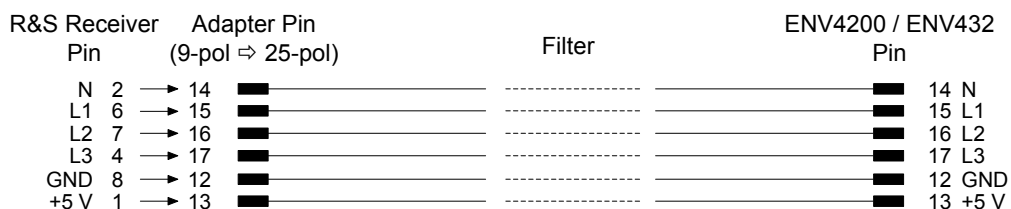


Figure 5-8: Connection from R&S ESR to R&S ENV4200 or R&S ENV432

To control the phase selection and PE simulating network of the V-Networks R&S ESH2-Z5, R&S ESH3-Z5, R&S ENV4200 and R&S ENV432, the +5 V supply voltage and some control lines have to be routed through the wall of the shielded room.

You can also use a direct connection without a filter, e.g. when you use the R&S ESR in a shielded room. In that case, you can use the following cables.

- R&S ESH2-Z5: EZ-5, EZ-13, EZ14
- R&S ESH3-Z5: EZ-6, EZ-14
- R&S ENV216: EZ14
- R&S ENV4200 and R&S ENV432: EZ-14, EZ-21

5.2.6 Transducers

A transducer is often connected ahead of the R&S ESR both during the measurement of useful signals and EMI and converts the useful or interference variable such as field strength, current or RFI voltage into a voltage across 50 Ω. Because most transducers such as antennas, probes or current probes have a characteristic frequency response, it is necessary to correct the measurement results by the frequency characteristics of the transducer. These characteristics are defined in a transducer factor or transducer sets. The transducer factor can be stored in the R&S ESR and automatically has the correct unit during level measurement.

If a transducer is switched on it is considered as part of the unit during the measurement, i.e. the measured values are displayed in the correct unit and magnitude. When working with two measurement windows, the transducer is always assigned to two windows.

The R&S ESR distinguishes between transducer factor and transducer set.

A transducer factor takes the frequency response of a single transfer element, e.g. an antenna into consideration. A transducer set can summarize different transducer factors in several subranges (several transducer factors at the same time), e.g. an antenna, a cable and a diplexer.

Transducer factors

A transducer factor takes the frequency response of a single transfer element into account. It consists of a series of reference values defined with frequency, transducer factor and the unit. For the measurement between frequency values linear or logarithmic interpolation of the transducer factor can be chosen. The transducer factor may consist of up to 625 reference values.

Transducer sets

Several transducer factors can be compiled in a transducer set provided that all factors have the same unit or unit "dB". The frequency range covered by a set can be subdivided into max. 10 subranges (each with up to 4 transducer factors) which follow each other without a gap, i.e. the stop frequency of a subrange is the start frequency of the next subrange.

The transducer factors used in a subrange have to fully cover the subrange.

The definition of a transducer set is recommended if different transducers are used in the frequency range to be measured or if a cable attenuation or an amplifier has to be taken into consideration.

If a transducer set is defined during a frequency sweep, the latter can be stopped at the interface between two transducer ranges and the user is asked to exchange the transducer.

A message informs that the limit has been reached. It is possible either to continue the sweep by confirming the message or to switch off the transducer. With the automatic switchover of the transducer used, the frequency sweep is not interrupted.

Transducer management

The R&S ESR provides functionality to store and use the transducer factors during a measurement.

For more information on creating and managing transducer factors see "[Transducer](#)" on page 507.

5.2.7 Preamplifier

Switching on the preamplifier reduces the noise figure of the R&S ESR, thus increasing the sensitivity. The preamplifier follows the preselection filters so that the risk of an

overload by strong out-of-band signals is reduced to a minimum. For frequencies between 100 Hz to 7 GHz, the signal level of the subsequent mixer is 20 dB higher so that the maximum input level is reduced by the gain of the preamplifier. For frequencies above 7 GHz, the gain is 30 dB.

The use of the preamplifier is recommended when measurements with a maximum sensitivity are to be performed. If the measurement should be performed at maximum dynamic range, the preamplifier should be switched off.

The gain of the preamplifier is automatically considered in the level display. The disadvantage of a poorer large-signal immunity (intermodulation) is reduced by the connected preselector.

5.2.8 Exported Peak List

When you export the (final) peak list, the results are saved in an ASCII file. The contents of the file are split into several sections.

- The header contains general information about the measurement and instrument settings and characteristics.
It consists of three columns, separated by a semicolon: parameter name; numeric value; unit
- The data section contains information about the evaluation of the data and the contents of the peak list.
The data section always starts with `Trace <n> [Final]:.`

Table 5-2: Example of an exported peak list with a description of the contents

Type;ESR-7;	instrument model and type
Version;1.76;	Firmware version
Date;07.May 12;	Date of the export
Mode;Receiver;	Operating mode
Start;150000.000000;Hz	Start frequency
Stop;1000000000.000000;Hz	Stop frequency
x-axis;log;	X-axis scaling
Scan count;1;	Number of scans in a single measurement
Transducer;Antenna;;;;;	Active transducer(s)
Scan <x>:	Results for scan range <x>
Start;150000.000000;Hz	Start frequency of scan range <x>
Stop;30000000.000000;Hz	Stop frequency of scan range <x>
Step;4000.000000;Hz	Frequency stepsize in scan range <x>
RBW;9000.000000;Hz	Resolution bandwidth in scan range <x>
Meas time;0.001000;s	Measurement time in scan range <x>
Auto ranging;OFF;	Autoranging state for scan range <x>

RF Att;10.000000;dB	RF attenuation level in scan range <x>
Auto Preamp;OFF;	Auto preamplification state for scan range <x>
Preamp;0.000000;dB	Preamplification state for scan range <x>
TRACE <x> FINAL	Peak list contents for trace <x> after scan [or final measurement]
Trace Mode;CLR/WRITE;	Trace mode for trace <x>
Detector;QUASI PEAK;	Detector for trace <x>
x-Unit;Hz;	Unit of the x-axis
y-Unit;dBµV;	Unit of the y-axis
Final Meas Time;1.000000;s	Final measurement time
Margin;6.000000;dB	Margin of the peaks
Value;26;	Number of result values
1;2150000.000000;84.210000;;;	Peak list entries:
1;6150000.000000;84.210000;;;	<Trace>;<Frequency>;<Level>;<DeltaLimit>;<Phase>;<Unused>
etc.	

5.2.9 Formats for Returned Values: ASCII Format and Binary Format

ASCII Format (FORMat ASCII)

The command reads out a list of comma separated values (CSV) of the measured values in floating point format.



Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

Binary Format (FORMat REAL,32)

The command reads out binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format.

Depending on the number of samples to be transferred, 2 different kinds of syntax are used:

For 10^{10} samples:

The schema of the result string is as follows:

#<NoOfDigits><NoOfDataBytes><value1><value2>...<value n>, with

#	Header prefix, 1 byte
<NoOfDigits>	Number of digits of the following number of data bytes (= 4 in the example), 1 byte
<NoOfDataBytes>	Number of following data bytes in decimal form (= 1024 in the example), 1...9 bytes
<Value>	Data values, each one is a 4-byte floating point value

Example:

```
#41024<value1><value2>...<value 256>
```

4: the following number of data bytes has 4 digits

1024: 1024 Bytes of following data; float: 4 Bytes / value => 1024 / 4 = 256 values (128 I and 128 Q values)

<value x>: 4 Byte values, must be interpreted as float

For $\geq 10^{10}$ samples:

The schema of the result string is as follows:

```
# (<NoOfDataBytes>) <value1><value2>...<value n>, with
```

#	Header prefix, 1 byte
(1 byte
<NoOfDataBytes>	number of following data bytes (= 1024 in the example), 10 bytes
)	1 byte
<Value>	Data values, each one is a 4-byte floating point value

Example:

```
#(1677721600)<value 1><value 2> ... <value 419430400>
```

(1677721600): 1677721600 Bytes of following data; float: 4 Bytes / value ==> 1677721600 / 4 = 419430400 values (200Ms I and 200Ms Q values)

<value x>: 4 Byte values, must be interpreted as float

5.3 Common Measurement Settings

- [Defining the Frequency and Span](#).....179
- [Configuring the Level Display and the RF Input](#).....181
- [Selecting the Bandwidth](#).....184
- [Configuring the Scan](#).....185
- [Configuring the Trigger](#) 186
- [Controlling Inputs and Outputs](#).....187
- [Test Automation](#)..... 188

5.3.1 Defining the Frequency and Span

The frequency and span settings define the scope of the signal to be analyzed. The settings are available in the [FREQ] and [SPAN] menus.

Span settings and signal tracking are only available for IF Analysis (firmware application R&S ESR-K56).

Receiver Frequency.....	179
Stepsize.....	179
Start / Stop Frequency.....	180
IF Span Manual.....	180
Full Span.....	180
Last Span.....	180
Signal Track.....	180

Receiver Frequency

Defines the receiver frequency.

The tuning frequency has to be set to at least twice the IF bandwidth.

When the tuning frequency is lower than twice the IF bandwidth, the IF bandwidth is automatically reduced so that this condition is met again.

Remote command:

[SENSe:] FREQuency:CENTer on page 665

Stepsize

Opens a submenu to define the receiver frequency step size.

By default, the frequency step size is coupled to the receiver frequency. Alternatively, you can define a custom step size.

"Auto Coarse"	The step size is coupled to the receiver frequency. When you change the frequency with the rotary knob, the R&S ESR increases or decreases the 4th digit of the receiver frequency. When you change the frequency with the cursor keys, the R&S ESR increases or decreases the 2nd digit of the receiver frequency.
"Auto Fine"	The step size is coupled to the receiver frequency. When you change the frequency with the rotary knob, the R&S ESR increases or decreases the 7th digit of the receiver frequency. When you change the frequency with the cursor keys, the R&S ESR increases or decreases the 5th digit of the receiver frequency.
"Stepsize Manual"	The step size is a fixed custom value. When you change the frequency with the rotary knob, the R&S ESR increases or decreases the frequency by 1 % of the manual step size. When you change the frequency with the cursor keys, the R&S ESR increases or decreases the frequency by the manual step size.
"Stepsize = Freq"	The step size is equal to the current receiver frequency. Defining a step size equal to the receiver frequency is useful during measurements of the harmonic content of a signal. Each change of the receiver frequency with the cursor key or the rotary knob selects the next harmonic.

Remote command:

[SENSe:] FREQuency:CENTer:STEP on page 665

Start / Stop Frequency

Defines the start and stop frequency for the scan.

The range for the start frequency is f_{\min} to $(f_{\max} - 10 \text{ Hz})$.

The range for the stop frequency is $(f_{\min} + 10 \text{ Hz})$ to f_{\max} .

f_{\min} and f_{\max} are defined in the datasheet.

Remote command:

Start frequency:

[SENSe:] FREQuency:START on page 666

Stop frequency:

[SENSe:] FREQuency:STOP on page 666

IF Span Manual

Defines the span for IF spectrum analysis.

The receiver (center) frequency is kept constant. Possible span values are in the range from 10 kHz to 10 MHz.

Available for IF Analysis (firmware application R&S ESR-K56).

Remote command:

[SENSe:] FREQuency:SPAN on page 825

Full Span

Restores the span to the full available frequency range.

The full span is specified in the data sheet.

In receiver mode, full span is available for IF Analysis and is limited to 10 MHz.

Remote command:

[SENSe:] FREQuency:SPAN:FULL on page 825

Last Span

Sets the span to the previous value. With this function e.g. a fast change between overview measurement and detailed measurement is possible.

Remote command:

-

Signal Track

Opens a submenu to define and enable the signal tracking:

- search bandwidth
- threshold value
- trace

Signal tracking is available for IF analysis and is defined in the [FREQ] menu. After each sweep the center frequency is set to the maximum signal found within the searched bandwidth. If no maximum signal above the set threshold value is found in the searched bandwidth, the track mechanism stops.

For a description of the softkeys of the submenu, see "[Signal Track \(span > 0\)](#)" on page 347.

5.3.2 Configuring the Level Display and the RF Input

The settings to define the level display range for the scan and to configure the RF input are available in the [AMPT] menu.

RF Atten Manual	181
Preamp On/Off	181
10 dB Min	181
Auto Range (On Off)	182
Auto Preamp (On Off)	182
Unit	182
μ dBx/MHz.....	182
Grid Range / Grid Min Level	183
Input 50 Ω/75 Ω	184

RF Atten Manual

Opens an edit dialog box to enter the attenuation.

The RF attenuation defines the level at the input mixer according to the formula:

$$\text{level}_{\text{mixer}} = \text{level}_{\text{input}} - \text{RF attenuation} + \text{RF preamplifier gain}$$

You can attenuate the signal in 5 dB steps. The range is specified in the data sheet.

Note that receiver mode, an attenuation of 10 dB or less is possible only if you turn [10 dB Min](#) off.

Note: The maximum mixer level allowed is **0 dBm**. Mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVLD" status display. The increased mixer level allows for an improved signal, but also increases the risk of overloading the instrument.

When measuring spurious emissions in spectrum mode, this softkey automatically opens the "Sweep List" dialog box, see "[Sweep List dialog box](#)" on page 289.

Remote command:

[INPut:ATTenuation](#) on page 668

Preamp On/Off

Switches the preamplifier on and off.

Remote command:

[INPut:GAIN:STATe](#) on page 669

10 dB Min

Determines whether the 10 dB setting of the attenuator may be used in the manual or automatic setting of the attenuator.

If on, the attenuation level is always at least 10 dB to protect the input mixer and avoid accidental setting of 0 dB, especially if you measure DUTs with high RFI voltage.

"10dB Min" ON is the default value, i.e. an RF attenuation of at least 10 dB is always set on the R&S ESR to protect the input mixer.

An attenuation of 0 dB cannot be set manually either. This avoids 0 dB being switched on inadvertently, particularly when DUTs with high RFI voltage are measured.

Remote command:

`INPut:ATTenuation:PROTection[:STATe]` on page 669

Auto Range (On Off)

Turns automatic configuration of the attenuation level on and off.

If off, the R&S ESR uses the manual RF attenuation that you have defined.

If on, the R&S ESR defines an attenuation level that results in a good S/N ratio without overloading the receiver stages. Note that it is possible that the R&S ESR does not utilize the maximum possible dynamic range. However, measurement results are still valid in that case, because it is ensured that performing scans does not result in an overload.

NOTICE! Risk of damage to the input mixer. If you apply a 0 dB RF attenuation in combination with auto ranging, make sure that the signal level at the RF input does not exceed the allowed limits.

Exceeding the limit might damage the input mixer.

Do not use a 0 dB attenuation under any circumstances when you measure RFI voltage (or unknown signals) in combination with an artificial network, because such a test setup generates very high pulses during phase switching.

Remote command:

`INPut:ATTenuation:AUTO` on page 668

Auto Preamp (On Off)

Turns automatic selection of the preamplifier state on and off.

If on, the R&S ESR considers the preamplifier in the autorange process. The preamplifier is cut in when the RF attenuation is reduced to the minimum settable value.

If off, the preamplifier is not considered in the autorange procedure.

Remote command:

`INPut:GAIN:AUTO` on page 669

Unit

Selects the unit displayed on the vertical axis.

The unit on the vertical axis represents the unit the results are evaluated in. You can select one of the following units: dBm, dB μ V, dBpW, dB μ A, dBmV, dBpT.

Remote command:

`CALCulate<n>:UNIT:POWer` on page 667

dBx/MHz ← Unit

Turns the display of results in units relative to a 1 MHz bandwidth on and off.

You can normalize the following units to 1 MHz.

Unit	Relative unit
dB μ V	dB μ V/MHz
dB μ V/m	dB μ V/mMHz (Available for active transducers only.)
dBmV	dBmV/MHz
dB μ A	dB μ A/MHz
dB μ A/m	dB μ A/mMHz (Available for active transducers only.)
dBpW	dBpW/MHz
dBpT	dBpT/MHz

The conversion to 1 MHz bandwidth is realized via the pulse bandwidth of the selected resolution bandwidth.

Example:

Conversion example for dB μ V:

$$P[\text{dB}\mu\text{V}/\text{MHz}] = P[\text{dB}\mu\text{V}] - 20 \cdot \log\left(\frac{B_{\text{imp}}[\text{MHz}]}{1\text{MHz}}\right)$$

P = Displayed level

B_{imp} = Pulse bandwidth of the selected RBW

If you are using another unit, replace "dB μ V" with the corresponding unit.

The conversion is also possible when a transducer defines the used unit.

Remote command:

[CALCulate<n>:UNIT:POWer](#) on page 667

Grid Range / Grid Min Level

Defines the scale of the vertical diagram axis.

The display ranges go from 10 to 200 dB in 10-dB steps. Invalid entries are rounded off to the nearest valid value.

"Grid Range" Defines the level display range for the scan diagram.

"Grid Min Level" Defines the minimum level of the display range.

Remote command:

Defining the range of the grid:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Defining the minimum level displayed on the axis:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]:BOTTom](#) on page 667

Input 50 Ω/75 Ω

Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω.

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω/50 Ω).

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

Remote command:

`INPut:IMPedance` on page 670

5.3.3 Selecting the Bandwidth

The bandwidth settings are available in the [BW] menu.

<code>Res BW Manual</code>	184
<code>CISPR RBW Uncoupled</code>	184
<code>Filter Type</code>	184
<code>IF Analysis RBW</code>	185

Res BW Manual

Opens an input field to define the measurement or resolution bandwidth.

The R&S ESR supports a selected set of resolution bandwidths. If you enter a number that is not supported, the R&S ESR rounds the value up to next available bandwidth.

You can also select some bandwidths directly with the corresponding softkeys in the "Bandwidth" menu.

For more information see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 670

CISPR RBW Uncoupled

Cancels the coupling of the IF bandwidth to the frequency range with the activated quasipeak detector, CISPR Average or RMS average detector.

See also [Chapter 5.2.2, "Detectors"](#), on page 167.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO` on page 671

Filter Type

Selects the filter type.

The available resolution bandwidths depend on the filter selection.

The R&S ESR provides the following filter types:

- **EMI CISPR / MIL**
Gaussian filter with a 6 bandwidth. 6 dB bandwidths that comply with CISPR and MIL standards are available.

- **CISPR only**
Gaussian filter with a 6 bandwidth. 6 dB bandwidths that comply with CISPR standards are available.
- **MIL Std only**
Gaussian filter with a 6 bandwidth. 6 dB bandwidths that comply with military standards are available.
- **3 dB Bandwidth**
Gaussian filter with a 3 dB bandwidth.

6 dB bandwidths correspond approximately to the pulse bandwidth..

3 dB bandwidths correspond approximately to the noise bandwidth.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE` on page 671

IF Analysis RBW

Selects the resolution bandwidth for IF spectrum analysis

Available for IF Analysis (firmware application R&S ESR-K56).

Remote command:

`[SENSe:]BANDwidth:IF` on page 670

5.3.4 Configuring the Scan

The following settings for configuring the scan are available in the [Sweep] menu.

Functions to configure measurements described elsewhere:

- "Fixed Frequency" on page 189

Run Continuous / Run Single.....	185
Edit Scan Table.....	185
Freq Axis (Lin Log).....	185

Run Continuous / Run Single

Initiates a continuous or single measurement.

See also [Chapter 5.1.7.1, "Running Scans and Measurements"](#), on page 156.

Remote command:

Selecting single and continuous measurements:

`INITiate<n>:CONTinuous` on page 641

Initiating a measurement:

`INITiate<n>[:IMMediate]` on page 641

Edit Scan Table

Opens a dialog box to create or edit a scan table.

For more information see [Chapter 5.1.3.3, "The Scan Table"](#), on page 146

Freq Axis (Lin Log)

Switches between linear and logarithmic frequency axis.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:X:SPACing](#) on page 665

5.3.5 Configuring the Trigger

The trigger settings are available in the [TRIG] menu.

External	186
Free Run	186
Video	186
Trigger Polarity	186

External

Selects an external trigger source.

The external trigger source is a TTL signal fed in at the EXT TRIG/GATE IN interface on the rear panel.

Remote command:

[TRIGger<n>\[:SEquence\]:SOURce](#) on page 839

Free Run

Selects free run mode. In free run mode, a measurement is not triggered. Once a measurement is completed, another is started immediately.

Remote command:

[TRIGger<n>\[:SEquence\]:SOURce](#) on page 839

Video

Selects the video trigger. The trigger event is a certain voltage level.

For the video triggering mode, a level line showing the trigger threshold is displayed. Using the level line, the threshold can be adjusted between 0% and 100% of the diagram height.

Video mode is only available in the time domain.

Remote command:

[TRIGger<n>\[:SEquence\]:SOURce](#) on page 839

[TRIGger<n>\[:SEquence\]:LEVel:VIDeo](#) on page 838

Trigger Polarity

Selects the polarity of the trigger source.

The scan starts after a positive or negative edge of the trigger signal. The default setting is "Pos".

The trigger polarity is unavailable for the free run trigger source.

Remote command:

[TRIGger<n>\[:SEquence\]:SLOPe](#) on page 839

5.3.6 Controlling Inputs and Outputs

The input/output settings are available in the [Input/Output] menu.

For information on the LISN control see [Chapter 5.3.7.6, "LISN Settings"](#), on page 196.

Input (AC/DC)	187
Input (1 2)	187
User Port	187

Input (AC/DC)

Toggles the RF input of the R&S ESR between AC and DC coupling.

Remote command:

[INPut:COUPling](#) on page 672

Input (1 2)

Selects the RF input the signal is applied to.

The first RF Input supports a frequency range from 9 kHz to f_{max} and an attenuation range from 0 dB to 75 dB. The second RF Input is a pulse-resistant input. It supports a frequency range from 9 kHz to 1 GHz and an attenuation range from 10 dB to 75 dB. Attenuation levels smaller than 10 dB are not possible at RF Input 2.

With option R&S ESR-B29, the minimum frequency is extended to 20 Hz at both RF inputs.

Remote command:

[INPut:TYPE](#) on page 672

User Port

The user port (AUX port) can transmit bit patterns in two directions, depending on the actual selected signal direction. The user port is available on the rear panel when you equip the R&S ESR with option R&S ESR-B5.

- "Direction" = "In" (read only)
Opens a dialog box. Select the "Read" button to read out the user port configuration. The value is displayed in the dialog box.
- "Direction" = "Out"
Select the required bit pattern by changing the state of the individual ports ("Port <x>").
See ["AUX PORT"](#) on page 38 for information about the pin assignment of the connector.
See [OUTPut:UPORt\[:VALue\]](#) on page 933 for information about the pin to bit assignment.

Remote command:

State: [INPut<ip>:UPORt:STATe](#) on page 931

State: [OUTPut:UPORt:STATe](#) on page 933

Bit pattern (query): [INPut<ip>:UPORt\[:VALue\]](#) on page 932

Bit pattern (setting): [OUTPut:UPORt\[:VALue\]](#) on page 933

5.3.7 Test Automation

The test automation settings are available in the [MEAS] and [MEAS Config] menu.

The Test Automation dialog box contains functionality to configure automated test sequences.

It is made up of several tabs, each of which contains the settings for one of the stages in an automated test sequence (see also [Chapter 5.1, "Measurements and Result Displays"](#), on page 142).

The "Peak Search" and "Run Final Test" buttons at the bottom of each of the tabs initiate the corresponding measurement function.

SCPI command:

`CALCulate<n>:PEAKsearch|PSEarch[:IMMEDIATE]` on page 680


`INITiate<n>:FMEasurement` on page 642

Peak Search

In addition to the "Peak Search" button, you can initiate a peak search with the [PEAK SEARCH] key on the R&S ESR front panel.



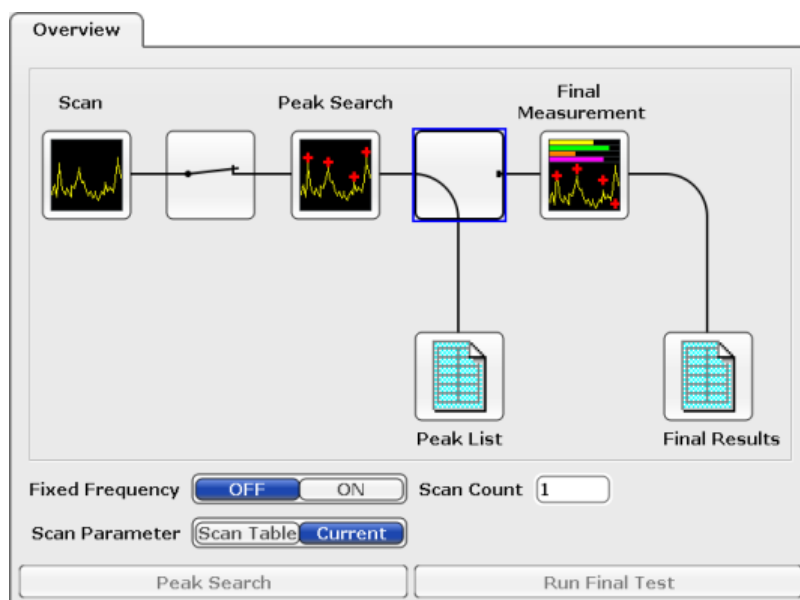


5.3.7.1 Overview

The "Overview" tab in the "Test Automation" dialog box contains general functions to configure automated test sequences.



The main part of the "Overview" tab represents a complete test sequence (scan, peak search and final measurement).

- The  item opens the [Scan Table](#) tab.

- The  item includes (blue state) or excludes (grey state) the peak search and later stages from the test sequence.
- The  item opens the [Peak Search](#) tab.
- The  item includes (blue state) or excludes (grey state) the final measurement from the test sequence. Note that if you include the final measurement, the R&S ESR automatically includes the peak search in the test sequence.
- The  item opens the [Trace / Final Meas](#) tab.
- The  item opens the peak list after the scan or the final measurement.

Below the diagram, frequency domain or time domain analysis is selected, the source for the scan parameter settings is determined, and the number of scans set.

Fixed Frequency

Selects time domain analysis (fixed frequency measurement mode, see also [Chapter 5.1.3.4, "Scan on a Fixed Frequency"](#), on page 148).

The overall measurement time for time domain analysis can be defined in a data entry field. The range is 10 μ s to 10.000 s. The value entered is rounded to next integer that is a multiple of the measurement time of a single bar graph measurement. The minimum value also depends on the set measurement time of a single bar graph measurement and is at least twice this value.

Remote command:

[\[SENSe:\] FREQuency:MODE](#) on page 666

[\[SENSe:\] SCAN:TDOMain](#) on page 647

Scan Count

Defines the number of scans performed in a single scan or the number of scans included in calculating the moving average in a continuous scan.

Remote command:

Defining the scan count:

[\[SENSe:\] SWEEp:COUNT](#) on page 673

Querying the number of started scans:

[\[SENSe:\] SWEEp:COUNT:CURRent](#) on page 673

Scan Parameter

Selects the configuration the scan is based on.

"Scan Table" The scan is performed based on the settings defined of the scan table.


"Current" The scan is performed based on the current setting of the R&S ESR.

Remote command:

not supported

5.3.7.2 Scan Table

The "Scan Table" tab in the "Test Automation" dialog box contains the scan table where parameters for the individual subranges can be set.

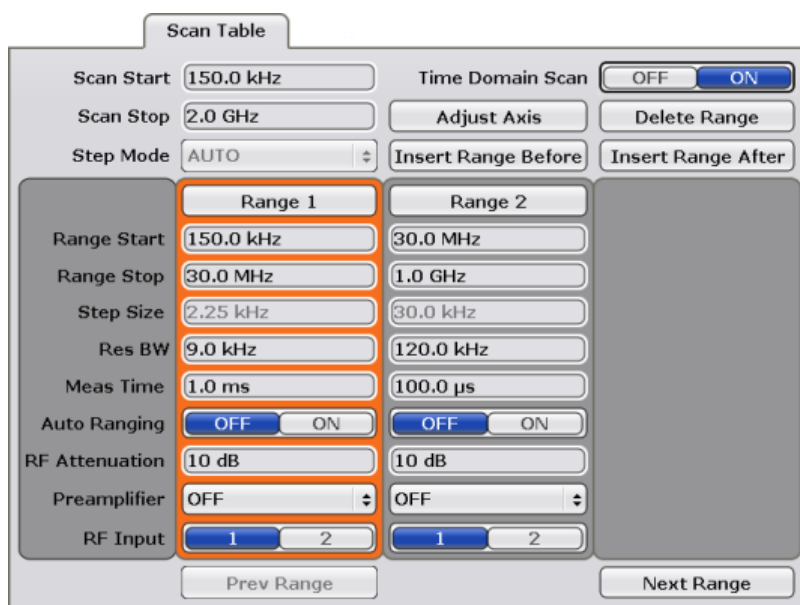

Start / Stop Frequency..... 190
 Step Mode..... 190
 Time Domain Scan (On Off)..... 191
 Adjust Axis..... 191
 Insert Range Before / After..... 191
 Delete Range..... 191
 Range 1 to 10..... 191
 Prev / Next Range..... 192

Start / Stop Frequency

Defines the start and stop frequency for the scan.

The range for the start frequency is f_{min} to $(f_{max} - 10 \text{ Hz})$.

The range for the stop frequency is $(f_{min} + 10 \text{ Hz})$ to f_{max} .

f_{min} and f_{max} are defined in the datasheet.

Remote command:

Start frequency:

[SENSe:] FREQuency: START on page 666

Stop frequency:

[SENSe:] FREQuency: STOP on page 666

Step Mode

Selects the mode for frequency steps.

Note that the frequency stepsize for time domain scans (R&S ESR-K53) is always selected automatically.

"AUTO" Linear frequency steps.
 The stepsize is coupled to the current resolution bandwidth and is about a third of the resolution bandwidth. In this way, the probability to detect all signals in the scan range is very good.

"LIN"	Linear frequency steps. The stepsize is fix and depends on the Stepsize .
"LOG"	Logarithmic frequency steps. The stepsize is a percentage of the current frequency.

Remote command:

[[SENSe:] SWEep:SPACing on page 678

Time Domain Scan (On Off)

Turns the time domain scan on and off.

For more information see [Chapter 5.1.3.2, "Time Domain Scans in the Frequency Domain"](#), on page 146.

Note that time domain scans are available with option R&S ESR-K53.

Remote command:

[SENSe:] FREQuency:MODE on page 666

Adjust Axis

Adjusts the scale of the horizontal axis if the overall scan range is different than the scan range defined by the scan subranges.

Remote command:

not supported

Insert Range Before / After

Inserts a new scan range before or after the currently selected range.

Except for the start and stop frequencies, the configuration of the new scan range is the same as the one that has been selected previously. The selected range is highlighted in orange.

Remote command:

The suffix at `SCAN<range>` of the commands listed in [Chapter 11.4.6.2, "Scan Table"](#), on page 674 defines the ranges.

Delete Range

Deletes the currently selected scan range.

Remote command:

not supported

Range 1 to 10

Configures the currently selected scan range.

You can use and configure up to 10 individual scan ranges. For each range you can customize the following parameters.

- Range Start / Range Stop
- Frequency Stepsize
- Resolution Bandwidth
- Meas Time
- Auto Ranging
- RF Attenuation
- Preamplifier

- Receiver Input

For more information see [Chapter 5.1.3.3, "The Scan Table"](#), on page 146.

Remote command:

See [Chapter 11.4.6.2, "Scan Table"](#), on page 674

RF input:

`INPut:TYPE` on page 672

Prev / Next Range


Selects the scan range to the left or right of the currently selected scan range.

Remote command:

not supported

5.3.7.3 Peak Search

The "Peak Search" tab in the "Test Automation" dialog box contains functionality to control the peak search.

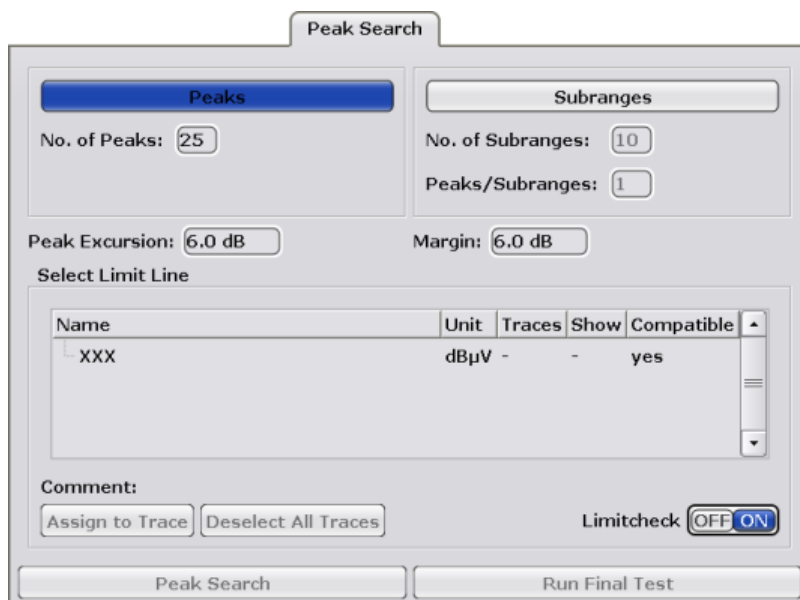

[Peak Search Mode \(Peaks Subranges\)](#)..... 192

[No Of Peaks](#)..... 193

[No of Subranges / Peaks per Subrange](#)..... 193

[Peak Excursion](#)..... 193

[Margin](#)..... 193

[Select Limit Line](#)..... 193

Peak Search Mode (Peaks Subranges)

Selects the peak search mode.

- "Peaks" Looks for a particular number of peaks over the complete scan range.
- "Subranges" Divides the scan range into smaller subranges and looks for a particular number of peaks in each subrange.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:METHOD](#) on page 680

No Of Peaks

Defines the number of peaks the R&S ESR looks for during a peak search.

The range is from 1 to 500 peaks.

The number of peaks only takes effect if the peak search mode is "Peaks".

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:SUBRanges](#) on page 680

No of Subranges / Peaks per Subrange

Defines the number of subranges for a subrange peak search and the number of peaks that the R&S ESR looks for in each subrange.

Note that the maximum number of peaks is 500. Thus, the maximum number of peaks per subrange depends on the number of subranges you have defined.

These parameters only take effect if the peak search mode is "Subranges".

Remote command:

Number of subranges:

[CALCulate<n>:PEAKsearch|PSEarch:SUBRanges](#) on page 680

Peaks per subrange:

[CALCulate<n>:PEAKsearch|PSEarch:SUBRanges:PCount](#) on page 681

Peak Excursion

Defines the relative signal level to determine a peak during a peak search.

For more information see [Chapter 5.1.4, "Peak List and Data Reduction"](#), on page 148.

Remote command:

[CALCulate<n>:MARKer<m>:PEXCursion](#) on page 679

Margin

Defines an additional level margin relative to a limit line that is considered during a peak search.

For more information see [Chapter 5.1.4, "Peak List and Data Reduction"](#), on page 148.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:MARGIN](#) on page 680

Select Limit Line

Applies one or more limit lines for the peak search.

For more information on limit lines see [Chapter 5.4.3, "\(Limit\) Lines"](#), on page 208.


"Assign to Trace" Assigns the limit line to one or more traces.

"Deselect all Traces"

"Limitcheck (On Off)" Turns the limit check on and off.

5.3.7.4 Peak Lists

The peak list dialog box is available for the prescan results and the final measurement results. Both dialog boxes contain the same elements.

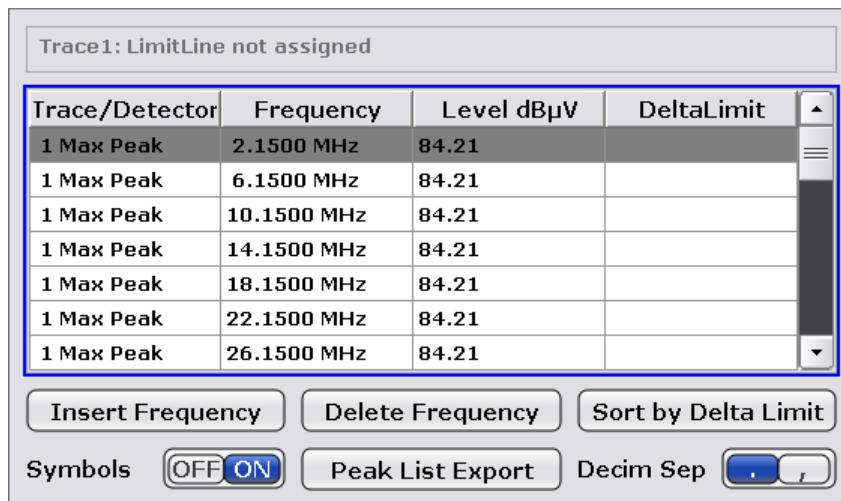

Peak List.....	194
Insert Frequency.....	194
Delete Frequency.....	194
Sort by Delta Limit.....	195
Symbols (On Off).....	195
Peak List Export.....	195

Peak List

Contains information about the peaks that were found during the peak search.

- **Trace / Detector**
Shows the number of trace that the peak is on and the detector with which the peak has been measured.
- **Frequency**
Shows the frequency of the peak level.
- **Level**
Shows the signal level of the peak. The unit depends on the one you have selected.
- **Delta Limit**
Shows the distance of the peak to a limit line. The delta limit is only calculated if you have activated a limit line and have assigned it to one more traces.

Insert Frequency

Adds a new frequency to the peak list that is considered in the next scan.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:ADD](#) on page 679

Delete Frequency

Deletes the currently selected peak list table row (grey highlighting).

Remote command:
not supported

Sort by Delta Limit

Sort the entries of the peak list according to the delta limit results.

The delta limit is the distance of a peak to a limit line, if one has been assigned.

Remote command:
not supported

Symbols (On Off)

Turns the labels on the peak position in the diagram on and off.

The peak labels have a different color and shape depending on the trace they are on. Trace 1, for example, has red crosses as the peak label. By default they are on.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:SYMBOL` on page 682

Peak List Export

Opens a dialog box to export and save the contents of the peak list in ASCII format to a *.dat file.

The file consists of a header and the results of the scan or the final measurement.

- The header is a list of general instrument settings and characteristics. It consists of three columns, each column separated by a semicolon: <parameter>;<value>;<unit>.
- The results are split into several data sections, one for each active trace. The data section begins with the entry `Trace <x> [Final]:`, followed by the trace characteristics and the peak list data itself.

For a description of the data see [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399 .

By default, decimal places are separated by a point in the exported list. If required, you can use a comma instead of a point as the decimal separator.

Remote command:

Export the peak list of the scan results:

`MMEMoRY:STORe:PEAKlist` on page 682

Export the peak list of the final measurement:

`MMEMoRY:STORe:FINAl` on page 682

Select the decimal separator:

`FORMat:DEXPort:DSEParator` on page 850

5.3.7.5 Trace / Final Meas

The Trace / Final Meas tab in the Test Automation dialog box contains functionality to configure the traces for the scan and the final measurement.

Final Measurement Time	196
Interactive Mode	196
Trace 1 to 6	196

Final Measurement Time

Defines the measurement time for the final measurement.

The measurement time is the time during which the R&S ESR measures the input signal and forms a measurement result weighted by the selected detector. The measurement time does not include settling times of the synthesizer and the IF filter. The R&S ESR automatically waits until transients are over.

Interactive Mode

Turns interactive final measurements on and off.

Remote command:

`[SENSe:] FMEasurement:AUTO` on page 643

Trace 1 to 6

Selects the characteristics of each trace.

In addition to the trace mode, you can select a detector for the scan and the final measurement. For more information see

- [Chapter 5.1.3, "Scans"](#), on page 144
- [Chapter 5.1.5, "Final Measurement"](#), on page 150
- [Chapter 5.2.3, "Trace Modes"](#), on page 171
- [Chapter 5.2.2, "Detectors"](#), on page 167

Note: When you select detector type "None" for the final measurement, the R&S ESR ignores peaks found on the corresponding trace during the final measurement.

Remote command:

Trace mode:

`DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 683

Scan detector:

`[SENSe:] [WINDow:] DETector<trace>[:FUNction]` on page 683

Final measurement detector:

`[SENSe:] DETector<t>:FMEasurement` on page 642

5.3.7.6 LISN Settings

The "LISN Settings" tab in the "Test Automation" dialog box contains functionality to control line impedance networks.



LISN Type..... 197
 Prescan Phase..... 197
 Final Test Phase..... 197
 150 kHz Highpass Filter..... 198

LISN Type

Selects the V-network to be controlled via the user port.

For more information see [Chapter 5.2.5, "V-Networks Control \(LISN\)"](#), on page 173.

Remote command:

For the scan:

`INPut:LISN[:TYPE]` on page 686

For the final measurement:

`[SENSe:]FMEasurement:LISN[:TYPE]` on page 685

Prescan Phase

Selects the phase of the network you want to control during the scan.

During the scan, you can control more than one phase at a time.

For more information see [Chapter 5.2.5, "V-Networks Control \(LISN\)"](#), on page 173.

Remote command:

`INPut:LISN:PHASe` on page 686

Final Test Phase

Selects the phase of the network you want to control during the final measurement.

During the final measurement you can control more than one phase.

For more information see [Chapter 5.2.5, "V-Networks Control \(LISN\)"](#), on page 173.

Remote command:

`[SENSe:]FMEasurement:LISN:PHASe` on page 684

150 kHz Highpass Filter

Turns the highpass filter available with the R&S ENV216 network on and off.

For more information see [Chapter 5.2.5, "V-Networks Control \(LISN\)"](#), on page 173.

Remote command:

Highpass filter for the scan:

`INPut:LISN:FILTer:HPAS[:STATe]` on page 685

Highpass filter for the final measurement:

`[SENSe:]FMEasurement:LISN:FILTer:HPAS[:STATe]` on page 684

5.4 Common Analysis Functions

5.4.1 Trace Configuration

The TRACE key is used to configure the data acquisition for measurement and the analysis of the measurement data.

The R&S ESR is capable of displaying up to six different traces at a time in a diagram. A trace consists of a maximum of 691 displayed measurement points on the horizontal axis (frequency or time). If more measured values than measurement points are available, several measured values are combined in one displayed measurement point.

The trace functions include the following:

- Display mode of the trace
For details on trace modes see [Chapter 5.2.3, "Trace Modes"](#), on page 171.
- Evaluation of individual measurement points of a trace. For details on detectors see [Chapter 5.2.2, "Detectors"](#), on page 167.

To open the Trace menu

- Press the TRACE key.
The "Trace" menu is displayed.

Further information

- [Chapter 5.2.3, "Trace Modes"](#), on page 171
- [Chapter 5.2.2, "Detectors"](#), on page 167
- [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399

Tasks

- [Chapter 6.3.1.2, "Configuring Traces"](#), on page 395
- [Chapter 6.3.1.3, "Specifying the Trace Settings"](#), on page 397

The following table shows all softkeys available in the "Trace" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available

with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Trace 1 - 6.....	199
More Traces.....	199
Copy Trace.....	199
Trace Wizard.....	199
ASCII Trace Export.....	199
Decim Sep.....	200

Trace 1 - 6

Opens a submenu to select the trace mode and detector (for both scan and final measurement).

For more information see [Chapter 5.2.2, "Detectors"](#), on page 167 and [Chapter 5.2.3, "Trace Modes"](#), on page 171.

Note: When you select detector type "None" for the final measurement, the R&S ESR ignores peaks found on the corresponding trace during the final measurement.

Remote command:

Selecting the trace mode:

`DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 683

Selecting the detector for the scan:

`[SENSe:] [WINDow:] DETector<trace>[:FUNction]` on page 853

Selecting the detector for the final measurement:

`[SENSe:] DETector<t>:FMEasurement` on page 642

More Traces

Opens a submenu to select one of the traces not currently displayed in the main menu.

Copy Trace

Opens an edit dialog box to enter the number of the trace memory in which the currently selected trace will be copied.

Remote command:

`TRACe<n>:COPY` on page 854

Trace Wizard

Opens the "Trace Wizard" dialog box.

For more information see [Chapter 5.3.7.5, "Trace / Final Meas"](#), on page 195.

ASCII Trace Export

Opens the "ASCII Trace Export Name" dialog box and saves the active trace in ASCII format to the specified file and directory.

Tip: You can export a single trace ("ASCII Trace Export Trace (x)" softkey) or all traces at the same time ("ASCII Trace Export All Traces"). When you use single trace export, the R&S ESR exports the currently selected trace (indicated by the softkey label). Note that the exported ASCII file has a slightly different structure compared to a single trace export.

The file consists of the header containing important scaling parameters and a data section containing the trace data. For details on an ASCII file see [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see ["Decim Sep"](#) on page 200).

If the spectrogram display is selected when you perform this function, the entire histogram buffer with all frames is exported to a file. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded. For large history buffers the export operation may take some time.

Remote command:

[FORMat:DEXPort:TRACes](#) on page 646

[FORMat:DEXPort:DSEParator](#) on page 850

[MMEMory:STORe<n>:TRACe](#) on page 851

[MMEMory:STORe:SGRam](#) on page 652

Decim Sep

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 850

5.4.2 Markers

5.4.2.1 Controlling Markers

The markers are used for marking points on traces, reading out measurement results and for selecting a display section quickly. The R&S ESR provides 16 markers per trace.

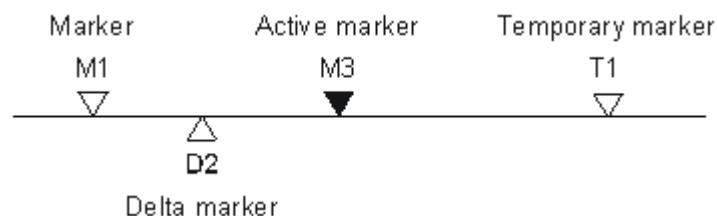


Figure 5-9: Marker types

All markers can be used either as markers or delta markers. The marker that can be moved by the user is defined in the following as the active marker. Temporary markers are used in addition to the markers and delta markers to evaluate the measurement results. They disappear when the associated function is deactivated.

The measurement results of the active marker (also called marker values) are displayed in the marker field, which is located at the upper right corner of the diagram, or in a separate table beneath the diagram. The marker information includes the following:

- marker type (M1 in the example)
- trace in square brackets ([1] in the example)
- level (-33.09 dBm in the example)
- marker location (3 GHz in the example)

```
M1[1]           -33.09 dBm
                3.000000000 GHz
```

Figure 5-10: Marker values

The MKR key is used to select and position the absolute and relative measurement markers (markers and delta markers). In addition, the functions for the frequency counter, a fixed reference point for relative measurement markers, and for enlargement of the measurement area are assigned to this key.

To open the Marker menu

- Press the MKR key.
The "Marker" menu is displayed. If no marker is active, marker 1 is activated and a peak search on the trace is carried out. Otherwise, the edit dialog box for the last activated marker is opened and the current frequency/time value is displayed.

Further information

- ["Displayed Marker Information"](#) on page 410
- [Chapter 5.4.2.2, "Positioning Markers"](#), on page 204.

Tasks

- ["Basic Marker Functions"](#) on page 408

Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta

The "Marker X" softkey activates the corresponding marker and opens an edit dialog box to enter a value for the marker to be set to. Pressing the softkey again deactivates the selected marker.

If a marker value is changed using the rotary knob, the step size is defined via the [Stepsize Standard](#) or [Stepsize Sweep Points](#) softkeys.

Marker 1 is always the reference marker for relative measurements. If activated, markers 2 to 16 are delta markers that refer to marker 1. These markers can be converted into markers with absolute value display using the "Marker Norm/Delta" softkey. If marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker.

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 695

[CALCulate<n>:MARKer<m>:X](#) on page 695

[CALCulate<n>:MARKer<m>:Y](#) on page 696

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 701

[CALCulate<n>:DELTAmarker<m>:X](#) on page 702

[CALCulate<n>:DELTAmarker<m>:X:RELative?](#) on page 702

[CALCulate<n>:DELTAmarker<m>:Y](#) on page 703

More Markers

Opens a sub-menu to select one of up to 16 available markers. See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201.

Marker to Trace

Opens an edit dialog box to enter the number of the trace on which the marker is to be placed.

Remote command:

[CALCulate<n>:MARKer<m>:TRACe](#) on page 695

[CALCulate<n>:DELTAmarker<m>:TRACe](#) on page 701

Marker Wizard

Opens a configuration dialog for markers. The marker wizard allows you to configure and activate up to 16 different markers in one dialog. The first 8 markers are displayed on one tab, the last 8 markers on a second tab. For each marker, the following settings are available:



"Selected/State" When you press the "Selected" or "State" field the corresponding marker is activated and the marker row is highlighted.

"Normal/Delta" Defines whether it is a normal marker or delta marker. For delta markers you can define a reference marker.

"Ref. Marker" Reference marker for delta markers. The marker values for the delta marker are indicated relative to the specified reference marker. The reference marker can either be another active marker, or a fixed reference marker ("FXD", see ["Ref Fixed"](#) on page 419).

"Trace" Trace for which the marker is to be set.

Remote command:

[CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 695

[CALCulate<n>:DELTAmarker<m>\[:STATe\]](#) on page 701

[CALCulate<n>:MARKer<m>:TRACe](#) on page 695

[CALCulate<n>:DELTAmarker<m>:TRACe](#) on page 701

[CALCulate<n>:DELTAmarker<m>:MREF](#) on page 867

All Marker Off ← Marker Wizard

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

Remote command:

[CALCulate<n>:MARKer<m>:AOFF](#) on page 691

All Marker Off

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

Remote command:

[CALCulate<n>:MARKer<m>:AOFF](#) on page 691

Marker Table

Defines how the marker information is displayed.

For more information, see [Displayed Marker Information](#).

"On" Displays the marker information in a table in a separate area beneath the diagram.

"Off" Displays the marker information within the diagram area.

"Aut" (Default) The marker table is displayed automatically if more than 2 markers are active, and removed if only 1 or 2 markers are active. This helps keep the information in the display clear.

Remote command:

[DISPlay:MTABLE](#) on page 866

Marker Info (On Off)

Turns the numerical marker information in the diagram area on and off.

Remote command:

[DISPlay\[:WINDow<n>\]:MINFo:STATe](#) on page 690

Tune to Marker

Defines the marker frequency as the new center frequency.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTion:CENTer](#) on page 688

Marker Track

Turns marker frequency tracking on and off.

If on, the R&S ESR changes the center frequency to the marker frequency when you change the marker position.

Remote command:

`CALCulate<n>:MARKer<m>:COUPled[:STATe]` on page 687

Marker to Stepsize

Matches the [frequency stepsize](#) to the marker frequency.

Example:

If the marker is positioned on a frequency of 1.25 MHz, the frequency stepsize is 1.25 MHz.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:CSTep` on page 688

Settings Coupled

Couples or decouples the receiver settings to the scan range settings when you use "Marker Tracking".

If on, the R&S ESR changes the receiver settings according to the scan range the marker frequency is currently in.

Remote command:

`CALCulate<n>:MARKer<m>:SCOupled[:STATe]` on page 689

5.4.2.2 Positioning Markers

The MKR → key is used for search functions of measurement markers, assignment of the marker frequency as center frequency, restriction of the search area and characterization of maxima and minima. For details on markers in general, see [Chapter 5.4.2.1, "Controlling Markers"](#), on page 200.

To open the Marker To menu

- Press the MKR -> key.
The "Marker To" menu is displayed. If no marker is active, marker 1 will be activated and a peak search on the trace carried out. Otherwise, the edit dialog box for the last activated marker is opened and the current frequency/time value is displayed.

Further information

- ["Effect of Different Peak Excursion Settings \(Example\)"](#) on page 414

Tasks

- ["Searching for a Maximum"](#) on page 413
- ["Searching for a Minimum"](#) on page 413

- ["Specifying the Search Limits"](#) on page 413
- ["Specifying the Search Range"](#) on page 413
- ["Examining a Signal at the Center in Detail"](#) on page 413
- ["Specifying the Suitable Peak Excursion"](#) on page 414

Select Marker (No)

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta"](#) on page 201). "(No)" indicates the number of the currently active marker.

Peak

Sets the active marker/delta marker to the highest maximum of the trace.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 692

[CALCulate<n>:DELTAmarker<m>:MAXimum\[:PEAK\]](#) on page 699

Next Peak

Sets the active marker/delta marker to the next maximum of the selected trace.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) on page 692

[CALCulate<n>:DELTAmarker<m>:MAXimum:NEXT](#) on page 698

Min

Sets the active marker/delta marker to the minimum of the selected trace.

Remote command:

[CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) on page 694

[CALCulate<n>:DELTAmarker<m>:MINimum\[:PEAK\]](#) on page 700

Next Min

Sets the active marker/delta marker to the next minimum of the selected trace.

Remote command:

[CALCulate<n>:MARKer<m>:MINimum:NEXT](#) on page 693

[CALCulate<n>:DELTAmarker<m>:MINimum:NEXT](#) on page 700

Next Mode

Selects the mode of the [Next Peak](#) or [Next Min](#) softkey.

Three settings are available:

- | | |
|---|--|
| "<" | Sets the active marker/delta marker to the next maximum/minimum left to the marker of the selected trace. |
| "abs" | Sets the active marker/delta marker to the next lower maximum/higher minimum of the selected trace. |
| <td>Sets the active marker/delta marker to the next maximum/minimum right to the marker of the selected trace.</td> | Sets the active marker/delta marker to the next maximum/minimum right to the marker of the selected trace. |

Remote command:

Next Peak:

CALC:MARK:MAX:LEFT (<): CALCulate<n>:MARKer<m>:MAXimum:LEFT
on page 691

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT on page 698

CALC:MARK:MAX:RIGH (>): CALCulate<n>:MARKer<m>:MAXimum:RIGHT
on page 693

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT on page 699

CALC:DELT:MAX:NEXT (abs): CALCulate<n>:MARKer<m>:MAXimum:NEXT
on page 692

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT on page 698

Next Min:

CALC:MARK:MIN:LEFT (>): CALCulate<n>:MARKer<m>:MINimum:LEFT
on page 693

CALCulate<n>:DELTamarker<m>:MINimum:LEFT on page 699

CALC:MARK:MIN:RIGH (>): CALCulate<n>:MARKer<m>:MINimum:RIGHT
on page 694

CALCulate<n>:DELTamarker<m>:MINimum:RIGHT on page 700

CALC:MARK:MIN:NEXT (abs): CALCulate<n>:MARKer<m>:MINimum:NEXT
on page 693

CALCulate<n>:DELTamarker<m>:MINimum:NEXT on page 700

Search Limits

Opens a submenu to set the limits for maximum or minimum search in the x and y direction.

Remote command:

CALCulate<n>:MARKer<m>:X:SLIMits[:STATE] on page 690

Left Limit ← Search Limits

Opens an edit dialog box to enter a value for the lower limit (left vertical line: S1 for span > 0; T1 for zero span). The search is performed between the lines of the left and right limit (see also [Right Limit](#) softkey).

Remote command:

CALCulate<n>:MARKer<m>:X:SLIMits:LEFT on page 689

Right Limit ← Search Limits

Opens an edit dialog box to enter a value for the upper limit (left vertical line: S2 for span > 0; T2 for zero span). The search is performed between the lines of the left and right limit (see also [Left Limit](#) softkey). If no value is set, the upper limit corresponds to the stop frequency.

Remote command:

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT on page 689

Threshold ← Search Limits

Opens an edit dialog box to define the threshold line. The threshold line represents the lower level limit for a "Peak" search and the upper level limit for a "Min" search.

Remote command:

`CALCulate<n>:THReshold:STATe` on page 865

`CALCulate<n>:THReshold` on page 865

Use Zoom Limits ← Search Limits

Restricts the marker search to the zoomed area.

Note that the marker zoom is only available in Spectrum mode.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM` on page 864

Search Lim Off ← Search Limits

Deactivates all limits of the search range.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]` on page 690

`CALCulate<n>:THReshold:STATe` on page 865

Peak Excursion

Opens an edit dialog box for level measurements to enter the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions. Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

Remote command:

`CALCulate<n>:MARKer<m>:PEXCursion` on page 679

5.4.2.3 Markers in Spectrograms

In addition to the marker functionality described above, spectrograms support the following marker positioning functionality.

Search Mode.....	207
L Next Mode X.....	207
L Next Mode Y.....	208
L Marker Search Type.....	208
L Select Search Area.....	208

Search Mode

Opens a submenu to select the marker search mode.

Next Mode X ← Search Mode

Sets the search mode for the marker peak search if a search in the x-direction is active. Three modes are available:

"<"	Sets the active marker/delta marker to the next maximum/minimum left of the marker of the selected trace.
"abs"	Sets the active marker/delta marker to the next lower maximum/higher minimum of the selected trace.
">"	Sets the active marker/delta marker to the next maximum/minimum right of the marker of the selected trace.

Remote command:

See [Chapter 11.4.1.8, "Spectrogram Control"](#), on page 649

Next Mode Y ← Search Mode

Sets the search mode for the marker peak search if a search in the y direction is active. Three modes are available:

"up"	Places the active marker or deltamarker to the next peak value above the current marker position.
"abs"	Places the active marker or deltamarker to the next peak either to the left or to the right of the current position.
"dn"	Places the active marker or deltamarker to the next peak value below the current marker position.

Remote command:

See [Chapter 11.4.1.8, "Spectrogram Control"](#), on page 649

Marker Search Type ← Search Mode

Opens a dialog box to select the marker search direction.

- **X Search**
Performs a search in the currently selected frame.
- **Y Search**
Performs a search on the marker frequency (span > 0) or time (span = 0) over all captured frames.
- **XY Search**
Performs a search in the frequency domain (span >0) or time domain (span=0) and over all captured frames at the same time.
An XY Search is possible for searches that are independent on direction (< and >)

Select Search Area ← Search Mode

Opens a dialog box to specify the search area.

- **Visible**
Performs a search in the visible Spectrogram area only.
Note that if the Spectrogram is not visible for any reason (e.g. if the Spectrum Analyzer is in full screen mode), the search area is the data stored in the memory.
- **Memory**
Performs a search over all captured frames that are stored in the memory of the R&S ESR

Remote command:

[CALCulate<n>:MARKer<m>:SGRam:SARea](#) on page 654

5.4.3 (Limit) Lines

The [LINES] key is used to configure limit and display lines.

To open the Lines menu

- Press the [LINES] key.

The "Lines" menu and the "Select Limit Line" dialog box are displayed. For details on the "Select Limit Line" dialog box refer to [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215.

Menu and softkey description

- [Chapter 5.4.3.1, "Softkeys of the Lines Menu"](#), on page 209

Further information

- [Chapter 5.4.3.2, "Display Lines"](#), on page 213
- [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214

Tasks

- [Chapter 5.4.3.4, "Working with Lines"](#), on page 215
- [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215
- [Chapter 5.4.3.6, "Creating a New Limit Line"](#), on page 216
- [Chapter 5.4.3.7, "Editing an Existing Limit Line"](#), on page 219
- [Chapter 5.4.3.8, "Creating a New Limit Line Based upon an Existing Limit Line"](#), on page 219
- [Chapter 5.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 220

5.4.3.1 Softkeys of the Lines Menu

The following table shows all softkeys available in the "Lines" menu.

(Lines are only available for RF measurements.)

Further information

- [Chapter 5.4.3.2, "Display Lines"](#), on page 213
- [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214

Tasks

- [Chapter 5.4.3.4, "Working with Lines"](#), on page 215
- [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215
- [Chapter 5.4.3.6, "Creating a New Limit Line"](#), on page 216
- [Chapter 5.4.3.7, "Editing an Existing Limit Line"](#), on page 219
- [Chapter 5.4.3.8, "Creating a New Limit Line Based upon an Existing Limit Line"](#), on page 219
- [Chapter 5.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 220

Select Traces to check.....	210
Deselect All.....	210
New.....	210
L Edit Name.....	210
L Edit Comment.....	210

L Edit Margin.....	211
L Edit Value.....	211
L Insert Value.....	211
L Delete Value.....	211
L Save Limit Line.....	211
Edit.....	211
Copy to.....	211
Delete.....	212
X Offset.....	212
Y Offset.....	212
Display Lines.....	212
L Display Line 1 / Display Line 2.....	212
L Frequency Line 1 / Frequency Line 2.....	213
L Time Line 1 / Time Line 2.....	213
L Tuned Frequency (On Off).....	213

Select Traces to check

Opens a dialog box to activate the selected limit line for a trace. One limit line can be activated for several traces simultaneously. For details see also [Chapter 5.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 220.

Remote command:

`CALCulate<n>:LIMit<k>:TRACe` on page 707

`CALCulate<n>:LIMit<k>:STATe` on page 718

Deselect All

Deactivates the selected limit line for all assigned traces. For details see also [Chapter 5.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 220.

Remote command:

`CALCulate<n>:LIMit<k>:STATe` on page 718

New

Opens the "Edit Limit Line" dialog box and a submenu to define a new limit line. For details see also [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214 and [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215.

Edit Name ← New

Sets the focus on the "Name" field to enter or change the limit line name. All names must be compatible with the Windows conventions for file names. The limit line data are stored under this name. The instrument stores all limit lines with LIM as extension.

Remote command:

`CALCulate<n>:LIMit<k>:LOWer:MODE` on page 712

Edit Comment ← New

Sets the focus on the "Comment" field to enter or change a comment for the limit line. The text must not exceed 40 characters.

Remote command:

`CALCulate<n>:LIMit<k>:COMMeNt` on page 706

Edit Margin ← New

Sets the focus on the "Margin" field to enter or change a margin for the limit line. The default setting is 0 dB (i.e. no margin).

Edit Value ← New

Opens an edit dialog box to change an existing x or y value, depending on the selected column. The softkey is only available if an existing value is selected.

The desired data points are entered in ascending order (two repeated frequencies/time values are permitted).

Remote command:

[CALCulate<n>:LIMit<k>:CONTrol\[:DATA\]](#) on page 709

[CALCulate<n>:LIMit<k>:UPPer\[:DATA\]](#) on page 714

[CALCulate<n>:LIMit<k>:LOWer\[:DATA\]](#) on page 711

Insert Value ← New

Creates an empty line above the selected data point to enter a new data point.

It is also possible to add a data point at the end of the list, if the focus is set below the last entry line of the list.

The data points are entered in ascending order (two repeated frequencies/time values are permitted). If the entered values are not in accordance with the ascending order rule, an error message is displayed and the values are discarded.

Delete Value ← New

Deletes the selected data point (x and y value). All succeeding data points are shifted up accordingly. This softkey is only available if an existing value is selected.

Save Limit Line ← New

Saves the currently edited limit line under the name defined in the "Name" field.

Edit

Opens a submenu to edit limit lines. For details see also [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214 and [Chapter 5.4.3.7, "Editing an Existing Limit Line"](#), on page 219.

The submenu contains the same commands as the "New" menu, see ["New"](#) on page 210.

Remote command:

see ["Using Display Lines"](#) on page 860

Copy to

Copies the data of the selected limit line and displays it in the "Edit Limit Line" dialog box. If the limit line is edited and saved under a new name, a new limit line can be easily generated by parallel translation or editing of an existing limit line.

For details see also [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214 and [Chapter 5.4.3.8, "Creating a New Limit Line Based upon an Existing Limit Line"](#), on page 219.

The submenu contains the same commands as the "New" menu, see ["New"](#) on page 210.

Remote command:

[CALCulate<n>:LIMit<k>:COPY](#) on page 706

Delete

Deletes the selected limit line.

Remote command:

[CALCulate<n>:LIMit<k>:DELete](#) on page 707

X Offset

Horizontally shifts a limit line that has been specified for relative frequencies or times (x-axis). The softkey opens an edit dialog box in which the value for shifting can be entered numerically or via the rotary knob.

Note: This softkey does not have any effect on limit lines that represent absolute values for the x-axis.

Remote command:

[CALCulate<n>:LIMit<k>:CONTRol:OFFSet](#) on page 710

Y Offset

Vertically shifts a limit line that has relative values for the y-axis (levels or linear units such as volt). The softkey opens an edit dialog box in which the value for shifting can be entered numerically or via the rotary knob.

Note: This softkey does not have any effect on limit lines that represent absolute values for the y-axis.

Remote command:

[CALCulate<n>:LIMit<k>:LOWer:OFFSet](#) on page 712

[CALCulate<n>:LIMit<k>:UPPer:OFFSet](#) on page 715

Display Lines

Opens a submenu to enable, disable and set display lines. Which softkeys are available depends on the display mode (frequency or time range).

For details see also [Chapter 5.4.3.2, "Display Lines"](#), on page 213 and [Chapter 5.4.3.4, "Working with Lines"](#), on page 215.

The submenu contains the following functions:

- ["Display Line 1 / Display Line 2"](#) on page 212
- ["Display Line 1 / Display Line 2"](#) on page 212
- ["Frequency Line 1 / Frequency Line 2 "](#) on page 213
- ["Frequency Line 1 / Frequency Line 2 "](#) on page 213
- ["Time Line 1 / Time Line 2"](#) on page 213
- ["Time Line 1 / Time Line 2"](#) on page 213
- ["Tuned Frequency \(On Off\)"](#) on page 213

Display Line 1 / Display Line 2 ← Display Lines

Enables or disables the level lines 1/2 and opens an edit dialog box to enter the position of the lines.

For details see also [Chapter 5.4.3.2, "Display Lines"](#), on page 213 and [Chapter 5.4.3.4, "Working with Lines"](#), on page 215.

Remote command:

`CALCulate<n>:DLINe<k>` on page 704

`CALCulate<n>:DLINe<k>:STATe` on page 704

Frequency Line 1 / Frequency Line 2 ← Display Lines

Enables or disables the frequency lines 1/2 (span > 0) and opens an edit dialog box to enter the position of the lines.

For details see also [Chapter 5.4.3.2, "Display Lines"](#), on page 213 and [Chapter 5.4.3.4, "Working with Lines"](#), on page 215.

Remote command:

`CALCulate<n>:FLINe<k>` on page 704

`CALCulate<n>:FLINe<k>:STATe` on page 705

Time Line 1 / Time Line 2 ← Display Lines

Enables or disables the time lines 1/2 (zero span) and opens an edit dialog box to enter the position of the lines.

For details see also [Chapter 5.4.3.2, "Display Lines"](#), on page 213 and [Chapter 5.4.3.4, "Working with Lines"](#), on page 215.

Note that time lines are only available in Spectrum mode.

Remote command:

`CALCulate<n>:TLINe<Line>` on page 861

`CALCulate<n>:TLINe<Line>:STATe` on page 861

Tuned Frequency (On Off) ← Display Lines

Turns a frequency line coupled to the receiver frequency on and off.

The line that marks the receiver frequency is a green line labeled "TF".

Available for the Scan result display.

Remote command:

`CALCulate:TFLine:STATe` on page 705

5.4.3.2 Display Lines

Display lines help to evaluate a trace – as do markers. The function of a display line is comparable to that of a ruler that can be shifted on the trace in order to mark absolute values. They are used exclusively to visually mark relevant frequencies or points in time (span = 0), as well as constant level values. It is not possible to check automatically whether the points are below or above the marked level values.

For details on setting and switching the display lines on/off see [Chapter 5.4.3.4, "Working with Lines"](#), on page 215.

Two different types of display lines are provided:

- Two horizontal level lines for marking levels – Display Line 1 and 2
The level lines are continuous horizontal lines across the entire width of a diagram and can be shifted in y direction.
- Two vertical frequency or time lines for marking frequencies or points in time – Frequency/Time Line 1 and 2

The frequency or time lines are continuous vertical lines across the entire height of the diagram and can be shifted in x direction.

Lables

Each line is identified by one of the following abbreviations in the display:

- D1: Display Line 1
- D2: Display Line 2
- F1: Frequency Line 1
- F2: Frequency Line 2
- T1: Time Line 1
- T2: Time Line 2

5.4.3.3 Limit Lines (Frequency/Time Lines)

Limit lines are used to define amplitude curves or spectral distribution boundaries on the display screen which are not to be exceeded. They indicate, for example, the upper limits for interference radiation or spurious waves which are allowed from a device under test (DUT). For transmission of information in TDMA systems (e.g. GSM), the amplitude of the bursts in a timeslot must adhere to a curve that falls within a specified tolerance band. The lower and upper limits may each be specified by a limit line. Then, the amplitude curve can be controlled either visually or automatically for any violations of the upper or lower limits (GO/NOGO test).

The instrument supports limit lines with a maximum of 50 data points. 8 of the limit lines stored in the instrument can be activated simultaneously. The number of limit lines stored in the instrument is only limited by the capacity of the flash disk used. Which softkeys are available depends on the display mode (frequency or time range). For details see also [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215.

Limit lines are compatible with the current measurement settings, if the following applies:

- The x unit of the limit line has to be identical to the current setting.
- The y unit of the limit line has to be identical to the current setting with the exception of dB based units; all dB based units are compatible with each other.

At the time of entry, the R&S ESR immediately checks that all limit lines are in accordance with the following guidelines:

- The frequencies/times for each data point must be entered in ascending order, however, for any single frequency/time, two data points may be entered (vertical segment of a limit line).
- The data points are allocated in order of ascending frequency/time. Gaps are not allowed. If gaps are desired, two separate limit lines must be defined and then both enabled.
- The entered frequencies/times need not necessarily be selectable in R&S ESR. A limit line may also exceed the specified frequency or time range. The minimum frequency for a data point is -200 GHz, the maximum frequency is 200 GHz. For the

time range representation, negative times may also be entered. The allowed range is -1000 s to +1000 s.

5.4.3.4 Working with Lines

If a line is switched on, the softkey is highlighted.

Switching a line on or off


1. Press the **Display Lines** softkey.
2. Press the softkey for the required line, e.g. **Display Line 1 / Display Line 2**.
An edit dialog box is opened to enter the position of the line. If the line was switched off, it is switched on. If it was switched on, it remains switched on.
3. If another softkey is pressed, the edit dialog box for the line is closed, but the line remains switched on (softkey with highlighted background).
4. When you press the **Display Line 1 / Display Line 2** softkey for the second time, the edit dialog box for the line is opened again.
5. When you press the **Display Line 1 / Display Line 2** softkey the third time, the line is switched off (softkey without highlighted background).

5.4.3.5 Selecting a Limit Line

- To display the "Select Limit Line" dialog box, press the LINES key.

All limit lines saved in the default directory and all subdirectories are displayed. For each limit line, the following information is given:

"Unit"	unit of the y-axis
"Traces"	selected traces to check
"Show"	limit line displayed in the measurement diagram or hidden
"Compatible"	compatibility of the limit line to the current measurement settings
"Offset"	user-definable X- and Y-offset for the limit line

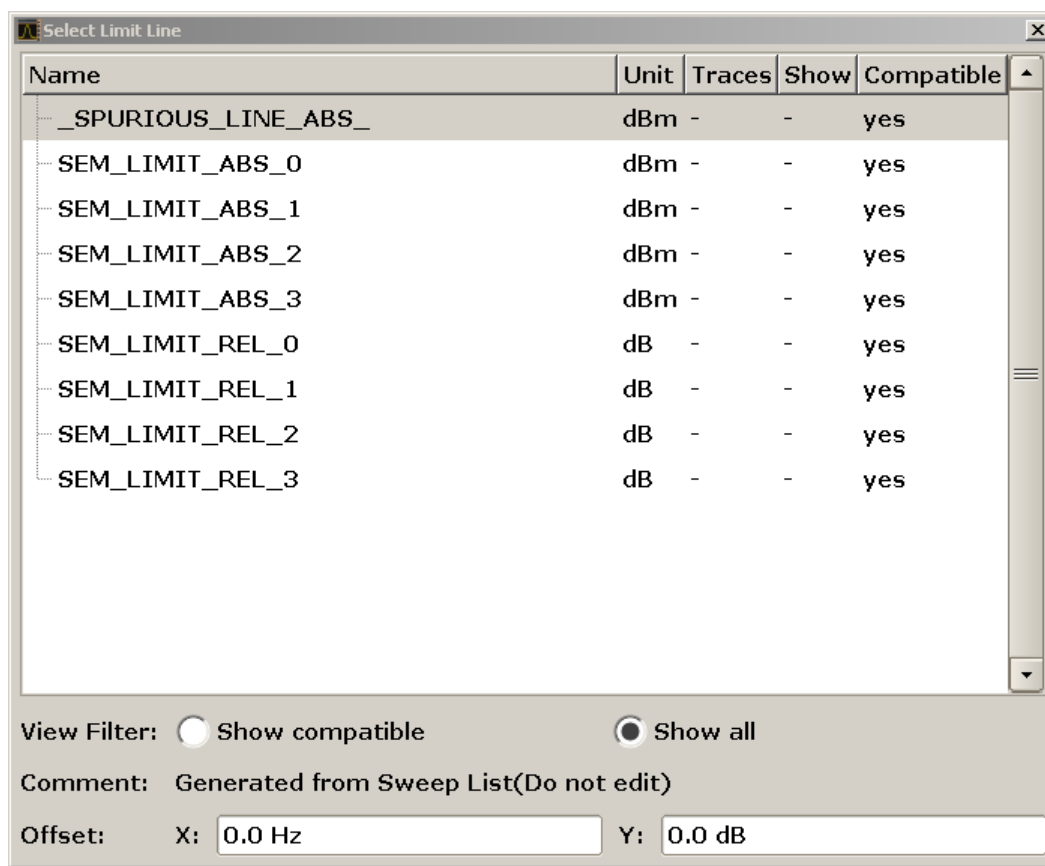

- To display only the limit lines that are compatible, activate the "Show compatible" option. For details on compatibility refer to [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214.

5.4.3.6 Creating a New Limit Line

Press the **New** softkey to define a new limit line.

The "Edit Limit Line" dialog box is displayed. For more details on limit lines refer also to [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214. The following settings can be defined:

Setting	Description
Name	The name under which the limit line is to be stored in the main directory. To save the limit line in an existing subdirectory, enter the relative path. A new subdirectory can only be created using the [FILE] key (for details refer to "Save File / Recall File" on page 531).
Comment	Optional description
Threshold	Absolute threshold value that works as a lower limit for the relative limit values (only for relative scaling of the y-axis).

Setting	Description
Margin	A fixed distance to the limit line. Margins are not as strict as limits and belong to the valid value range, but violation is also indicated in the display.
Position	Position of data point
Value	Value of data point
X-Axis:	
Span setting	<ul style="list-style-type: none"> • "Hz" for span > 0 Hz • "s" for zero span
Scale mode	<ul style="list-style-type: none"> • Absolute: The frequencies or times are interpreted as absolute physical units. • Relative: In the data point table, the frequencies are referred to the currently set center frequency. In the zero span mode, the left boundary of the diagram constitutes the reference. <p>Relative scaling is always suitable if masks for bursts are to be defined in zero span or if masks for modulated signals are required for span > 0 Hz.</p>
Scale	<ul style="list-style-type: none"> • Linear • Logarithmic
Y-Axis:	
Scale unit	Unit of the y-axis
Scale mode	<ul style="list-style-type: none"> • Absolute: The limit values refer to absolute levels or voltages. • Relative: The limit values refer to the reference level (Ref Level). Limit values with the unit dB are always relative values.
Limit type	<ul style="list-style-type: none"> • Upper limit • Lower limit


In addition, the following functions are available for the limit line:

Defining a threshold

If the scaling of the y-axis is relative, you can define an absolute threshold value that works as a lower limit for the relative limit values (see figure below).

- ▶ Enter a value in the "Threshold" field of the "Edit Limit Line" dialog box.

The function is especially useful for mobile radio applications provided the limit values are defined in relation to the carrier power as long as they are above an absolute limit value.

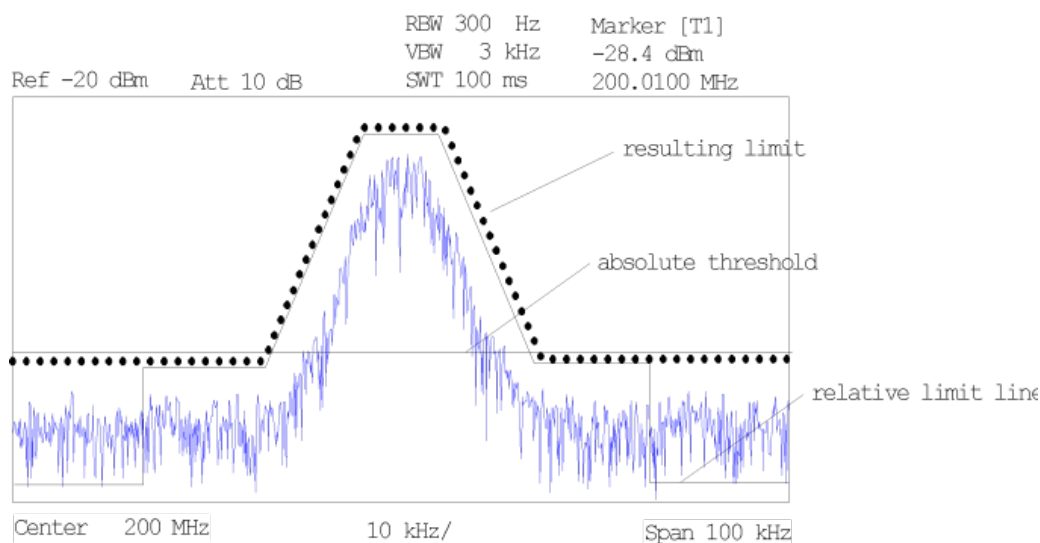

Defining a margin

A margin is similar to a limit, but less strict and it still belongs to the valid data range. It can be used as a warning that the limit is almost reached. The margin is not indicated by a separate line in the display.

- ▶ Enter a value in the "Margin" field of the "Edit limit Line" dialog box.
 If the limit line is defined as an upper limit, the margin is below the limit line. If the limit line is defined as a lower limit, the margin is above the limit line.

Entering a new data point

1. Press the "Insert value" button in the dialog, or select an existing data point in the table and press the [Insert Value](#) softkey.
2. Enter the new position (x) and value (y) in the edit dialog box.

Changing a data point

1. Press on the data point to be changed in the table.
2. Enter the new position (x) and value (y) in the edit dialog box.

Deleting a data point

1. Press on the data point to be deleted in the table.
2. Press the "Delete" button in the dialog.

Shifting a limit line horizontally

- ▶ Select the "Shift x" button and enter a shift width for the x value in the edit dialog box.

Shifting a limit line vertically

- ▶ Select the "Shift y" button and enter a shift width for the y value in the edit dialog box.

Saving the limit line settings

- ▶ Press the "Save" button in the dialog.
If an existing name is used, a message box is displayed. You have to confirm before the limit line is overwritten.

5.4.3.7 Editing an Existing Limit Line

In the "Select Limit Line" dialog box, select the limit line you want to change. For details see also [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215.



Note that any changes to the special limit lines for spurious and SEM measurements are automatically overwritten when the sweep list settings are changed.

1. Press the "Edit" on page 211 softkey.
2. Edit the data as described in [Chapter 5.4.3.6, "Creating a New Limit Line"](#), on page 216.
3. Save the limit line ("Save Limit Line" on page 211 softkey).

5.4.3.8 Creating a New Limit Line Based upon an Existing Limit Line

1. In the "Select Limit Line" dialog box, select the limit line you want to use as a basis for a new limit line. For details see also [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215.
2. Press the [Copy to](#) softkey to transfer the data of the limit line into the "Edit Limit Line" dialog box.
3. Press the [Edit Name](#) softkey and enter a new name.
4. To shift the complete limit line parallel in the horizontal direction, select the "Shift x" button and enter an x shift value. In this manner, a new limit line can be easily generated based upon an existing limit line which has been shifted horizontally.
5. To shift the complete limit line parallel in the vertical direction, select the "Shift y" button and enter a y shift value. In this manner, a new limit line can be easily generated based upon an existing limit line which has been shifted vertically.
6. If required, edit the data as described in [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215.
7. Save the limit line ([Save Limit Line](#) softkey).

5.4.3.9 Activating/Deactivating a Limit Line

Prerequisites:

The x- and y-units of limit line and current measurement setting have to be compatible. For details refer to [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214.

The limit line has to consist of 2 or more data points.

1. In the "Select Limit Line" dialog box, select the limit line you want to activate/deactivate. For details see also [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215.
2. To activate or deactivate a limit line for a trace, press the ["Select Traces to check"](#) on page 210 softkey and select or deselect the trace(s) to which this limit line applies.
3. To deactivate the limit line for all traces, press the ["Deselect All"](#) on page 210 softkey.

6 Spectrum Measurements

You can also perform conventional spectrum analysis with the R&S ESR.

When you start the R&S ESR for the first time or after a preset, it starts in receiver mode. If it is inactive, press the [MODE] key and select the "Spectrum" softkey in the corresponding menu to enter the spectrum mode.

This chapter of the manual describes all functionality that is available in spectrum mode.

- [Chapter 6.1, "Measurements"](#), on page 221
This section describes how to configure and perform specific measurements that are available in Spectrum mode.
Measurement examples are provided in the Quick Start Guide, chapter 5 "Basic Measurement Examples" and the Operating Manual, chapter "Advanced Measurement Examples".
- [Chapter 6.3, "Analysis"](#), on page 387
This section describes the tools that are available to analyze measurement results.
- [Chapter 6.2, "Configuration"](#), on page 342
This section describes general measurement parameters. The general measurement parameters apply to all measurements performed in Spectrum mode.

6.1 Measurements

In the Spectrum mode, the R&S ESR provides a variety of different measurement functions.

The individual functions are described in detail in the following sections.

6.1.1 Power Measurements – MEAS Key

With its power measurement functions, the R&S ESR is able to measure all the necessary parameters with high accuracy in a wide dynamic range.

A modulated carrier is almost always used (except e.g. SSB-AM) for high-frequency transmission of information. Due to the information modulated upon the carrier, the latter covers a spectrum which is defined by the modulation, the transmission data rate and the signal filtering. Within a transmission band each carrier is assigned a channel taking into account these parameters. In order to ensure error-free transmission, each transmitter must be conforming to the specified parameters. These include among others:

- the output power
- the occupied bandwidth, i.e. the bandwidth which must contain a defined percentage of the power
- the power dissipation allowed in the adjacent channels

The MEAS key is used for complex measurement functions as power measurements, occupied bandwidth, signal statistic, carrier to noise spacing, AM modulation depth, third-order intercept point, harmonics and spurious emissions. For measurement examples refer to the Quick Start Guide, "Basic Measurement Examples".

The following measurements can be performed:

- Channel power and adjacent-channel power with span > 0 and with a single or several carriers ("CH Power ACLR" softkey, for details see [Chapter 6.1.1.2, "Measuring Channel Power and Adjacent-Channel Power"](#), on page 225)
- Carrier-to-noise ratio ("C/N C/NO" softkey, for details see [Chapter 6.1.1.3, "Measuring the Carrier-to-Noise Ratio"](#), on page 249)
- Occupied bandwidth ("OBW" softkey, for details see [Chapter 6.1.1.4, "Measuring the Occupied Bandwidth"](#), on page 252)
- Spectrum Emission Mask measurements ("Spectrum Emission Mask" softkey, for details see [Chapter 6.1.1.5, "Measuring with Spectrum Emission Masks"](#), on page 256)
- Spurious Emissions measurements ("Spurious Emissions" softkey, for details see [Chapter 6.1.1.6, "Measuring Spurious Emissions"](#), on page 283)
- Power in zero span ("Time Domain Power" softkey, for details see [Chapter 6.1.1.7, "Measuring the Power in Zero Span"](#), on page 294).
- EMI Measurement softkey, for details see [Chapter 6.1.1.8, "Performing EMI Measurements"](#), on page 297
- CISPR APD softkey, for details see [Chapter 6.1.1.9, "CISPR APD Measurement \(Amplitude Probability Distribution\)"](#), on page 307
- Amplitude probability distribution ("APD" and "CCDF" softkeys, for details see [Chapter 6.1.1.10, "Calculating Signal Amplitude Statistics"](#), on page 312)
- 3rd order intercept ("TOI" softkey, for details see [Chapter 6.1.1.11, "Measuring the Third Order Intercept Point \(TOI\)"](#), on page 330)
- Modulation depth ("AM Mod Depth" softkey, for details see [Chapter 6.1.1.12, "Measuring the AM Modulation Depth"](#), on page 336)
- Harmonic Distortion measurements ("Harmonic Distortion" softkey, for details see [Chapter 6.1.1.13, "Measuring Harmonic Distortion"](#), on page 337)

To open the power measurement menu

- Press the [MEAS] key.
The measurement menu for spectrum analysis is displayed (see [Chapter 6.1.1.1, "Softkeys of the Power Measurement Menu"](#), on page 222).

6.1.1.1 Softkeys of the Power Measurement Menu

The following table shows all softkeys available in the power measurement menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Ch Power ACLR.....	223
C/N, C/No (span > 0).....	223
OBW (span > 0).....	223
Spectrum Emission Mask.....	223
Spurious Emissions.....	224
Time Domain Power (zero span).....	224
All Functions Off.....	224
APD.....	224
CCDF.....	224
TOI.....	224
AM Mod Depth.....	224
Harmonic Distortion.....	225
All Functions Off.....	225

Ch Power ACLR

Activates the active channel or adjacent-channel power measurement either for a single carrier signal or for several carrier signals, depending on the current measurement configuration, and opens a submenu to configure the channel power measurement.

For details see [Chapter 6.1.1.2, "Measuring Channel Power and Adjacent-Channel Power"](#), on page 225.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect` on page 720

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` on page 721

`CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe]` on page 724

C/N, C/No (span > 0)

Opens a submenu to configure the carrier/noise ratio measurement. Measurements without (C/N) and measurements with reference to the bandwidth (C/No) are possible.

For details see [Chapter 6.1.1.3, "Measuring the Carrier-to-Noise Ratio"](#), on page 249.

OBW (span > 0)

Activates measurement of the occupied bandwidth according to the current configuration and opens a submenu to configure the measurement. For details see [Chapter 6.1.1.4, "Measuring the Occupied Bandwidth"](#), on page 252.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect` on page 720

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` on page 721

`CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe]` on page 724

Spectrum Emission Mask

Opens a submenu to configure the Spectrum Emission Mask measurement.

The Spectrum Emission Mask (SEM) measurement defines a measurement that monitors compliance with a spectral mask.

For details see [Chapter 6.1.1.5, "Measuring with Spectrum Emission Masks"](#), on page 256.

Remote command:

`SENS:SWE:MODE ESP`, see `[SENSe:]SWEep:MODE` on page 761

Spurious Emissions

Opens a submenu to configure the Spurious Emissions measurement.

The Spurious Emissions measurement defines a measurement that monitors unwanted RF products outside the assigned frequency band generated by an amplifier.

For details see [Chapter 6.1.1.6, "Measuring Spurious Emissions"](#), on page 283.

Remote command:

`SENS:SWE:MODE LIST`, see `[SENSe:]SWEep:MODE` on page 761

Time Domain Power (zero span)

Activates the power measurement in zero span and opens a submenu to configure the power measurement. For details see [Chapter 6.1.1.7, "Measuring the Power in Zero Span"](#), on page 294.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY[:STATe]` on page 801

All Functions Off

Switches off all power measurement functions.

APD

Activates the function to measure the amplitude probability density (APD) and opens a submenu.

For details see [Chapter 6.1.1.10, "Calculating Signal Amplitude Statistics"](#), on page 312.

Remote command:

`CALCulate<n>:STATistics:APD[:STATe]` on page 792

CCDF

Activates the function to measure the complementary cumulative distribution function (CCDF) and opens a submenu.

For details see [Chapter 6.1.1.10, "Calculating Signal Amplitude Statistics"](#), on page 312.

Remote command:

`CALCulate<n>:STATistics:CCDF[:STATe]` on page 792

TOI

Opens a submenu and activates the measurement of the 3rd order intercept point.

For details see [Chapter 6.1.1.11, "Measuring the Third Order Intercept Point \(TOI\)"](#), on page 330.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:TOI[:STATe]` on page 790

`CALCulate<n>:MARKer<m>:FUNCTION:TOI:RESult?` on page 791

AM Mod Depth

Opens a submenu and activates the measurement of the AM modulation depth. An AM-modulated carrier is required on the screen to ensure correct operation.

For details see [Chapter 6.1.1.12, "Measuring the AM Modulation Depth"](#), on page 336.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:MDEPth\[:STATe\]](#) on page 785

[CALCulate<n>:MARKer<m>:FUNCTION:MDEPth:RESult?](#) on page 784

Harmonic Distortion

Opens a submenu to determine the settings for harmonics measurement and activates the harmonic distortion measurement.

For details see [Chapter 6.1.1.13, "Measuring Harmonic Distortion"](#), on page 337.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:HARMonics\[:STATe\]](#) on page 789

[CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DISToRtion?](#) on page 787

[CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:LIST?](#) on page 787

All Functions Off

Switches off all power measurement functions.

6.1.1.2 Measuring Channel Power and Adjacent-Channel Power

Measuring the power in channels adjacent to the carrier or transmission channel is useful to detect interference. The results are displayed as a bar chart for the individual channels.

- [About Channel Power Measurements](#)..... 225
- [Channel Power Measurement Results](#).....229
- [Configuring and Performing Channel Power Measurements](#).....231
- [Softkeys for Channel and Adjacent-Channel Power Measurements](#)..... 235
- [Predefined CP/ACLR Standards](#).....246
- [Optimized Settings for CP/ACLR Test Parameters](#).....247

About Channel Power Measurements

Measuring channel power and adjacent channel power is one of the most important tasks in the field of digital transmission for a signal analyzer with the necessary test routines. While, theoretically, channel power could be measured at highest accuracy with a power meter, its low selectivity means that it is not suitable for measuring adjacent channel power as an absolute value or relative to the transmit channel power. The power in the adjacent channels can only be measured with a selective power meter.

A signal analyzer cannot be classified as a true power meter, because it displays the IF envelope voltage. However, it is calibrated such as to correctly display the power of a pure sine wave signal irrespective of the selected detector. This calibration cannot be applied for non-sinusoidal signals. Assuming that the digitally modulated signal has a Gaussian amplitude distribution, the signal power within the selected resolution bandwidth can be obtained using correction factors. These correction factors are normally used by the signal analyzer's internal power measurement routines in order to determine the signal power from IF envelope measurements. These factors apply if and only if the assumption of a Gaussian amplitude distribution is correct.

Apart from this common method, the R&S ESR also has a true power detector, i.e. an RMS detector. It correctly displays the power of the test signal within the selected reso-

lution bandwidth irrespective of the amplitude distribution, without additional correction factors being required. The absolute measurement uncertainty of the R&S ESR is < 1.5 dB and a relative measurement uncertainty of < 0.5 dB (each with a confidence level of 95 %).

Measurement Methods

The channel power is defined as the integration of the power across the channel bandwidth.

The **Adjacent Channel Power Ratio (ACPR)**, also known as the **Adjacent Channel Leakage Power Ratio (ACLR)**, is defined as the ratio between the total power of the adjacent channel to the carrier channel's power. An ACLR measurement with several carrier (transmission) channels (TX channels) is also possible and is referred to as a "multi-carrier ACLR measurement".

There are two possible methods for measuring channel and adjacent channel power with a signal analyzer:

- IBW method (Integration **B**andwidth **M**ethod)
- Zero-span method (Fast ACLR), i.e. using a channel filter
- [IBW method](#)..... 226
- [Fast ACLR](#).....227

IBW method

When measuring the channel power, the R&S ESR integrates the linear power which corresponds to the levels of the pixels within the selected channel. The signal analyzer uses a resolution bandwidth which is far smaller than the channel bandwidth. When sweeping over the channel, the channel filter is formed by the passband characteristics of the resolution bandwidth (see [Figure 6-1](#)).

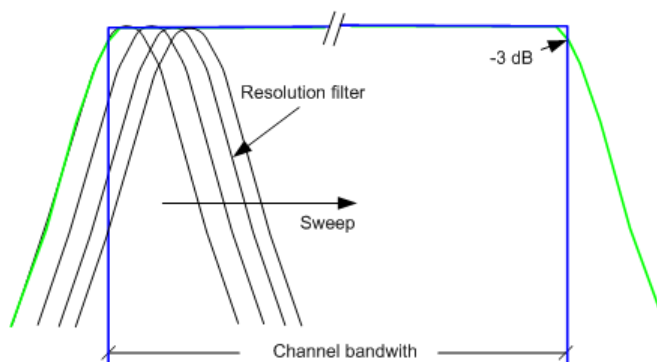


Figure 6-1: Approximating the channel filter by sweeping with a small resolution bandwidth

The following steps are performed:

1. The linear power of all the trace pixels within the channel is calculated.

$$P_i = 10^{(L_i/10)}$$
 where P_i = power of the trace pixel i
 L_i = displayed level of trace point i

2. The powers of all trace pixels within the channel are summed up and the sum is divided by the number of trace pixels in the channel.
3. The result is multiplied by the quotient of the selected channel bandwidth and the noise bandwidth of the resolution filter (RBW).

Since the power calculation is performed by integrating the trace within the channel bandwidth, this method is called the IBW method (Integration **B**andwidth method).

Fast ACLR

Using Fast ACLR, the R&S ESR sets the center frequency to the different channel center frequencies consecutively and measures the power with the selected measurement time (= sweep time/number of channels).

The RBW filters suitable for the selected standard and frequency offset are automatically used (e.g. root raised cos with IS 136).

The RMS detector is used for obtaining correct power measurement results. Therefore no software correction factors are required.

Measurement Repeatability

The repeatability of the results, especially in the narrow adjacent channels, strongly depends on the measurement time for a given resolution bandwidth. A longer sweep time may increase the probability that the measured value converges to the true value of the adjacent channel power, but obviously increases measurement time.

The integrated bandwidth method (IBW) calculates channel power and ACLR from the trace data obtained during a continuous sweep over the selected span. Most parts of this sweep are neither part of the channel itself nor the defined adjacent channels. Therefore, most of the samples taken during the sweeptime cannot be used for channel power or ACLR calculation.

To obtain a high repeatability with short measurement times, the R&S ESR offers a "Fast ACLR" mode. In the Fast ACLR mode, the R&S ESR measures the power of each channel at the defined channel bandwidth, while being tuned to the center frequency of the channel in question. The digital implementation of the resolution bandwidths makes it possible to select filter characteristics that are precisely tailored to the signal. In case of CDMA2000, the power in the useful channel is measured with a bandwidth of 1.23 MHz and that of the adjacent channels with a bandwidth of 30 kHz. Therefore the R&S ESR changes from one channel to the other and measures the power at a bandwidth of 1.23 MHz or 30 kHz using the RMS detector. The power of the frequency range between the channels of interest is not measured in Fast ACLR mode, because it is not required for channel power or ACLR calculation. The measurement time per channel is set with the sweep time. It is equal to the selected measurement time divided by the selected number of channels.

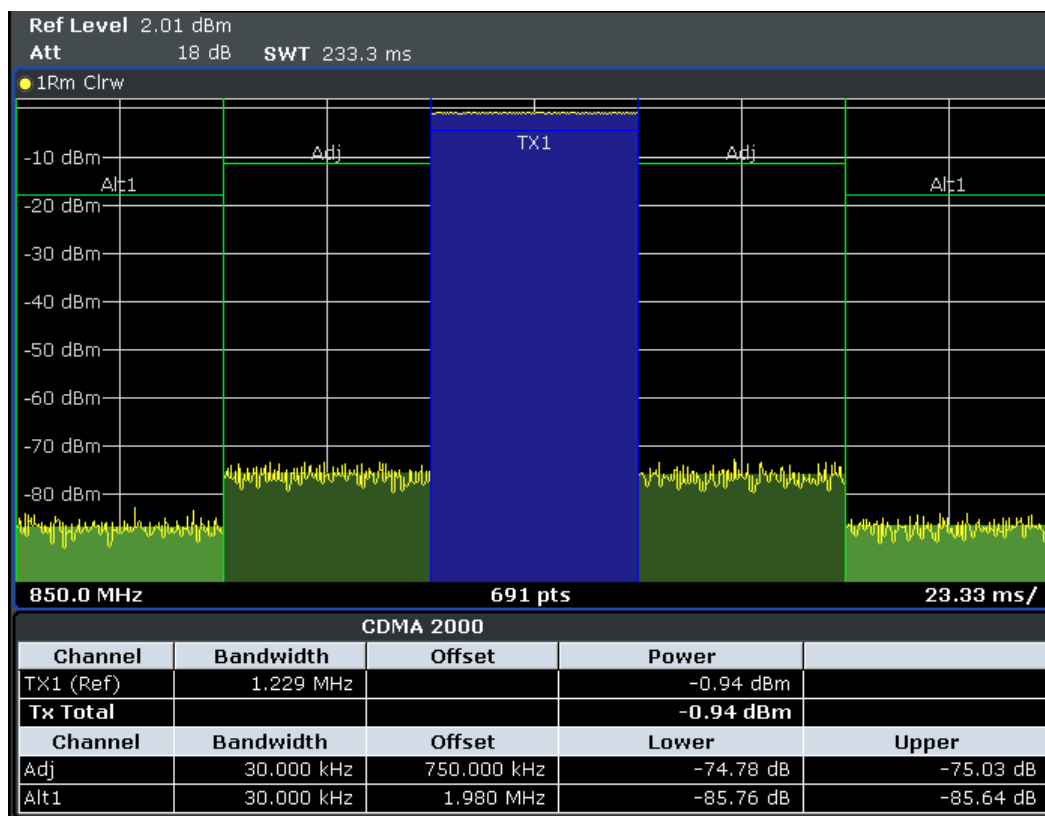


Figure 6-2: Measuring the channel power and adjacent channel power ratio for CDMA2000 1X signals with zero span (Fast ACP)

Assuming a measurement with five channels (1 channel plus 2 lower and 2 upper adjacent channels) and a sweep time of 100 ms, a measurement time per channel of 20 ms is required. The number of effective samples taken into account for power calculation in one channel is the product of sweeptime in channel times the selected resolution bandwidth.

Assuming a sweeptime of 100 ms, there are $(30 \text{ kHz} / 4.19 \text{ MHz}) * 100 \text{ ms} * 10 \text{ kHz} \approx 7$ samples. Whereas in Fast ACLR mode, there are $(100 \text{ ms} / 5) * 30 \text{ kHz} \approx 600$ samples. Comparing these numbers explains the increase of repeatability with a 95% confidence level (2σ) from $\pm 2.8 \text{ dB}$ to $\pm 0.34 \text{ dB}$ for a sweeptime of 100 ms (as shown in Figure 6-3 and).

For the same repeatability, the sweep time would have to be set to 8.5 s with the integration method. The Figure 6-4 shows the standard deviation of the results as a function of the sweep time.

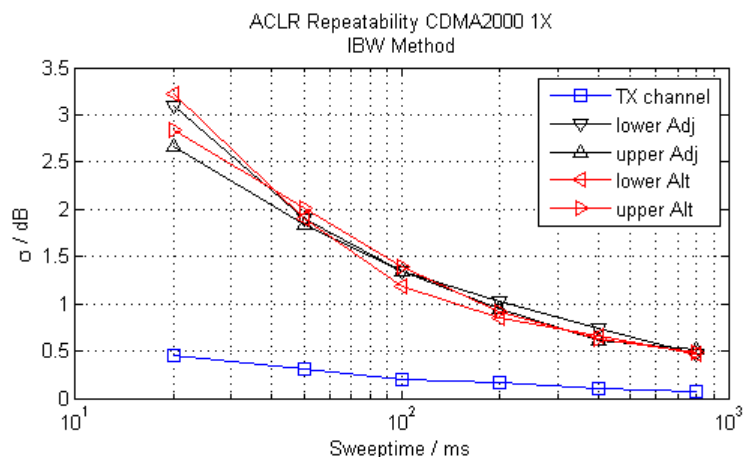


Figure 6-3: Repeatability of adjacent channel power measurement on CDMA2000 standard signals if the integration bandwidth method is used

The Figure 6-4 shows the repeatability of power measurements in the transmit channel and of relative power measurements in the adjacent channels as a function of sweep time. The standard deviation of measurement results is calculated from 100 consecutive measurements. Take scaling into account if comparing power values.


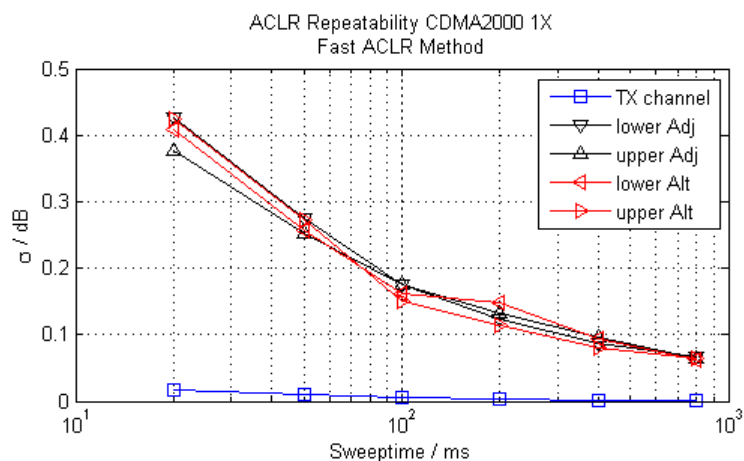


Figure 6-4: Repeatability of adjacent channel power measurements on CDMA2000 signals in the fast ACP mode

Channel Power Measurement Results

For channel or adjacent-channel power measurements, the individual channels are indicated by different colored bars in the diagram. The height of each bar corresponds to the measured power of that channel. In addition, the name of the channel ("Adj", "Alt1", "TX1", etc. or a user-defined name) is indicated above the bar (separated by a line which has no further meaning).

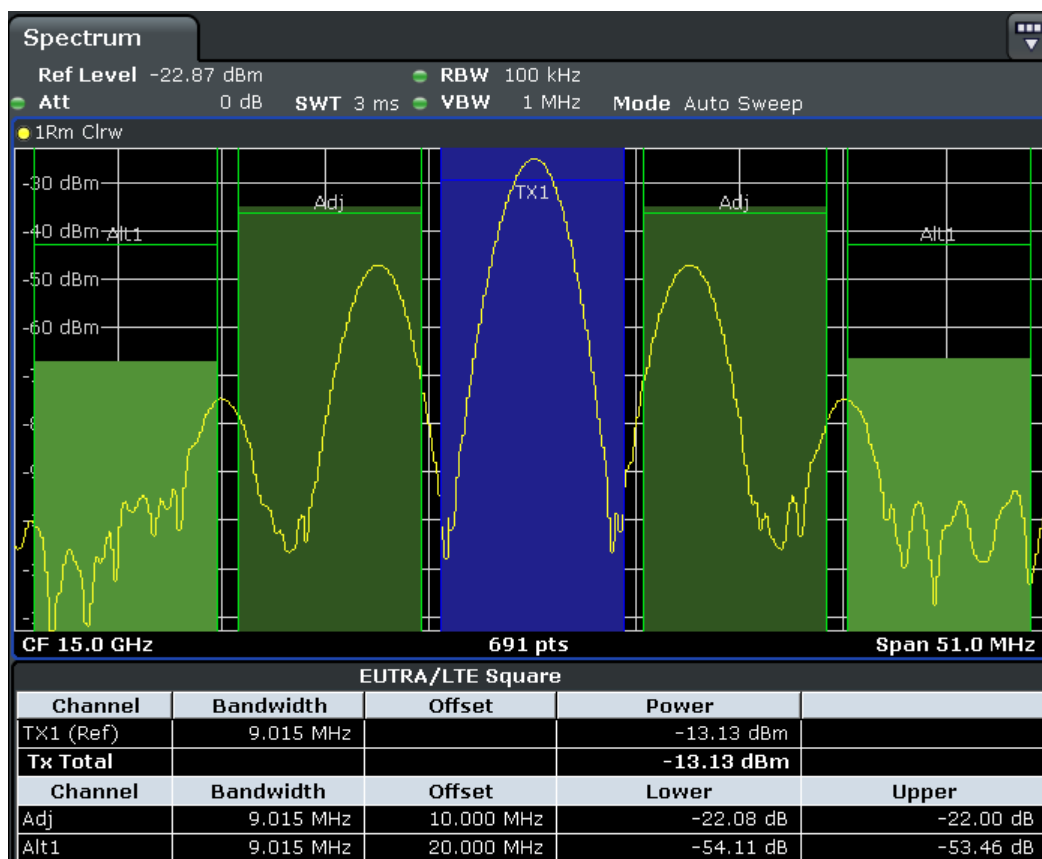

Results are provided for the TX channel and the number of defined adjacent channels *above and below* the TX channel. If more than one TX channel is defined, the carrier channel to which the relative adjacent-channel power values should be referenced must be defined.

The measured power values for the TX and adjacent channels are also output as a table in the second screen. Which powers are measured depends on the number of configured channels, see "[# of Adj Chan](#)" on page 237.

For each channel, the following values are displayed:

Label	Description
Channel	Channel name as specified in the "Channel Settings" (see " Names " on page 240).
Bandwidth	Configured channel bandwidth (see " Bandwidth " on page 238)
Offset	Offset of the channel to the TX channel (Configured channel spacing, see " Spacing " on page 239)
Power (Lower/Upper)	The measured power values for the TX and lower and upper adjacent channels. The powers of the transmission channels are output in dBm or dBm/Hz, or in dBc, relative to the specified reference TX channel.

Retrieving Results via Remote Control

All or specific channel power measurement results can be retrieved using the `CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?` command from a remote computer.

Alternatively, the results can be output as channel power density, i.e. in reference to the measurement bandwidth (see `CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult:PHZ` on page 746).

In addition, the `TRACe<n>:DATA` command queries the trace data. In case of channel power measurements, the trace data is the power levels that have been measured for each sweep point (max. 691).

Configuring and Performing Channel Power Measurements

Predefined standards contain the main measurement settings for standard measurements. When such a standard is loaded, the required channel settings are automatically set on the R&S ESR. However, the settings can be changed, and measurements with user-defined configurations are also possible.

Once the channels have been set up, other instrument settings such as the used filter bandwidths, frequency span and detector and trace settings can be optimized automatically (see "Adjust Settings" on page 243).

For an overview of the softkeys and menus see "Softkeys for Channel and Adjacent-Channel Power Measurements" on page 235.

Selecting a Predefined Standard

Predefined standards contain the main measurement settings for standard measurements. When such a standard is loaded, the required channel settings are automatically set on the R&S ESR.

The selected standard defines the following settings:

- "Bandwidth" on page 238
- "Spacing" on page 239
- Detector, see "Optimized Settings for CP/ACLR Test Parameters" on page 247
- Trace averaging, see "Average Mode" on page 393
- RBW, see "Optimized Settings for CP/ACLR Test Parameters" on page 247
- "Weighting Filter" on page 240

► Select a predefined standard via the `CP/ACLR Standard` softkey.

Setting up the Channels

Channel definition is the basis for measuring power levels in certain frequency ranges. Usually, the power levels in one or more carrier (TX) channels and possibly the adjacent channels are of interest. Up to 18 carrier channels and up to 12 adjacent channels can be defined.



In the R&S ESR's display, only the first neighboring channel of the carrier (TX) channel is labelled "Adj" (adjacent) channel; all others are labelled "Alt" (alternate) channels. In this manual, "adjacent" refers to both adjacent and alternate channels.

When an ACLR measurement is started by pressing the "Ch Power ACLR" softkey, all settings including the channel bandwidths and channel spacings are set according to the selected standard and can be adjusted afterwards.

Channel setup consists of the following settings:

- The number of transmission (TX) and adjacent channels
- The bandwidth of each channel
- For multi-carrier ACLR measurements: which TX channel is used as a reference ("ACLR Reference")
- The spacing between the individual channels
- Optionally: the names of the channels displayed in the diagram and result table
- Optionally: the influence of individual channels on the total measurement result ("Weighting Filter")
- Optionally: limits for a limit check on the measured power levels



Changes to an existing standard can be stored as a user-defined standard, see "[User-Defined Configurations](#)" on page 234.

- ▶ In the "Ch Power" menu, press [Channel Setup](#), then press the [Channel Setup](#) softkey to configure the channels in the "Channel Setup" dialog box.



In the "Channel Setup" dialog box you define the channel settings for all channels, independent of the defined number of *used* TX or adjacent channels.

- [Defining Channel Bandwidths](#).....232
- [Defining Channel Spacings](#).....233
- [Configuring a Limit Check](#).....234

Defining Channel Bandwidths

The transmission-channel bandwidth is normally defined by the transmission standard. The correct bandwidth is set automatically for the selected standard (see "[Optimized Settings for CP/ACLR Test Parameters](#)" on page 247).

For measurements that require channel bandwidths which deviate from those defined in the selected standard, use the IBW method (see [Fast ACLR \(On/Off\)](#) softkey). With the IBW method, the channel bandwidth borders are right and left of the channel center frequency. Thus, you can visually check whether the entire power of the signal under test is within the selected channel bandwidth.

- ▶ In the "Channel Setup" dialog box, select the "Bandwidth" tab to define the channel bandwidths.

The value entered for any TX channel is automatically also defined for all subsequent TX channels. Thus, only one value needs to be entered if all TX channels have the same bandwidth.

The value entered for any ADJ or ALT channel is automatically also defined for all alternate (ALT) channels. Thus, only one value needs to be entered if all adjacent channels have the same bandwidth.

Defining Channel Spacings

Channel spacings are normally defined by the selected standard but can be changed.

If the spacings are not equal, the channel distribution according to the center frequency is as follows:

Odd number of TX channels	The middle TX channel is centered to center frequency.
Even number of TX channels	The two TX channels in the middle are used to calculate the frequency between those two channels. This frequency is aligned to the center frequency.

- ▶ In the "Channel Setup" dialog box, select the "Spacing" tab to define the channel spacings.
The value entered for any TX channel is automatically also defined for all subsequent TX channels. Thus, only one value needs to be entered if all TX channels have the same spacing.
If the channel spacing for the adjacent or an alternate channel is changed, all higher alternate channel spacings are multiplied by the same factor (new spacing value/old spacing value). The lower adjacent-channel spacings remain unchanged.
Only one value needs to be entered for equal channel spacing.

Example: Defining channel spacing

In the default setting, the adjacent channels have the following spacing: 20 kHz ("ADJ"), 40 kHz ("ALT1"), 60 kHz ("ALT2"), 80 kHz ("ALT3"), 100 kHz ("ALT4"), ...

If the spacing of the first adjacent channel ("ADJ") is set to 40 kHz, the spacing of all other adjacent channels is multiplied by factor 2 to result in 80 kHz ("ALT1"), 120 kHz ("ALT2"), 160 kHz ("ALT3"), ...

If, starting from the default setting, the spacing of the 5th adjacent channel ("ALT4") is set to 150 kHz, the spacing of all higher adjacent channels is multiplied by factor 1.5 to result in 180 kHz ("ALT5"), 210 kHz ("ALT6"), 240 kHz ("ALT7"), ...



For the R&S ESR, the channel spacing is defined as the distance between the center frequency of the adjacent channel and the center frequency of the transmission channel. The definition of the adjacent-channel spacing in standards IS95C and CDMA 2000 is different. These standards define the adjacent-channel spacing from the center of the transmission channel to the closest border of the adjacent channel. This definition is also used for the R&S ESR if the standards marked with an asterisk *) are selected.

Configuring a Limit Check

During an ACLR measurement, the power values can be checked whether they exceed user-defined limits. A relative or absolute limit can be defined, or both. Both limit types are considered, regardless whether the measured levels are absolute or relative values. The check of both limit values can be activated independently. If any active limit value is exceeded, the measured value is displayed in red and marked by a preceding asterisk in the result table.

W-CDMA 3GPP FWD				
Channel	Bandwidth	Offset	Power	
TX1 (Ref)	3.840 MHz		-124.39 dBm	
Tx Total			-124.39 dBm	
Channel	Bandwidth	Offset	Lower	Upper
Adj*	3.840 MHz	5.000 MHz	81.17 dB*	81.17 dB*
Alt1*	3.840 MHz	10.000 MHz	0.00 dB*	0.00 dB*

To configure a limit check

1. In the "Channel Setup" dialog box, select the "Limits" tab to define a limit check.
2. For each channel, define a relative or absolute value that should not be exceeded.
3. Select the channels to be included in the limit check by activating the "Check" option.
4. Activate limit checking for the selected channels by setting "Limit Checking" to *On*.

Performing a Channel Power Measurement

A channel power measurement is started automatically according to the currently selected standard when you press the "Ch Power ACLR" softkey in the [MEAS] menu.

- ▶ To start a new measurement after changing the settings, press the [RUN Single] or [RUN CONT] hardkeys.
Alternatively, you can save your settings as a user standard (see ["User-Defined Configurations"](#) on page 234), then select that standard and start the measurement as usual by pressing the "Ch Power ACLR" softkey.

The configured measurement is performed (depending on the number of defined channels, see ["# of Adj Chan"](#) on page 237) and the results are displayed in the graphic and the result table.

User-Defined Configurations

You can define measurement configurations independently of a predefined standard and save the current ACLR configuration as a "user standard" in an xml file. You can then load the file and thus the settings again at a later time.

User-defined standards are not supported for "Fast ACLR" and Multi-Carrier ACLR measurements.



Compatibility to R&S FSP

User standards created on an analyzer of the R&S FSP family are compatible to the R&S ESR. User standards created on an R&S ESR, however, are not necessarily compatible to the analyzers of the R&S FSP family and may not work there.

To store a user-defined configuration

1. Select the "User Standard" softkey in the "Ch Power" menu.
2. Press "Save".
3. Define a file name for the user standard and select its storage location.
By default, the xml file is stored in C:\R_S\Instr\acp_std\. However, you can define any other storage location.
4. Press "Save".

The following parameter definitions are saved:

- "# of Adj Chan" on page 237
- Channel spacing and adjacent-channel spacing, see "Spacing" on page 239
- Channel bandwidth of transmission (Tx), adjacent (Adj) and alternate (Alt) channels, see "Bandwidth" on page 238
- Resolution bandwidth, see "Res BW Auto" on page 361
- Video bandwidth, see "Video BW Auto" on page 362
- Detector, see "Detector" on page 391
- ACLR limits and their state, see "Limits" on page 241
- Sweep time and sweep time coupling, see "Sweep Time" on page 243
- Trace and power mode, see "Select Trace" on page 243 and "Power Mode" on page 242

To load a user-defined configuration

- ▶ Press "User Standard > Load" and select the user standard file.

Softkeys for Channel and Adjacent-Channel Power Measurements

Ch Power ACLR.....	236
L CP/ACLR Standard.....	236
L CP/ACLR Settings.....	237
L # of TX Chan.....	237
L # of Adj Chan.....	237
L Channel Setup.....	237
L Bandwidth.....	238
L ACLR Reference.....	239
L Spacing.....	239
L Names.....	240
L Weighting Filter.....	240
L Limits.....	241
L Limit Checking.....	241
L Relative Limit.....	242
L Absolute Limit.....	242
L Check.....	242

L Chan Pwr/Hz.....	242
L Power Mode.....	242
L Clear/Write.....	242
L Max Hold.....	243
L Select Trace.....	243
L ACLR (Abs/Rel).....	243
L Adjust Settings.....	243
L Sweep Time.....	243
L Fast ACLR (On/Off).....	244
L Set CP Reference.....	244
L User Standard.....	244
L Load.....	245
L Save.....	245
L Delete.....	245
L Noise Correction.....	245
L Adjust Ref Lvl.....	246

Ch Power ACLR

Activates the active channel or adjacent-channel power measurement either for a single carrier signal or for several carrier signals, depending on the current measurement configuration, and opens a submenu to configure the channel power measurement. With default settings the measurement is performed by integrating the powers at the display points within the specified channels (IBW method).

If several TX channels (carriers) are activated, the number of measured values is increased to ensure that adjacent-channel powers are measured with adequate accuracy.

For general information on performing channel or adjacent-channel power measurements, see [Chapter 6.1.1.2, "Measuring Channel Power and Adjacent-Channel Power"](#), on page 225.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect` on page 720

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?` on page 721

`CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe]` on page 724

CP/ACLR Standard ← Ch Power ACLR

Opens an edit dialog box to select the settings according to predefined standards. For details on the available standards see ["Predefined CP/ACLR Standards"](#) on page 246. By default no standard is set.

The selection of the standard influences the following parameters (see ["Optimized Settings for CP/ACLR Test Parameters"](#) on page 247):

- channel spacing and adjacent-channel spacing
- channel bandwidth, adjacent-channel bandwidth, and type of filtering
- resolution bandwidth
- video bandwidth
- detector
- # of adjacent channels
- trace averaging (switched off)

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:PRESet` on page 728

CP/ACLR Settings ← Ch Power ACLR

Opens a submenu to configure the channel power and adjacent channel power measurement independently of the predefined standards (for details see also "[Predefined CP/ACLR Standards](#)" on page 246 and "[Optimized Settings for CP/ACLR Test Parameters](#)" on page 247).

of TX Chan ← CP/ACLR Settings ← Ch Power ACLR

Opens an edit dialog box to enter the number of carrier signals to be taken into account in channel and adjacent-channel power measurements. Values from 1 to 18 are allowed.

Remote command:

`[SENSe:]POWER:ACHannel:TXChannel:COUNT` on page 733

of Adj Chan ← CP/ACLR Settings ← Ch Power ACLR

Opens an edit dialog box to enter the number of adjacent channels to be considered in the adjacent-channel power measurement. Values from 0 to 12 are allowed.

The following measurements are performed depending on the number of the channels:


0	Only the channel powers are measured.
1	The channel powers and the power of the upper and lower adjacent channel are measured.
2	The channel powers, the power of the upper and lower adjacent channel, and of the next higher and lower channel (alternate channel 1) are measured.
3	The channel power, the power of the upper and lower adjacent channel, the power of the next higher and lower channel (alternate channel 1), and of the next but one higher and lower adjacent channel (alternate channel 2) are measured.
...	...
12	The channel power, the power of the upper and lower adjacent channel, and the power of the all higher and lower channels (alternate channel 1 to 11) are measured.

Remote command:

`[SENSe:]POWER:ACHannel:ACPairs` on page 730

Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Opens a dialog to define the channel settings for all channels, independent of the defined number of *used* TX or adjacent channels.

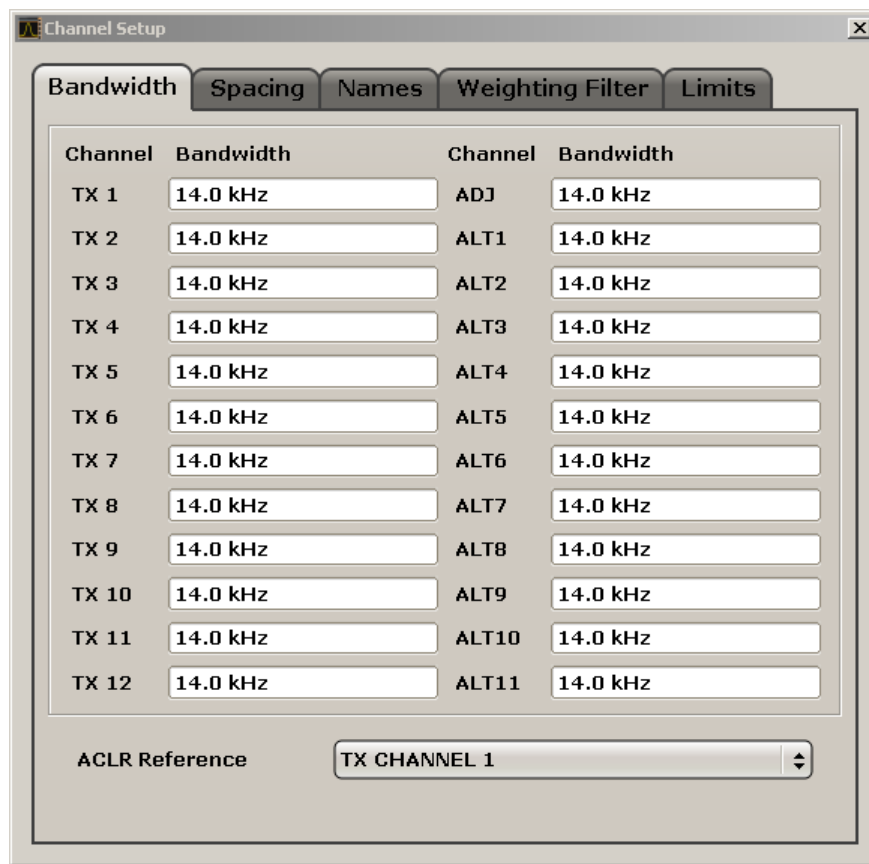

The dialog contains the following tabs:

- "Bandwidth" on page 238
- "Spacing" on page 239
- "Names" on page 240
- "Weighting Filter" on page 240
- "Limits" on page 241

Bandwidth ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define the channel bandwidths for the transmission channels and the adjacent channels. "TX" is only available for the multi-carrier ACLR measurement. When you change the bandwidth for one channel, the value is automatically also defined for all subsequent channels of the same type.

The transmission-channel bandwidth is normally defined by the transmission standard. The correct bandwidth is set automatically for the selected standard (see "Optimized Settings for CP/ACLR Test Parameters" on page 247).

- Measurements in zero span (see [Fast ACLR \(On/Off\)](#) softkey) are performed in the zero span mode. The channel limits are indicated by vertical lines. For measurements requiring channel bandwidths deviating from those defined in the selected standard the IBW method is to be used.
- With the IBW method (see [Fast ACLR \(On/Off\)](#) softkey), the channel bandwidth limits are marked by two vertical lines right and left of the channel center frequency. Thus you can visually check whether the entire power of the signal under test is within the selected channel bandwidth.

If measuring according to the IBW method ("Fast ACLR Off"), the bandwidths of the different adjacent channels are to be entered numerically. Since all adjacent channels often have the same bandwidth, the other alternate channels are set to the bandwidth of the adjacent channel when it is changed. Thus, only one value needs to be entered in case of equal adjacent channel bandwidths.

For details on available channel filters see [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366.

Remote command:

[SENSe:] POWER:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>]

on page 731

[SENSe:] POWER:ACHannel:BANDwidth|BWIDth:ACHannel on page 730

[SENSe:] POWER:ACHannel:BANDwidth|BWIDth:ALternate<channel>

on page 730

ACLR Reference ← Bandwidth ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Select the transmission channel to which the relative adjacent-channel power values should be referenced.

TX Channel 1	Transmission channel 1 is used.
Min Power TX Channel	The transmission channel with the lowest power is used as a reference channel.
Max Power TX Channel	The transmission channel with the highest power is used as a reference channel.
Lowest & Highest Channel	The outer left-hand transmission channel is the reference channel for the lower adjacent channels, the outer right-hand transmission channel that for the upper adjacent channels.

Remote command:

[SENSe:] POWER:ACHannel:REference:TXCHannel:MANual on page 737

[SENSe:] POWER:ACHannel:REference:TXCHannel:AUTO on page 736

Spacing ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define the channel spacings for the TX channels and for the adjacent channels.

- TX channels (left column)

TX1-2	spacing between the first and the second carrier
TX2-3	spacing between the second and the third carrier
...	...

The spacings between all adjacent TX channels can be defined separately. When you change the spacing for one channel, the value is automatically also defined for all subsequent TX channels in order to set up a system with equal TX channel spacing quickly. For different spacings, a setup from top to bottom is necessary.

If the spacings are not equal, the channel distribution according to the center frequency is as follows:

Odd number of TX channels	The middle TX channel is centered to center frequency.
Even number of TX channels	The two TX channels in the middle are used to calculate the frequency between those two channels. This frequency is aligned to the center frequency.

- **Adjacent channels (right column)**
 Since all the adjacent channels often have the same distance to each other, the modification of the adjacent-channel spacing (ADJ) causes a change in all higher adjacent-channel spacings (ALT1, ALT2, ...): they are all multiplied by the same factor (new spacing value/old spacing value). Thus only one value needs to be entered in case of equal channel spacing. A modification of a higher adjacent-channel spacing (ALT1, ALT2, ...) causes a change by the same factor in all higher adjacent-channel spacings, while the lower adjacent-channel spacings remain unchanged.

Example:

In the default setting, the adjacent channels have the following spacing: 20 kHz ("ADJ"), 40 kHz ("ALT1"), 60 kHz ("ALT2"), 80 kHz ("ALT3"), 100 kHz ("ALT4"), ...
 If the spacing of the first adjacent channel ("ADJ") is set to 40 kHz, the spacing of all other adjacent channels is multiplied by factor 2 to result in 80 kHz ("ALT1"), 120 kHz ("ALT2"), 160 kHz ("ALT3"), ...

If, starting from the default setting, the spacing of the 5th adjacent channel ("ALT4") is set to 150 kHz, the spacing of all higher adjacent channels is multiplied by factor 1.5 to result in 180 kHz ("ALT5"), 210 kHz ("ALT6"), 240 kHz ("ALT7"), ...

If a ACLR or MC-ACLR measurement is started, all settings according to the standard including the channel bandwidths and channel spacings are set and can be adjusted afterwards.

Remote command:

[SENSe:] POWer:ACHannel:SPACing:CHANnel<channel> on page 733

[SENSe:] POWer:ACHannel:SPACing[:ACHannel] on page 732

[SENSe:] POWer:ACHannel:SPACing:ALternate<channel> on page 733

Names ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define user-specific channel names for each channel. The names defined here are displayed in the result diagram and result table.

Remote command:

[SENSe:] POWer:ACHannel:NAME:ACHannel on page 731

[SENSe:] POWer:ACHannel:NAME:ALternate<channel> on page 732

[SENSe:] POWer:ACHannel:NAME:CHANnel<channel> on page 732

Weighting Filter ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Define weighting filters for all channels. Weighting filters are not available for all supported standards and cannot always be defined manually where they are available.

The dialog contains the following fields:

Field	Description
Channel	<ul style="list-style-type: none"> • TX 1-18: TX channels • ADJ: Adjacent channel • ALT1-11: Alternate channels
Active	Activates/Deactivates the weighting filter for the selected and any subsequent channels of the same type
Alpha	Defines the alpha value for the weighting filter for the selected and any subsequent channels of the same type

Remote command:

POW:ACH:FILT:CHAN1 ON, see [SENSe:]POW:ACHannel:FILTer[:STATe]:CHANnel<channel> on page 735

Activates the weighting filter for TX channel 1.

POW:ACH:FILT:ALPH:CHAN1 0,35 see [SENSe:]POW:ACHannel:FILTer:ALPHa:CHANnel<channel> on page 735

Sets the alpha value for the weighting filter for TX channel 1 to 0,35.

POW:ACH:FILT:ACH ON see [SENSe:]POW:ACHannel:FILTer[:STATe]:ACHannel on page 735

Activates the weighting filter for the adjacent channel.

POW:ACH:FILT:ALPH:ACH 0,35 see [SENSe:]POW:ACHannel:FILTer:ALPHa:ACHannel on page 734

Sets the alpha value for the weighting filter for the adjacent channel to 0,35.

POW:ACH:FILT:ALT1 ON see [SENSe:]POW:ACHannel:FILTer[:STATe]:ALTernate<channel> on page 735

Activates the alpha value for the weighting filter for the alternate channel 1.

POW:ACH:FILT:ALPH:ALT1 0,35 see [SENSe:]POW:ACHannel:FILTer:ALPHa:ALTernate<channel> on page 734

Sets the alpha value for the weighting filter for the alternate channel 1 to 0,35.

Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate and define the limits for the ACLR measurement.

Limit Checking ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate or deactivate limit checking for the ACLR measurement.

The following rules apply for the limits:

- A separate limit can be defined for each adjacent channel. The limit applies to both the upper and the lower adjacent channel.
- A relative and/or absolute limit can be defined. The check of both limit values can be activated independently.
- The R&S ESR checks adherence to the limits irrespective of whether the limits are absolute or relative or whether the measurement is carried out with absolute or relative levels. If both limits are active and if the higher of both limit values is exceeded, the measured value is marked by a preceding asterisk.

Remote command:

[CALCulate<n>:LIMit<k>:ACPowEr\[:STATe\]](#) on page 745

[CALCulate<n>:LIMit<k>:ACPowEr:ACHannel:RESult](#) on page 740

[CALCulate<n>:LIMit<k>:ACPowEr:ALternate<channel>\[:RELative\]](#)
on page 743

Relative Limit ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Defines a limit relative to the carrier signal.

Remote command:

CALC:LIM:ACP ON, see [CALCulate<n>:LIMit<k>:ACPowEr\[:STATe\]](#)
on page 745

CALC:LIM:ACP:<adjacent-channel> 0dBc,0dBc

CALC:LIM:ACP:<adjacent-channel>:STAT ON

Absolute Limit ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Defines an absolute limit.

Remote command:

CALC:LIM:ACP ON, see [CALCulate<n>:LIMit<k>:ACPowEr\[:STATe\]](#)
on page 745

CALC:LIM:ACP:<adjacent-channel>:ABS -10dBm,-10dBm

CALC:LIM:ACP:<adjacent-channel>:ABS:STAT ON, see [CALCulate<n>:LIMit<k>:ACPowEr:ACHannel:ABSolute:STATe](#) on page 738

Check ← Limits ← Channel Setup ← CP/ACLR Settings ← Ch Power ACLR

Activate or deactivate the limit to be considered during a limit check. The check of both limit values can be activated independently.

Chan Pwr/Hz ← CP/ACLR Settings ← Ch Power ACLR

If deactivated, the channel power is displayed in dBm. If activated, the channel power density is displayed instead. Thus, the absolute unit of the channel power is switched from dBm to dBm/Hz. The channel power density in dBm/Hz corresponds to the power inside a bandwidth of 1 Hz and is calculated as follows:

"channel power density = channel power – log₁₀(channel bandwidth)"

By means of this function it is possible e.g. to measure the signal/noise power density or use the additional functions "[ACLR \(Abs/Rel\)](#)" on page 243 and "[ACLR Reference](#)" on page 239 to obtain the signal to noise ratio.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:POWer:RESult:PHZ](#) on page 746

Power Mode ← CP/ACLR Settings ← Ch Power ACLR

Opens a submenu to select the power mode.

Clear/Write ← Power Mode ← CP/ACLR Settings ← Ch Power ACLR

If this mode is activated, the channel power and the adjacent channel powers are calculated directly from the current trace (default mode).

Remote command:

CALC:MARK:FUNC:POW:MODE WRIT, see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:MODE](#) on page 724

Max Hold ← **Power Mode** ← **CP/ACLR Settings** ← **Ch Power ACLR**

If this mode is activated, the power values are calculated from the current trace and compared with the previous power value using a maximum algorithm. The higher value is retained. If activated, the enhancement label "Pwr Max" is displayed.

Remote command:

CALC:MARK:FUNC:POW:MODE MAXH, see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:MODE](#) on page 724

Select Trace ← **CP/ACLR Settings** ← **Ch Power ACLR**

Opens an edit dialog box to enter the trace number on which the CP/ACLR measurement is to be performed. Only activated traces can be selected.

For details on trace modes see [Chapter 5.2.3, "Trace Modes"](#), on page 171.

Remote command:

[SENSe:]POWer:TRACe on page 725

ACLR (Abs/Rel) ← **CP/ACLR Settings** ← **Ch Power ACLR**

Switches between absolute and relative power measurement in the adjacent channels.

Abs	The absolute power in the adjacent channels is displayed in the unit of the y-axis, e.g. in dBm, dBμV.
Rel	The level of the adjacent channels is displayed relative to the level of the transmission channel in dBc.

Remote command:

[SENSe:]POWer:ACHannel:MODE on page 746

Adjust Settings ← **CP/ACLR Settings** ← **Ch Power ACLR**

Automatically optimizes all instrument settings for the selected channel configuration (channel bandwidth, channel spacing) within a specific frequency range (channel bandwidth). The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

For details on the settings of span, resolution bandwidth, video bandwidth, detector and trace averaging see ["Optimized Settings for CP/ACLR Test Parameters"](#) on page 247.

Remote command:

[SENSe:]POWer:ACHannel:PRESet on page 725

Sweep Time ← **Ch Power ACLR**

Opens an edit dialog box to enter the sweep time. With the RMS detector, a longer sweep time increases the stability of the measurement results.

The function of this softkey is identical to the [SweepTime Manual](#) softkey in the "Bandwidth" menu.

Remote command:

[SENSe:] SWEep:TIME on page 835

Fast ACLR (On/Off) ← Ch Power ACLR

Switches between the IBW method ("Fast ACLR Off") and the zero span method ("Fast ACLR On").

When switched on, the R&S ESR sets the center frequency consecutively to the different channel center frequencies and measures the power with the selected measurement time (= sweep time/number of channels). The RBW filters suitable for the selected standard and frequency offset are automatically used (e.g. root raised cos with IS 136). For details on available channel filters see [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366.

The RMS detector is used for obtaining correct power measurement results. Therefore this requires no software correction factors.

Measured values are output as a list. The powers of the transmission channels are output in dBm, the powers of the adjacent channels in dBm.

The sweep time is selected depending on the desired reproducibility of results. Reproducibility increases with sweep time since power measurement is then performed over a longer time period. As a general approach, it can be assumed that approx. 500 non-correlated measured values are required for a reproducibility of 0.5 dB (99 % of the measurements are within 0.5 dB of the true measured value). This holds true for white noise. The measured values are considered as non-correlated if their time interval corresponds to the reciprocal of the measured bandwidth.

With IS 136 the measurement bandwidth is approx. 25 kHz, i.e. measured values at an interval of 40 µs are considered as non-correlated. A measurement time of 40 ms is thus required per channel for 1000 measured values. This is the default sweep time which the R&S ESR sets in coupled mode. Approx. 5000 measured values are required for a reproducibility of 0.1 dB (99 %), i.e. the measurement time is to be increased to 200 ms.

Remote command:

[SENSe:] POWer:HSPeed on page 747

Set CP Reference ← Ch Power ACLR

Defines the currently measured channel power as the reference value if channel power measurement is activated. The reference value is displayed in the "Tx1 (Ref) Power" field; the default value is 0 dBm.

The softkey is available only for multi carrier ACLR measurements.

In adjacent-channel power measurement with one or several carrier signals, the power is always referenced to a transmission channel, i.e. no value is displayed for "Tx1 (Ref) Power".

Remote command:

[SENSe:] POWer:ACHannel:REference:AUTO ONCE on page 736

User Standard ← Ch Power ACLR

Opens a submenu to configure customized standards.

Load ← User Standard ← Ch Power ACLR

Opens a dialog to select and load a user defined ACLR standard.

Remote command:

Querying available standards:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANDARD:CATALOG?`
on page 729

Loading a standard:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:PRESet` on page 728

Save ← User Standard ← Ch Power ACLR

Saves the current ACLR configuration in an xml file in order for you to use it again at a later time. You can define the drive, path and file name in the corresponding dialog.

The default location is `C:\R_S\Instr\acp_std\`.

Note that the ACLR user standard is not supported by Fast ACLR and Multi Carrier ACLR measurements.

If you create your own standard, you can customize the following parameters:

- number of adjacent channels
- channel bandwidth of transmission (Tx), adjacent (Adj) and alternate (Alt) channels
- channel spacings
- resolution and video bandwidth
- ACLR limits and their state
- sweep time and sweep time coupling
- detector
- trace mode

Remote command:

Configuring channels:

see "[Configuring ACLR Channels](#)" on page 729 and "[Defining Weighting Filters](#)"
on page 734

Saving custom channel configurations:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANDARD:SAVE` on page 729

Delete ← User Standard ← Ch Power ACLR

Deletes the user standard that you select in the corresponding dialog box. Note that the R&S ESR deletes the file without further notice.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANDARD:DELETE` on page 729

Noise Correction ← Ch Power ACLR

If activated, the results are corrected by the instrument's inherent noise, which increases the dynamic range.

"ON"	A reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined. The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen. Noise correction must be switched on again manually after the change.
"OFF"	No noise correction is performed.
"AUTO"	Noise correction is performed. After a parameter change, noise correction is restarted automatically and a new correction measurement is performed.

Remote command:

[SENSe:]POWer:NCORrection on page 747

Adjust Ref Lvl ← Ch Power ACLR

Adjusts the reference level to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the R&S ESR or limiting the dynamic range by a too small S/N ratio.

For details on manual settings see "[Optimized Settings for CP/ACLR Test Parameters](#)" on page 247.

The reference level is not influenced by the selection of a standard. To achieve an optimum dynamic range, the reference level has to be set in a way that places the signal maximum close to the reference level without forcing an overload message. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is still significantly below the reference level.

Remote command:

[SENSe:]POWer:ACHannel:PRESet:RLEVel on page 726

Predefined CP/ACLR Standards

When using predefined standards for ACLR measurement, the test parameters for the channel and adjacent-channel measurements are configured automatically. The available standards are listed below.



Predefined standards are selected using the "CP/ACLR Standard" softkey or the `CALC:MARK:FUNC:POW:PRES` command.

Standard	GUI-Parameter	SCPI-Parameter
EUTRA/LTE Square	EUTRA/LTE Square	EUTRa
EUTRA/LTE Square/RRC	EUTRA/LTE Square/RRC	REUTRa
W-CDMA 3.84 MHz forward	W-CDMA 3GPP FWD	FW3G
W-CDMA 3.84 MHz reverse	W-CDMA 3GPP REV	RW3G

Standard	GUI-Parameter	SCPI-Parameter
CDMA IS95A forward	CDMA IS95A FWD	F8CD FIS95a
CDMA IS95A reverse	CDMA IS95A REV	R8CD RIS95a
CDMA IS95C Class 0 forward*)	CDMA IS95C Class 0 FWD	FIS95c0
CDMA IS95C Class 0 reverse*)	CDMA IS95C Class 0 REV	RIS95c0
CDMA J-STD008 forward	CDMA J-STD008 FWD	F19C FJ008
CDMA J-STD008 reverse	CDMA J-STD008 REV	R19C RJ008
CDMA IS95C Class 1 forward*)	CDMA IS95C Class 1 FWD	FIS95c1
CDMA IS95C Class 1 reverse*)	CDMA IS95C Class 1 REV	RIS95c1
CDMA 2000	CDMA 2000	S2CD
TD-SCDMA forward	TD SCDMA FWD	FTCD TCDMa
TD-SCDMA reverse	TD SCDMA REV	RTCD
WLAN 802.11A	WLAN 802.11A	AWLan
WLAN 802.11B	WLAN 802.11B	BWLan
WiMAX	WiMAX	WiMAX
WIBRO	WIBRO	WIBRO
GSM	GSM	GSM
RFID 14443	RFID 14443	RFID14443
TETRA	TETRA	TETRA
PDC	PDC	PDC
PHS	PHS	PHS
CDPD	CDPD	CDPD
APCO-25 Phase 2	APCO-25 P2	PAPCo25



For the R&S ESR, the channel spacing is defined as the distance between the center frequency of the adjacent channel and the center frequency of the transmission channel. The definition of the adjacent-channel spacing in standards IS95C and CDMA 2000 is different. These standards define the adjacent-channel spacing from the center of the transmission channel to the closest border of the adjacent channel. This definition is also used for the R&S ESR if the standards marked with an asterisk *) are selected.

Optimized Settings for CP/ACLR Test Parameters

The "Adjust Settings" softkey (see ["Adjust Settings"](#) on page 243) automatically optimizes all instrument settings for the selected channel configuration, as described in the following:

- **Frequency span**

The frequency span must at least cover the channels to be measured plus a measurement margin of approx. 10 %.

If the frequency span is large in comparison to the channel bandwidth (or the adjacent-channel bandwidths) being examined, only a few points on the trace are available per channel. This reduces the accuracy of the waveform calculation for the channel filter used, which has a negative effect on the measurement accuracy. It is therefore strongly recommended that the formulas mentioned be taken into consideration when selecting the frequency span.

For channel power measurements the [Adjust Settings](#) softkey sets the frequency span as follows:

"(No. of transmission channels – 1) x transmission channel spacing + 2 x transmission channel bandwidth + measurement margin"

For adjacent-channel power measurements, the [Adjust Settings](#) softkey sets the frequency span as a function of the number of transmission channels, the transmission channel spacing, the adjacent-channel spacing, and the bandwidth of one of adjacent-channels ADJ, ALT1 or ALT2, whichever is furthest away from the transmission channels:

"(No. of transmission channels – 1) x transmission channel spacing + 2 x (adjacent-channel spacing + adjacent-channel bandwidth) + measurement margin"

The measurement margin is approx. 10 % of the value obtained by adding the channel spacing and the channel bandwidth.

- **Resolution bandwidth (RBW)**

To ensure both, acceptable measurement speed and required selection (to suppress spectral components outside the channel to be measured, especially of the adjacent channels), the resolution bandwidth must not be selected too small or too large. As a general approach, the resolution bandwidth is to be set to values between 1% and 4% of the channel bandwidth.

A larger resolution bandwidth can be selected if the spectrum within the channel to be measured and around it has a flat characteristic. In the standard setting, e.g. for standard IS95A REV at an adjacent channel bandwidth of 30 kHz, a resolution bandwidth of 30 kHz is used. This yields correct results since the spectrum in the neighborhood of the adjacent channels normally has a constant level.

With the exception of the IS95 CDMA standards, the [Adjust Settings](#) softkey sets the resolution bandwidth (RBW) as a function of the channel bandwidth:

" $RBW \leq 1/40$ of channel bandwidth"

The maximum possible resolution bandwidth (with respect to the requirement $RBW \leq 1/40$) resulting from the available RBW steps (1, 3) is selected.

- **Video bandwidth (VBW)**

For a correct power measurement, the video signal must not be limited in bandwidth. A restricted bandwidth of the logarithmic video signal would cause signal averaging and thus result in a too low indication of the power (-2.51 dB at very low video bandwidths). The video bandwidth should therefore be selected at least three times the resolution bandwidth:

" $VBW \geq 3 \times RBW$ "

The [Adjust Settings](#) softkey sets the video bandwidth (VBW) as a function of the channel bandwidth (see formula above) and the smallest possible VBW with regard to the available step size will be selected.

- **Detector**

The **Adjust Settings** softkey selects the RMS detector. This detector is selected since it correctly indicates the power irrespective of the characteristics of the signal to be measured. The whole IF envelope is used to calculate the power for each measurement point. The IF envelope is digitized using a sampling frequency which is at least five times the resolution bandwidth which has been selected. Based on the sample values, the power is calculated for each measurement point using the following formula:

$$P_{\text{RMS}} = \sqrt{\frac{1}{N} \cdot \sum_{i=1}^N s_i^2}$$

where:

" s_i = linear digitized video voltage at the output of the A/D converter"

"N = number of A/D converter values per measurement point"

" P_{RMS} = power represented by a measurement point"

When the power has been calculated, the power units are converted into decibels and the value is displayed as a measurement point.

In principle, the sample detector would be possible as well. Due to the limited number of measurement points used to calculate the power in the channel, the sample detector would yield less stable results.

- **Trace averaging**

The **Adjust Settings** softkey switches off this function. Averaging, which is often performed to stabilize the measurement results, leads to a too low level indication and should therefore be avoided. The reduction in the displayed power depends on the number of averages and the signal characteristics in the channel to be measured.

- **Reference level**

The **Adjust Settings** softkey does not influence the reference level. It can be adjusted separately using the "Adjust Ref Lvl" softkey (see "**Adjust Ref Lvl**" on page 246).

6.1.1.3 Measuring the Carrier-to-Noise Ratio

The R&S ESR can easily determine the carrier-to-noise ratio, also normalized to a 1 Hz bandwidth.

The largest signal in the frequency span is the carrier. It is searched when the C/N or C/NO function is activated (see "**C/N, C/No**" on page 251) and is marked using a fixed reference marker ("FXD").

To determine the noise power, a channel at the defined center frequency is examined. The bandwidth of the channel is defined by the "Channel Bandwidth" setting. The power within this channel is integrated to obtain the noise power level. (If the carrier is within this channel, an extra step is required to determine the correct noise power level, see below.)

The noise power of the channel is subtracted from the maximum carrier signal level, and in the case of a C/NO measurement, it is referred to a 1 Hz bandwidth.



For this measurement, the RMS detector is activated.

The carrier-to-noise measurements are only available in the frequency domain (span >0).

There are two methods to measure the carrier-to-noise ratio:

- The carrier is outside the examined channel: In this case, it is sufficient to switch on the desired measurement function and to set the channel bandwidth. The carrier/noise ratio is displayed on the screen.
- The carrier is inside the examined channel: In this case, the measurement must be performed in two steps:
 - First, perform the reference measurement by switching on either the C/N or the C/NO measurement and waiting for the end of the next measurement run. The fixed reference marker is set to the maximum of the measured carrier signal.
 - Then, switch off the carrier so that only the noise of the test setup is active in the channel. The carrier-to-noise ratio is displayed after the subsequent measurement has been completed.



The frequency span should be set to approximately 4 times the channel bandwidth in order to measure the carrier-to-noise ratio correctly. This setting is defined automatically by the "Adjust Settings" function.

To determine the carrier-to-noise ratio

1. Press the "C/N, C/NO" softkey to configure the carrier-to-noise ratio measurement.
2. To change the channel bandwidth to be examined, press the "Channel Bandwidth" softkey.
3. To optimize the settings for the selected channel configuration, press the "Adjust Settings" softkey.
4. To activate the measurements without reference to the bandwidth, press the "C/N" softkey.
To activate the measurements with reference to the bandwidth, press the "C/NO" softkey .
5. If the carrier signal is located within the examined channel bandwidth, switch off the carrier signal so that only the noise is displayed in the channel and perform a second measurement.

The carrier-to-noise ratio is displayed after the measurement has been completed.

Measurement results

As a result of the carrier-to-noise measurement the evaluated bandwidth and the calculated C/N ratio are indicated beneath the diagram.

You can also query the determined carrier-to-noise ratio via the remote command `CALC:MARK:FUNC:POW:RES? CN` or `CALC:MARK:FUNC:POW:RES? CN0`, see [CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?](#) on page 721.

Softkeys for Carrier-to-Noise Ratio Measurements

C/N, C/No	251
L C/N	251
L C/No	251
L Channel Bandwidth	251
L Adjust Settings	252

C/N, C/No

Opens a submenu to configure the carrier/noise ratio measurement. Measurements without (C/N) and measurements with reference to the bandwidth (C/No) are possible.

Carrier-to-noise measurements are not available in zero span mode.

Note: Carrier-to-noise measurements are also available in the I/Q Analyzer, but only for **Spectrum** displays (see ["Display Config"](#) on page 460).

For general information on performing carrier-to-noise ratio measurements see [Chapter 6.1.1.3, "Measuring the Carrier-to-Noise Ratio"](#), on page 249.

C/N ← C/N, C/No

Switches the measurement of the carrier/noise ratio on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the [Marker to Trace](#) softkey in the "Marker To" menu.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:POWer:SElect](#) on page 720

[CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?](#) on page 721

[CALCulate<n>:MARKer<m>:FUNction:POWer\[:STATe\]](#) on page 724

C/No ← C/N, C/No

Switches the measurement of the carrier/noise ratio with reference to a 1 Hz bandwidth on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the [Marker to Trace](#) softkey in the "Marker To" menu.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:POWer:SElect](#) on page 720

[CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?](#) on page 721

[CALCulate<n>:MARKer<m>:FUNction:POWer\[:STATe\]](#) on page 724

Channel Bandwidth ← C/N, C/No

Opens an edit dialog box to enter the measurement channel bandwidth for each channel.

The default setting is 14 kHz.

Note that in the I/Q Analyzer the channel bandwidth does not change the measurement span or sampling rate; it merely defines the range for the carrier-to-noise analysis.

Remote command:

[SENSe:]POWER:ACHannel:ACPairs on page 730

Adjust Settings ← C/N, C/No

Enables the RMS detector (see also [Chapter 6.3.1.5, "Detector Overview"](#), on page 399) and adjusts the span to the selected channel bandwidth according to:

"4 x channel bandwidth + measurement margin"

The adjustment is performed once; if necessary, the setting can be changed later on.

Note: in the I/Q Analyzer, this function is not available. The channel bandwidth defines the range for the carrier-to-noise analysis.

Remote command:

[SENSe:]POWER:ACHannel:PRESet on page 725

6.1.1.4 Measuring the Occupied Bandwidth


An important characteristic of a modulated signal is its occupied bandwidth. In a radio communications system for instance the occupied bandwidth must be limited to enable distortion-free transmission in adjacent channels. The occupied bandwidth is defined as the bandwidth containing a defined percentage of the total transmitted power. A percentage between 10 % and 99.9 % can be set.

The measurement principle is the following: The bandwidth containing 99% of the signal power is to be determined, for example. The routine first calculates the total power of all displayed points of the trace. In the next step, the points from the right edge of the trace are summed up until 0.5 % of the total power is reached. Auxiliary marker 1 is positioned at the corresponding frequency. Then the points from the left edge of the trace are summed up until 0.5 % of the power is reached. Auxiliary marker 2 is positioned at this point. 99 % of the power is now between the two markers. The distance between the two frequency markers is the occupied bandwidth which is displayed in the marker field.



New: OBW now also possible within defined search limits - multi-carrier OBW measurement in one sweep

The occupied bandwidth of the signal can be determined within defined search limits instead of for the entire signal. Thus, only a single sweep is required to determine the OBW for a multi-carrier signal. To do so, search limits are defined for an individual carrier and the OBW measurement is restricted to the frequency range contained within those limits. Then the search limits are adapted for the next carrier and the OBW is automatically re-calculated for the new range.

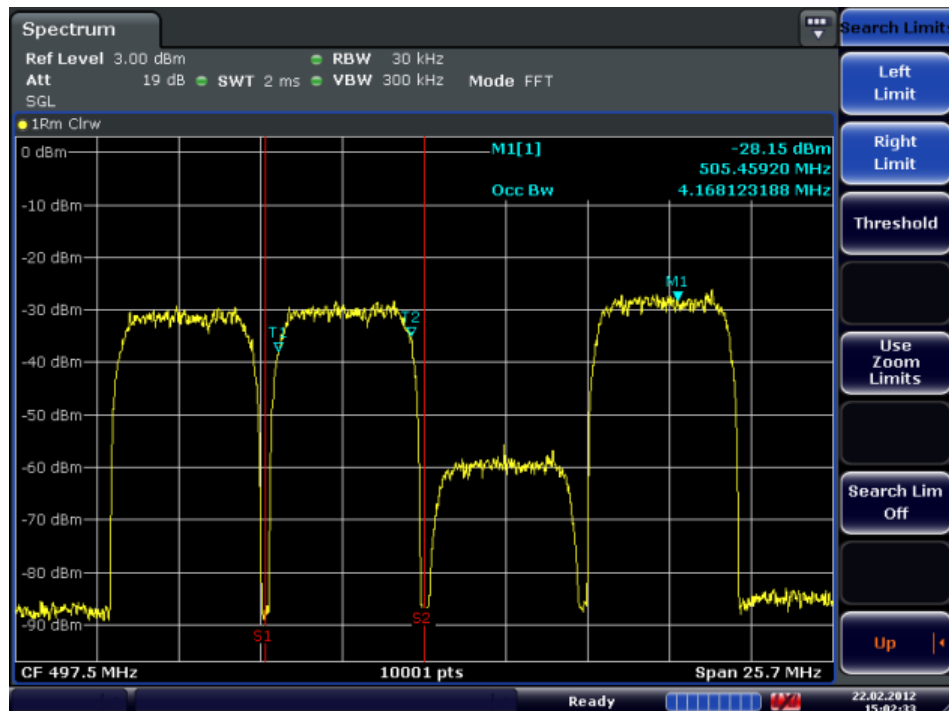

The OBW measurement uses the same search limits as defined for marker search (see "Search Limits" on page 206). However, only the left and right limits are considered.

To ensure correct power measurement, especially for noise signals, and to obtain the correct occupied bandwidth, the following prerequisites and settings are necessary:

- Only the signal to be measured is displayed on the screen. An additional signal would falsify the measurement.
- $RBW \ll$ occupied bandwidth (approx. 1/20 of occupied bandwidth, for voice communication type 300 Hz or 1 kHz)
- $VBW \geq 3 \times RBW$
- RMS detector
- $Span \geq 2$ to $3 \times$ occupied bandwidth

Some of the measurement specifications (e.g. PDC, RCR STD-27B) require measurement of the occupied bandwidth using a peak detector. The detector setting of the R&S ESR has to be changed accordingly then.



A remote control programming example is described in [Chapter 11.17.5, "Occupied Bandwidth Measurement"](#), on page 1013.

To determine the occupied bandwidth

1. Press the **OBW** softkey to activate the measurement of the occupied bandwidth. The corresponding submenu is displayed.
2. Press the "% Power Bandwidth" softkey to enter the percentage of power (see "[% Power Bandwidth \(span > 0\)](#)" on page 255).
3. To change the channel bandwidth for the transmission channel, press the "Channel Bandwidth" softkey (see "[Channel Bandwidth \(span > 0\)](#)" on page 255).
4. To optimize the settings for the selected channel configuration, press the **Adjust Settings** softkey. For details see also "[Optimized Settings for CP/ACLR Test Parameters](#)" on page 247.
5. To adjust the reference level to the measured total power after the first sweep, press the **Adjust Ref Lvl** softkey.

Measurement results

As a result of the OBW measurement the occupied bandwidth ("Occ BW") is indicated in the marker results. Furthermore, the marker at the center frequency and the temporary markers are indicated.



The OBW calculation is repeated if the [Search Limits](#) are changed, without performing a new sweep. Thus, the OBW for a multi-carrier signal can be determined using only one sweep.

The determined occupied bandwidth can also be queried using the remote command `CALC:MARK:FUNC:POW:RES? OBW` or `CALC:MARK:FUNC:POW:RES? AOBW`. While the `OBW` parameter returns only the occupied bandwidth, the `AOBW` parameter also returns the position and level of the temporary markers T1 and T2 used to calculate the occupied bandwidth.

Softkeys for Occupied Bandwidth (OBW) Measurements

OBW	254
L % Power Bandwidth (span > 0).....	255
L Channel Bandwidth (span > 0).....	255
L Adjust Ref Lvl (span > 0).....	255
L Adjust Settings.....	255

OBW

Activates measurement of the occupied bandwidth according to the current configuration and opens a submenu to configure the measurement. The occupied bandwidth is displayed in the marker display field and marked on the trace by temporary markers. For details see [Chapter 6.1.1.4, "Measuring the Occupied Bandwidth"](#), on page 252.

This measurement is not available in zero span.

The measurement is performed on the trace with marker 1. In order to evaluate another trace, marker 1 must be placed on another trace (see the [Marker to Trace](#) soft-key in the "Marker" menu).

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect](#) on page 720

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?](#) on page 721

[CALCulate<n>:MARKer<m>:FUNCTION:POWER\[:STATe\]](#) on page 724

% Power Bandwidth (span > 0) ← OBW

Opens an edit dialog box to enter the percentage of total power in the displayed frequency range which defines the occupied bandwidth. Values from 10% to 99.9% are allowed.

Remote command:

[\[SENSe:\] POWER: BANDwidth| BWIDth](#) on page 749

Channel Bandwidth (span > 0) ← OBW

Opens an edit dialog box to enter the channel bandwidth for the transmission channel. The specified channel bandwidth is used for optimization of the test parameters (for details see "[Optimized Settings for CP/ACLR Test Parameters](#)" on page 247). The default setting is 14 kHz.

For measurements in line with a specific transmission standard, the bandwidth specified by the standard for the transmission channel must be entered.

Remote command:

[\[SENSe:\] POWER: ACHannel: BANDwidth| BWIDth\[:CHANnel<channel>\]](#)
on page 731

Adjust Ref Lvl (span > 0) ← OBW

Adjusts the reference level to the measured total power of the signal. the softkey is activated after the first sweep with active measurement of the occupied bandwidth has been completed and the total power of the signal is thus known.

Adjusting the reference level ensures that the signal path will not be overloaded and the dynamic range not limited by too low a reference level. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is distinctly below the reference level. If the measured channel power is equal to the reference level, the signal path cannot be overloaded.

Remote command:

[\[SENSe:\] POWER: ACHannel: PRESet: RLEVEL](#) on page 726

Adjust Settings ← OBW

Automatically optimizes all instrument settings for the selected channel configuration (channel bandwidth, channel spacing) within a specific frequency range (channel bandwidth). The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

For details on the settings of span, resolution bandwidth, video bandwidth, detector and trace averaging see ["Optimized Settings for CP/ACLR Test Parameters"](#) on page 247.

Remote command:

`[SENSe:] POWER:ACHannel:PRESet` on page 725

6.1.1.5 Measuring with Spectrum Emission Masks

The Spectrum Emission Mask (SEM) measurement defines a measurement that monitors compliance with a spectral mask. The SEM measurement is used to measure the excess emissions of a TX channel that would interfere to other channels or to other systems.

The SEM measurement of the base unit allows a flexible definition of all parameters in the SEM measurement. It is performed using the [Spectrum Emission Mask](#) softkey in the "Measurement" menu. Most parameters are defined in the "Sweep List" dialog box (see ["Sweep List dialog box"](#) on page 258). After a preset, the sweep list contains a set of default ranges and parameters. For each range, you can change the parameters. For information on other SEM settings, see the description of the corresponding softkeys (["Spectrum Emission Mask"](#) on page 258).

If you want a parameter set to be available permanently, you can create an XML file for this configuration and, if necessary, export this file to another application (for details refer to ["Format Description of Spectrum Emission Mask XML Files"](#) on page 275 and ["ASCII File Export Format \(Spectrum Emission Mask\)"](#) on page 280).

Some predefined XML files are provided that contain ranges and parameters according to the selected standard (see ["Provided XML Files for the Spectrum Emission Mask Measurement"](#) on page 272).

In order to improve the performance of the R&S ESR for spectrum emission mask measurements, a "Fast SEM" mode is available. For details see ["Fast Spectrum Emission Mask Measurements"](#) on page 281.

Monitoring compliance of the spectrum is supported by a special limit check for SEM measurements, see ["Working with Limit Lines in SEM Measurements"](#) on page 271.



A remote control programming example is described in [Chapter 11.17.12, "Spectrum Emission Mask Measurement"](#), on page 1024.

Softkeys for Spectrum Emission Mask (SEM) Measurements.....	257
Result Evaluation.....	268
Ranges and Range Settings.....	269
Working with Limit Lines in SEM Measurements.....	271
Provided XML Files for the Spectrum Emission Mask Measurement.....	272

Format Description of Spectrum Emission Mask XML Files.....	275
ASCII File Export Format (Spectrum Emission Mask).....	280
Fast Spectrum Emission Mask Measurements.....	281

Softkeys for Spectrum Emission Mask (SEM) Measurements


Spectrum Emission Mask.....	258
L Sweep List.....	258
L Sweep List dialog box.....	258
L Range Start / Range Stop.....	259
L Fast SEM.....	259
L Filter Type.....	259
L RBW.....	259
L VBW.....	260
L Sweep Time Mode.....	260
L Sweep Time.....	260
L Ref. Level.....	260
L RF Att. Mode.....	260
L RF Attenuator.....	260
L Preamp.....	260
L Transd. Factor.....	260
L Limit Check 1-4.....	261
L Abs Limit Start.....	261
L Abs Limit Stop.....	261
L Rel Limit Start.....	261
L Rel Limit Stop.....	261
L Close Sweep List.....	262
L Insert before Range.....	262
L Insert after Range.....	262
L Delete Range.....	262
L Symmetric Setup.....	262
L Edit Reference Range.....	263
L List Evaluation.....	263
L List Evaluation (On/Off).....	264
L Margin.....	264
L Show Peaks.....	264
L Save Evaluation List.....	264
L ASCII File Export.....	264
L Decim Sep.....	265
L Edit Reference Range.....	265
L Edit Power Classes.....	266
L Used Power Classes.....	266
L PMin/PMax.....	266
L Sweep List.....	267
L Add/Remove.....	267
L Load Standard.....	267
L Save As Standard.....	267
L Meas Start/Stop.....	267
L Restore Standard Files.....	267

Spectrum Emission Mask

Opens a submenu to configure the Spectrum Emission Mask measurement.

The Spectrum Emission Mask (SEM) measurement defines a measurement that monitors compliance with a spectral mask. The SEM measurement of the base unit allows a flexible definition of all parameters in the SEM measurement.

For general information on performing SEM measurements, see [Chapter 6.1.1.5, "Measuring with Spectrum Emission Masks"](#), on page 256.

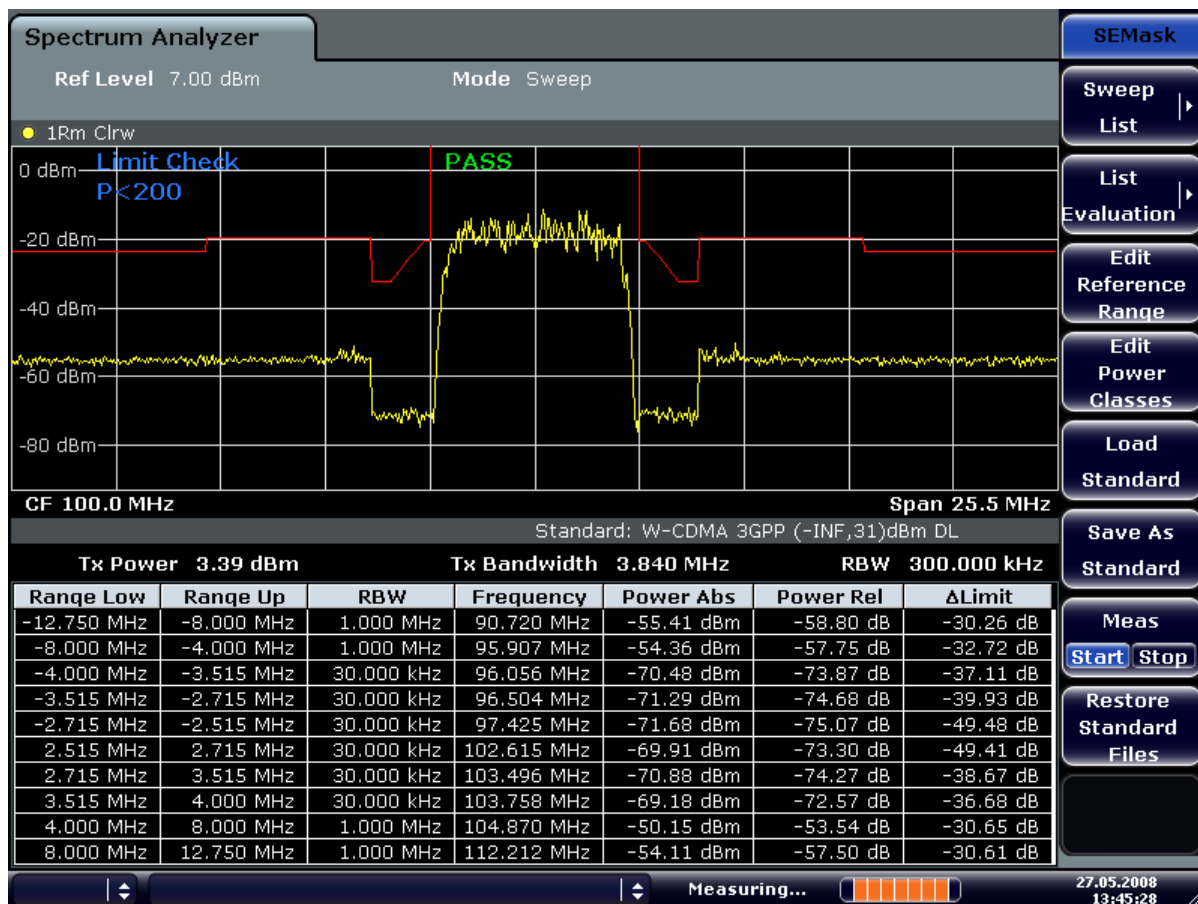

Remote command:

SENS:SWE:MODE ESP, see [SENSe:]SWEep:MODE on page 761

Sweep List ← Spectrum Emission Mask

Opens a submenu to edit the sweep list and displays the "Sweep List" dialog box.

Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

After a preset, the sweep list contains a set of default ranges and parameters. For each range, you can change the parameters listed below. To insert or delete ranges, use the "Insert Before Range", "Insert After Range", "Delete Range" softkeys. The measurement results are not updated during editing but on closing the dialog box ("Edit Sweep List/ Close Sweep List" softkey, see ["Close Sweep List"](#) on page 262).

The changes of the sweep list are only kept until you load another parameter set (by pressing PRESET or by loading an XML file). If you want a parameter set to be available permanently, create an XML file for this configuration (for details refer to "[Format Description of Spectrum Emission Mask XML Files](#)" on page 275).

If you load one of the provided XML files ("Load Standard" softkey, see "[Load Standard](#)" on page 267), the sweep list contains ranges and parameters according to the selected standard. For further details refer also to "[Provided XML Files for the Spectrum Emission Mask Measurement](#)" on page 272.

Note: If you edit the sweep list, always follow the rules and consider the limitations described in "[Ranges and Range Settings](#)" on page 269.

Range Start / Range Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the start frequency/stop frequency of the selected range. Follow the rules described in "[Ranges and Range Settings](#)" on page 269.

In order to change the start/stop frequency of the first/last range, select the appropriate span with the SPAN key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Frequency values for each range have to be defined relative to the center frequency. The reference range has to be centered on the center frequency. The minimum span of the reference range is given by the current TX Bandwidth.

Remote command:

[SENSe:]ESpectrum:RANGe<range>[:FREQUENCY]:START on page 765

[SENSe:]ESpectrum:RANGe<range>[:FREQUENCY]:STOP on page 765

Fast SEM ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates "Fast SEM" mode for all ranges in the sweep list. For details see "[Fast Spectrum Emission Mask Measurements](#)" on page 281.

Note: If "Fast SEM" mode is deactivated while [Symmetric Setup](#) mode is on, "Symmetrical Setup" mode is automatically also deactivated.

If "Fast SEM" mode is activated while "Symmetrical Setup" mode is on, not all range settings can be set automatically.

Remote command:

[SENSe:]ESpectrum:HighSPeed on page 762

Filter Type ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the filter type for this range. For details on filters see also [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366.

Remote command:

[SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE on page 764

RBW ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the RBW value for this range.

Remote command:

[SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution] on page 763

VBW ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the VBW value for this range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:BANDwidth:VIDeo](#) on page 763

Sweep Time Mode ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates or deactivates the auto mode for the sweep time.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:SWEep:TIME:AUTO](#) on page 770

Sweep Time ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the sweep time value for the range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:SWEep:TIME](#) on page 769

Ref. Level ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the reference level for the range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:RLEVel](#) on page 769

RF Att. Mode ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Activates or deactivates the auto mode for RF attenuation.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO](#) on page 766

RF Attenuator ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the attenuation value for that range.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:INPut:ATTenuation](#) on page 766

Preamp ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Switches the preamplifier on or off.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:INPut:GAIN:STATe](#) on page 766

Transd. Factor ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:TRANsducer](#) on page 770

Limit Check 1-4 ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets the type of limit check for all ranges.

For details on limit checks see ["Working with Limit Lines in SEM Measurements"](#) on page 271.

For details on limit checks see the base unit description ["Working with Lines in SEM"](#).

The limit state affects the availability of all limit settings (["Abs Limit Start"](#) on page 261, ["Abs Limit Stop"](#) on page 261, ["Rel Limit Start"](#) on page 261, ["Rel Limit Stop"](#) on page 261).

Depending on the number of active power classes (see ["Power Class"](#) dialog box), the number of limits that can be set varies. Up to four limits are possible. The sweep list is extended accordingly.

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:LIMit<source>:STATe](#) on page 769
[CALCulate<n>:LIMit<k>:FAIL?](#) on page 718

Abs Limit Start ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets an absolute limit value at the start frequency of the range [dBm].

This parameter is only available if the limit check is set accordingly (see ["Limit Check 1-4"](#) on page 261).

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:START](#)
on page 767

Abs Limit Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets an absolute limit value at the stop frequency of the range [dBm].

This parameter is only available if the limit check is set accordingly (see ["Limit Check 1-4"](#) on page 261).

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP](#)
on page 767

Rel Limit Start ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a relative limit value at the start frequency of the range [dBc].

This parameter is only available if the limit check is set accordingly (see ["Limit Check 1-4"](#) on page 261).

Remote command:

[\[SENSe:\]ESpectrum:RANGe<range>:LIMit<source>:RELative:START](#)
on page 768

Rel Limit Stop ← Sweep List dialog box ← Sweep List ← Spectrum Emission Mask

Sets a relative limit value at the stop frequency of the range [dBc].

This parameter is only available if the limit check is set accordingly (see "[Sweep List dialog box](#)" on page 258).

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP`
on page 768

Close Sweep List ← Sweep List ← Spectrum Emission Mask

Closes the "Sweep List" dialog box and updates the measurement results.

Insert before Range ← Sweep List ← Spectrum Emission Mask

Inserts a new range to the left of the currently focused range. The range numbers of the currently focused range and all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to "[Ranges and Range Settings](#)" on page 269.

Remote command:

`ESP:RANG3:INS BEF`, see `[SENSe:]ESpectrum:RANGe<range>:INSert`
on page 767

Insert after Range ← Sweep List ← Spectrum Emission Mask

Inserts a new range to the right of the currently focused range. The range numbers of all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to "[Ranges and Range Settings](#)" on page 269.

Remote command:

`ESP:RANG1:INS AFT`, see `[SENSe:]ESpectrum:RANGe<range>:INSert`
on page 767

Delete Range ← Sweep List ← Spectrum Emission Mask

Deletes the currently focused range, if possible. The range numbers are updated accordingly. For further details refer to "[Ranges and Range Settings](#)" on page 269.

Remote command:

`[SENSe:]ESpectrum:RANGe<range>:DELete` on page 764

Symmetric Setup ← Sweep List ← Spectrum Emission Mask

If activated, the current sweep list configuration is changed to define a symmetrical setup regarding the reference range. The number of ranges to the left of the reference range is reflected to the right, i.e. any missing ranges on the right are inserted, while superfluous ranges are removed. The values in the ranges to the right of the reference range are adapted symmetrically to those in the left ranges.


Any changes to the range settings in active "Symmetric Setup" mode lead to symmetrical changes in the other ranges (where possible). In particular, this means:

- Inserting ranges: a symmetrical range is inserted on the other side of the reference range
- Deleting ranges: the symmetrical range on the other side of the reference range is also deleted
- Editing range settings: the settings in the symmetrical range are adapted accordingly

Note: If "Fast SEM" mode is deactivated while "Symmetric Setup" mode is on, "Sym Setup" mode is automatically also deactivated.
If "Fast SEM" mode is activated while "Symmetric Setup" mode is on, not all range settings can be set automatically.

Edit Reference Range ← Sweep List ← Spectrum Emission Mask

Opens the "Reference Range" dialog box to edit the additional settings used for SEM measurements.

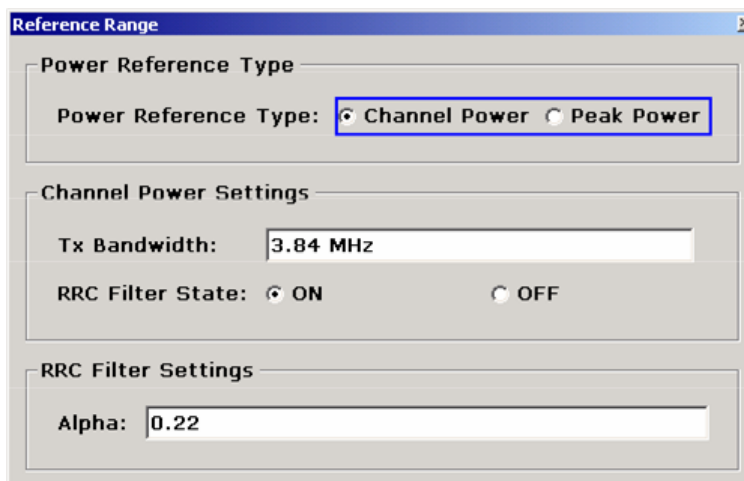

Two different power reference types are supported:

- "Peak Power"
Measures the highest peak within the reference range.
- "Channel Power"
Measures the channel power within the reference range (integral bandwidth method).
If the "Channel Power" reference power type is activated, the dialog box is extended to define additional settings:
- "Tx Bandwidth"
Defines the bandwidth used for measuring the channel power:
minimum span ≤ value ≤ span of reference range
- "RRC Filter State"
Activates or deactivates the use of an RRC filter.
- "RRC Filter Settings"
Sets the alpha value of the RRC filter. This window is only available if the RRC filter is activated.

For further details refer to ["Ranges and Range Settings"](#) on page 269.

Remote command:

[SENSe:]ESpectrum:RTYPE on page 772

[SENSe:]ESpectrum:BWID on page 771

[SENSe:]ESpectrum:FILTer[:RRC][:STATe] on page 772

[SENSe:]ESpectrum:FILTer[:RRC]:ALPHA on page 771

List Evaluation ← Spectrum Emission Mask

Opens a submenu to edit the list evaluation settings.

List Evaluation (On/Off) ← List Evaluation ← Spectrum Emission Mask

Activates or deactivates the list evaluation.

Remote command:

Turning list evaluation on and off:

[CALCulate<n>:PEAKsearch|PSEarch:AUTO](#) on page 758

Querying list evaluation results:

[TRACe<n>:DATA](#) on page 726

Margin ← List Evaluation ← Spectrum Emission Mask

Opens an edit dialog box to enter the margin used for the limit check/peak search.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:MARGin](#) on page 680

Show Peaks ← List Evaluation ← Spectrum Emission Mask

In the diagram, marks all peaks with blue squares that have been listed during an active list evaluation.

Remote command:

[CALCulate<n>:ESpectrum:PSEarch|:PEAKsearch:PSHow](#) on page 778

Save Evaluation List ← List Evaluation ← Spectrum Emission Mask

Opens the "ASCII File Export Name" dialog box to save the result in ASCII format to a specified file and directory. For further details refer also to the "ASCII File Export" soft-key ("[ASCII File Export](#)" on page 264).

Remote command:

[MMEMory:STORE<n>:LIST](#) on page 777

ASCII File Export ← Save Evaluation List ← List Evaluation ← Spectrum Emission Mask

Opens the "ASCII File Export Name" dialog box and saves the active peak list in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the marker data. For details on an ASCII file see [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see "[Decim Sep](#)" on page 200).

An example of an output file for Spectrum Emission Mask measurements is given in "[ASCII File Export Format \(Spectrum Emission Mask\)](#)" on page 280.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 850

[MMEMory:STORE<n>:LIST](#) on page 777

Decim Sep ← Save Evaluation List ← List Evaluation ← Spectrum Emission Mask


Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

[FORMat:DEXPort:DSEParator](#) on page 850

Edit Reference Range ← Spectrum Emission Mask

Opens the "Reference Range" dialog box to edit the additional settings used for SEM measurements.

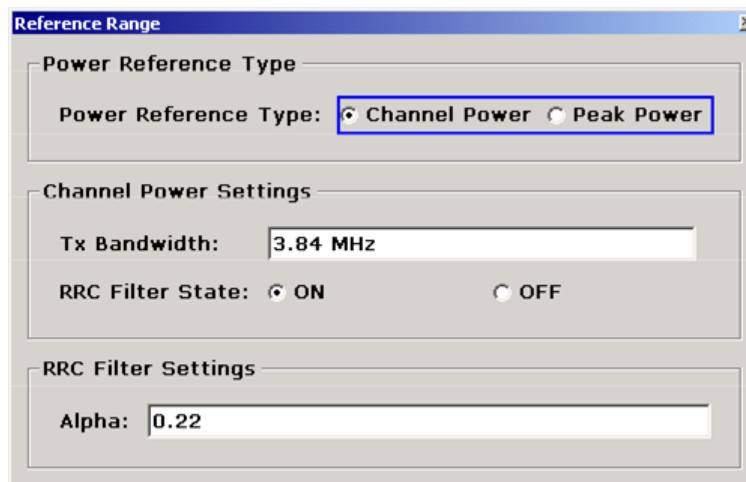

Two different power reference types are supported:

- "Peak Power"
Measures the highest peak within the reference range.
- "Channel Power"
Measures the channel power within the reference range (integral bandwidth method).
If the "Channel Power" reference power type is activated, the dialog box is extended to define additional settings:
- "Tx Bandwidth"
Defines the bandwidth used for measuring the channel power:
minimum span ≤ value ≤ span of reference range
- "RRC Filter State"
Activates or deactivates the use of an RRC filter.
- "RRC Filter Settings"
Sets the alpha value of the RRC filter. This window is only available if the RRC filter is activated.

For further details refer to ["Ranges and Range Settings"](#) on page 269.

Remote command:

[\[SENSe:\]ESpectrum:RTYPE](#) on page 772

[\[SENSe:\]ESpectrum:BWID](#) on page 771

[\[SENSe:\]ESpectrum:FILTer\[:RRC\]\[:STATe\]](#) on page 772

[\[SENSe:\]ESpectrum:FILTer\[:RRC\]:ALPHa](#) on page 771

Edit Power Classes ← Spectrum Emission Mask

Opens a dialog box to modify the power class settings.

Power Class	PMin	<=P<	PMax
Power Class 1	-INF		-63.5 dBm
Power Class 2	-63.5 dBm		-40.0 dBm
Power Class 3	-40.0 dBm		+INF

Used Power Classes ← Edit Power Classes ← Spectrum Emission Mask

Choose the power classes to be used from this dropdown menu. It is only possible to select either one of the defined power classes or all of the defined power classes together.

Only power classes for which limits are defined are available for selection.

If "All" is selected, the power class that corresponds to the currently measured power in the reference range is used. The limits assigned to that power class are applied (see "PMin/PMax" on page 266).

Remote command:

```
CALCulate<n>:LIMit<k>:ESpectrum:PClass<Class>[:EXCLUSIVE]
```

on page 774

To define all limits in one step:

```
CALCulate<n>:LIMit<k>:ESpectrum:PClass<Class>:LIMit[:STATE]
```

on page 774

PMin/PMax ← Edit Power Classes ← Spectrum Emission Mask

Defines the level limits for each power class. The range always starts at -200 dBm (-INF) and always stops at 200 dBm (+INF). These fields cannot be modified. If more than one Power Class is defined, the value of "PMin" must be equal to the value of "PMax" of the last Power Class and vice versa.

Note that the power level may be equal to the lower limit, but must be lower than the upper limit:

$$P_{\min} \leq P < P_{\max}$$

Remote command:

`CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum` on page 775

`CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum` on page 775

Sweep List ← Edit Power Classes ← Spectrum Emission Mask

See "Sweep List" on page 258

Add/Remove ← Edit Power Classes ← Spectrum Emission Mask

Activates or deactivates power classes to be defined. Up to four power classes can be defined. The number of active power classes affects the availability of the items of the Used Power Classes dropdown menu.

Remote command:

`CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLusive]`
on page 774

Load Standard ← Spectrum Emission Mask

Opens a dialog box to select an XML file which includes the desired standard specification. For details on the provided XML files refer to "Provided XML Files for the Spectrum Emission Mask Measurement" on page 272.

Remote command:

`[SENSe:]ESpectrum:PRESet[:STANdard]` on page 760

Save As Standard ← Spectrum Emission Mask

Opens the "Save As Standard" dialog box, in which the currently used SEM settings and parameters can be saved and exported into an *.xml file. Enter the name of the file in the "File name" field. For details on the structure and contents of the XML file refer to "Format Description of Spectrum Emission Mask XML Files" on page 275.

Remote command:

`[SENSe:]ESpectrum:PRESet:STORe` on page 760

Meas Start/Stop ← Spectrum Emission Mask

Aborts/restarts the current measurement and displays the status:

"Start" The measurement is currently running.

"Stop" The measurement has been stopped, or, in single sweep mode, the end of the sweep has been reached.

Remote command:

`ABORt` on page 640

`INITiate<n>:ESpectrum` on page 761

Restore Standard Files ← Spectrum Emission Mask

Copies the XML files from the C:\R_S\instr\sem_backup folder to the C:\R_S\instr\sem_std folder. Files of the same name are overwritten.

Remote command:


`[SENSe:]ESpectrum:PRESet:REStore` on page 760

Result Evaluation

As a result of the Spectrum Emission Mask measurement, the measured signal levels, the result of the limit check (mask monitoring) and the defined limit line are displayed in a diagram (see also ["Working with Limit Lines in SEM Measurements"](#) on page 271). Furthermore, the TX channel power "P" is indicated in relation to the defined power class ranges.

Example:

For example, "P<31" is indicated if the lowest power class is defined from infinity to 31 and the power is currently 17 dBm.

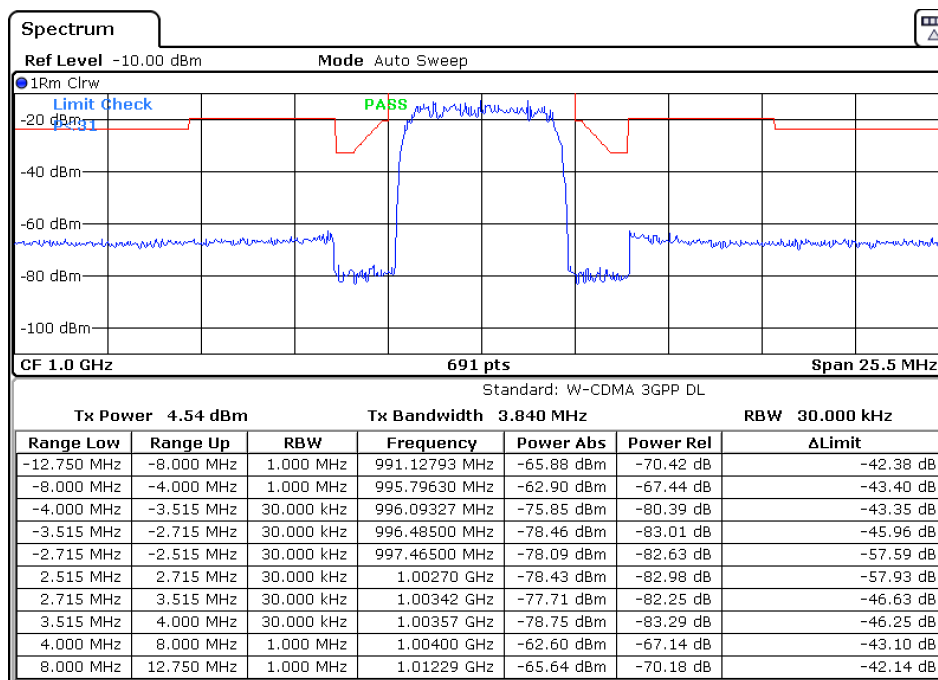

In addition to the graphical results of the SEM measurement displayed in the diagram, a result table is displayed to evaluate the limit check results (see also ["Working with Limit Lines in SEM Measurements"](#) on page 271).


The following information is provided in the result table:

Label	Description
General Information	
Standard	Loaded standard settings
Tx Power	Tx channel power
Tx Bandwidth	Tx channel bandwidth
RBW	RBW for the Tx channel
Range results	
Range Low	Frequency range start for range the peak value belongs to

Label	Description
Range Up	Frequency range stop for range the peak value belongs to
RBW	RBW of the range
Frequency	Frequency
Power Abs	Absolute power level
Power Rel	Power level relative to the TX channel power
ΔLimit	Deviation of the power level from the defined limit

In which detail the data is displayed in the result table can be defined in the [List Evaluation](#) menu. By default, one peak per range is displayed. However, you can change the settings to display only peaks that exceed a threshold ("Margin").

In addition to listing the peaks in the list evaluation, detected peaks can be indicated by blue squares in the diagram ("Show Peaks").

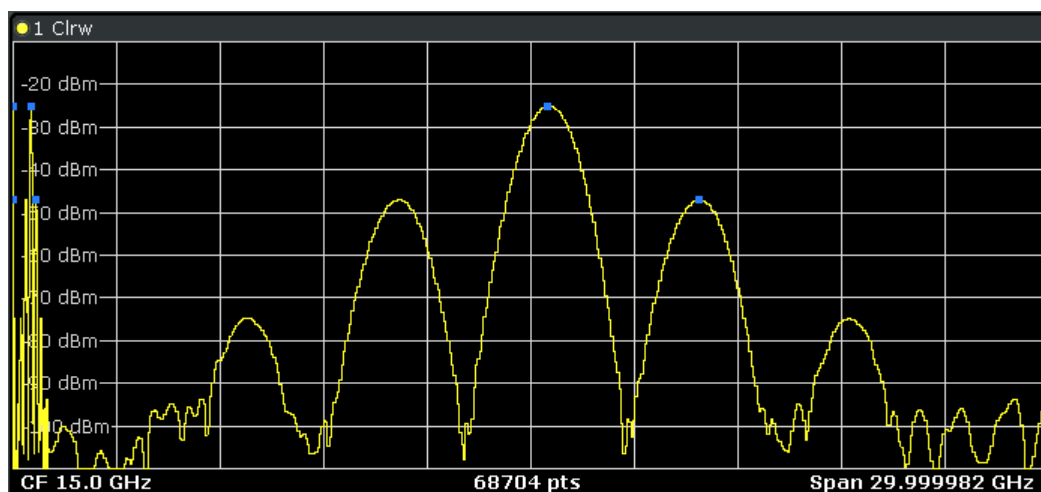

Furthermore, you can save the evaluation list to a file ("Save Evaluation List").

Retrieving Results via Remote Control

The measurement results of the spectrum emission mask test can be retrieved using the `CALCulate<n>:LIMit<k>:FAIL?` command from a remote computer.

The power result for the reference range can be queried using `CALC:MARK:FUNC:POW:RES? CPOW`, the peak power for the reference range using `CALC:MARK:FUNC:POW:RES? PPOW`.

For details see `CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?` on page 721.

Ranges and Range Settings

In the Spectrum Emission Mask measurements, a range defines a segment for which you can define the following parameters separately:

- Start and stop frequency

- RBW
- VBW
- Sweep time
- Sweep points
- Reference level
- Attenuator settings
- Limit values

Via the sweep list, you define the ranges and their settings. For details on settings refer to "[Sweep List dialog box](#)" on page 258.

For details on defining the limits (masks) see "[Working with Limit Lines in SEM Measurements](#)" on page 271.

For details on defining the limits (masks) see the base unit description "[Working with Lines in SEM](#)".

The following rules apply to ranges:

- The minimum span of a range is 20 Hz.
- The individual ranges must not overlap (but need not directly follow one another).
- The maximum number of ranges is 20.
- A minimum of three ranges is mandatory.
- The reference range cannot be deleted (it is marked in blue color).
- The reference range has to be centered on the center frequency.
- The minimum span of the reference range is given by the current TX Bandwidth.
- Frequency values for each range have to be defined relative to the center frequency.

In order to change the start frequency of the first range or the stop frequency of the last range, select the appropriate span with the [SPAN] key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.



Symmetrical ranges

You can easily define a sweep list with symmetrical range settings, i.e. the ranges to the left and right of the center range are defined symmetrically. In the "Sweep List" menu, select the "Symmetrical Setup" softkey to activate symmetrical setup mode. The current sweep list configuration is changed to define a symmetrical setup regarding the reference range. The number of ranges to the left of the reference range is reflected to the right, i.e. any missing ranges on the right are inserted, while superfluous ranges are removed. The values in the ranges to the right of the reference range are adapted symmetrically to those in the left ranges.

For details see "[Symmetric Setup](#)" on page 262.


Symmetrical ranges fulfill the conditions required for "Fast SEM" mode (see "[Fast Spectrum Emission Mask Measurements](#)" on page 281).

Working with Limit Lines in SEM Measurements

Using the R&S ESR, the spectrum emission mask is defined using limit lines. Limit lines allow you to check the measured data against specified limit values. Generally, it is possible to define limit lines for any measurement in Spectrum mode using the [Lines] key. For SEM measurements, however, special limit lines are available via the "Sweep List", and it is strongly recommended that you use only these limit line definitions.

In the "Sweep List" you can define a limit line for each power class that varies its level according to the specified frequency ranges. Distinguished limit lines ("_SEM_LINE_ABS<0...3>"/ "_SEM_LINE_REL<0...3>") are automatically defined for each power class according to the current "Sweep List" settings every time the settings change.

The limit line defined for the current power class is indicated by a red line in the display, and the result of the limit check is indicated at the top of the diagram. Note that only "Pass" or "Fail" is indicated; a "margin" function as for general limit lines is not available.

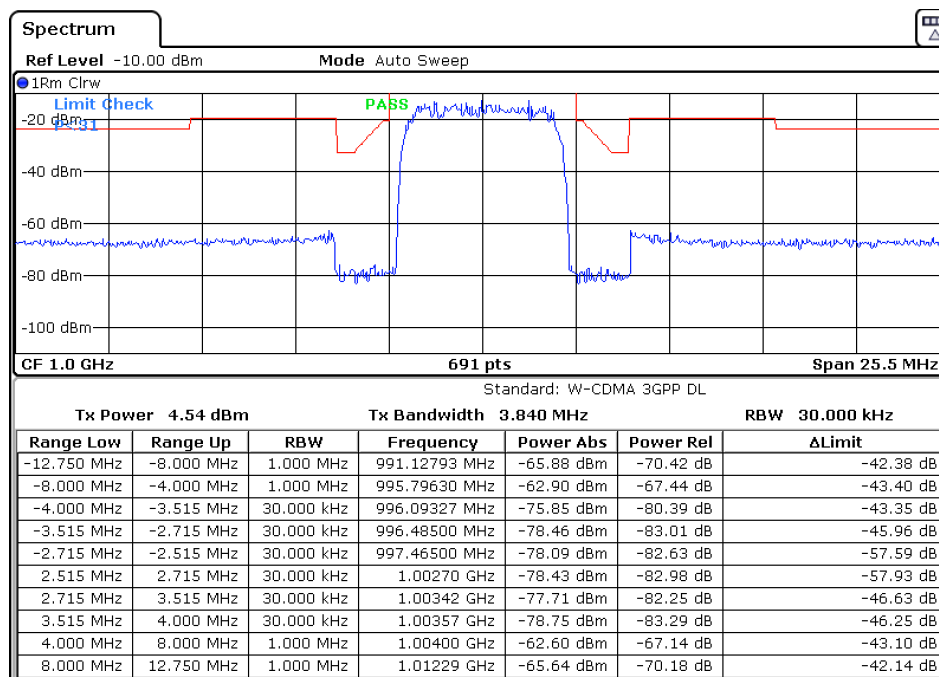


The indicated limit line depends on the settings in the "Sweep List". Several types of limit checks are possible:

Limit check type	Pass/fail criteria	Indicated limit line
Absolute	Absolute power levels may not exceed limit line	Defined by the "Abs Limit Start"/ "Abs Limit Stop" values for each range
Relative	Power deviations relative to the TX channel power may not exceed limit line	Defined by the "Rel Limit Start"/ "Rel Limit Stop" values (relative to the center frequency) for each range

Limit check type	Pass/fail criteria	Indicated limit line
Abs and Rel	Only if the power exceeds both the absolute and the relative limits, the check fails.	The less strict (higher) limit line is displayed for each range.
Abs or Rel	If the power exceeds either the absolute or the relative limits, the check fails.	The stricter (lower) limit line is displayed for each range.

The largest deviations of the power from the limit line for each range are displayed in the evaluation list. Furthermore, the absolute powers for those values, as well as the relative deviation from the TX channel power are displayed. Values that exceed the limit are indicated in red and by an asterisk (*).

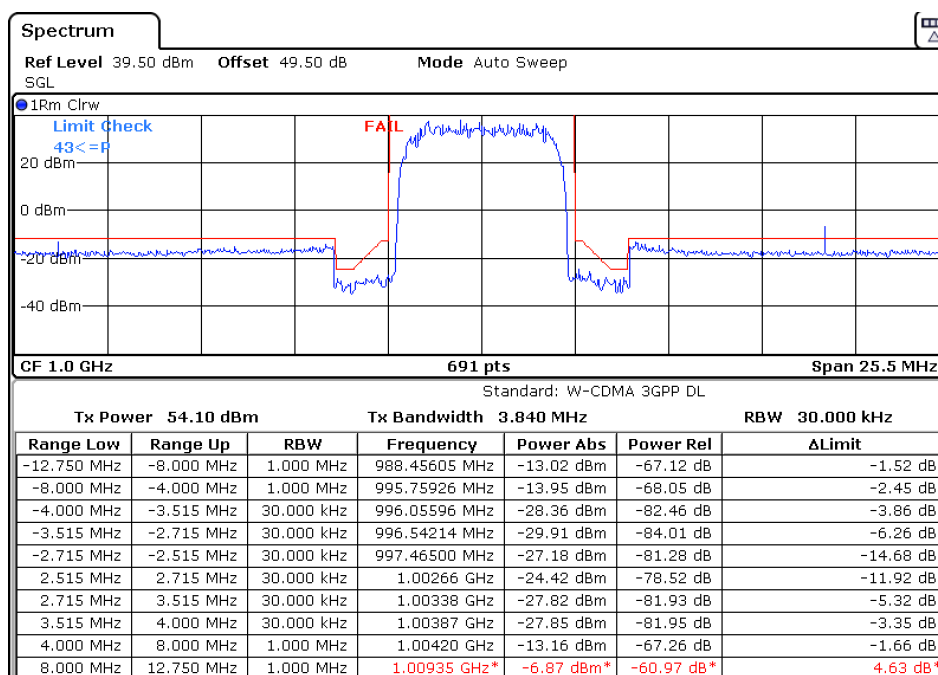

Although a margin functionality is not available for the limit check, a margin (threshold) for the peak values to be displayed in the evaluation list can be defined in the list evaluation settings. For details see "Result Evaluation" on page 268.

Provided XML Files for the Spectrum Emission Mask Measurement

You can change the settings manually or via XML files. The XML files offer a quick way to change the configuration. A set of ready-made XML files for different standards is already provided. For details see Table 6-1. You can also create and use your own XML files (for details see "Format Description of Spectrum Emission Mask XML Files" on page 275). All XML files are stored under "C:\r_s\instr\sem_std". Use the "Load Standard" softkey for quick access to the available XML files (see "Load Standard" on page 267).

Table 6-1: Provided XML files

Path	XML file name	Displayed standard characteristics*
cdma2000\DL	default0.xml	CDMA2000 BC0 DL
	default1.xml	CDMA2000 BC1 DL
cdma2000\UL	default0.xml	CDMA2000 BC0 UL
	default1.xml	CDMA2000 BC1 UL
WCDMA\3GPP\DL	PowerClass_31_39.xml	W-CDMA 3GPP (31,39)dBm DL
	PowerClass_39_43.xml	W-CDMA 3GPP (39,43)dBm DL
	PowerClass_43_INF.xml	W-CDMA 3GPP (43,INF)dBm DL
	PowerClass_negINF_31.xml	W-CDMA 3GPP (-INF,31)dBm DL
WIBRO\DL	PowerClass_29_40.xml	WiBro TTA (29,40)dBm DL
	PowerClass_40_INF.xml	WiBro TTA (40,INF)dBm DL
	PowerClass_negINF_29.xml	WiBro TTA (-INF,29)dBm DL
WIBRO\UL	PowerClass_23_INF.xml	WiBro TTA (23,INF)dBm UL
	PowerClass_negINF_23.xml	WiBro TTA (23,INF)dBm UL
WIMAX\DL\ETSI...MHz (1.75 MHz, 2.00 MHz, 3.5 MHz, 7.00 MHz, 14.00 MHz, 28 MHz)	System_Type_E.xml	WIMAX System Type E DL
	System_Type_F.xml	WIMAX System Type F DL
	System_Type_G.xml	WIMAX System Type G DL
WIMAX\DL\IEEE	10MHz.xml	WIMAX 10MHz DL
	20MHz.xml	WIMAX 20MHz DL
WIMAX\UL\ETSI...MHz (1.75 MHz, 2.00 MHz, 3.5 MHz, 7.00 MHz, 14.00 MHz, 28 MHz)	System_Type_E.xml	WIMAX System Type E UL
	System_Type_F.xml	WIMAX System Type F UL
	System_Type_G.xml	WIMAX System Type G UL
WIMAX\UL\IEEE	10MHz.xml	WIMAX 10MHz UL
	20MHz.xml	WIMAX 20MHz UL
WLAN\802_11_TURBO	ETSI.xml	IEEE 802.11
	IEEE.xml	IEEE 802.11
WLAN\802_11a	ETSI.xml	IEEE 802.11a
	IEEE.xml	IEEE 802.11a
WLAN\802_11b	IEEE.xml	IEEE 802.11b
WLAN\802_11j_10MHz	ETSI.xml	IEEE.802.11j

Path	XML file name	Displayed standard characteristics*
	IEEE.xml	IEEE.802.11j
WLAN\802_11j_20MHz	ETSI.xml	IEEE 802.11j
	IEEE.xml	IEEE 802.11j
EUTRA-LTE\DL\CategoryA\	BW_01_4_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_01_4_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_03_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_03_0_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_05_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_05_0_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_10_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_10_0_MHz__CFlower1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_15_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_15_0_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_20_0_MHz__CFhigher1GHz.xml	LTE Cat. A >1GHz DL
EUTRA-LTE\DL\CategoryA\	BW_20_0_MHz__CFlower1GHz.xml	LTE Cat. A <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_01_4_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_01_4_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_03_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_03_0_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_05_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_05_0_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_10_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_10_0_MHz__CFlower1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_15_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_15_0_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_20_0_MHz__CFhigher1GHz.xml	LTE Cat. B >1GHz DL
EUTRA-LTE\DL\CategoryB\	BW_20_0_MHz__CFlower1GHz.xml	LTE Cat. B <1GHz DL

Path	XML file name	Displayed standard characteristics*
EUTRA-LTE\UL\Standard\	BW_05_0_MHz.xml	LTE UL
EUTRA-LTE\UL\Standard\	BW_10_0_MHz.xml	LTE UL
EUTRA-LTE\UL\Standard\	BW_15_0_MHz.xml	LTE UL
EUTRA-LTE\UL\Standard\	BW_20_0_MHz.xml	LTE UL

*Used abbreviations:

BC: band class

UL: uplink

DL: downlink

TTA: Telecommunications Technology Association

Format Description of Spectrum Emission Mask XML Files

The files for importing range settings are in XML format and therefore obey the rules of the XML standard. Below, the child nodes, attributes, and structure defined for the data import is described. Build your own XML files according to these conventions because the R&S ESR can only interpret XML files of a known structure. For example files look in the C:\r_s\instr\sem_std directory.

Spectrum Emission Mask							Standard: W-CDMA 3GPP (39,43)dBm DL			
Tx Power		-47.93 dBm		Tx Bandwidth		3.840 MHz		RBW		30.000 kHz
Range Low	Range Up	RBW	Frequency	Power Abs	Power Rel	ΔLimit				
-12.750 MHz	-8.000 MHz	1.000 MHz	14.99094 GHz*	-74.76 dBm*	-26.83 dB*	27.67 dB*				
-8.000 MHz	-4.000 MHz	1.000 MHz	14.99598 GHz	-36.79 dBm	11.14 dB	-25.29 dB				
-4.000 MHz	-3.515 MHz	30.000 kHz	14.99628 GHz	-100.18 dBm	-52.25 dB	-75.68 dB				
-3.515 MHz	-2.715 MHz	30.000 kHz	14.99648 GHz	-103.55 dBm	-55.63 dB	-79.05 dB				
-2.715 MHz	-2.515 MHz	30.000 kHz	14.99747 GHz	-108.91 dBm	-60.98 dB	-96.41 dB				
2.515 MHz	2.715 MHz	30.000 kHz	15.00251 GHz	-48.25 dBm	-0.32 dB	-35.75 dB				
2.715 MHz	3.515 MHz	30.000 kHz	15.00272 GHz	-52.48 dBm	-4.56 dB	-39.98 dB				
3.515 MHz	4.000 MHz	30.000 kHz	15.00398 GHz	-74.53 dBm	-26.60 dB	-50.03 dB				
4.000 MHz	8.000 MHz	1.000 MHz	15.00769 GHz	-74.76 dBm	-26.83 dB	-63.26 dB				
8.000 MHz	12.750 MHz	1.000 MHz	15.01273 GHz*	-36.79 dBm*	11.14 dB*	65.64 dB*				

Figure 6-5: Example Spectrum emission mask standard file (PowerClass_39_43.xml)



Be sure to follow the structure exactly as shown below or else the R&S ESR is not able to interpret the XML file and error messages are shown on the screen. Therefore, we recommend you make a copy of an existing file (see [Save As Standard](#) softkey) and edit the copy of the file.

Alternatively, edit the settings using the "Spectrum Emission Mask" softkey and the [Sweep List dialog box](#) and save the XML file with the [Save As Standard](#) softkey afterwards. This way, no modifications have to be done in the XML file itself.

Basically, the file consists of three elements that can be defined:

- The "BaseFormat" element
- The "PowerClass" element

- The "Range" element

The "BaseFormat" element

It carries information about basic settings. In this element only the "ReferencePower" child node has any effects on the measurement itself. The other attributes and child nodes are used to display information about the Spectrum Emission Mask Standard on the measurement screen. The child nodes and attributes of this element are shown in [Table 6-2](#).

In the example above (`PowerClass_39_43.xml` under `C:\r_s\instr\sem_std\WCDMA\3GPP`, see [Figure 6-5](#)), these attributes are defined as follows:

- `Standard="W-CDMA 3GPP"`
- `LinkDirection="DL"`
- `PowerClass="(39,43)dBm"`

The "PowerClass" element

It is embedded in the "BaseFormat" element and contains settings information about the power classes. Up to four different power classes can be defined. For details refer to the "Sweep List" softkey ("[Sweep List](#)" on page 258) and the corresponding parameter description. The child nodes and attributes of this element are shown in [Table 6-3](#).

The "Range" element

This element is embedded in the "PowerClass" element. It contains the settings information of the range. There have to be at least three defined ranges: one reference range and at least one range to either side of the reference range. The maximum number of ranges is 20. Note that the R&S ESR uses the same ranges in each power class. Therefore, the contents of the ranges of each defined power class have to be identical to the first power class. An exception are the Start and Stop values of the two Limit nodes that are used to determine the power class. Note also, that there are two Limit nodes to be defined: one that gives the limit in absolute values and one in relative values. Make sure units for the Start and Stop nodes are identical for each Limit node.

For details refer to the "Sweep List" softkey ("[Sweep List](#)" on page 258) and the corresponding parameter description. The child nodes and attributes of this element are shown in [Table 6-4](#).

The following tables show the child nodes and attributes of each element and show if a child node or attribute is mandatory for the R&S ESR to interpret the file or not. Since the hierarchy of the XML can not be seen in the tables, either view one of the default files already stored on the R&S ESR in the "`C:\r_s\instr\sem_std`" directory or check the structure as shown below.

Below, a basic example of the structure of the file is shown, containing all mandatory attributes and child nodes. Note that the "PowerClass" element and the range element are themselves elements of the "BaseFormat" element and are to be inserted where noted. The separation is done here simply for reasons of a better overview. Also, no example values are given here to allow a quick reference to the tables above. *Italic font* shows the placeholders for the values.

- The "BaseFormat" element is structured as follows:
 - `<RS_SEM_ACP_FileFormat Version=""1.0.0.0"">`
`<Name>"Standard"</Name>`
`<Instrument>`
`<Type>"Instrument Type"</Type>`
`<Application>"Application"</Application>`
`</Instrument>`
`<LinkDirection Name=""Name"">`
`<ReferencePower>`
`<Method>"Method"</Method>`
`</ReferencePower>`
`<PowerClass Index=""n"">`
`<!-- For contents of the PowerClass node see`
`Table 6-3 -->`
`<!-- Define up to four PowerClass nodes -->`
`</PowerClass>`
`</LinkDirection>`
`</RS_SEM_ACP_File>`
- The "PowerClass" element is structured as follows:
 - `<PowerClass Index=""n"">`
`<StartPower Unit=""dBm"" InclusiveFlag=""true"" Value=""StartPowerValue""/>`
`<StopPower Unit=""dBm"" InclusiveFlag=""false"" Value=""StopPowerValue""/>`
`<DefaultLimitFailMode>"Limit Fail Mode"</DefaultLimitFailMode>`
`<Range Index=""n"">`
`<!-- For contents of the Range node see Table 6-4 -->`
`<!-- Define up to twenty Range nodes -->`
`</Range>`
`...`
`</PowerClass>`
- The "Range" element is structured as follows:
 - `<Range Index=""n"">`
`<Name=""Name"">`
`<ChannelType>"Channel Type"</Channel Type>`
`<WeightingFilter>`
`<Type>"FilterType"</Type>`
`<RollOffFactor>"Factor"</RollOffFactor>`
`<Bandwidth>"Bandwidth"</Bandwidth>`
`</WeightingFilter>`
`<FrequencyRange>`
`<Start>"RangeStart"</Start>`
`<Stop>"RangeStop"</Stop>`
`</FrequencyRange>`
`<Limit>`
`<Start Unit=""Unit"" Value=""Value""/>`
`<Stop Unit=""Unit"" Value=""Value""/>`
`</Limit>`
`<Limit>`
`<Start Unit=""Unit"" Value=""Value""/>`
`<Stop Unit=""Unit"" Value=""Value""/>`


```

</Limit>
<RBW Bandwidth=""Bandwidth"" Type=""FilterType""/>
<VBW Bandwidth=""Bandwidth""/>
<Detector>"Detector"</Detector>
<Sweep Mode=""SweepMode"" Time=""SweepTime""/>
<Amplitude>
<ReferenceLevel Unit=""dBm"" Value=""Value""/>
<RFAttenuation Mode=""Auto"" Unit=""dB"" Value=""Value""/>
<Preamplifier State=""State""/>
</Amplitude>
</Range>

```

Table 6-2: Attributes and child nodes of the BaseFormat element

Child Node	Attribute	Value	Parameter Description	Mand.
	FileFormatVersion	1.0.0.0		Yes
	Date	YYYY-MM-DD HH:MM:SS	Date in ISO 8601 format	No
Name		<string>	Name of the standard	Yes
Instrument	Type	FSL	Name of the instrument	No
	Application	SA K72 K82	Name of the application	No
LinkDirection	Name	Downlink Uplink None		Yes
	ShortName	DL UL		No
Reference- Power				Yes
Method	TX Channel Power TX Channel Peak Power			Yes
Reference- Channel	<string>			No

Table 6-3: Attributes and child nodes of the PowerClass element

Child Node	Attribute	Value	Parameter Description	Mand.
StartPower	Value	<power in dBm>	The start power must be equal to the stop power of the previous power class. The StartPower value of the first range is -200	Yes
	Unit	dBm		Yes
	InclusiveFlag	true		Yes
StopPower	Value	<power in dBm>	The stop power must be equal to the start power of the next power class. The StopPower value of the last range is 200	Yes
	Unit	dBm		

Child Node	Attribute	Value	Parameter Description	Mand.
	InclusiveFlag	false		Yes
DefaultLimitFailMode		Absolute Relative Absolute and Relative Absolute or Relative		Yes

Table 6-4: Attributes and child nodes of the Range element (normal ranges)

Child Node	Attribute	Value	Parameter Description	Mand.
	Index	0...19	Indices are continuous and have to start with 0	Yes
	Name	<string>	Name of the range	Only if ReferenceChannel contains a name and the range is the reference range
	Short-Name	<string>	Short name of the range	No
ChannelType		TX Adjacent		Yes
WeightingFilter				Only if ReferencePower method is TX Channel Power and the range is the reference range
Type		RRC CFilter	Type of the weighting filter	Yes
Roll Off Factor		0...1	Excess bandwidth of the filter	Only if the filter type is RRC
Bandwidth		<bandwidth in Hz>	Filter bandwidth	Only if the filter type is RRC
FrequencyRange				Yes
Start		<frequency in Hz>	Start value of the range	Yes
Stop		<frequency in Hz>	Stop value of the range	Yes
Limit		dBm/Hz dBm dBc dBr dB	A Range must contain exactly two limit nodes; one of the limit nodes has to have a relative unit (e.g. dBc), the other one must have an absolute unit (e.g. dBm)	Yes
Start	Value	<numeric_value>	Power limit at start frequency	Yes
	Unit	dBm/Hz dBm dBc dBr dB	Sets the unit of the start value	
Stop	Value	<numeric_value>	Power limit at stop frequency	

Child Node	Attribute	Value	Parameter Description	Mand.
	Unit	dBm/Hz dBm dBc dBr dB	Sets the unit of the stop value	
LimitFailMode		Absolute Relative Absolute and Relative Absolute or Relative	If used, it has to be identical to DefaultLimitFailMode	No
RBW	Bandwidth	<bandwidth in Hz>	"RBW" on page 259	Yes
	Type	NORM PULS CFIL RRC		No
VBW	Bandwidth	<bandwidth in Hz>	"VBW" on page 260	Yes
Detector		NEG POS SAMP RMS AVER QUAS	If used, it has to be identical in all ranges.	No
Sweep	Mode	Manual Auto	"Sweep Time Mode" on page 260	Yes
	Time	<time in sec>	"Sweep Time" on page 260	No
Amplitude				No
ReferenceLevel	Value	<power in dBm>	"Ref. Level" on page 260	Yes, if the ReferenceLevel child node is used
	Unit	dBm	Defines dBm as unit	Yes, if the ReferenceLevel node is used
RFAttenuation	Mode	Manual Auto	"RF Att. Mode" on page 260	Yes, if the ReferenceLevel child node is used
Preamplifier		ON OFF	"Preamp" on page 260	Yes

ASCII File Export Format (Spectrum Emission Mask)

The first part of the file lists information about the signal analyzer and the general setup. For a detailed description refer to [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399.

File contents	Description
RefType; CPOWER; TxBandwidth;9540000;Hz Filter State; ON; Alpha;0.22;	reference range setup, for details see "Edit Reference Range" on page 263
PeaksPerRange;1; Values;4;	evaluation list information
0;-22500000;-9270000;1000000;2986455000;-74.762840270996094; -10.576210021972656;-45.762840270996094;PASS; 1;-9270000;-4770000;1000000;2991405000;-100.17695617675781; -35.990325927734375;-1.490325927734375;PASS 3;4770000;9270000;1000000;3005445000;-100.17695617675781; -35.990325927734375;-1.490325927734375;PASS; 4;9270000;22500000;1000000;3018225000;-74.762840270996094; -10.576210021972656;-45.762840270996094;PASS;	information about each peak: <range number>; <start frequency>; <stop frequency>; <resolution bandwidth of range>; <frequency of peak>; <absolute power in dBm of peak>; <relative power in dBc of peak (related to the channel power)>; <distance to the limit line in dB (positive value means above the limit)>; <limit fail (pass = 0, fail =1)>;

Fast Spectrum Emission Mask Measurements

In order to improve the performance of the R&S ESR for spectrum emission mask measurements, a "Fast SEM" mode is available. If this mode is activated, several consecutive ranges with identical sweep settings are combined to one sweep internally, which makes the measurement considerably more efficient. The displayed results remain unchanged and still consist of several ranges. Thus, measurement settings that apply only to the results, such as limits or transducer factors, can nevertheless be defined individually for each range.

Prerequisites

"Fast SEM" mode is available if the following criteria apply:

- The frequency ranges are consecutive, without frequency gaps
- The following sweep settings are identical:
 - "Filter Type", see ["Filter Type"](#) on page 259
 - "RBW", see ["RBW"](#) on page 259
 - "VBW", see ["VBW"](#) on page 260
 - "Sweep Time Mode", see ["Sweep Time Mode"](#) on page 260
 - "Ref Level", see ["Ref. Level"](#) on page 260
 - "Rf Att. Mode", see ["RF Att. Mode"](#) on page 260
 - "RF Attenuator", see ["RF Att. Mode"](#) on page 260
 - "Preamp", see ["Preamp"](#) on page 260

Activating Fast SEM mode

"Fast SEM" mode is activated in the sweep list (see "[Fast SEM](#)" on page 259) or using a remote command. Activating the mode for one range automatically activates it for all ranges in the sweep list.

In the provided XML files for the Spectrum Emission Mask measurement, "Fast SEM" mode is activated by default.

SCPI command:

`[SENSe:]ESpectrum:HighSPeed` on page 762

Consequences


When the "Fast SEM" mode is activated, the ranges for which these criteria apply are displayed as one single range. The sweep time is defined as the sum of the individual sweep times, initially, but can be changed. When the "Fast SEM" mode is deactivated, the originally defined individual sweep times are reset.



If "Symmetrical Setup" mode is active when "Fast SEM" mode is activated, not all sweep list settings can be configured symmetrically automatically (see also "[Symmetric Setup](#)" on page 262).

Any other changes to the sweep settings of the combined range are applied to each included range and remain changed even after deactivating "Fast SEM" mode.

Example

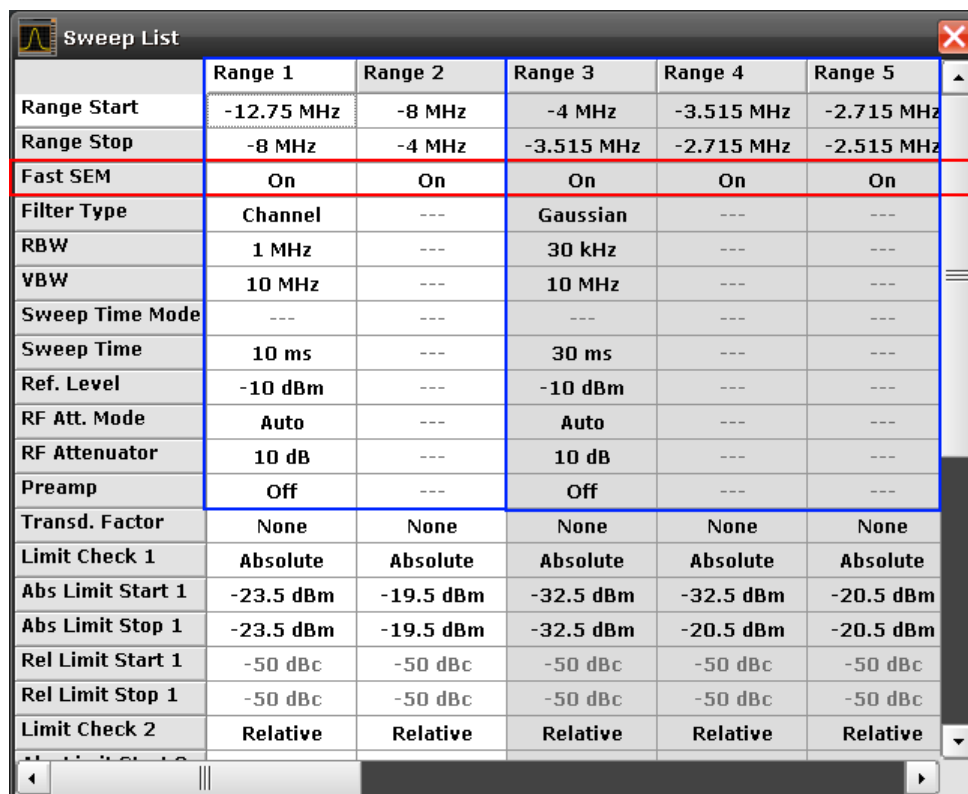


	Range 1	Range 2	Range 3	Range 4	Range 5
Range Start	-12.75 MHz	-8 MHz	-4 MHz	-3.515 MHz	-2.715 MHz
Range Stop	-8 MHz	-4 MHz	-3.515 MHz	-2.715 MHz	-2.515 MHz
Fast SEM	On	On	On	On	On
Filter Type	Channel	---	Gaussian	---	---
RBW	1 MHz	---	30 kHz	---	---
VBW	10 MHz	---	10 MHz	---	---
Sweep Time Mode	---	---	---	---	---
Sweep Time	10 ms	---	30 ms	---	---
Ref. Level	-10 dBm	---	-10 dBm	---	---
RF Att. Mode	Auto	---	Auto	---	---
RF Attenuator	10 dB	---	10 dB	---	---
Preamp	Off	---	Off	---	---
Transd. Factor	None	None	None	None	None
Limit Check 1	Absolute	Absolute	Absolute	Absolute	Absolute
Abs Limit Start 1	-23.5 dBm	-19.5 dBm	-32.5 dBm	-32.5 dBm	-20.5 dBm
Abs Limit Stop 1	-23.5 dBm	-19.5 dBm	-32.5 dBm	-20.5 dBm	-20.5 dBm
Rel Limit Start 1	-50 dBc	-50 dBc	-50 dBc	-50 dBc	-50 dBc
Rel Limit Stop 1	-50 dBc	-50 dBc	-50 dBc	-50 dBc	-50 dBc
Limit Check 2	Relative	Relative	Relative	Relative	Relative

Figure 6-6: Sweep list using Fast SEM mode

In Figure 6-6, a sweep list is shown for which Fast SEM is activated. The formerly 5 separately defined ranges are combined to 2 sweep ranges internally.

6.1.1.6 Measuring Spurious Emissions

The Spurious Emissions measurement defines a measurement that monitors unwanted RF products outside the assigned frequency band generated by an amplifier. The spurious emissions are usually measured across a wide frequency range. The Spurious Emissions measurement allows a flexible definition of all parameters. A result table indicates the largest deviations of the absolute power from the limit line for each range, and the results can be checked against defined limits automatically.

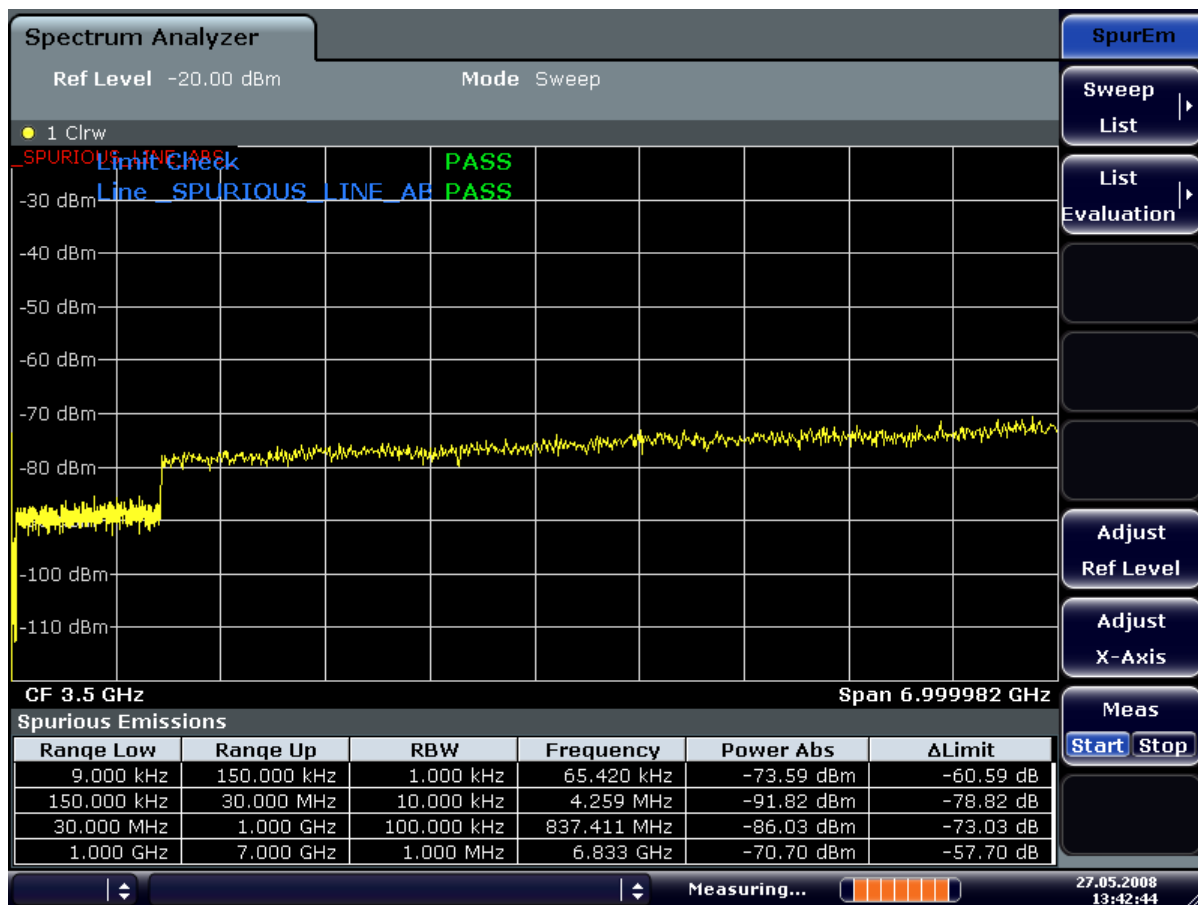

Spurious Emissions measurements are performed using the "Spurious Emissions" softkey in the "Measurement" menu (see ["Spurious Emissions"](#) on page 289).

Most parameters are defined in the "Sweep List" dialog box (see ["Sweep List dialog box"](#) on page 289). For information on other parameters, see the corresponding softkeys (["Spurious Emissions"](#) on page 289).

Conditions for ranges

The following rules apply to ranges:

- The minimum span of a range is 20 Hz.
- The individual ranges must not overlap (but need not directly follow one another).
- The maximum number of ranges is 20.
- The maximum number of sweep points in all ranges is limited to 100001.

In order to change the start/stop frequency of the first/last range, select the appropriate span with the [SPAN] key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.



Defining ranges by remote control

In Spurious Emissions measurements, there are no remote commands to insert new ranges between existing ranges directly. However, you can delete or re-define the existing ranges to create the required order.

A remote command example for defining parameters and ranges in spurious emissions measurements can be found in chapter 7 "Remote Control – Programming Examples" of the Operating manual.

Result Evaluation

In addition to the graphical results of the spurious measurement displayed in the diagram, a result table can be displayed to evaluate the limit check results (see also ["Working with Limit Lines in Spurious Measurements"](#) on page 286). Which data is displayed in the evaluation list can be defined in the "List Evaluation" menu (see ["List Evaluation"](#) on page 292).


The following information is provided in the evaluation list:

Column	Description
Range Low	Frequency range start for range the peak value belongs to
Range Up	Frequency range stop for range the peak value belongs to
RBW	RBW of the range
Frequency	Frequency at the peak value
Power Abs	Absolute power level at the peak value
Δ Limit	Deviation of the absolute power level from the defined limit for the peak value

By default, one peak per range is displayed. However, you can change the settings to:

- Display all peaks ("Details ON")
- Display a certain number of peaks per range ("Details ON" + "Peaks per Range")
- Display only peaks that exceed a threshold ("Margin")

In addition to listing the peaks in the list evaluation, detected peaks can be indicated by blue squares in the diagram ("Show Peaks").

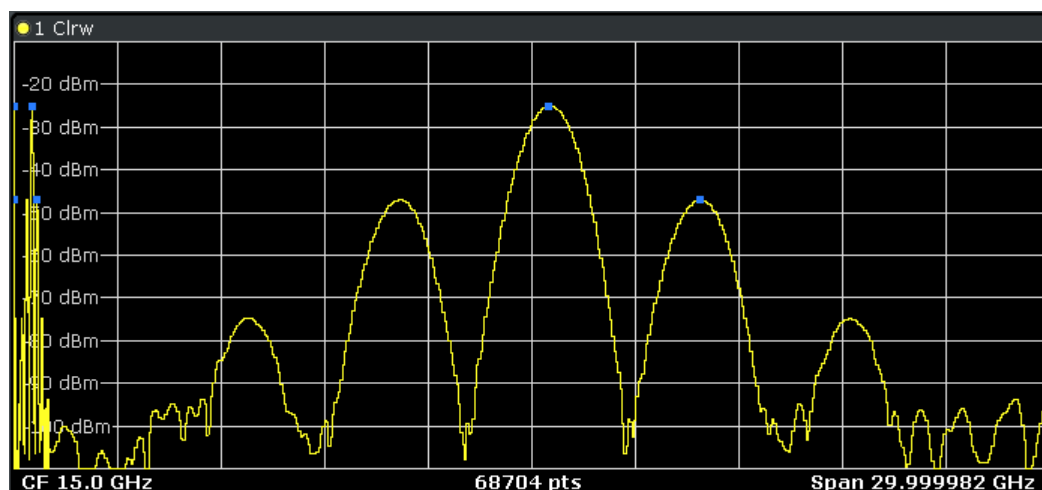

Furthermore, you can save the evaluation list to a file ("Save Evaluation List").

Retrieving Results via Remote Control

The spurious measurement results can be retrieved using the `CALC:PSE?` command from a remote computer (see `CALCulate<n>:PEAKsearch|PSEarch[:IMMediate]` for a detailed description).


In addition, the `TRACe<n>:DATA` command queries the trace data. In case of spurious emission measurements, the trace data is the power levels that have been measured for each sweep point (max. 691).

Working with Limit Lines in Spurious Measurements

Limit lines allow you to check the measured data against specified limit values. Generally, it is possible to define limit lines for any measurement in Spectrum mode using the `[Lines]` key. For Spurious measurements, however, a special limit line is available via the "Sweep List", and it is strongly recommended that you use only this limit line definition.

In the "Sweep List" you can define a limit line that varies its level according to the specified frequency ranges. A distinguished limit line ("`_SPURIOUS_LINE_ABS`") is automatically defined according to the current "Sweep List" settings every time the settings change.

If a limit check is activated in the "Sweep List", the "`_SPURIOUS_LINE_ABS`" limit line is indicated by a red line in the display, and the result of the limit check is indicated at the top of the diagram. Note that only "Pass" or "Fail" is indicated; a "margin" function as for general limit lines is not available. Also, only absolute limits can be checked, not relative ones.

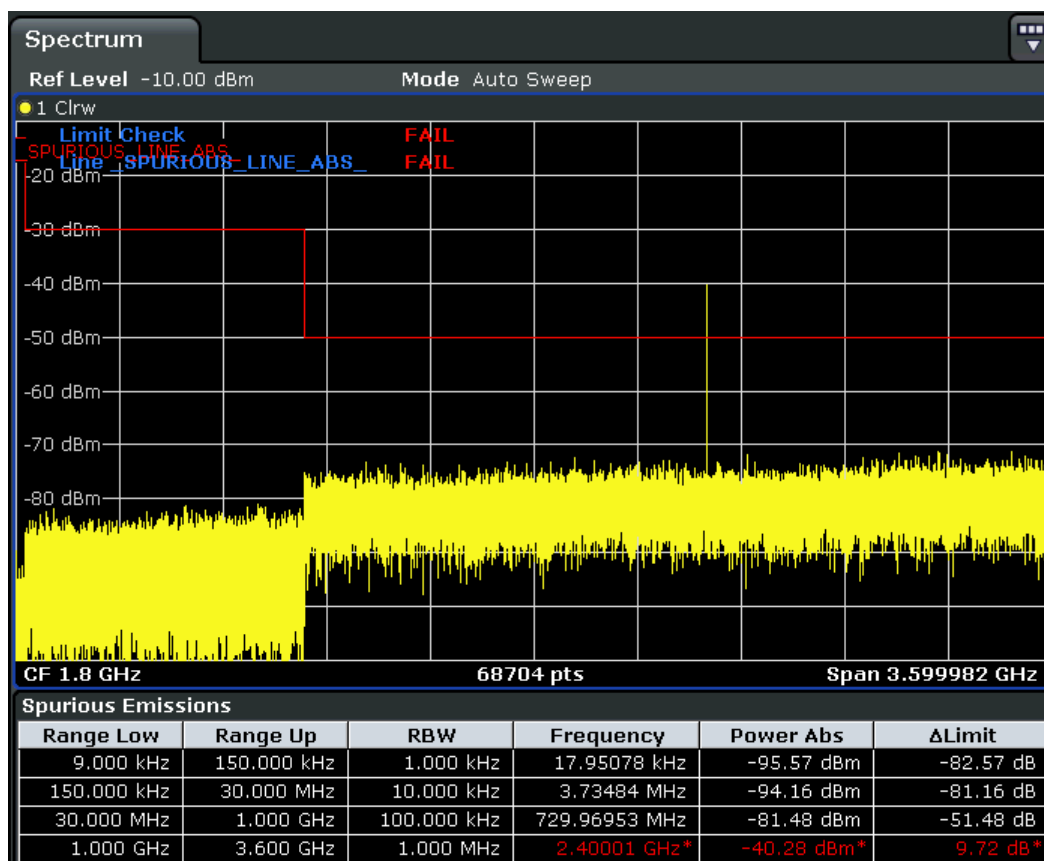

As for general limit lines, the results of each limit line check are displayed (here: "_SPURIOUS_LINE_ABS"), as well as the combined result for all defined limit lines ("Limit Check").

In addition to the limit line itself, the largest deviations of the absolute power from the limit line for each range are displayed in the evaluation list if the limit check is activated. Values that exceed the limit are indicated in red and by an asterisk (*).



Although a margin functionality is not available for the limit check, a margin (threshold) for the peak values to be displayed in the evaluation list can be defined in the list evaluation settings. Furthermore, you can define how many peaks per range are listed. For details see ["Result Evaluation"](#) on page 285.

To define a limit check for spurious measurements

The limit check is defined in the "Sweep List" dialog box, see ["Sweep List dialog box"](#) on page 289 for details.

1. Press the [Meas Config] key to open the main "Spurious" menu.
2. Press the "Sweep List" softkey to open the "Sweep List" dialog box.

3. In the "Sweep List" dialog box, define the limit line for each range using the "Abs Limit Start" and "Abs Limit Stop" settings.
The limit values are absolute values for the absolute power level.
4. Set the "Limit Check" setting to "Absolute" to activate the limit check.
5. Close the "Sweep List" dialog box.
The limit line and the result of the limit check are displayed in the diagram and the result table displays the largest deviations from the limit for each range.
6. To reduce the number of displayed delta values, change the margin (threshold) for peak detection in the list evaluation. By default, this value is very high (200 dB), so that initially all peaks are detected.
In the "Spurious" menu, press "List Evaluation > Margin" and enter a value in dB.
Only delta values that exceed this margin are displayed in the result table.

Softkeys for Spurious Emissions Measurement

Spurious Emissions.....	289
L Sweep List.....	289
L Sweep List dialog box.....	289
L Range Start / Range Stop.....	289
L Filter Type.....	289
L RBW.....	290
L VBW.....	290
L Sweep Time Mode.....	290
L Sweep Time.....	290
L Detector.....	290
L Ref. Level.....	290
L RF Att. Mode.....	290
L RF Attenuator.....	290
L Preamp.....	290
L Sweep Points.....	291
L Stop After Sweep.....	291
L Transd. Factor.....	291
L Limit Check 1-4.....	291
L Abs Limit Start.....	291
L Abs Limit Stop.....	291
L Close Sweep List.....	292
L Insert before Range.....	292
L Insert after Range.....	292
L Delete Range.....	292
L Adjust Ref Lvl (span > 0).....	292
L Adjust X-Axis.....	292
L List Evaluation.....	292
L List Evaluation (On/Off).....	293
L Details On/Off.....	293
L Margin.....	293
L Peaks per Range.....	293
L Show Peaks.....	293
L Save Evaluation List.....	293

L ASCII File Export.....	293
L Decim Sep.....	294
L Adjust Ref Lvl (span > 0).....	294
L Adjust X-Axis.....	294
L Meas Start/Stop.....	294

Spurious Emissions

Opens a submenu to configure the Spurious Emissions measurement and immediately starts a measurement.

For general information on performing Spurious Emissions measurements see [Chapter 6.1.1.6, "Measuring Spurious Emissions"](#), on page 283.

Remote command:

[SENSe:] SWEep:MODE on page 761

Sweep List ← Spurious Emissions

Opens a submenu to edit the sweep list and displays the "Sweep List" dialog box.

Note: If you edit the sweep list, always follow the rules described in [Chapter 6.1.1.6, "Measuring Spurious Emissions"](#), on page 283.

Sweep List dialog box ← Sweep List ← Spurious Emissions

After a preset, the sweep list contains a set of default ranges and parameters. For each range, you can change the parameters listed below. To insert or delete ranges, use the "Insert Before Range", "Insert After Range", "Delete Range" softkeys. The measurement results are not updated during editing but on closing the dialog box.

For details and limitations regarding spurious emissions configuration, see [Chapter 6.1.1.6, "Measuring Spurious Emissions"](#), on page 283.

Range Start / Range Stop ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the start frequency/stop frequency of the selected range. Follow the rules described in [Chapter 6.1.1.6, "Measuring Spurious Emissions"](#), on page 283.

In order to change the start/stop frequency of the first/last range, select the appropriate span with the SPAN key. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Frequency values for each range have to be defined relative to the center frequency. The reference range has to be centered on the center frequency. The minimum span of the reference range is given by the current TX Bandwidth.

Remote command:

[SENSe:] LIST:RANGe<range>[:FREQuency]:START on page 753

[SENSe:] LIST:RANGe<range>[:FREQuency]:STOP on page 753

Filter Type ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the filter type for this range. For details on filters see also [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:FILTer:TYPE](#) on page 752

RBW ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the RBW value for this range.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:BANDwidth\[:RESolution\]](#) on page 750

VBW ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the VBW value for this range.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:BANDwidth:VIDeo](#) on page 751

Sweep Time Mode ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Activates or deactivates the auto mode for the sweep time.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:SWEep:TIME:AUTO](#) on page 757

Sweep Time ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the sweep time value for the range.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:SWEep:TIME](#) on page 757

Detector ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the detector for the range. For details refer to [Chapter 6.3.1.5, "Detector Overview"](#), on page 399.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:DETector](#) on page 752

Ref. Level ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the reference level for the range.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:RLEVel](#) on page 756

RF Att. Mode ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Activates or deactivates the auto mode for RF attenuation.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:INPut:ATTenuation:AUTO](#) on page 754

RF Attenuator ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the attenuation value for that range.

Remote command:

[\[SENSe:\]LIST:RANGe<range>:INPut:ATTenuation](#) on page 754

Preamp ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Switches the preamplifier on or off.

Remote command:

[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe on page 754

Sweep Points ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the number of sweep points for the specified range.

Remote command:

[SENSe:]LIST:RANGe<range>:POINTs on page 756

Stop After Sweep ← Sweep List dialog box ← Sweep List ← Spurious Emissions

This command configures the sweep behavior.

"ON" The R&S ESR stops after one range is swept and continues only if you confirm (a message box is displayed).

"OFF" The R&S ESR sweeps all ranges in one go.

Remote command:

[SENSe:]LIST:RANGe<range>:BREak on page 751

Transd. Factor ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

Remote command:

[SENSe:]LIST:RANGe<range>:TRANsducer on page 757

Limit Check 1-4 ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets the type of limit check for all ranges. Possible states are:

Absolute	Checks the absolute limits defined.
None	No limit check performed.

The limit settings are only available if limit check is activated ("Absolute"). If activated, the limit line and the results of the check are indicated in the diagram.

Remote command:

[SENSe:]LIST:RANGe<range>:LIMit:STATe on page 755

CALCulate<n>:LIMit<k>:FAIL? on page 718

Abs Limit Start ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets an absolute limit value at the start frequency of the range [dBm].

This parameter is only available if the limit check is set to "Absolute" (see "Limit Check 1-4" on page 291).

Remote command:

[SENSe:]LIST:RANGe<range>:LIMit:START on page 755

Abs Limit Stop ← Sweep List dialog box ← Sweep List ← Spurious Emissions

Sets an absolute limit value at the stop frequency of the range [dBm].

This parameter is only available if the limit check is set to "Absolute" (see ["Limit Check 1-4"](#) on page 291).

Remote command:

`[SENSe:]LIST:RANGe<range>:LIMit:STOP` on page 756

Close Sweep List ← Sweep List ← Spurious Emissions

Closes the "Sweep List" dialog box and updates the measurement results.

Insert before Range ← Sweep List ← Spurious Emissions

Inserts a new range to the left of the currently focused range. The range numbers of the currently focused range and all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to ["Ranges and Range Settings"](#) on page 269.

Insert after Range ← Sweep List ← Spurious Emissions

Inserts a new range to the right of the currently focused range. The range numbers of all higher ranges are increased accordingly. The maximum number of ranges is 20.

For further details refer to ["Ranges and Range Settings"](#) on page 269.

Delete Range ← Sweep List ← Spurious Emissions

Deletes the currently focused range, if possible. The range numbers are updated accordingly. For further details refer to ["Ranges and Range Settings"](#) on page 269.

Remote command:

`[SENSe:]LIST:RANGe<range>:DELete` on page 752

Adjust Ref Lvl (span > 0) ← Sweep List ← Spurious Emissions

Adjusts the reference level to the measured total power of the signal. The softkey is activated after the first sweep with active measurement of the occupied bandwidth has been completed and the total power of the signal is thus known.

Adjusting the reference level ensures that the signal path will not be overloaded and the dynamic range not limited by too low a reference level. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is distinctly below the reference level. If the measured channel power is equal to the reference level, the signal path cannot be overloaded.

Remote command:

`[SENSe:]ADJust:LEVel` on page 830

Adjust X-Axis ← Sweep List ← Spurious Emissions

Adjusts the frequency axis of measurement diagram automatically so that the start frequency matches the start frequency of the first sweep range, and the stop frequency of the last sweep range.

List Evaluation ← Spurious Emissions

Opens a submenu to edit the list evaluation settings.

For more information on list evaluation see ["Result Evaluation"](#) on page 285.

List Evaluation (On/Off) ← List Evaluation ← Spurious Emissions

Activates or deactivates the list evaluation.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:AUTO](#) on page 758

[TRACe<n>:DATA](#) on page 726

Details On/Off ← List Evaluation ← Spurious Emissions

Configures the list contents.

On	Displays the whole list contents.
Off	Displays only the highest peaks (one peak per range).

Margin ← List Evaluation ← Spurious Emissions

Opens an edit dialog box to enter the margin used for the limit check/peak search.

Only peaks that exceed the limit and are larger than the specified margin are indicated in the evaluation list.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:MARGIN](#) on page 680

Peaks per Range ← List Evaluation ← Spurious Emissions

Opens an edit dialog box to enter the number of peaks per range that are stored in the list. Once the selected number of peaks has been reached, the peak search is stopped in the current range and continued in the next range. The maximum value is 50.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:SUBRanges](#) on page 759

Show Peaks ← List Evaluation ← Spurious Emissions

In the diagram, marks all peaks with blue squares that have been listed during an active list evaluation.

Remote command:

[CALCulate<n>:PEAKsearch|PSEarch:PSHOW](#) on page 758

Save Evaluation List ← List Evaluation ← Spurious Emissions

Opens the "ASCII File Export Name" dialog box and a submenu to save the result in ASCII format to a specified file and directory.

Remote command:

[MMEMory:STORe<n>:LIST](#) on page 777

ASCII File Export ← Save Evaluation List ← List Evaluation ← Spurious Emissions

Saves the evaluation list in ASCII format to a specified file and directory.

Remote command:

[MMEMory:STORe<n>:LIST](#) on page 777

Decim Sep ← Save Evaluation List ← List Evaluation ← Spurious Emissions

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

`FORMat:DEXPort:DSEParator` on page 850

Adjust Ref Lvl (span > 0) ← Spurious Emissions

Adjusts the reference level to the measured total power of the signal. The softkey is activated after the first sweep with active measurement of the occupied bandwidth has been completed and the total power of the signal is thus known.

Adjusting the reference level ensures that the signal path will not be overloaded and the dynamic range not limited by too low a reference level. Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is distinctly below the reference level. If the measured channel power is equal to the reference level, the signal path cannot be overloaded.

Remote command:

`[SENSe:]ADJust:LEVel` on page 830

Adjust X-Axis ← Spurious Emissions

Adjusts the frequency axis of measurement diagram automatically so that the start frequency matches the start frequency of the first sweep range, and the stop frequency of the last sweep range.

Meas Start/Stop ← Spurious Emissions

Aborts/restarts the current measurement and displays the status:

"Start"	The measurement is currently running.
"Stop"	The measurement has been stopped, or, in single sweep mode, the end of the sweep has been reached.

6.1.1.7 Measuring the Power in Zero Span

Using the power measurement function, the R&S ESR determines the power of the signal in zero span by summing up the power at the individual measurement points and dividing the result by the number of measurement points. Thus it is possible to measure the power of TDMA signals during transmission, for example, or during the muting phase. Both the mean power and the RMS power can be measured.

For this measurement, the sample detector is activated.

Measurement results

Several different power results can be determined simultaneously:

Mode	Description
Peak	Peak value from the points of the displayed trace or a segment thereof.
RMS	RMS value from the points of the displayed trace or a segment thereof.
Mean	Mean value from the points of the displayed trace or a segment thereof. The linear mean value of the equivalent voltages is calculated. For example to measure the mean power during a GSM burst
Std Dev	The standard deviation of the measurement points from the mean value.

The result is displayed in the marker results, indicated by "Power" and the selected power mode, e.g. "RMS". The measured values are updated after each sweep or averaged over a user-defined number of sweeps (trace averaging).

You can query the measurement results with the commands described in ["Retrieving Measurement Results"](#) on page 802.

Restricting the measurement range using limit lines

The range of the measured signal to be evaluated for the power measurement can be restricted using limit lines. The left and right limit lines (S1, S2) define the evaluation range and are indicated by vertical red lines in the diagram. If activated, the power results are only calculated from the levels within the limit lines.

For example, if both the on and off phase of a burst signal are displayed, the measurement range can be limited to the transmission or to the muting phase. The ratio between signal and noise power of a TDMA signal for instance can be measured using a measurement as a reference value and then varying the measurement range.

To measure the power in the time domain

1. Press the "Time Domain Power" softkey to activate the power measurement.
2. Select the type of power measurement using the "Peak", "Mean", "RMS" or "Std Dev" softkeys.
3. To limit the power evaluation range, switch on the limits ("Limits (On/Off)" softkey) and enter the limits using the "Left Limit" and "Right Limit" softkeys.

Softkeys for Time Domain Power Measurements

Time Domain Power.....	296
L Peak.....	296
L RMS.....	296
L Mean.....	296
L Std Dev.....	296
L Limits (On/Off).....	296
L Left Limit.....	297
L Right Limit.....	297

Time Domain Power

Activates the power measurement in zero span and opens a submenu to configure the power measurement. For more details see also [Chapter 6.1.1.7, "Measuring the Power in Zero Span"](#), on page 294.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY[:STATE]` on page 801

Peak ← Time Domain Power

Activates the calculation of the peak value from the points of the displayed trace or a segment thereof.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEAK[:STATE]` on page 806

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEAK:RESULT?` on page 805

RMS ← Time Domain Power

Activates the calculation of the RMS value from the points of the displayed trace or a segment thereof.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS[:STATE]` on page 808

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:RESULT?` on page 808

Mean ← Time Domain Power

Activates the calculation of the mean value from the points of the displayed trace or a segment thereof. The linear mean value of the equivalent voltages is calculated.

This can be used for instance to measure the mean power during a GSM burst.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN[:STATE]` on page 804

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:MEAN:RESULT?` on page 803

Std Dev ← Time Domain Power

Activates the calculation of the standard deviation of measurement points from the mean value and displays them as measured value. The measurement of the mean power is automatically switched on at the same time.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation[:STATE]`

on page 810

`CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:SDEViation:RESULT?`

on page 810

Limits (On/Off) ← Time Domain Power

Switches the limitation of the evaluation range on or off. Default setting is off.

If switched off, the evaluation range is not limited. If switched on, the evaluation range is defined by the left and right limit. If only one limit is set, it corresponds to the left limit and the right limit is defined by the stop frequency. If the second limit is also set, it defines the right limit.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMITS[:STATE]` on page 690

Left Limit ← Time Domain Power

Opens an edit dialog box to enter a value for line 1.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits:LEFT` on page 689

Right Limit ← Time Domain Power

Opens an edit dialog box to enter a value for line 2.

Remote command:

`CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT` on page 689

6.1.1.8 Performing EMI Measurements

The R&S ESR features EMI measurement functionality in Spectrum mode. This functionality is suitable for measurements according to EMS standards.

The EMI functionality is integrated into the measurement and marker functions that are available in Spectrum mode.

Measurement Background

EMI measurements can be very time-consuming, especially if weighting detectors are required by the standard. In addition, EMC standards specify various procedures to locate local EMI maxima. Such procedures include movements of an absorbing clamp, variations in the height of the test antenna or the rotation of the DUT.

Covering all test setups with one of the (slow) EMI weighting detectors over the required frequency range would lead to unacceptable measurement times.

Splitting the measurement procedure into several stages eliminates this problem.

The first stage, or peak search, is used to get a rough idea about the location of peak powers that may indicate interference over the required frequency range. You can use a detector that allows for a fast sweep time, e.g. the peak detector.

During the second stage, or final evaluation, the analyzer performs the actual EMC test, with detectors designed for and required by EMC standards. To keep measurement times brief, the analyzer measures only those frequencies you have marked with markers or delta markers. You can assign a different detector to every marker and thus test a particular frequency easily for compliance.

Selecting a Detector

For more information on EMI detectors see [Chapter 5.2.2, "Detectors"](#), on page 167.


Selecting the Measurement Bandwidth

For more information on the measurement bandwidth in EMI test setups see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166.

Setting the Number of Sweep Points

The number of sweep points defines the number of measurement values collected during one sweep. Thus, increasing the sweep points also increases the accuracy of the results regarding the frequency resolution.


Because EMI measurements often cover a large frequency range you should define an adequate number of sweep points, especially when performing the measurement on a logarithmic axis. Like on a linear axis, the distance from one sweep point to the next is calculated graphically on a logarithmic axis, and is not based on the frequency itself. Thus, the frequency resolution between two sweep points deteriorates with higher frequencies.

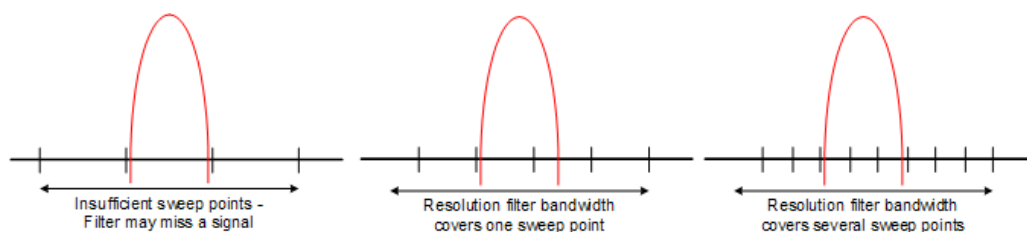

The resolution bandwidth should cover at least one sweep point (more is better). If this condition is not met, signals or interferences could be missed during final evaluation of narrowband interferers.


Example:

 Linear axis:

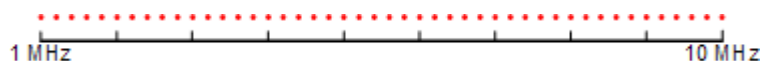

In case of a linear axis, the distance between the sweep points is equal, e.g. 200 kHz.

 Logarithmic axis:

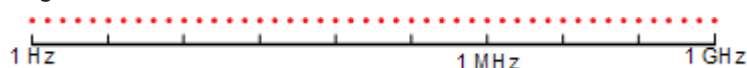

In case of a logarithmic axis, the distance between sweep points is variable. In the spectrum from 10 Hz to 100 Hz, the distance is a few Hz. Between 100 MHz and 1 GHz, the distance is several MHz.

The R&S ESR supports a maximum of 200000 sweep points. This number is based on typical bands measured with a single resolution bandwidth. There are sufficient sweep points to make sure that a signal is found when doing the final evaluation. Even when covering 30 MHz to 1 GHz with logarithmic scaling and 120 kHz RBW.

Controlling V-Networks

For more information on Line Impedance Stability Networks see [Chapter 5.2.5, "V-Networks Control \(LISN\)"](#), on page 173.

Using Transducer Factors

For more information on transducer factors see [Chapter 5.2.6, "Transducers"](#), on page 174.

Performing a Peak Search

The purpose of a peak search is to find signals with a high interference level quickly. Usually the peak search is done with a fast detector like the peak or average detector. The marker peak search is the basis for a possible final evaluation of interferences with the detectors specific to EMI measurements.

You can control markers in the [Marker Configuration](#) dialog box or turn them on with the "Marker <x>" softkey. The results of the peak search are summarized in the [Marker Table](#).

There are two ways to perform a peak search, automatic and manual.

Automatic peak search

By default, the automatic peak search starts as soon as you turn on the EMI measurement marker. During the peak search, the application looks for the strongest peaks in the frequency range you are measuring and positions a marker on those peaks. When a limit line is assigned to the trace, the level difference between the trace and the limit line determines the peak search. The number of peaks it will find during the search depends on the number of markers you have turned on. You can use up to 16 markers simultaneously.

The first marker is always on the most powerful peak while the last marker is always on the least powerful peak. If the application finds a more powerful peak, it will move one of the markers to that position and adjust the order of the other markers.

The application allows you to distribute markers among several traces. If you do so, the marker with the lowest number assigned to a particular trace will be positioned on the most powerful peak of the corresponding trace.

Manual peak search

If you turn the automatic peak search off, you can put the markers manually to any frequency you need more information about. You can change the marker position with the rotary knob, the cursor keys or position it to a particular frequency with the number keys.

Setting markers is the same as setting markers in normal spectrum mode. For more information see the manual of the base unit.

Searching for peaks over several traces

You can measure on six traces with a different weighting detector simultaneously.

In that case, the application searches for peaks on all traces separately, given that you have assigned at least one marker to that trace.

A typical selection for EMI measurement is to use the peak and the average detector. If the premeasurement is done, the application would look for peaks on the peak trace

and the average trace separately so that the distribution of narrowband and wideband sources of interference can be taken into account.

For example, the frequency of the maximum determined with the average detector can be used for the final measurement performed with this detector and the frequency found in the premeasurement carried out with the peak detector is taken for the final measurement using the quasipeak detector.

Measuring at the Marker Position

Finding peaks with the help of a peak search reduces data to be evaluated and thus measurement time.

The R&S ESR performs the final evaluation automatically if the EMI measurement marker is turned on. The measurement at the marker frequency starts immediately after the marker has been set. The advantage of an immediate final evaluation is that it eliminates the risk of measurement errors based on frequency drifts of the disturbance signal.

The measurement at the marker frequency may have a different detector during the peak search. This way, the measurement consumes much less time because detectors with a long measurement time are needed only at the critical frequency.

The application also allows you to use multiple detectors for the final evaluation. The advantage of multiple detection is that you will only need one test run to see if the results comply with the limits specified in a standard. You can select and assign detectors for EMI markers in the "[Marker Configuration](#)" on page 303 dialog box.

As EMC tests often require special measurement times, you can also specify a dwell time for the measurement with the EMI markers.

The application shows the results in the [Marker Table](#).

Defining a Dwell Time for the Final Measurement

The dwell time defines for how long the R&S ESR measures the signal at the frequencies of the marker positions. Thus the dwell time defines the amount of data that is included in the detection of the displayed results. As each detector needs a different period of time to fully charge and discharge, the minimum dwell time should not be shorter than the slowest detector in use.

Evaluating the Results

For more information on functionality to evaluate measurement results see [Chapter 5.2.4, "AF Demodulation"](#), on page 172 and [Chapter 5.4.3, "\(Limit\) Lines"](#), on page 208.

Configuration and Analysis

Measurement Configuration

The reference section contains an overview of all functions that are part of the chapter and lists the associated elements of the user interface.

For a list and description of supported detectors see [Chapter 5.2.2, "Detectors"](#), on page 167.

Filter Type

Opens a submenu to select the filter type.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see "[Sweep List dialog box](#)" on page 289).

The submenu contains the following softkeys:

- Normal (3 dB)
- CISPR (6 dB)
- MIL Std (6 dB)
Note that the 6 dB bandwidths are available only with option R&S FSV-K54.
- Channel
- RRC
- 5-Pole (not available for sweep type "FFT")

For detailed information on filters see [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366 and [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE` on page 671

Res BW CISPR / CISPR (6 dB)

Selects the measurement bandwidth for commercial EMC standards according to CISPR.

If you select the bandwidth with the "Res BW CISPR" softkey, the R&S ESR automatically changes the filter type to a 6 dB bandwidth.

For more information see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166.

Remote command:

Filter type:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE` on page 671

Filter bandwidth:

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 670

Res BW Mil Std/ MIL Std (6 dB)

Selects the measurement bandwidths for military EMC standards.

If you select the bandwidth with the "Res BW Mil Std" softkey, the R&S ESR automatically changes the filter type to a 6 dB bandwidth.

For more information see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166.

Remote command:

Filter type:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE` on page 671

Filter bandwidth:

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 670

Sweep Points

Opens an edit dialog box to enter the number of measured values collected during a single measurement.

For more information see ["Setting the Number of Sweep Points"](#) on page 298.

Remote command:

`[SENSe:]SWEep:POINts` on page 834

Freq (Lin Log)

Turns logarithmic scaling of the frequency axis on and off.

By default, the frequency axis has linear scaling. Logarithmic scaling of the frequency axis, however, is common for EMI measurements over large frequency ranges as it enhances the resolution of the lower frequencies. On the other hand, high frequencies get more crowded and become harder to distinguish.


Because it shows the lower frequencies more clearly, logarithmic scaling is used for tests that focus on those frequencies, for example acoustic tests and measurements.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing` on page 665

LISN Control

Opens a dialog box to control a LISN.

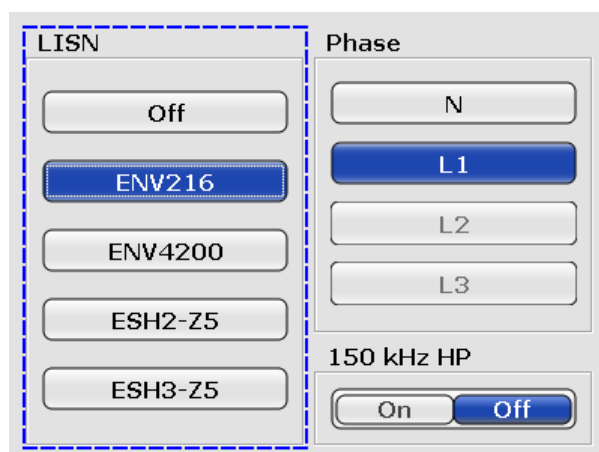

The dialog box contains the following elements.

- LISN
 - Selects the V-network that you have in use. The R&S FSV-K54 supports the following networks:
 - R&S ESH3-Z5 and R&S ENV216 (two-line networks)
 - R&S ESH-Z5, R&S ENV432 and R&S ENV4200 (four-line networks)
- Phase
 - Selects the phase to be measured. Phase N and L1 are included in all four LISN. Phase L2 and L3 are only included in four-line networks. You can select one phase for a measurement only.
- 150 kHz HP
 - Turns on a 150 kHz highpass filter. The filter is available for the ENV 216 network only.

For more information see [Chapter 5.2.5, "V-Networks Control \(LISN\)"](#), on page 173.

Remote command:

LISN type:

`INPut:LISN[:TYPE]` on page 686

Phase:

`INPut:LISN:PHASe` on page 686

Highpass filter:

`INPut:LISN:FILTer:HPAS[:STATe]` on page 685

Peak Search

The reference section contains an overview of all functions that are part of the chapter and lists the associated elements of the user interface.

Auto Peak Search

Turns the automatic marker peak search on and off.

For more information see ["Performing a Peak Search"](#) on page 299.

Remote command:


`CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:PSEarch:AUTO`

on page 781

Marker Configuration

To make the process of configuring markers as easy as possible, the R&S FSV-K54 features a "Marker Configuration" dialog box that contains all marker characteristics necessary to perform successful EMI measurements.

The dialog box is made up out of two tabs. The first tab controls markers 1 to 8, the second tab controls markers 9 to 16.

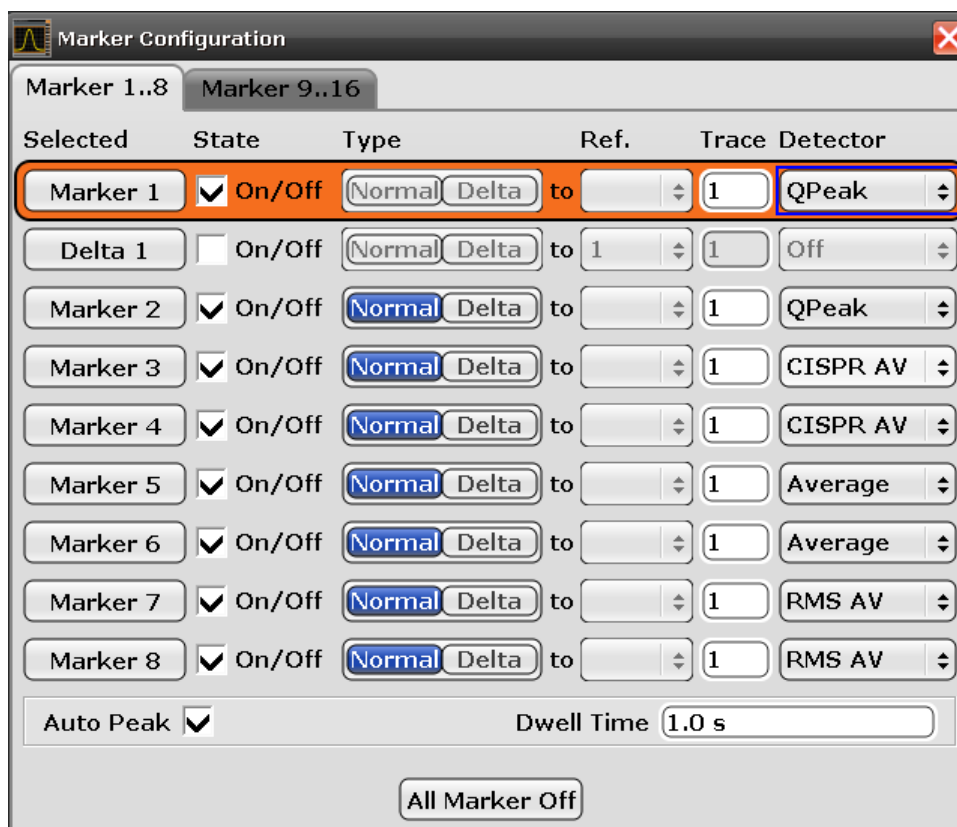

- **Selected**
Selects one of the markers. The currently selected marker is highlighted in orange color. The label indicates the marker type and its number.
- **State**
Turns the marker on and off.
- **Type**
Selects the marker type.
The first marker always is a normal marker (abbreviated 'N'). Normal markers determine absolute signal levels. In the diagram area, they are drawn as a triangle pointing up (▲).
If you add more markers, these will be delta markers by default (abbreviated 'D'). Delta markers show signal levels in relation to another (normal) marker, by default in relation to the first marker. If necessary, you can still change the reference marker in the "Ref" column. In the diagram area, delta markers are drawn as a triangle pointing down (▼).
When performing EMI measurements however, you usually want to have absolute marker readouts for all markers that you are using.
- **Ref**
Selects the reference marker for delta markers.
By default, the reference marker for all delta markers is the first marker. This is active only for delta markers.
- **Trace**
Selects the trace number the marker is positioned on.
You can place markers on any of the active traces. The R&S FSV-K54 supports the use of up to four traces.

- **Detector**
Selects the detector for the final measurement.
For more information see [Chapter 5.2.2, "Detectors"](#), on page 167.
- **Auto Peak**
Turns automatic peak search for all markers on and off.
For more information see ["Performing a Peak Search"](#) on page 299.
- **Dwell Time**
Sets the dwell time for all markers.
For more information see ["Measuring at the Marker Position"](#) on page 300.
- **All Markers Off**
Turns all markers off.

Remote command:

Reference marker:

`CALCulate<n>:DELTaMarker<m>:MREF`

Trace:

`CALCulate<n>:DELTaMarker<m>:TRACe` on page 701

`CALCulate<n>:MARKer<m>:TRACe` on page 695

Detector:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:DETECTOR` on page 780

`CALCulate<n>:DELTaMarker<m>:FUNCTION:FMEasurement:DETECTOR`
on page 779

Auto peak:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:PSEarch:AUTO`
on page 781

Dwell time:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:DWELL` on page 780

All marker off:

`CALCulate<n>:MARKer<m>:AOFF` on page 691

`CALCulate<n>:DELTaMarker<m>:AOFF` on page 697

See also the documentation of the base unit for information on how to remotely work with markers in general.

Final Evaluation

The reference section contains an overview of all functions that are part of the chapter and lists the associated elements of the user interface.

Dwell Time

Sets the dwell time for the EMI marker measurement.

For more information see ["Measuring at the Marker Position"](#) on page 300.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:DWELL` on page 780

Marker Table

If more than two markers have been activated, the application adds a marker table to the display below the diagram area. The size of the table depends on the number of markers that are active. It contains the following information for every marker.

EMI Measurement Marker							
Type	Ref	Trace	Frequency	Level	Detector	ΔLimit	Result
N1		1	999.28 MHz	-25.87 dBm	Peak	14.13 dB	-25.87 dBm*
N2		1	925.47 MHz	-47.77 dBm	Peak	-7.77 dB	-47.77 dBm
N3		1	1.07525 GHz	-47.77 dBm	Quasi Peak	-7.77 dB	-47.77 dBm
N4		1	849.493 MHz	-75.28 dBm	Quasi Peak	---	-75.28 dBm
N5		1	1.017366 GHz	-40.45 dBm	Quasi Peak	-0.45 dB	-40.45 dBm

- **Type**
Shows the marker type. The marker type is either a normal marker (N) or delta marker (D).
- **Ref**
Shows the reference marker. Applicable only for delta markers.
- **Trace**
Trace number the marker is positioned on. You can turn on a maximum of six traces at the same time. Each trace has a different color.
- **Frequency**
Frequency of a peak that was detected during the peak search. For normal markers this is a absolute value, for delta markers this is a relative value. The corresponding reference marker for delta markers is indicated in the "Ref" column.
- **Level**
Signal level at the marker position according to the trace detector. For normal markers this is an absolute value, for delta markers this is a relative value. The corresponding reference marker for delta markers is indicated in the "Ref" column. The unit for absolute markers depends on the selected unit. The unit for relative markers is dB.
- **Detector**
Detector that has been assigned to the EMI measurement marker.
- **ΔLimit**
Shows the distance of the marker level to all active limit lines. The order of results depends on the order in that you have loaded the limit lines and is the same as the order in the status register. The result is either a relative value in dB or three dashes (- - -). In case of three dashes the marker is either
 - on a different trace than the limit line or
 - on a horizontal position that is not covered by the limit line.
 The delta limit is shown only if you have assigned a detector to the measurement marker.
- **Result**
Shows the signal level at the marker position according to the detector assigned to the corresponding marker. The result is only displayed after the final measurement is done. The overall measurement time depends on the dwell time. If a limit line is active, the result can have three colors.
 - green indicates that the marker has passed the limit check.
 - yellow indicates that the marker is in the margins of the limit line.
 - red and a star (*) indicate that the marker has failed the limit check.
 For more information on limit lines see the documentation of the base unit. The result is shown only if you have assigned a detector to the measurement marker.

Remote command:

Detector:

Δ Limit:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:LIMit<k>:DELTA?`
on page 783

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:LIMit<k>:`

`CONDition ?` on page 782

`CALCulate<n>:DELTAmarker<m>:FUNCTION:FMEasurement:LIMit<k>:`
`DELTA?` on page 782

`CALCulate<n>:DELTAmarker<m>:FUNCTION:FMEasurement:LIMit<k>:`
`CONDition ?` on page 781

Result:

`CALCulate<n>:MARKer<m>:FUNCTION:FMEasurement:RESult?` on page 783

`CALCulate<n>:DELTAmarker<m>:FUNCTION:FMEasurement:RESult?`
on page 782

6.1.1.9 CISPR APD Measurement (Amplitude Probability Distribution)

The Amplitude Probability Distribution (APD) is a statistical measurement that shows the "cumulative distribution of the probability of time that the amplitude of disturbance exceeds a specified level" (CISPR 16-1-1, Amendment 1:2005). So, basically, the measurement determines the likelihood that a disturbance is above a specified level at a particular frequency (the measurement is usually performed on a fixed frequency).

The amplitude of the disturbance is expressed in terms of the corresponding field strength or voltage at the receiver input.

The APD is measured at the output of the envelope detector. Therefore, the APD yields the probability information over the entire disturbance envelope within the measurement bandwidth and a particular period of time.

The APD function has the following advantages.

- It provides an alternative way to present peak and average measurements (for example for microwave ovens in accordance with CISPR 11).
- It is able to calculate true average values.
- It shows high sensitivity and allows you to measure, for example, a single impulse.
- It allows you to measure unsteady levels.



APD vs CISPR APD

Note that the R&S ESR also provides an APD measurement for general purposes.

This general APD function does not comply with CISPR 16-1-1 in various aspects and cannot be used for CISPR APD measurements.

The result display is made up out of a diagram and a table.

- The diagram contains a graphical representation of the measurement results (the probability with which a particular amplitude occurs).
The x-axis represents the amplitude, the y-axis the (cumulative) probability.

- The table contains the number of samples used in the calculation and, for each trace, the following values:
 - Average amplitude
 - Peak amplitude
 - Crest factor
- [CISPR specifications vs R&S ESR specifications](#).....308
- [Examples of CISPR APD](#).....308
- [Softkeys for CISPR APD Measurements](#).....311

CISPR specifications vs R&S ESR specifications

The following table compares the characteristics of the R&S ESR against the CISPR specifications for APD measurements.

	CISPR 16-1-1	R&S ESR
Dynamic range of the amplitude	> 60 dB	> 75 dB
Amplitude accuracy	better than ± 2.7 dB	< 0.2 dB (typical)
Maximum measurement time	≥ 2 min	2 min (no dead time)
Minimum measurable probability	10^{-7}	10^{-7}
Amplitude level assignment	min. 2 amplitude levels with a resolution of 0.25 dB or better	691 levels with a resolution of 0.145 dB
Sampling rate	≥ 10 MSamples (using an RBW of 1 MHz)	16 MSamples (with RBW = 1 MHz) 4.0 MSamples (with RBW = 120 kHz) 0.26 MSamples (with RBW = 9 kHz) 5.8 kSamples (with RBW = 200 Hz)
Display resolution of APD measurement data	< 0.25 dB	Default: 0.145 dB for range = 100 dB Min. 0.00145 dB for range = 1 dB



- Use the intermittent measurement if the dead time is < 1 % of the total measurement time.
- Measure the probabilities corresponding to all pre-assigned levels simultaneously.
- The R&S ESR records the probability of time for each of the 625 disturbance levels.

Examples of CISPR APD

APD of the inherent noise of the R&S ESR


The following example shows the APD of the inherent noise of the R&S ESR (input terminated by 50 Ω).

The example is based on the following configuration.

Center frequency	100 MHz
Span	Zero span (0 Hz)
Unit	dBm
Reference Level	-30 dBm
Attenuation	20 dB
RBW	1 MHz (EMI)
VBW	10 MHz
Sweep time	100 ms
Detector	Auto Peak

All other settings are in their default (preset) state.


The first picture shows the resulting noise characteristics in the time domain (zero span). The x-axis shows the time. The y-axis shows the level of the "signal" in dBm. P_{\max} is the highest level that has been measured, P_{\min} is the lowest level.

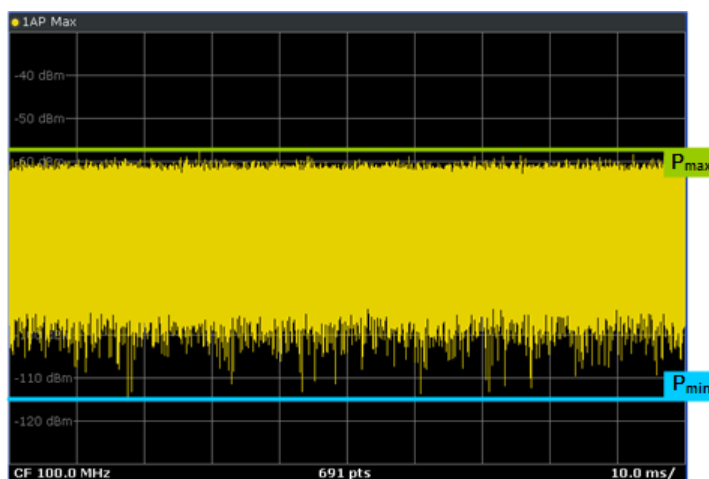

The second picture shows the corresponding CISPR APD function. Here, the x-axis represents the disturbance levels in dBm. The scale of the axis is arbitrary. By default, its range is a 100 of the unit you are working with. The end point of the x-axis represents the reference level.

The y-axis represents the statistical frequency that a particular level value will turn up with. The y-axis is a logarithmic axis by default. Like the x-axis, its scale is arbitrary.

As you can see, the probability that levels above P_{\max} will occur is zero. With falling level values, the probability that a particular level occurs increases (until P_{\min} has been reached). Because the noise has no spikes, the APD curve is falling (more or less) smoothly.

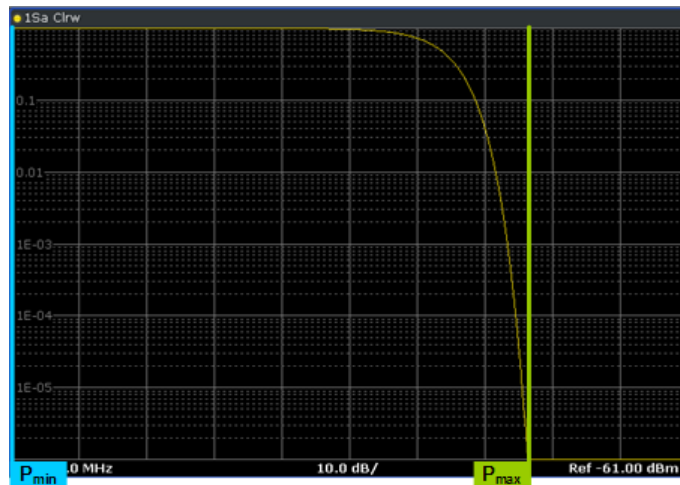

APD of a pulse signal


The following example shows the APD of a pulse signal. The pulse period is 100 ms and the pulse width is 1 ms, so the pulse is transmitted within 1 % of the time.

The example is based on the following configuration.

Center frequency	200 MHz
Span	Zero span (0 Hz)
Unit	dBm
Reference Level	-10 dBm
Attenuation	20 dB
RBW	1 MHz (EMI)
VBW	10 MHz
Sweep time	100 ms
Detector	Auto Peak


All other settings are in their default (preset) state.

Again, the first picture shows the resulting signal characteristics in the time domain (zero span). The x-axis shows the time. The y-axis shows the level of the signal. P_{\max} is the highest level that has been measured, P_{\min} is the lowest level (not shown completely).

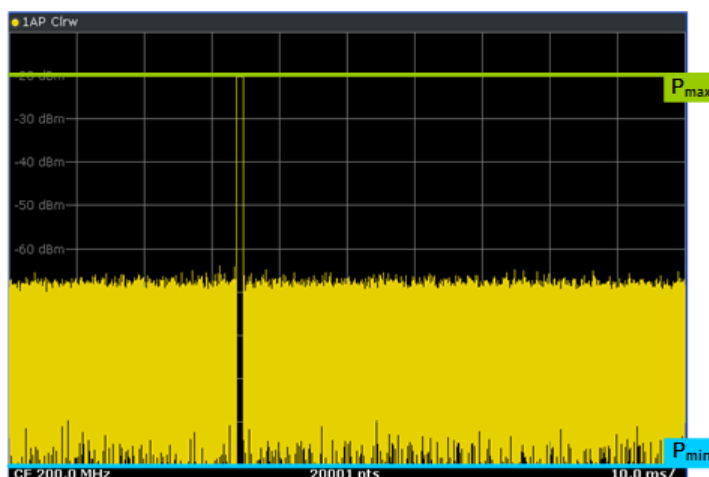

The second picture shows the corresponding CISPR APD function.

The probability of time at 10e-2 corresponds to the duty cycle of 1 %. The maximum level of -20.145 dBm corresponds to the peak level that has been measured in spectrum mode.

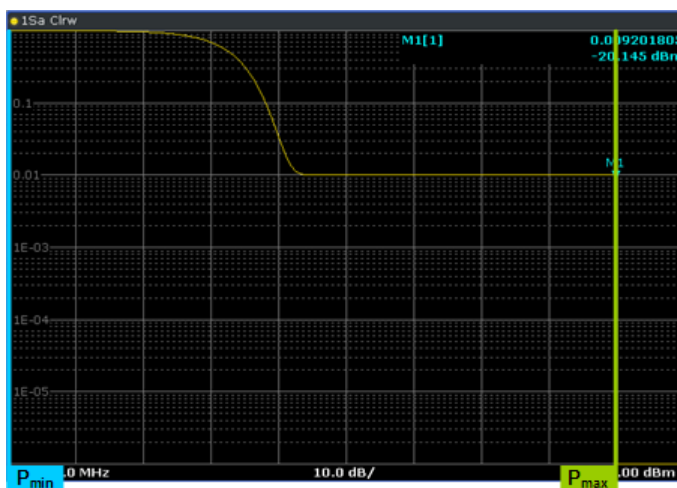

Softkeys for CISPR APD Measurements

Functions to configure CISPR APD measurements described elsewhere:

- "Percent Marker" on page 322
- "Res BW Manual" on page 184
- "Scaling" on page 317
- "Adjust Settings" on page 320

Acquisition Time..... 311

Acquisition Time

Defines the measurement time for CISPR APD measurements.

Remote command:

[SENSe:] SWEep:TIME on page 639

6.1.1.10 Calculating Signal Amplitude Statistics

To measure the amplitude distribution, the R&S ESR has simple measurement functions to determine both the APD = Amplitude Probability Distribution and CCDF = Complementary Cumulative Distribution Function.

To determine the amplitude distribution

- ▶ To activate and configure the measurement of the amplitude probability distribution (APD), press the "APD" softkey (see "APD" on page 224).
To activate and configure the measurement of the complementary cumulative distribution (CCDF), press the "CCDF" softkey (see "CCDF" on page 224).

Only one of the signal statistic functions can be switched on at a time. When a statistic function is switched on, the R&S ESR is set into zero span mode automatically. The R&S ESR measures the statistics of the signal applied to the RF input with the defined resolution bandwidth. To avoid affecting the peak amplitudes the video bandwidth is automatically set to 10 times the resolution bandwidth. The sample detector is used for detecting the video voltage.

About the Statistical Measurements.....	312
Result Evaluation.....	313
Softkeys for APD Measurements.....	316
Softkeys for CCDF Measurements.....	321
Defining Gated Triggering for APD and CCDF.....	327

About the Statistical Measurements

Digital modulated signals are similar to white noise within the transmit channel, but are different in their amplitude distribution. In order to transmit the modulated signal without distortion all amplitudes of the signal have to be transmitted linearly, e.g. from the output power amplifier. Most critical are the peak amplitude values. Degradation in transmit quality caused by a transmitter two port network is dependent on the amplitude of the peak values as well as on their probability.

If modulation types are used that do not have a constant zero span envelope, the transmitter has to handle peak amplitudes that are greater than the average power. This includes all modulation types that involve amplitude modulation, QPSK for example. CDMA transmission modes in particular may have power peaks that are large compared to the average power.

For signals of this kind, the transmitter must provide large reserves for the peak power to prevent signal compression and thus an increase of the bit error rate at the receiver. The peak power or the crest factor of a signal is therefore an important transmitter design criterion. The crest factor is defined as the peak power/mean power ratio or, logarithmically, as the peak level minus the average level of the signal. To reduce power consumption and cut costs, transmitters are not designed for the largest power that could ever occur, but for a power that has a specified probability of being exceeded (e.g. 0.01 %).

The probability of amplitude values can be measured with the APD function (Amplitude Probability Distribution). During a selectable measurement time all occurring amplitude values are assigned to an amplitude range. The number of amplitude values in the specific ranges is counted and the result is displayed as a histogram.

Alternatively, the Complementary Cumulative Distribution Function (CCDF) can be displayed. It shows the probability that the mean signal power amplitude will be exceeded in percent.

Bandwidth selection

When the amplitude distribution is measured, the resolution bandwidth must be set so that the complete spectrum of the signal to be measured falls within the bandwidth. This is the only way of ensuring that all the amplitudes will pass through the IF filter without being distorted. If the selected resolution bandwidth is too small for a digitally modulated signal, the amplitude distribution at the output of the IF filter becomes a Gaussian distribution according to the central limit theorem and thus corresponds to a white noise signal. The true amplitude distribution of the signal therefore cannot be determined.

Selecting the number of samples

For statistics measurements with the R&S ESR, the number of samples to be measured is defined instead of the sweep time. Since only statistically independent samples contribute to statistics, the acquisition or sweep time is calculated automatically and displayed in the channel bar (AQT). The samples are statistically independent if the time difference is at least 1/RBW. The acquisition time AQT is, therefore, expressed as follows:

$$\text{AQT} = N_{\text{Samples}} / \text{RBW}$$

Statistic measurements on pulsed signals

Statistic measurements on pulsed signals can be performed using a gated trigger. An external frame trigger is required as a time (frame) reference. For details see ["Defining Gated Triggering for APD and CCDF"](#) on page 327.

Result Evaluation

Amplitude Probability Distribution (APD)

As a result of the APD function (Amplitude Probability Distribution), the probability of measured amplitude values is displayed. During a selectable measurement time all occurring amplitude values are assigned to an amplitude range. The number of amplitude values in the specific ranges is counted and the result is displayed as a histogram. Each bar of the histogram represents the percentage of measured amplitudes within the specific amplitude range. The x-axis is scaled in absolute values in dBm.

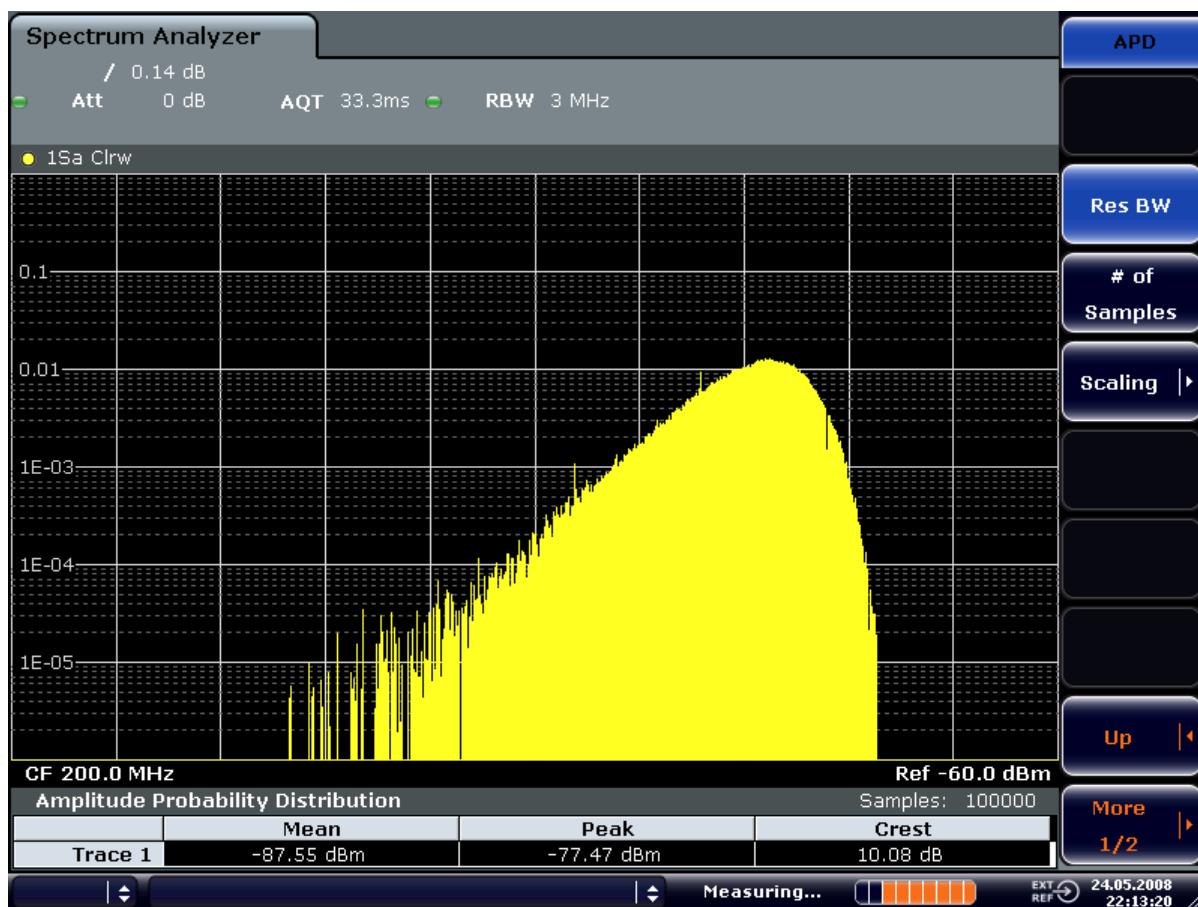


Figure 6-7: Amplitude probability distribution of white noise

In addition to the histogram, a result table is displayed containing the following information:

- Number of samples used for calculation
- For each displayed trace:
 - Mean amplitude
 - Peak amplitude
 - Crest factor

Complementary Cumulative Distribution Function (CCDF)

The Complementary Cumulative Distribution Function (CCDF) shows the probability that the mean signal power amplitude will be exceeded in percent. The level above the mean power is plotted along the x-axis of the graph. The origin of the axis corresponds to the mean power level. The probability that a level will be exceeded is plotted along the y-axis.

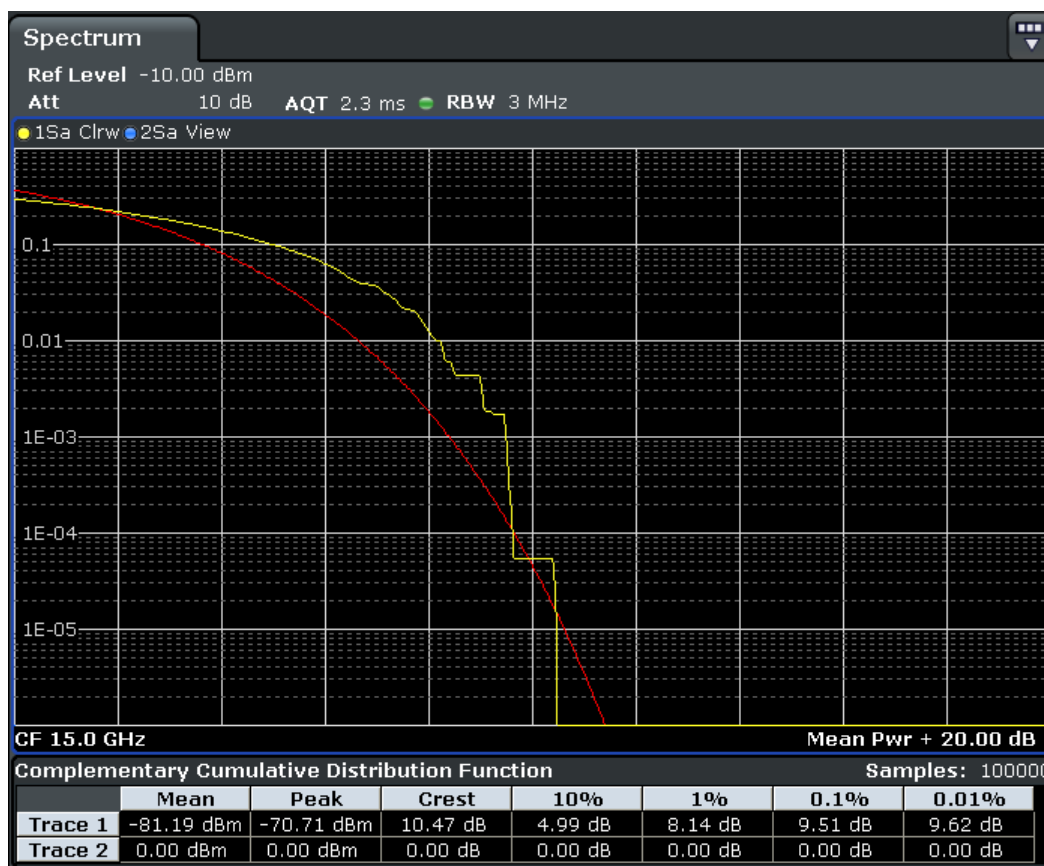


Figure 6-8: CCDF of white noise



A red line indicates the ideal Gaussian distribution for the measured amplitude range (white noise).

The displayed amplitude range is indicated as "Mean Pwr + <x dB>"

In addition to the histogram, a result table is displayed containing the following information:

- Number of samples used for calculation
- For each displayed trace:

Mean	Mean power
Peak	Peak power
Crest	Crest factor (peak power – mean power)
0,01 %	Level values over 0,01 % above mean power
0,1 %	Level values over 0,1 % above mean power

1 %	Level values over 1 % above mean power
10 %	Level values over 10 % above mean power

Softkeys for APD Measurements

APD.....	316
L Res BW.....	316
L # of Samples.....	317
L Scaling.....	317
L x-Axis Ref Level.....	317
L x-Axis Range.....	317
L Range Log 100 dB.....	317
L Range Log 50 dB.....	317
L Range Log 10 dB.....	318
L Range Log 5 dB.....	318
L Range Log 1 dB.....	318
L Range Log Manual.....	318
L Range Linear %.....	318
L Range Lin. Unit.....	319
L y-Axis Max Value.....	319
L y-Axis Min Value.....	319
L y-Unit % / Abs.....	319
L Default Settings.....	319
L Adjust Settings.....	320
L Gated Trigger (On/Off).....	320
L Gate Ranges.....	320
L Adjust Settings.....	321

APD

Activates the function to measure the amplitude probability density (APD) and opens a submenu.

For general information on calculating signal statistics see [Chapter 6.1.1.10, "Calculating Signal Amplitude Statistics"](#), on page 312.

Remote command:

`CALCulate<n>:STATistics:APD[:STATe]` on page 792

Res BW ← APD

Opens an edit dialog box to set the resolution bandwidth directly.

For correct measurement of the signal statistics the resolution bandwidth has to be wider than the signal bandwidth in order to measure the actual peaks of the signal amplitude correctly. In order not to influence the peak amplitudes the video bandwidth is automatically set to 10 MHz. The sample detector is used for detecting the video voltage.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 670

of Samples ← APD

Opens an edit dialog box to set the number of power measurements that are taken into account for the statistics.

Apart from the number of measurements the overall measurement time depends also on the set resolution bandwidth as the resolution bandwidth directly influences the sampling rate.

For details see ["Selecting the number of samples"](#) on page 313.

Remote command:

[CALCulate<n>:STATistics:NSAMples](#) on page 793

Scaling ← APD

Opens a submenu to change the scaling parameters of x- and y-axis.

x-Axis Ref Level ← Scaling ← APD

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dBμV, etc). The function of this softkey is identical to the "Ref Level" softkey in the "Amplitude" menu (see ["Ref Level"](#) on page 352).

For the APD function this value is mapped to the right diagram border. For the CCDF function there is no direct representation of this value on the diagram as the x-axis is scaled relatively to the measured mean power.

Remote command:

[CALCulate<n>:STATistics:SCALE:X:RLEVel](#) on page 798

x-Axis Range ← Scaling ← APD

Opens the "Range" submenu to select a value for the level range to be covered by the statistics measurement selected.

Remote command:

[CALCulate<n>:STATistics:SCALE:X:RANGE](#) on page 797

Range Log 100 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:
 DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 100DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 844

Range Log 50 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:
 DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 50DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 10 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 5 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 1 dB ← x-Axis Range ← Scaling ← APD

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log Manual ← x-Axis Range ← Scaling ← APD

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Linear % ← x-Axis Range ← Scaling ← APD

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Range Lin. Unit ← x-Axis Range ← Scaling ← APD

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

y-Axis Max Value ← Scaling ← APD

Opens an edit dialog box to define the upper limit of the displayed probability range.

Values on the y-axis are normalized which means that the maximum value is 1.0. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UPPer](#) on page 799

y-Axis Min Value ← Scaling ← APD

Opens an edit dialog box to define the lower limit of the displayed probability range.

Values in the range $1e^{-9} < value < 0.1$ are allowed. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:LOWer](#) on page 798

y-Unit % / Abs ← Scaling ← APD

Defines the scaling type of the y-axis. The default value is absolute scaling.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UNIT](#) on page 798

Default Settings ← Scaling ← APD

Resets the x- and y-axis scalings to their preset values.

x-axis ref level:	-10 dBm
x-axis range APD:	100 dB
x-axis range CISPR APD:	100 dB
x-axis range CCDF:	20 dB

y-axis upper limit:	1.0
y-axis lower limit:	1E-6

Remote command:

[CALCulate<n>:STATistics:PRESet](#) on page 796

Adjust Settings ← Scaling ← APD

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

[CALCulate<n>:STATistics:SCALE:AUTO ONCE](#) on page 797

Gated Trigger (On/Off) ← APD

Activates and deactivates the gating for statistics functions for the ACP and the CCDF channel. The trigger source is changed to "EXTERN" if this function is switched on. The gate ranges are defined using the ["Gate Ranges"](#) on page 320 softkey.

Remote command:

[\[SENSe:\]SWEep:EGATe](#) on page 841

[\[SENSe:\]SWEep:EGATe:SOURce](#) on page 842

Gate Ranges ← APD

Opens a dialog to configure up to 3 gate ranges for each trace.

For details on configuration, see ["Defining Gated Triggering for APD and CCDF"](#) on page 327.

Gate Ranges						
	Trace 1	Trace 2	Trace 3	Trace 4	Trace 5	Trace 6
Comment	SlotA					
Period	8 ms	8 ms	8 ms	8 ms	8 ms	8 ms
Range 1 Start	1 ms	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 1 Stop	3 ms	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 1 Use	On	Off	Off	Off	Off	Off
Range 2 Start	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 2 Stop	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 2 Use	Off	Off	Off	Off	Off	Off
Range 3 Start	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 3 Stop	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s	1 μ s
Range 3 Use	Off	Off	Off	Off	Off	Off

Remote command:

[SWE:EGAT ON](#) (see [\[SENSe:\]SWEep:EGATe](#) on page 841)

Switches on the external gate mode.

[SWE:EGAT:TRAC1:COMM "SlotA"](#) (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:COMMENT](#) on page 794)

Adds a comment to trace 1.

SWE:EGAT:TRAC1:STAT1 ON (see [SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>] on page 795)

Activates tracing for range 1 of trace 1.

SWE:EGAT:TRAC1:STAR1 3ms (see [SENSe:]SWEep:EGATe:TRACe<k>:STARt<range> on page 795)

Sets the starting point for range 1 on trace 1 at 3 ms.

SWE:EGAT:TRAC1:STOp1 5ms (see [SENSe:]SWEep:EGATe:TRACe<k>:STOP<range> on page 796)

Sets the stopping point for range 1 on trace 1 at 5 ms.

SWE:EGAT:TRAC1:PER 5ms (see [SENSe:]SWEep:EGATe:TRACe<k>:PERiod on page 795)

Defines the period for gated triggering to 5 ms.

Adjust Settings ← APD

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

CALCulate<n>:STATistics:SCALE:AUTO ONCE on page 797

Softkeys for CCDF Measurements

CCDF.....	321
L Percent Marker.....	322
L Res BW.....	322
L # of Samples.....	322
L Scaling.....	323
L x-Axis Ref Level.....	323
L x-Axis Range.....	323
L Range Log 100 dB.....	323
L Range Log 50 dB.....	323
L Range Log 10 dB.....	323
L Range Log 5 dB.....	324
L Range Log 1 dB.....	324
L Range Log Manual.....	324
L Range Linear %.....	324
L Range Lin. Unit.....	325
L y-Axis Max Value.....	325
L y-Axis Min Value.....	325
L y-Unit % / Abs.....	325
L Default Settings.....	325
L Adjust Settings.....	326
L Gated Trigger (On/Off).....	326
L Gate Ranges.....	326
L Adjust Settings.....	327

CCDF

Activates the function to measure the complementary cumulative distribution function (CCDF) and opens a submenu.

After a CCDF measurement, the results are displayed in a table beneath the diagram.

Mean	Mean power
Peak	Peak power
Crest	Crest factor (peak power – mean power)
0,01 %	Level values over 0,01 % above mean power
0,1 %	Level values over 0,1 % above mean power
1 %	Level values over 1 % above mean power
10 %	Level values over 10 % above mean power

In addition, a red reference line indicating the calculated Gauss distribution is displayed.

Remote command:

[CALCulate<n>:STATistics:CCDF\[:STATe\]](#) on page 792

Activates the CCDF measurement.

[CALCulate<n>:STATistics:CCDF:X<Trace>](#) on page 793

Reads out the level values for 1 % probability.

Percent Marker ← CCDF

Opens an edit dialog box to enter a probability value and to position marker 1. Thus, the power which is exceeded with a given probability can be determined very easily. If marker 1 is deactivated, it will be switched on automatically.

As all markers, the percent marker can be moved simply by touching it with a finger or mouse cursor and dragging it to the desired position.

Remote command:

[CALCulate<n>:MARKer<m>:Y:PERCent](#) on page 865

Res BW ← CCDF

Opens an edit dialog box to set the resolution bandwidth directly.

For correct measurement of the signal statistics the resolution bandwidth has to be wider than the signal bandwidth in order to measure the actual peaks of the signal amplitude correctly. In order not to influence the peak amplitudes the video bandwidth is automatically set to 10 MHz. The sample detector is used for detecting the video voltage.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 670

of Samples ← CCDF

Opens an edit dialog box to set the number of power measurements that are taken into account for the statistics.

Apart from the number of measurements the overall measurement time depends also on the set resolution bandwidth as the resolution bandwidth directly influences the sampling rate.

For details see "[Selecting the number of samples](#)" on page 313.

Remote command:

[CALCulate<n>:STATistics:NSAMples](#) on page 793

Scaling ← CCDF

Opens a submenu to change the scaling parameters of x- and y-axis.

x-Axis Ref Level ← Scaling ← CCDF

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dBμV, etc). The function of this softkey is identical to the "Ref Level" softkey in the "Amplitude" menu (see ["Ref Level"](#) on page 352).

For the APD function this value is mapped to the right diagram border. For the CCDF function there is no direct representation of this value on the diagram as the x-axis is scaled relatively to the measured mean power.

Remote command:

[CALCulate<n>:STATistics:SCALE:X:RLEVEL](#) on page 798

x-Axis Range ← Scaling ← CCDF

Opens the "Range" submenu to select a value for the level range to be covered by the statistics measurement selected.

Remote command:

[CALCulate<n>:STATistics:SCALE:X:RANGE](#) on page 797

Range Log 100 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

[DISP:WIND:TRAC:Y:SPAC LOG](#), see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

[DISP:WIND:TRAC:Y 100DB](#), see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 844

Range Log 50 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

[DISP:WIND:TRAC:Y:SPAC LOG](#), see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

[DISP:WIND:TRAC:Y 50DB](#), see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 844

Range Log 10 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 844

Range Log 5 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 844

Range Log 1 dB ← x-Axis Range ← Scaling ← CCDF

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 844

Range Log Manual ← x-Axis Range ← Scaling ← CCDF

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) on page 844

Range Linear % ← x-Axis Range ← Scaling ← CCDF

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Range Lin. Unit ← x-Axis Range ← Scaling ← CCDF

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

y-Axis Max Value ← Scaling ← CCDF

Opens an edit dialog box to define the upper limit of the displayed probability range. Values on the y-axis are normalized which means that the maximum value is 1.0. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UPPer](#) on page 799

y-Axis Min Value ← Scaling ← CCDF

Opens an edit dialog box to define the lower limit of the displayed probability range. Values in the range $1e^{-9} < value < 0.1$ are allowed. The y-axis scaling is defined via the [y-Unit % / Abs](#) softkey. The distance between max and min value must be at least one decade.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:LOWer](#) on page 798

y-Unit % / Abs ← Scaling ← CCDF

Defines the scaling type of the y-axis. The default value is absolute scaling.

Remote command:

[CALCulate<n>:STATistics:SCALE:Y:UNIT](#) on page 798

Default Settings ← Scaling ← CCDF

Resets the x- and y-axis scalings to their preset values.

x-axis ref level:	-10 dBm
x-axis range APD:	100 dB
x-axis range CISPR APD:	100 dB
x-axis range CCDF:	20 dB
y-axis upper limit:	1.0
y-axis lower limit:	1E-6

Remote command:

[CALCulate<n>:STATistics:PRESet](#) on page 796

Adjust Settings ← Scaling ← CCDF

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

`CALCulate<n>:STATistics:SCALE:AUTO ONCE` on page 797

Gated Trigger (On/Off) ← CCDF

Activates and deactivates the gating for statistics functions for the ACP and the CCDF channel. The trigger source is changed to "EXTERN" if this function is switched on. The gate ranges are defined using the ["Gate Ranges"](#) on page 320 softkey.

Remote command:

`[SENSe:]SWEep:EGATe` on page 841

`[SENSe:]SWEep:EGATe:SOURce` on page 842

Gate Ranges ← CCDF

Opens a dialog to configure up to 3 gate ranges for each trace.

For details on configuration, see ["Defining Gated Triggering for APD and CCDF"](#) on page 327.

Gate Ranges						
	Trace 1	Trace 2	Trace 3	Trace 4	Trace 5	Trace 6
Comment	SlotA					
Period	8 ms	8 ms	8 ms	8 ms	8 ms	8 ms
Range 1 Start	1 ms	1 μs	1 μs	1 μs	1 μs	1 μs
Range 1 Stop	3 ms	1 μs	1 μs	1 μs	1 μs	1 μs
Range 1 Use	On	Off	Off	Off	Off	Off
Range 2 Start	1 μs	1 μs	1 μs	1 μs	1 μs	1 μs
Range 2 Stop	1 μs	1 μs	1 μs	1 μs	1 μs	1 μs
Range 2 Use	Off	Off	Off	Off	Off	Off
Range 3 Start	1 μs	1 μs	1 μs	1 μs	1 μs	1 μs
Range 3 Stop	1 μs	1 μs	1 μs	1 μs	1 μs	1 μs
Range 3 Use	Off	Off	Off	Off	Off	Off

Remote command:

`SWE:EGAT ON` (see [\[SENSe:\]SWEep:EGATe](#) on page 841)

Switches on the external gate mode.

`SWE:EGAT:TRAC1:COMM "SlotA"` (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:COMMENT](#) on page 794)

Adds a comment to trace 1.

`SWE:EGAT:TRAC1:STAT1 ON` (see [\[SENSe:\]SWEep:EGATe:TRACe<k>\[:STATE<range>\]](#) on page 795)

Activates tracing for range 1 of trace 1.

`SWE:EGAT:TRAC1:STAR1 3ms` (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:START<range>](#) on page 795)

Sets the starting point for range 1 on trace 1 at 3 ms.

`SWE:EGAT:TRAC1:STOp1 5ms` (see [\[SENSe:\]SWEep:EGATe:TRACe<k>:STOP<range>](#) on page 796)

Sets the stopping point for range 1 on trace 1 at 5 ms.

`SWE:EGAT:TRAC1:PER 5ms` (see [`SENSe:]SWEp:EGATe:TRACe<k>:PERiod` on page 795)

Defines the period for gated triggering to 5 ms.

Adjust Settings ← CCDF

Adjusts the level settings according to the measured difference between peak and minimum power for APD measurement or peak and mean power for CCDF measurement in order to obtain maximum power resolution. Adjusts the reference level to the current input signal. For details see also the [Adjust Ref Lvl](#) softkey.

Remote command:

`CALCulate<n>:STATistics:SCALE:AUTO ONCE` on page 797


Defining Gated Triggering for APD and CCDF

Statistic measurements on pulsed signals can be performed using GATED TRIGGER. An external frame trigger is required as a time (frame) reference.

The gate ranges define the part of the I/Q capture data taken into account for the statistics calculation. These ranges are defined relative to a reference point T=0. The gate interval is repeated for each period until the end of the I/Q capture buffer.

The reference point T=0 is defined by the external trigger event and the instrument's trigger offset.

For each trace you can define up to 3 separate ranges of a single period to be traced.

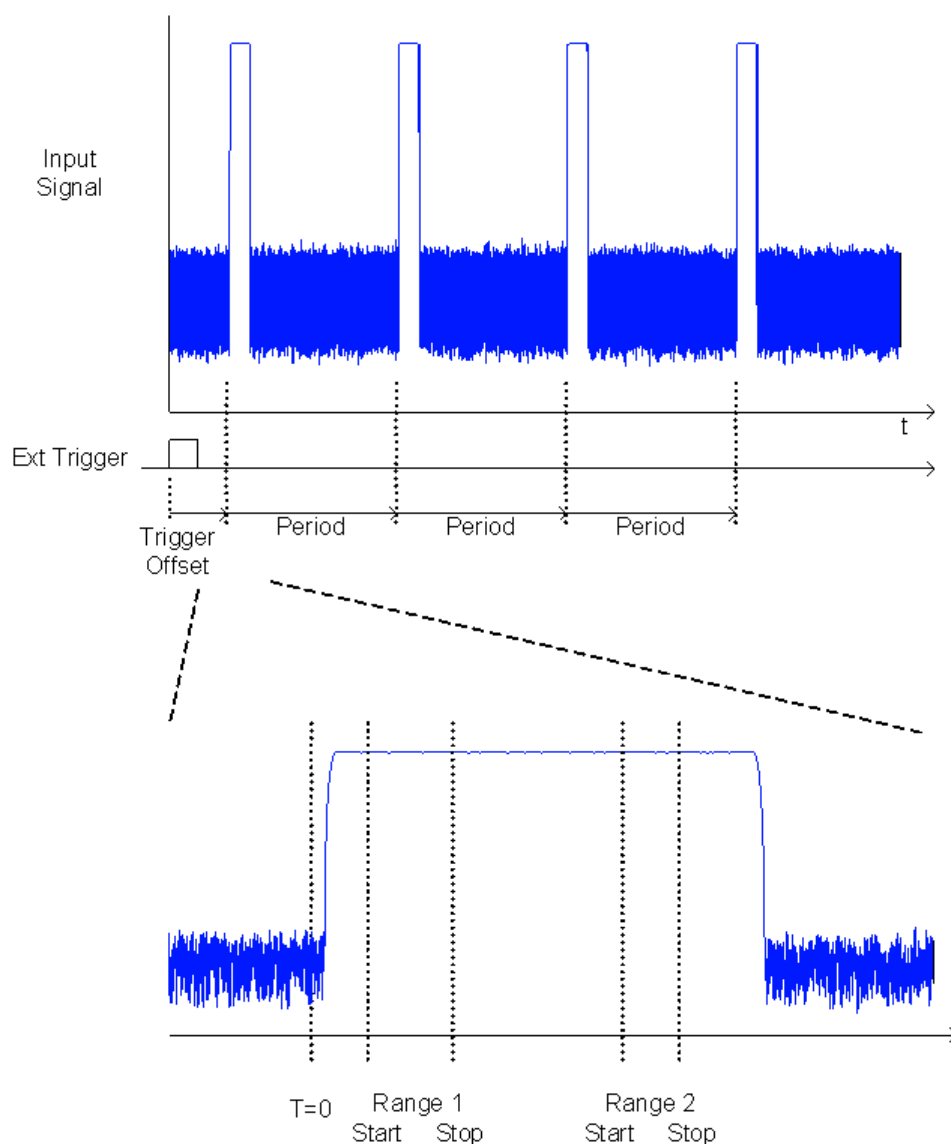

Defining gated triggering

1. Press the "Gated Trigger" softkey to activate gated triggering (see ["Gated Trigger \(On/Off\)"](#) on page 320).
2. Press the "Gate Ranges" softkey to open the "Gate Ranges" dialog (see ["Gate Ranges"](#) on page 320).
3. Define the length of the period to be analyzed in the "Period" field.

Note: The period is the same for all traces. If you change the period for one trace, it is automatically changed for all traces.

Make sure the defined period is not longer than the acquisition time of the current measurement. Keep in mind that the acquisition time depends on the bandwidth and the number of samples settings (see ["Selecting the number of samples"](#) on page 313). The current acquisition time is indicated as "AQT" in the channel bar.

4. Optionally, define a description of the trace in the "Comment" field.
5. Activate tracing for the range by selecting "On" in the "Range <number> Use" field for the corresponding range and trace.


The start and stop time edit fields are ready for input.

Note: The time values have full numerical resolution and are only rounded for display.

6. Define the starting point of the range within the period.
7. Define the stopping point for the range within the period. Make sure the value for the stopping time is smaller than the length of the period.
8. To define further ranges for the same period in the same trace, repeat steps 5- 7 for the same trace.
To define further ranges for the same period in a different trace, repeat steps 4- 7 for a different trace.
9. If necessary, activate the configured traces in the "Trace" menu.

Gated statistics configuration example

A statistics evaluation has to be done over the useful part of the signal between t_3 and t_4 . The period of the GSM signal is 4.61536 ms

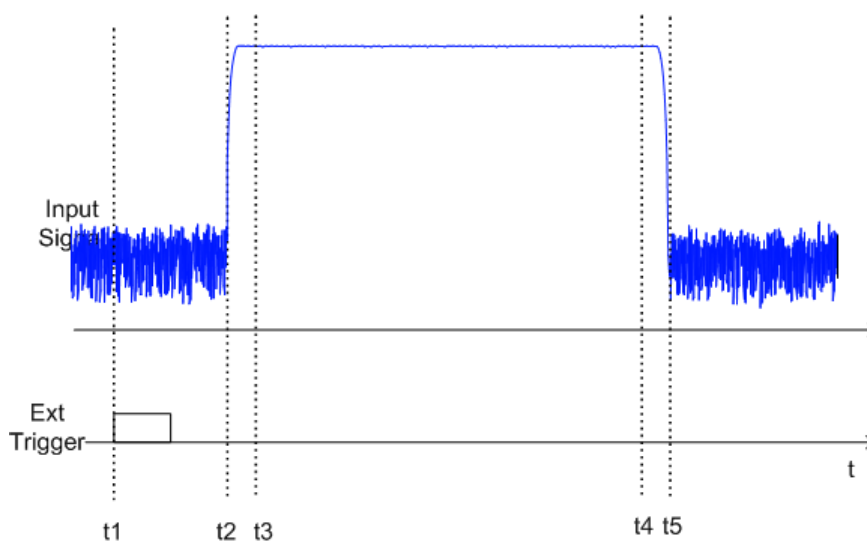

- t1: External positive trigger slope
- t2: Begin of burst (after 25 μ s)
- t3: Begin of useful part, to be used for statistics (after 40 μ s)
- t4: End of useful part, to be used for statistics (after 578 μ s)
- t5: End of burst (after 602 μ s)

The instrument has to be configured as follows:

Trigger Offset	$t_2 - t_1 = 25 \mu\text{s}$	now the gate ranges are relative to t_2
Range1 Start	$t_3 - t_2 = 15 \mu\text{s}$	start of range 1 relative to t_2
Range1 End	$t_4 - t_2 = 553 \mu\text{s}$	end of range 1 relative to t_2

6.1.1.11 Measuring the Third Order Intercept Point (TOI)

In order to measure the third order intercept point (TOI), a two-tone signal with equal carrier levels is expected at the R&S ESR input. Marker 1 and marker 2 (both normal markers) are set to the maximum of the two signals. Marker 3 and marker 4 are placed on the intermodulation products.

The R&S ESR calculates the third order intercept point from the level difference between the first 2 markers and the markers 3 and 4 and displays it in the marker field.

The third order intercept point is measured using the "TOI" softkey, see "TOI" on page 224.

About TOI Measurement

If several signals are applied to a transmission two-port device with nonlinear characteristic, intermodulation products appear at its output at the sums and differences of the signals. The nonlinear characteristic produces harmonics of the useful signals which intermodulate at the characteristic. The intermodulation products of lower order have a special effect since their level is largest and they are near the useful signals. The intermodulation product of third order causes the highest interference. It is the intermodulation product generated from one of the useful signals and the 2nd harmonic of the second useful signal in case of two-tone modulation.

The frequencies of the intermodulation products are above and below the useful signals. The [Figure 6-9](#) shows intermodulation products P_{I1} and P_{I2} generated by the two useful signals P_{U1} and P_{U2} .

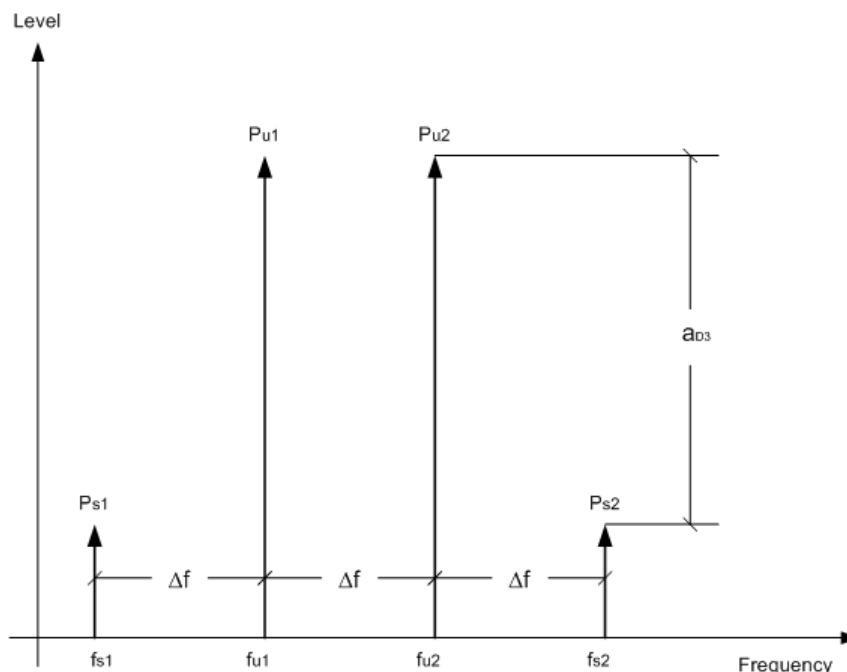


Figure 6-9: Intermodulation products PU1 and PU2

The intermodulation product at f_{i2} is generated by mixing the 2nd harmonic of useful signal P_{U2} and signal P_{U1} , the intermodulation product at f_{i1} by mixing the 2nd harmonic of useful signal P_{U1} and signal P_{U2} .

$$f_{i1} = 2 \times f_{u1} - f_{u2} \quad (6)$$

$$f_{i2} = 2 \times f_{u2} - f_{u1} \quad (7)$$

Dependency on level of useful signals

The level of the intermodulation products depends on the level of the useful signals. If the two useful signals are increased by 1 dB, the level of the intermodulation products increases by 3 dB, which means that spacing a_{D3} between intermodulation signals and useful signals are reduced by 2 dB. This is illustrated in Figure 6-10.

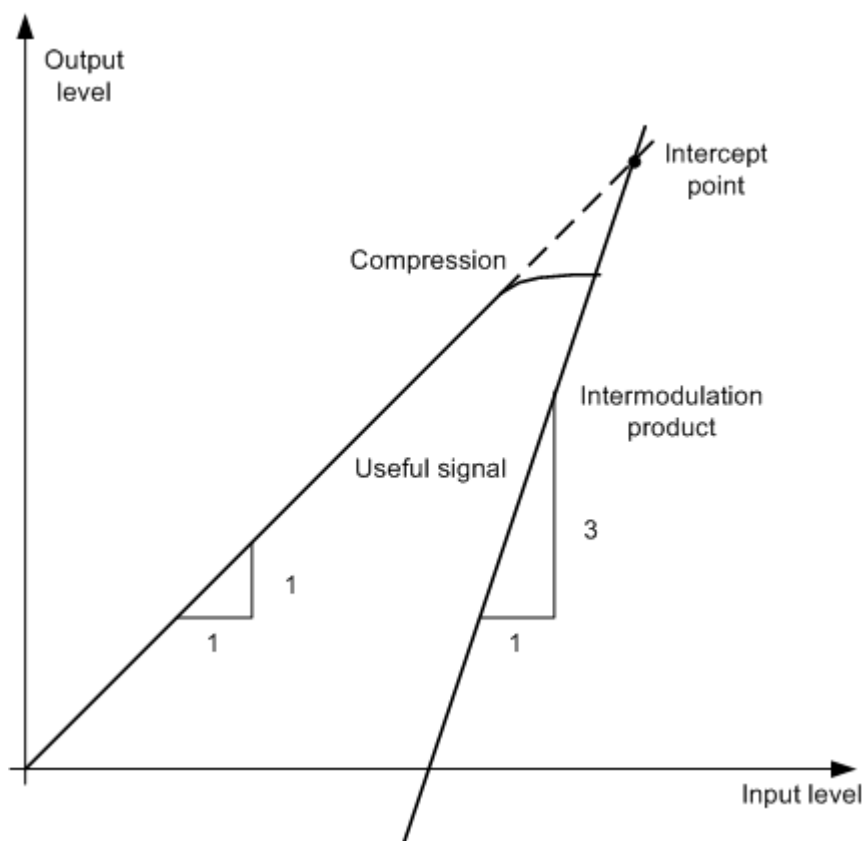


Figure 6-10: Dependency of intermodulation level on useful signal level

The useful signals at the two-port output increase proportionally with the input level as long as the two-port is in the linear range. A level change of 1 dB at the input causes a level change of 1 dB at the output. Beyond a certain input level, the two-port goes into compression and the output level stops increasing. The intermodulation products of the third order increase three times as much as the useful signals. The intercept point is the fictitious level where the two lines intersect. It cannot be measured directly since the useful level is previously limited by the maximum two-port output power.

Calculation method

It can be calculated from the known line slopes and the measured spacing a_{D3} at a given level according to the following formula:

$$IP3 = \frac{a_{D3}}{2} + P_N$$

The 3rd order intercept point (TOI), for example, is calculated for an intermodulation of 60 dB and an input level P_U of -20 dBm according to the following formula:

$$IP3 = \frac{60}{2} + (-20dBm) = 10dBm$$

Intermodulation-free dynamic range

The "Intermodulation-free dynamic range", i.e. the level range in which no internal intermodulation products are generated if two-tone signals are measured, is determined by the 3rd order intercept point, the phase noise and the thermal noise of the signal analyzer. At high signal levels, the range is determined by intermodulation products. At low signal levels, intermodulation products disappear below the noise floor, i.e. the noise floor and the phase noise of the signal analyzer determine the range. The noise floor and the phase noise depend on the resolution bandwidth that has been selected. At the smallest resolution bandwidth, the noise floor and phase noise are at a minimum and so the maximum range is obtained. However, a large increase in sweep time is required for small resolution bandwidths. It is, therefore, best to select the largest resolution bandwidth possible to obtain the range that is required. Since phase noise decreases as the carrier-offset increases, its influence decreases with increasing frequency offset from the useful signals.

The following diagrams illustrate the intermodulation-free dynamic range as a function of the selected bandwidth and of the level at the input mixer (= signal level – set RF attenuation) at different useful signal offsets.

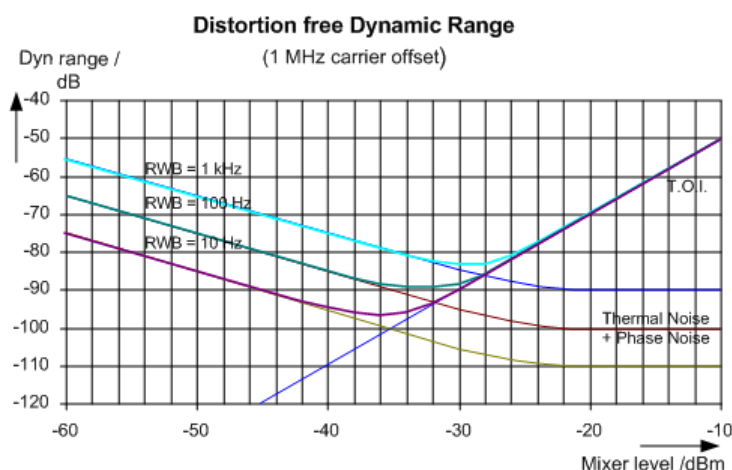


Figure 6-11: Intermodulation-free range of the R&S ESR as a function of level at the input mixer and the set resolution bandwidth

(Useful signal offset = 1 MHz, DANL = -145 dBm/Hz, TOI = 15 dBm; typical values at 2 GHz)

The optimum mixer level, i.e. the level at which the intermodulation distance is at its maximum, depends on the bandwidth. At a resolution bandwidth of 10 Hz, it is approx. -35 dBm and at 1 kHz increases to approx. -30 dBm.

Phase noise has a considerable influence on the intermodulation-free range at carrier offsets between 10 and 100 kHz (Figure 6-11). At greater bandwidths, the influence of the phase noise is greater than it would be with small bandwidths. The optimum mixer level at the bandwidths under consideration becomes almost independent of bandwidth and is approx. -40 dBm.

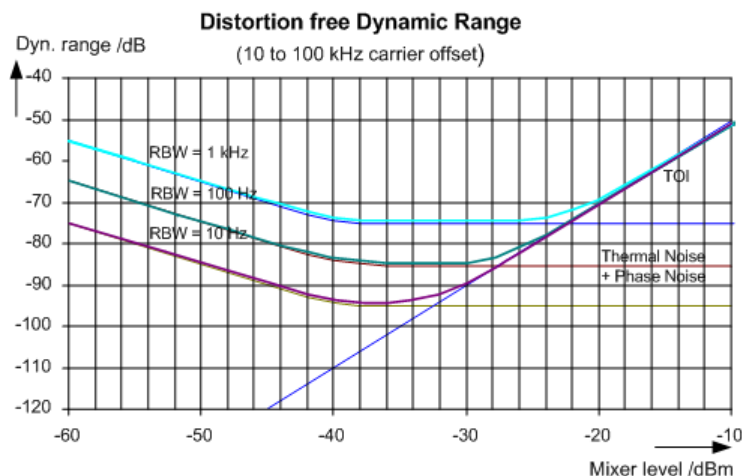


Figure 6-12: Intermodulation-free dynamic range of the R&S ESR as a function of level at the input mixer and of the selected resolution bandwidth

(Useful signal offset = 10 to 100 kHz, DANL = -145 dBm/Hz, TOI = 15 dBm; typical values at 2 GHz).



If the intermodulation products of a DUT with a very high dynamic range are to be measured and the resolution bandwidth to be used is therefore very small, it is best to measure the levels of the useful signals and those of the intermodulation products separately using a small span. The measurement time will be reduced- in particular if the offset of the useful signals is large. To find signals reliably when frequency span is small, it is best to synchronize the signal sources and the R&S ESR.

Measurement Results

As a result of the TOI measurement, the following values are displayed in the marker area of the diagram:

Label	Description
TOI	Third-order intercept point
M1	Maximum of first useful signal
M2	Maximum of second useful signal
M3	First intermodulation product
M4	Second intermodulation product

Remote command

The TOI can also be queried using the remote command `CALCulate<n>:MARKer<m>:FUNction:TOI:RESult?` on page 791.

Softkeys for TOI Measurements

TOI.....	335
L Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta.....	335
L Search Signals.....	335

TOI

Opens a submenu and activates the measurement of the 3rd order intercept point.

A two-tone signal with equal carrier levels is expected at the R&S ESR input. Marker 1 and marker 2 (both normal markers) are set to the maximum of the two signals. Marker 3 and marker 4 are placed on the intermodulation products.

The R&S ESR calculates the third order intercept point from the level difference between the first 2 markers and the markers 3 and 4 and displays it in the marker field.

For general information on measuring the TOI see [Chapter 6.1.1.11, "Measuring the Third Order Intercept Point \(TOI\)"](#), on page 330.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTion:TOI[:STATe]` on page 790

`CALCulate<n>:MARKer<m>:FUNCTion:TOI:RESult?` on page 791

Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta ← TOI

The "Marker X" softkey activates the corresponding marker and opens an edit dialog box to enter a value for the marker to be set to. Pressing the softkey again deactivates the selected marker.

If a marker value is changed using the rotary knob, the step size is defined via the [Stepsize Standard](#) or [Stepsize Sweep Points](#) softkeys.

Marker 1 is always the reference marker for relative measurements. If activated, markers 2 to 16 are delta markers that refer to marker 1. These markers can be converted into markers with absolute value display using the "Marker Norm/Delta" softkey. If marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker.

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 695

`CALCulate<n>:MARKer<m>:X` on page 695

`CALCulate<n>:MARKer<m>:Y` on page 696

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 701

`CALCulate<n>:DELTamarker<m>:X` on page 702

`CALCulate<n>:DELTamarker<m>:X:RELative?` on page 702

`CALCulate<n>:DELTamarker<m>:Y` on page 703

Search Signals ← TOI

Activates all markers.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTion:TOI:SEARChsignal ONCE` on page 790

6.1.1.12 Measuring the AM Modulation Depth

The AM modulation depth, also known as a modulation index, indicates by how much the modulated signal varies around the carrier amplitude. It is defined as:

$$\text{MDepth} = \text{peak signal amplitude} / \text{unmodulated carrier amplitude}$$

So for MDepth = 0.5, for example, the carrier amplitude varies by 50% above and below its unmodulated level, and for h = 1.0 it varies by 100%.

You can measure the modulation depth of a modulated signal using the [AM Mod Depth](#) function.

When this function is activated, marker 1 is set to the peak level, which is considered to be the carrier level. Deltamarkers 2 and 3 are automatically set symmetrically to the carrier on the adjacent peak values of the trace. The markers can be adjusted manually, if necessary.

The R&S ESR calculates the power at the marker positions from the measured levels. The AM modulation depth is calculated as the ratio between the power values at the reference marker and at the delta markers. If the powers of the two AM side bands are unequal, the mean value of the two power values is used for AM modulation depth calculation.



A remote control programming example is described in [Chapter 11.17.2.3, "Measuring the AM Modulation Depth"](#), on page 1008 and an example of how to perform the measurement manually in [Chapter 3.5.3.2, "Measuring the Modulation Depth of an AM-Modulated Carrier \(Span > 0\)"](#), on page 103.

Measurement results

The AM modulation depth in percent is displayed as a result of the measurement, indicated in the marker results as "MDepth".

It can also be queried using the remote command `CALCulate<n>:MARKer<m>:FUNction:MDEPth:RESult?` on page 784.

Softkeys for AM Modulation Depth Measurements

AM Mod Depth.....	336
L Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta.....	337
L Search Signals.....	337

AM Mod Depth

Activates the measurement of the AM modulation depth. An AM-modulated carrier is required on the screen to ensure correct operation.

When this function is activated, marker 1 is set to the peak level, which is considered to be the carrier level. Deltamarkers 2 and 3 are automatically set symmetrically to the carrier on the adjacent peak values of the trace. An edit dialog box is displayed for deltamarker 2 in order to adjust the position manually.

When the position of deltamarker 2 is changed, deltamarker 3 is moved symmetrically with respect to the reference marker 1.

Deltamarker 3, on the other hand, can be moved for fine adjustment irrespective of marker 2.

Marker 1 can also be moved manually for re-adjustment without affecting the position of the deltamarkers.

For general information on measuring the AM modulation depth see [Chapter 6.1.1.12, "Measuring the AM Modulation Depth"](#), on page 336.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:MDEPth[:STATe]` on page 785

`CALCulate<n>:MARKer<m>:FUNction:MDEPth:RESult?` on page 784

Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta ← AM Mod Depth

The "Marker X" softkey activates the corresponding marker and opens an edit dialog box to enter a value for the marker to be set to. Pressing the softkey again deactivates the selected marker.

If a marker value is changed using the rotary knob, the step size is defined via the [Stepsize Standard](#) or [Stepsize Sweep Points](#) softkeys.

Marker 1 is always the reference marker for relative measurements. If activated, markers 2 to 16 are delta markers that refer to marker 1. These markers can be converted into markers with absolute value display using the "Marker Norm/Delta" softkey. If marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker.

Remote command:

`CALCulate<n>:MARKer<m>[:STATe]` on page 695

`CALCulate<n>:MARKer<m>:X` on page 695

`CALCulate<n>:MARKer<m>:Y` on page 696

`CALCulate<n>:DELTamarker<m>[:STATe]` on page 701

`CALCulate<n>:DELTamarker<m>:X` on page 702

`CALCulate<n>:DELTamarker<m>:X:RELative?` on page 702

`CALCulate<n>:DELTamarker<m>:Y` on page 703

Search Signals ← AM Mod Depth

Activates all markers.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:MDEPth:SEARChsignal ONCE`
on page 784

6.1.1.13 Measuring Harmonic Distortion

The harmonics and their distortion can be measured using the ["Harmonic Distortion"](#) on page 225 function.

With this measurement it is possible to measure the harmonics e.g. from a VCO easily. In addition the THD (total harmonic distortion) is calculated in % and dB.

With span > 0 Hz, an automatic search for the first harmonic is carried out within the set frequency range. Also the level is adjusted. In zero span, the center frequency is unchanged.

As a result, the zero span sweeps on all harmonics are shown, as well as the RMS values and the THD (total harmonic distortion).

About Harmonics Distortion Measurement

Measuring the harmonics of a signal is a frequent problem which can be solved best using a signal analyzer. In general, every signal contains harmonics which are larger than others. Harmonics are particularly critical regarding high-power transmitters such as transceivers because large harmonics can interfere with other radio services.

Harmonics are generated by nonlinear characteristics. They can often be reduced by low pass filters. Since the signal analyzer has a nonlinear characteristic, e.g. in its first mixer, measures must be taken to ensure that harmonics produced in the signal analyzer do not cause spurious results. If necessary, the fundamental wave must be selectively attenuated with respect to the other harmonics with a high pass filter.

Obtainable dynamic range

When harmonics are being measured, the obtainable dynamic range depends on the second harmonic intercept of the signal analyzer. The second harmonic intercept is the virtual input level at the RF input mixer at which the level of the 2nd harmonic becomes equal to the level of the fundamental wave. In practice, however, applying a level of this magnitude would damage the mixer. Nevertheless, the available dynamic range for measuring the harmonic distance of a DUT can be calculated relatively easily using the second harmonic intercept.

As shown in [Figure 6-13](#), the level of the 2nd harmonic drops by 20 dB if the level of the fundamental wave is reduced by 10 dB.

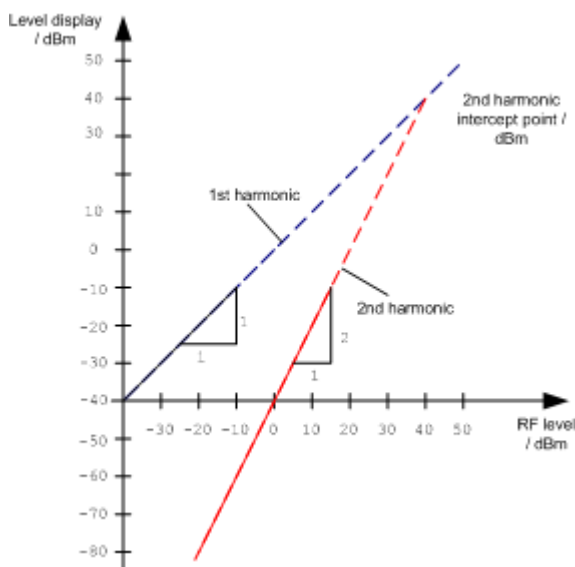


Figure 6-13: Extrapolation of the 1st and 2nd harmonics to the 2nd harmonic intercept at 40 dBm

The following formula for the obtainable harmonic distortion d_2 in dB is derived from the straight-line equations and the given intercept point:

$$d_2 = \text{S.H.I} - P_1 \quad (1)$$

where:

d2	=	harmonic distortion
P ₁	=	mixer level/dBm
S.H.I.	=	second harmonic intercept



The mixer level is the RF level applied to the RF input minus the set RF attenuation.

The formula for the internally generated level P₁ at the 2nd harmonic in dBm is:

$$P_1 = 2 * P_1 - \text{S.H.I.} \quad (2)$$

The lower measurement limit for the harmonic is the noise floor of the signal analyzer. The harmonic of the measured DUT should – if sufficiently averaged by means of a video filter – be at least 4 dB above the noise floor so that the measurement error due to the input noise is less than 1 dB.

The following rules for measuring high harmonic ratios can be derived:

- Select the smallest possible IF bandwidth for a minimal noise floor.
- Select an RF attenuation which is high enough to just measure the harmonic ratio.

The maximum harmonic distortion is obtained if the level of the harmonic equals the intrinsic noise level of the receiver. The level applied to the mixer, according to (2), is:

$$P_1 = \frac{P_{\text{noise}} / \text{dBm} + \text{IP2}}{2}$$

At a resolution bandwidth of 10 Hz (noise level -143 dBm, S.H.I. = 40 dBm), the optimum mixer level is – 51.5 dBm. According to (1) a maximum measurable harmonic distortion of 91.5 dB minus a minimum S/N ratio of 4 dB is obtained.



If the harmonic emerges from noise sufficiently (approx. >15 dB), it is easy to check (by changing the RF attenuation) whether the harmonics originate from the DUT or are generated internally by the signal analyzer. If a harmonic originates from the DUT, its level remains constant if the RF attenuation is increased by 10 dB. Only the displayed noise is increased by 10 dB due to the additional attenuation. If the harmonic is exclusively generated by the signal analyzer, the level of the harmonic is reduced by 20 dB or is lost in noise. If both – the DUT and the signal analyzer – contribute to the harmonic, the reduction in the harmonic level is correspondingly smaller.

High-Sensitivity Harmonics Measurements

If harmonics have very small levels, the resolution bandwidth required to measure them must be reduced considerably. The sweep time is, therefore, also increased considerably. In this case, the measurement of individual harmonics is carried out with the

R&S ESR set to a small span. Only the frequency range around the harmonics will then be measured with a small resolution bandwidth.

Measurement Results

As a result of the harmonics distortion measurement, the zero span sweeps on all detected harmonics are shown in the diagram, separated by red display lines. This provides a very good overview of the measurement.

In addition, a result table is displayed providing the following information:

- 1st harmonic frequency
- THD (total harmonic distortion), relative and absolute values
- For each detected harmonic:
 - Frequency
 - RBW
 - Power

The results can also be queried using the remote commands:

THD: `CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DISToRTion?`
on page 787

List of harmonics: `CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:LIST?`
on page 787

Softkeys for Harmonic Distortion Measurements

Harmonic Distortion.....	340
L No. of Harmonics.....	341
L Harmonic Sweep Time.....	341
L Harmonic RBW Auto.....	341
L Adjust Settings.....	341

Harmonic Distortion

Opens a submenu to determine the settings for harmonics measurement and activates the harmonic distortion measurement.

With this measurement you can measure the harmonics of a signal. In addition the THD (total harmonic distortion) is calculated in % and dB.

With span > 0 Hz, an automatic search for the first harmonic is carried out within the set frequency range. Also the level is adjusted. In zero span, the center frequency is unchanged.

In the upper window, the zero span sweeps on all harmonics are shown, separated by display lines. In the lower window, the mean RMS results are displayed in numerical values. The THD values are displayed in the marker field.

For details see [Chapter 6.1.1.13, "Measuring Harmonic Distortion"](#), on page 337.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics[:STATe]` on page 789

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:DISToRTion?` on page 787

`CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:LIST?` on page 787

No. of Harmonics ← Harmonic Distortion

Sets the number of harmonics that shall be measured. The range is from 1 to 26.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:HARMonics:NHARmonics` on page 788

Harmonic Sweep Time ← Harmonic Distortion

For details refer to the [SweepTime Manual](#) softkey in the "Bandwidth" menu.

Harmonic RBW Auto ← Harmonic Distortion

Enables/disables the automatic adjustment of the resolution bandwidth for filter types Normal (3dB) (Gaussian) and 5-Pole filters. The automatic adjustment is carried out according to:

$RBW_n = RBW_1 * n$

If RBW_n is not available, the next higher value is used.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:HARMonics:BANDwidth:AUTO`
on page 786

Adjust Settings ← Harmonic Distortion

Activates the frequency search in the frequency range that was set before starting the harmonic measurement (if harmonic measurement was with span > 0) and adjusts the level.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:HARMonics:PRESet` on page 788

6.1.2 Measurement Configuration – MEAS CONFIG Key

The MEAS CONFIG key displays the submenu of the currently activated and running measurement function, e.g. the submenu of "TOI" or "Harmonic Distortion" (see [Chapter 6.1.1, "Power Measurements – MEAS Key"](#), on page 221, for quick access to the measurement configuration. If no measurement function is activated, this key has no effect.

6.1.3 Performing Measurements – RUN SINGLE/RUN CONT Keys

The [RUN SINGLE] and [RUN CONT] keys are used to start measurement tasks.

- [RUN SINGLE] switches to single sweep mode and performs a single sweep, just as the [Single Sweep](#) softkey in the "Sweep" menu does.
- [RUN CONT] switches to continuous sweep mode and starts sweeping, just as the [Continuous Sweep](#) softkey in the "Sweep" menu does.

6.2 Configuration

Basic measurement settings that are common to many measurement tasks are described here. If you are performing a specific measurement task or using an operating mode other than Spectrum mode, be sure to check the specific measurement or mode description for settings that may deviate from these common settings.

6.2.1 Initializing the Configuration – PRESET Key

The PRESET key resets the instrument to the default setting and therefore provides a defined initial state as a known starting point for measurements.



If the "local lockout" function is active in the remote control mode, the PRESET key is disabled.

Further information

- [Chapter 6.2.1.2, "Initial Configuration"](#), on page 343

Task

- [Chapter 6.2.1.1, "Presetting the Instrument"](#), on page 342

6.2.1.1 Presetting the Instrument

1. Define the data set for the presetting:
 - a) To retrieve the originally provided settings file (see [Chapter 6.2.1.2, "Initial Configuration"](#), on page 343), deactivate the "Startup Recall" softkey in the "SAVE/RCL" menu.
 - b) To retrieve a customized settings file, in the "File" menu, activate the "Startup Recall" softkey, press the "Startup Recall Setup" softkey, and select the corresponding file.
For details refer to [Chapter 10.1, "Saving and Recalling Settings Files – SAVE/RCL Key"](#), on page 529.
2. Press the PRESET key to perform a preset.

Remote: *RST or SYSTem:PRESet



After you use the PRESET function, the history of previous actions is deleted, i.e. any actions performed previously cannot be undone or redone using the UNDO/REDO keys.

6.2.1.2 Initial Configuration

The initial configuration is selected such that the RF input is always protected against overload, provided that the applied signal levels are in the allowed range for the instrument.

The parameter set of the initial configuration can be customized using the "Startup Recall" softkey in the "Save/Rcl" menu. For further information refer to [Chapter 10.1, "Saving and Recalling Settings Files – SAVE/RCL Key"](#), on page 529.

Table 6-5: Initial configuration

Parameter	Setting
mode	Spectrum
sweep mode	auto
center frequency	$f_{\max}/2$
center frequency step size	0.1 * span
span	maximum possible (depends on instrument model)
RF attenuation	0 dB
reference level	-10 dBm
level range	100 dB log
level unit	dBm
sweep time	auto
resolution bandwidth	auto (3 MHz)
video bandwidth	auto (3 MHz)
FFT filters	off
span/RBW	100
RBW/VBW	1
sweep	cont
trigger	free run
trace 1	clr write
trace 2/3/4/5/6	blank
detector	auto peak
frequency offset	0 Hz
reference level offset	0 dB
reference level position	100 %
grid	abs
cal correction	on

Parameter	Setting
noise source	off
input	RF

6.2.2 Selecting the Frequency and Span – FREQ Key

The FREQ key is used to configure the frequency axis, to set the frequency offset and the signal track function. You can configure the frequency axis either by the start and stop frequency or the center frequency and the span.

To open the Frequency menu

- Press the [FREQ] key.
The "Frequency" menu is displayed. The "Frequency Center" edit dialog box is displayed.

Menu and softkey description

- [Chapter 6.2.2.1, "Softkeys of the Frequency Menu"](#), on page 344

Tasks

- [Chapter 6.2.2.2, "Specifying the Frequency Axis by the Start and Stop Frequency"](#), on page 348
- [Chapter 6.2.2.3, "Specifying the Frequency Axis by the Center Frequency and the Span"](#), on page 348
- [Chapter 6.2.2.4, "Specifying the Step Size for the Arrow Keys and the Rotary Knob"](#), on page 348
- [Chapter 6.2.2.5, "Modifying the Frequency Axis by an Offset"](#), on page 349
- [Chapter 6.2.2.6, "Tracking Signals \(Span > 0\)"](#), on page 349

6.2.2.1 Softkeys of the Frequency Menu

The following chapter describes all softkeys available in the "Frequency" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Center.....	345
CF Stepsize.....	345
L 0.1*Span (span > 0).....	345
L 0.1*RBW (span > 0).....	345
L 0.5*Span (span > 0).....	346
L 0.5*RBW (span > 0).....	346
L x*Span (span > 0).....	346
L x*RBW (span > 0).....	346
L =Center.....	346
L =Marker.....	346

L Manual.....	347
Start.....	347
Stop.....	347
Frequency Offset.....	347
Signal Track (span > 0).....	347
L Track On/Off (span > 0).....	348
L Track BW (span > 0).....	348
L Track Threshold (span > 0).....	348
L Select Trace (span > 0).....	348

Center

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

span > 0: $\text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\text{max}} - \text{span}_{\min}/2$

span = 0: $0 \text{ Hz} \leq f_{\text{center}} \leq f_{\text{max}}$

f_{max} and span_{\min} are specified in the data sheet.

Remote command:

[SENSe:]FREQuency:CENTer on page 822

CF Stepsize

Opens a submenu to set the step size of the center frequency.

The step size defines the value by which the center frequency is increased or decreased when the arrow keys are pressed. When you use the rotary knob the center frequency changes in steps of 10% of the "Center Frequency Stepsize".

The step size can be set to a fraction of the span (span > 0) or a fraction of the resolution bandwidth (span = 0) or it can be set to a fixed value manually.

Apart from the =Center, =Marker and Manual softkeys, the other softkeys are displayed depending on the selected frequency span.

0.1*Span (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the span.

Remote command:

FREQ:CENT:STEP:LINK SPAN, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 823

FREQ:CENT:STEP:LINK:FACT 10PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 824

0.1*RBW (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the resolution bandwidth.

This is the default setting.

Remote command:

FREQ:CENT:STEP:LINK RBW, see [SENSe:]FREQuency:CENTer:STEP:LINK on page 823

FREQ:CENT:STEP:LINK:FACT 10PCT, see [SENSe:]FREQuency:CENTer:STEP:LINK:FACTor on page 824

0.5*Span (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the span.

Remote command:

FREQ:CENT:STEP:LINK SPAN, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 823

FREQ:CENT:STEP:LINK:FACT 50PCT, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK:FACTor](#) on page 824

0.5*RBW (span > 0) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the resolution bandwidth.

Remote command:

FREQ:CENT:STEP:LINK RBW, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 823

FREQ:CENT:STEP:LINK:FACT 50PCT, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK:FACTor](#) on page 824

x*Span (span > 0) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as a percentage (%) of the span.

Remote command:

FREQ:CENT:STEP:LINK SPAN, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 823

FREQ:CENT:STEP:LINK:FACT 20PCT, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 823

x*RBW (span > 0) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as a percentage (%) of the resolution bandwidth. Values between 1 % and 100 % in steps of 1 % are allowed. The default setting is 10 %.

Remote command:

FREQ:CENT:STEP:LINK RBW, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 823

FREQ:CENT:STEP:LINK:FACT 20PCT, see [\[SENSe:\]FREQuency:CENTer:STEP:LINK](#) on page 823

=Center ← CF Stepsize

Sets the step size to the value of the center frequency and removes the coupling of the step size to span or resolution bandwidth.

This function is especially useful for measurements of the signal harmonics. In this case, each stroke of the arrow key selects the center frequency of another harmonic.

=Marker ← CF Stepsize

Sets the step size to the value of the current marker and removes the coupling of the step size to span or resolution bandwidth.

This function is especially useful for measurements of the signal harmonics. In this case, each stroke of the arrow key selects the center frequency of another harmonic.

Manual ← CF Step size

Opens an edit dialog box to enter a fixed step size for the center frequency.

Remote command:

[\[SENSe:\] FREQuency:CENTer:STEP](#) on page 665

Start

Opens an edit dialog box to define the start frequency. The following range of values is allowed:

$$f_{\min} \leq f_{\text{start}} \leq f_{\max} - \text{span}_{\min}$$

f_{\min} , f_{\max} and span_{\min} are specified in the data sheet.

Remote command:

[\[SENSe:\] FREQuency:START](#) on page 825

Stop

Opens an edit dialog box to define the stop frequency. The following range of values for the stop frequency is allowed:

$$f_{\min} + \text{span}_{\min} \leq f_{\text{stop}} \leq f_{\max}$$

f_{\min} , f_{\max} and span_{\min} are specified in the data sheet.

Remote command:

[\[SENSe:\] FREQuency:STOP](#) on page 825

Frequency Offset

Opens an edit dialog box to enter a frequency offset that shifts the displayed frequency range by the specified offset.

The softkey indicates the current frequency offset. The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

Remote command:

[\[SENSe:\] FREQuency:OFFSet](#) on page 824

Signal Track (span > 0)

Opens a submenu to define the signal tracking characteristics:

- search bandwidth
- threshold value
- trace

The search bandwidth and the threshold value are shown in the diagram by two vertical lines and one horizontal line, which are labeled as "TRK". After each sweep the center frequency is set to the maximum signal found within the searched bandwidth. If no maximum signal above the set threshold value is found in the searched bandwidth, the track mechanism stops.

The submenu contains the following softkeys:

- ["Track On/Off \(span > 0\)"](#) on page 348
- ["Track BW \(span > 0\)"](#) on page 348
- ["Track Threshold \(span > 0\)"](#) on page 348
- ["Select Trace \(span > 0\)"](#) on page 348

Track On/Off (span > 0) ← Signal Track (span > 0)

Switches the signal tracking on and off.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:STRack[:STATe]` on page 826

Track BW (span > 0) ← Signal Track (span > 0)

Opens an edit dialog box to set the search bandwidth for signal tracking. The frequency range is calculated as a function of the center frequency.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:STRack:BANDwidth|BWIDth` on page 826

Track Threshold (span > 0) ← Signal Track (span > 0)

Opens an edit dialog box to set the threshold value for signal tracking.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:STRack:THReshold` on page 827

Select Trace (span > 0) ← Signal Track (span > 0)

Opens an edit dialog box to select the trace on which the signal is tracked.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:STRack:TRACe` on page 827

6.2.2.2 Specifying the Frequency Axis by the Start and Stop Frequency

1. Press the **Start** softkey and enter a start frequency.
2. Press the **Stop** softkey and enter a stop frequency.

6.2.2.3 Specifying the Frequency Axis by the Center Frequency and the Span

1. Press the **FREQ** key and enter a center frequency in the "Frequency Center" edit dialog box.
2. Press the **SPAN** key and enter the bandwidth you want to analyze.



Entering a value of 0 Hz causes a change to the zero span analysis mode.

6.2.2.4 Specifying the Step Size for the Arrow Keys and the Rotary Knob

1. Press the **CF Stepsize** softkey.
The available softkeys depend on the selected frequency span (zero span or span > 0).

2. To define the step size of the center frequency:
 - a) If span > 0:
Press "0.1*Span", "0.5*Span" or "x*Span" to define the step size for the center frequency as percentage of the span (see [CF Stepsize](#)).
 - b) If span = 0:
Press "0.1*RBW", "0.5*RBW", or "x*RBW" to define the step size for the center frequency as percentage of the resolution bandwidth (see [CF Stepsize](#)).
 - c) Press the **=Center** softkey to set the step size to the value of the center frequency and remove the dependency of the step size to span or resolution bandwidth.
 - d) Press the **=Marker** softkey to set the step size to the value of the marker and remove the dependency of the step size to span or resolution bandwidth.
 - e) Press the **Manual** softkey and enter a fixed step size for the center frequency.



The step size assigned to arrow keys corresponds to the selected value.
The step size of the rotary knob is always 10 % of it.

6.2.2.5 Modifying the Frequency Axis by an Offset

- Press the **Frequency Offset** softkey and enter the offset to shift the displayed frequency span.

6.2.2.6 Tracking Signals (Span > 0)

Note that signal tracking is available for frequency spans > 0.

- Press the **Signal Track (span > 0)** softkey to open the submenu and start and stop signal tracking with specified parameters.
- Press the **Track On/Off (span > 0)** softkey to switch signal tracking on or off.
- Press the **Track BW (span > 0)** softkey and enter a bandwidth for signal tracking.
- Press the **Track Threshold (span > 0)** softkey and enter the threshold for signal tracking.
- Press the **Select Trace (span > 0)** softkey and select the trace for signal tracking.

6.2.3 Setting the Frequency Span – SPAN Key

The SPAN key is used to set the frequency span to be analyzed.

To open the Span menu

- Press the SPAN key.
The "Span" menu is displayed. For span > 0 an edit dialog box to enter the frequency is displayed. For zero span, an edit dialog box to enter the sweep time is displayed.

Menu and softkey description

- [Chapter 6.2.3.1, "Softkeys of the Span Menu"](#), on page 350

Task

- [Chapter 6.2.3.2, "Specifying the Span \(Alternatives\)"](#), on page 350

6.2.3.1 Softkeys of the Span Menu

The following chapter describes all softkeys available in the "Span" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions to configure the span described elsewhere:

- ["Last Span"](#) on page 180
- ["Full Span"](#) on page 180

Span Manual	350
Zero Span	350

Span Manual

Opens an edit dialog box to enter the frequency span. The center frequency remains the same when you change the span.

The following range is allowed:

span = 0: 0 Hz

span >0: $\text{span}_{\min} \leq f_{\text{span}} \leq f_{\max}$

f_{\max} and span_{\min} are specified in the data sheet.

Remote command:

[\[SENSe:\] FREQuency: SPAN](#) on page 825

Zero Span

Sets the span to 0 Hz (zero span). The x-axis becomes the time axis with the grid lines corresponding to 1/10 of the current sweep time ("SWT").

Remote command:

[FREQ:SPAN 0Hz](#), see [\[SENSe:\] FREQuency: SPAN](#) on page 825

6.2.3.2 Specifying the Span (Alternatives)

1. To set the span, use the [Span Manual](#), [Full Span](#), [Zero Span](#) and [Last Span](#) softkeys.
2. To define a frequency range, use the [Start](#) and [Stop](#) softkeys of the "Frequency" menu.

3. In zero span, the span corresponds to the sweep time. In that case, press the [SweepTime Manual](#) softkey and enter a sweep time.

6.2.4 Setting the Level Display and Configuring the RF Input – AMPT Key

The AMPT key is used to set the reference level, the level range and unit, the scaling and the RF attenuation.

To open the amplitude menu

- Press the AMPT key.
The "Amplitude" menu is displayed. The "Reference Level" dialog box is displayed.

Menu and softkey description

- [Chapter 6.2.4.1, "Softkeys of the Amplitude Menu"](#), on page 351

Tasks

- [Chapter 6.2.4.2, "Specifying the Amplitude"](#), on page 356

6.2.4.1 Softkeys of the Amplitude Menu

The following table shows all softkeys available in the "Amplitude" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions to configure the amplitude described elsewhere:

- ["RF Atten Manual"](#) on page 181
- ["10 dB Min"](#) on page 181
- ["dBx/MHz"](#) on page 182

Ref Level.....	352
Range.....	352
L Range Log 100 dB.....	352
L Range Log 50 dB.....	352
L Range Log 10 dB.....	352
L Range Log 5 dB.....	353
L Range Log 1 dB.....	353
L Range Log Manual.....	353
L Range Linear %.....	353
L Range Lin. Unit.....	354
Unit.....	354
Preamp On/Off.....	354
RF Atten Auto.....	354
Ref Level Offset.....	354
Ref Level Position.....	355
Grid Abs/Rel	355

Noise Correction.....	355
Input (AC/DC).....	355
Input 50 Ω /75 Ω	355

Ref Level

Opens an edit dialog box to enter the reference level in the current unit (dBm, dB μ V, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVEL` on page 845

Range

Opens a submenu to define the display range of the level axis.

- [Range Log 100 dB](#)
- [Range Log 50 dB](#)
- [Range Log 10 dB](#)
- [Range Log 5 dB](#)
- [Range Log 1 dB](#)
- [Range Log Manual](#)
- [Range Linear %](#)
- [Range Lin. Unit](#)

Range Log 100 dB ← Range

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 668

Display range:

`DISP:WIND:TRAC:Y 100DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 844

Range Log 50 dB ← Range

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

`DISP:WIND:TRAC:Y:SPAC LOG`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 668

Display range:

`DISP:WIND:TRAC:Y 50DB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]` on page 844

Range Log 10 dB ← Range

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 5 dB ← Range

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 1 dB ← Range

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log Manual ← Range

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Linear % ← Range

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Range Lin. Unit ← Range

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

`DISP:TRAC:Y:SPAC LDB`, see `DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing` on page 668

Unit

Opens the "Unit" submenu to select the unit for the level axis.

The default setting in spectrum mode is dBm.

If a transducer is switched on, the softkey is not available.

In general, the signal analyzer measures the signal voltage at the RF input. The level display is calibrated in RMS values of an unmodulated sine wave signal. In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω), conversion to other units is possible. The following units are available and directly convertible:

- dBm
- dBmV
- dBμV
- dBμA
- dBpW
- Volt
- Ampere
- Watt

Remote command:

`CALCulate<n>:UNIT:POWer` on page 844

Preamp On/Off

Switches the preamplifier on and off.

Remote command:

`INPut:GAIN:STATe` on page 669

RF Atten Auto

Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

When measuring spurious emissions, using this softkey automatically opens the "Sweep List" dialog, see "[Sweep List dialog box](#)" on page 289.

Remote command:

`INPut:ATTenuation:AUTO` on page 846

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ±200 dB in 0.1 dB steps.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#) on page 845

Ref Level Position

Opens an edit dialog box to enter the reference level position, i.e. the position of the maximum AD converter value on the level axis. The setting range is from -200 to +200 %, 0 % corresponding to the lower and 100 % to the upper limit of the diagram.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]:RPOSition](#) on page 846

Grid Abs/Rel

Switches between absolute and relative scaling of the level axis (not available with "Linear" range).

- | | |
|-------|---|
| "Abs" | Absolute scaling: The labeling of the level lines refers to the absolute value of the reference level. Absolute scaling is the default setting. |
| "Rel" | Relative scaling: The upper line of the grid is always at 0 dB. The scaling is in dB whereas the reference level is always in the set unit (for details on unit settings see the "Unit" softkey). |

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]:MODE](#) on page 844

Noise Correction

If activated, the results are corrected by the instrument's inherent noise, which increases the dynamic range.

- | | |
|--------|--|
| "ON" | A reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined.
The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen. Noise correction must be switched on again manually after the change. |
| "OFF" | No noise correction is performed. |
| "AUTO" | Noise correction is performed. After a parameter change, noise correction is restarted automatically and a new correction measurement is performed. |

Remote command:

[\[SENSe:\]POWer:NCORrection](#) on page 747

Input (AC/DC)

Toggles the RF input of the R&S ESR between AC and DC coupling.

Remote command:

[INPut:COUPling](#) on page 672

Input 50 Ω/75 Ω

Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω.

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

Remote command:

[INPut : IMPedance](#) on page 670

6.2.4.2 Specifying the Amplitude

1. Set the reference level, offset and position using the "Ref Level", "Ref Level Offset" and "Ref Level Position" softkeys (see ["Ref Level"](#) on page 352, ["Ref Level Offset"](#) on page 354 and ["Ref Level Position"](#) on page 355).
2. Select the level range and the unit for the level axis using the "Range" and "Unit" softkeys (see ["Range"](#) on page 352 and ["Unit"](#) on page 354).
3. Set the scaling using the "Ref Level Position" and/or "Grid Abs/Rel" softkeys (see ["Ref Level Position"](#) on page 355 and ["Grid Abs/Rel "](#) on page 355).
4. Set the attenuation using the "RF Atten Manual" or "RF Atten Auto" (see ["RF Atten Manual"](#) on page 181 and ["RF Atten Auto"](#) on page 354).
5. Define the RF input coupling using the "Input (AC/DC)" softkey, or a reference impedance using the "Input (50 Ω /75 Ω)" softkey (see ["Input \(AC/DC\)"](#) on page 187, ["Input 50 \$\Omega\$ /75 \$\Omega\$ "](#) on page 184).
6. Activate or deactivate the RF Preamplifier using the "Preamp" softkey (see ["Pre-amp On/Off"](#) on page 181).

6.2.5 Defining Automatic Settings – AUTO SET Key

The "Auto Set" menu allows you define automatic settings for measurements quickly.

To open the Auto Set menu

- Press the [AUTO SET] key.
The "Auto Set" menu is displayed.

Menu and softkey description

- [Chapter 6.2.5.1, "Softkeys of the Auto Set Menu"](#), on page 356

6.2.5.1 Softkeys of the Auto Set Menu

The following table shows all softkeys available in the "Auto Set" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only

available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.



Adjusting settings automatically during triggered measurements

When you select an auto adjust function a measurement is performed to determine the optimal settings. If you select an auto adjust function for a triggered measurement, you can select how the R&S ESR should behave:

- (default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger. The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level is adjusted as follows:
 - For IF Power and RF Power triggers:
Trigger Level = Reference Level - 15 dB
 - For Video trigger:
Trigger Level = 85 %

SCPI command:

[SENSe:]ADJust:CONFigure:TRIG on page 829

Auto All.....	357
Auto Freq.....	357
Auto Level.....	358
Settings.....	358
L Meas Time Manual.....	358
L Meas Time Auto.....	358
L Upper Level Hysteresis.....	358
L Lower Level Hysteresis.....	358
Sweep Type.....	358
L Sweep.....	359
L FFT.....	359
L Auto.....	359
L FFT Filter Mode.....	359
L Auto.....	359
L Narrow.....	359

Auto All

Performs all automatic settings.

- "Auto Freq" on page 357
- "Auto Level" on page 358

Remote command:

[SENSe:]ADJust:ALL on page 828

Auto Freq

Defines the center frequency and the reference level automatically by determining the highest frequency level in the frequency span. This function uses the signal counter; thus it is intended for use with sinusoidal signals.

Remote command:

[\[SENSe:\]ADJust:FREQuency](#) on page 829

Auto Level

Defines the optimal reference level for the current measurement automatically.

The measurement time for automatic leveling can be defined using the [Settings](#) softkey.

You can define a threshold that the signal must exceed before the reference level is adjusted, see "[Upper Level Hysteresis](#)" on page 358 and "[Lower Level Hysteresis](#)" on page 358.

Remote command:

[\[SENSe:\]ADJust:LEVel](#) on page 830

Settings

Opens a submenu to define settings for automatic leveling.

Possible settings are:

- "[Meas Time Manual](#)" on page 358
- "[Meas Time Auto](#)" on page 358

Meas Time Manual ← Settings

Opens an edit dialog box to enter the duration of the level measurement in seconds. The level measurement is used to determine the optimal reference level automatically (see the "Auto Level" softkey, "[Auto Level](#)" on page 358). The default value is 1 ms.

Remote command:

[\[SENSe:\]ADJust:CONFIgure:LEVel:DURation](#) on page 828

Meas Time Auto ← Settings

The level measurement is used to determine the optimal reference level automatically (see the [Auto Level](#) softkey).

Upper Level Hysteresis ← Settings

Defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

Remote command:

[\[SENSe:\]ADJust:CONFIguration:HYSTeresis:UPPer](#) on page 828

Lower Level Hysteresis ← Settings

Defines a lower threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

Remote command:

[\[SENSe:\]ADJust:CONFIguration:HYSTeresis:LOWer](#) on page 828

Sweep Type

Opens a submenu to define the sweep type.

Selecting the sweep type is not available for the I/Q analyzer.

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- "Sweep" on page 359
- "FFT" on page 359 (not available with 5-Pole filters, channel filters or RRC filters, see [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366)
- "Auto" on page 359

Sweep ← Sweep Type

Sets the [Sweep Type](#) to standard analog frequency sweep.

In the standard sweep mode, the local oscillator is set to provide the spectrum quasi analog from the start to the stop frequency.

Remote command:

SWE:TYPE SWE, see [\[SENSe:\]SWEep:TYPE](#) on page 835

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters. In this case, sweep mode is used.

Remote command:

SWE:TYPE FFT, see [\[SENSe:\]SWEep:TYPE](#) on page 835

Auto ← Sweep Type

Automatically sets the fastest available [Sweep Type](#) for the current measurement. Auto mode is set by default.

Remote command:

SWE:TYPE AUTO, see [\[SENSe:\]SWEep:TYPE](#) on page 835

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 831

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW \leq 10kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:FFT](#) on page 831

6.2.6 Setting the Bandwidths and Sweep Time – BW Key

The BW key is used to set the resolution bandwidth, video bandwidth (VBW) and sweep time (SWT). The values available for resolution bandwidth and video bandwidth depend on the selected filter type. For details on channel filters see also [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367 .

To open the bandwidth menu

- Press the BW key.
The "Bandwidth" menu is displayed.

Menu and softkey description

- [Chapter 6.2.6.1, "Softkeys of the Bandwidth Menu"](#), on page 360

Further information

- [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367
- [Table 6-6](#)

Tasks

- [Chapter 6.2.6.2, "Specifying the Bandwidth"](#), on page 366
- [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366

6.2.6.1 Softkeys of the Bandwidth Menu

The following table shows all softkeys available in the "Bandwidth" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.



For Spurious Emission Measurements, the settings are defined in the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 289.

Bandwidth settings are only available for RF measurements.

Res BW Manual.....	361
Res BW Auto.....	361
Video BW Manual.....	361
Video BW Auto.....	362
Sweeptime Manual.....	362
Sweeptime Auto.....	363
Sweep Type.....	363
L Sweep.....	363
L FFT.....	363
L Auto.....	363
L FFT Filter Mode.....	364
L Auto.....	364

L Narrow.....	364
Coupling Ratio.....	364
L RBW/VBW Sine [1/1].....	364
L RBW/VBW Pulse [.1].....	364
L RBW/VBW Noise [10].....	364
L RBW/VBW Manual.....	365
L Span/RBW Auto [100].....	365
L Span/RBW Manual.....	365
L Default Coupling.....	365
Filter Type.....	366

Res BW Manual

Opens an edit dialog box to enter a value for the resolution bandwidth. The available resolution bandwidths are specified in the data sheet.

For details on the correlation between resolution bandwidth and filter type refer to [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DNARROW key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the resolution bandwidth is indicated by a green bullet next to the "RBW" display in the channel bar.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 289).

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO` on page 830

`[SENSe:]BANDwidth|BWIDth[:RESolution]` on page 670

Res BW Auto

Couples the resolution bandwidth to the selected span (for span > 0). If you change the span, the resolution bandwidth is automatically adjusted.

This setting is recommended if you need the ideal resolution bandwidth in relation to a particular span.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO` on page 830

Video BW Manual

Opens an edit dialog box to enter the video bandwidth. The available video bandwidths are specified in the data sheet.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DOWN key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the video bandwidth is indicated by a green bullet next to the "VBW" display in the channel bar.

Note: RMS detector and VBW.

If an RMS detector is used, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves. For details on detectors see [Chapter 6.3.1.5, "Detector Overview"](#), on page 399.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 289).

Remote command:

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 832

[\[SENSe:\]BANDwidth|BWIDth:VIDeo](#) on page 831

Video BW Auto

Couples the video bandwidth to the resolution bandwidth. If you change the resolution bandwidth, the video bandwidth is automatically adjusted.

This setting is recommended if a minimum sweep time is required for a selected resolution bandwidth. Narrow video bandwidths result in longer sweep times due to the longer settling time. Wide bandwidths reduce the signal/noise ratio.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 832

Sweeptime Manual

Opens an edit dialog box to enter the sweep time.

Sweep time	
absolute max. sweep time value:	16000 s
absolute min. sweep time value:	zero span: 1 μ s
	span > 0: depends on device model (refer to data sheet)

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the R&S ESR displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 289.

Remote command:

[SWE:TIME:AUTO OFF](#), see [\[SENSe:\]SWEep:TIME:AUTO](#) on page 835

[\[SENSe:\]SWEep:TIME](#) on page 835

Sweptime Auto

Couples the sweep time to the span, video bandwidth (VBW) and resolution bandwidth (RBW) (not available for zero span). If you change the span, resolution bandwidth or video bandwidth, the sweep time is automatically adjusted.

The R&S ESR always selects the shortest sweep time that is possible without falsifying the signal. The maximum level error is < 0.1 dB, compared to using a longer sweep time.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog, see "[Sweep List dialog box](#)" on page 289.

Remote command:

[SENSe:] SWEep:TIME:AUTO on page 835

Sweep Type

Opens a submenu to define the sweep type.

Selecting the sweep type is not available for the I/Q analyzer.

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- "[Sweep](#)" on page 359
- "[FFT](#)" on page 359 (not available with 5-Pole filters, channel filters or RRC filters, see [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366)
- "[Auto](#)" on page 359

Sweep ← Sweep Type

Sets the [Sweep Type](#) to standard analog frequency sweep.

In the standard sweep mode, the local oscillator is set to provide the spectrum quasi analog from the start to the stop frequency.

Remote command:

SWE:TYPE SWE, see [SENSe:] SWEep:TYPE on page 835

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters. In this case, sweep mode is used.

Remote command:

SWE:TYPE FFT, see [SENSe:] SWEep:TYPE on page 835

Auto ← Sweep Type

Automatically sets the fastest available [Sweep Type](#) for the current measurement. Auto mode is set by default.

Remote command:

SWE:TYPE AUTO, see [SENSe:] SWEep:TYPE on page 835

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT` on page 831

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW \leq 10kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT` on page 831

Coupling Ratio

Opens a submenu to select the coupling ratios for functions coupled to the bandwidth.

RBW/VBW Sine [1/1] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = resolution bandwidth"

This is the default setting for the coupling ratio resolution bandwidth/video bandwidth.

This is the coupling ratio recommended if sinusoidal signals are to be measured.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

`BAND:VID:RAT 1`, see `[SENSe:]BANDwidth|BWIDth:VIDeo:RATio` on page 832

RBW/VBW Pulse [.1] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = 10 × resolution bandwidth or"

"video bandwidth = 10 MHz (= max. VBW)."

This coupling ratio is recommended whenever the amplitudes of pulsed signals are to be measured correctly. The IF filter is exclusively responsible for pulse shaping. No additional evaluation is performed by the video filter.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

`BAND:VID:RAT 10`, see `[SENSe:]BANDwidth|BWIDth:VIDeo:RATio` on page 832

RBW/VBW Noise [10] ← Coupling Ratio

Sets the following coupling ratio:

"video bandwidth = resolution bandwidth/10"

At this coupling ratio, noise and pulsed signals are suppressed in the video domain. For noise signals, the average value is displayed.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

BAND:VID:RAT 0.1, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 832

RBW/VBW Manual ← Coupling Ratio

Activates the manual input of the coupling ratio.

The resolution bandwidth/video bandwidth ratio can be set in the range 0.001 to 1000.

This setting takes effect if you define the video bandwidth automatically ([Video BW Auto](#)).

Remote command:

BAND:VID:RAT 10, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 832

Span/RBW Auto [100] ← Coupling Ratio

Sets the following coupling ratio:

"resolution bandwidth = span/100"

This coupling ratio is the default setting of the R&S ESR.

This setting takes effect if you define the resolution bandwidth automatically ([Res BW Auto](#)).

Remote command:

BAND:VID:RAT 0.001, see [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) on page 832

Span/RBW Manual ← Coupling Ratio

Activates the manual input of the coupling ratio.

This setting takes effect if you define the resolution bandwidth automatically ([Res BW Auto](#)).

The span/resolution bandwidth ratio can be set in the range 1 to 10000.

Remote command:

BAND:RAT 0.1, see [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:RATio](#) on page 831

Default Coupling ← Coupling Ratio

Sets all coupled functions to the default state ("AUTO").

In addition, the ratio "RBW/VBW" is set to "SINE [1/1]" and the ratio "SPAN/RBW" to 100.

Remote command:

[\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:AUTO](#) on page 830

[\[SENSe:\]BANDwidth|BWIDth:VIDeo:AUTO](#) on page 832

[\[SENSe:\]SWEep:TIME:AUTO](#) on page 835

Filter Type

Opens a submenu to select the filter type.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 289).

The submenu contains the following softkeys:

- Normal (3 dB)
- CISPR (6 dB)
- MIL Std (6 dB)
Note that the 6 dB bandwidths are available only with option R&S FSV-K54.
- Channel
- RRC
- 5-Pole (not available for sweep type "FFT")

For detailed information on filters see [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366 and [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367.

Remote command:

`[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE` on page 671

6.2.6.2 Specifying the Bandwidth

1. Set the resolution bandwidth using the [Res BW Manual](#) or [Res BW Auto](#) softkey.
2. Set the video bandwidth using the [Video BW Manual](#) or [Video BW Auto](#) softkey.
3. Set the sweep time using the [Sweeptime Manual](#) or [Sweeptime Auto](#) softkey.
4. Press the [Filter Type](#) softkey and select the appropriate filters.

6.2.6.3 Selecting the Appropriate Filter Type

All resolution bandwidths are realized with digital filters.

The video filters are responsible for smoothing the displayed trace. Using video bandwidths that are small compared to the resolution bandwidth, only the signal average is displayed and noise peaks and pulsed signals are repressed. If pulsed signals are to be measured, it is advisable to use a video bandwidth that is large compared to the resolution bandwidth ($VBW * 10 \times RBW$) for the amplitudes of pulses to be measured correctly.

The following filter types are available:

- Normal (3dB) (Gaussian) filters
The Gaussian filters are set by default. The available bandwidths are specified in the data sheet.
- CISPR (6 dB) filters
For more information see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166.
- MIL Std (6 dB) filters
For more information see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166.

- Channel filters
For details see [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367 .
Channel filters do not support FFT mode.
- RRC filters
For details see [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367 .
RRC filters do not support FFT mode.
- 5-Pole filters
The available bandwidths are specified in the data sheet.
5-Pole filters do not support FFT mode.

6.2.6.4 List of Available RRC and Channel Filters

For power measurement a number of especially steep-edged channel filters are available (see the following table). The indicated filter bandwidth is the 3 dB bandwidth. For RRC filters, the fixed roll-off factor (α) is also indicated.

Table 6-6: Filter types

Filter Bandwidth	Filter Type	Application
100 Hz	CFILter	
200 Hz	CFILter	
300 Hz	CFILter	
500 Hz	CFILter	
1 kHz	CFILter	
1.5 kHz	CFILter	
2 kHz	CFILter	
2.4 kHz	CFILter	SSB
2.7 kHz	CFILter	
3 kHz	CFILter	
3.4 kHz	CFILter	
4 kHz	CFILter	DAB, Satellite
4.5 kHz	CFILter	
5 kHz	CFILter	
6 kHz	CFILter	
6 kHz, $\alpha=0.2$	RRC	APCO
7.5 kHz	CFILter	
8.5 kHz	CFILter	ETS300 113 (12.5 kHz channels)
9 kHz	CFILter	AM Radio

Filter Bandwidth	Filter Type	Application
10 kHz	CFILter	
12.5 kHz	CFILter	CDMAone
14 kHz	CFILter	ETS300 113 (20 kHz channels)
15 kHz	CFILter	
16 kHz	CFILter	ETS300 113 (25 kHz channels)
18 kHz, a=0.35	RRC	TETRA
20 kHz	CFILter	
21 kHz	CFILter	PDC
24.3 kHz, a=0.35	RRC	IS 136
25 kHz	CFILter	APCO 25-P2
30 kHz	CFILter	CDPD, CDMAone
50 kHz	CFILter	
100 kHz	CFILter	
150 kHz	CFILter	FM Radio
192 kHz	CFILter	PHS
200 kHz	CFILter	GSM
300 kHz	CFILter	
500 kHz	CFILter	J.83 (8-VSB DVB, USA); RF ID 14333
1 MHz	CFILter	CDMAone
1.228 MHz	CFILter	CDMAone
1.28 MHz, a=0.22	RRC	TD-SCDMA
1.5 MHz	CFILter	DAB
2 MHz	CFILter	
3 MHz	CFILter	
3.75 MHz	CFILter	
3.84 MHz, a=0.22	RRC	W-CDMA 3GPP
4.096 MHz, a=0.22	RRC	W-CDMA NTT DOCoMo
5 MHz	CFILter	
20 MHz	CFILter	

Filter Bandwidth	Filter Type	Application
28 MHz	CFILter	
40 MHz	CFILter	

6.2.7 Configuring the Sweep Mode – SWEEP Key

The SWEEP key is used to configure the sweep mode. Continuous sweep or single sweep is possible. The sweep time and the number of measured values are set.

To open the Sweep menu

- Press the SWEEP key.
The "Sweep" menu is displayed.

Menu and softkey description

- [Chapter 6.2.7.1, "Softkeys of the Sweep Menu"](#), on page 369

Task

- [Chapter 6.2.7.2, "Specifying the Sweep Settings"](#), on page 374

6.2.7.1 Softkeys of the Sweep Menu

The following table shows all softkeys available in the "Sweep" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Continuous Sweep.....	370
Single Sweep.....	370
Continue Single Sweep.....	370
Sweeptime Manual.....	370
Sweeptime Auto.....	371
Sweep Type.....	371
L Sweep.....	371
L FFT.....	371
L Auto.....	371
L FFT Filter Mode.....	372
L Auto.....	372
L Narrow.....	372
Sweep Count.....	372
Sweep Points.....	372
Select Frame.....	373
Continue Frame (On Off).....	373
Frame Count.....	373
Spectrogram Clear.....	374

Continuous Sweep

Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, "[Sweep Count](#)" on page 372).

Remote command:

[INITiate<n>:CONTInuous](#) on page 641

Single Sweep

Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the [Sweep Count](#) softkey. The measurement stops after the defined number of sweeps has been performed.

Remote command:

[INITiate<n>:CONTInuous](#) on page 641

Continue Single Sweep

Repeats the number of sweeps set by using the [Sweep Count](#) softkey, without deleting the trace of the last measurement.

This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search.

For details on trace configuration refer to [Chapter 6.3.1, "Trace Configuration"](#), on page 387.

Remote command:

[INITiate<n>:CONMeas](#) on page 833

Sweeptime Manual

Opens an edit dialog box to enter the sweep time.

Sweep time	
absolute max. sweep time value:	16000 s
absolute min. sweep time value:	zero span: 1 μ s
	span > 0: depends on device model (refer to data sheet)

Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

Numeric input is always rounded to the nearest possible sweep time. For rotary knob or UPARROW/DNARROW key inputs, the sweep time is adjusted in steps either downwards or upwards.

The manual input mode of the sweep time is indicated by a green bullet next to the "SWT" display in the channel bar. If the selected sweep time is too short for the selected bandwidth and span, level measurement errors will occur due to a too short settling time for the resolution or video filters. In this case, the R&S ESR displays the error message "UNCAL" and marks the indicated sweep time with a red bullet.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog, see "[Sweep List dialog box](#)" on page 289.

Remote command:

SWE:TIME:AUTO OFF, see [SENSe:]SWEep:TIME:AUTO on page 835

[SENSe:]SWEep:TIME on page 835

Sweeptime Auto

Couples the sweep time to the span, video bandwidth (VBW) and resolution bandwidth (RBW) (not available for zero span). If you change the span, resolution bandwidth or video bandwidth, the sweep time is automatically adjusted.

The R&S ESR always selects the shortest sweep time that is possible without falsifying the signal. The maximum level error is < 0.1 dB, compared to using a longer sweep time.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog, see "Sweep List dialog box" on page 289.

Remote command:

[SENSe:]SWEep:TIME:AUTO on page 835

Sweep Type

Opens a submenu to define the sweep type.

Selecting the sweep type is not available for the I/Q analyzer.

In frequency sweep mode, the analyzer provides several possible methods of sweeping:

- "Sweep" on page 359
- "FFT" on page 359 (not available with 5-Pole filters, channel filters or RRC filters, see Chapter 6.2.6.3, "Selecting the Appropriate Filter Type", on page 366)
- "Auto" on page 359

Sweep ← Sweep Type

Sets the [Sweep Type](#) to standard analog frequency sweep.

In the standard sweep mode, the local oscillator is set to provide the spectrum quasi analog from the start to the stop frequency.

Remote command:

SWE:TYPE SWE, see [SENSe:]SWEep:TYPE on page 835

FFT ← Sweep Type

Sets the [Sweep Type](#) to FFT mode.

The FFT sweep mode samples on a defined frequency value and transforms it to the spectrum by fast Fourier transformation (FFT).

FFT is not available when using 5-Pole filters, Channel filters or RRC filters. In this case, sweep mode is used.

Remote command:

SWE:TYPE FFT, see [SENSe:]SWEep:TYPE on page 835

Auto ← Sweep Type

Automatically sets the fastest available [Sweep Type](#) for the current measurement. Auto mode is set by default.

Remote command:

SWE:TYPE AUTO, see [SENSe:]SWEep:TYPE on page 835

FFT Filter Mode ← Sweep Type

Defines the filter mode to be used for FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

Auto ← FFT Filter Mode ← Sweep Type

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

Remote command:

[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT on page 831

Narrow ← FFT Filter Mode ← Sweep Type

For an RBW \leq 10kHz, the FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

Remote command:

[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT on page 831

Sweep Count

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count = 1, no averaging, maxhold or minhold operations are performed.

For details on trace configuration see [Chapter 6.3.1, "Trace Configuration"](#), on page 387.

Example:

- Press the [TRACE] key > [Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6](#) softkey > ["Max Hold"](#) on page 171 softkey.
- Press the [SWEEP] key > "Sweep Count" softkey.
- In the "Average Sweep Count" dialog box, enter 10.
- Press the ["Single Sweep"](#) on page 370 softkey:
R&S ESR performs the "Max Hold" function over 10 sweeps.

Remote command:

[SENSe:]SWEep:COUNT on page 834

Sweep Points

Opens an edit dialog box to enter the number of measured values to be collected during one sweep.

- Entry via rotary knob:
 - In the range from 101 to 1001, the sweep points are increased or decreased in steps of 100 points.

- In the range from 1001 to 32001, the sweep points are increased or decreased in steps of 1000 points.
- Entry via keypad:
All values in the defined range can be set.

The default value is 691 sweep points.

When measuring spurious emissions, using this softkey automatically opens the "Sweep List" dialog, see "[Sweep List dialog box](#)" on page 289.

Remote command:

[\[SENSe:\] SWEep: POINts](#) on page 834

Select Frame

For spectrogram measurements only.

Opens a dialog box to select a specific frame and loads the corresponding trace from the memory.

Note that activating a marker or changing the position of the active marker automatically selects the frame that belongs to that marker.

This softkey is available in single sweep mode or if the sweep is stopped.

Remote command:

[CALCulate<n>:SGRam:FRAMe:SElect](#) on page 858

Continue Frame (On Off)

For spectrogram measurements only.

Determines whether the results of the last measurement are deleted before starting a new measurement.

- **On**
Repeats the single sweep measurement without deleting the spectrogram results of the last measurement. One of the following trace modes is to be used: Max Hold, Min Hold, Average.
- **Off**
Deletes the last measurement results before performing a single sweep measurement.

This softkey is available in single sweep mode.

Remote command:

[CALCulate<n>:SGRam:CONT](#) on page 857

Frame Count

For spectrogram measurements only.

Opens a dialog box to set the number of frames to be captured in a single sweep.

Therefore, the frame count defines the number of traces the R&S ESR plots in the Spectrogram result display in a single sweep. The maximum number of possible frames depends on the history depth (see [CALCulate<n>:SGRam:HDEPth](#) on page 651).

The sweep count, on the other hand, determines how many sweeps are combined in one frame in the Spectrogram, i.e. how many sweeps the R&S ESR performs to plot one trace in the Spectrogram result display (see "[Sweep Count](#)" on page 372).

This softkey is available in single sweep mode.

Remote command:

[CALCulate<n>:SGRam:FRAMe:COUNT](#) on page 857

Spectrogram Clear

For spectrogram measurements only.

Resets the Spectrogram result display and clears its history buffer.

Remote command:

[CALCulate<n>:SGRam:CLEar\[:IMMEDIATE\]](#) on page 649

6.2.7.2 Specifying the Sweep Settings

1. Press the [Sweep Count](#) softkey and enter the sweep count.
2. Press the [Sweeptime Manual](#) or [Sweeptime Auto](#) softkey to set the sweep time.
3. Press the [Sweep Type](#) softkey to select the sweep type.
4. Press the [Sweep Points](#) softkey and enter the number of sweep points.
5. Press the [Continuous Sweep](#) or [Single Sweep](#) softkey to select the sweep mode.
6. Press the [Continue Single Sweep](#) softkey to repeat the single sweep.

6.2.8 Triggering the Sweep – TRIG Key

The [TRIG] key is used to select trigger mode, trigger threshold, trigger delay, trigger polarity and for gated sweep the gate configuration.

To open the Trigger menu

- Press the [TRIG] key.
The "Trigger" menu is displayed.

Menu and softkey description

- [Chapter 6.2.8.1, "Softkeys of the Trigger Menu"](#), on page 374

Tasks

- [Chapter 6.2.8.2, "Specifying the Trigger Settings"](#), on page 381
- [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381

6.2.8.1 Softkeys of the Trigger Menu

The following table shows all softkeys available in the "Trigger" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available

with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Trg/Gate Source.....	375
L Free Run.....	375
L External.....	375
L Video.....	376
L RF Power.....	376
L IF Power/BB Power.....	376
L Time.....	377
Trg/Gate Level.....	377
Trg/Gate Polarity.....	377
Trigger Offset.....	378
Repetition Interval.....	378
Trigger Hysteresis.....	378
Trigger Holdoff.....	378
Gated Trigger.....	378
Gate Settings.....	379
L Gate Mode (Lvl/Edge).....	379
L Gate Delay.....	379
L Gate Length (Gate Mode Edge).....	380
L Trg/Gate Source.....	380
L Trg/Gate Level.....	380
L Trg/Gate Polarity.....	380
L Sweep Time.....	380
L Res BW Manual.....	380

Trg/Gate Source

Opens the "Trigger/Gate Source" dialog box to select the trigger/gate mode.

As gate modes, all modes except "Power Sensor" are available. For details see also [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

The default setting is "Free Run". If a trigger mode other than "Free Run" has been set, the enhancement label "TRG" is displayed and the trigger source is indicated.

Note: When triggering or gating is activated, the squelch function is automatically disabled (see ["Squelch"](#) on page 421).

Remote command:

TRIGger<n> [: SEquence] : SOURce on page 839

[SENSE :] SWEEP : EGATE : SOURce on page 842

Free Run ← Trg/Gate Source

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

Remote command:

TRIG : SOUR IMM, see TRIGger<n> [: SEquence] : SOURce on page 839

External ← Trg/Gate Source

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

Remote command:

TRIG:SOUR EXT, see [TRIGger<n>\[:SEQuence\]:SOURce](#) on page 839

SWE:EGAT:SOUR EXT for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 842

Video ← Trg/Gate Source

Defines triggering by the displayed voltage.

A horizontal trigger line is shown in the diagram. It is used to set the trigger threshold from 0 % to 100 % of the diagram height.

Video mode is only available in the time domain.

Remote command:

TRIG:SOUR VID, see [TRIGger<n>\[:SEQuence\]:SOURce](#) on page 839

SWE:EGAT:SOUR VID for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 842

RF Power ← Trg/Gate Source

Defines triggering of the measurement via signals which are outside the measurement channel.

In RF Power trigger mode the instrument uses a level detector at the first intermediate frequency. The detector threshold can be selected in a range between - 50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input lies within the following range:

$(-24\text{dBm} + \text{RF Att}) \leq \text{Triggerlevel} \leq (+5\text{dBm} + \text{RF Att})$, max. 30 dBm, for Preamp = OFF

$(-40\text{dBm} + \text{RF Att}) \leq \text{Triggerlevel} \leq (-11\text{dBm} + \text{RF Att})$, max. 30 dBm, for Preamp = ON with

$500 \text{ MHz} \leq \text{InputSignal} \leq 7 \text{ GHz}$

Note: If input values outside of this range occur (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input values is displayed in the status bar.

A [Trigger Offset](#), [Trg/Gate Polarity](#) and [Trigger Holdoff](#) can be defined for the RF trigger to improve the trigger stability, but no hysteresis.

Remote command:

TRIG:SOUR RFP, see [TRIGger<n>\[:SEQuence\]:SOURce](#) on page 839

SWE:EGAT:SOUR RFP for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 842

IF Power/BB Power ← Trg/Gate Source

Defines triggering of the measurement using the second intermediate frequency.

For this purpose, the R&S ESR uses a level detector at the second intermediate frequency.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths see the data sheet.

The bandwidth at the intermediate frequency depends on the RBW and sweep type:

Sweep mode:

- RBW > 500 kHz: 40 MHz, nominal
- RBW ≤ 500 kHz: 6 MHz, nominal

FFT mode:

- RBW > 20 kHz: 40 MHz, nominal
- RBW ≤ 20 kHz: 6 MHz, nominal

Note: Be aware that in auto sweep type mode, due to a possible change in sweep types, the bandwidth may vary considerably for the same RBW setting.

The R&S ESR is triggered as soon as the trigger level is exceeded around the selected frequency (= start frequency in the frequency sweep).

Thus, the measurement of spurious emissions, e.g. for pulsed carriers, is possible even if the carrier lies outside the selected frequency span.

Remote command:

TRIG:SOUR IFP, see [TRIGger<n>\[:SEQuence\]:SOURce](#) on page 839

SWE:EGAT:SOUR IFP for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 842

Time ← Trg/Gate Source

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms.

Remote command:

TRIG:SOUR TIMETRIGger<n>[:SEQuence]:SOURce on page 839

Trg/Gate Level

Opens an edit dialog box to enter the trigger/gate level.

For details see also [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

In the trigger modes "Time" and "Power Sensor", this softkey is not available.

Remote command:

TRIGger<n>[:SEQuence]:LEVel:IFPower on page 838

TRIGger<n>[:SEQuence]:LEVel:VIDeo on page 838

Trg/Gate Polarity

Sets the polarity of the trigger/gate source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all trigger modes with the exception of the "Free Run", "Power Sensor" and "Time" mode.

For details also see [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

Remote command:

TRIGger<n>[:SEQuence]:SLOPe on page 839

[SENSe:]SWEep:EGATe:POLarity on page 842

Trigger Offset

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	<p>Sweep starts earlier (pre-trigger)</p> <p>Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off</p> <p>Maximum allowed range limited by the sweep time: $\text{pretrigger}_{\text{max}} = \text{sweep time}$</p>

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

Tip: To determine the trigger point in the sample (for "External" or "IF Power" trigger mode), use the `TRACe<n>:IQ:TPISample?` command.

In the "Time" trigger mode, this softkey is not available.

Remote command:

`TRIGger<n>[:SEquence]:HOLDoff[:TIME]` on page 836

Repetition Interval

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms. This softkey is only available if the trigger source "Time" is selected (see "Time" on page 377).

Remote command:

`TRIGger<n>[:SEquence]:TIME:RINterval` on page 840

Trigger Hysteresis

Defines the value for the trigger hysteresis for "IF power" or "RF Power" trigger sources. The hysteresis in dB is the value the input signal must stay below the power trigger level in order to allow a trigger to start the measurement. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:

`TRIGger<n>[:SEquence]:IFPower:HYSteresis` on page 837

Trigger Holdoff

Defines the value for the trigger holdoff. The holdoff value in s is the time which must pass before triggering, in case another trigger event happens.

This softkey is only available if "IFPower", "RF Power" or "BBPower" is the selected trigger source.

Remote command:

`TRIGger<n>[:SEquence]:IFPower:HOLDoff` on page 837

Gated Trigger

Switches the sweep mode with gate on or off.

This softkey requires the following "Trigger Mode" (see ["Trg/Gate Source"](#) on page 375):

span > 0	External or IF Power/BB Power/IF Power
span = 0	External or IF Power/BB Power/IF Power or Video

If a different mode is active, the [IF Power/BB Power](#) trigger mode is automatically selected.

Note: When triggering or gating is activated, the squelch function is automatically disabled (see ["Squelch"](#) on page 421).

If the gate is switched on, a gate signal applied to the rear panel connector "EXT TRIGGER/GATE" or the internal IF power detector controls the sweep of the analyzer.

In the trigger mode [Time](#), this softkey is not available.

For details also see [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

Remote command:

[\[SENSe:\] SWEep:EGATe](#) on page 841

[\[SENSe:\] SWEep:EGATe:SOURce](#) on page 842

Gate Settings

Opens a submenu to make all the settings required for gated sweep operation.

In the "Time" trigger mode, this softkey is not available.

For details also see [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

Gate Mode (Lvl/Edge) ← Gate Settings

Sets the gate mode. As settings level-triggered or edge-triggered gate mode can be selected.

For details also see [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

"Edge" Edge-triggered gate mode

"Lvl" Level-triggered gate mode

This mode is not supported when using R&S Power Sensors as power triggers ("Trg/Gate Source" = *Power Sensor* or *External*).

Remote command:

[\[SENSe:\] SWEep:EGATe:TYPE](#) on page 843

Gate Delay ← Gate Settings

Opens an edit dialog box to enter the gate delay time between the gate signal and the continuation of the sweep. The delay position on the time axis in relation to the sweep is indicated by a line labeled "GD".

This is useful for e.g. taking into account a delay between the gate signal and the stabilization of an RF carrier.

As a common input signal is used for both trigger and gate when selecting the "External" or "IF Power" trigger mode, changes to the gate delay will affect the trigger delay (trigger offset) as well.

For details also see [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

Remote command:

[SENSe:] SWEep:EGATe:HOLDoFF on page 841

Gate Length (Gate Mode Edge) ← Gate Settings

Opens an edit dialog box to enter the gate length. The gate length in relation to the sweep is indicated by a line labeled "GL".

The length of the gate signal defines if the sweep is to be interrupted. Only in the edge-triggered mode the gate length can be set, while in the level-triggered the gate length depends on the length of the gate signal.

For details also see [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

Remote command:

[SENSe:] SWEep:EGATe:LENGth on page 842

Trg/Gate Source ← Gate Settings

See ["Trg/Gate Source"](#) on page 375.

Trg/Gate Level ← Gate Settings

See ["Trg/Gate Level"](#) on page 377.

Trg/Gate Polarity ← Gate Settings

See ["Trg/Gate Polarity"](#) on page 377.

Sweep Time ← Gate Settings

Opens an edit dialog box to change the sweep time in order to obtain a higher resolution for positioning gate delay and gate length. When leaving the "Gate Settings" sub-menu, the original sweep time is retrieved.

For details also see [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

Res BW Manual ← Gate Settings

Opens an edit dialog box to enter a value for the resolution bandwidth. The available resolution bandwidths are specified in the data sheet.

For details on the correlation between resolution bandwidth and filter type refer to [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366.

Numeric input is always rounded to the nearest possible bandwidth. For rotary knob or UP/DNARROW key inputs, the bandwidth is adjusted in steps either upwards or downwards.

The manual input mode of the resolution bandwidth is indicated by a green bullet next to the "RBW" display in the channel bar.

When measuring Spurious Emissions, using this softkey automatically opens the "Sweep List" dialog (see ["Sweep List dialog box"](#) on page 289).

Remote command:

[SENSe:] BANDwidth|BWIDth[:RESolution]:AUTO on page 830

[SENSe:] BANDwidth|BWIDth[:RESolution] on page 670

6.2.8.2 Specifying the Trigger Settings

1. Press the "Trg/Gate Source" softkey to select the trigger mode (for details see "Trg/Gate Source" on page 375).
2. Press the [Trg/Gate Level](#) softkey to set the trigger level.
3. Press the [Trigger Offset](#) softkey to set the trigger offset. In addition, a [Trigger Hysteresis](#) and [Trigger Holdoff](#) can be defined via the corresponding softkeys.

For details on gated sweep operation, see [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

6.2.8.3 Using Gated Sweep Operation

By using a gate in sweep mode and stopping the measurement while the gate signal is inactive, the spectrum for pulsed RF carriers can be displayed without the superposition of frequency components generated during switching. Similarly, the spectrum can also be examined for an inactive carrier. The sweep can be controlled by an external gate or by the internal power trigger.

Gated sweep operation is also possible for span = 0. This enables – e.g. in burst signals – level variations of individual slots to be displayed versus time.

1. Press the [Gate Settings](#) softkey to define the settings of the gate mode.
At the center frequency a transition to zero span is made and the time parameters gate delay and gate length are displayed as vertical lines to adjust them easily.
When quitting the [Gate Settings](#) submenu, the original span is retrieved so the desired measurement can be performed with the accurately set gate.
2. Setting the parameters gate delay and gate length highly accurate, press the [Sweep Time](#) softkey to alter the x-axis in a way that the signal range concerned (e.g. one full burst) is displayed.
3. Press the [Gate Delay](#) softkey to set the sampling time in a way that the desired portion of the signal is shown.
4. Press the [Gate Mode \(Lvl/Edge\)](#) softkey to set the gate mode.
5. If the "Edge" gate mode has been selected, press the [Gate Length \(Gate Mode Edge\)](#) softkey to set the sampling duration in a way that the desired portion of the signal is shown.
6. Press the [Trg/Gate Polarity](#) softkey to set the polarity of the trigger source.
7. Press the [Gated Trigger](#) softkey to activate the gated sweep mode.
To indicate that a gate is used for the sweep, the enhancement label "GAT" is displayed on the screen. This label appears to the right of the window for which the gate is configured.

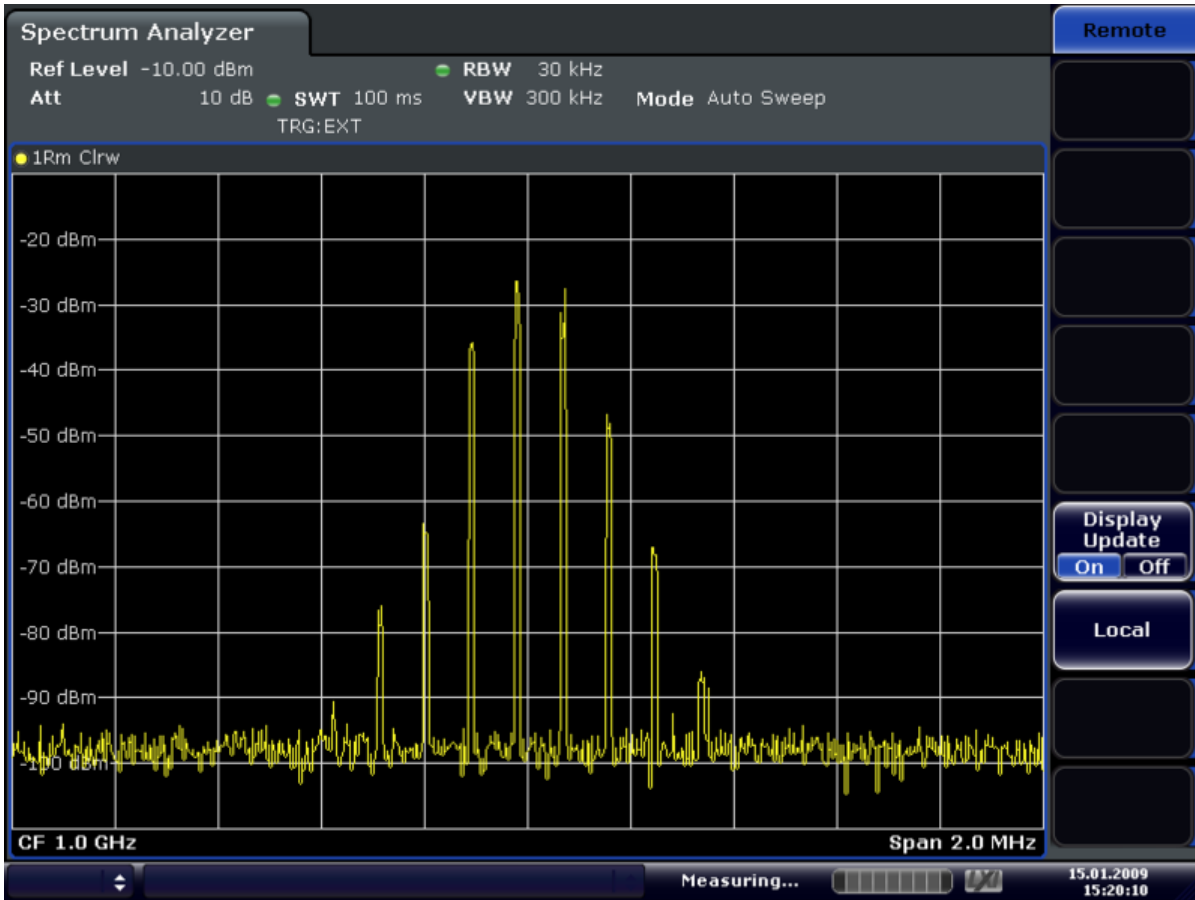


Figure 6-14: TDMA signal with GATE OFF

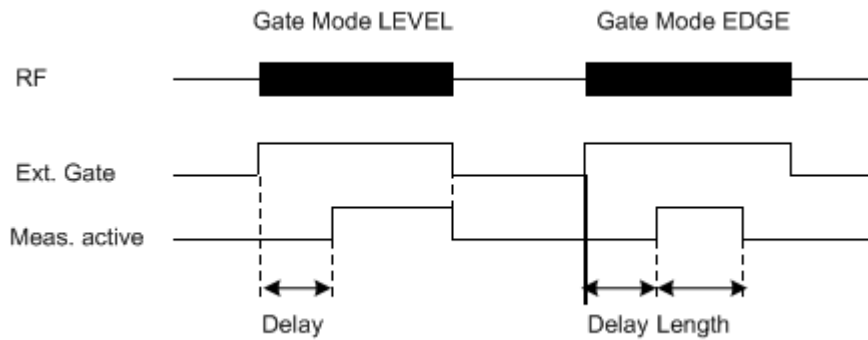


Figure 6-15: Timing diagram for GATE, GATE DELAY and GATE LENGTH

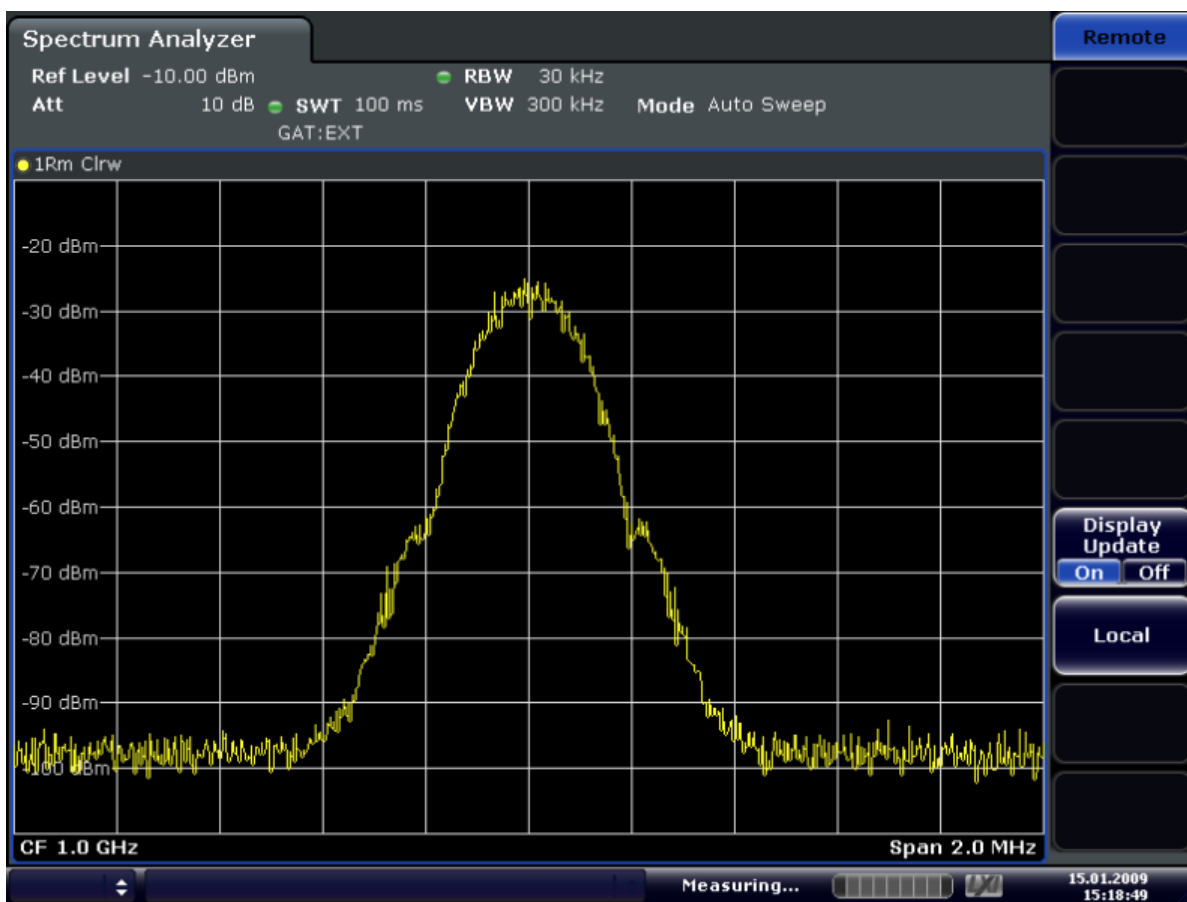


Figure 6-16: TDMA signal with GATE ON

6.2.9 Input/Output Configuration – INPUT/OUTPUT Key

The [INPUT/OUTPUT] key is used to configure input and output sources for measurement functions.

6.2.9.1 Softkeys of the Input/Output Menu

The following table shows all softkeys available in the "Input/Output" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions in the "Input / Output" menu described elsewhere:

- "User Port" on page 187

Input (AC/DC).....	384
Preselector (On Off).....	384
Noise Source.....	384

Video Output.....	384
Trigger Out.....	384
Probe Config.....	384

Input (AC/DC)

Toggles the RF input of the R&S ESR between AC and DC coupling.

Remote command:

[INPut:COUPling](#) on page 672

Preselector (On Off)

Turns the preselector on and off.

Remote command:

[INPut:PRESelection:STATe](#) on page 931

Noise Source

Switches the supply voltage for an external noise source on or off.

For details on connectors refer to "[NOISE SOURCE CONTROL](#)" on page 33.

Remote command:

[DIAGnostic<n>:SERVice:NSOource](#) on page 931

Video Output

Selects the type of output for the optional IF / Video output.

When you turn on the output, you can select to output either the intermediate frequency or the video signal.

Note: Video output does not return valid values in IQ or FFT mode.

Remote command:

[OUTP:IF VID](#) , see [OUTPut:IF\[:SOURce\]](#) on page 932

Trigger Out

Sets the Trigger Out port to low or high. Thus, you can trigger an additional device via the external trigger port, for example.

Remote command:

[OUTPut:TRIGger](#) on page 932

Probe Config

Opens an edit dialog box to activate and configure a connected probe which is to provide an input signal. It is only available if a probe is connected to the instrument's [RF Input] and USB connectors.

For details see [Chapter 6.2.9.2, "Using Active Probes for Input"](#), on page 385.

Remote command:

[PROBe\[:STATe\]](#) on page 822

[PROBe:SETup:MODE](#) on page 821

6.2.9.2 Using Active Probes for Input

When the input from the device under test requires high impedance, an active probe can be connected between the device and the R&S ESR.

The R&S ESR supports active probes from the R&S RT-ZS series when using the new probe adapter RT-ZA9.

When the probe has been connected to and recognized by the R&S ESR, a pre-defined "Generic Probe" transducer factor with 20 dB is automatically activated and the unit of the spectrum analyzer is changed to dB μ V. (The same applies after presetting the instrument.) Then the system is ready to analyze circuit points that cannot be loaded with the 50 Ω of the analyzer input, but require a higher impedance.

Optionally, the probe can be deactivated while remaining connected to the R&S ESR, for instance to analyze the digital input from the probe without considering the transducer factor.

All RT probes (except for ZS10E) have a micro button. The action for the micro button can be defined. Currently, either a single sweep or no action can be performed when the button is pressed. By default, when you press the probe's micro button, the R&S ESR is set to single sweep mode and a single sweep is performed. This allows you to start a measurement whilst applying the probe to a certain pin on the board under test.

When using RT probes, consider the following:

- Active probes require operating power from the instrument and have a proprietary interface to the instrument.
- The probe is automatically recognized by the instrument, no adjustment is required.
- Connections should be as short as possible to keep the usable bandwidth high.
- Observe the operating voltage range.

For more information on RT probes, refer to the probe's documentation.

Connecting Active Probes


In order to use active probes with an R&S ESR, an RT-ZA9 adapter is required. The RT-ZA9 provides an interface between the probe's BNC socket and the analyzer's N-socket and provides the necessary supply voltages for the probe via the USB connection. Using this adapter, the following probes are currently supported:

- R&S RT-ZS10
- RT-ZS10E
- RT-ZS20
- RT-ZS30

To connect an active probe, proceed as follows:

1. Connect the adapter to the RF Input connector on the R&S ESR.
2. Connect the adapter's USB cable to a USB connector on the R&S ESR.

3. Connect the probe to the adapter.

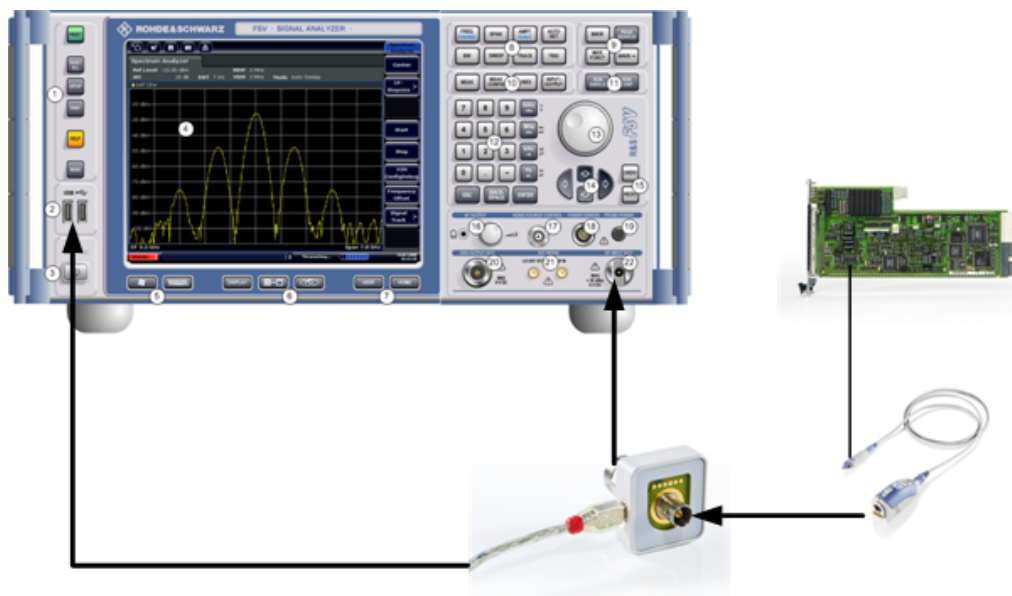

Once the probe and adapter have been connected to the R&S ESR correctly and the analyzer has recognized the probe, the "Generic Probe" transducer is activated and you can start a measurement.



To determine whether the probe has been connected properly and recognized by the R&S ESR, use the remote control command `PROB:SET:STAT?` (see [PROB:SETup:STATe?](#) on page 821).

To perform a measurement with the probe

- ▶ Place the probe on the required position on the test equipment, then press the micro button on the probe to perform a single sweep measurement.

Probe Configuration

Principally, the probe is automatically recognized by the instrument and no further adjustment is required. However, you can switch off the probe while leaving it connected, and you can configure which action is to be performed when the probe's micro button is pressed.

To display the "Probe Configuration" dialog box, select the [INPUT/OUTPUT] key and then the "Probe Config" softkey.

The following settings are available:

State	387
Name	387
Serial Number	387
Part number	387
Micro Button Action	387

State

Activates a connected probe. Use this command to switch off the probe and measure the digital input without considering the transducer factor of the probe.

Remote command:

[PROBe\[:STATe\]](#) on page 822

Name

Indicates the name of the connected probe.

Remote command:

[PROBe:SETup:NAME?](#) on page 821

Serial Number

Indicates the serial number of the connected probe.

Remote command:

[PROBe:ID:SRNumber?](#) on page 821

Part number

Indicates the material part number of the connected probe.

Remote command:

[PROBe:ID:PARTnumber?](#) on page 821

Micro Button Action

Defines which action is taken when the probe's micro button is pressed.

"RunSingle" A single sweep is performed.

"No Action" No action is taken.

Remote command:

[PROBe:SETup:MODE](#) on page 821

6.3 Analysis

General methods and basic settings to display and analyze measurements. If you are performing a specific measurement task or using an operating mode other than Spectrum mode, be sure to check the specific measurement or mode description for settings and functions that may deviate from these general ones.

- [Trace Configuration](#).....387
- [Spectrogram](#).....402
- [Markers](#).....406
- [Lines](#).....429

6.3.1 Trace Configuration

The TRACE key is used to configure the data acquisition for measurement and the analysis of the measurement data.

The R&S ESR is capable of displaying up to six different traces at a time in a diagram. A trace consists of a maximum of 691 displayed measurement points on the horizontal axis (frequency or time). If more measured values than measurement points are available, several measured values are combined in one displayed measurement point.

The trace functions include the following:

- Display mode of the trace
For details on trace modes see [Chapter 5.2.3, "Trace Modes"](#), on page 171.
- Evaluation of the trace as a whole
For details on averaging see [Chapter 6.3.1.4, "Description of the Averaging Method"](#), on page 397.
- Evaluation of individual measurement points of a trace. For details on detectors see [Chapter 6.3.1.5, "Detector Overview"](#), on page 399.

To open the Trace menu

- Press the TRACE key.
The "Trace" menu is displayed. The "Trace Configuration" dialog box is displayed.

Menu and softkey description

- [Chapter 6.3.1.1, "Softkeys of the Trace Menu"](#), on page 388

Further information

- [Chapter 5.2.3, "Trace Modes"](#), on page 171
- [Chapter 6.3.1.5, "Detector Overview"](#), on page 399
- [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399

Tasks

- [Chapter 6.3.1.2, "Configuring Traces"](#), on page 395
- [Chapter 6.3.1.3, "Specifying the Trace Settings"](#), on page 397

6.3.1.1 Softkeys of the Trace Menu

The following table shows all softkeys available in the "Trace" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions to configure traces described elsewhere:

- ["More Traces"](#) on page 199
- ["Copy Trace"](#) on page 199
- ["Trace Wizard"](#) on page 199
- ["ASCII Trace Export"](#) on page 199
- ["Decim Sep"](#) on page 200

Functions to configure traces exclusive in Spectrum mode

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6	389
L Clear Write	389
L Max Hold	390
L Min Hold	390
L Average	390
L View	390
L Blank	390
L Hold/Cont	391
L Detector	391
L Auto Select	391
L Auto Peak	392
L Positive Peak	392
L Negative Peak	392
L Sample	392
L RMS	392
L Average	392
L Quasipeak	392
L CISPR Average	392
L RMS Average	393
Average Mode	393
L Lin	393
L Log	393
L Power	394
Trace Math	394
Trace Math Mode	394
L Lin	394
L Log	395
L Power	395
Trace Math Position	395
Trace Math Off	395

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the active trace (1, 2, 3, 4, 5, 6) and opens the "Trace Mode" submenu for the selected trace.

In the default state, trace 1 is in [Clear Write](#) mode. The other traces are turned off. For details see [Chapter 5.2.3, "Trace Modes"](#), on page 171.

Tip: To configure several traces in one step, use the functionality of the Trace Configuration dialog box. To access the dialog box, press the [Trace Wizard](#) softkey.

Remote command:

Selected via numeric suffix of: TRACe<1 . . . 6> commands

Clear Write ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

Remote command:

DISP:TRAC:MODE WRIT, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#)
on page 683

Max Hold ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The maximum value is determined over several sweeps and displayed. The R&S ESR saves the sweep result in the trace memory only if the new value is greater than the previous one.

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

Remote command:

DISP:TRAC:MODE MAXH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 683

Min Hold ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The minimum value is determined from several measurements and displayed. The R&S ESR saves the smallest of the previously stored/currently measured values in the trace memory.

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

Remote command:

DISP:TRAC:MODE MINH, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 683

Average ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [Chapter 6.3.1.5, "Detector Overview"](#), on page 399).


This mode is not available for statistics measurements.

Remote command:

DISP:TRAC:MODE AVER, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 683

View ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S ESR automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

Remote command:

DISP:TRAC:MODE VIEW, see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 683

Blank ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Hides the selected trace.

Remote command:

DISP:TRAC OFF, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 849

Hold/Cont ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Switches the reset of the traces in Min Hold, Max Hold and Average mode after some specific parameter changes have been made on and off. The default setting is off.

Normally, the measurement is started anew after parameter changes, before the measurement results are evaluated (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:MODE:HCONtinuous](#) on page 849

Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Opens a submenu to select the detector manually, or activate automatic selection.

Note: When measuring spurious emissions, using this softkey automatically opens the Sweep List dialog, see "[Sweep List dialog box](#)" on page 289.

If a detector was selected manually, the "MAN" indicator is highlighted.

If "AUTO" is selected, the detector is defined automatically, depending on the selected trace mode:

Trace mode	Detector
Clear Write	Auto Peak
Max Hold	Positive Peak
Min Hold	Negative Peak
Average	Sample Peak
View	–
Blank	–

Auto Select ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the best detector for the selected trace and filter mode. This is the default setting.

Trace mode	Detector
Clear/Write	Auto Peak
Average	Sample
Max Hold	Max Peak
Min Hold	Min Peak

Remote command:

[\[SENSe:\] \[WINDow:\] DETector<trace>\[:FUNction\]:AUTO](#) on page 853

Auto Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Auto Peak" detector.

The "Auto Peak" detector determines the maximum and minimum value within a measurement point. The Auto Peak detector is not available for SEM measurements.

Remote command:

DET APE, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

Positive Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Positive Peak" detector.

Remote command:

DET POS, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

Negative Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Negative Peak" detector.

Remote command:

DET NEG, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

Sample ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Sample" detector.

Remote command:

DET SAMP, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

RMS ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "RMS" detector.

Remote command:

DET RMS, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Average" detector.

Remote command:

DET AVER, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

Quasipeak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Quasipeak" detector.

Remote command:

DET QPE, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

CISPR Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "CISPR Average" detector.

Remote command:

DET CAV, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

RMS Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "RMS Average" detector.

Remote command:

DET CRMS, see [SENSe:] [WINDow:] DETector<trace>[:FUNCTION]
on page 853

Average Mode

Opens a submenu to select the averaging method for the average trace mode. The following methods are available:

- [Lin](#)
- [Log](#)
- [Power](#)

Logarithmic averaging is recommended to display signals with a low signal to noise ratio. While positive peak values are decreased in logarithmic averaging due to the characteristics involved, it is also true that negative peaks are increased relative to the average value. If the distorted amplitude distribution is averaged, a value is obtained that is smaller than the actual average value. The difference is -2.5 dB.

This low average value is usually corrected in noise power measurements by a 2.5 dB factor. Therefore the R&S ESR offers the selection of linear averaging. The trace data is converted to linear values prior to averaging, then averaged and reconverted to logarithmic values. After these conversions the data is displayed on the screen. The average value is always correctly displayed irrespective of the signal characteristic.

In case of stationary sinusoidal signals both logarithmic and linear averaging has the same results.

Lin ← Average Mode

Activates linear averaging. Linear averaging means that the power level values are converted into linear units prior to averaging. After the averaging, the data is converted back into its original unit.

This softkey takes effect if the grid is set to a linear scale (see "Range Linear" softkey, "[Range Linear %](#)" on page 318). In this case, the averaging is done in two ways (depending on the set unit – see "Unit" softkey):

- The unit is set to either W or dBm: the data is converted into W prior to averaging, i.e. averaging is done in W.
- The unit is set to either V, A, dBmV, dBμV, dBμA or dBpW: the data is converted into V prior to averaging, i.e. averaging is done in V.

Remote command:

SENS: AVER1: TYPE LIN, see [SENSe:] AVERage<n>: TYPE on page 852

Log ← Average Mode

Activates logarithmic averaging.

This averaging method only takes effect if the grid is set to a logarithmic scale ("Range" softkey), i.e. the unit of the data is dBm. In this case the values are averaged in dBm. Otherwise (i.e. with linear scaling), the behavior is the same as with linear averaging (see [Lin](#) softkey). For further information on logarithmic scaling refer to the "Average Mode" softkey.

Remote command:

SENS: AVER1: TYPE VID, see [\[SENSe:\] AVERage<n>: TYPE](#) on page 852

Power ← Average Mode

Activates linear power averaging.

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

Unlike the linear mode, the averaging is always done in W.

Remote command:

SENS: AVER1: TYPE POW, see [\[SENSe:\] AVERage<n>: TYPE](#) on page 852

Trace Math

Opens the "Trace Mathematics" dialog box to define which trace is subtracted from trace 1. The result is displayed in trace 1 and refers to the zero point defined with the [Trace Math Position](#) softkey. The following subtractions can be performed:

"T1"->"T1"-T2"	Subtracts trace 2 from trace 1.
"T1"->"T1"-T3"	Subtracts trace 3 from trace 1
"T1"->"T1"-T4"	Subtracts trace 4 from trace 1
"T1"->"T1"-T5"	Subtracts trace 5 from trace 1
"T1"->"T1"-T6"	Subtracts trace 6 from trace 1

To switch off the trace math, use the [Trace Math Off](#) softkey.

Remote command:

[CALCulate<n>: MATH\[:EXpression\] \[:DEFine\]](#) on page 847

[CALCulate<n>: MATH: STATE](#) on page 848

Trace Math Mode

Opens a submenu to select the mode for the trace math calculations.

Lin ← Trace Math Mode

Activates linear subtraction, which means that the power level values are converted into linear units prior to subtraction. After the subtraction, the data is converted back into its original unit.

This softkey takes effect if the grid is set to a linear scale (see [Range](#) softkey). In this case, subtraction is done in two ways (depending on the set unit – see [Unit](#) softkey):

- The unit is set to either W or dBm: the data is converted into W prior to subtraction, i.e. averaging is done in W.
- The unit is set to either V, A, dBmV, dBμV, dBμA or dBpW: the data is converted into V prior to subtraction, i.e. subtraction is done in V.

Remote command:

CALC:MATH:MODE LIN, see [CALCulate<n>:MATH:MODE](#) on page 848

Log ← Trace Math Mode

Activates logarithmic subtraction.

This subtraction method only takes effect if the grid is set to a logarithmic scale (see [Range](#) softkey), i.e. the unit of the data is dBm. In this case the values are subtracted in dBm. Otherwise (i.e. with linear scaling) the behavior is the same as with linear subtraction (see [Lin](#) softkey). For further information on logarithmic scaling refer to the [Average Mode](#) softkey.

Remote command:

CALC:MATH:MODE LOG, see [CALCulate<n>:MATH:MODE](#) on page 848

Power ← Trace Math Mode

Activates linear power subtraction.

The power level values are converted into unit Watt prior to subtraction. After the subtraction, the data is converted back into its original unit.

Unlike the linear mode, the subtraction is always done in W.

Remote command:

CALC:MATH:MODE POW, see [CALCulate<n>:MATH:MODE](#) on page 848

Trace Math Position

Opens an edit dialog box to define the zero point in % of the diagram height. The range of values extends from -100 % to +200 %.

Remote command:

[CALCulate<n>:MATH:POSition](#) on page 848

Trace Math Off

Deactivates any previously selected trace math functions.

Remote command:

CALC:MATH:STAT OFF, see [CALCulate<n>:MATH:STATe](#) on page 848


6.3.1.2 Configuring Traces

1. To open the trace wizard, press the TRACE key and then the "Trace Wizard" softkey (see ["Trace Wizard"](#) on page 199).

Tip: Context-sensitive menus for traces. Traces have context-sensitive menus. If you right-click on a trace in the display or a trace setting in the information channel bar (or touch it for about 1 second), a menu is displayed which corresponds to the softkey functions available for traces. This is useful, for example, when the softkey display is hidden.

If a menu entry contains an arrow to the right of it, a submenu is available for that entry.

To close the menu, press the ESC key or click in the display outside of the menu.

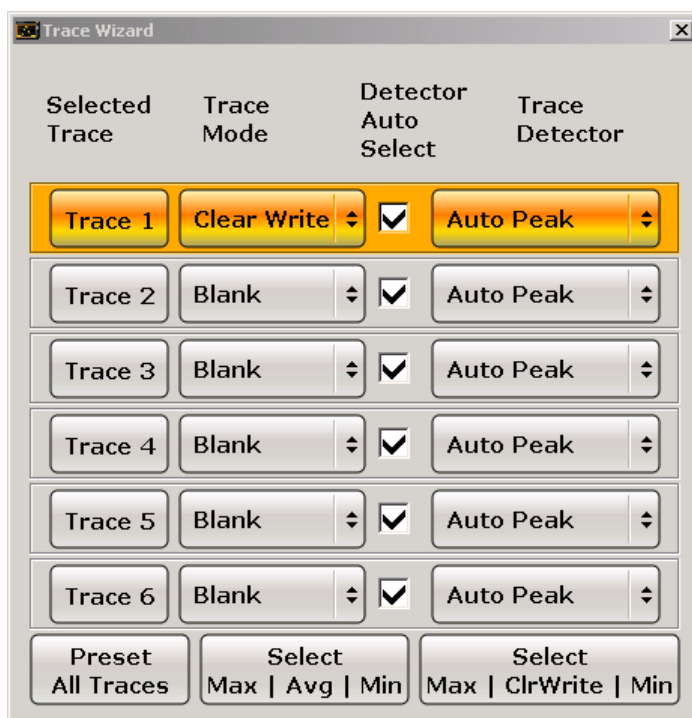

2. For each trace you can define the following settings:

Display Mode	<ul style="list-style-type: none"> • Clear Write • Max Hold • Min Hold • Average • View • Blank <p>For details see Chapter 5.2.3, "Trace Modes", on page 171.</p>
Detector Auto Select	Activates automatic detector selection (see Auto Select softkey). If activated, the "Trace Detector" setting is ignored.
Trace Detector	<p>Defines a specific trace detector. If one of the following settings is defined, the "Detector Auto Select" option is deactivated.</p> <ul style="list-style-type: none"> • "Auto Select" on page 391 • "Auto Peak" on page 392 • "Positive Peak" on page 392 • "Negative Peak" on page 392 • "Sample" on page 392 • "RMS" on page 392 • "Average" on page 392

3. To configure several traces to predefined display modes in one step, press the button for the required function:

Preset All Traces	Trace 1: Clear Write Trace 2-6: Blank
Select Max Avg Min	Trace 1: Max Hold Trace 2: Average Trace 3: Min Hold Trace 4-6: Blank
Select Max ClrWrite Min	Trace 1: Max Hold Trace 2: Clear Write Trace 3: Min Hold Trace 4-6: Blank

For details see [Chapter 5.2.3, "Trace Modes"](#), on page 171.

6.3.1.3 Specifying the Trace Settings

1. To configure one or more traces, see [Chapter 6.3.1.2, "Configuring Traces"](#), on page 395.
2. To select the trace mode for the selected trace, press the softkey for the corresponding trace (for details see [Chapter 5.2.3, "Trace Modes"](#), on page 171).
3. To select a detector, press the [Auto Select](#) softkey for automatic detector selection, or press the [Detector](#) softkey (for details see [Chapter 6.3.1.5, "Detector Overview"](#), on page 399).
4. To change the sweep count setting, which also determines trace averaging, press the [Sweep Count](#) softkey.
5. To deactivate the reset of the traces in "Min Hold" and "Max Hold" mode after some specific parameter changes, press the [Trace Math](#) softkey.
6. To copy a trace into another trace memory, press the [Copy Trace](#) softkey. Upon copying, the contents of the selected memory are overwritten and the new contents are displayed in the View mode.
7. To export the active trace in ASCII format:
 - a) Press the "More" softkey.
 - b) If necessary, press the [Decim Sep](#) softkey to change the decimal separator with floating-point numerals.
 - c) Press the [ASCII File Export](#) softkey to enter the ASCII file export name. The active trace is saved in ASCII format on the harddisk on or an external storage device.

6.3.1.4 Description of the Averaging Method

Averaging is carried out over the measurement points derived from the measurement samples. Several measured values may be combined in a measurement point. This

means that with linear level display the average is formed over linear amplitude values. The sweep mode (continuous or single sweep, for details see [Chapter 6.2.7, "Configuring the Sweep Mode – SWEEP Key"](#), on page 369) and running averaging apply to the average display analogously. In principle, two methods for calculating the average are used: continuous averaging and averaging over the selected number of sweeps.

- sweep count > 1
Depending on the relation of the following two parameters, two different situations exist:

n = number of sweeps performed since measurement start

c = sweep count (number of sweeps forming one statistics cycle)

- $n \leq c$

In single sweep or continuous sweep mode during the first statistics cycle, averaging over the selected number of sweeps is performed. The average trace " n " is calculated at each measurement point according to:

$$Avg(n) = \frac{n-1}{n} Avg(n-1) + \frac{1}{n} Curr(n)$$

Figure 6-17: Equation 1

with Avg = average trace; Curr = current trace

Until the first statistics cycle is completed ($n < c$), a preliminary average is displayed which represents the arithmetic mean value over all measured sweeps. With n increasing, the displayed trace is increasingly smoothed since there are more single sweeps for averaging.

When the first statistics cycle is completed ($n = c$), the average trace is saved in the trace memory.

- $n > c$

In continuous sweep mode after the first statistics cycle, continuous averaging is performed. The average trace " n " is calculated at each measurement point according to:

$$Avg(n) = \frac{c-1}{c} Avg(n-1) + \frac{1}{c} Curr(n)$$

Figure 6-18: Equation 2

with Avg = average trace; Curr = current trace

In single sweep mode, the same formula is valid if the [Continue Single Sweep](#) softkey is pressed.

- sweep count = 0
In continuous sweep mode, a continuous average is calculated according to [Figure 6-18](#) with $c = 10$:

$$Avg(n) = \frac{9}{10} Avg(n-1) + \frac{1}{10} Curr(n)$$

Figure 6-19: Equation 3

with Avg = average trace; Curr = current trace

Due to the weighting between the current trace and the average trace, past values have practically no influence on the displayed trace after about ten sweeps. With this setting, signal noise is effectively reduced without need for restarting the averaging process after a change of the signal.

- sweep count = 1
The current trace is displayed. No averaging is performed. This is a special case of [Figure 6-17](#) with $n = 0$.

6.3.1.5 Detector Overview

The measurement detector for the individual display modes can be selected directly by the user or set automatically by the R&S ESR. The detector activated for the specific trace is indicated in the corresponding trace display field by an abbreviation.

For more information on available detectors see [Chapter 5.2.2, "Detectors"](#), on page 167.

All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.



Number of measured values

During a frequency sweep, the R&S ESR increments the first local oscillator in steps that are smaller than approximately 1/10 of the bandwidth. This ensures that the oscillator step speed is conform to the hardware settling times and does not affect the precision of the measured power.

The number of measured values taken during a sweep is independent of the number of oscillator steps. It is always selected as a multiple or a fraction of 691 (= default number of trace points displayed on the screen). Choosing less than 691 measured values (e.g. 125 or 251) will lead to an interpolated measurement curve, choosing more than 691 points (e.g. 1001, 2001 ...) will result in several measured values being overlaid at the same frequency position.



RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves.

6.3.1.6 ASCII File Export Format

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or

several columns (depending on measurement) which are also separated by a semicolon.



Exporting a single trace vs exporting all traces

Note that the file containing the trace data has a slightly different structure when you export all traces compared to exporting a single trace only. The differences are indicated in the tables below.

Blue font: Information provided when you export a single trace	
Green font: Information provided when you export all traces	
Black font: Information provided regardless of the export mode	
Header	
Type;<instrument_model>;	Instrument model
Version;1.00;	Firmware version
Date;01. Jan 3000;	Date of data set storage
Mode;Receiver;	Application
Start;150000.000000;Hz	Start frequency of the scan
Stop;100000000.000000;Hz;	Stop frequency of the scan
X-Axis;LIN;	Scale of the x-axis
Detector;Average;	Detector type
X-Unit;Hz;	Unit of the x-axis
Y-Unit;dBµV;	Unit of the y-axis
Scan Count;1;	Scan count
Transducer;,,,,;	Transducer information

Data section (scan ranges)	
Scan 1:	
Start;150000.000000;Hz;	Start frequency of the scan range
Stop;29998500.000000;Hz;	Stop frequency of the scan range
Step;4500.000000;Hz;	Frequency stepsize applied in the scan range
RBW;9000.000000;Hz;	Measurement bandwidth applied in the scan range
Meas Time;0.001000;s;	Measurement time in the scan range
Auto Ranging;OFF;	State of the auto ranging feature
RF Att;10.000000;dB;	Attenuation applied in the scan range
Auto Preamp;OFF; Preamp;0.000000;dB;	Preamplifier information for the scan range
RF Input;1;	RF input used in the scan range
Scan 2:	
(...)	

Data section (traces)	
Trace 1:	
Trace Mode;CLR/WRITE;	Trace mode
Detector;MAX PEAK;	Detector type
X-Unit;Hz;	Unit of the x-axis
Y-Unit;Hz;	Unit of the y-axis
Values;1343;	Number of measurement points
150000.000000;3.541122; 154500.000000;5.776306;[...]	String of results
Trace 2:	
(...)	

Blue font: Information provided when you export a single trace	
Green font: Information provided when you export all traces	
Black font: Information provided regardless of the export mode	
Header	
Type; <instrument_model>;	Instrument model
Version;1.00;	Firmware version
Date;01. Jan 3000;	Date of data set storage
Mode;Analyzer;	Application
Center Freq;100000000.000000;	Center frequency
Freq Offset;0.000000;Hz;	Frequency offset
Span;1000000000.000000;Hz;	Frequency span
X-Axis;LIN;	Scale of the x-axis
Start;150000.000000;Hz;	Start frequency
Stop;2500000.000000;Hz;	Stop frequency
Ref Level;97.000000;dB μ V;	Reference level
Level Offset;0.000000;Hz;	Reference level offset
Ref Position;100.000000;%;	Reference position
Y-Axis;LOG;	Scale of the y-axis
Level Range;100.000000;dB;	Range of the y-axis
Rf Att;10.000000;dB;	RF attenuation
RBW;3000000.000000;Hz;	Resolution bandwidth
VBW;300000.000000;Hz;	Video bandwidth
SWT;0.002000;s;	Sweep time
Trace mode;CLR/WRITE;	Trace mode
Detector;AUTOPEAK;	Detector type
X-Unit;Hz;	Unit of the x-axis
Y-Unit;Hz;	Unit of the y-axis
Preamplifier;OFF;	State of the preamplifier
Transducer;OFF;	Transducer information
Sweep Count;0;	Sweep / average count

Data section (traces)	
Trace 1:	
Trace Mode;CLR/WRITE;	Trace mode
Detector;MAX PEAK;	Detector type
X-Unit;Hz;	Unit of the x-axis
Y-Unit;Hz;	Unit of the y-axis
Preamplifier;OFF;	State of the preamplifier
Transducer;OFF;	Transducer information
Values;691;	Number of measurement points
150000.000000;3.541122; 154500.000000;5.776306;[...]	String of results
Trace 2:	
(...)	

6.3.2 Spectrogram

The spectrogram is a graphical overview of changes in the frequency and amplitude over time.

The spectrogram uses the configuration of the Spectrum mode and vice versa.

Note that not all measurements of the Spectrum mode support a spectrogram result display.

Menus and softkeys

The main menu of the Spectrogram result display is part of the "Trace" menu in Spectrum mode. For more information see .

Some special functions supported by the spectrogram are available in the "Sweep" menu in Spectrum mode. For more information see [Chapter 6.2.7.1, "Softkeys of the Sweep Menu"](#), on page 369.

6.3.2.1 Working with Spectrograms

Functions of the spectrogram described elsewhere:

- [Chapter 5.1.6, "Spectrogram"](#), on page 151

General Information

This section provides some basic information about using the firmware application and about performing measurements with the firmware application.

Screen Layout

The Spectrogram view is divided into two screens: the spectrum analyzer result display (upper screen) and the spectrogram result display (lower screen).

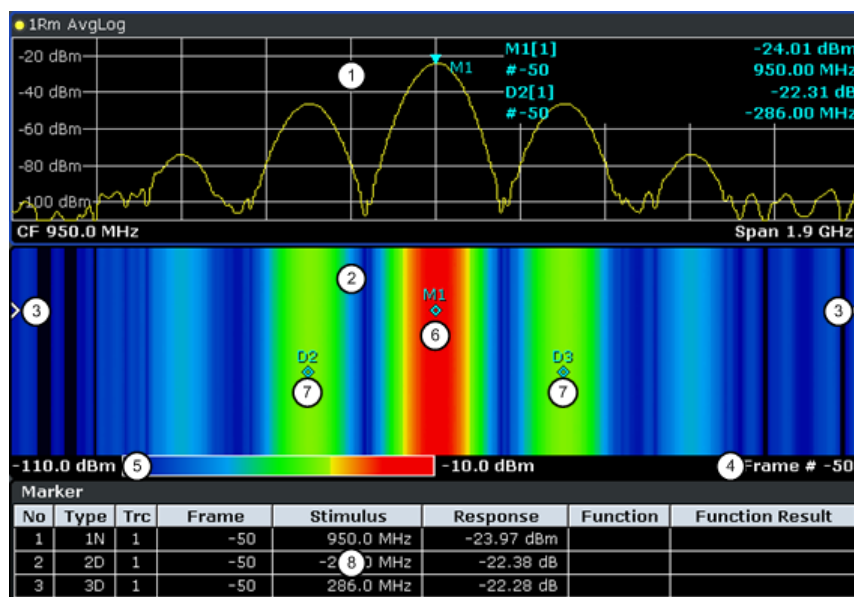


Figure 6-20: Screen layout of the spectrogram result display

- 1 = Spectrum result display
- 2 = Spectrogram result display
- 3 = Frame indicator
- 4 = Time stamp / frame number
- 5 = Color map
- 6 = Marker
- 7 = Deltamarker
- 8 = Marker list

- **Spectrum Analyzer result display (1 in Figure 6-20)**
This result display is the same as the Spectrum Analyzer with the x-axis representing the frequency span or time (span = 0) and the y-axis the power level. Configure and use this display in the same way as you would in Spectrum Analyzer mode. All traces are available and you can view those traces just like in the base unit (see Chapter 5.2.3, "Trace Modes", on page 171). The trace modes View and Blank are not available for trace 1.
While performing a measurement the trace is updated continuously. You can also restore the trace to a point that has already been recorded by selecting a specific frame (see "Select Frame" on page 373). This is possible in Single Sweep mode or if the sweep has been stopped.
- **Spectrogram result display (2)**
The data displayed in the Spectrogram is always based on the data of trace 1 in the Spectrum Analyzer result display. The Spectrogram can handle measurements in the frequency domain (span > 0) as well as measurements in the time domain (span = 0)
The Spectrogram is a cartesian diagram. The x-axis shows the power distribution of a measured signal over a specified frequency or time range. Different power levels are displayed in different colors. The y-axis represents the time with the top of the diagram being the current timeframe (the measurement runs from top to bottom). Each line (or trace) of the y-axis represents one captured frame. The frames are sorted in chronological order. One frame is equal to a certain number of sweep

points, depending on the dimension of the x-axis. If there are more measurement values than measurement points, several measured values are combined in one measurement point using the selected detector (see [Chapter 6.3.1.5, "Detector Overview"](#), on page 399). Frames are sorted in chronological order, beginning with the most recently recorded frame or frame number 0 at the top of the diagram. After that and below frame 0 is the frame recorded before the current frame (frame -1) and so on until the maximum number of captured frames is reached. The maximum number of frames that you can capture is summarized in the table below (see [Table 6-7](#)). A marker in the form of an arrow (3) on the left and right border of the Spectrogram indicates the currently selected frame.

The actual number of the currently selected frame is shown below the diagram (4). If the time stamp is active, the R&S ESR shows the time stamp instead of the frame number (see [Time Stamp \(On Off\)](#)).

Below the diagram there is also a color map (5) that shows the power levels corresponding to the displayed colors. The minimum value of the y-axis is on the left of the color map. The maximum value is on the right of the map. You can also change the color scheme in use (see [Color Mapping](#)). The colors corresponding to the power levels, however, are always assigned automatically.


Markers and deltamarkers (6) (7) take the form of diamonds in the Spectrogram. They are only displayed in the Spectrogram, if the marker position is inside the visible area of the spectrogram. If more than two markers are active, it is possible to display a [Marker Table](#) at the bottom of the display (8).

Table 6-7: Correlation between number of sweep points and number of frames stored in the history buffer

Sweep Points	Max. History Depth
≤1250	20000
2001	12488
4001	6247
8.001	3124
16.001	1562
32.001	781

Markers and Marker Values

 In the Spectrum Analyzer result display, the markers and their frequency and level values (1) are displayed in the marker field just like in the base unit (see [Chapter 5.4.2, "Markers"](#), on page 200). In addition to the base unit functionality, the frame number is displayed to indicate the position of the marker in time (2).

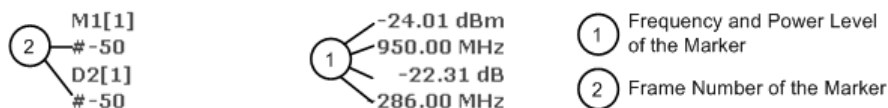

In the Spectrogram result display, you can activate up to 16 markers or deltamarkers at the same time. Any marker can be assigned to a different frame. Therefore, in addition to the frequency (1) you can set the frame number (2) when activating a new marker. If no frame number is specified, the marker is positioned on the currently selected frame.



- ① Input Field for Marker Frequency
- ② Input Field for Marker Frame Number

In the Spectrogram result display all markers are visible that are positioned on a visible frame.

In the Spectrum Analyzer result display, only the markers positioned on the currently selected frame are visible. In Continuous Sweep mode this means that only markers positioned on frame 0 are visible. To view markers that are positioned on a frame other than frame 0 in the Spectrum Analyzer result display, it is necessary to stop the measurement and select the corresponding frame.

6.3.2.2 Softkeys of the Spectrogram Menu

Softkeys of the Spectrogram Menu

The following chapter describes all softkeys available in the "Spectrogram" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

To display the "Spectrogram" menu, press the [TRACE] key and then select the "Spectrogram" softkey.

Spectrogram.....	405
L Spectrogram (On Off).....	405
L History Depth.....	405
L Color Mapping.....	406
L Time Stamp (On Off).....	406
L Clear Spectrogram.....	406

Spectrogram

Opens the submenu for the spectrogram view.

Spectrogram (On Off) ← Spectrogram

Activates and deactivates the Spectrogram result display

Remote command:

`CALCulate<n>:SGRam[:STATe]` on page 858

History Depth ← Spectrogram

Sets the number of frames that the R&S ESR stores in its memory. The maximum number of frames depends on the Sweep Points (see "General Information" on page 402).

If the memory is full, the R&S ESR deletes the oldest frames stored in the memory and replaces them with the new data.

Remote command:

[CALCulate<n>:SGRam:HDEPth](#) on page 651

Color Mapping ← Spectrogram

Displays the "Color Mapping" dialog box to configure the display of the spectrogram (assignment of colors to power levels).

For more information see [Chapter 5.1.6.2, "Color Map"](#), on page 152.

Remote command:

[CALCulate<n>:SGRam:COLor](#) on page 856

[DISPlay:WINDow:SGRam:COLor:LOWer](#) on page 650

[DISPlay:WINDow:SGRam:COLor:UPPer](#) on page 650

Time Stamp (On Off) ← Spectrogram

Activates and deactivates the time stamp. The time stamp shows the system time while the measurement is running. In single sweep mode or if the sweep is stopped, the time stamp shows the time and date of the end of the sweep.

When active, the time stamp replaces the display of the frame number.

Remote command:

[CALCulate<n>:SGRam:TSTamp\[:STATe\]](#) on page 858

Clear Spectrogram ← Spectrogram

Resets the Spectrogram result display and clears the history buffer.

Remote command:

[CALCulate<n>:SGRam:CLEar\[:IMMediate\]](#) on page 649

6.3.3 Markers

6.3.3.1 Controlling Markers

The markers are used for marking points on traces, reading out measurement results and for selecting a display section quickly. The R&S ESR provides 16 markers per trace.

To open the Marker menu

- Press the MKR key.
The "Marker" menu is displayed. If no marker is active, marker 1 is activated and a peak search on the trace is carried out. Otherwise, the edit dialog box for the last activated marker is opened and the current frequency/time value is displayed.

Further information

- ["Displayed Marker Information"](#) on page 410
- [Chapter 5.4.2.2, "Positioning Markers"](#), on page 204.

Tasks

- ["Basic Marker Functions"](#) on page 408

Softkeys of the Marker Menu

Functions to control markers described elsewhere:

- ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta"](#) on page 201
- ["Marker to Trace"](#) on page 202
- ["Marker Wizard"](#) on page 202
- ["All Marker Off"](#) on page 203
- ["Marker Table"](#) on page 203
- ["Marker Info \(On Off\)"](#) on page 203

Functions to control markers exclusive in Spectrum mode

Marker Stepsize	407
L Stepsize Standard	407
L Stepsize Sweep Points	407
Marker Zoom (span > 0)	408
Link Mkr1 and Delta1	408

Marker Stepsize

Opens a submenu to set the step size of all markers and delta markers.

Default value for the marker step size is [Stepsize Sweep Points](#).

Stepsize Standard ← Marker Stepsize

Moves the marker or delta marker from one measurement point to the next, if the marker or delta marker value is changed via the rotary knob ("Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" softkeys, see ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta"](#) on page 201). If more measured values than measurement points exist, it is not possible to read out all measured values. In this case, use the [Stepsize Sweep Points](#) softkey.

Remote command:

CALC:MARK:X:SSIZ STAN (see [CALCulate<n>:MARKer<m>:X:SSIZe](#) on page 864)

Stepsize Sweep Points ← Marker Stepsize

Moves the marker or delta marker from one measured value to the next, if the marker or delta marker value is changed via the rotary knob ("Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" softkeys, see ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta"](#) on page 201). If more measured values than measurement points exist, every single measured value is accessible and its value is displayed in the marker field.

The number of measured values is defined in the ""Sweep"" menu via the [Sweep Points](#) softkey.

This functionality is not available for statistical measurements (APD and CCDF).

Remote command:

CALC:MARK:X:SSIZ POIN (see [CALCulate<n>:MARKer<m>:X:SSIZe](#) on page 864)

Marker Zoom (span > 0)

Opens an edit dialog box to enter a display range for the zoom. The area around marker 1 is expanded accordingly and more details of the result can be seen. If no marker is activated, marker 1 is switched on and set on the largest signal.

The following sweep is stopped at the position of the reference marker. The frequency of the signal is counted and the measured frequency becomes the new center frequency. The zoomed display range is then configured and the new settings are used by the R&S ESR for further measurements.

If the display has not yet been switched to the new frequency display range and you press the softkey, the procedure is aborted. If an instrument setting is changed during this operation, the procedure is also aborted.

This function is not available in I/Q Analyzer mode.

Remote command:

[CALCulate<n>:MARKer<m>:FUNction:ZOOM](#) on page 688

Link Mkr1 and Delta1

The delta marker 1 is linked to marker 1, so if the x-axis value of the marker 1 is changed, the delta marker 1 will follow on the same x-position. The link is off by default.

You can set the two markers on different traces to measure the difference (e.g. between a max hold trace and a min hold trace or between a measurement and a reference trace).


Remote command:

[CALCulate<n>:DELTAmarker<m>:LINK](#) on page 697

Basic Marker Functions

- To open the "Marker" menu, press the [MKR] key.
Marker 1 is activated and positioned on the maximum value of the trace as a normal marker. If several traces are displayed, the marker is set to the maximum value (peak) of the trace which has the lowest number (1 to 3) and is not frozen (View mode). In case a marker is already located there, the new marker is set to the frequency of the next lowest level (next peak).
- To change marker settings quickly, right-click on the marker in the display (or touch it for about 1 second). A context-sensitive menu is displayed which corresponds to the softkey functions available for markers.
- To configure and activate several markers at once, select the "Marker Wizard" to open a configuration dialog for all markers.
- To change to another trace, press the "Marker to Trace" softkey ("[Marker to Trace](#)" on page 202) and enter the number of the trace on which the marker is to be placed.
The marker changes to the selected trace, but remains on the previous frequency or time. If a trace is turned off, the corresponding markers and marker functions are also deactivated.

- To switch to another marker, click on the marker label in the diagram. Alternatively, select the corresponding softkey. If necessary, select the [More Markers](#) softkey first to open a submenu that contains all marker numbers.
- To move the marker to a different position, click the marker label in the diagram and then drag it to the new position. When a marker label is selected, a vertical line is displayed which indicates the marker's current x-value.

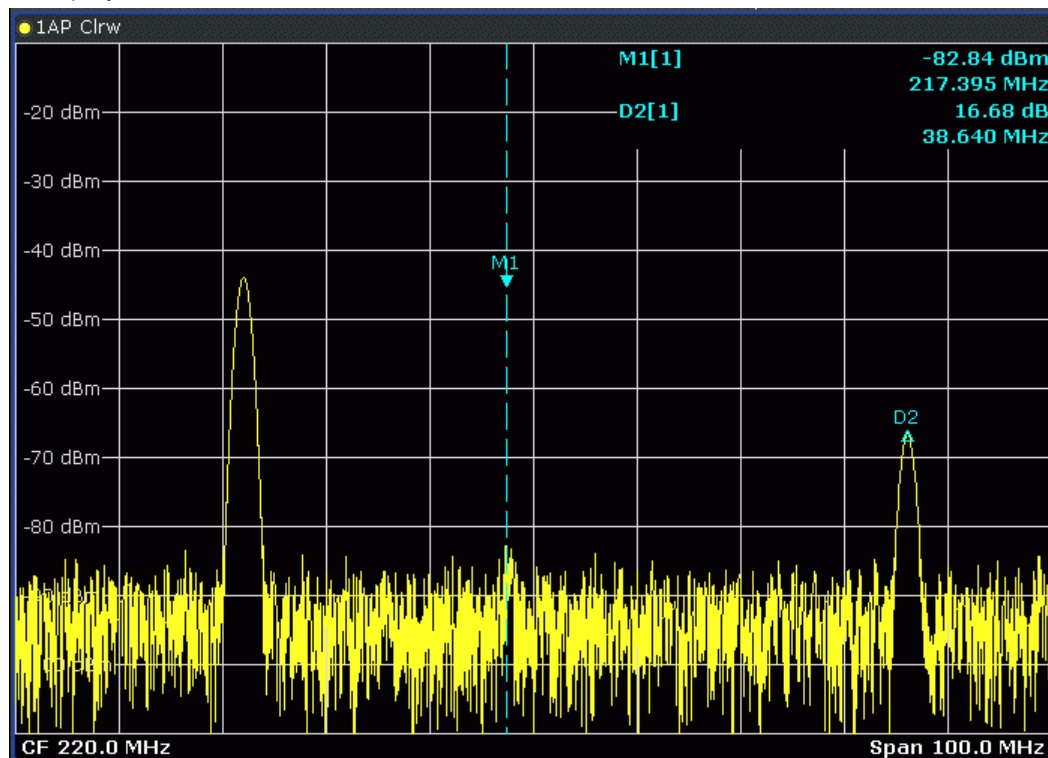

- To switch on a delta marker, select the softkey for the corresponding marker, then press the "Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta" ("[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201) until "Delta" is highlighted. The selected marker is switched on as a delta marker. The frequency and level of the marker are displayed in relation to marker 1 in the marker field.
- To change the marker type of a marker, select the softkey for the corresponding marker, then press the "Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta" softkey ("[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201). For a normal marker, the frequency and level are displayed as absolute values in the marker field. For a delta marker, the frequency and level of the marker are displayed in relation to marker 1 in the marker field.
- To switch off a marker, press the corresponding softkey again. The marker is deactivated. Marker 1 becomes the active marker for entry. The frequency and level of marker 1 are displayed in the marker field.
- To switch off all markers, press the [All Marker Off](#) softkey.
- To change the stepsize between one measured value and the next when the marker or delta marker value is changed via the rotary knob, press either the [Stepsize Standard](#) softkey or the [Stepsize Sweep Points](#) softkey.

- To zoom into the display around a marker, press the "[Marker Zoom \(span > 0\)](#)" on page 408 softkey and enter a span.
- To link the delta marker1 to marker1, so if the x-axis value of the marker 1 is changed, the delta marker 1 follows on the same x-position, press the [Link Mkr1 and Delta1](#) softkey.

Displayed Marker Information

The following additional information is displayed within the diagram grid or in a marker table beneath the diagram. The marker table is displayed automatically if more than 2 markers are active. You can hide or show the table using the [Marker Table](#) softkey.

Marker information in Diagram Grid

The x and y axis positions of the last 2 markers or delta markers that were set, as well as their index, are displayed within the diagram grid, if available. The value in the square brackets after the index indicates the trace to which the marker is assigned. (Example: M1[1] defines marker 1 on trace 1.) For more than 2 markers, a separate marker table is displayed beneath the diagram.

If applicable, the active measurement function for the marker and its main results are indicated, as well. The functions are indicated with the following abbreviations:

FXD	Reference fixed marker active
PHNoise	Phase noise measurement active
CNT	Frequency counter active
TRK	Signal track active
NOIse	Noise measurement active
MDepth	Measurement of the AM modulation depth active
TOI	TOI measurement active
Occ BW	Occupied bandwidth

Marker Information in Marker Table

In addition to the marker information displayed within the diagram grid, a separate marker table may be displayed beneath the diagram. This table provides the following information for all active markers:

No.	Serial number
Type	Marker type: N (normal), D (delta), T (temporary, internal)
Dgr	Diagram number
Trc	Trace to which the marker is assigned
Stimulus	x-value of the marker
Response	y-value of the marker

Func	Activated marker or measurement function
Func.Result	Result of the active marker or measurement function

6.3.3.2 Positioning Markers (MKR→ Key)

The MKR→ key is used for search functions of measurement markers, assignment of the marker frequency as center frequency, restriction of the search area and characterization of maxima and minima. For details on markers in general, see [Chapter 6.3.3.1, "Controlling Markers"](#), on page 406.

To open the Marker To menu

- Press the MKR→ key.
The "Marker To" menu is displayed. If no marker is active, marker 1 will be activated and a peak search on the trace carried out. Otherwise, the edit dialog box for the last activated marker is opened and the current frequency/time value is displayed.

Menu and softkey description

- ["Softkeys of the Marker To Menu"](#) on page 411

Further information

- ["Effect of Different Peak Excursion Settings \(Example\)"](#) on page 414

Tasks

- ["Searching for a Maximum"](#) on page 413
- ["Searching for a Minimum"](#) on page 413
- ["Specifying the Search Limits"](#) on page 413
- ["Specifying the Search Range"](#) on page 413
- ["Examining a Signal at the Center in Detail"](#) on page 413
- ["Specifying the Suitable Peak Excursion"](#) on page 414

Softkeys of the Marker To Menu

The following table shows all softkeys available in the "Marker To" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Functions to position markers described elsewhere:

- ["Select Marker \(No\)"](#) on page 205
- ["Peak"](#) on page 205
- ["Next Peak"](#) on page 205
- ["Marker to Trace"](#) on page 202
- ["Min"](#) on page 205

- "Next Min" on page 205
- "Next Mode" on page 205
- "Search Limits" on page 206
- "Peak Excursion" on page 207
- Spectrogram: [Chapter 5.4.2.3, "Markers in Spectrograms"](#), on page 207

Functions to position markers exclusive in Spectrum mode

Center =Mkr Freq (span > 0)	412
Ref Lvl =Mkr Lvl	412
Auto Max Peak/Auto Min Peak	412
Exclude LO	412

Center =Mkr Freq (span > 0)

Sets the center frequency to the current marker or delta marker frequency. A signal can thus be set to as center frequency, for example to examine it in detail with a smaller span.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:CENTer](#) on page 688

Ref Lvl =Mkr Lvl

Sets the reference level to the current marker level.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:REFerence](#) on page 862

Auto Max Peak/Auto Min Peak

Adds an automatic peak search action for marker 1 at the end of each particular sweep. This function may be used during adjustments of a device under test to keep track of the current peak marker position and level.

The current marker search limit settings ([Left Limit](#), [Right Limit](#), [Threshold](#) softkeys) are taken into account.

Remote command:

[CALCulate<n>:MARKer<m>:MAXimum:AUTO](#) on page 863

[CALCulate<n>:MARKer<m>:MINimum:AUTO](#) on page 863

Exclude LO

Switches the frequency range limit for the marker search functions on or off.

"ON"	The minimum frequency included in the peak search range is $\geq 5 \times$ resolution bandwidth (RBW). Due to the interference by the first local oscillator to the first intermediate frequency at the input mixer, the LO is represented as a signal at 0 Hz. To avoid the peak marker jumping to the LO signal at 0 Hz, this frequency is excluded from the peak search.
"OFF"	No restriction to the search range. The frequency 0 Hz is included in the marker search functions.

Remote command:

[CALCulate<n>:MARKer<m>:LOEXclude](#) on page 863

Searching for a Maximum

- To search for the highest maximum, press the **Peak** softkey.
- To define the search mode for the next maximum, use the **Next Mode** softkey.
- To start the search, press the **Next Peak** softkey.



You can define an automatic peak search action for marker 1 at the end of each particular sweep using the **Auto Max Peak/Auto Min Peak** softkey.

Searching for a Minimum

- To search for the minimum, press the **Min** softkey.
- To define the search mode for the next minimum, use the **Next Mode** softkey.
- To start the search, press the **Next Min** softkey.



You can define an automatic peak search action for marker 1 at the end of each particular sweep using the **Auto Max Peak/Auto Min Peak** softkey.

Specifying the Search Limits

- To define the lower limit, press the **Left Limit** softkey.
- To define the upper limit, press the **Right Limit** softkey.
- To define the threshold, press the **Threshold** softkey.
- To switch the search limits off, press the **Search Lim Off** softkey.

Specifying the Search Range

- Press the **Exclude LO** softkey to deactivate the "Exclude LO" mode in order to include the frequency down to 0 Hz in the marker search functions.

Examining a Signal at the Center in Detail

1. Press the [PRESET] key to set the R&S ESR to the default setting.
2. Press the [MKR ->] key to open the "Marker To" menu.
3. Marker 1 is activated and set to the largest signal of the trace.
4. Press the **Center =Mkr Freq (span > 0)** softkey to set to the marker frequency.
5. The span is adapted in such a way that the minimum frequency (= 0 Hz) or the maximum frequency is not exceeded.
6. Press the **Ref Lvl =Mkr Lvl** softkey to set the reference level to the measured marker level.
7. Press the SPAN key.
8. The edit dialog box to enter a frequency span is displayed.

9. Reduce the span, e.g. using the rotary knob.

Specifying the Suitable Peak Excursion

1. If the **Peak Excursion** softkey is used, the default value is sufficient, since, in this mode, the next lower maximum or next higher minimum will always be detected.
2. If the < or > of the softkey **Next Mode** is used, the 6 dB level change set as a default value may already be attained by the inherent noise of the instrument. To avoid identifying noise peaks as maxima or minima, enter a peak excursion value that is higher than the difference between the highest and the lowest value measured for the displayed inherent noise.

Effect of Different Peak Excursion Settings (Example)

The following figure shows a trace to be examined.

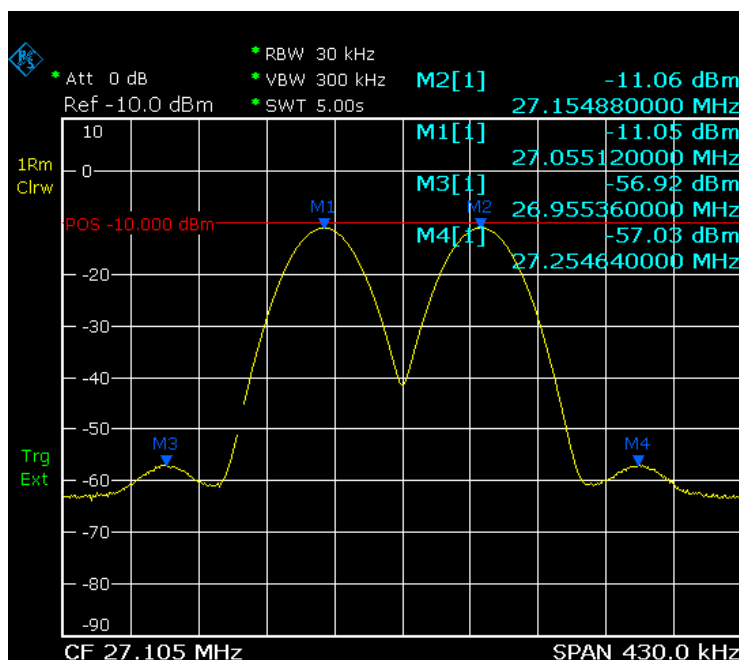


Figure 6-21: Trace example

The following table lists the signals as indicated by the marker numbers in the diagram above, as well as the minimum of the amplitude decrease to both sides of the signal:

Signal #	Min. amplitude decrease to both sides of the signal
1	30 dB
2	29.85 dB
3	7 dB
4	7 dB

The detected signals and their order are different depending on the peak excursion setting and the peak search method (whether the next lower maximum or the next relative maximum is searched). The following results are obtained. All tests start with the marker set to signal 1 by pressing the **Peak** softkey.

- 40 dB peak excursion
Result: With both methods apart from signal 1 no signal is detected, as the signal level does not decrease by more than 30 dB to either side of any signal.

Next lower maximum	Next relative maximum
Next Mode abs: signal 1 (no further signal detected)	Next Mode <: signal 1 (no further signal detected)
	Next Mode >: signal 1 (no further signal detected)

- 20 dB peak excursion
Result: With both methods apart from signal 1 signal 2 is detected, as the signal level decreases at least by 29.85 dB to either side of this signal, which is now greater than the peak excursion.

Next lower maximum	Next relative maximum
Next Mode abs: signal 2	Next Mode <: signal 1 (no further signal detected)
Next Mode abs: signal 2 (no further signal detected)	Next Mode >: signal 2
	Next Mode >: signal 2 (no further signal detected)

- 6 dB peak excursion
Result: With both methods all signals are detected.

Next lower maximum	Next relative maximum
Next Mode abs: signal 2	Next Mode <: signal 3
Next Mode abs: signal 3	Next Mode >: signal 1
Next Mode abs: signal 4	Next Mode >: signal 2
	Next Mode >: signal 4

6.3.3.3 Performing Peak Searches with Markers – PEAK SEARCH Key

The PEAK SEARCH key is used to perform a peak search with the currently active marker. If no marker is active, marker 1 is activated in normal mode and set as the peak.

If the selected diagram does not support markers, this key is ignored.

6.3.3.4 Measuring with Markers (MKR FUNC Key)

The [MKR FUNC] key provides various functions for markers, e.g.

- Phase Noise measurements
- Setting reference points
- Marker demodulation
- Defining Marker peak lists
- Signal counts
- Measuring the power for a band around the marker

To open the marker function menu

- Press the [MKR FUNC] key.
The "Mkr Func" (marker function) menu is displayed.

Menu and softkey description

- ["Softkeys of the Marker Function Menu"](#) on page 416

Further information

- ["AF Demodulation"](#) on page 425
- ["Frequency Measurement with the Frequency Counter"](#) on page 426
- ["Measurement of Noise Density"](#) on page 426
- ["Measurement example for Phase Noise Auto Peak Search"](#) on page 428

Tasks

- ["Setting a Fixed Reference Point \(Phase Noise Measurement\)"](#) on page 425
- ["Setting the Demodulation Mode and Duration"](#) on page 425
- ["Performing Band Power Measurements"](#) on page 428

Softkeys of the Marker Function Menu

The following table shows all softkeys available in the marker function menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Select Marker (No).....	417
Signal Count.....	417
Noise Meas On/Off.....	418
Phase Noise.....	418
L Phase Noise On/Off.....	418
L Ref Point Level.....	418
L Ref Point Frequency (span > 0)/Ref Point Time (zero span).....	418
L Peak Search.....	418
L Ph. Noise Auto Peak Search.....	419
L Select Marker (No).....	419
Ref Fixed.....	419

L Ref. Fixed On/Off.....	419
L Ref Point Level.....	419
L Ref Point Frequency (span > 0)/Ref Point Time (zero span).....	419
L Peak Search.....	420
Marker Demod.....	420
L Mkr Demod On/Off.....	420
L AM.....	420
L FM.....	420
L Mkr Stop Time.....	420
L Continuous Demod (span > 0).....	420
L Squelch.....	421
L Squelch Level.....	421
n dB down.....	421
Marker Peak List.....	422
L Peak List On/Off.....	422
L Sort Mode Freq/Lvl.....	422
L Max Peak Count.....	422
L Peak Excursion.....	423
L Left Limit.....	423
L Right Limit.....	423
L Threshold.....	423
L ASCII File Export.....	423
L Decim Sep.....	424
L Marker Number.....	424
Band Power.....	424
L Select Marker (No).....	424
L Band Power On/Off.....	424
L Span.....	424
L Power.....	424
L Density.....	425

Select Marker (No)

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201). "(No)" indicates the number of the currently active marker.

See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201.

Signal Count

Switches the frequency counter on or off, and opens an edit dialog box to define the resolution of the frequency counter, if enabled. The frequency is counted at the position of the reference marker (marker 1). If no marker is activate, marker 1 is switched on and positioned on the largest signal.

The sweep stops at the reference marker until the frequency counter has delivered a result. The result is displayed in the marker field (see [Figure 5-9](#)), labeled with [Tx CNT].

For more information see "[Frequency Measurement with the Frequency Counter](#)" on page 426.

Remote command:

`CALCulate<n>:MARKer<m>:COUNT` on page 870

`CALCulate<n>:MARKer<m>:COUNT:FREQuency?` on page 870

Noise Meas On/Off

Switches the noise measurement for the active marker on or off. The corresponding marker becomes the normal marker.

For more information on noise measurement see "[Measurement of Noise Density](#)" on page 426.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:NOISe[:STATe]` on page 872

`CALCulate<n>:MARKer<m>:FUNction:NOISe:RESult` on page 871

Phase Noise

This softkey opens a submenu that contains functionality to configure and perform phase noise measurements.

Phase Noise On/Off ← Phase Noise

Switches the phase noise measurement with all active delta markers on and off. The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

Marker 1 is activated, if necessary, and a peak search is performed. If marker 1 is activated, its position becomes the reference point for the measurement.

Deltamarker 2 is activated and can be used to read out the phase noise value at a given frequency offset.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNction:PNOise[:STATe]` on page 873

`CALCulate<n>:DELTamarker<m>:FUNction:PNOise:RESult?` on page 873

Ref Point Level ← Phase Noise

Opens an edit dialog box to enter a reference level value. All relative level values of the delta markers refer to this reference level.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:Y` on page 868

Ref Point Frequency (span > 0)/Ref Point Time (zero span) ← Phase Noise

Opens an edit dialog box to enter a frequency reference or time value. All relative frequency or time values of the delta markers refer to this frequency reference. For phase noise measurement, input of reference time is not possible.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:X` on page 868

Peak Search ← Phase Noise

Sets the maximum value of the selected trace as the reference point.

Remote command:

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:MAXimum[:PEAK]`
on page 867

Ph. Noise Auto Peak Search ← Phase Noise

Activates an automatic peak search for the reference fixed marker 1 at the end of each particular sweep.

This function can be used to track a drifting source during a phase noise measurement. The delta marker 2, which shows the phase noise measurement result, keeps the delta frequency value. Therefore the phase noise measurement leads to reliable results in a certain offset although the source is drifting. Only if the marker 2 reaches the border of the span, the delta marker value is adjusted to be within the span. In these cases, select a larger span.

Remote command:

`CALCulate<n>:DELTAmarker<m>:FUNCTION:PNOise:AUTO` on page 872

Select Marker (No) ← Phase Noise

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16 / Marker Norm/Delta](#)" on page 201). "(No)" indicates the number of the currently active marker.

See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16 / Marker Norm/Delta](#)" on page 201.

Ref Fixed

Opens a submenu to set all values of a reference point. Instead of using the current values of the reference marker (marker 1) as reference point for the delta markers, level and frequency or time are set to fixed values and used as reference point.

Ref. Fixed On/Off ← Ref Fixed

Switches the relative measurement to a fixed reference value on or off. The level and frequency or time values of marker 1 immediately become the reference point, but can be altered using the corresponding softkeys ("[Ref Point Level](#)" on page 418, "[Ref Point Frequency \(span > 0\)/Ref Point Time \(zero span\)](#)" on page 418 and "[Peak Search](#)" on page 418).

When set to ON, all delta markers which previously referenced marker 1 are automatically set to reference the fixed marker.

The reference marker assignment can be changed using the "Marker Wizard" (see "[Marker Wizard](#)" on page 202).

Remote command:

`CALCulate<n>:DELTAmarker<m>:FUNCTION:FIXed[:STATe]` on page 869

Ref Point Level ← Ref Fixed

Opens an edit dialog box to enter a reference level value. All relative level values of the delta markers refer to this reference level.

Remote command:

`CALCulate<n>:DELTAmarker<m>:FUNCTION:FIXed:RPOint:Y` on page 868

Ref Point Frequency (span > 0)/Ref Point Time (zero span) ← Ref Fixed

Opens an edit dialog box to enter a frequency reference or time value. All relative frequency or time values of the delta markers refer to this frequency reference. For phase noise measurement, input of reference time is not possible.

Remote command:

`CALCulate<n>:DELTaMarker<m>:FUNction:FIXed:RPOint:X` on page 868

Peak Search ← Ref Fixed

Sets the maximum value of the selected trace as the reference point.

Remote command:

`CALCulate<n>:DELTaMarker<m>:FUNction:FIXed:RPOint:MAXimum[:PEAK]`
on page 867

Marker Demod

The marker demodulation function sends the AM data at the current marker frequency (in a bandwidth corresponding to the RBW) to the audio output. The "Marker Demod" softkey opens a submenu to set the demodulation output settings.

For more information see "[AF Demodulation](#)" on page 425.

Marker demodulation is not available for Spectrum Emission Mask measurements.

Mkr Demod On/Off ← Marker Demod

Switches the demodulation output on or off.

For more information see "[AF Demodulation](#)" on page 425.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:DEModulation[:STATe]` on page 875

AM ← Marker Demod

Sets AM as the output demodulation mode. This is the default setting.

For more information see "[AF Demodulation](#)" on page 425.

Remote command:

`CALC:MARK1:FUNC:DEM:SEL AM`, see `CALCulate<n>:MARKer<m>:FUNction:DEModulation:SElect` on page 875

FM ← Marker Demod

Sets FM as the output demodulation mode. Default setting is AM.

For more information see "[AF Demodulation](#)" on page 425.

Remote command:

`CALC:MARK1:FUNC:DEM:SEL FM`, see `CALCulate<n>:MARKer<m>:FUNction:DEModulation:SElect` on page 875

Mkr Stop Time ← Marker Demod

Opens an edit dialog box to define how long demodulation should be output for span > 0.

For more information see "[AF Demodulation](#)" on page 425.

Remote command:

`CALCulate<n>:MARKer<m>:FUNction:DEModulation:HOLDOff` on page 874

Continuous Demod (span > 0) ← Marker Demod

Switches the continuous demodulation on or off. If the sweep time is long enough, the set frequency range can be monitored acoustically.

For more information see "AF Demodulation" on page 425.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:CONTinuous`
on page 874

Squelch ← Marker Demod

Activates the squelch function, i.e. the audible AF is cut off below a defined threshold level. Thus, you avoid hearing noise at the audio output when no signal is available.

The squelch function activates the video trigger function (see "Video" on page 376) and deactivates any other trigger or gating settings. The squelch level and trigger level are set to the same value.

The trigger source in the channel information bar is indicated as "SQL" for squelch. The squelch level is indicated by a red line in the diagram.

Remote command:

`[SENSe:]DEMod:SQUelch[:STATe]` on page 649

Squelch Level ← Marker Demod

Defines the level threshold below which the audible AF is cut off if squelching is enabled. The video trigger level is set to the same value.

The squelch level is indicated by a red line in the diagram.

Remote command:

`[SENSe:]DEMod:SQUelch:LEVel` on page 648

n dB down

Opens an edit dialog box to enter a value to define the level spacing of the two temporary markers to the right and left of marker 1 (default setting: 3 dB). Activates the temporary markers T1 and T2. The values of the temporary markers (T1, T2) and the entered value (ndB) are displayed in the marker field.

If a positive value is entered, the markers T1 and T2 are placed below the active reference marker. If a negative value (e.g. for notch filter measurements) is entered, the markers T1 and T2 are placed above the active reference marker. Marker T1 is placed to the left and marker T2 to the right of the reference marker.

In the marker table, the following results are displayed:

Span setting	Parameter name	Description
span > 0	Bw	frequency spacing of the two temporary markers
	Q factor	quality of the displayed bandwidth value (Bw)
span = 0	PWid	pulse width between the two temporary markers

If it is not possible to form the frequency spacing for the n dB value (e.g. because of noise display), dashes instead of a measured value are displayed.

Remote command:

CALC:MARK1:FUNC:NDBD:STAT ON, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATe](#) on page 878

CALC:MARK1:FUNC:NDBD 3dB, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown](#) on page 876

CALC:MARK1:FUNC:NDBD:RES? , see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESult?](#) on page 877

CALC:MARK:FUNC:NDBD:QFAC?, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:QFACtor](#) on page 877

CALC:MARK1:FUNC:NDBD:FREQ? (span > 0), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:FREQuency?](#) on page 876

CALC:MARK1:FUNC:NDBD:TIME? (span = 0), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME?](#) on page 878

Marker Peak List

Opens the "Peak List" submenu to define criteria for the sort order and the contents of the peak list. For each listed peak the frequency ("Stimulus") and level ("Response") values are given. In addition, the peaks are indicated in the trace display. A maximum of 50 entries are listed.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT?](#) on page 880

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X](#) on page 882

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?](#) on page 883

Peak List On/Off ← Marker Peak List

Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT](#) on page 882

Sort Mode Freq/Lvl ← Marker Peak List

Defines the criteria for sorting:

"Freq" sorting in ascending order of frequency values (span > 0) or time values (span = 0)

"Lvl" sorting in ascending order of the level

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT](#) on page 882

Max Peak Count ← Marker Peak List

Defines the maximum number of peaks to be determined and displayed.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE](#) on page 881

Peak Excursion ← Marker Peak List

Opens an edit dialog box for level measurements to enter the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions. Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

Remote command:

[CALCulate<n>:MARKer<m>:PEXCursion](#) on page 679

Left Limit ← Marker Peak List

Opens an edit dialog box to enter a value for the lower limit (left vertical line: S1 for span > 0; T1 for zero span). The search is performed between the lines of the left and right limit (see also [Right Limit](#) softkey).

Remote command:

[CALCulate<n>:MARKer<m>:X:SLIMits:LEFT](#) on page 689

Right Limit ← Marker Peak List

Opens an edit dialog box to enter a value for the upper limit (left vertical line: S2 for span > 0; T2 for zero span). The search is performed between the lines of the left and right limit (see also [Left Limit](#) softkey). If no value is set, the upper limit corresponds to the stop frequency.

Remote command:

[CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT](#) on page 689

Threshold ← Marker Peak List

Opens an edit dialog box to define the threshold line. The threshold line represents the lower level limit for a "Peak" search and the upper level limit for a "Min" search.

Remote command:

[CALCulate<n>:THReshold:STATe](#) on page 865

[CALCulate<n>:THReshold](#) on page 865

ASCII File Export ← Marker Peak List

Opens the "ASCII File Export Name" dialog box and saves the active peak list in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the marker data. For details on an ASCII file see [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see ["Decim Sep"](#) on page 200).

An example of an output file for Spectrum Emission Mask measurements is given in ["ASCII File Export Format \(Spectrum Emission Mask\)"](#) on page 280.

Remote command:

[FORMat:DEXPort:DSEPARATOR](#) on page 850

[MMEMory:STORe<n>:LIST](#) on page 777

Decim Sep ← Marker Peak List

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

`FORMat:DEXPort:DSEParator` on page 850

Marker Number ← Marker Peak List

If enabled, the determined peaks are indicated by their corresponding marker number in the trace display.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:ANNotation:LABel:STATe`
on page 879

Band Power

Opens a submenu to activate and configure a band power marker. Band power markers allow you to measure the integrated power for a defined span (band) around a marker. The result can be displayed either as a power (dBm) or density (dBm/Hz). The span is indicated by lines in the diagram.

Band power markers are only available for standard frequency measurements in Spectrum mode.

Note: Band Power markers are also available in the I/Q Analyzer, but only for **Spectrum** displays (see "[Display Config](#)" on page 460).

For more information see "[Performing Band Power Measurements](#)" on page 428.

Select Marker (No) ← Band Power

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201). "(No)" indicates the number of the currently active marker.

See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201.

Band Power On/Off ← Band Power

Activates or deactivates the band power marker. When switched to on, if no marker is active yet, marker 1 is activated. Otherwise, the currently active marker is used as a band power marker (all other marker functions for this marker are deactivated). All markers can be defined as band power markers, each with a different span.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTion:BPOWer[:STATe]` on page 885

Span ← Band Power

Defines the span (band) around the marker for which the power is measured. The span is indicated by lines in the diagram.

Remote command:

`CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:SPAN` on page 885

Power ← Band Power

Selects the power mode for the band power marker, i.e. the result is displayed in dBm.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:MODE](#) on page 884

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:RESult?](#) on page 884

Density ← Band Power

Selects the density mode for the band power marker, i.e. the result is displayed in dBm/Hz.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:MODE](#) on page 884

[CALCulate<n>:MARKer<m>:FUNCTION:BPOWer:RESult?](#) on page 884

Setting a Fixed Reference Point (Phase Noise Measurement)

1. Press the [Phase Noise](#) softkey.

The submenu with the [Phase Noise On/Off](#) softkey switched on is displayed. The level and frequency or time values of marker 1 immediately become the reference point.

2. Setting the maximum of the selected trace as reference point, press the [Peak Search](#) softkey.
3. To define the values for the reference point, proceed as follows:
 - a) Press the [Ref Fixed](#) softkey.
 - b) Press the [Ref Point Level](#) softkey and enter a reference level value.
 - c) If span > 0, press the [Ref Point Frequency \(span > 0\)/Ref Point Time \(zero span\)](#) softkey and enter a frequency reference value.
 - d) If span = 0, press the "Ref Point Time" softkey and enter a reference time value (see "[Ref Point Frequency \(span > 0\)/Ref Point Time \(zero span\)](#)" on page 418).

Setting the Demodulation Mode and Duration

1. Press the [Marker Demod](#) softkey.
The submenu with the [Mkr Demod On/Off](#) softkey switched on is displayed.
2. To change the demodulation mode, press the [AM](#) or [FM](#) softkey.
3. For details see "[AF Demodulation](#)" on page 425.
4. To modify the demodulation time for span > 0, press the [Mkr Stop Time](#) softkey.
5. To change to continuous demodulation for span > 0, press the [Continuous Demod \(span > 0\)](#) softkey.

AF Demodulation

The R&S ESR provides demodulators for AM and FM signals. With these demodulators, a displayed signal can be identified acoustically by using headphones.

⚠ CAUTION**Risk of hearing damage**

To protect your hearing, make sure that the volume setting is not too high before putting on the headphones.

The volume for the headphones is controlled using the rotary knob next to the "AF Output" interface on the front panel of the instrument.

For span > 0, the demodulation is not continuous. The frequency at which the demodulation takes place is determined by the active marker. The demodulation bandwidth corresponds to the RBW. If the level of the selected frequency is above the threshold line, the sweep stops for the selected time (stop time) and the RF signal is demodulated. For span = 0, the demodulation is continuously active irrespective of the stop time set.

Frequency Measurement with the Frequency Counter

In order to accurately determine the frequency of a signal, the R&S ESR is equipped with a frequency counter which measures the frequency of the RF signal at the intermediate frequency. Using the measured IF, the R&S ESR calculates the frequency of the RF input signal by applying the known frequency conversion factors.

The frequency measurement uncertainty depends only upon the accuracy of the frequency reference used (external or internal reference). Although the R&S ESR always operates synchronously irrespective of the set span, the frequency counter delivers a more exact result than a measurement performed with a marker. This is due to the following:

- The marker measures only the position of the point on the trace and infers from this value the signal frequency. The trace, however, contains only a limited number of points. Depending upon the selected span, each point may contain many measurement values, which therefore limits the frequency resolution.
- The resolution with which the frequency can be measured with a marker is dependent on the selected resolution bandwidth, which in return affects the necessary measurement time. For this reason, the bandwidth is normally defined as wide as possible and the sweep time as short as possible. This results in a loss of frequency resolution. For the measurement with the frequency counter, the sweep is stopped at the reference marker, the frequency is counted with the desired resolution and then the sweep is allowed to continue.
In I/Q Analyzer mode (see [Chapter 7, "I/Q Analyzer"](#), on page 458), the resolution with which the frequency can be measured with a marker is always the filter bandwidth, which is derived from the defined sample rate.

Measurement of Noise Density

During noise measurement, the noise power density is measured at the position of the marker. For span = 0, all points of the trace are used to determine the noise power density. For span > 0, two points to the right and left of the marker are used for the measurement to obtain a stable result.

The noise power density is indicated in the marker field. With logarithmic amplitude units (dBm, dBmV, dBm μ V, dB μ A), the noise power density is output in dBm/Hz, i.e. as level in 1 Hz bandwidth with reference to 1 mW. With linear amplitude units (V, A, W), the noise voltage density is evaluated in μ V/Hz, the noise current density in μ A/Hz or the noise power density in μ W/Hz.

In the default setting, the R&S ESR uses the sample detector for the noise function.

With the sample detector, the trace can additionally be set to AVERAGE to stabilize the measured values. With RMS detector used, trace averaging must not be used since in this case it produces too low noise levels which cannot be corrected. Instead, the sweep time can be increased to obtain stable measurement results.

Prerequisite settings

The following settings have to be made to ensure that the power density measurement yields correct values:

- Detector: Sample or RMS
- Video bandwidth:
 - ≤ 0.1 resolution bandwidth with sample detector
 - $\geq 3 \times$ resolution bandwidth with RMS detector
- Trace averaging:

With the sample detector, the trace can additionally be set to average to stabilize the measured values. With RMS detector used, trace averaging must not be used since in this case it produces too low noise levels which cannot be corrected. Instead, the sweep time can be increased to obtain stable measurement results.

Correction factors

The R&S ESR uses the following correction factors to evaluate the noise density from the marker level:

- Since the noise power is indicated with reference to 1 Hz bandwidth, the bandwidth correction value is deducted from the marker level. It is $10 \times \lg(1 \text{ Hz}/\text{BWNoise})$, where BWNoise is the noise or power bandwidth of the set resolution filter (RBW).
- RMS detector: With the exception of bandwidth correction, no further corrections are required since this detector already indicates the power with every point of the trace.
- Sample detector: As a result of video filter averaging and trace averaging, 1.05 dB is added to the marker level. This is the difference between the average value and the RMS value of white noise. With a logarithmic level axis, 1.45 dB is added additionally. Logarithmic averaging is thus fully taken into account which yields a value that is 1.45 dB lower than that of linear averaging.
- To allow a more stable noise display the adjacent (symmetric to the measurement frequency) points of the trace are averaged.
- For span > 0 , the measured values are averaged versus time (after a sweep).



The R&S ESR noise figure can be calculated from the measured power density level. It is calculated by deducting the set RF attenuation (RF Att) from the displayed noise level and adding 174 to the result.

Measurement example for Phase Noise Auto Peak Search

The phase noise of a CW signal at 100 MHz with 0 dBm level is to be measured at 800 kHz from the carrier.


1. [PRESET]
The R&S FSP is set to the default setting.
2. [FREQ] > "CENTER": 100 MHz
The center frequency is set to 100 MHz.
3. [SPAN]: 2 MHz
The span is set to 2 MHz.
4. [AMPT]: 0 dBm
The reference level is set to 0 dBm.
5. [MKR FCTN] > "MARKER 1"
Marker 1 is switched on and positioned at the maximum of the displayed trace.
6. "PHASE NOISE": 800 kHz
The phase noise measurement is switched on. The delta marker is positioned on the main marker and the measured phase noise value is displayed in the marker info field. The sample detector is used and the video bandwidth is set to $3 \times \text{RBW}$. When the phase noise measurement function is enabled, the entry of the delta marker frequency is activated. It can be entered directly.

Performing Band Power Measurements

Band power markers allow you to measure the integrated power (similar to ACP measurements) for a defined span (band) around a marker. By default, 5 % of the current span is used. The span is indicated by colored lines in the diagram. The result can be displayed either as a power (dBm) or density (dBm/Hz).



Band power markers are only available for standard frequency measurements in Spectrum mode (not zero span, I/Q Analyzer etc.).

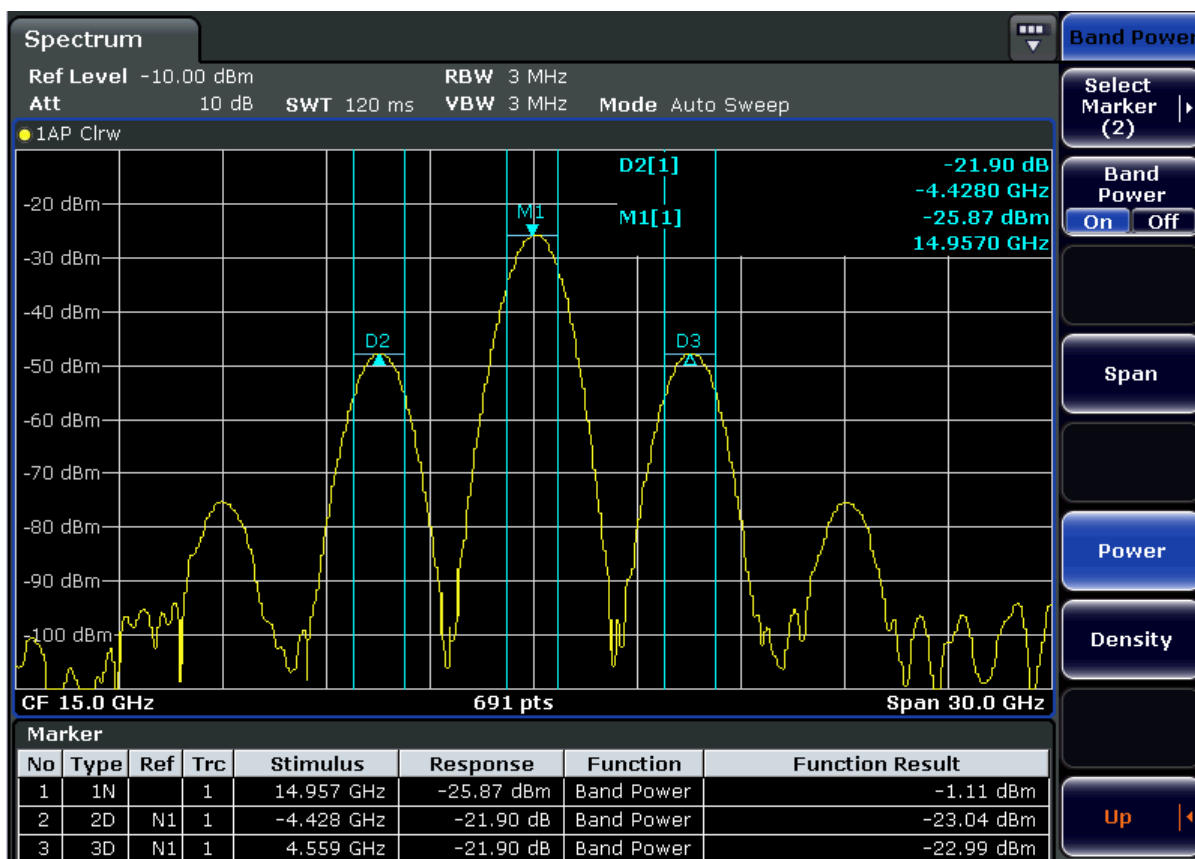

All markers can be defined as band power markers, each with a different span. When a band power marker is activated, if no marker is active yet, marker 1 is activated. Otherwise, the currently active marker is used as a band power marker (all other marker functions for this marker are deactivated).

If the detector mode for the marker trace is set to "AutoSelect", the RMS detector is used.

1. In the [MKR FUNC] menu, press "Band Power".
2. In the "Band Power" menu, press "Span" and enter the width of the band around the marker for which the power is to be measured.
3. To display the measurement result in dBm/Hz, press "Density". By default, the result is displayed as a power in dBm.
4. Press "Band Power On" to activate the band power marker.

The measurement results are displayed as usual in the marker table or in the diagram.

6.3.4 Lines

The [LINES] key is used to configure limit and display lines.

To open the Lines menu

- Press the [LINES] key.

The "Lines" menu and the "Select Limit Line" dialog box are displayed. For details on the "Select Limit Line" dialog box refer to [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215.

Menu and softkey description

- [Chapter 5.4.3.1, "Softkeys of the Lines Menu"](#), on page 209

Further information

- [Chapter 5.4.3.2, "Display Lines"](#), on page 213
- [Chapter 5.4.3.3, "Limit Lines \(Frequency/Time Lines\)"](#), on page 214

Tasks

- [Chapter 5.4.3.4, "Working with Lines"](#), on page 215
- [Chapter 5.4.3.5, "Selecting a Limit Line"](#), on page 215
- [Chapter 5.4.3.6, "Creating a New Limit Line"](#), on page 216
- [Chapter 5.4.3.7, "Editing an Existing Limit Line"](#), on page 219
- [Chapter 5.4.3.8, "Creating a New Limit Line Based upon an Existing Limit Line"](#), on page 219
- [Chapter 5.4.3.9, "Activating/Deactivating a Limit Line"](#), on page 220

6.4 Advanced Measurement Examples

This chapter explains how to operate the R&S ESR in spectrum mode using typical measurements as examples. Additional background information on the settings is given. For more detailed information on all available softkeys and the corresponding instrument functions, see [Chapter 6, "Spectrum Measurements"](#), on page 221.

• Test Setup	430
• Measurement of Harmonics	431
• Measuring the Spectra of Complex Signals	433
• Measuring Signals in the Vicinity of Noise	436
• Noise Measurements	441
• Measurements on Modulated Signals	448

6.4.1 Test Setup

All of the following examples are based on the standard settings of the R&S ESR. These are set with the PRESET key. A complete listing of the standard settings can be found in chapter "Instrument Functions", section "Initializing the Configuration – PRE-SET Key".

In the following examples, a signal generator is used as a signal source. The RF output of the signal generator is connected to the RF input of R&S ESR.

If a 64 MHz signal is required for the test setup, as an alternative to the signal generator, the internal 64 MHz reference generator can be used:

1. Switch on the internal reference generator.
 - a) Press the SETUP key.
 - b) Press the "More" key.
 - c) Press the "Service" softkey.
 - d) Press the "Input RF/Cal" softkey, until "Cal" is highlighted.
The internal 64 MHz reference generator is now on. The R&S ESR's RF input is switched off.

2. Switch on the RF input again for normal operation of the R&S ESR. Two ways are possible:
 - a) Press the PRESET key.
or:
 - b) Press the SETUP key.
 - c) Press the "Service" softkey.
 - d) Press the "Input RF/Cal" softkey, until "RF" is highlighted.
The internal signal path of the R&S ESR is switched back to the RF input in order to resume normal operation.

6.4.2 Measurement of Harmonics

Signal generator settings (e.g. R&S SMW):

Frequency:	128 MHz
Level:	- 25 dBm

Procedure on the R&S ESR:

1. Set the R&S ESR to its default state by pressing the [PRESET] key.
2. Set the center frequency to *128 MHz* and the span to *100 kHz*.
3. Switch on the marker by pressing the [MKR] key.
The marker is positioned on the trace maximum.
4. Set the measured signal frequency and the measured level as reference values.
 - a) Press the [MKR FUNC] key
 - b) Press the "Ref Fixed" softkey.
The position of the marker becomes the reference point. The reference point level is indicated by a horizontal line, the reference point frequency with a vertical line. At the same time, the delta marker 2 is switched on.

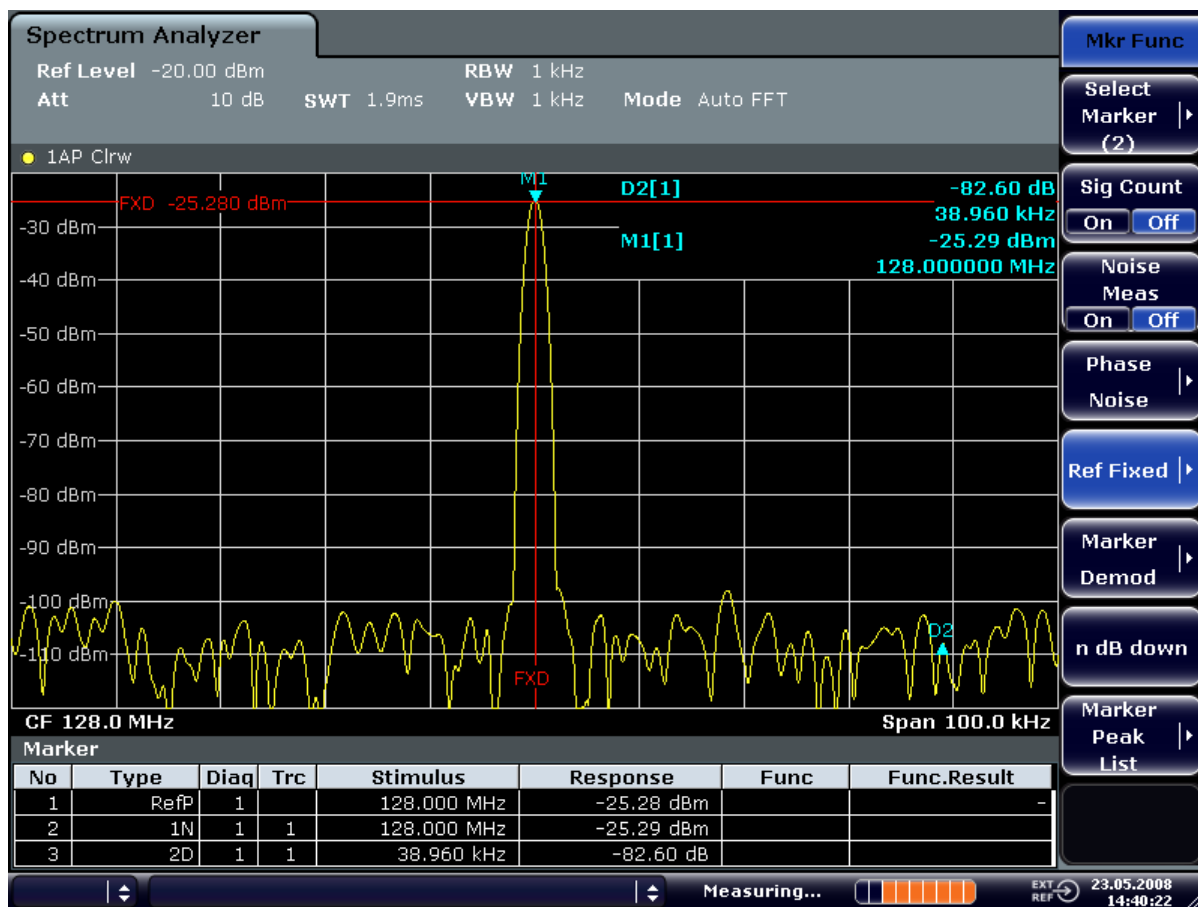


Figure 6-22: Fundamental wave and the frequency and level reference point

5. Make the step size for the center frequency equal to the signal frequency
 - a) Press the [FREQ] key.
 - b) Press the "CF-Stepsize" softkey and press the "= Marker" softkey in the sub-menu.

The step size for the center frequency is now equal to the marker frequency.

6. Set the center frequency to the second harmonic of the signal.
 - a) Press the [FREQ] key.
 - b) Press the [UPARROW] key once.

The center frequency is set to the second harmonic.

7. Place the delta marker on the second harmonic.

- a) Press the [MKR ->] key.
- b) Press the "Peak" softkey.

The delta marker moves to the maximum of the second harmonic. The displayed level result is relative to the reference point level (= fundamental wave level).

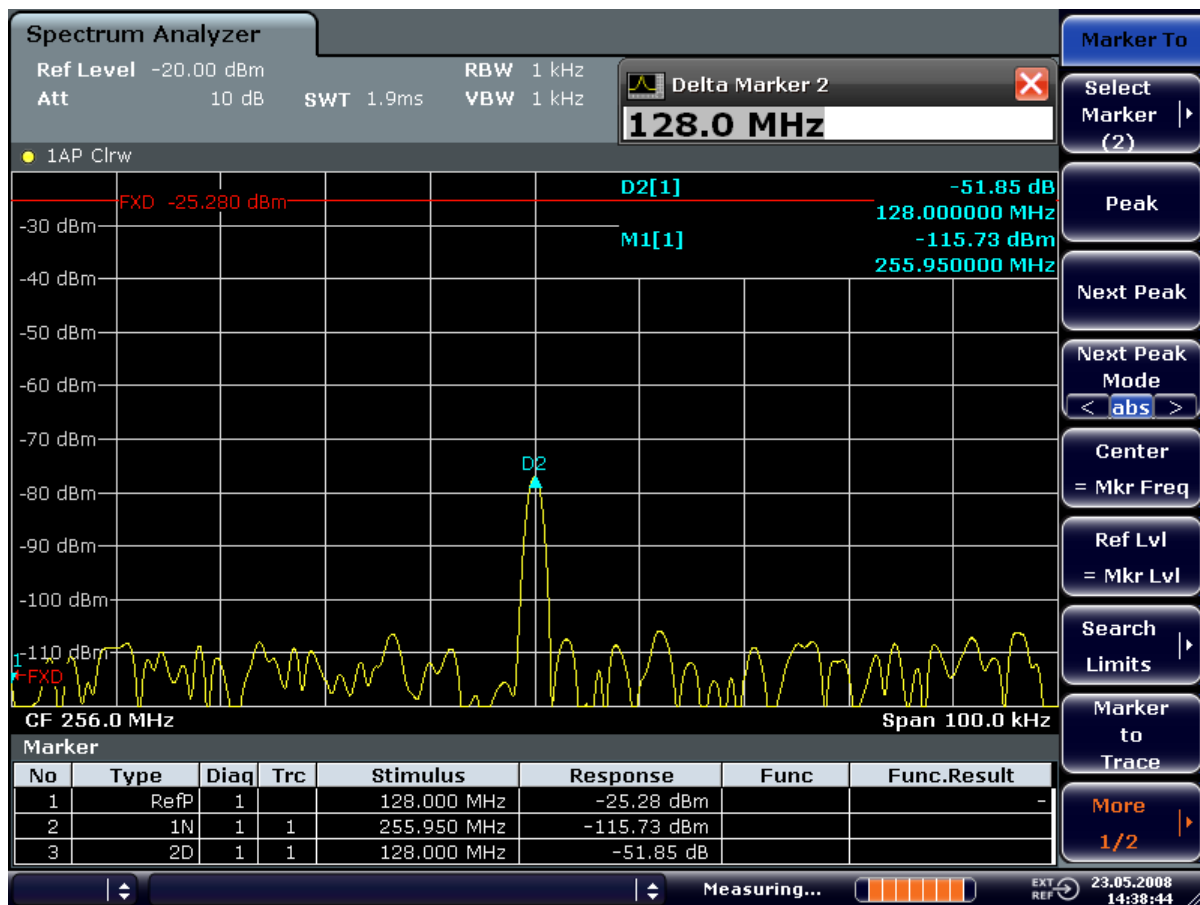


Figure 6-23: Measuring the level difference between the fundamental wave (= reference point level) and the 2nd harmonic

The other harmonics are measured with steps 5 and 6, the center frequency being incremented or decremented in steps of 128 MHz using the [UPARROW] or [DNARROW] key.

6.4.3 Measuring the Spectra of Complex Signals

6.4.3.1 Separating Signals by Selecting an Appropriate Resolution Bandwidth

A basic feature of a signal analyzer is being able to separate the spectral components of a mixture of signals. The resolution at which the individual components can be separated is determined by the resolution bandwidth. Selecting a resolution bandwidth that is too large may make it impossible to distinguish between spectral components, i.e. they are displayed as a single component.

An RF sinusoidal signal is displayed by means of the passband characteristic of the resolution filter (RBW) that has been set. Its specified bandwidth is the 3 dB bandwidth of the filter.

Two signals with the same amplitude can be resolved if the resolution bandwidth is smaller than or equal to the frequency spacing of the signal. If the resolution bandwidth is equal to the frequency spacing, the spectrum display screen shows a level drop of 3 dB precisely in the center of the two signals. Decreasing the resolution bandwidth makes the level drop larger, which thus makes the individual signals clearer.

If there are large level differences between signals, the resolution is determined by selectivity as well as by the resolution bandwidth that has been selected. The measure of selectivity used for signal analyzers is the ratio of the 60 dB bandwidth to the 3 dB bandwidth (= shape factor).

For the R&S ESR, the shape factor for bandwidths is < 5 , i.e. the 60 dB bandwidth of the 30 kHz filter is < 150 kHz.


The higher spectral resolution with smaller bandwidths is won by longer sweep times for the same span. The sweep time has to allow the resolution filters to settle during a sweep at all signal levels and frequencies to be displayed.

6.4.3.2 Intermodulation Measurements

If several signals are applied to a transmission two-port device with nonlinear characteristic, intermodulation products appear at its output at the sums and differences of the signals. The nonlinear characteristic produces harmonics of the useful signals which intermodulate at the characteristic. The intermodulation products of lower order have a special effect since their level is largest and they are near the useful signals. The intermodulation product of third order causes the highest interference. It is the intermodulation product generated from one of the useful signals and the 2nd harmonic of the second useful signal in case of two-tone modulation.

Measurement Example – Measuring the R&S ESR's Intrinsic Intermodulation

Test setup:

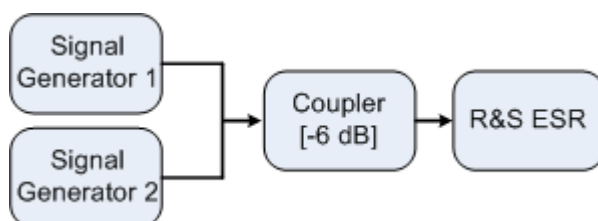

Signal generator settings (e.g. R&S SMW):

	Level	Frequency
Signal generator 1	-4 dBm	999.7 MHz
Signal generator 2	-4 dBm	1000.3 MHz

Setting up the measurement

1. Set the R&S ESR to its default settings by pressing the [PRESET] key.

The R&S ESR is in its default state.

2. Set center frequency to 1 GHz and the frequency span to 3 MHz.
3. Set the reference level to -10 dBm and RF attenuation to 0 dB.
4. Set the resolution bandwidth to 10 kHz.
The noise is reduced, the trace is smoothed further and the intermodulation products can be clearly seen.
5. Set the VBW to "1 kHz".

Measuring intermodulation using the 3rd order intercept (TOI) measurement function

1. Press the [MEAS] key and then the "TOI" softkey.

The R&S ESR activates four markers to measure the intermodulation distance. Two markers are positioned on the useful signals and two on the intermodulation products. The 3rd order intercept is calculated from the level difference between the useful signals and the intermodulation products. It is then displayed on the screen:


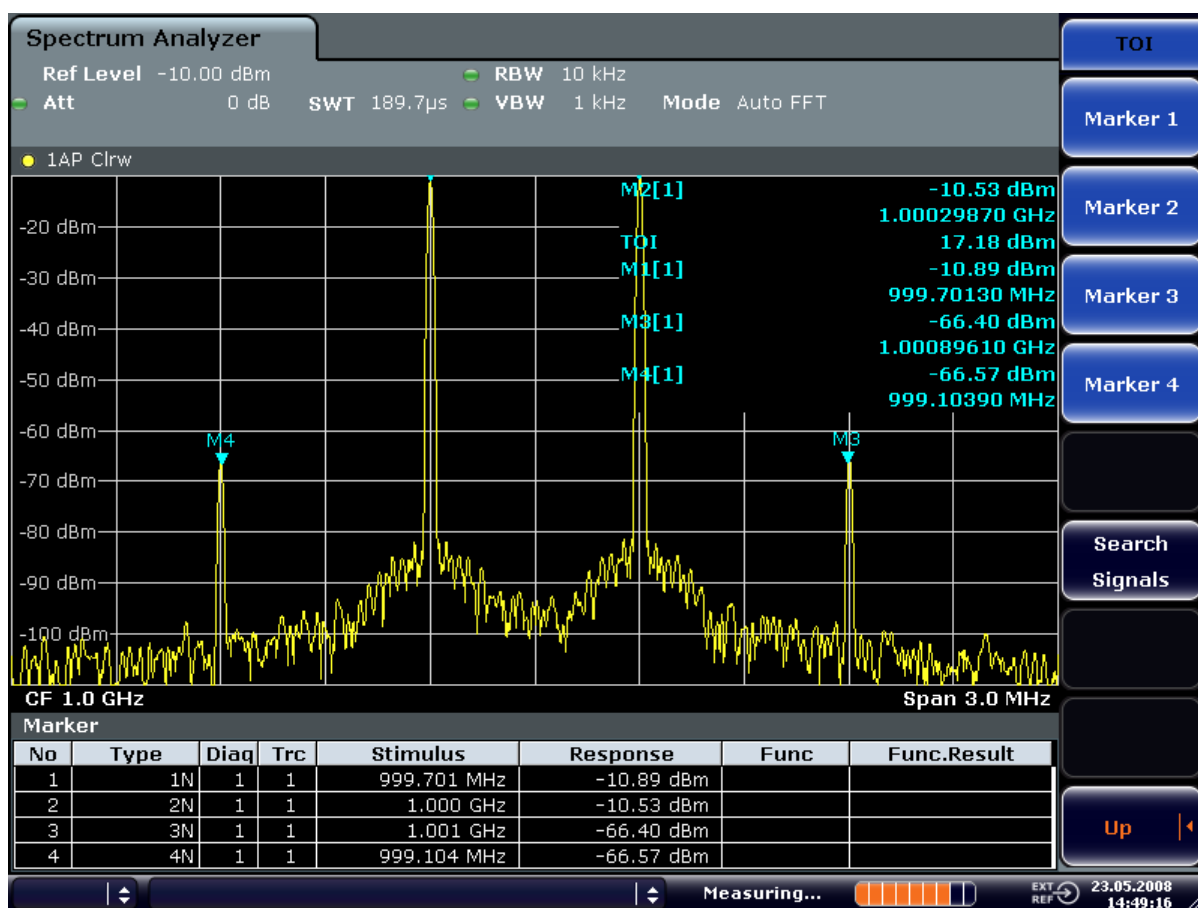


Figure 6-24: Result of intrinsic intermodulation measurement on the R&S ESR.

The 3rd order intercept (TOI) is displayed at the top right corner of the grid.

- The level of a signal analyzer's intrinsic intermodulation products depends on the RF level of the useful signals at the input mixer. When the RF attenuation is added, the mixer level is reduced and the intermodulation distance is increased. With an additional RF attenuation of 10 dB, the levels of the intermodulation products are reduced by 20 dB. The noise level is, however, increased by 10 dB. Increase the RF attenuation to 20 dB to reduce intermodulation products.

The R&S ESR's intrinsic intermodulation products disappear below the noise floor.

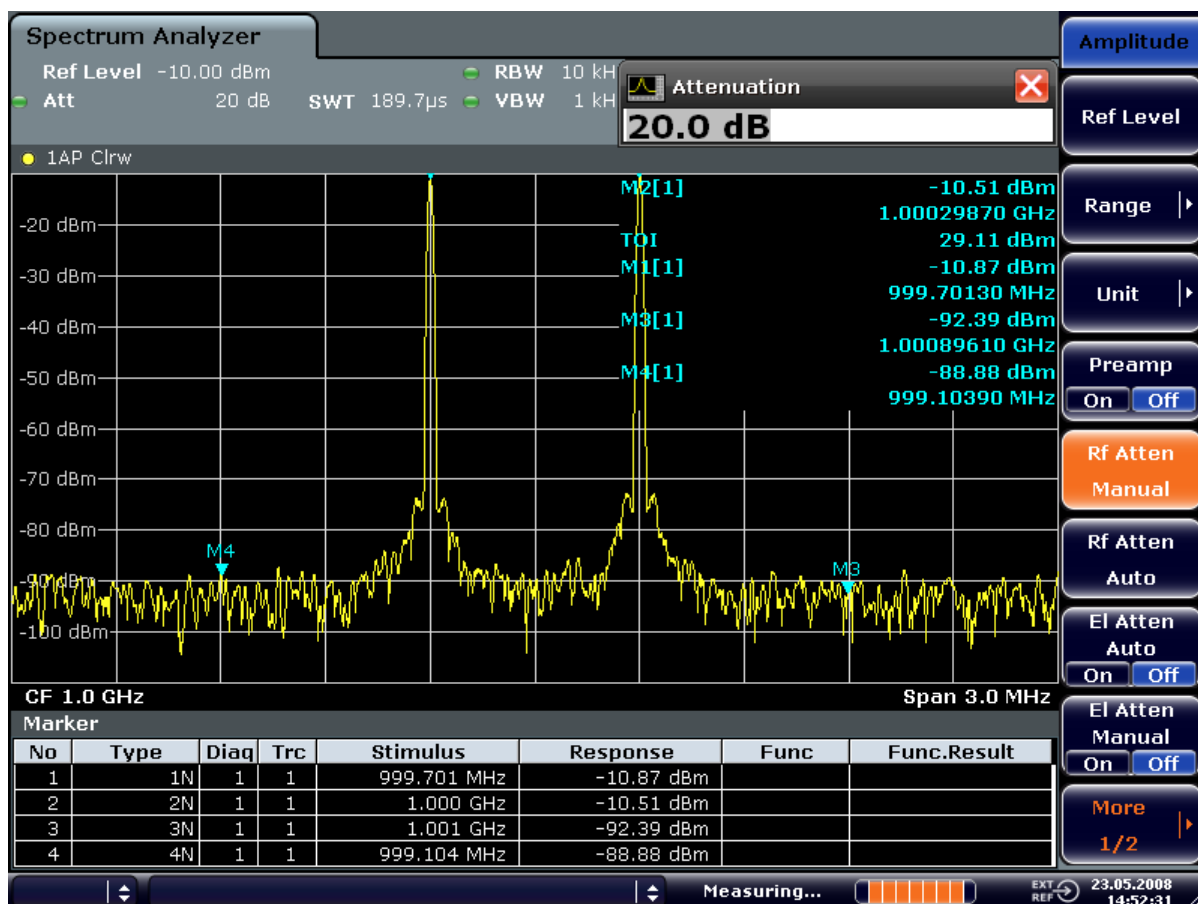

6.4.4 Measuring Signals in the Vicinity of Noise

The minimum signal level a signal analyzer can measure is limited by its intrinsic noise. Small signals can be swamped by noise and therefore cannot be measured. For signals that are just above the intrinsic noise, the accuracy of the level measurement is influenced by the intrinsic noise of the signal analyzer.

The displayed noise level of a signal analyzer depends on its noise figure, the selected RF attenuation, the selected reference level, the selected resolution and video bandwidth and the detector. The effect of the different parameters is explained in the following.

Impact of the RF attenuation setting

The sensitivity of a signal analyzer is directly influenced by the selected RF attenuation. The highest sensitivity is obtained at a RF attenuation of 0 dB. The attenuation can be set in 10 dB steps up to 70 dB. Each additional 10 dB step reduces the sensitivity by 10 dB, i.e. the displayed noise is increased by 10 dB.

Impact of the resolution bandwidth

The sensitivity of a signal analyzer also directly depends on the selected bandwidth. The highest sensitivity is obtained at the smallest bandwidth (1 Hz). If the bandwidth is increased, the reduction in sensitivity is proportional to the change in bandwidth. The R&S ESR has bandwidth settings in 1, 2, 3, 5 sequence. Increasing the bandwidth by a factor of 3 increases the displayed noise by approx. 5 dB (4.77 dB precisely). If the bandwidth is increased by a factor of 10, the displayed noise increases by a factor of 10, i.e. 10 dB.

Impact of the video bandwidth

The displayed noise of a signal analyzer is also influenced by the selected video bandwidth. If the video bandwidth is considerably smaller than the resolution bandwidth, noise spikes are suppressed, i.e. the trace becomes much smoother. The level of a sine wave signal is not influenced by the video bandwidth. A sine wave signal can therefore be freed from noise by using a video bandwidth that is small compared with the resolution bandwidth, and thus be measured more accurately.

Impact of the detector

Noise is evaluated differently by the different detectors. The noise display is therefore influenced by the choice of detector. Sine wave signals are weighted in the same way by all detectors, i.e. the level display for a sine wave RF signal does not depend on the selected detector, provided that the signal-to-noise ratio is high enough. The measurement accuracy for signals in the vicinity of intrinsic signal analyzer noise is also influenced by the detector which has been selected. For details on the detectors of the R&S ESR refer to chapter "Instrument Functions", section "Detector overview" or the Online Help.

6.4.4.1 Measurement Example – Measuring Level at Low S/N Ratios

The example shows the different factors influencing the S/N ratio.

Signal generator settings (e.g. R&S SMW):

Frequency:	128 MHz
Level:	- 90 dBm

Procedure:

1. Set the R&S ESR to its default state by pressing the PRESET key.
The R&S ESR is in its default state.

2. Set the center frequency to 128 MHz and the frequency span to 100 MHz:
 - a) Press the **FREQ** key and enter "128 MHz".
 - b) Press the **SPAN** key and enter "100 MHz".

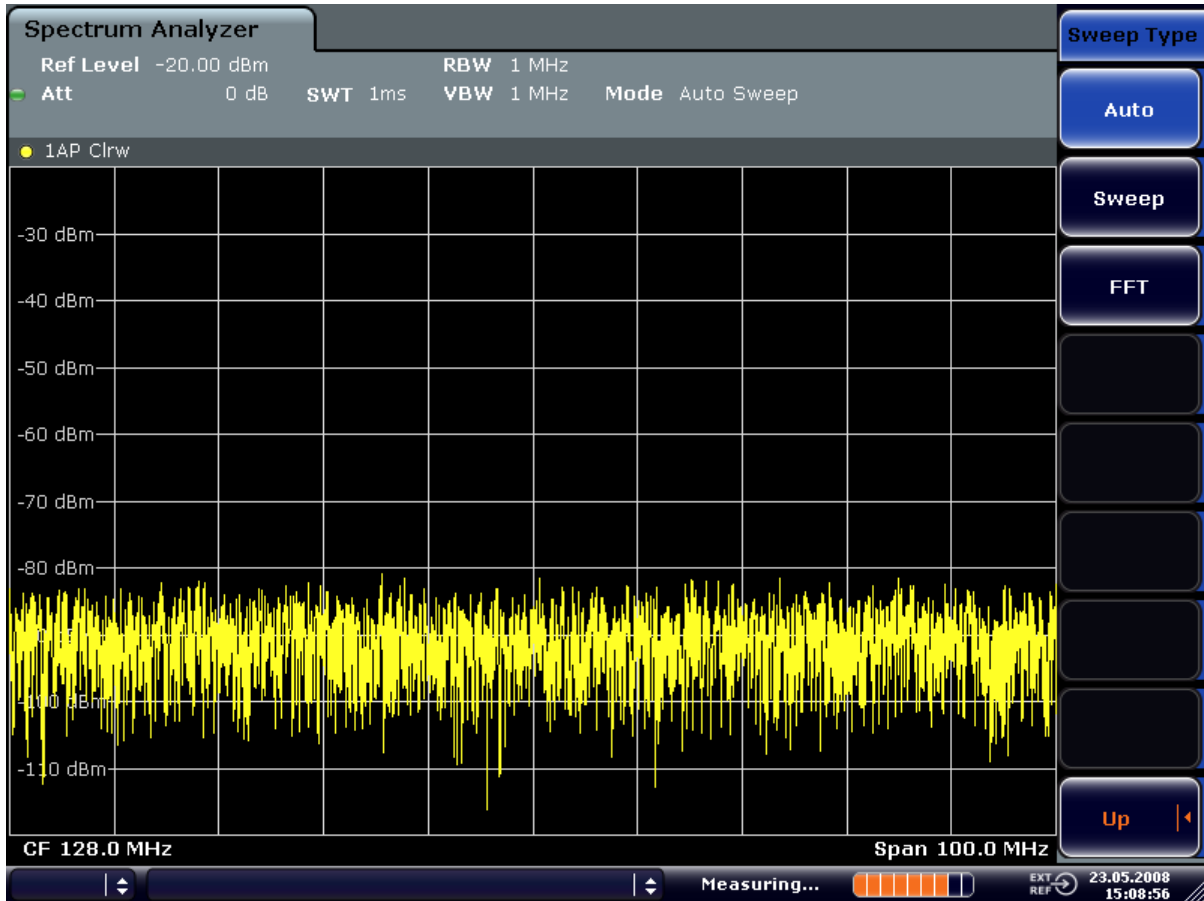


Figure 6-25: Sine wave signal with low S/N ratio. The signal is measured with the auto peak detector and is completely hidden in the intrinsic noise of the R&S ESR.

3. To suppress noise spikes the trace can be averaged.
 - a) Press the **TRACE** key.
 - b) Press the "Trace Wizard" softkey.
The Trace Wizard dialog box opens.

- c) Select "Average" in the "Trace Mode" drop-down menu of the selected trace. The traces of consecutive sweeps are averaged. To perform averaging, the R&S ESR automatically switches on the sample detector. The RF signal, therefore, can be more clearly distinguished from noise.

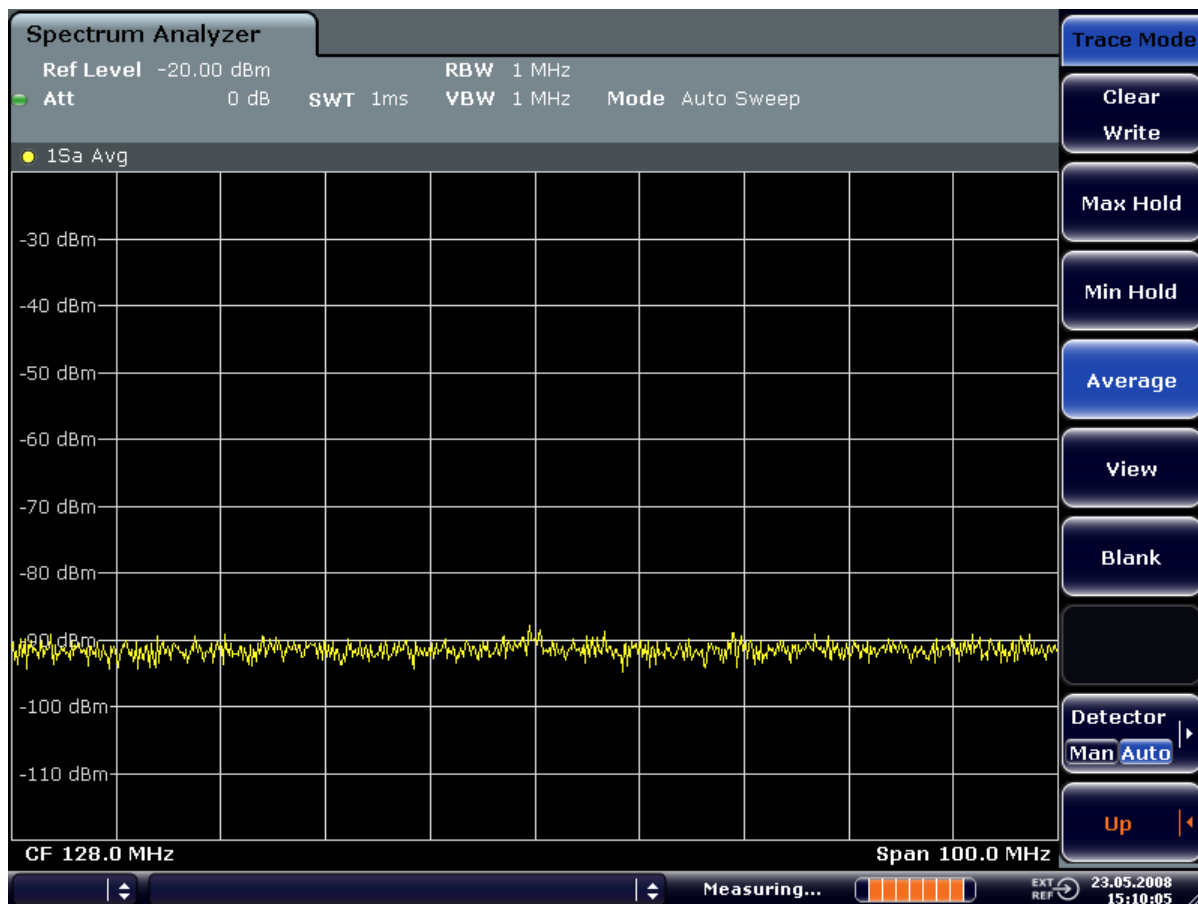


Figure 6-26: RF sine wave signal with low S/N ratio if the trace is averaged.

4. Instead of trace averaging, a video filter that is narrower than the resolution bandwidth can be selected:
 - a) Press the TRACE key.
 - b) Press the "Trace Wizard" softkey.
The Trace Wizard dialog box opens.
 - c) Select "Clear Write" in the "Trace Mode" drop-down menu of the selected trace.
 - d) Press the BW key.

- e) Press the "Video BW Manual" softkey and enter "10 kHz".
The RF signal can be more clearly distinguished from noise.

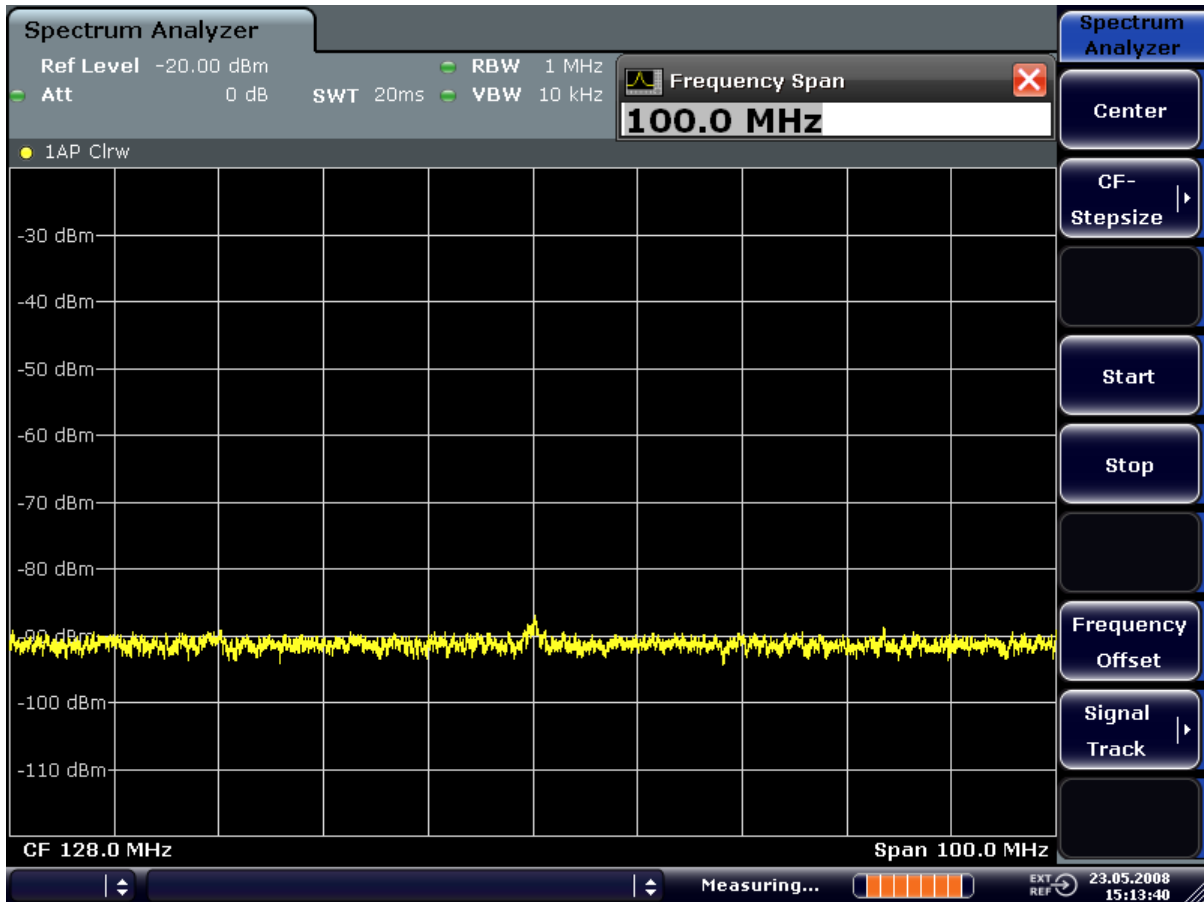


Figure 6-27: RF sine wave signal with low S/N ratio if a smaller video bandwidth is selected.

5. By reducing the resolution bandwidth by a factor of 10, the noise is reduced by 10 dB:

- a) In the "Bandwidth" menu press the "Res BW Manual" softkey and enter "100 kHz".

The displayed noise is reduced by approx. 10 dB. The signal, therefore, emerges from noise by about 10 dB. Compared to the previous setting, the video bandwidth has remained the same, i.e. it has increased relative to the smaller resolution bandwidth. The averaging effect of the video bandwidth is therefore reduced. The trace will be noisier.

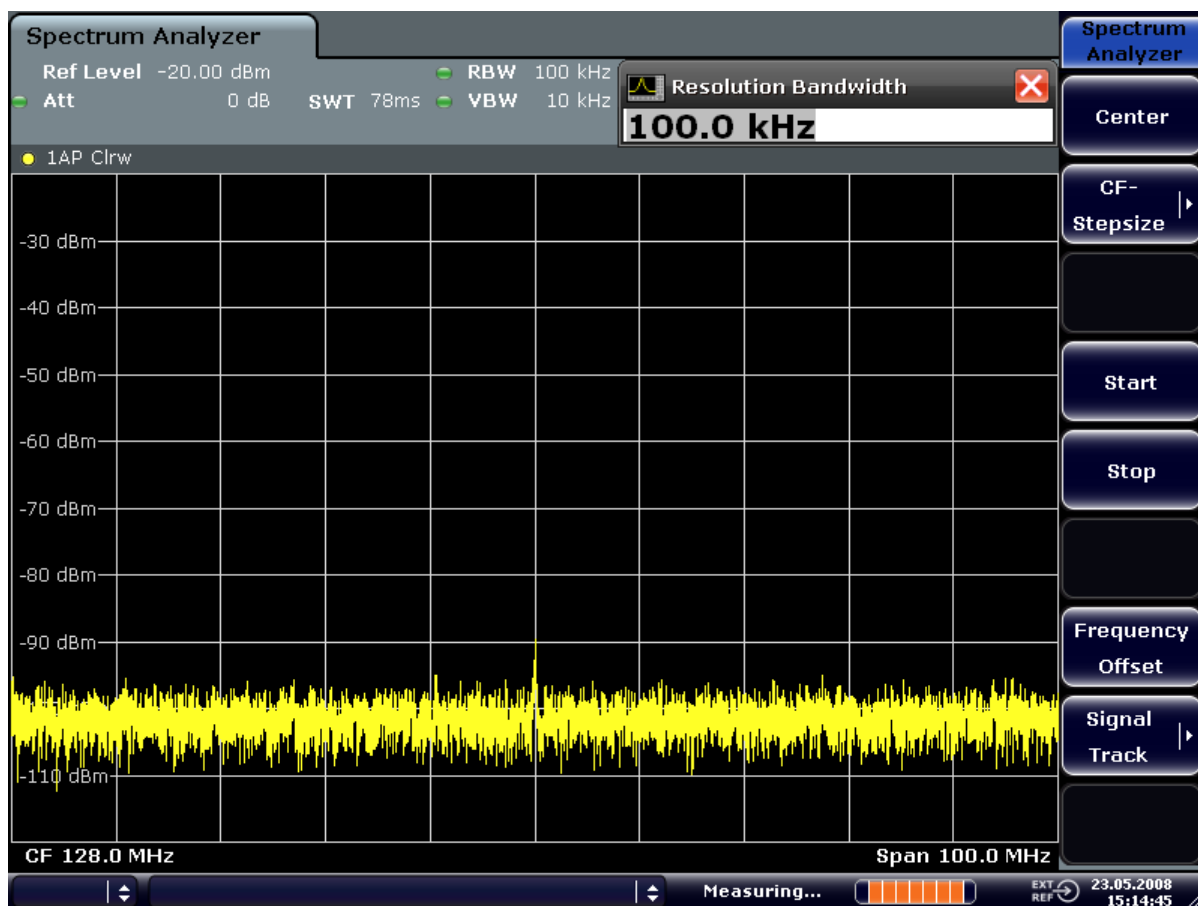


Figure 6-28: Reference signal at a smaller resolution bandwidth

6.4.5 Noise Measurements

Noise measurements play an important role in signal analysis. Noise e.g. affects the sensitivity of radio communication systems and their components.

Noise power is specified either as the total power in the transmission channel or as the power referred to a bandwidth of 1 Hz. The sources of noise are, for example, amplifier noise or noise generated by oscillators used for the frequency conversion of useful signals in receivers or transmitters. The noise at the output of an amplifier is determined by its noise figure and gain.

The noise of an oscillator is determined by phase noise near the oscillator frequency and by thermal noise of the active elements far from the oscillator frequency. Phase noise can mask weak signals near the oscillator frequency and make them impossible to detect.

6.4.5.1 Measuring Noise Power Density

To measure noise power referred to a bandwidth of 1 Hz at a certain frequency, the R&S ESR provides marker function. This marker function calculates the noise power density from the measured marker level.

Measurement Example – Measuring the Intrinsic Noise Power Density of the R&S ESR at 1 GHz and Calculating the R&S ESR's Noise Figure

Test setup:

- ▶ Connect no signal to the RF input; terminate RF input with 50 Ω .

Procedure:

1. Set the R&S ESR to its default state by pressing the PRESET key.
The R&S ESR is in its default state.
2. Set the center frequency to 1.234 GHz and the span to 1 MHz.
 - a) Press the FREQ key and enter "1.234 GHz".
 - b) Press the SPAN key and enter "1 MHz".
3. Switch on the marker and set the marker frequency to 1.234 GHz by pressing the MKR key and entering "1.234 GHz".
4. Switch on the noise marker function by switching on the "Noise Meas" softkey.
 - a) Press the MKR FUNC key.
 - b) Switch the "Noise Meas" softkey to "On"
The R&S ESR displays the noise power at 1.234 GHz in dBm (1Hz).

Note: Since noise is random, a sufficiently long measurement time has to be selected to obtain stable measurement results. This can be achieved by averaging the trace or by selecting a very small video bandwidth relative to the resolution bandwidth.

5. The measurement result is stabilized by averaging the trace.
 - a) Press the TRACE key.
 - b) Press the "Trace Wizard" softkey.
The Trace Wizard dialog box opens.
 - c) Select "Average" in the "Trace Mode" drop-down menu of the selected trace.
The R&S ESR performs sliding averaging over 10 traces from consecutive sweeps.
The measurement result becomes more stable.

Conversion to other reference bandwidths

The result of the noise measurement can be referred to other bandwidths by simple conversion. This is done by adding $10 \times \log(\text{BW})$ to the measurement result, BW being the new reference bandwidth.

Example:

A noise power of -150 dBm (1 Hz) is to be referred to a bandwidth of 1 kHz.

$$P_{[1\text{kHz}]} = -150 + 10 \times \log(1000) = -150 + 30 = -120 \text{ dBm (1 kHz)}$$

Calculation method for noise power

If the noise marker is switched on, the R&S ESR automatically activates the sample detector. The video bandwidth is set to 1/10 of the selected resolution bandwidth (RBW).

To calculate the noise, the R&S ESR takes an average over 17 adjacent pixels (the pixel on which the marker is positioned and 8 pixels to the left, 8 pixels to the right of the marker). The measurement result is stabilized by video filtering and averaging over 17 pixels.

Since both video filtering and averaging over 17 trace points is performed in the log display mode, the result would be 2.51 dB too low (difference between logarithmic noise average and noise power). The R&S ESR, therefore, corrects the noise figure by 2.51 dB.

To standardize the measurement result to a bandwidth of 1 Hz, the result is also corrected by $-10 \times \log(\text{RBW}_{\text{noise}})$, with $\text{RBW}_{\text{noise}}$ being the power bandwidth of the selected resolution filter (RBW).

Detector selection

The noise power density is measured in the default setting with the sample detector and using averaging. Other detectors that can be used to perform a measurement giving true results are the average detector or the RMS detector. If the average detector is used, the linear video voltage is averaged and displayed as a pixel. If the RMS detector is used, the squared video voltage is averaged and displayed as a pixel. The averaging time depends on the selected sweep time ($=\text{SWT}/501$). An increase in the sweep time gives a longer averaging time per pixel and thus stabilizes the measurement result. The R&S ESR automatically corrects the measurement result of the noise marker display depending on the selected detector (+1.05 dB for the average detector, 0 dB for the RMS detector). It is assumed that the video bandwidth is set to at least three times the resolution bandwidth. While the average or RMS detector is being switched on, the R&S ESR sets the video bandwidth to a suitable value.

The Pos Peak, Neg Peak, Auto Peak and Quasi Peak detectors are not suitable for measuring noise power density.

Determining the noise figure

The noise figure of amplifiers or of the R&S ESR alone can be obtained from the noise power display. Based on the known thermal noise power of a 50 Ω resistor at room

temperature (-174 dBm (1Hz)) and the measured noise power P_{noise} the noise figure (NF) is obtained as follows:

$$\text{NF} = P_{\text{noise}} + 174 - g,$$

where g = gain of DUT in dB

Example:

The measured internal noise power of the R&S ESR at an attenuation of 0 dB is found to be -143 dBm/1 Hz. The noise figure of the R&S ESR is obtained as follows

$$\text{NF} = -143 + 174 = 31 \text{ dB}$$



If noise power is measured at the output of an amplifier, for example, the sum of the internal noise power and the noise power at the output of the DUT is measured. The noise power of the DUT can be obtained by subtracting the internal noise power from the total power (subtraction of linear noise powers). By means of the following diagram, the noise level of the DUT can be estimated from the level difference between the total and the internal noise level.

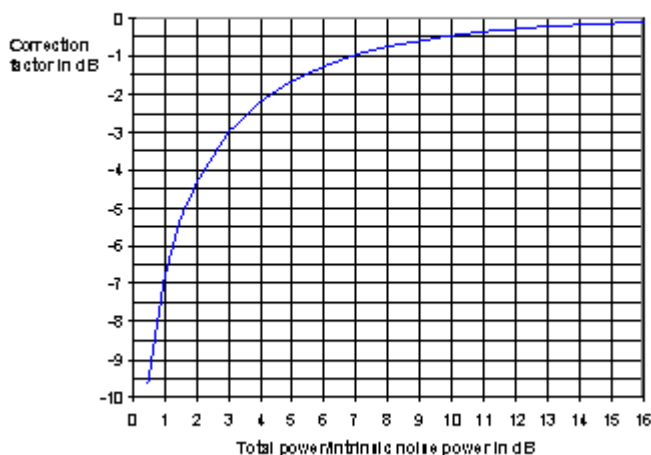


Figure 6-29: Correction factor for measured noise power as a function of the ratio of total power to the intrinsic noise power of the signal analyzer

6.4.5.2 Measurement of Noise Power within a Transmission Channel

Noise in any bandwidth can be measured with the channel power measurement functions. Thus the noise power in a communication channel can be determined, for example. If the noise spectrum within the channel bandwidth is flat, the noise marker from the previous example can be used to determine the noise power in the channel by considering the channel bandwidth. If, however, phase noise and noise that normally increases towards the carrier is dominant in the channel to be measured, or if there are

discrete spurious signals in the channel, the channel power measurement method must be used to obtain correct measurement results.

Measurement Example – Measuring the Intrinsic Noise of the R&S ESR at 1 GHz in a 1.23 MHz Channel Bandwidth with the Channel Power Function

Test setup:

- ▶ Leave the RF input of the R&S ESR open-circuited or terminate it with 50 Ω .

Procedure:

1. Set the R&S ESR to its default state by pressing the [PRESET] key.
The R&S ESR is in its default state.
2. Set the center frequency to 1 GHz and the span to 1 MHz.
3. To obtain maximum sensitivity, set RF attenuation on the R&S ESR to 0 dB.
4. Set the "Sweep Type" to "Sweep".
5. Switch on and configure the channel power measurement.
 - a) Press the [MEAS] key.
 - b) Press the "Ch Power/ACLR" softkey.
The R&S ESR activates the channel or adjacent channel power measurement according to the currently set configuration.
 - c) Press the "CP/ACLR Settings" softkey.
 - d) Press the "Channel Settings" softkey.
 - e) Press the "Channel Bandwidth" softkey and enter 1.23 MHz.
The R&S ESR displays the 1.23 MHz channel as two vertical lines which are symmetrical to the center frequency.

- f) Press the "Adjust Settings" softkey.
The settings for the frequency span, the bandwidth (RBW and VBW) and the detector are automatically set to the optimum values required for the measurement.

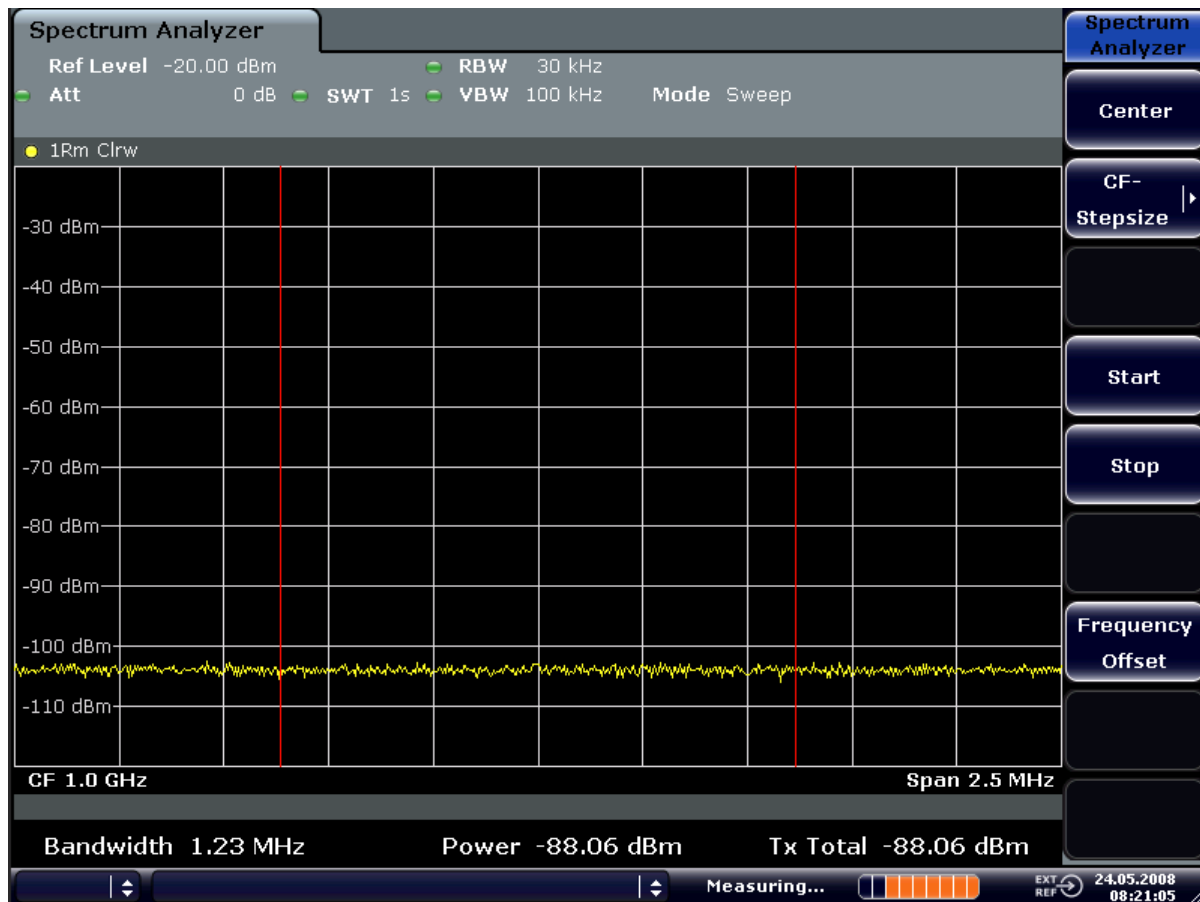


Figure 6-30: Measurement of the R&S ESR's intrinsic noise power in a 1.23 MHz channel bandwidth.

6. Stabilize the measurement result by increasing the sweep time.
In the "Ch Power ACLR" menu, press the "Sweep Time" softkey and enter 1 s.
The trace becomes much smoother because of the RMS detector and the channel power measurement display is much more stable.

6.4.5.3 Measuring Phase Noise

The R&S ESR has an easy-to-use marker function for phase noise measurements. This marker function indicates the phase noise of an RF oscillator at any carrier in dBc in a bandwidth of 1 Hz.

Measurement Example – Measuring the Phase Noise of a Signal Generator at a Carrier Offset of 10 kHz

Test setup:



Signal generator settings (e.g. R&S SMW):

Frequency:	100 MHz
Level:	0 dBm

Procedure:

1. Set the R&S ESR to its default state by pressing the PRESET key.
R&S ESR is in its default state.
2. Set the center frequency to 100 MHz and the span to 50 kHz.
 - a) Press the FREQ key and enter "100 MHz".
 - b) Press the SPAN key and enter "50 kHz".
3. Set the R&S ESR's reference level to 0 dBm (=signal generator level) by pressing the AMPT key and enter "0 dBm".
4. Enable phase noise measurement.
 - a) Press the MKR FUNC key.
 - b) Press the "Phase Noise" softkey.
The R&S ESR activates phase noise measurement. Marker 1 (=main marker) and marker 2 (= delta marker) are positioned on the signal maximum. The position of the marker is the reference (level and frequency) for the phase noise measurement. A horizontal line represents the level of the reference point and a vertical line the frequency of the reference point. The dialog box for the delta marker is displayed so that the frequency offset at which the phase noise is to be measured can be entered directly.
5. Set the frequency offset to 10 kHz for determining phase noise by entering "10 kHz".
The R&S ESR displays the phase noise at a frequency offset of 10 kHz. The magnitude of the phase noise in dBc/Hz is displayed in the delta marker output field at the top right of the screen (Phn2).
6. Stabilize the measurement result by activating trace averaging.

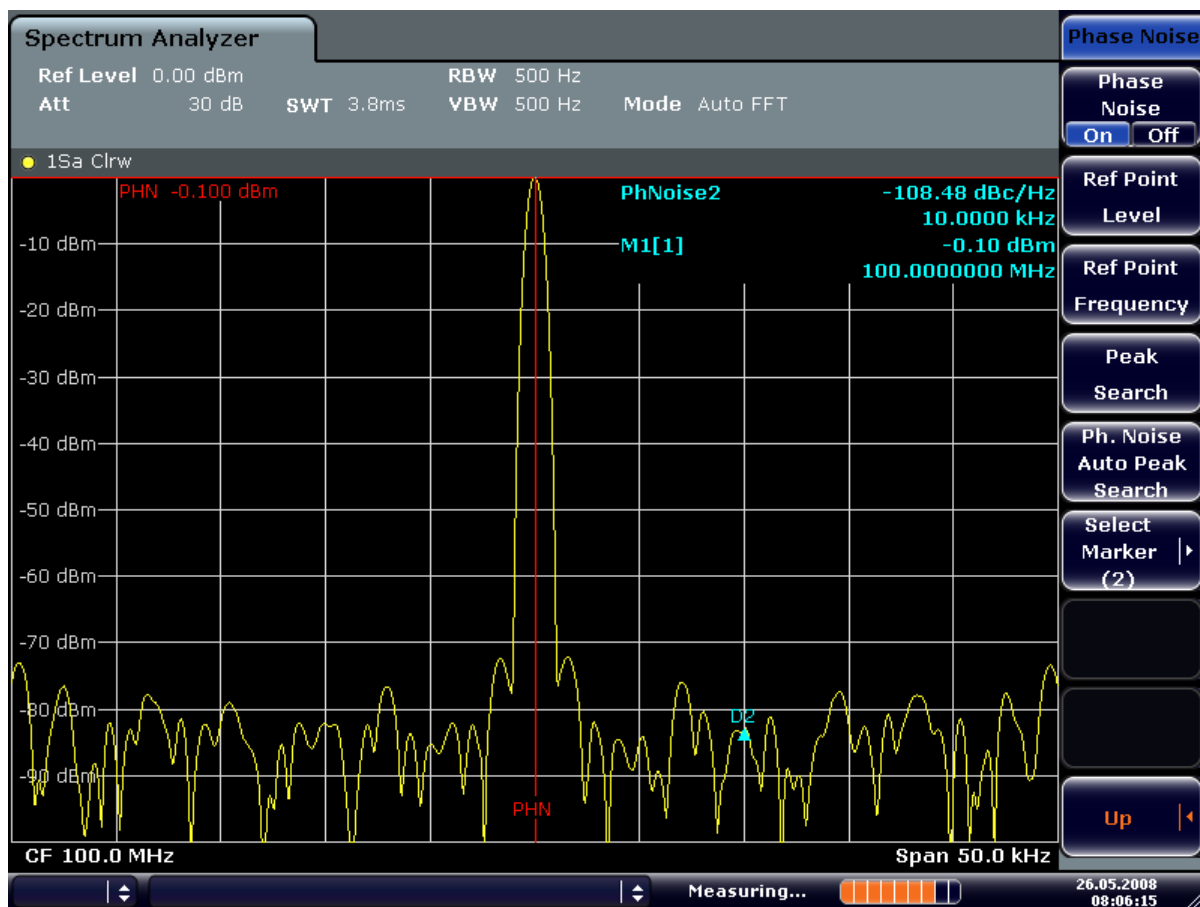


Figure 6-31: Measuring phase noise with the phase-noise marker function

The frequency offset can be varied by moving the marker with the rotary knob or by entering a new frequency offset as a number.

6.4.6 Measurements on Modulated Signals

6.4.6.1 Measuring Channel Power and Adjacent Channel Power

Measuring channel power and adjacent channel power is one of the most important tasks in the field of digital transmission for a signal analyzer with the necessary test routines. While, theoretically, channel power could be measured at highest accuracy with a power meter, its low selectivity means that it is not suitable for measuring adjacent channel power as an absolute value or relative to the transmit channel power. The power in the adjacent channels can only be measured with a selective power meter.

A signal analyzer cannot be classified as a true power meter, because it displays the IF envelope voltage. However, it is calibrated such as to correctly display the power of a pure sine wave signal irrespective of the selected detector. This calibration cannot be applied for non-sinusoidal signals. Assuming that the digitally modulated signal has a Gaussian amplitude distribution, the signal power within the selected resolution band-

width can be obtained using correction factors. These correction factors are normally used by the signal analyzer's internal power measurement routines in order to determine the signal power from IF envelope measurements. These factors apply if and only if the assumption of a Gaussian amplitude distribution is correct.

Apart from this common method, the R&S ESR also has a true power detector, i.e. an RMS detector. It correctly displays the power of the test signal within the selected resolution bandwidth irrespective of the amplitude distribution, without additional correction factors being required. The absolute measurement uncertainty of the FSV is < 1.5 dB and a relative measurement uncertainty of < 0.5 dB (each with a confidence level of 95 %).

There are two possible methods for measuring channel and adjacent channel power with a signal analyzer:

1. IBW method (**I**ntegration **B**andwidth **M**ethod)

The signal analyzer measures with a resolution bandwidth that is less than the channel bandwidth and integrates the level values of the trace versus the channel bandwidth. This method is described in "[Measurement Example – Measuring the Intrinsic Noise of the R&S ESR at 1 GHz in a 1.23 MHz Channel Bandwidth with the Channel Power Function](#)" on page 445.

2. Using a channel filter

For a detailed description, refer to the following section.

 
Measurements using a channel filter

In this case, the signal analyzer makes zero span measurements using an IF filter that corresponds to the channel bandwidth. The power is measured at the output of the IF filter. Until now, this method has not been used for signal analyzers, because channel filters were not available and the resolution bandwidths, optimized for the sweep, did not have a sufficient selectivity. The method was reserved for special receivers optimized for a particular transmission method.

The R&S ESR has test routines for simple channel and adjacent channel power measurements. These routines give quick results without any complex or tedious setting procedures.

Measurement Example 1 – ACPR Measurement on an CDMA2000 Signal

Test setup:

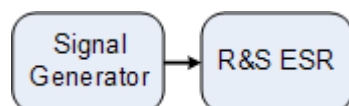

Signal generator settings (e.g. R&S SMW):

Frequency:	850 MHz
Level:	0 dBm
Modulation:	CDMA2000

Procedure:

1. Set the R&S ESR to its default state by pressing the [PRESET] key.
The R&S ESR is in its default state.
2. Press the [FREQ] key and enter "850 MHz" as the center frequency.
3. Press the [SPAN] key and enter "4 MHz".
4. Set the reference level to +10 dBm by pressing the [AMPT] key and enter "10 dBm".
5. Configure the adjacent channel power for the CDMA2000 standard (more precisely: CDMA2000 1X).
 - a) Press the [MEAS] key.
 - b) Press the "Ch Power ACLR" softkey.
 - c) Press the "CP/ACLR Standard" softkey.
 - d) In the standards list, mark *CDMA2000*.

The R&S ESR sets the channel configuration according to the 2000 standard with 2 adjacent channels above and 2 below the transmit channel. The spectrum is displayed in the upper part of the screen, the numeric values of the results and the channel configuration in the lower part of the screen. The various channels are represented by vertical lines on the graph.

The frequency span, resolution bandwidth, video bandwidth and detector are selected automatically to give correct results. To obtain stable results – especially in the adjacent channels (30 kHz bandwidth) which are narrow in comparison with the transmission channel bandwidth (1.23 MHz) – the RMS detector is used.

6. Set the optimal reference level and RF attenuation for the applied signal level by pressing the "Adjust Ref Level" softkey.
7. Activate "Fast ACP" mode to increase the repeatability of results by pressing the "Fast ACP" softkey (for details see below).

The R&S ESR sets the optimal RF attenuation and the reference level based on the transmission channel power to obtain the maximum dynamic range. The [Figure 6-32](#) shows the result of the measurement.


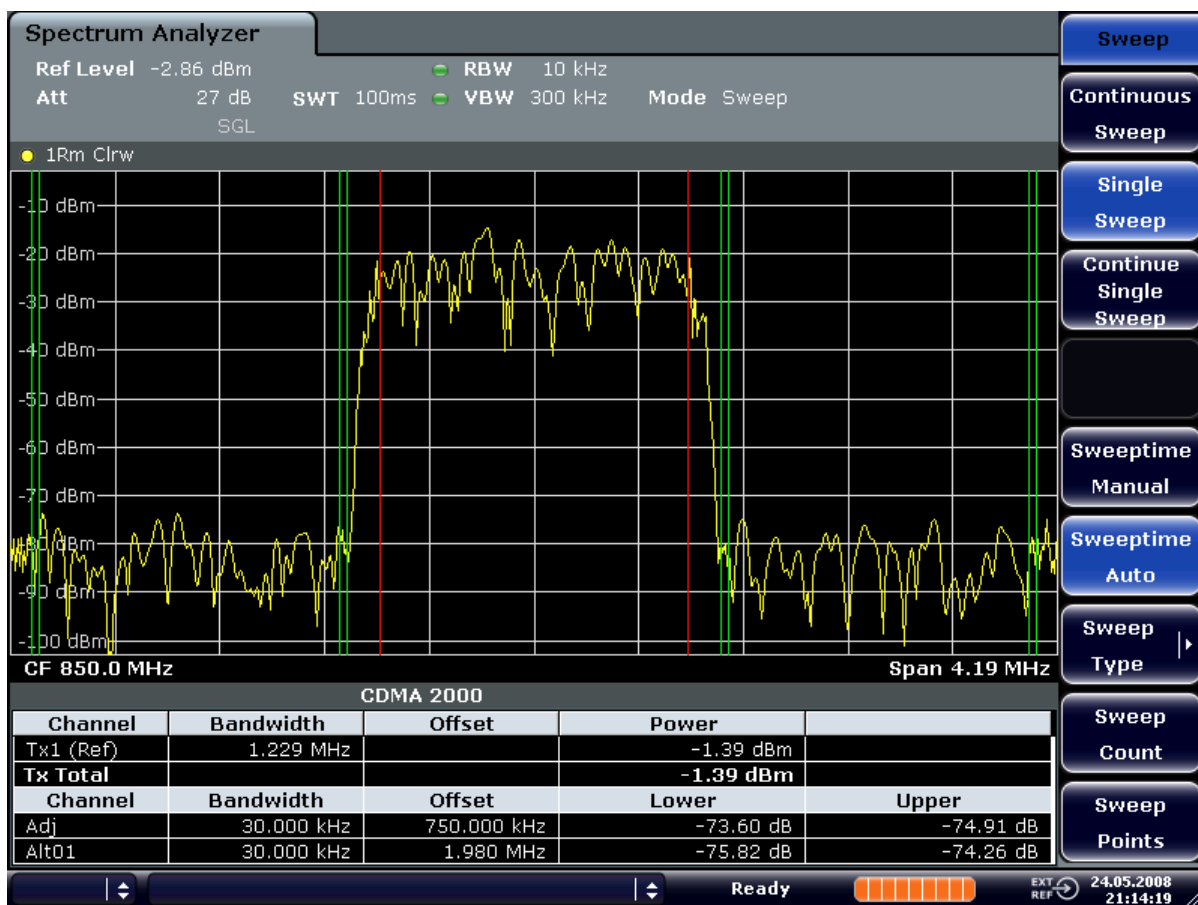


Figure 6-32: Adjacent channel power measurement on a CDMA2000 1x signal

Measurement Example 2 – Measuring Adjacent Channel Power of a W-CDMA Uplink Signal

 Test setup:

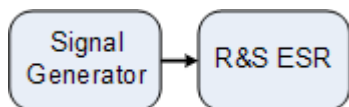

Signal generator settings (e.g. R&S SMW):

Frequency:	1950 MHz
Level:	4 dBm
Modulation:	3 GPP W-CDMA Reverse Link

Procedure:

1. Set the R&S ESR to its default state by pressing the [PRESET] key.

The R&S ESR is in its default state.

2. Set the center frequency to 1950 MHz by pressing the [FREQ] key and entering "1950 MHz".
3. Switch on the ACLR measurement for W-CDMA.
 - a) Press the [MEAS] key.
 - b) Press the "Ch Power ACLR" softkey.
 - c) Press the "CP/ACLR Standard" softkey.
 - d) In the standards list, select *W-CDMA 3GPP REV*.

The R&S ESR sets the channel configuration to the 3GPP W-CDMA standard for mobiles with two adjacent channels above and below the transmit channel. The frequency span, the resolution and video bandwidth and the detector are automatically set to the correct values. The spectrum is displayed in the upper part of the screen and the channel power, the level ratios of the adjacent channel powers and the channel configuration in the lower part of the screen. The individual channels are displayed as vertical lines on the graph.

4. Set the optimum reference level and the RF attenuation for the applied signal level.
 - a) Press the "Adjust Ref Level" softkey.

The R&S ESR sets the optimum RF attenuation and the reference level for the power in the transmission channel to obtain the maximum dynamic range. The following figure shows the result of the measurement.

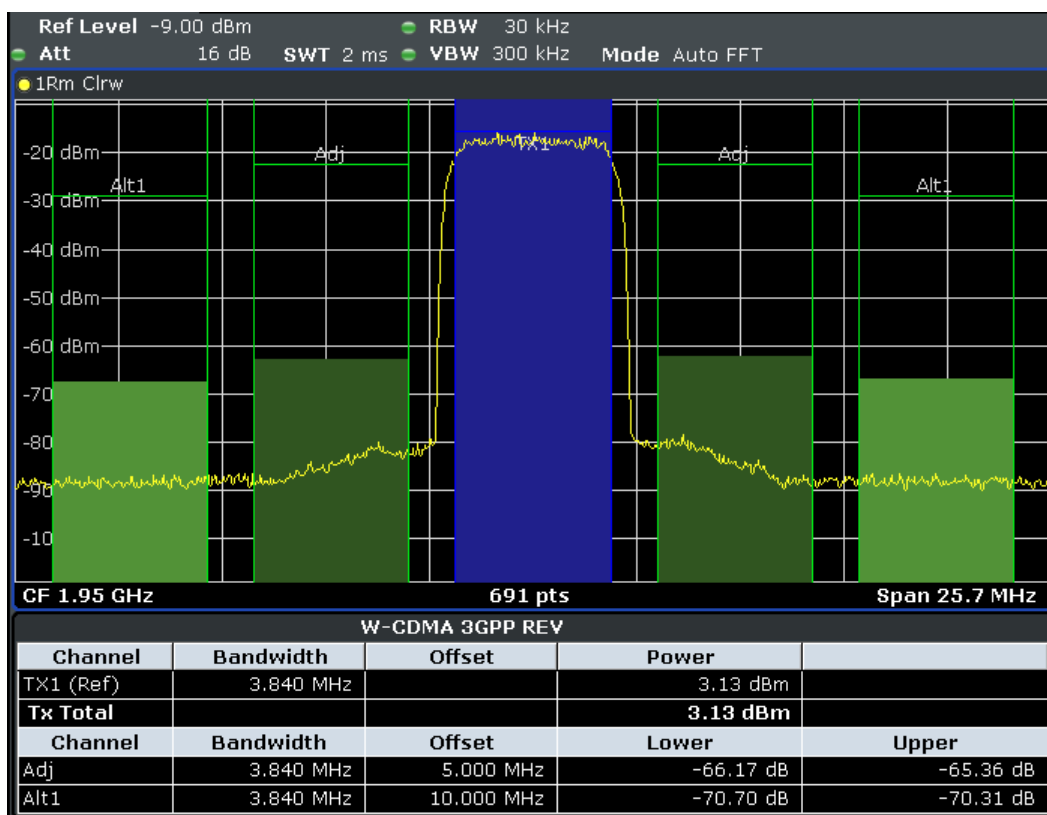


Figure 6-33: Measuring the relative adjacent channel power on a W-CDMA uplink signal

5. Set up the adjacent channel power measurement with the fast ACLR mode.

- a) Set "Fast ACLR" softkey to "On".
- b) Press the "Adjust Ref Level" softkey.

The R&S ESR measures the power of the individual channels with zero span.

A root raised cosine filter with the parameters $\alpha = 0.22$ and chip rate 3.84 Mcps (= receive filter for 3GPP W-CDMA) is used as channel filter.



Figure 6-34: Measuring the adjacent channel power of a W-CDMA signal with the fast ACLR mode

Optimum Level Setting for ACP Measurements on W-CDMA Signals

The dynamic range for ACPR measurements is limited by the thermal noise floor, the phase noise and the intermodulation (spectral regrowth) of the signal analyzer. The power values produced by the R&S ESR due to these factors accumulate linearly. They depend on the applied level at the input mixer. The three factors are shown in the figure below for the adjacent channel (5 MHz carrier offset).

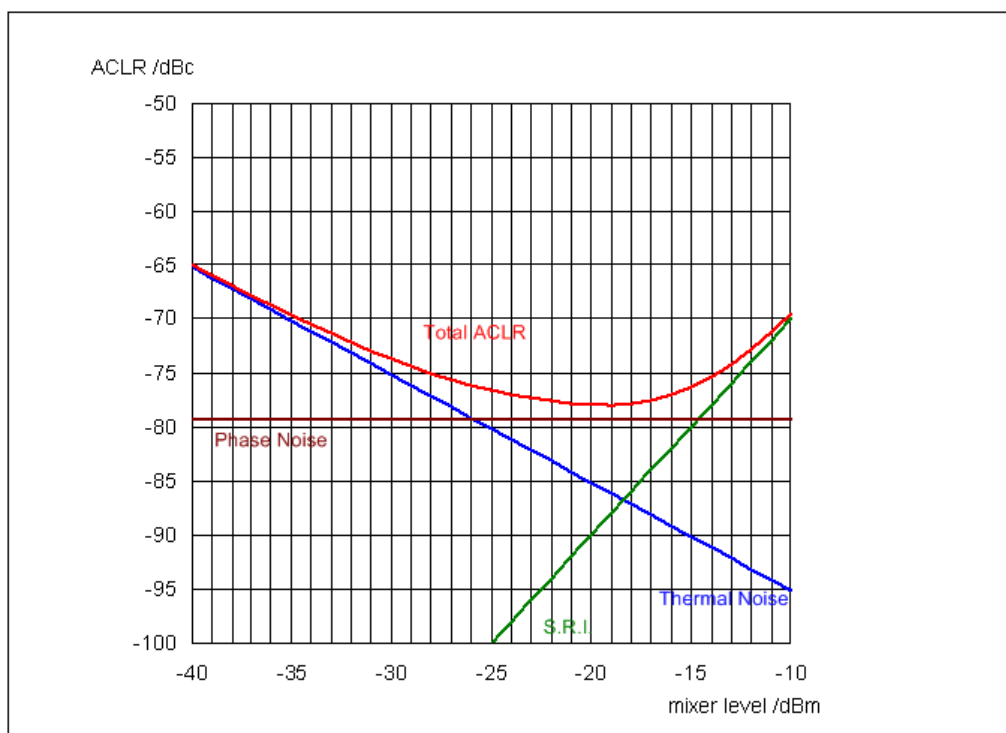


Figure 6-35: The R&S ESR's dynamic range for adjacent channel power measurements on W-CDMA uplink signals is a function of the mixer level.

The level of the W-CDMA signal at the input mixer is shown on the horizontal axis, i.e. the measured signal level minus the selected RF attenuation. The individual components which contribute to the power in the adjacent channel and the resulting relative level (total ACPR) in the adjacent channel are displayed on the vertical axis. The optimum mixer level is -18 dBm. The relative adjacent channel power (ACPR) at an optimum mixer level is -77 dBc. Since, at a given signal level, the mixer level is set in 5 dB steps with the 5 dB RF attenuator, the optimum 10 dB range spreads from -17 dBm to -22 dBm. In this range, the obtainable dynamic range with noise correction is 77 dB.

To set the attenuation parameter manually, the following method is recommended:

- ▶ Set the RF attenuation so that the mixer level (= measured channel power – RF attenuation) is between -16 dBm and -22 dBm.

This method is automated with the "Adjust Ref Level" function. Especially in remote control mode, e.g. in production environments, it is best to correctly set the attenuation parameters prior to the measurement, as the time required for automatic setting can be saved.



To measure the R&S ESR's intrinsic dynamic range for W-CDMA adjacent channel power measurements, a filter which suppresses the adjacent channel power is required at the output of the transmitter. A SAW filter with a bandwidth of 4 MHz, for example, can be used.

6.4.6.2 Amplitude Distribution Measurements

If modulation types are used that do not have a constant zero span envelope, the transmitter has to handle peak amplitudes that are greater than the average power. This includes all modulation types that involve amplitude modulation –QPSK for example. CDMA transmission modes in particular may have power peaks that are large compared to the average power.

For signals of this kind, the transmitter must provide large reserves for the peak power to prevent signal compression and thus an increase of the bit error rate at the receiver.

The peak power or the crest factor of a signal is therefore an important transmitter design criterion. The crest factor is defined as the peak power/mean power ratio or, logarithmically, as the peak level minus the average level of the signal.

To reduce power consumption and cut costs, transmitters are not designed for the largest power that could ever occur, but for a power that has a specified probability of being exceeded (e.g. 0.01 %).

To measure the amplitude distribution, the R&S ESR has simple measurement functions to determine both the APD = Amplitude Probability Distribution and CCDF = Complementary Cumulative Distribution Function.

In the APD display mode, the probability of occurrence of a certain level is plotted against the level.

In the CCDF display mode, the probability that the mean signal power will be exceeded is shown in percent.

Measurement Example – Measuring the APD and CCDF of White Noise Generated by the R&S ESR

1. Set the R&S ESR to its default state by pressing the PRESET key.
The R&S ESR is in its default state.
2. Configure the R&S ESR for APD measurement
 - a) Press the AMPT key and enter "-60 dBm".
The R&S ESR's intrinsic noise is displayed at the top of the screen.
 - b) Press the MEAS key.
 - c) Press the "More" softkey.
 - d) Press the "APD" softkey.
The R&S ESR sets the frequency span to 0 Hz and measures the amplitude probability distribution (APD). The number of uncorrelated level measurements used for the measurement is 100000. The mean power and the peak power are displayed in dBm. The crest factor (peak power – mean power) is output as well.

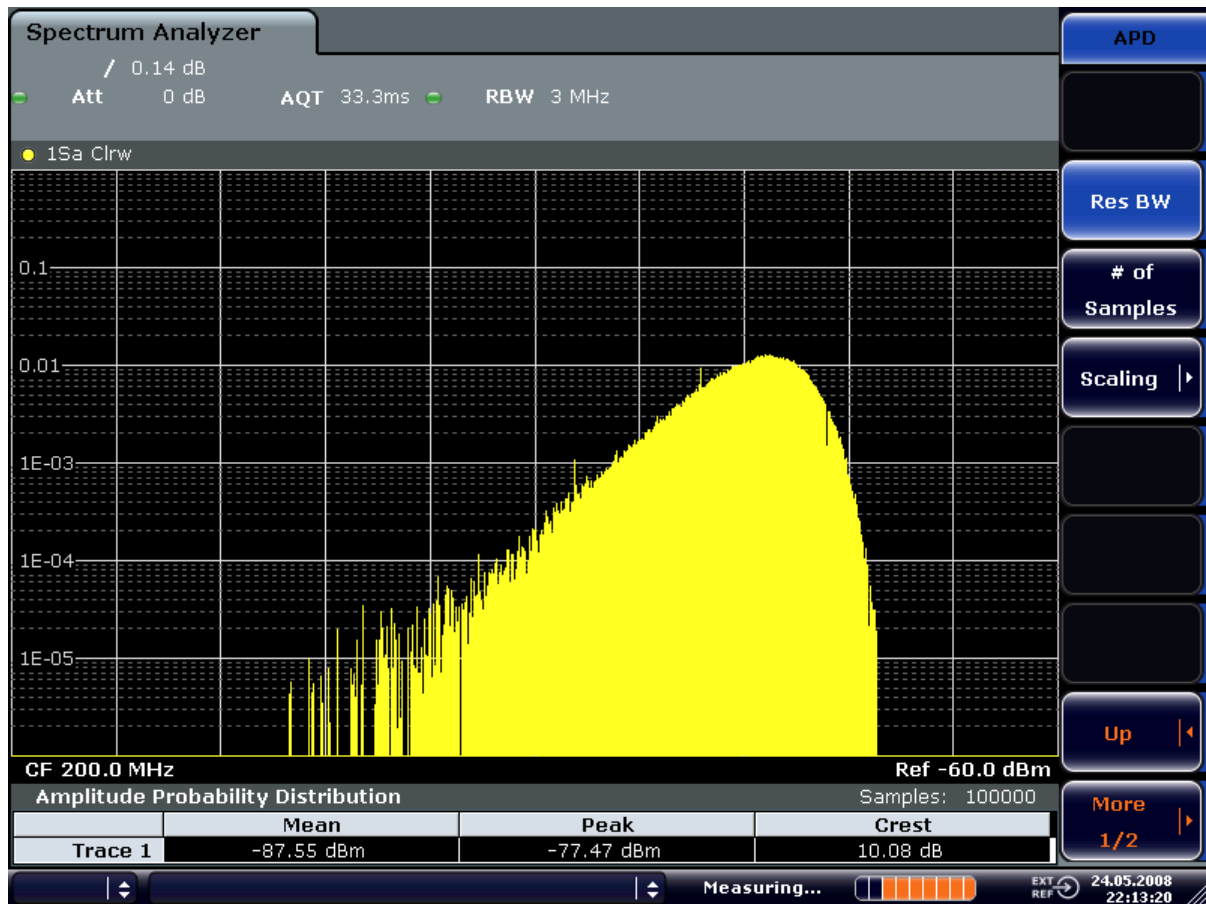


Figure 6-36: Amplitude probability distribution of white noise

3. Switch to the CCDF display mode.
 - a) Press the "UP" key.
 - b) Press the "CCDF" softkey.
The CCDF display mode is switched on.

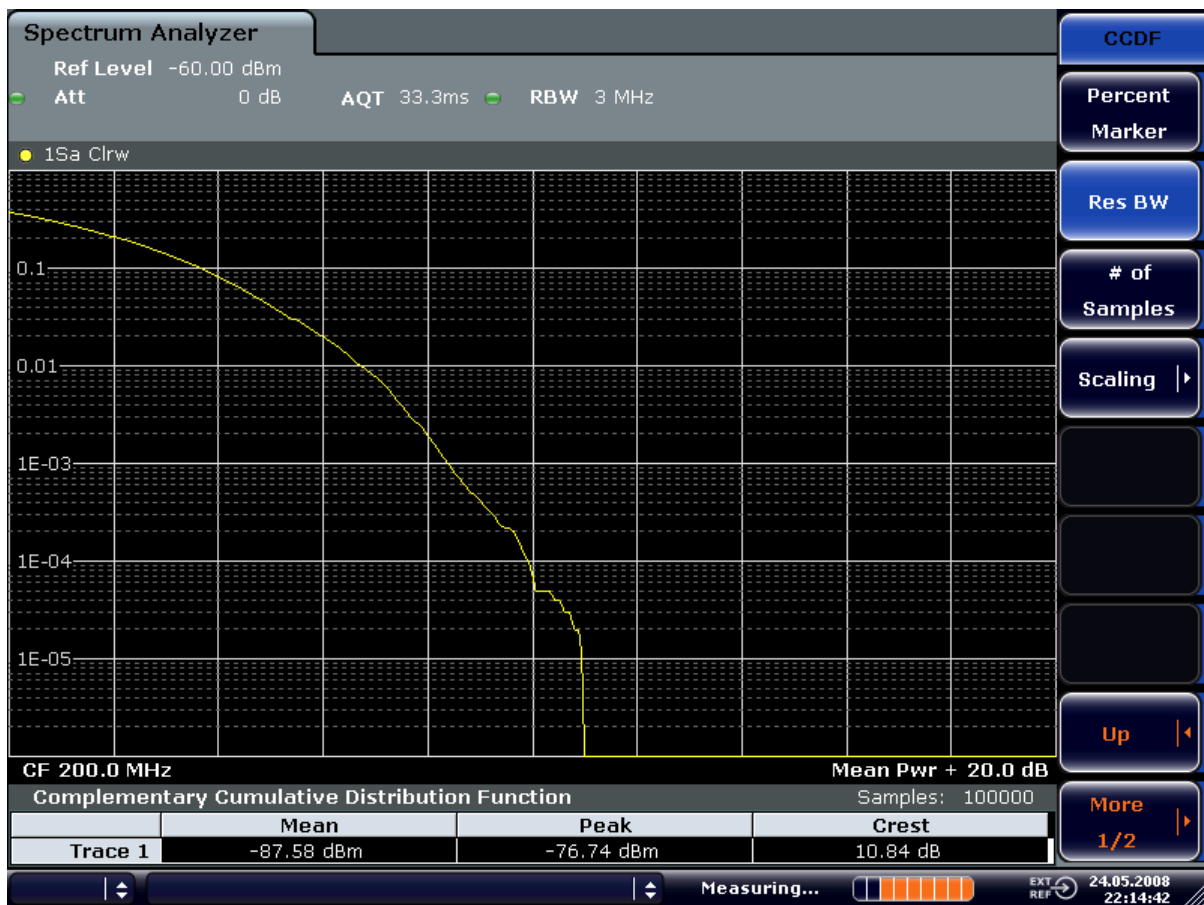


Figure 6-37: CCDF of white noise

The CCDF trace indicates the probability that a level will exceed the mean power. The level above the mean power is plotted along the x-axis of the graph. The origin of the axis corresponds to the mean power level. The probability that a level will be exceeded is plotted along the y-axis.

7 I/Q Analyzer

The I/Q Analyzer provides functions to capture, visualize and evaluate I/Q data. These functions include:

- capturing data from the RF input
- displaying I/Q data in various result types, e.g. separate Real/Imag diagrams or as an I/Q-vector

Menu and softkey description

The "I/Q Analyzer" menu is displayed when you select the "I/Q Analyzer" softkey in the [Mode] menu. The same menu is displayed when you press the [MEAS] or [MEAS Config] keys in "I/Q Analyzer" mode. For details see [Chapter 7.1, "Softkeys and Parameters of the I/Q Analyzer Menu"](#), on page 459.

The "Amplitude" menu, which is displayed when you select the [AMPT] key, is described in see [Chapter 7.2, "Softkeys of the Amplitude Menu in I/Q Analyzer Mode"](#), on page 464.

The "Input/Output" menu, which is displayed when you select the [INPUT/OUTPUT] key, as well as the "Save/Recall" menu ([Save/Rcl] key) contain the same functions in I/Q Analyzer mode as in "Spectrum" mode (see [Chapter 6.2.9, "Input/Output Configuration – INPUT/OUTPUT Key"](#), on page 383).

The "Marker" menu is identical to the one in Spectrum mode for display modes "Magnitude", "Real/Imag" and "Spectrum" (except for "Marker Zoom"), see ["Display Config"](#) on page 460. For the other display modes this menu is not available.

The "Marker To" menu is identical to the one in Spectrum mode. For the "I/Q" display mode, an additional function is available, see [Chapter 7.3, "Softkeys of the Marker To Menu in I/Q Analyzer Mode"](#), on page 469.

The "Trace" menu is identical to the one in Spectrum mode, except in "I/Q Vector" display mode. In this case, only 1 trace is available and no detector can be selected (see [Chapter 6.3.1.1, "Softkeys of the Trace Menu"](#), on page 388).

The "Trigger" menu, which is displayed when you select the [TRIG] key, is described in see [Chapter 7.4, "Softkeys of the Trigger Menu in I/Q Analyzer Mode"](#), on page 469.

The "Span", "BW", and "Lines" menus are not available in this mode. All other menus are identical to those described for "Spectrum" mode (see [Chapter 6.2, "Configuration"](#), on page 342 and [Chapter 6.3, "Analysis"](#), on page 387).

Remote Control

Measurements with the I/Q Analyzer can also be performed via remote control.

For more information see [Chapter 11.6, "Remote Commands in I/Q Analyzer Mode"](#), on page 887.

Further information

- Some general information on working with I/Q data can be found in [Chapter 7.5, "Working with I/Q Data"](#), on page 473.

7.1 Softkeys and Parameters of the I/Q Analyzer Menu

This section describes the softkeys and parameters of the "I/Q Analyzer" submenu which is displayed when you select the "I/Q Analyzer" softkey in the [MODE] menu. The same menu is displayed when you press the [MEAS] or [MEAS Config] keys in "I/Q Analyzer" mode.

I/Q Analyzer.....	459
L Signal Source.....	459
L Input Path.....	459
L Level.....	460
L Reference Level.....	460
L Preamp On/Off.....	460
L Data Acquisition.....	460
L Sample Rate.....	460
L Filter BW.....	460
L Meas Time.....	460
L Record Length.....	460
L Display Config.....	460
L C/N, C/No.....	462
L C/N.....	463
L C/No.....	463
L Channel Bandwidth	463
L Adjust Settings	463

I/Q Analyzer

Starts the I/Q Analyzer evaluation mode and opens the submenu for the I/Q analyzer, which allows you to configure and display measurements of I/Q data, e.g. digital base-band signals.

Remote command:

Starting I/Q Analyzer:

`TRACe<n>:IQ[:STATe]` on page 898

Selecting evaluation mode:

`TRACe<n>:IQ:EVAL` on page 898

Selecting the I/Q Analyzer display configuration

`CALCulate<n>:FORMat` on page 888

Signal Source ← I/Q Analyzer

Opens a dialog box to select the signal source.

Input Path ← Signal Source ← I/Q Analyzer

The input path is always "RF Radio Frequency".

Level ← I/Q Analyzer

Opens a dialog box to define the level settings.

Reference Level ← Level ← I/Q Analyzer

Specifies the reference level for the I/Q measurement.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RVALue` on page 889

Preamp On/Off ← Level ← I/Q Analyzer

Switches the preamplifier on and off.

Remote command:

`INPut:GAIN:STATe` on page 669

Data Acquisition ← I/Q Analyzer

Opens a dialog box to configure data acquisition in I/Q Analyzer mode.

Sample Rate ← Data Acquisition ← I/Q Analyzer

Defines the I/Q data sample rate of the R&S ESR.

Remote command:

`TRACe<n>:IQ:SRATe` on page 891

Filter BW ← Data Acquisition ← I/Q Analyzer

Displays the flat, usable bandwidth of the final I/Q data.

Remote command:

`TRACe<n>:IQ:BWIDth` on page 889

Meas Time ← Data Acquisition ← I/Q Analyzer

Defines the I/Q acquisition time. By default, the measurement time is calculated as the number of I/Q samples ("Record Length") divided by the sample rate. If you change the measurement time, the [Record Length](#) is automatically changed, as well.

For details on the maximum number of samples see also [Chapter 7.5, "Working with I/Q Data"](#), on page 473.

Remote command:

`[SENSe:]SWEep:TIME` on page 835

Record Length ← Data Acquisition ← I/Q Analyzer

Defines the number of I/Q samples to record. By default, the number of sweep points is used. The record length is calculated as the measurement time multiplied by the sample rate. If you change the record length, the [Meas Time](#) is automatically changed, as well.

Remote command:


`TRACe<n>:IQ:RLENgth` on page 890

`TRACe<n>:IQ:SET` on page 890


Display Config ← I/Q Analyzer

Opens a selection list to specify the result display configuration. The following displays are available:


"Magnitude" Shows the values in time domain

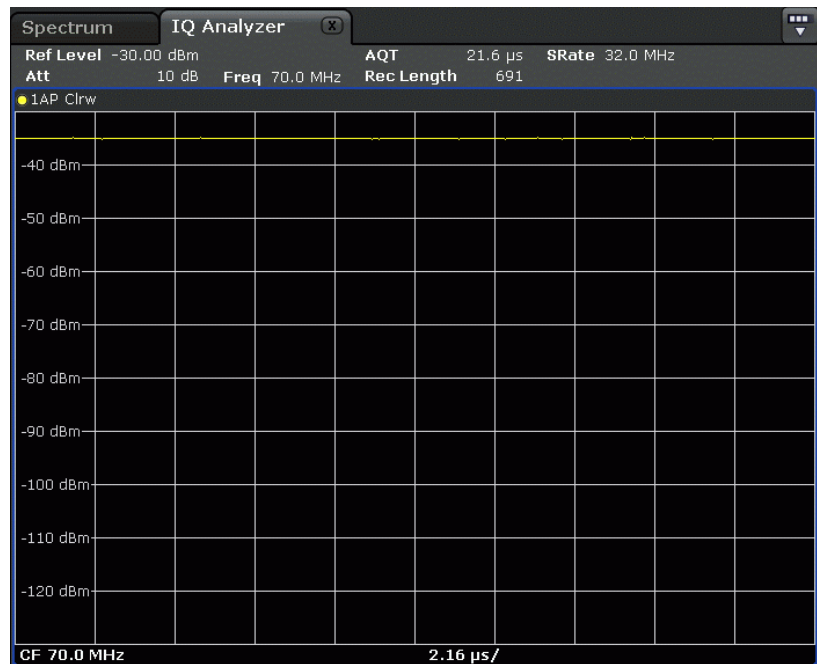


"Spectrum" Displays the frequency spectrum of the captured I/Q samples.

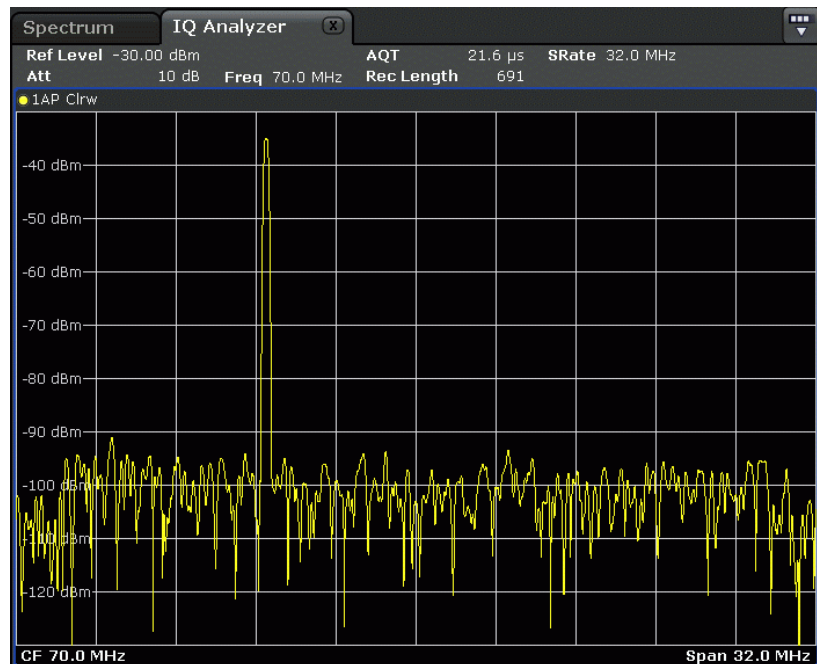

"I/Q-Vector" Displays the captured samples in an I/Q-plot. The samples are connected by a line.

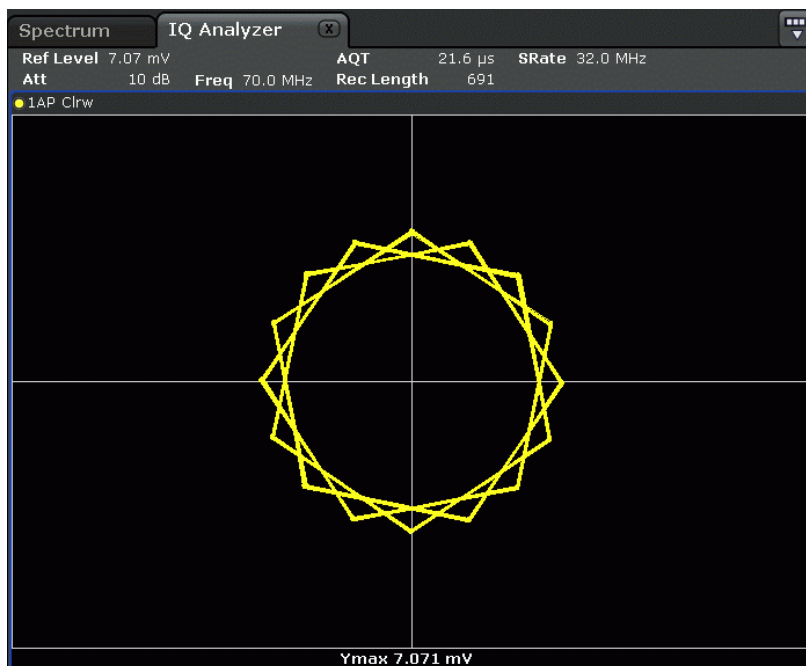

"Real/Imag (I/Q)" Displays the I and Q values in separate diagrams.

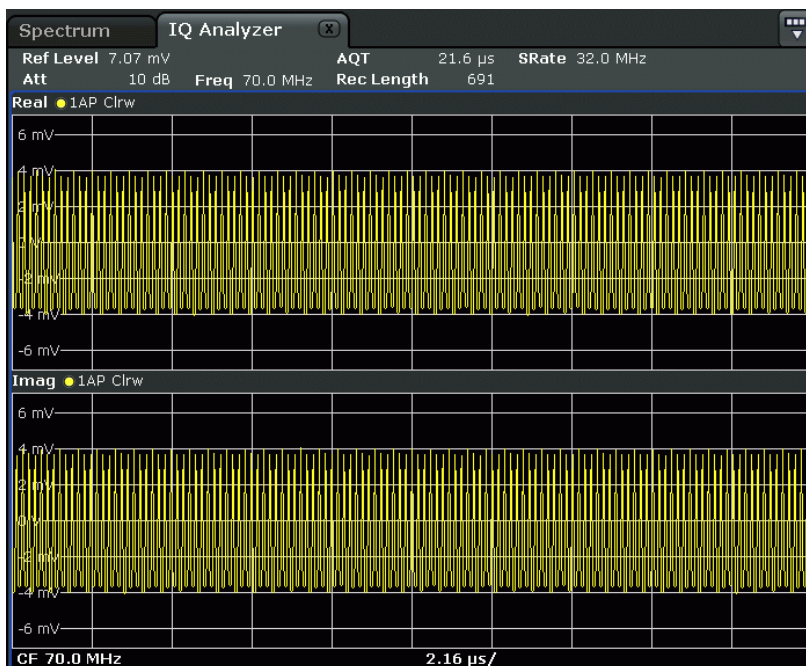

Remote command:

`CALCulate<n>:FORMat` on page 888

C/N, C/No ← I/Q Analyzer

Opens a submenu to configure the carrier/noise ratio measurement. Measurements without (C/N) and measurements with reference to the bandwidth (C/No) are possible.

Carrier-to-noise measurements are not available in zero span mode.

Note: Carrier-to-noise measurements are also available in the I/Q Analyzer, but only for **Spectrum** displays (see ["Display Config"](#) on page 460).

For general information on performing carrier-to-noise ratio measurements see [Chapter 6.1.1.3, "Measuring the Carrier-to-Noise Ratio"](#), on page 249.

C/N ← C/N, C/No ← I/Q Analyzer

Switches the measurement of the carrier/noise ratio on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the [Marker to Trace](#) softkey in the "Marker To" menu.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect](#) on page 720

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?](#) on page 721

[CALCulate<n>:MARKer<m>:FUNCTION:POWER\[:STATe\]](#) on page 724

C/No ← C/N, C/No ← I/Q Analyzer

Switches the measurement of the carrier/noise ratio with reference to a 1 Hz bandwidth on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the [Marker to Trace](#) softkey in the "Marker To" menu.

Remote command:

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect](#) on page 720

[CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?](#) on page 721

[CALCulate<n>:MARKer<m>:FUNCTION:POWER\[:STATe\]](#) on page 724

Channel Bandwidth ← C/N, C/No ← I/Q Analyzer

Opens an edit dialog box to enter the measurement channel bandwidth for each channel.

The default setting is 14 kHz.

Note that in the I/Q Analyzer the channel bandwidth does not change the measurement span or sampling rate; it merely defines the range for the carrier-to-noise analysis.

Remote command:

[\[SENSe:\]POWER:ACHannel:ACPairs](#) on page 730

Adjust Settings ← C/N, C/No ← I/Q Analyzer

Enables the RMS detector (see also [Chapter 6.3.1.5, "Detector Overview"](#), on page 399) and adjusts the span to the selected channel bandwidth according to:

"4 x channel bandwidth + measurement margin"

The adjustment is performed once; if necessary, the setting can be changed later on.

Note: in the I/Q Analyzer, this function is not available. The channel bandwidth defines the range for the carrier-to-noise analysis.

Remote command:

[SENSe:] POWER:ACHannel:PRESet on page 725

7.2 Softkeys of the Amplitude Menu in I/Q Analyzer Mode

In I/Q Analyzer mode, the "Amplitude" menu, which is displayed when you select the [AMPT] key, contains the following functions.



If the display configuration for the I/Q Analyzer is set to "I/Q Vector" or "Real/Imag (I/Q)", the [Range](#) and [Unit](#) functions are not available.

Functions to configure the amplitude described elsewhere:

- "10 dB Min" on page 181

Ref Level.....	464
Y-Axis Max.....	465
Range.....	465
L Range Log 100 dB.....	465
L Range Log 50 dB.....	465
L Range Log 10 dB.....	465
L Range Log 5 dB.....	466
L Range Log 1 dB.....	466
L Range Log Manual.....	466
L Range Linear %.....	466
L Range Lin. Unit.....	466
Unit.....	467
Preamp On/Off.....	467
RF Atten Auto.....	467
Ref Level Offset.....	467
Ref Level Position.....	468
Grid Abs/Rel	468
Noise Correction.....	468
Input (AC/DC).....	468
Input 50 Ω/75 Ω	468

Ref Level

Opens an edit dialog box to enter the reference level in the current unit (dBm, dBμV, etc).

The reference level is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel on page 845

Y-Axis Max

Opens an edit dialog box to specify the maximum value of the y-axis in either direction (in Volts). Thus, the y-axis scale starts at $-<Y\text{-AxisMax}>$ and ends at $+<Y\text{-AxisMax}>$.

This command is only available if the display configuration for the I/Q Analyzer is set to "I/Q Vector" or "Real/Imag (I/Q)", see "Display Config" on page 460.

Range

Opens a submenu to define the display range of the level axis.

- [Range Log 100 dB](#)
- [Range Log 50 dB](#)
- [Range Log 10 dB](#)
- [Range Log 5 dB](#)
- [Range Log 1 dB](#)
- [Range Log Manual](#)
- [Range Linear %](#)
- [Range Lin. Unit](#)

Range Log 100 dB ← Range

Sets the level display range to 100 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 100DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 50 dB ← Range

Sets the level display range to 50 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 50DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 10 dB ← Range

Sets the level display range to 10 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 10DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 5 dB ← Range

Sets the level display range to 5 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 5DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log 1 dB ← Range

Sets the level display range to 1 dB.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

DISP:WIND:TRAC:Y 1DB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Log Manual ← Range

Opens an edit dialog box to define the display range of a logarithmic level axis manually.

Remote command:

Logarithmic scaling:

DISP:WIND:TRAC:Y:SPAC LOG, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Display range:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALe\]](#) on page 844

Range Linear % ← Range

Selects linear scaling for the level axis in %.

The grid is divided into decadal sections.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

Remote command:

DISP:TRAC:Y:SPAC LIN, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Range Lin. Unit ← Range

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

Remote command:

DISP:TRAC:Y:SPAC LDB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668

Unit

Opens the "Unit" submenu to select the unit for the level axis.

The default setting in spectrum mode is dBm.

If a transducer is switched on, the softkey is not available.

In general, the signal analyzer measures the signal voltage at the RF input. The level display is calibrated in RMS values of an unmodulated sine wave signal. In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω), conversion to other units is possible. The following units are available and directly convertible:

- dBm
- dBmV
- dB μ V
- dB μ A
- dBpW
- Volt
- Ampere
- Watt

Remote command:

[CALCulate<n>:UNIT:POWer](#) on page 844

Preamp On/Off

Switches the preamplifier on and off.

Remote command:

[INPut:GAIN:STATe](#) on page 669

RF Atten Auto

Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

When measuring spurious emissions, using this softkey automatically opens the "Sweep List" dialog, see ["Sweep List dialog box"](#) on page 289.

Remote command:

[INPut:ATTenuation:AUTO](#) on page 846

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

Remote command:

[DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]:RLEVel:OFFSet](#) on page 845

Ref Level Position

Opens an edit dialog box to enter the reference level position, i.e. the position of the maximum AD converter value on the level axis. The setting range is from -200 to +200 %, 0 % corresponding to the lower and 100 % to the upper limit of the diagram.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 846

Grid Abs/Rel

Switches between absolute and relative scaling of the level axis (not available with "Linear" range).

"Abs" Absolute scaling: The labeling of the level lines refers to the absolute value of the reference level. Absolute scaling is the default setting.

"Rel" Relative scaling: The upper line of the grid is always at 0 dB. The scaling is in dB whereas the reference level is always in the set unit (for details on unit settings see the "Unit" softkey).

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE` on page 844

Noise Correction

If activated, the results are corrected by the instrument's inherent noise, which increases the dynamic range.

"ON" A reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined.

The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen. Noise correction must be switched on again manually after the change.

"OFF" No noise correction is performed.

"AUTO" Noise correction is performed. After a parameter change, noise correction is restarted automatically and a new correction measurement is performed.

Remote command:

`[SENSe:]POWer:NCORrection` on page 747

Input (AC/DC)

Toggles the RF input of the R&S ESR between AC and DC coupling.

Remote command:

`INPut:COUPling` on page 672

Input 50 Ω /75 Ω

Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω .

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

Remote command:

[INPut : IMPedance](#) on page 670

7.3 Softkeys of the Marker To Menu in I/Q Analyzer Mode

In I/Q Analyzer mode, The "Marker To" menu is identical to the one in Spectrum mode (see ["Softkeys of the Marker To Menu"](#) on page 411). For the "Real/Imag (I/Q)" display mode, however, an additional function is available.

Search Settings

Opens a dialog box to define which data is used for marker search functions.

Note: The search settings apply to all markers, not only the currently selected one.

"Search Real" Marker search functions are performed on the real trace of the I/Q measurement.

"Search Imag" Marker search functions are performed on the imaginary trace of the I/Q measurement.

"Search Magnitude" Marker search functions are performed on the magnitude of the I and Q data.

Remote command:

[CALCulate<n>:MARKer<m>:SEARch](#) on page 888

7.4 Softkeys of the Trigger Menu in I/Q Analyzer Mode

In I/Q Analyzer mode, the "Trigger" menu, which is displayed when you select the [TRIG] key, contains the following functions:

Trg/Gate Source.....	470
L Free Run.....	470
L External.....	470
L Video.....	470
L RF Power.....	470
L IF Power/BB Power.....	471
L Time.....	472
Trigger Level.....	472
Trigger Polarity.....	472
Trigger Offset.....	472

Repetition Interval.....	473
Trigger Hysteresis.....	473
Trigger Holdoff.....	473

Trg/Gate Source

Opens the "Trigger/Gate Source" dialog box to select the trigger/gate mode.

As gate modes, all modes except "Power Sensor" are available. For details see also [Chapter 6.2.8.3, "Using Gated Sweep Operation"](#), on page 381.

The default setting is "Free Run". If a trigger mode other than "Free Run" has been set, the enhancement label "TRG" is displayed and the trigger source is indicated.

Note: When triggering or gating is activated, the squelch function is automatically disabled (see ["Squelch"](#) on page 421).

Remote command:

TRIGger<n>[:SEQuence]:SOURce on page 839

[SENSe:]SWEep:EGATe:SOURce on page 842

Free Run ← Trg/Gate Source

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

Remote command:

TRIG:SOUR IMM, see [TRIGger<n>\[:SEQuence\]:SOURce](#) on page 839

External ← Trg/Gate Source

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

Remote command:

TRIG:SOUR EXT, see [TRIGger<n>\[:SEQuence\]:SOURce](#) on page 839

SWE:EGAT:SOUR EXT for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 842

Video ← Trg/Gate Source

Defines triggering by the displayed voltage.

A horizontal trigger line is shown in the diagram. It is used to set the trigger threshold from 0 % to 100 % of the diagram height.

Video mode is only available in the time domain.

Remote command:

TRIG:SOUR VID, see [TRIGger<n>\[:SEQuence\]:SOURce](#) on page 839

SWE:EGAT:SOUR VID for gated triggering, see [\[SENSe:\]SWEep:EGATe:SOURce](#) on page 842

RF Power ← Trg/Gate Source

Defines triggering of the measurement via signals which are outside the measurement channel.

In RF Power trigger mode the instrument uses a level detector at the first intermediate frequency. The detector threshold can be selected in a range between - 50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input lies within the following range:

$(-24\text{dBm} + \text{RF Att}) \leq \text{Triggerlevel} \leq (+5\text{dBm} + \text{RF Att})$, max. 30 dBm, for Preamp = OFF

$(-40\text{dBm} + \text{RF Att}) \leq \text{Triggerlevel} \leq (-11\text{dBm} + \text{RF Att})$, max. 30 dBm, for Preamp = ON with

$500 \text{ MHz} \leq \text{InputSignal} \leq 7 \text{ GHz}$

Note: If input values outside of this range occur (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input values is displayed in the status bar.

A **Trigger Offset**, **Trg/Gate Polarity** and **Trigger Holdoff** can be defined for the RF trigger to improve the trigger stability, but no hysteresis.

Remote command:

TRIG:SOUR RFP, see TRIGger<n>[:SEQUENCE]:SOURCE on page 839

SWE:EGAT:SOUR RFP for gated triggering, see [SENSe:]SWEep:EGATe:SOURCE on page 842

IF Power/BB Power ← Trg/Gate Source

Defines triggering of the measurement using the second intermediate frequency.

For this purpose, the R&S ESR uses a level detector at the second intermediate frequency.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths see the data sheet.

The bandwidth at the intermediate frequency depends on the RBW and sweep type:

Sweep mode:

- RBW > 500 kHz: 40 MHz, nominal
- RBW ≤ 500 kHz: 6 MHz, nominal

FFT mode:

- RBW > 20 kHz: 40 MHz, nominal
- RBW ≤ 20 kHz: 6 MHz, nominal

Note: Be aware that in auto sweep type mode, due to a possible change in sweep types, the bandwidth may vary considerably for the same RBW setting.

The R&S ESR is triggered as soon as the trigger level is exceeded around the selected frequency (= start frequency in the frequency sweep).

Thus, the measurement of spurious emissions, e.g. for pulsed carriers, is possible even if the carrier lies outside the selected frequency span.

Remote command:

TRIG:SOUR IFP, see TRIGger<n>[:SEQUENCE]:SOURCE on page 839

SWE:EGAT:SOUR IFP for gated triggering, see [SENSe:]SWEep:EGATe:SOURCE on page 842

Time ← Trg/Gate Source

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms.

Remote command:

TRIG:SOUR TIME:TRIGger<n>[:SEquence]:SOURce on page 839

Trigger Level

Defines the trigger level as a numeric value.

In the trigger mode "Time", this softkey is not available.

Remote command:

TRIGger<n>[:SEquence]:LEVel:IFPower on page 838

TRIGger<n>[:SEquence]:LEVel:VIDeo on page 838

Trigger Polarity

Sets the polarity of the trigger source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all modes with the exception of the "Free Run" and "Time" mode.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

Remote command:

TRIGger<n>[:SEquence]:SLOPe on page 839

[SENSe:]SWEep:EGATE:POLarity on page 842

Trigger Offset

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	Sweep starts earlier (pre-trigger) Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off Maximum allowed range limited by the sweep time: $\text{pretrigger}_{\text{max}} = \text{sweep time}$

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

Tip: To determine the trigger point in the sample (for "External" or "IF Power" trigger mode), use the TRACe<n>:IQ:TPISample? command.

In the "Time" trigger mode, this softkey is not available.

Remote command:

TRIGger<n>[:SEquence]:HOLDoff[:TIME] on page 836

Repetition Interval

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms. This softkey is only available if the trigger source "Time" is selected (see "Time" on page 377).

Remote command:

`TRIGger<n>[:SEquence]:TIME:RINTerval` on page 840

Trigger Hysteresis

Defines the value for the trigger hysteresis for "IF power" or "RF Power" trigger sources. The hysteresis in dB is the value the input signal must stay below the power trigger level in order to allow a trigger to start the measurement. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:

`TRIGger<n>[:SEquence]:IFPower:HYSteresis` on page 837

Trigger Holdoff

Defines the value for the trigger holdoff. The holdoff value in s is the time which must pass before triggering, in case another trigger event happens.

This softkey is only available if "IFPower", "RF Power" or "BBPower" is the selected trigger source.

Remote command:

`TRIGger<n>[:SEquence]:IFPower:HOLDoff` on page 837

7.5 Working with I/Q Data

This section describes I/Q data processing of RF input, e.g. in the I/Q Analyzer.

The block diagram in [Figure 7-1](#) shows the analyzer hardware for active RF input from the IF section to the processor.

The A/D converter samples the IF signal at a rate of 128 MHz. The digital signal is down-converted to the complex baseband, lowpass-filtered, and the sample rate is reduced. The continuously adjustable sample rates are realized using an optimal decimation filter and subsequent resampling on the set sample rate.

The I/Q data is written to a single memory, the data acquisition is hardware-triggered.

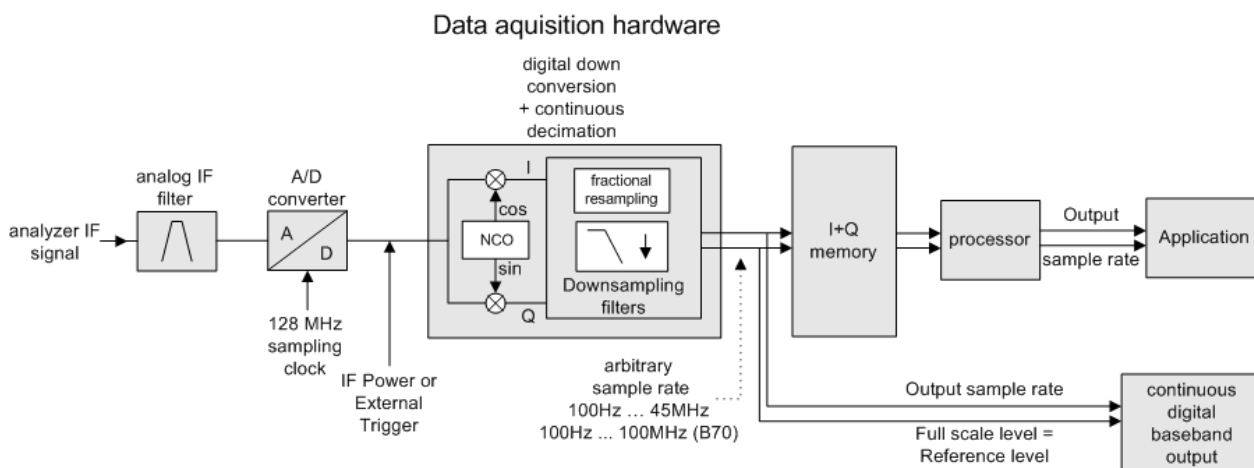


Figure 7-1: Block diagram illustrating the R&S ESR signal processing

Maximum number of samples

The maximum number of samples for RF input is 200 MS.

7.5.1 Sample Rate and Maximum Usable Bandwidth (RF Input)

Definitions

- **Input sample rate (ISR):** the sample rate of the useful data provided by the connected instrument to the R&S ESR input
- (User, Output) **Sample rate (SR):** the sample rate that is defined by the user (e.g. in the "Data Acquisition" dialog box in the "I/Q Analyzer" application) and which is used as the basis for analysis or output
- **Usable I/Q (Analysis) bandwidth:** the bandwidth range in which the signal remains undistorted in regard to amplitude characteristic and group delay; this range can be used for accurate analysis by the R&S ESR

For the I/Q data acquisition, digital decimation filters are used internally. The passband of these digital filters determines the *maximum usable I/Q bandwidth*. In consequence, signals within the usable I/Q bandwidth (passband) remain unchanged, while signals outside the usable I/Q bandwidth (passband) are suppressed. Usually, the suppressed signals are noise, artifacts, and the second IF side band. If frequencies of interest to you are also suppressed, you should try to increase the output sample rate, since this increases the maximum usable I/Q bandwidth.

Relationship between sample rate and usable bandwidth

The diagram [Figure 7-2](#) shows the maximum usable I/Q bandwidths depending on the user sample rates.

As a rule, the usable bandwidth is proportional to the output sample. Yet, when the I/Q bandwidth reaches the bandwidth of the analog IF filter (at very high sample rates), the curve breaks.

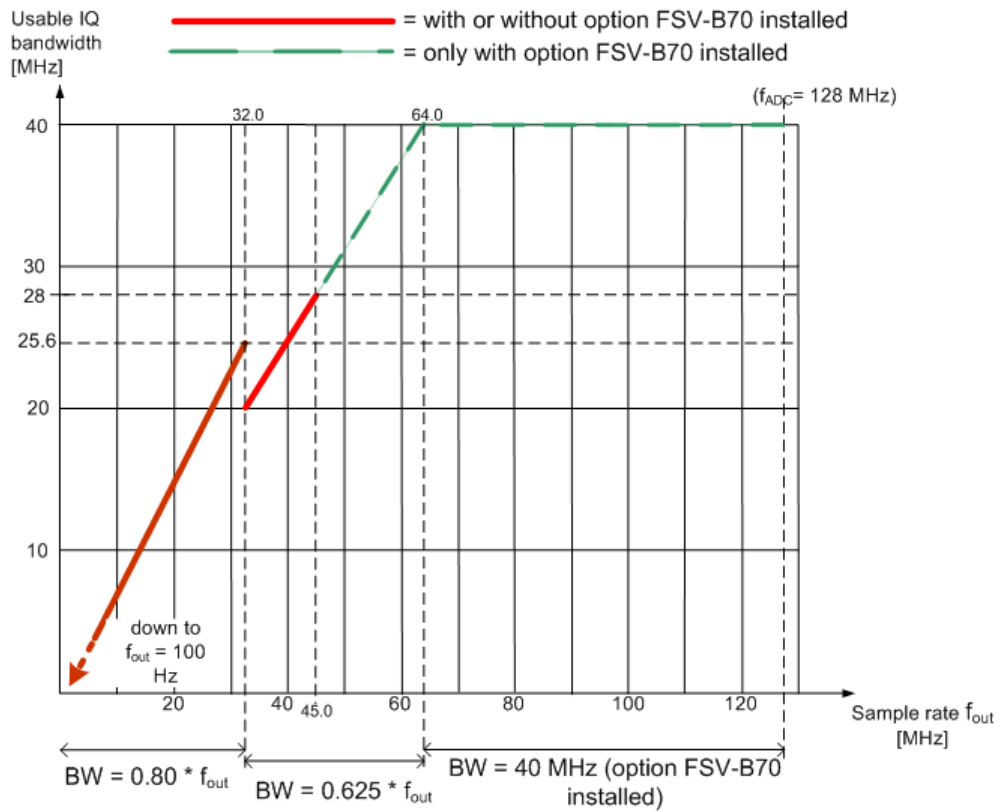


Figure 7-2: Relation between maximum usable bandwidth and sample rate (RF input)

8 Tracking Generator

Equipped with option R&S FSV-B9, an internal tracking generator emits a signal at the exact input frequency of the analyzer during operation. The generated signal is sent to the DUT, thus allowing the analyzer to control the input frequency of the device directly.

When you equip the R&S ESR with option R&S FSV-B10, you are also able to control various commercially available generators as a tracking generator.

Tracking generator control is available in "Spectrum" and "I/Q Analyzer" mode for frequency, time or I/Q measurements. Special measurement functions are not available with tracking generator control. The corresponding softkeys in the "Measurement" menu are deactivated in this case.

Menu and softkey description

- [Chapter 8.1, "Softkeys of the Tracking Generator Menu"](#), on page 476

Further information

8.1 Softkeys of the Tracking Generator Menu

The "Tracking Generator" menu is displayed when you press the INPUT/OUTPUT key and then "Tracking Generator".

This softkey is only available if the R&S FSV option Tracking Generator (B9) or External Tracking Generator (B10) or both are installed. The following table shows all softkeys available in the "Tracking Generator" menu.



As long as a tracking generator is active, the HOME key also displays the "Tracking Generator" menu.

Source RF Internal (On/ Off).....	477
Source Power.....	477
Source Cal.....	477
L Calibrate Transmission.....	477
L Calibrate Reflection Short.....	477
L Calibrate Reflection Open.....	477
L Normalize.....	478
L Reference Value Position.....	478
L Reference Value.....	478
L Recall.....	478
L Save As Trd Factor.....	479
Modulation.....	479
L External AM.....	479
L External FM.....	479
L External I/Q.....	479
L Modulation OFF.....	479

Power Sweep.....	480
L Power Sweep (On /Off).....	480
L Power Sweep Start.....	480
L Power Sweep Stop.....	480
Source Config.....	481

Source RF Internal (On/ Off)

Switches the selected tracking generator on or off. Default setting is off. The currently selected generator is indicated on the softkey.

Remote command:

`OUTPut [:STATe]` on page 901

Activates the internal tracking generator (B9).

`SOURce<n>:EXTernal<generator> [:STATe]` on page 912

Activates the external tracking generator 1 (B10).

Source Power

Opens an edit dialog box to quickly change the output power of the currently selected tracking generator, alternatively to the "Tracking Generator configuration" dialog box (see "Source Config" on page 481 softkey).

The default output power is -20 dBm. The range is specified in the data sheet.

Remote command:

`SOURce<n>:POWER [:LEVel] [:IMMediate] [:AMPLitude]` on page 905

Source Cal

Opens a submenu to configure calibration for transmission and reflection measurement for tracking generators. For details on the test setups see [Chapter 8.4.2, "Calibrating for transmission and reflection measurement"](#), on page 493.

Calibrate Transmission ← Source Cal

Starts a sweep that records a reference trace. This trace is used to calculate the difference for the normalized values.

Remote command:

`[SENSe:]CORRection:METHod` on page 902

Selects the transmission method and starts the sweep to record a reference trace.

Calibrate Reflection Short ← Source Cal

Starts a sweep as a reference trace for short-circuit calibration.

If both calibrations (open circuit, short circuit) are carried out, the calibration curve is calculated by averaging the two measurements and stored in the memory. The order of the two calibration measurements is irrelevant.

Remote command:

`[SENSe:]CORRection:METHod` on page 902

Selects the reflection method.

`[SENSe:]CORRection:COLLect [:ACQuire]` on page 901

Starts the sweep for short-circuit calibration.

Calibrate Reflection Open ← Source Cal

Starts a sweep as a reference trace for the open-circuit calibration.

If both calibrations (open circuit, short circuit) are carried out, the calibration curve is calculated by averaging the two measurements and stored in the memory. The order of the two calibration measurements is irrelevant.

Remote command:

`[SENSe:]CORRection:METhod` on page 902

Selects the reflection method.

`[SENSe:]CORRection:COLLect[:ACQuire]` on page 901

Starts the sweep for open-circuit calibration.

Normalize ← Source Cal

Switches the normalization on or off. The softkey is only available if the memory contains a reference trace. For details on normalization see [Chapter 8.4.5, "Normalization"](#), on page 494.

Remote command:

`[SENSe:]CORRection[:STATe]` on page 902

Reference Value Position ← Source Cal

Switches the reference line on or off. The reference line marks the reference position at which the normalization result (calculated difference to a reference trace) is displayed. For details on the reference line see [Chapter 8.4.5, "Normalization"](#), on page 494.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition` on page 846

Reference Value ← Source Cal

Opens an edit dialog box to enter a position value that shifts the reference line vertically. By default, the reference line corresponds to a difference of 0 dB between the currently measured trace and the reference trace.

If a 10 dB attenuation is inserted into the signal path between DUT and R&S ESR input, for example after a source calibration, the measurement trace is moved down by 10 dB. Entering a reference value of -10 dB will also shift the reference line down by 10 dB and place the measurement trace on the reference line. The deviation from the nominal power level can be displayed with higher resolution (e.g. 1 dB/div). The power is still displayed in absolute values.

Remote command:

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue` on page 889

Recall ← Source Cal

Restores the settings that were used during source calibration. This can be useful if instrument settings were changed after calibration (e.g. center frequency, frequency deviation, reference level, etc).

Remote command:

`[SENSe:]CORRection:RECall` on page 902

Save As Trd Factor ← Source Cal

Uses the normalized measurement data to generate a transducer factor with up to 625 points. The trace data is converted to a transducer with unit dB and stored in a file with the specified name and the suffix.trd under "c:\r_s\instr\trd". The frequency points are allocated in equidistant steps between start and stop frequency. The generated transducer factor can be further adapted using the "Transducer" softkey in the "SETUP" menu.

The "Save As Trd Factor" softkey is only available if normalization is switched on.

Remote command:

[\[SENSe:\]CORRection:TRANsducer:GENerator](#) on page 907

Modulation

Opens a submenu to define modulation settings. This submenu contains the following commands:

- ["External AM"](#) on page 479
- ["External FM"](#) on page 479
- ["External I/Q"](#) on page 479
- ["Modulation OFF"](#) on page 479

External AM ← Modulation

Activates an AM modulation of the tracking generator output signal.

The modulation signal is applied to the TG IN I/AM connector. An input voltage of 1 V corresponds to 100 % amplitude modulation.

Switching on an external AM disables the active I/Q modulation.

Remote command:

[SOURce<n>:AM:STATe](#) on page 903

External FM ← Modulation

Activates the FM modulation of the tracking generator output signal. The modulation signal is applied to the TG IN Q/FM connector. Switching on an external FM disables the active I/Q modulation.

Remote command:

[SOURce<n>:FM:STATe](#) on page 904

[SOURce<n>:FM:DEVIation](#) on page 904

External I/Q ← Modulation

Activates the external I/Q modulation of the tracking generator output signal. The signals for modulation are applied to the two input connectors TG IN I and TG IN Q at the rear panel of the unit. The input voltage range is ± 1 V into 50 Ω . Switching on an external I/Q modulation disables the active AM or FM modulation.

Remote command:

[SOURce<n>:DM:STATe](#) on page 903

Modulation OFF ← Modulation

Deactivates external modulation of the tracking generator output signal.

Remote command:

[SOURce<n>:AM:STATe](#) on page 903

[SOURce<n>:DM:STATe](#) on page 903

[SOURce<n>:FM:STATe](#) on page 904

Power Sweep

Opens a submenu to define power sweep settings.

This softkey is only available if the (internal) Tracking Generator option (B9) is installed.

This submenu contains the following commands:

- ["Power Sweep \(On /Off\)"](#) on page 480
- ["Power Sweep Start"](#) on page 480
- ["Power Sweep Stop"](#) on page 480

Power Sweep (On /Off) ← Power Sweep

Activates or deactivates the power sweep. If the power sweep is on, the analyzer is set to zero span mode (span = 0Hz). During the sweep time of the zero span, the power at the internal tracking generator is changed linearly from start power to stop power. The start and stop power for the power sweep are displayed in the diagram header ("INT TG <start power>... <stop power>", see also [Chapter 8.5, "Displayed Information and Errors"](#), on page 500.

The start power can be set between -30 dBm and +0 dBm.

The stop value can also be set between -30 dBm and +0 dBm and may be smaller than the start value.

The difference between the start and stop values may not exceed 10 dB.

This softkey is only available if the (internal) Tracking Generator option (B9) is installed.

Remote command:

[SOURce<n>:POWer:MODE](#) on page 906

Power Sweep Start ← Power Sweep

Defines the start power of the power sweep.

The start power can be set between -30 dBm and +0 dBm.

The difference between the start and stop values may not exceed 10 dB.

This softkey is only available if the (internal) Tracking Generator option (B9) is installed.

Remote command:

[SOURce<n>:POWer:START](#) on page 906

Power Sweep Stop ← Power Sweep

Defines the stop power of the power sweep.

The stop power can be set between -30 dBm and +0 dBm.

The difference between the start and stop values may not exceed 10 dB.

This softkey is only available if the (internal) Tracking Generator option (B9) is installed.

Remote command:

`SOURce<n>:POWer:STOP` on page 907

Source Config

Opens the "Tracking Generator Configuration" dialog, see [Chapter 8.3, "Configuring Tracking Generators"](#), on page 485.

8.2 Connecting External Tracking Generators

The external tracking generator is controlled either via a LAN connection or via the – optional – second GPIB interface of the R&S ESR (= IEC2, supplied with the option).

Using GPIB, with some Rohde & Schwarz generators, additionally the TTL synchronization interface included in the AUX interface of the R&S ESR can be used.



Using the TTL interface allows for considerably higher measurement rates than pure GPIB control, because the frequency stepping of the R&S ESR is directly coupled with the frequency stepping of the generator.

Therefore, the frequency sweep differs according to the capabilities of the employed generator:

- For generators without a TTL interface, the generator frequency is set for each frequency point via GPIB first, then the setting procedure has to be completed before recording of measured values is possible.
- For generators with a TTL interface, a list of the frequencies to be set is entered into the generator before the beginning of the first sweep. Then the sweep is started and the next frequency point is selected using the TTL handshake line TRIGGER. Recording measured values is only enabled when the generator signals the end of the setting procedure via the BLANK signal. This method is considerably faster than pure GPIB control.

The "Tracking Generator Configuration" dialog provides a list of the supported generators with the frequency and level range, as well as the capabilities used. The interface settings are defined using the "Source Config" on page 481 softkey. For details see [Chapter 8.3.2, "External Tracking Generator"](#), on page 487.

In order to use the functions of the external tracking generator, an appropriate generator must be connected and configured correctly. If no external generator is selected, if the GPIB or TCP/IP address is not correct, or the generator is not ready for operation, an error message is displayed ("Ext. Generator GPIB Handshake Error!" or "Ext. Generator TCPIP Handshake Error!").

[Figure 8-1](#) illustrates the TTL connection using an SMU generator, for example.

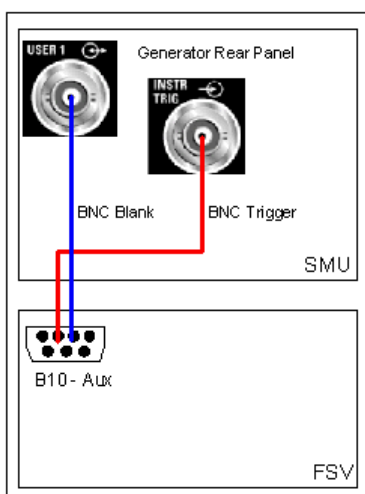


Figure 8-1: TTL connection for an SMU generator



In order to enhance measurement accuracy, a common reference frequency should be used for both the R&S ESR and the generator. If no independent 10 MHz reference frequency is available, it is recommended that you connect the reference output of the generator with the reference input of the R&S ESR and that you enable usage of the external reference on the R&S ESR via "SETUP" >"Reference EXT".

8.2.1 Overview of Generators Supported by the R&S ESR



The R&S SMA and R&S SMU require the following firmware versions:

R&S SMA: V2.10.x or higher

R&S SMU: V1.10 or higher

Generator	Interface Type	Generator Min Freq	Generator Max Freq	Generator Min Power dBm	Generator Max Power dBm
SMA01A	TTL	9 kHz	3.0 GHz	-145	+30
SMBV100A3	TTL	9 kHz	3.2 GHz	-145	+30
SMBV100A6	TTL	9 kHz	6.0 GHz	-145	+30
SMC100A1	TTL	9 kHz	1.1 GHz	-120	+30

- 1) Requires the option SMR-B11 to be fitted.
- 2) Maximum/minimum power depends on presence of Option SMR-B15/-B17 and set frequency range. For more details see SMR data sheet.
- 3) Maximum/minimum power depends on presence of Option SMP-B15/-B17 and set frequency range. For more details see SMP data sheet.
- 4) Requires firmware version V3.20.200 or higher on the signal generator

Connecting External Tracking Generators

Generator	Interface Type	Generator Min Freq	Generator Max Freq	Generator Min Power dBm	Generator Max Power dBm
SMC100A3	TTL	9 kHz	3.2 GHz	-145	+30
SME02	TTL	5 kHz	1.5 GHz	-144	+16
SME03	TTL	5 kHz	3.0 GHz	-144	+16
SME06	TTL	5 kHz	6.0 GHz	-144	+16
SMG	GPIB	100 kHz	1.0 GHz	-137	+13
SMGL	GPIB	9 kHz	1.0 GHz	-118	+30
SMGU	GPIB	100 kHz	2.16 GHz	-140	+13
SMH	GPIB	100 kHz	2.0 GHz	-140	+13
SMHU	GPIB	100 kHz	4.32 GHz	-140	+13
SMIQ02B	TTL	300 kHz	2.2 GHz	-144	+13
SMIQ02E	GPIB	300 kHz	2.2 GHz	-144	+13
SMIQ03B	TTL	300 kHz	3.3 GHz	-144	+13
SMIQ03E	GPIB	300 kHz	3.3 GHz	-144	+13
SMIQ04B	TTL	300 kHz	4.4 GHz	-144	+10
SMIQ06B	TTL	300 kHz	6.4 GHz	-144	+10
SML01	GPIB	9 kHz	1.1 GHz	-140	+13
SML02	GPIB	9 kHz	2.2 GHz	-140	+13
SML03	GPIB	9 kHz	3.3 GHz	-140	+13
SMR20	TTL	1 GHz	20 GHz	-130 ²⁾	+11 ²⁾
SMR20B11 ¹⁾	TTL	10 MHz	20 GHz	-130 ²⁾	+13 ²⁾
SMR27	TTL	1 GHz	27 GHz	-130 ²⁾	+11 ²⁾
SMR27B11 ¹⁾	TTL	10 MHz	27 GHz	-130 ²⁾	+12 ²⁾
SMR30	TTL	1 GHz	30 GHz	-130 ²⁾	+11 ²⁾
SMR30B11 ¹⁾	TTL	10 MHz	30 GHz	-130 ²⁾	+12 ²⁾
SMR40	TTL	1 GHz	40 GHz	-130 ²⁾	+9 ²⁾
SMR40B11 ¹⁾	TTL	10 MHz	40 GHz	-130 ²⁾	+12 ²⁾
SMR50	TTL	1 GHz	50 GHz	-130 ²⁾	+9 ²⁾

1) Requires the option SMR-B11 to be fitted.

2) Maximum/minimum power depends on presence of Option SMR-B15/-B17 and set frequency range. For more details see SMR data sheet.

3) Maximum/minimum power depends on presence of Option SMP-B15/-B17 and set frequency range. For more details see SMP data sheet.

4) Requires firmware version V3.20.200 or higher on the signal generator

Connecting External Tracking Generators

Generator	Interface Type	Generator Min Freq	Generator Max Freq	Generator Min Power dBm	Generator Max Power dBm
SMR50B11 ¹⁾	TTL	10 MHz	50 GHz	-130 ²⁾	+12 ²⁾
SMR60	TTL	1 GHz	60 GHz	-130 ²⁾	+9 ²⁾
SMR60B11 ¹⁾	TTL	10 MHz	60 GHz	-130 ²⁾	+12 ²⁾
SMP02	TTL	10 MHz	20 GHz	-130 ³⁾	+17 ³⁾
SMP03	TTL	10 MHz	27 GHz	-130 ³⁾	+13 ³⁾
SMP04	TTL	10 MHz	40 GHz	-130 ³⁾	+12 ³⁾
SMP22	TTL	10 MHz	20 GHz	-130 ³⁾	+20 ³⁾
SMT02	GPIB	5.0 kHz	1.5 GHz	-144	+13
SMT03	GPIB	5.0 kHz	3.0 GHz	-144	+13
SMT06	GPIB	5.0 kHz	6.0 GHz	-144	+13
SMV03	GPIB	9 kHz	3.3 GHz	-140	+13
SMU200A	TTL	100 kHz	2.2 GHz	-145	+13
SMU02B31	TTL	100 kHz	2.2 GHz	-145	+19
SMU03	TTL	100 kHz	3 GHz	-145	+13
SMU03B31	TTL	100 kHz	3 GHz	-145	+19
SMU04	TTL	100 kHz	4 GHz	-145	+13
SMU04B31	TTL	100 kHz	4 GHz	-145	+19
SMU06	TTL	100 kHz	6 GHz	-145	+13
SMU06B31	TTL	100 kHz	6 GHz	-145	+19
SMW20	TTL ⁴⁾	100 kHz	20 GHz	-145	+30
SMW40	TTL ⁴⁾	100 kHz	40 GHz	-145	+30
SMX	GPIB	100 kHz	1.0 GHz	-137	+13
SMY01	GPIB	9 kHz	1.04 GHz	-140	+13
SMY02	GPIB	9 kHz	2.08 GHz	-140	+13
HP8340A	GPIB	10 MHz	26.5 GHz	-110	10
HP8648	GPIB	9 kHz	4 GHz	-136	10

1) Requires the option SMR-B11 to be fitted.

2) Maximum/minimum power depends on presence of Option SMR-B15/-B17 and set frequency range. For more details see SMR data sheet.

3) Maximum/minimum power depends on presence of Option SMP-B15/-B17 and set frequency range. For more details see SMP data sheet.

4) Requires firmware version V3.20.200 or higher on the signal generator

Generator	Interface Type	Generator Min Freq	Generator Max Freq	Generator Min Power dBm	Generator Max Power dBm
HP ESG-A Series 1000A, 2000A, 3000A, 4000A	GPIB	250 kHz	4 GHz	-136	20
HP ESG-D SERIES E4432B	GPIB	250 kHz	3 GHz	-136	+10

- 1) Requires the option SMR-B11 to be fitted.
- 2) Maximum/minimum power depends on presence of Option SMR-B15/-B17 and set frequency range. For more details see SMR data sheet.
- 3) Maximum/minimum power depends on presence of Option SMP-B15/-B17 and set frequency range. For more details see SMP data sheet.
- 4) Requires firmware version V3.20.200 or higher on the signal generator

8.3 Configuring Tracking Generators

The "Tracking Generator Configuration" dialog box is opened via the "Source Config" softkey in the "Tracking Generator" menu.

This dialox box allows you to define measurement settings, as well as connection settings for the optional external generators (option B10 only). Depending on which options are installed, the corresponding tabs for internal or external generators, or both, are displayed.

- [Chapter 8.3.1, "Internal Tracking Generator"](#), on page 485
- [Chapter 8.3.2, "External Tracking Generator"](#), on page 487

8.3.1 Internal Tracking Generator

The internal tracking generator is configured in the "Internal" tab of the "tracking Generator Configuration" dialog box.

In the top half of the dialog box, the measurement configurations can be defined. In the lower half of the dialog box, the capabilities of the internal tracking generator are displayed for reference only.

The configuration dialog box contains the following fields:

Select

Selects the internal tracking generator as the current tracking generator source. "Internal" is displayed as the source on the "Source RF" softkey. All tracking generator functions are performed with the currently selected source.

Note: Note that the generator is not automatically activated when it is selected. To activate the currently selected generator, click the "Source RF On" softkey.

Source Power

The tracking generator output power. The default output power is -20 dBm. The range is specified in the data sheet.

Remote command:

`SOURce<n>:POWer[:LEVel][:IMMediate][:AMPLitude]` on page 905

Power Offset

Constant level offset for the tracking generator. Values from -200 dB to +200 dB in 1 dB steps are allowed. The default setting is 0 dB. Offsets are indicated by the enhancement label "LVL" in the diagram header (see also [Chapter 8.5, "Displayed Information and Errors"](#), on page 500).

With this offset, attenuators or amplifiers at the output connector of the tracking generator can be taken into account for the displayed output power values on screen or during data entry, for example. Positive offsets apply to an amplifier and negative offsets to an attenuator subsequent to the tracking generator.

Remote command:

`SOURce<n>:POWER[:LEVel][:IMMediate]:OFFSet` on page 905

Frequency Offset

Constant frequency offset between the output signal of the tracking generator and the input frequency of the R&S ESR. Possible offsets are in a range of ± 1 GHz in 0.1 Hz steps.

The default setting is 0 Hz. Offsets $\neq 0$ Hz are marked with the enhancement label "FRQ" in the diagram header (see also [Chapter 8.5, "Displayed Information and Errors"](#), on page 500).

If a positive frequency offset is entered, the tracking generator generates an output signal above the receive frequency of the R&S ESR. In case of a negative frequency offset it generates a signal below the receive frequency of the R&S ESR. The output frequency of the tracking generator is calculated as follows:

Tracking generator frequency = receive frequency + frequency offset.

Remote command:

`SOURce<n>:FREQuency:OFFSet` on page 905

Result Frequency Start

For reference only: The start frequency for the generator, calculated from the configured generator frequency and the start value defined for the analyzer.

Result Frequency Stop

For reference only: The stop frequency for the generator, calculated from the configured generator frequency and the stop value defined for the analyzer.

Frequency Min.

For reference only: Lower frequency limit for the generator.

Frequency Max.

For reference only: Upper frequency limit for the generator.

Power Min.

For reference only: Lower power limit for the generator.

Power Max.

For reference only: Upper power limit for the generator.

8.3.2 External Tracking Generator

The external tracking generators are configured in the "External" tabs of the "Tracking Generator Configuration" dialog box.

In the top section of the dialog box, the measurement configurations can be defined. In the middle section, interface settings for the connection to the external generator are defined. In the lower section of the dialog box, the capabilities of the external tracking generator are displayed for reference only.

The configuration dialog box contains the following fields:

Select

Selects the specified external tracking generator as the current tracking generator source. "External 1" or "External 2" is displayed as the source on the "Source RF" softkey. All tracking generator functions are performed with the currently selected source.

Note: Note that the generator is not automatically activated when it is selected. To activate the currently selected generator, click the "Source RF On" softkey.

Source Frequency Coupling

Enables or disables frequency coupling between the analyzer and the generator.

- "Auto" Default setting: the frequencies are coupled (see "[Generator Frequency \(Numerator/Denominator/Offset\)](#)" on page 489).
- "Manual" The generator uses a fixed frequency, defined in the [\(Fixed\) Generator Frequency](#) field which is displayed when you select "Manual" coupling.

Remote command:

```
SOURce<n>:EXTeRnal<generator>:FREQuency:COUPling[:STATe]
```

on page 908

(Fixed) Generator Frequency

Defines the fixed frequency to be used by the generator.

Remote command:

`SOURce<n>:EXTernal<generator>:FREQuency` on page 908

Source Power

The output power of the external tracking generator. The default output power is -20 dBm. The range is specified in the data sheet.

Remote command:

`SOURce<n>:EXTernal<generator>:POWer[:LEVel]` on page 911

Power Offset

Constant level offset for the tracking generator. Values from -200 dB to +200 dB in 1 dB steps are allowed. The default setting is 0 dB. Offsets are indicated by the enhancement label "LVL" in the diagram header (see also [Chapter 8.5, "Displayed Information and Errors"](#), on page 500).

With this offset, attenuators or amplifiers at the output connector of the tracking generator can be taken into account for the displayed output power values on screen or during data entry, for example. Positive offsets apply to an amplifier and negative offsets to an attenuator subsequent to the tracking generator.

Remote command:

`SOURce<n>:POWer[:LEVel][:IMMediate]:OFFSet` on page 905

Generator Frequency (Numerator/Denominator/Offset)

The frequency used by the generator may differ from the input from the analyzer. The RF frequency may be multiplied by a specified factor, or a frequency offset can be added, or both.

Note: The input for the generator frequency is not validated, i.e. you can enter any values. However, if the allowed frequency ranges of the generator are exceeded, an error message is displayed on the analyzer screen and the values for [Start](#) and [Stop](#) are corrected to comply with the range limits.

The value range for the offset depends on the selected generator. The default setting is 0 Hz. Offsets \neq 0 Hz are marked with the enhancement label "FRQ" in the diagram header (see also [Chapter 8.5, "Displayed Information and Errors"](#), on page 500).

If a positive frequency offset is entered, the tracking generator generates an output signal above the receive frequency of the analyzer. For a negative frequency offset it generates a signal below the receive frequency of the analyzer.

The output frequency of the generator is calculated as follows:

$$F_{\text{Generator}} = \left| F_{\text{Analyzer}} * \frac{\text{Numerator}}{\text{Denominator}} + F_{\text{Offset}} \right|$$

Figure 8-2: Output frequency of the generator

Note: Make sure that the frequencies resulting from the start and stop frequency of the R&S ESR do not exceed the allowed generator range:

- If the start frequency lies below F MIN, the generator is only switched on when F MIN is reached.

- If the stop frequency lies above F MAX, the generator is switched off. When the generator is subsequently switched on using the "Source RF Internal (On/ Off)" on page 477 softkey, the stop frequency is limited to F MAX.
- If the stop frequency lies below F MIN, the generator is switched off and an error message is displayed.

Remote command:

`SOURce<n>:EXTernal<generator>:FREQuency[:FACTor]:NUMerator`
on page 909

`SOURce<n>:EXTernal<generator>:FREQuency[:FACTor]:DENominator`
on page 909

`SOURce<n>:EXTernal<generator>:FREQuency:OFFSet<m>` on page 910

Reverse sweep

The "Offset" setting can be used to sweep in the reverse direction. You can do this by setting a "negative" offset in the tracking generator configuration.

Example for reverse sweep:

$F_{\text{AnalyzerStart}} = 100 \text{ MHz}$

$F_{\text{AnalyzerStop}} = 200 \text{ MHz}$

$F_{\text{Offset}} = -300 \text{ MHz}$

Numerator = Denominator = 1

$\rightarrow F_{\text{GeneratorStart}} = 200 \text{ MHz}$

$\rightarrow F_{\text{GeneratorStop}} = 100 \text{ MHz}$

If the offset is adjusted so that the sweep of the generator crosses the minimum generator frequency, a message is displayed in the status bar ("Reverse Sweep via min. Ext. Generator Frequency!").

Example for reverse sweep via minimum frequency:

$F_{\text{AnalyzerStart}} = 100 \text{ MHz}$

$F_{\text{AnalyzerStop}} = 200 \text{ MHz}$

$F_{\text{Offset}} = -150 \text{ MHz}$

$F_{\text{min}} = 20 \text{ MHz}$

Numerator = Denominator = 1

$\rightarrow F_{\text{GeneratorStart}} = 50 \text{ MHz}$

$\rightarrow F_{\text{GeneratorStop}} = 50 \text{ MHz via } F_{\text{min}}$

Result Frequency Start

For reference only: The start frequency for the generator, calculated from the configured generator frequency and the start value defined for the analyzer.

Result Frequency Stop

For reference only: The stop frequency for the generator, calculated from the configured generator frequency and the stop value defined for the analyzer.

Type

Generator type. See also [Chapter 8.2.1, "Overview of Generators Supported by the R&S ESR"](#), on page 482.

Remote command:

`SYSTem:COMMunicate:RDEvice:GENerator<generator>:TYPE` on page 914

Interface

Type of interface connection used. The following interfaces are currently supported:

- TCP/IP
- GPIB

For details on interfaces see "[LAN](#)" on page 36 and "[GPIB Interface](#)" on page 37.

Remote command:

`SYSTem:COMMunicate:RDEvice:GENerator<generator>:INTerface`
on page 913

TTL Synchronization

If available for the specified generator type, this option activates TTL synchronization for GPIB connections.

See also [Chapter 8.2, "Connecting External Tracking Generators"](#), on page 481.

For Noise Figure measurements (K30) this setting currently has no effect.

Remote command:

`SYSTem:COMMunicate:RDEvice:GENerator<generator>:LINK` on page 913

Address

For LAN connections: TCP/IP address.

For GPIB connections: GPIB address.

Remote command:

`SYSTem:COMMunicate:RDEvice:GENerator<generator>:LINK` on page 913

Reference

Selects internal or external reference for the generator (default: internal).

Note: Using the TTL interface allows for considerably higher measurement rates than pure GPIB control, because the frequency stepping of the R&S ESR is directly coupled with the frequency stepping of the generator.

Remote command:

`SOURce<n>:EXTernal<generator>:ROSCillator[:SOURce]` on page 911

Edit Generator Setup File

Displays the setup file for the currently selected generator (see [Type](#) field) in read-only mode in an editor.

Adding new generator types

Although the existing setup files are displayed in read-only mode in the editor, they can be saved under a different name (using "File > SaveAs"). To add a new generator type to the selection list in the [Type](#) field, edit the setup file for an existing generator as required, then save the file with the extension ".gen" (select "Save as type: All Files (*.*)"). After you close the configuration dialog and re-open it, a new generator is available in the [Type](#) list with the name of the saved setup file.

Be careful, however, to adhere to the required syntax and commands. Errors will only be detected and displayed when you try to use the new generator (see also [Chapter 8.5, "Displayed Information and Errors"](#), on page 500).

Frequency Min.

For reference only: Lower frequency limit for the generator.

Frequency Max.

For reference only: Upper frequency limit for the generator.

Power Min.

For reference only: Lower power limit for the generator.

Power Max.

For reference only: Upper power limit for the generator.

8.4 Tracking Generator Functions

The following functions are available if the optional Tracking Generator or the optional External Tracking Generator is installed.

- [Calibration mechanism](#).....492
- [Calibrating for transmission and reflection measurement](#).....493
- [Transmission measurement](#).....494
- [Reflection measurement](#).....494
- [Normalization](#).....494
- [Modulation \(internal Tracking Generator only\)](#).....498

8.4.1 Calibration mechanism

Calibration means calculating the difference between the currently measured power and a reference curve, independent of the selected type of measurement (transmission/reflection). The hardware settings used for measuring the reference curve are included in the reference dataset.

Even with normalization switched on, the instrument settings can be changed in a wide area without stopping the normalization. This reduces the necessity to carry out a new normalization to a minimum.

Therefore, the reference dataset (trace with n measured values, where n is the number of [Sweep Points](#)) is stored internally as a table of n points (frequency/level).

Differences in level settings between the reference curve and the current instrument settings are taken into account automatically. If the span is reduced, a linear interpolation of the intermediate values is applied. If the span increases, the values at the left or right border of the reference dataset are extrapolated to the current start or stop frequency, i.e. the reference dataset is extended by constant values.

An enhancement label is used to mark the different levels of measurement accuracy. This enhancement label is displayed at the right diagram border if normalization is switched on and a deviation from the reference setting occurs. Three accuracy levels are defined:

Table 8-1: Measurement accuracy levels

Accuracy	Enhancement label	Reason/Limitation
high	NOR	No difference between reference setting and measurement
medium	APX (approximation)	Change of the following settings: <ul style="list-style-type: none"> • coupling (RBW, VBW, SWT) • reference level, RF attenuation • start or stop frequency • output level of tracking generator • detector (max. peak, min. peak, sample, etc.) • change of frequency: max. 691 points within the set sweep limits (corresponds to a doubling of the span)
–	Aborted normalization	More than 500 extrapolated points within the current sweep limits (in case of span doubling)



At a reference level of -10 dBm and at a tracking generator output level of the same value, the R&S ESR operates without overrange reserve. That means the R&S ESR is in danger of being overloaded if a signal is applied whose amplitude is higher than the reference line. In this case, either the message "OVLD" for overload or "IFOVL" for exceeded display range (clipping of the trace at the upper diagram border = overrange) is displayed in the status line.

Overloading can be avoided as follows:

- Reducing the output level of the tracking generator ("Source Config" on page 481 softkey in the Tracking Generator menu)
- Increasing the reference level (Ref Level softkey in the "Amplitude" menu)

8.4.2 Calibrating for transmission and reflection measurement

Prerequisite: The instrument is in tracking generator measurement mode.

1. To enter the generator output level, press the "Source Power" on page 477 softkey.
2. To enter a constant level offset for the tracking generator, press the "Source Config" on page 481 softkey and enter a "Power Offset".
3. To open the submenu for calibration, press the "Source Cal" on page 477 softkey.
4. To record a reference trace for transmission measurement, press the "Calibrate Transmission" on page 477 softkey.
The recording of the reference trace and the completion of the calibration sweep are indicated by message bo XE s.
5. To record a reference trace for reflection measurement, press the "Calibrate Reflection Short" on page 477 or "Calibrate Reflection Open" on page 477 softkey.
The recording of the reference trace and the completion of the calibration sweep are indicated by message bo XE s.
6. To switch on the normalization, press the "Normalize" on page 478 softkey.

7. To display the reference line, press the "Reference Value Position" on page 478 softkey.
8. To enter a value to shift the reference line, press the "Reference Value" on page 478 softkey.
9. To restore the settings used for source calibration, press the "Recall" on page 478 softkey.

8.4.3 Transmission measurement

This measurement yields the transmission characteristics of a two-port network. The internal or external tracking generator serves as a signal source. It is connected to the input connector of the DUT. The input of the R&S ESR is fed from the output of the DUT. A calibration can be carried out to compensate for the effects of the test setup (e.g. frequency response of connecting cables).

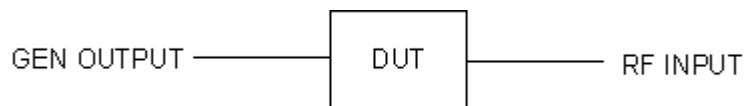 


Figure 8-3: Test setup for transmission measurement

8.4.4 Reflection measurement

Scalar reflection measurements can be carried out by means of a reflection-coefficient measurement bridge.

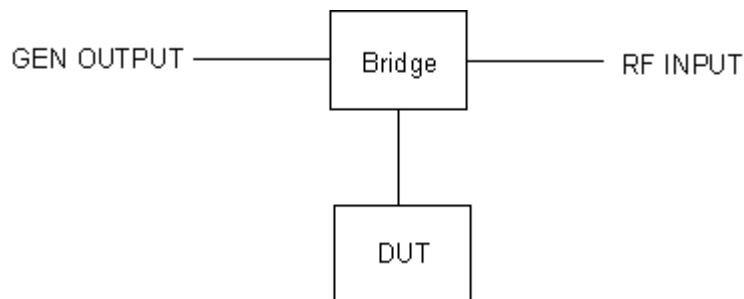


Figure 8-4: Test setup for reflection measurement

8.4.5 Normalization

The "NORMALIZE" softkey switches normalization on or off. The softkey is only available if the memory contains a correction trace.

You can shift the relative reference point within the grid using the "Reference Value Position" on page 478 softkey. Thus, the trace can be shifted from the top grid margin to the middle of the grid:

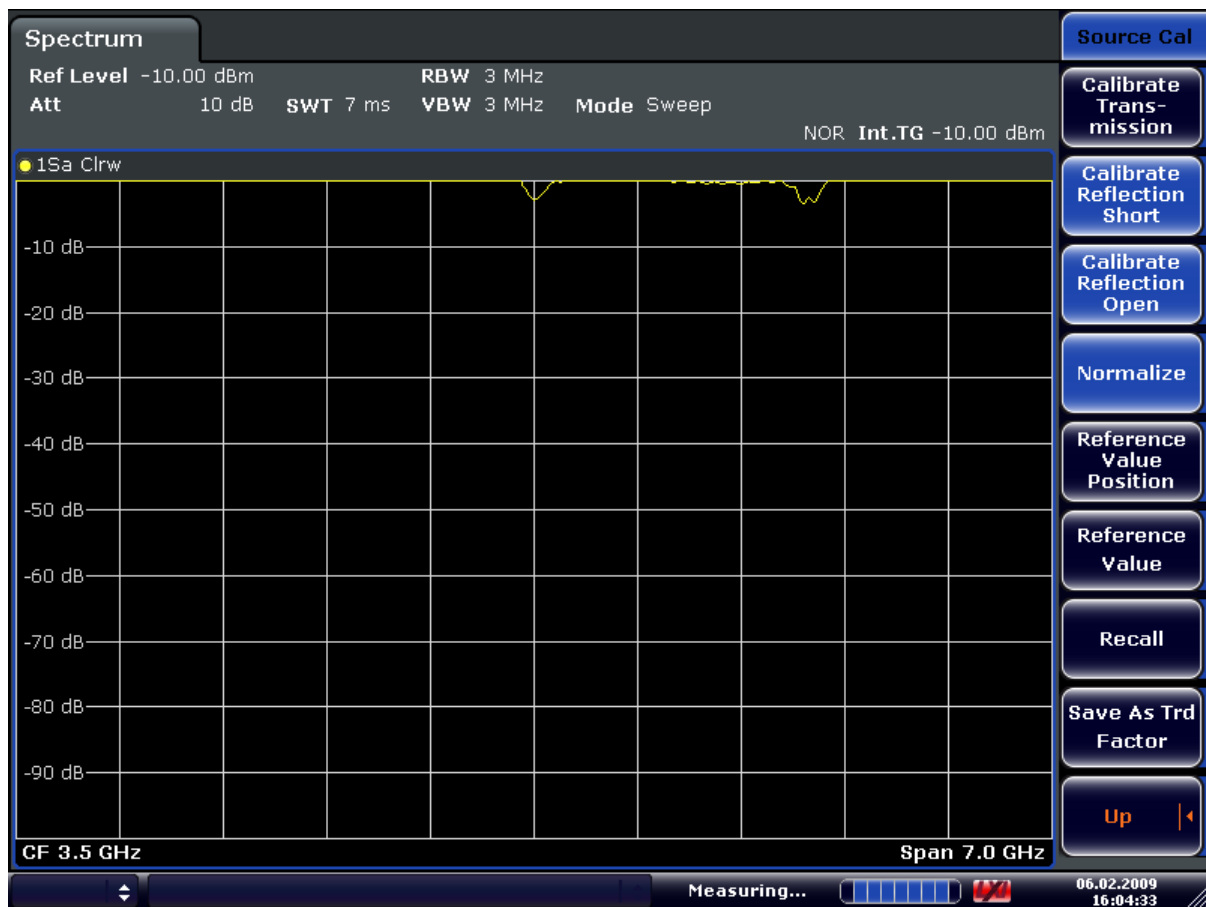


Figure 8-5: Normalized display

CORR ON, see [SENSe:]CORRection[:STATe] on page 902

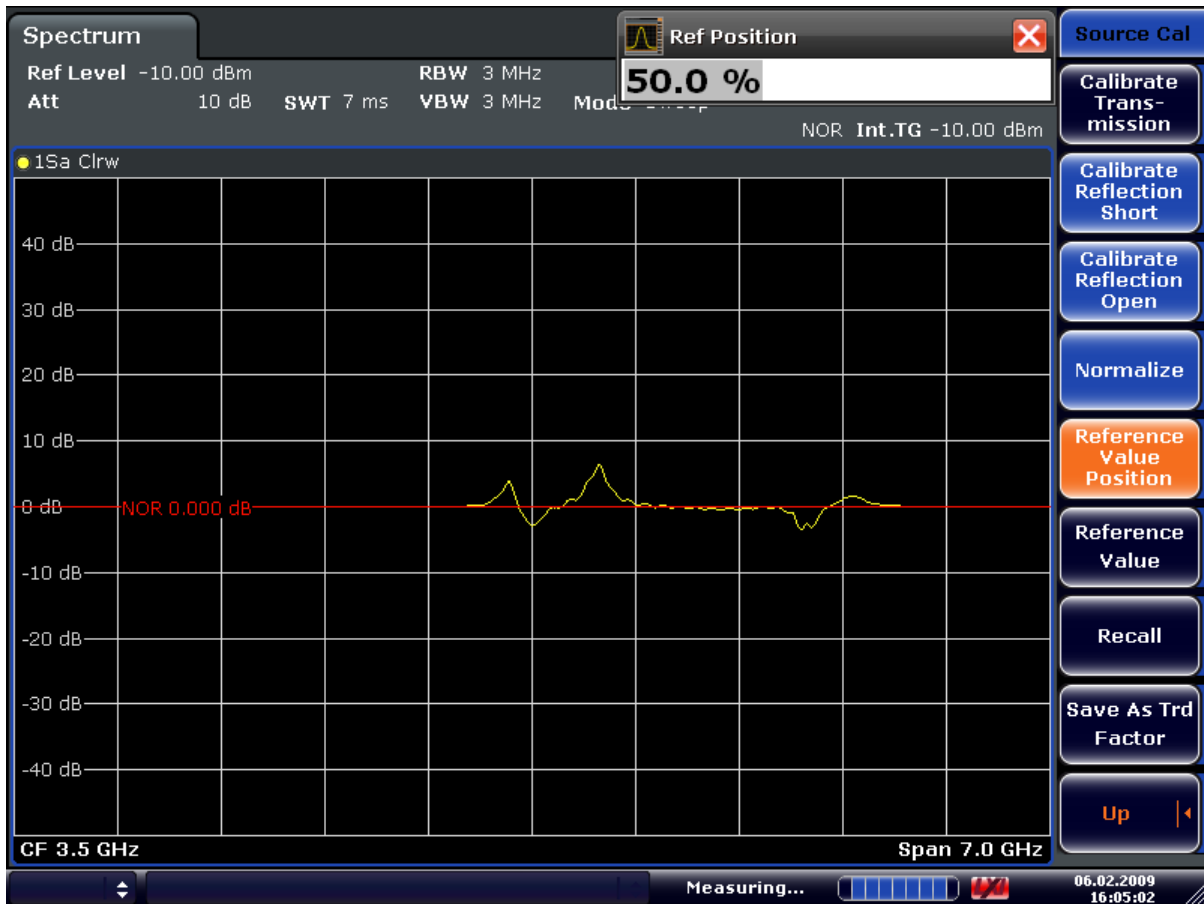


Figure 8-6: Normalized measurement, shifted with Reference Value Position= 50%

DISP:WIND:TRAC:Y:RPOS 10PCT, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]:RPOSITION](#) on page 846



Figure 8-7: Measurement with Reference Value: +10dB and Reference Value Position = 50%

After the reference line has been shifted by entering +10 dB as the "Reference Value" on page 478, deviations from the nominal value can be displayed with high resolution (e.g. 2 dB/Div.). The absolute measured values are still displayed; in the above example, 2 dB below nominal value (reference line) = 8 dB attenuation.

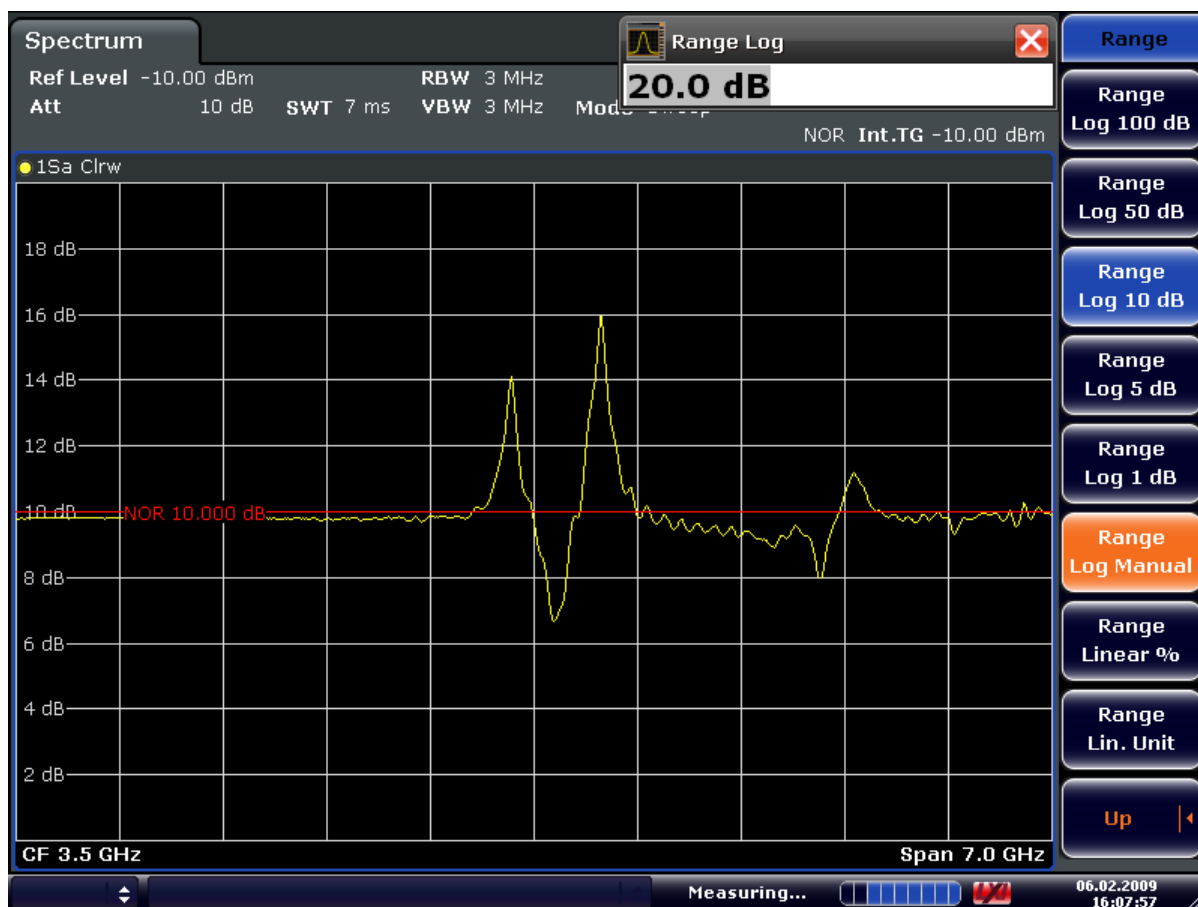


Figure 8-8: Measurement of a 10-dB attenuator pad with 2dB/Div

DISP:WIND:TRAC:Y:RVAL +10dB, see [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]:RVALue](#) on page 889

8.4.6 Modulation (internal Tracking Generator only)

The time characteristics of the tracking generator output signal can be influenced by means of external signals (input voltage range -1 V to +1 V).

Two BNC connectors at the rear panel are available as signal inputs. Their function changes depending on the selected modulation:

- TG IN I/AMand
- TG IN Q/FM

The modulation modes can be combined with each other and with the frequency offset function up to a certain degree. The following table shows which modulation modes are possible at the same time and which ones can be combined with the frequency offset function.

Table 8-2: Simultaneous modes of modulation (tracking generator)

Modulation	Frequency offset	EXT AM	EXT FM	EXT I/Q
Frequency offset		•	•	•
EXT AM	•		•	
EXT FM	•	•		
EXT I/Q	•			

• = can be combined

External AM

The "External AM" on page 479 softkey activates an AM modulation of the tracking generator output signal.

The modulation signal is applied to the TG IN I/AM connector. An input voltage of 1 V corresponds to 100% amplitude modulation.

Switching on an external AM disables the active I/Q modulation.

External FM

The "External FM" on page 479 softkey activates the FM modulation of the tracking generator output signal.

The modulation frequency range is 1 kHz to 100 kHz, the deviation can be set in 1-decade steps in the range of 100 Hz to 10 MHz at an input voltage of 1 V. The phase deviation h should not exceed the value 100.

Phase deviation $h = \text{deviation/modulation frequency}$

The modulation signal is applied to the TG IN Q/FM connector.

Switching on an external FM disables the active I/Q modulation.

External IQ

The "External I/Q" on page 479 softkey activates the external I/Q modulation of the tracking generator.

The signals for modulation are applied to the two input connectors TG IN I and TG IN Q at the rear panel of the unit. The input voltage range is ± 1 V into 50 Ω .

Switching on an external I/Q modulation disables the active external AM or FM.

Functional description of the quadrature modulator:

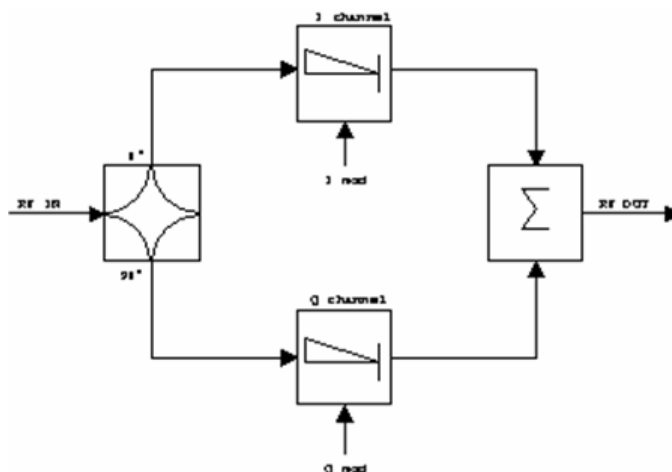


Figure 8-9: I/Q modulation

I/Q modulation is performed by means of the built-in quadrature modulator. The RF signal is divided into two orthogonal I and Q components (in phase and quadrature phase). Amplitude and phase are controlled in each path by the I and Q modulation signal. By adding the two components an RF output signal is generated that can be controlled in amplitude and phase.

Remote command:

`SOURce<n>:DM:STATe` on page 903

8.5 Displayed Information and Errors

Diagram header

In Tracking Generator measurement mode, some additional information is displayed in the diagram header.

Label	Description
INT TG: <source power>	Internal tracking generator active
INT TG: <start power>... <stop power>	Internal tracking generator with power sweep active
EXT TG <1 2>: <source power>	External tracking generator (1 or 2) active
LVL	Power Offset (see Chapter 8.3, "Configuring Tracking Generators" , on page 485)
FRQ	Frequency Offset (see Chapter 8.3, "Configuring Tracking Generators" , on page 485)
Measurement accuracy levels	
NOR	Normalization on; No difference between reference setting and measurement

Label	Description
APX (approximation)	Normalization on; Deviation from the reference setting occurs
-	Aborted normalization

For details on measurement accuracy levels, see [Chapter 8.4.5, "Normalization"](#), on page 494.

Error and status messages

Message	Description
"Ext. Generator GPIB Handshake Error!" / "Ext. Generator TCPIP Handshake Error!" / "Ext. Generator TTL Handshake Error!"	Connection to the generator is not possible, e.g. due to a cable damage or loose connection or wrong address.
"Ext. Generator Limits Exceeded!"	The allowed frequency or power ranges for the generator were exceeded.
"Reverse Sweep via min. Ext. Generator Frequency!"	Reverse sweep is performed; frequencies are reduced to the minimum frequency, then increased again; see Figure 8-2
"Ext. Generator File Syntax Error!"	Syntax error in the generator setup file (see "Edit Generator Setup File" on page 491)
"Ext. Generator Command Error!"	Missing or wrong command in the generator setup file (see "Edit Generator Setup File" on page 491)
"Ext. Generator Visa Error!!"	Error with Visa driver provided with installation (very unlikely)

9 System Configuration

9.1 Manual Operation – Local Menu

When switched on, the instrument is always in the manual measurement mode and can be operated via the front panel. As soon as the instrument receives a remote command, it is switched to the remote control mode.

In remote control mode, all keys of the instrument except the PRESET key are disabled, see [Chapter 9.3, "Instrument Setup and Interface Configuration – SETUP Key"](#), on page 504. The "LOCAL" softkey and the [Display Update \(On/Off\)](#) softkey are displayed. Depending on the setting of the [Display Update \(On/Off\)](#) softkey, the diagrams, traces and display fields are displayed or hidden. For further details on the [Display Update \(On/Off\)](#) softkey refer to [Chapter 9.3, "Instrument Setup and Interface Configuration – SETUP Key"](#), on page 504.

For details on remote control refer to [Chapter 11.1, "Remote Control - Basics"](#), on page 553.



If you select the "Local" softkey while a self-alignment or a self-test is still running (which was started remotely), the instrument only returns to the manual operation state when the alignment or test is completed.

The change to manual operation consists of:

- Enabling the Front Panel Keys
Returning to manual mode enables all inactive keys. The main softkey menu of the current mode is displayed.
- Displaying the measurement diagrams again.
The diagrams, traces and display fields are displayed again.
- Generating the "OPERATION COMPLETE" message
If, at the time of pressing the "LOCAL" softkey, the synchronization mechanism via *OPC, *OPC? or *WAI is active, the currently running measurement procedure is aborted and synchronization is achieved by setting the corresponding bits in the registers of the status reporting system.
- Setting Bit 6 (User Request) of the Event Status Register
With a corresponding configuration of the status reporting system, this bit immediately causes the generation of a service request (SRQ) to inform the control software that the user wishes to return to front panel control. For example this can be used to interrupt the control program and to correct instrument settings manually. This bit is set each time the "LOCAL" softkey is pressed.

To return to manual operation

- ▶ Press the "LOCAL" softkey.

The instrument switches from remote to manual operation, but only if the local lock-out function has not been activated in the remote control mode.

9.2 User-Defined Menu – USER key

The USER key displays a user-defined menu. The softkeys displayed here can be labelled and assigned to user-defined settings files as required.

To open the user-defined menu

- ▶ Press the USER key.
The "User" menu is displayed.

Softkeys of the "User" menu


The "User" menu contains 8 user-definable softkeys as well as a "[User Preference Setup](#)" softkey that allows you to define them. Pressing one of the user-definable softkeys has the same effect as the [Save File / Recall File](#) function for a pre-defined settings file. The definitions for these softkeys remain unchanged even after a reset function and after updating the firmware.



As opposed to recalling a settings file via the "Save/Recall" menu, when a saved settings file is loaded using one of the user-definable softkeys, the only item to be loaded is the current (measurement) settings - no trace settings, transducer or limit line configurations etc.

"User Preference Setup" softkey

Opens an "ApplicationManager" dialog to set up the user-defined softkeys.

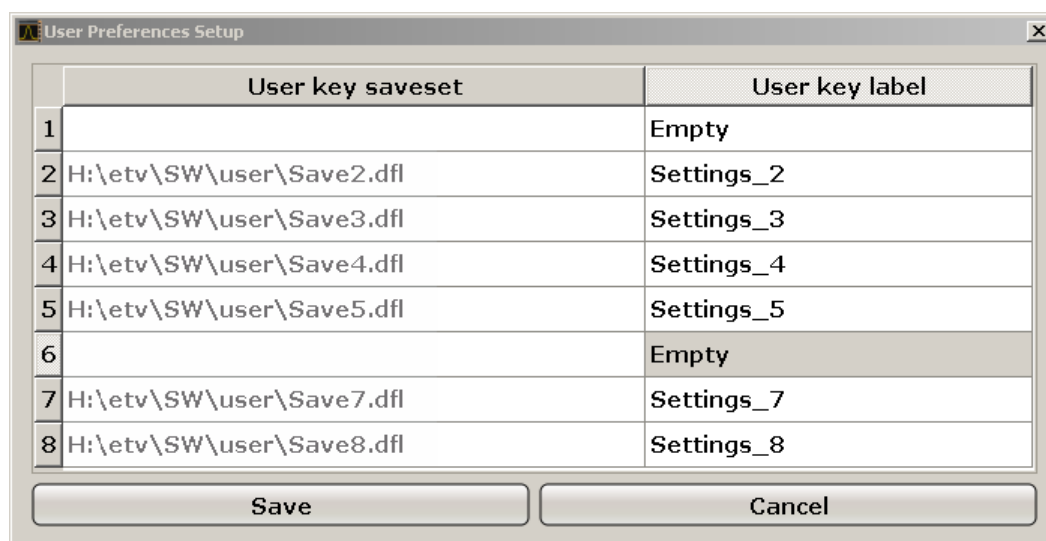

For each user-definable softkey (1–8), you can define a key label and assign a settings file that is to be loaded when the softkey is selected.

SCPI command:

[MMEMory:USER<Softkey>](#) on page 987

To define the key label

1. Click into the table entry for the corresponding softkey.
2. Enter a label for the softkey.
3. Press ENTER.

To assign a settings file

1. Click into the table entry for the corresponding softkey.
2. In the file selection dialog, select a stored settings file to be recalled when the softkey is selected.
3. Click "Select".
The selected file is displayed in the "ApplicationManager" dialog.

To store the softkey settings

- ▶ Click "Save" to store the user-defined softkey definitions.

9.3 Instrument Setup and Interface Configuration – SETUP Key

The SETUP key is used to set or display the default settings of the instrument: reference frequency, noise source, level correction values, date, time, LAN interface, firmware update and enabling of options, information about instrument configuration and service support functions. For further details refer also to the Quick Start Guide, chapter 2 "Preparing for Use".

To open the Setup menu

- ▶ Press the SETUP key.
The "Setup" menu is displayed.

Menu and softkey description

- [Chapter 9.3.1, "Softkeys of the Setup Menu"](#), on page 505

9.3.1 Softkeys of the Setup Menu

The following table shows all softkeys available in the "Setup" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Reference Int/Ext.....	507
Handle missing Ext. Ref.....	507
L Show Error Flag.....	507
L Auto select Reference.....	507
Transducer.....	507
L Using transducer factors or transducer sets.....	508
L Defining characteristics of a transducer factor.....	508
L Managing transducer sets.....	510
Alignment.....	511
L Self Alignment.....	511
L Show Align Results.....	512
L Touch Screen Alignment.....	512
General Setup.....	512
L Configure Network.....	512
L Network Address.....	512
L Computer Name.....	512
L IP Address.....	513
L Subnet Mask.....	513
L DHCP (On/Off).....	513
L LXI.....	513
L Info.....	513
L Password.....	513
L Description.....	514
L LAN Reset.....	514
L GPIB.....	514
L GPIB Address.....	514
L ID String Factory.....	514
L ID String User.....	514
L Compatibility Mode.....	514
L Mode Default.....	515
L Mode R&S FSP.....	515
L Mode R&S FSU.....	515
L GPIB Language.....	515
L IF Gain (Norm/Puls).....	516
L Sweep Repeat (On/Off).....	516
L Coupling (FSx/HP).....	517
L REV String Factory.....	517
L REV String User.....	517
L Tree Walking.....	517
L Display Update (On/Off).....	518
L GPIB Terminator LFEOI/EOI.....	518
L *IDN Format Leg./New.....	518
L I/O Logging (On/Off).....	518

L Time+Date.....	518
L Configure Monitor.....	519
L Soft Frontpanel.....	519
Display Setup.....	519
L Tool Bar State (On/Off).....	520
L Status Bar.....	520
L Screen Title (On/Off).....	520
L Time+Date (On/Off).....	520
L Time+Date Format (US/DE).....	520
L Print Logo (On/Off).....	521
L Annotation (On/Off).....	521
L Theme Selection.....	521
L Screen Colors.....	521
L Select Screen Color Set.....	521
L Color (On/Off).....	522
L Select Object.....	522
L Predefined Colors.....	522
L User Defined Colors.....	522
L Set to Default.....	522
L Print Colors.....	522
L Select Print Color Set.....	523
L Color (On/Off).....	523
L Display Pwr Save (On/Off).....	523
System Info.....	523
L Hardware Info.....	524
L Versions+Options.....	524
L System Messages.....	524
L Clear All Messages.....	525
Parameter Coupling.....	525
Firmware Update.....	525
Option Licenses.....	525
L Install Option.....	526
L Install Option by XML.....	526
Application Setup Recovery.....	526
Preset Receiver.....	526
Preset Spectrum.....	526
Service.....	527
L Input Source.....	527
L RF.....	527
L Calibration Frequency RF.....	527
L Calibration Frequency MW.....	527
L Reset Password.....	527
L Selftest.....	527
L Selftest Results.....	528
L Password.....	528
L Service Function.....	528

Reference Int/Ext

Switches between the internal and external reference signal source. The default setting is internal reference. It is important that the external reference signal is deactivated when switching from external to internal reference to avoid interactions. When an external reference is used, "EXT REF" is displayed in the status bar.

If the reference signal is missing after switching to an external reference, the message "NO REF" is displayed to indicate that no synchronization is performed.

The R&S ESR can use the internal reference source or an external reference source as frequency standard from which all internal oscillators are derived. A 10 MHz crystal oscillator is used as internal reference source. In the external reference setting, all internal oscillators of the R&S ESR are synchronized to the external reference frequency. The external frequency can be set from 1 Hz to 20 MHz in 100 kHz steps.

For details on connectors, refer to [Chapter 3.1.2, "Rear Panel View"](#), on page 35.

Remote command:

`[SENSe:]ROSCillator:SOURce` on page 934

Handle missing Ext. Ref

If an external reference is selected but none is available, there are different ways the instrument can react. This command opens a submenu to select the preferred method of handling a missing external reference. By default, an error flag is displayed in the status bar of the display.

The submenu contains the following commands:

- ["Show Error Flag"](#) on page 507
- ["Auto select Reference"](#) on page 507

Show Error Flag ← Handle missing Ext. Ref

If this option is selected, an error flag is displayed in the status bar of the display when an external reference is selected but none is available.

Remote command:

`[SENSe:]ROSCillator:SOURce` on page 934

Auto select Reference ← Handle missing Ext. Ref

If this option is selected, the instrument automatically switches back to the internal reference if no external reference is available. Note that you must re-activate the external reference if it becomes available again later.

Remote command:

`[SENSe:]ROSCillator:SOURce` on page 934

Transducer

Opens a dialog box that contains functionality to work with transducer factors or transducer sets.

Name	Unit	State	
Generic Probe	dB	-	▲
Transducer 1	dB	-	≡
Transducer 2	dB	-	▼

View Filter: Show compatible Show all

Comment:

Basically, the dialog box contains three elements.

- A list of available transducer factors or transducer sets.
The list shows the name of the transducer factor or set, its unit and its state.
- A button to filter the transducer factors that are displayed in the list.
The filter is available for transducer **factor** selection.
- A line that shows the comment of a transducer factor or set.
A comment is displayed only if one has been defined.

For more information on using transducer factors and sets, see [Chapter 5.2.6, "Transducers"](#), on page 174.

For more information on designing transducer factors and sets, see:

- ["Defining characteristics of a transducer factor"](#) on page 508
- ["Managing transducer sets"](#) on page 510

Using transducer factors or transducer sets ← Transducer

The "(Factor Set)" softkey selects if you want to use a transducer factor or set.

The label of the currently selected type of transducer is highlighted.

To actually include the transducer in the measurement, you first have to select one and turn it on with the "Active (On Off)" softkey. When the transducer factor is active, all amplitude settings and outputs take on the unit of the transducer factor. You can no longer select another unit. An exception is in case the transducer has the unit dB.

The name of the active transducer is displayed in the channel bar. To indicate the progress of the measurement, the diagram area also contains a green vertical line with the label "TF".

Note that you can turn on up to eight transducer factors at the same time. If you want to use more transducer factors in the same measurement, you have to combine them in a transducer set.

Remote command:

[\[SENSe:\]CORRection:TRANsdUcer:SElect](#) on page 953

[\[SENSe:\]CORRection:TRANsdUcer\[:STATe\]](#) on page 953

[\[SENSe:\]CORRection:TSET:SElect](#) on page 956

[\[SENSe:\]CORRection:TSET\[:STATe\]](#) on page 956

Defining characteristics of a transducer factor ← Transducer

Before you can define the characteristics of a transducer factor, make sure that you are actually using a transducer factor (→"(Factor Set)" softkey).

You can define the characteristics in several ways:

- Edit a transducer factor that already exists (→"Edit" softkey).
- Create a new transducer factor (→"New" softkey).
- Create a new transducer factor based on an existing one (→"Copy To" softkey).

Each of the three options opens a dialog box that contains the functionality to characterize a transducer factor.

Position	Value
0.00 Hz	5.00 dB
1.00000000 MHz	5.00 dB

1 = Name and comment of the transducer factor (→"Edit Name" softkey)

2 = Unit of the transducer factor (→"Edit Unit" softkey)

3 = Linear or logarithmic scaling of the frequency axis (→"Edit Name" softkey)

4 = Table of data points and graphical preview of the transducer factor (→"Edit Value" softkey)

5 = Button to insert a data point in the table (→"Insert Value" softkey)

6 = Button to delete a data point from the table (→"Delete Value" softkey)

7 = Button to shift all data points of the transducer factor horizontally by a certain amount

8 = Button to shift all data points of the transducer factor vertically by a certain amount

9 = Button to save and store the transducer factor on the internal hard disk of the R&S ESR (→"Save Factor" softkey)

Note that there are softkeys for several elements of the dialog box as mentioned in the legend above.

A transducer factor can consist of up to 625 data points. Each data point is a pair of values: the first value describes the frequency, the second value describes the level for that frequency.

Enter the frequencies in ascending order and without overlapping.

When you save the transducer factor, the R&S ESR uses the name of the transducer factor as the filename. The file type is *.tdf. If a transducer factor of the same name already exists, the R&S ESR asks you to confirm before it overwrites the existing file.

The transducer factors and sets are stored in separate but fix directories on the internal memory of the R&S ESR. You can create subdirectories for a more concise file structure and display their contents with the "Show Directories" softkey (you have to select the directory first, though).

It is possible to delete a transducer factor at any time, if you do not need it anymore (→"Delete" softkey).

Dynamic range with active transducers

The shift of the trace caused by the transducer factor by a certain amount deteriorates the dynamic range of the measurement results.

To restore the original dynamic range, you have to compensate for the transducer factor. You can do this by adjusting the reference level accordingly. If you turn on the automatic adjustment of the reference level (using the "Ref Level Adjust (Man Auto)" softkey), the R&S ESR restores the original dynamic range as best as possible. It does so by changing the reference level by the maximum level shift defined in the active transducer factor.

Remote command:

[SENSe:]CORRection:TRANsdUcer:SElect on page 953

[SENSe:]CORRection:TRANsdUcer:COMMeNt on page 951

[SENSe:]CORRection:TRANsdUcer:UNIT on page 953

[SENSe:]CORRection:TRANsdUcer:SCALIng on page 952

[SENSe:]CORRection:TRANsdUcer:DATA on page 952

[SENSe:]CORRection:TRANsdUcer:DELeTe on page 952

[SENSe:]CORRection:TRANsdUcer:ADJust:RLEVel[:STATe] on page 950

Managing transducer sets ← Transducer

Before you can define the contents of a transducer set, make sure that you are actually using a transducer set (→"(Factor Set)" softkey).

You can define the contents in several ways:

- Edit a transducer set that already exists (→"Edit" softkey).
- Create a new transducer set (→"New" softkey).
- Create a new transducer set based on an existing one (→"Copy To" softkey).

Each of the three options opens a dialog box that contains the functionality to define a transducer set.

Range	Frequency	Factors
1	0.000 Hz 50.000 kHz	Transducer 3
2	50.000 kHz 500.000 kHz	
3	500.000 kHz 1.000 MHz	Transducer 1 Transducer 5
4	1.000 MHz 10.000 MHz	Transducer 2 Transducer 4

Start Frequency: 50.0 kHz Stop Frequency: 500.0 kHz

Buttons: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10

- 1 = Name and comment of the transducer set
- 2 = Unit of the transducer set
- 3 = Button to turn the transducer break on and off
- 4 = Table of transducer set ranges and corresponding frequencies and transducer factors
- 5 = Start and stop frequency of the currently selected range
- 6 = List of transducer ranges

For more information on using and designing transducer sets, see ["Transducer sets"](#) on page 175.

Opening the dialog box also opens an additional softkey menu that contains functionality that you need to design a transducer set.

This softkey menu provides the function to

- Insert ranges up to a maximum of 10 (→"Insert Range" softkey)
- Delete ranges that already exist (→"Delete Range" softkey)
- Add up to eight transducer factors to a range (→"Add Factor" softkey)
- Replace a transducer factor that has been assigned with another one (→"Change Factor)" softkey)
- Remove a transducer factor from the transducer set (→"Remove Factor" softkey)
- Save the contents of the transducer set (→"Save Set" softkey)

Remote command:

[\[SENSe:\]CORRection:TSET:SELEct](#) on page 956

[\[SENSe:\]CORRection:TSET:COMMeNt](#) on page 955

[\[SENSe:\]CORRection:TSET:UNIT](#) on page 956

[\[SENSe:\]CORRection:TSET:BReAk](#) on page 954

[\[SENSe:\]CORRection:TSET:RANGe<range>](#) on page 955

[\[SENSe:\]CORRection:TSET:DELEte](#) on page 955

Alignment

Opens a submenu with the available functions for recording, displaying and activating the data for self-alignment.

The R&S ESR determines the correction data and characteristics required for the alignment automatically. It compares the results at different settings with the known characteristics of the high-precision calibration signal source at 65.83 MHz. The correction data is stored as a file on the instrument. You can display it using the ["Show Align Results"](#) on page 512 softkey.

The submenu contains the following commands:

- ["Self Alignment"](#) on page 511
- ["Show Align Results"](#) on page 512
- ["Touch Screen Alignment"](#) on page 512

Self Alignment ← Alignment

Starts the recording of correction data of the instrument. If the correction data acquisition has failed or if the correction values are deactivated, a corresponding message is displayed in the status field.

As long as the self-alignment data is being collected, you can cancel the procedure using the "Abort" button.

Remote command:

*CAL? on page 915

Show Align Results ← Alignment

Opens a dialog box that displays the correction data of the alignment:

- Date and time of last correction data record
- Overall results of correction data record
- List of found correction values according to function/module

The results are classified as follows:

PASSED	calibration successful without any restrictions
CHECK	deviation of correction value larger than expected, correction could however be performed
FAILED	deviations of correction value too large, no correction was possible. The found correction data are not applicable.

Remote command:

CALibration:RESult? on page 935

Touch Screen Alignment ← Alignment

Displays a touchscreen alignment dialog.

When the device is delivered, the touchscreen is initially aligned. However, it may become necessary to adjust the alignment later, e.g. after an image update or after exchanging a hard disk. If you notice that touching a specific point on the screen does not achieve the correct response, you may try adjusting the alignment, as well.

Using a finger or any other pointing device, press the 4 markers on the screen.

The touchscreen is aligned according to the executed pointing operations.

General Setup

Opens a submenu for all general settings such as IP address and LAN settings, date and time, remote control (optional) and measurement display.

Configure Network ← General Setup

Opens the "Network Connections" dialog box to change the LAN settings.

For details, refer to [Chapter 11.2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 623.

Network Address ← General Setup

Opens a submenu to configure the Internet protocol properties and the computer name.

Computer Name ← Network Address ← General Setup

Opens an edit dialog box to enter the computer name via the keypad. The naming conventions of Windows apply. If too many characters and/or numbers are entered, a message is displayed in the status line. For step-by-step instructions, refer to [Chapter 11.2.6.3, "Using Computer Names"](#), on page 628.

IP Address ← Network Address ← General Setup

Opens an edit dialog box to enter the IP address via the keypad. The TCP/IP protocol is preinstalled with the IP address 10.0.0.10. If the DHCP server is available ("DHCP On"), the dialog box entry is read-only.

The IP address consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the pre-installed address). For step-by-step instructions, refer to [Chapter 11.2.6.2, "Assigning the IP Address"](#), on page 625.

Subnet Mask ← Network Address ← General Setup

Opens an edit dialog box to enter the subnet mask via the keypad. The TCP/IP protocol is preinstalled with the subnet mask 255.255.255.0. If the DHCP server is available ("DHCP On"), the dialog box entry is read-only.

The subnet mask consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the preinstalled address). For step-by-step instructions, refer to [Chapter 11.2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 623.

DHCP (On/Off) ← Network Address ← General Setup

Switches between DHCP server available ("On") or not available ("Off"). If a DHCP server is available in the network, the IP address and subnet mask of the instrument are obtained automatically from the DHCP server. For further details, refer to [Chapter 11.2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 623.

LXI ← General Setup

Opens the LXI submenu containing the following softkeys:

- "Info" on page 513
- "Password" on page 513
- "Description" on page 514
- "LAN Reset" on page 514

LXI functionality is available only for user accounts with administrator rights.

Info ← LXI ← General Setup

Shows the current LXI parameters, including the current version, class and various computer parameters like the computer name or IP address.

While active, the dialog is not updated.

LXI functionality is available only for user accounts with administrator rights.

Remote command:

`SYSTem:LXI:INFo?` on page 990

Password ← LXI ← General Setup

Shows the currently set password. You can also change the current password using this softkey.

The password is required to change settings via the web browser (e.g. IP parameter). An empty password is not valid, i.e. you must enter a password.

By default, the password is *LxiWebIfc*.

LXI functionality is available only for user accounts with administrator rights.

Remote command:

[SYSTem:LXI:PASSword](#) on page 990

Description ← LXI ← General Setup

Opens a dialog box to view or change the LXI instrument description. This description is used on some of the LXI web sites.

By default, the description is "Signal Analyzer".

LXI functionality is available only for user accounts with administrator rights.

Remote command:

[SYSTem:LXI:MDEscription](#) on page 990

LAN Reset ← LXI ← General Setup

Resets the LAN configuration to a state required by the LXI standard. For example, the TCP/IP mode is set to "DHCP" and "Dynamic DNS" and "ICMP Ping" are enabled. In addition, the R&S ESR sets the password and the instrument description to their initial states (see "[Password](#)" on page 513 and "[Description](#)" on page 514 softkeys).

Only user accounts with administrator rights can reset the LAN configuration.

Remote command:

[SYSTem:LXI:LANReset](#) on page 990

GPIB ← General Setup

Opens a submenu to set the parameters of the remote control interface.

GPIB Address ← GPIB ← General Setup

Opens an edit dialog box to enter the GPIB address. Values from 0 to 30 are allowed. The default address is 20.

Remote command:

[SYSTem:COMMunicate:GPIB\[:SELF\]:ADDRess](#) on page 989

ID String Factory ← GPIB ← General Setup

Selects the default response to the *IDN? query.

Remote command:

[SYSTem:IDENtify:FACTory](#) on page 926

ID String User ← GPIB ← General Setup

Opens an edit dialog box to enter a user-defined response to the *IDN? query. Max. 36 characters are allowed.

Remote command:

[SYSTem:IDENtify\[:STRing\]](#) on page 926

Compatibility Mode ← GPIB ← General Setup

Sets the R&S ESR in a state compatible to previous R&S devices, enabling the usage of existing external control applications. In particular, the number of measurement points and available bandwidths are adjusted to the settings of other devices.

Furthermore, some special GPIB settings are available to emulate HP models (see [Chapter 11.18, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 1039):

- "GPIB Language" on page 515
- "IF Gain (Norm/Puls)" on page 516
- "Sweep Repeat (On/Off)" on page 516
- "Coupling (FSx/HP)" on page 517

"Default" Standard R&S ESR operation, see ["Mode Default"](#) on page 515

"R&S FSP" Compatible to R&S FSP, see ["Mode R&S FSP"](#) on page 515

"R&S FSU" Compatible to R&S FSU, see ["Mode R&S FSU"](#) on page 515

Remote command:

[SYSTem:COMPAtible](#) on page 920

Mode Default ← Compatibility Mode ← GPIB ← General Setup

Resets the number of measurement points and available bandwidths to default R&S ESR values.

Remote command:

SYST:COMP DEF, see [SYSTem:COMPAtible](#) on page 920

Mode R&S FSP ← Compatibility Mode ← GPIB ← General Setup

Sets the number of measurement points and available bandwidths as in R&S FSP devices.

Remote command:

SYST:COMP FSP, see [SYSTem:COMPAtible](#) on page 920

Mode R&S FSU ← Compatibility Mode ← GPIB ← General Setup

Sets the number of measurement points and available bandwidths as in R&S FSU devices.

Remote command:

SYST:COMP FSU, see [SYSTem:COMPAtible](#) on page 920

GPIB Language ← Compatibility Mode ← GPIB ← General Setup

Opens a list of selectable remote-control languages:

Language	Comment
SCPI	
71100C	Compatible to 8566A/B
71200C	Compatible to 8566A/B
71209A	Compatible to 8566A/B
8560E	
8561E	
8562E	
8563E	

Language	Comment
8564E	
8565E	
8566A	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8566B	
8568A	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8568A_DC	Uses DC input coupling by default if supported by the instrument
8568B	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8568B_DC	Uses DC input coupling by default if supported by the instrument
8591E	Compatible to 8594E
8594E	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.

For details on the GPIB languages, see [Chapter 11.18, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 1039.

Remote command:

[SYSTem:LANGuage](#) on page 992

IF Gain (Norm/Puls) ← Compatibility Mode ← GPIB ← General Setup

Configures the internal IF gain settings in HP emulation mode due to the application needs. This setting is only taken into account for resolution bandwidth < 300 kHz.

NORM	Optimized for high dynamic range, overload limit is close to reference level.
PULS	Optimized for pulsed signals, overload limit up to 10 dB above reference level.

This softkey is only available if an HP language is selected via the "GPIB Language" softkey (see ["GPIB Language"](#) on page 515).

Remote command:

[SYSTem:IFGain:MODE](#) on page 993

Sweep Repeat (On/Off) ← Compatibility Mode ← GPIB ← General Setup

Controls a repeated sweep of the E1 and MKPK HI/HL HP model commands (for details on the commands refer to ["GPIB Language"](#) on page 515). If the repeated sweep is "OFF", the marker is set without sweeping before.

Note: In single sweep mode, switch off this softkey before you set the marker via the E1 and MKPK HI/HL commands to avoid sweeping again.

This softkey is only available if an HP language is selected via the "GPIB Language" softkey (see ["GPIB Language"](#) on page 515).

Remote command:

[SYSTem:RSW](#) on page 992

Coupling (FSx/HP) ← Compatibility Mode ← GPIB ← General Setup

Controls the default coupling ratios in the HP emulation mode for:

- Span and resolution bandwidth (Span/RBW) and
- Resolution bandwidth and video bandwidth (RBW/VBW)

For FSP(=FSV), the standard parameter coupling of the instrument is used. As a result, usually a shorter sweeptime is used than for HP.

This softkey is only available if an HP language is selected via the "GPIB Language" softkey (see ["GPIB Language"](#) on page 515).

Remote command:

`SYSTem:HPCoupling` on page 992

REV String Factory ← Compatibility Mode ← GPIB ← General Setup

Selects the default response to the `REV?` query for the revision number (HP emulation only, see [Chapter 11.18, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 1039).

Remote command:

`SYSTem:REVision:FACTory` on page 991

REV String User ← Compatibility Mode ← GPIB ← General Setup

Opens an edit dialog box to enter a user-defined revision number in response to the `REV?` query (HP emulation only, see [Chapter 11.18, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 1039). Max. 36 characters are allowed.

Remote command:

`SYSTem:REVision[:STRing]` on page 991

Tree Walking ← Compatibility Mode ← GPIB ← General Setup

Defines how remote control programs are evaluated, in particular multiple commands in one command line.

Note that this setting is retained after a [preset] or recall operation.

See the SCPI command for an example.

"Normal"	(Initial default:) SCPI-conform behavior The first command is always referenced to the root node. Subsequent commands, however, are referenced to the same tree level as the previous command in a message unit.
"Enhanced"	If subsequent commands are not found on the same tree level as the previous command, the SCPI parser searches "backwards up the tree" of defined SCPI commands. If the command is found at a higher node, that command is used. Only if the command is not found anywhere, an error message is returned.

Remote command:

`SYSTem:TWALking` on page 993

Display Update (On/Off) ← GPIB ← General Setup

Defines whether the instrument display is switched off when changing from manual operation to remote control. In remote control mode, this softkey is displayed in the local menu.

Remote command:

`SYSTem:DISPlay:UPDate` on page 921

GPIB Terminator LFE0I/EOI ← GPIB ← General Setup

Changes the GPIB receive terminator.

According to the standard, the terminator in ASCII is <LF> and/or <EOI>. For binary data transfers (e.g. trace data) from the control computer to the instrument, the binary code used for <LF> might be included in the binary data block. Therefore, it should not be interpreted as a terminator in this particular case. This can be avoided by changing the receive terminator to EOI.

Remote command:

`SYSTem:COMMunicate:GPIB[:SELF]:RTERminator` on page 989

***IDN Format Leg./New ← GPIB ← General Setup**

Defines the response format to the `*IDN?` remote command (see `*IDN?` on page 916). This function is intended for re-use of existing control programs together with the R&S ESR.

"Leg"	Legacy format, compatible to the R&S FSP/FSU/FSQ family e.g. Rohde&Schwarz, FSV-7, 100005/007, 1.61
"New"	R&S ESR format e.g. Rohde&Schwarz, FSV-7, 1307.9002K07/100005, 1.61

Remote command:

`SYSTem:FORMat:IDENT` on page 921

I/O Logging (On/Off) ← GPIB ← General Setup

Activates or deactivates the SCPI log function. All remote control commands received by the R&S ESR are recorded in the following log file:

`C:\R_S\Instr\scpi\logging\ScpiLog.txt`

Logging the commands can be extremely useful for debug purposes, e.g. to find misspelled keywords in control programs.

Remote command:

`SYSTem:CLOGging` on page 920

Time+Date ← General Setup

Opens an edit dialog box to enter time and date for the internal real-time clock.

For details, refer to [Chapter 3.2.4.2, "Setting the Date and Time"](#), on page 49.

Remote command:

`SYSTem:TIME` on page 923

`SYSTem:DATE` on page 924

Configure Monitor ← General Setup

Determines and displays the configuration of a connected external monitor, if available. In the configuration dialog box, you can switch from the internal monitor (laptop icon) to the external monitor (monitor icon), or both (double monitor icon). For external, the R&S ESR display is disabled (turns dark). The screen content formerly displayed on the R&S ESR is displayed on the external screen.

For further details, refer to [Chapter 3.2.3, "Connecting an External Monitor"](#), on page 48.

Soft Frontpanel ← General Setup

Activates or deactivates the display of the instrument emulation.

deactivated	Only the measurement screen is displayed. This is the setting for working at the R&S ESR.
activated	In addition to the measurement screen, the whole front panel is displayed, i.e. the hardkeys and other hardware controls of the device are simulated on the screen. This is the setting for working at a computer with Remote Desktop or at an external monitor.

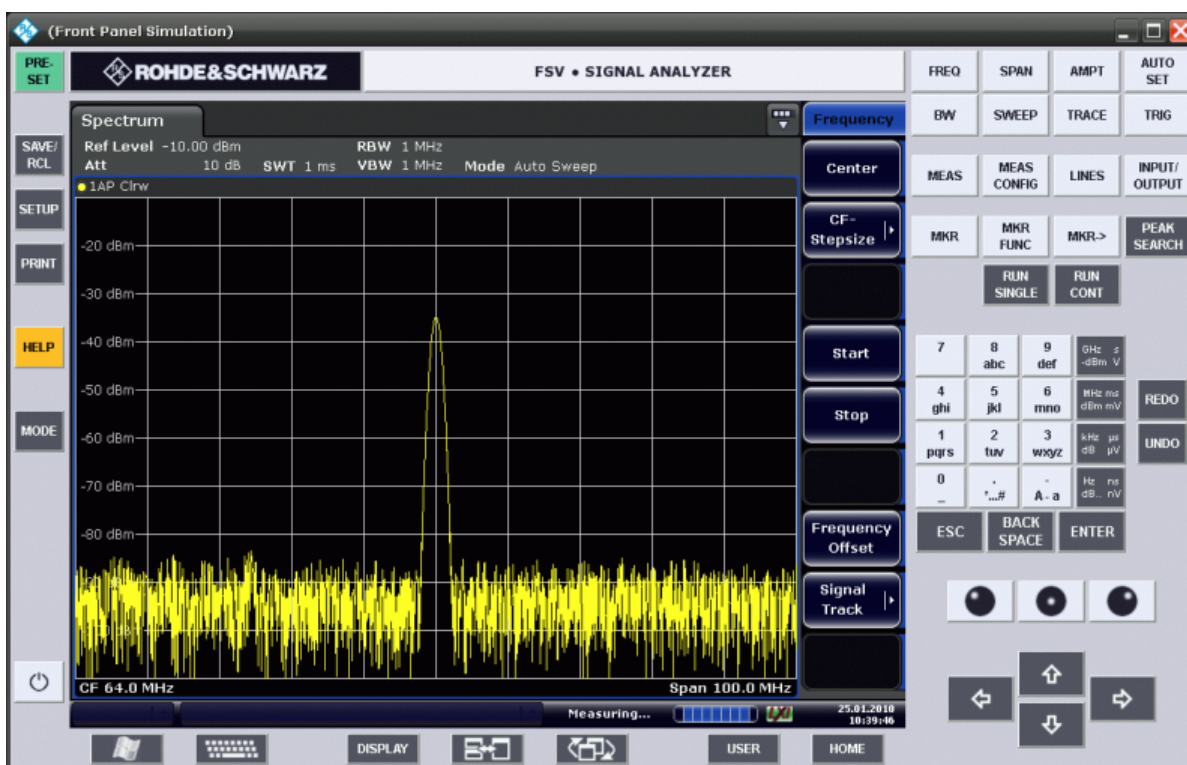


Figure 9-1: Soft frontpanel

Alternatively to this softkey, you can use the F6 key.

Remote command:

[SYSTEM:DISPlay:FPANel](#) on page 924

Display Setup

Opens a submenu to define the display settings.

The following display settings are available:

- "Tool Bar State (On/Off)" on page 520
- "Screen Title (On/Off)" on page 520
- "Time+Date (On/Off)" on page 520
- "Time+Date Format (US/DE)" on page 520
- "Print Logo (On/Off)" on page 521
- "Annotation (On/Off)" on page 521
- "Theme Selection" on page 521
- "Screen Colors" on page 521
- "Print Colors" on page 522
- "Display Pwr Save (On/Off)" on page 523

Tool Bar State (On/Off) ← Display Setup

Displays or removes the toolbar above the diagram.

This setting is stored in instrument settings files.

Remote command:

`DISPlay:TBAR[STATe]` on page 980

Status Bar ← Display Setup

Displays or removes the status bar beneath the diagram.

The status bar indicates the global instrument settings, the instrument status and any irregularities during measurement or display.

This setting is stored in instrument settings files.

Remote command:

`DISPlay:SBAR[:STATe]` on page 980

Screen Title (On/Off) ← Display Setup

Activates/deactivates the display of a diagram title (if available) and opens an edit dialog box to enter a new title for the active diagram. Max. 20 characters are allowed.

Remote command:

`DISPlay[:WINDow<n>]:TEXT[:DATA]` on page 983

`DISPlay[:WINDow<n>]:TIME` on page 983

Time+Date (On/Off) ← Display Setup

Activates/deactivates the display of date and time beneath the diagram.

This setting is stored in instrument settings files.

Remote command:

`DISPlay[:WINDow<n>]:TIME` on page 983

Time+Date Format (US/DE) ← Display Setup

Switches the time and date display on the screen between US and German (DE).

This setting is stored in instrument settings files.

Remote command:

`DISPlay[:WINDow<n>]:TIME:FORMat` on page 984

Print Logo (On/Off) ← Display Setup

Activates/deactivates the display of the Rohde & Schwarz company logo in the upper left corner.

Remote command:

`DISPlay:LOGO` on page 979

Annotation (On/Off) ← Display Setup

Activates/deactivates the display of the frequency information in the diagram footer. For example, to protect confidential data it can be useful to hide the frequency information.

Remote command:

`DISPlay:ANNOtation:FREQuency` on page 977

Theme Selection ← Display Setup

Opens a selection list of available themes for the screen display. The theme defines the colors used for keys and screen elements, for example. The default theme is "Blue-Ocean".

Remote command:

`DISPlay:THEMe:SElect` on page 981

Screen Colors ← Display Setup

Opens a submenu to configure the screen colors.

For details on screen colors, refer to [Chapter 3.2.4.4, "Setting the Screen Colors"](#), on page 50.

The submenu contains the following commands:

- ["Select Screen Color Set"](#) on page 521
- ["Color \(On/Off\)"](#) on page 522
- ["Select Object"](#) on page 522
- ["Predefined Colors"](#) on page 522
- ["User Defined Colors"](#) on page 522
- ["Set to Default"](#) on page 522

Remote command:

`DISPlay:CMAP<item>:HSL` on page 978

Select Screen Color Set ← Screen Colors ← Display Setup

Opens the "Select Screen Color Set" dialog box to select default or user-defined color settings.

If one of the default settings is selected ("Default Colors 1"/"2"), the default settings for brightness, color tint and color saturation for all display screen elements are restored. The default color schemes provide optimum visibility of all picture elements at an angle of vision from above or below. Default setting is "Default Colors 1".

If "User Defined Colors" is selected, a user-defined color set can be defined.

For details on screen colors, refer to [Chapter 3.2.4.4, "Setting the Screen Colors"](#), on page 50.

Remote command:

`DISPlay:CMAP<item>:DEFault` on page 978

Color (On/Off) ← Screen Colors ← Display Setup

Switches from color display to black-and-white display and back. The default setting is color display.

Select Object ← Screen Colors ← Display Setup

Opens the "Color Setup" dialog box to select the color settings for a selected object.

The "Selected Object" list is displayed to select the object. To set the color, the predefined colors are displayed.

Remote command:

`DISPlay:CMAP<item>:HSL` on page 978

`HCOPY:CMAP<item>:HSL` on page 959

Predefined Colors ← Screen Colors ← Display Setup

In the "Color Setup" dialog box, displays the "Predefined Colors" (alternatively to the "Predefined Colors" button). This softkey is only available if, in the "Select Color Set" dialog box, the "User Defined Colors" option is selected or the "Color Setup" dialog box is displayed.

For details on screen colors, refer to [Chapter 3.2.4.4, "Setting the Screen Colors"](#), on page 50.

Remote command:

`DISPlay:CMAP<item>:PDEFined` on page 978

`HCOPY:CMAP<item>:PDEFined` on page 960

User Defined Colors ← Screen Colors ← Display Setup

In the "Color Setup" dialog box, displays the "User Defined Colors" (alternatively to the "User Defined Colors" button). This softkey is only available if, in the "Select Color Set" dialog box, the "User Defined Colors" option is selected or the "Color Setup" dialog box is displayed.

For details on screen colors, refer to [Chapter 3.2.4.4, "Setting the Screen Colors"](#), on page 50.

Remote command:

`DISPlay:CMAP<item>:HSL` on page 978

`HCOPY:CMAP<item>:HSL` on page 959

Set to Default ← Screen Colors ← Display Setup

Opens the "Set to Default" dialog box to select one of the factory default color settings.

Remote command:

`DISPlay:CMAP<item>:DEFault` on page 978

`HCOPY:CMAP<item>:DEFault` on page 959

Print Colors ← Display Setup

Opens a submenu to select the colors for the printout. To facilitate color selection, the selected color combination is displayed when the menu is entered. The previous colors are restored when the menu is exited.

For details on screen colors, refer to [Chapter 3.2.4.4, "Setting the Screen Colors"](#), on page 50.

The submenu contains the following commands:

- "Select Print Color Set" on page 523
- "Color (On/Off)" on page 523
- "Select Object" on page 545
- "Predefined Colors" on page 545
- "User Defined Colors" on page 545
- "Set to Default" on page 545

Remote command:

`HCOPY:CMAP<item>:HSL` on page 959

Select Print Color Set ← Print Colors ← Display Setup

Opens the "Select Print Color Set" dialog box to select the color settings for printout.

Screen colors (Print)	Selects the current screen colors for the printout. The background is always printed in white and the grid in black.
Screen colors (Hardcopy)	Selects the current screen colors without any changes for a hardcopy. The output format is set via the "Device Setup" on page 544 softkey in the "Print" menu.
Optimized colors	Selects an optimized color setting for the printout to improve the visibility of the colors (default setting). Trace 1 is blue, trace 2 black, trace 3 green, and the markers are turquoise. The background is always printed in white and the grid in black.
User-Defined colors	Enables the softkeys to define colors for the printout.

Remote command:

`HCOPY:CMAP<item>:DEFault` on page 959

Color (On/Off) ← Print Colors ← Display Setup

Switches from color printout to black-and-white printout and back. All colored areas are printed in white and all colored lines in black. This improves the contrast. The default setting is color printout, provided that the selected printer can produce color printouts.

Remote command:

`HCOPY:DEVICE:COLor` on page 961

Display Pwr Save (On/Off) ← Display Setup

Switches the power-save mode for the display (On/Off) and opens an edit dialog box to enter the time for the power-save function to respond. After this time, the display is switched off completely, i.e. including backlighting. This mode is recommended when the instrument is exclusively operated in remote control.

For details on the power-save mode for the display, refer to [Chapter 3.2.4.5, "Setting the Display Power Save Function"](#), on page 53.

Remote command:

`DISPlay:PSAVe[:STATe]` on page 980

`DISPlay:PSAVe:HOLDoff` on page 979

System Info

Opens a submenu to display detailed information on module data, device statistics and system messages.

The submenu contains the following commands:

- ["Hardware Info"](#) on page 524
- ["Versions+Options"](#) on page 524
- ["System Messages"](#) on page 524
- ["Clear All Messages"](#) on page 525

Hardware Info ← System Info

Opens a dialog box that displays hardware information, e.g. on the frontend and motherboard. Every listed component is described by its serial number, order number, model information, hardware code, and hardware revision.

Remote command:

[DIAGnostic<n>:SERVice:HWINfo?](#) on page 925

Versions+Options ← System Info

Opens a dialog box that displays a list of hardware and firmware information, including:

Label	Description
Device ID	Unique ID of the device
Instrument firmware	Installed firmware version
BIOS	Installed BIOS version
CPLD	CPLD version
MB-FPGA	Motherboard FPGA version
Data Sheet version	Data sheet version of the basic device
<option>	Installed hardware and firmware options
"Open Source Acknowledgment: Open"	Displays a PDF file containing information on open source code used by the R&S ESR firmware.

For details on options, refer to [Chapter 3.2.1.10, "Checking the Supplied Options"](#), on page 46.

Remote command:

[*IDN?](#) on page 916

[*OPT?](#) on page 917

[SYSTem:DEVice:ID?](#) on page 924

System Messages ← System Info

Opens the "System Messages" dialog box that displays the generated system messages in the order of their occurrence. The most recent messages are placed at the top of the list. Messages that have occurred since the last display of system messages menu are marked with an asterisk '*'. The following information is available:

No	device-specific error code
Message	brief description of the message
Component	hardware messages: name of the affected module
	software messages: name of the affected software
Date/Time	date and time of the occurrence of the message

If the number of error messages exceeds the capacity of the error buffer, "Message buffer overflow" is displayed. To delete messages, see ["Clear All Messages"](#) on page 525 softkey.

Remote command:

[SYSTem:ERRor:LIST?](#) on page 927

Clear All Messages ← System Info

Deletes all system messages. The softkey is only available if the "System Messages" dialog box is displayed.

Remote command:

[SYSTem:ERRor:CLEar:ALL](#) on page 926

Parameter Coupling

Opens a dialog box to couple or decouple various parameters.

If the coupling of a parameter is on, its value is transferred when you switch from receiver into another operating mode and vice versa. Coupling of the following parameters is supported.

- Frequency
- Span (start and stop frequencies)
- Marker frequency
- RF attenuation and unit
- 10 dB Minimum Attenuation
- Preamplifier state
- Preselector state
- Audio demodulation settings
- Bandwidth settings (including filter type)
- Limit lines

Note that the preselector is always on in receiver mode.

Limit lines are only transferred if they are compatible to the current diagram configuration.

Remote command:

See [Chapter 11.9.3, "Coupling Parameters"](#), on page 927

Firmware Update

Opens the "Firmware Update" dialog box.

Enter the name of or browse for the firmware installation file and press the "Execute" button. For details on installation, refer to [Chapter 3.3, "Firmware Update and Installation of Firmware Options"](#), on page 60.

Only user accounts with administrator rights can perform a firmware update.

Remote command:

[SYSTem:FIRMware:UPDate](#) on page 921

Option Licenses

Opens a submenu to install options. For details on options, refer to [Chapter 3.3, "Firmware Update and Installation of Firmware Options"](#), on page 60.

The submenu contains the following commands:

- ["Install Option"](#) on page 526

- ["Install Option by XML"](#) on page 526

Only user accounts with administrator rights are able to install options.

Install Option ← Option Licenses

Opens an edit dialog box to enter the license key for the option that you want to install.

If an option is about to expire, a message box is displayed to inform you. You can then use this softkey to enter a new license key.

If an option has already expired, a message box appears for you to confirm. In this case, all instrument functions are unavailable (including remote control) until you reboot the R&S ESR. Then use the "Install Option" softkey to enter the new license key.

For more information about the option in question, refer to the [System Info](#) softkey in the "Setup" menu.

Only user accounts with administrator rights are able to install options.

Install Option by XML ← Option Licenses

Opens an edit dialog to install an additional option to the R&S ESR using an XML file.

Enter or browse for the name of an XML file on the instrument that contains the option key and press "Select".

Only user accounts with administrator rights are able to install options.

Application Setup Recovery

Controls instrument behavior when switching between measurement applications, e.g. from "Spectrum" to "Analog Demod" and back.

If this softkey is activated, the current instrument settings are stored when you switch to a different application. When you switch back to the previous application, the corresponding instrument settings are restored. Thus, the settings of the individual applications are independent of each other.

If the softkey is deactivated (default), only a few parameters of the current instrument setting are passed between applications (e.g. center frequency, level settings).

Note that this setting is not deactivated during a preset operation, i.e. you must deactivate it manually, if necessary.

Remote command:

[SYSTem:APPLication:SRECovery\[:STATe\]](#) on page 920

Preset Receiver

Selects the default settings defined for the Receiver mode to be restored when you perform an instrument preset.

Remote command:

[SYSTem:PRESet:COMPAtible](#) on page 922

Preset Spectrum

Selects the default settings defined for the Spectrum mode to be restored when you perform an instrument preset.

Remote command:

[SYSTem:PRESet:COMPAtible](#) on page 922

Service

Opens a submenu that contains additional functions for maintenance and/or troubleshooting.

NOTICE! Risk of incorrect operation due to service functions. The service functions are not necessary for normal measurement operation. However, incorrect use can affect correct operation and/or data integrity of the R&S ESR.

Therefore, many of the functions can only be used after entering a password. They are described in the instrument service manual.

Only user accounts with administrator rights are able to use service functions.

Input Source ← Service

Opens a submenu to select the input source for measurement.

The submenu contains the following options:

- "RF" on page 527
- "Calibration Frequency RF" on page 527

RF ← Input Source ← Service

Switches the input of the R&S ESR to the RF input connector (normal position). This is the default setting.

Remote command:

`DIAGnostic<n>:SERvice:INPut[:SElect]` on page 937

Calibration Frequency RF ← Input Source ← Service

Opens an edit dialog box to set the generator frequency for the internal calibration.

Remote command:

`DIAGnostic<n>:SERvice:INPut:PULSed:CFrequency` on page 936

Calibration Frequency MW ← Input Source ← Service

Opens an edit dialog box to set the calibration frequency for frequencies greater than 7 GHz.

(For R&S ESR 26 and 40 only).

Remote command:

`DIAGnostic<n>:SERvice:INPut:PULSed:MCFrequency` on page 937

Reset Password ← Service

Deactivates all set passwords.

Remote command:

`SYSTem:PASSword:RESet` on page 939

Selftest ← Service

Initiates the self-test of the instrument modules to identify a defective module if there was a failure. All modules are checked consecutively and the test result is displayed.

Remote command:

`*TST?` on page 918

Selftest Results ← Service

Opens the "Selftest Result" dialog box that contains the test results. In case of failure a short description of the failed test, the defective module, the associated value range and the corresponding test results are indicated.

Remote command:

[DIAGnostic<n>:SERVice:STEst:RESult?](#) on page 937

Password ← Service

Opens an edit dialog box to enter the password. This ensures that the service functions are only used by authorized personnel.

Remote command:

[SYSTem:PASSword\[:CENable\]](#) on page 939

Service Function ← Service

Opens the "Service Function" dialog box to start special service functions. For further information, refer to the service manual.

Remote command:

[DIAGnostic<n>:SERVice:SFUNction](#) on page 938

10 Data Management and Documentation

10.1 Saving and Recalling Settings Files – SAVE/RCL Key

The [SAVE/RCL] key is used to store and recall an instrument configuration.

The "Save/Recall" menu enables the user to save or recall the configuration file from the instrument's internal storage, a memory stick or a network drive. The file can also include various settings used by the options installed on the instrument. Measurement results can also be stored; however, it is strongly recommended that you use the "Print Screen" or "Trace Export" functions instead.



When recalling a saved configuration file, the following restrictions apply:

- Configuration files cannot be transferred from an R&S ESR with a larger frequency range to one with a smaller frequency range
 - Configuration files created on a R&S ESR with certain options in use will not work on an R&S ESR without these options
 - Files created with newer firmware versions may not work with a previous version
-

Saving and recalling transducer and limit line settings

If a transducer file was in use when the save set was stored (with the save item "Current Settings" only) it is anticipated that these transducer values should remain valid after every recall of that save set. Thus, even if the transducer file is changed and the original save set file is recalled later, the *originally stored* transducer values are recalled and applied to the measurement. In the "Transducer" dialog box, however, the *changed* transducer file values are displayed as no updated transducer file was loaded.

The same applies to limit line settings.



If you want to apply the changed transducer values after recalling the save set you must force the application to reload the transducer file. To do so, simply open the "Edit Transducer" dialog box and toggle the "X-Axis" option from "lin" to "log" and back. Due to that change, the transducer file is automatically reloaded, and the changed transducer values are applied to the current measurement. Now you can create a new save set with the updated transducer values.

Similarly, if you want to apply the changed limit values after recalling the save set you must force the application to reload the limit file. To do so, simply open the "Edit Limit Line" dialog box (see "Edit" on page 211) and toggle the "Y-Axis" unit. Due to that change, the limit line file is automatically reloaded, and the changed limit values are applied to the current measurement. Now a new save set with the updated limit values can be created.

To open the Save/Recall menu

- ▶ Press the [SAVE/RCL] key.
The "Save/Recall" menu is displayed.

Menu and softkey description

- [Chapter 10.1.1, "Softkeys of the SAVE/RCL Menu"](#), on page 530

Further information

- [Chapter 10.1.2, "File Selection Dialog Boxes"](#), on page 536
- [Chapter 10.1.3, "Importing and Exporting I/Q Data"](#), on page 538

10.1.1 Softkeys of the SAVE/RCL Menu

The following table shows all softkeys available in the "Save/Recall" menu.

Save.....	531
L Save File / Recall File.....	531
L Select Path.....	531
L Select File.....	531
L Edit File Name.....	531
L Edit Comment.....	531
L Select Items.....	531
L Select Items.....	531
L Enable all Items.....	532
L Disable all Items.....	532
L Delete File.....	532
Recall.....	532
Startup Recall.....	532
L Startup Recall (On/Off).....	533
L Select Dataset.....	533
ScreenShot.....	533
Export.....	533
L ASCII Trace Export.....	533
L Decim Sep.....	534
L IQ Export.....	534
Import.....	534
L IQ Import.....	534
File Manager.....	534
L Edit Path.....	534
L New Folder.....	534
L Copy.....	535
L Rename.....	535
L Cut.....	535
L Paste.....	535
L Delete.....	535
L Sort Mode.....	535
L Name.....	535

L	Date.....	535
L	Extension.....	535
L	Size.....	535
L	File Lists (1/2).....	535
L	Current File List (1/2).....	535
L	Network Drive.....	536
L	Map Network Drive.....	536
L	Disconnect Network Drive.....	536

Save

Opens the "Save" dialog box to define which measurement settings and results to store. To navigate in the dialog box and define/enter data, use the corresponding soft-keys.

For details see also [Chapter 10.1.2, "File Selection Dialog Boxes"](#), on page 536.

Save File / Recall File ← Save

Saves the settings file with the defined file name ("Save" dialog box), or recalls the selected settings file ("Recall" dialog box).

You can assign stored settings files to user-definable softkeys in the "User" menu for easy access, see [Chapter 9.2, "User-Defined Menu – USER key"](#), on page 503 .

Remote command:

[MMEMory:STORe<n>:STATe](#) on page 948

[MMEMory:STORe<n>:STATe:NEXT](#) on page 949

[MMEMory:LOAD:STATe](#) on page 947

Select Path ← Save

Opens the directory list to select the drive and folder for the settings file to be stored or loaded. The default path is C:\r_s\instr\user.

Select File ← Save

Sets the focus on the "Files" list.

Remote command:

[MMEMory:CATalog?](#) on page 940

Edit File Name ← Save

Sets the focus on the "File Name" field.

Edit Comment ← Save

Sets the focus on the "Comment" field to enter a comment for the settings file. Max. 60 characters are allowed.

Select Items ← Save

Displays the submenu for selecting the items to be stored or loaded.

Select Items ← Select Items ← Save

Sets the focus on the items list. Which items are available depends on the installed options.

In the "Save" dialog box, all items that can be saved are displayed.

In the "Recall" dialog box, the items saved in the selected file are displayed.

Remote command:

`MMEMoRY:SELEct[:ITEM]:HWSettings` on page 985

`MMEMoRY:SELEct[:ITEM]:LINes:ALL` on page 985

`MMEMoRY:SELEct[:ITEM]:TRACe[:ACTive]` on page 986

`MMEMoRY:SELEct[:ITEM]:TRANsducer:ALL` on page 986

Enable all Items ← Select Items ← Save

Selects all items for saving or loading.

Remote command:

`MMEMoRY:SELEct[:ITEM]:ALL` on page 985

Disable all Items ← Select Items ← Save

Selects none of the items for saving or loading.

Remote command:

`MMEMoRY:SELEct[:ITEM]:NONE` on page 986

Delete File ← Save

Deletes the selected settings file.

Remote command:

`MMEMoRY:CLEar:STATe 1`, on page 946

Recall

Opens the "Recall" dialog box to load a settings file. To navigate in the dialog box, use the corresponding softkeys.

For details see also [Chapter 10.1.2, "File Selection Dialog Boxes"](#), on page 536.

Path	Directory from which the settings file is loaded. The default path for user settings files is C:\r_s\instr\user
Files	List of stored settings files
File Name	Name of settings file
Comment	Comment of the settings file
[Items]	Items saved in the settings file

Note: After you use the "Recall" function, the history of previous actions is deleted, i.e. any actions performed previously cannot be undone or redone using the [UNDO/REDO] keys.

Remote command:

`MMEMoRY:LOAD:STATe` on page 947

Startup Recall

Opens a submenu to activate or deactivate and set up the startup recall function.

Startup Recall (On/Off) ← Startup Recall

Activates or deactivates the startup recall function. If activated, the settings stored in the file selected via the [Select Dataset](#) softkey are loaded when booting or for preset. If deactivated, the default settings are loaded.

Remote command:

[MMEMory:LOAD:AUTO](#) on page 946

Select Dataset ← Startup Recall

Opens the "Startup Recall" dialog box to select the settings file for the startup recall function.

ScreenShot

Saves the current measurement screen as a file (screenshot). This function can also be performed via the "Screenshot" icon in the toolbar, if available.

Remote command:

[HCOPY\[:IMMEDIATE<1|2>\]](#) on page 963

Export

Opens a submenu to configure data export.

ASCII Trace Export ← Export

Opens the "ASCII Trace Export Name" dialog box and saves the active trace in ASCII format to the specified file and directory.

Tip: You can export a single trace ("ASCII Trace Export Trace (x)" softkey) or all traces at the same time ("ASCII Trace Export All Traces"). When you use single trace export, the R&S ESR exports the currently selected trace (indicated by the softkey label). Note that the exported ASCII file has a slightly different structure compared to a single trace export.

The file consists of the header containing important scaling parameters and a data section containing the trace data. For details on an ASCII file see [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see ["Decim Sep"](#) on page 200).

If the spectrogram display is selected when you perform this function, the entire histogram buffer with all frames is exported to a file. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded. For large history buffers the export operation may take some time.

Remote command:

[FORMat:DEXPort:TRACes](#) on page 646

[FORMat:DEXPort:DSEParator](#) on page 850

[MMEMory:STORe<n>:TRACe](#) on page 851

[MMEMory:STORe:SGRam](#) on page 652

Decim Sep ← Export

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

Remote command:

`FORMat:DEXPort:DSEParator` on page 850

IQ Export ← Export

Opens a file selection dialog box to select an export file to which the IQ data will be stored. This function is only available in single sweep mode.

For details see [Chapter 10.1.3, "Importing and Exporting I/Q Data"](#), on page 538.

Remote command:

`MMEMemory:STORe:IQ:STATe` on page 948

`MMEMemory:STORe:IQ:COMM` on page 948

Import

Provides functions to import data.

IQ Import ← Import

Opens a file selection dialog box to select an import file that contains IQ data. This function is only available in single sweep mode.

For details see [Chapter 10.1.3, "Importing and Exporting I/Q Data"](#), on page 538.

Remote command:

`MMEMemory:LOAD:IQ:STATe` on page 889

File Manager

Opens the "File Manager" dialog box and a submenu to manage mass storage media and files. In the upper left corner, the current drive is displayed. Below the folders and subfolders of the current directory are displayed.

For details on navigation see also [Chapter 10.1.2, "File Selection Dialog Boxes"](#), on page 536.

The following tasks can be performed:

- copying files from flash disk to other media
- copying files into another directory
- renaming and deleting files

Edit Path ← File Manager

Opens the directory list to select the drive and folder for the file to be stored or loaded. The default path is `C:\r_s\instr\user`.

Remote command:

`MMEMemory:MSIS` on page 944

`MMEMemory:CDIRectory` on page 942

New Folder ← File Manager

Creates a new folder and opens an edit dialog box to enter name and path (absolute or relative to the current directory) of the new folder.

Remote command:

[MMEMoRY:MDIRectory](#) on page 944

Copy ← File Manager

Copies the selected item to the clipboard. The item can be copied later using the [Paste](#) softkey.

Remote command:

[MMEMoRY:CoPY](#) on page 942

Rename ← File Manager

Opens an edit dialog box to enter a new file or folder name.

Remote command:

[MMEMoRY:MoVE](#) on page 944

Cut ← File Manager

Copies the selected file to the clipboard. If the file is later copied to a different directory using the [Paste](#) softkey, it is deleted in the current directory.

Paste ← File Manager

Copies a file from the clipboard to the currently selected directory.

Delete ← File Manager

Deletes the selected item after confirmation.

Remote command:

[MMEMoRY:DELeTe](#) on page 943

[MMEMoRY:RDIRectory](#) on page 945

Sort Mode ← File Manager

Opens a submenu to select the sorting mode for the displayed files. The entry for the next higher directory level ("..") and the folders are always located at the top of the list.

Name ← Sort Mode ← File Manager

Sorts the displayed files in alphabetical order of the file names.

Date ← Sort Mode ← File Manager

Sorts the displayed files in respect to the date.

Extension ← Sort Mode ← File Manager

Sorts the displayed files in respect to the extension.

Size ← Sort Mode ← File Manager

Sorts the displayed files in respect to the size.

File Lists (1/2) ← File Manager

Splits the screen to copy files from one directory to the other. The focus between the two panes is switched using the [FIELD RIGHT] and [FIELD LEFT] keys.

Current File List (1/2) ← File Manager

Changes the focus to the selected file list.

Network Drive ← File Manager

Opens the "Map Network Drive" dialog box and submenu.

Map Network Drive ← Network Drive ← File Manager

Sets the focus on the "Drive" list.

Remote command:

[MMEemory:NETWork:MAP](#) on page 988

[MMEemory:NETWork:USEDdrives?](#) on page 989

[MMEemory:NETWork:UNUSeddrives?](#) on page 988

Disconnect Network Drive ← Network Drive ← File Manager


Opens the "Disconnect Network Drive" dialog box. In the "Drive" list, select the drive you want to disconnect and confirm with "OK".

Remote command:

[MMEemory:NETWork:DISConnect](#) on page 987

10.1.2 File Selection Dialog Boxes

The "Save" and "Recall" dialog boxes are used to save and recall settings and data files. The "File Manager" allows you to copy, delete or rename data files on the R&S ESR. These and other file selection dialog boxes are very similar.

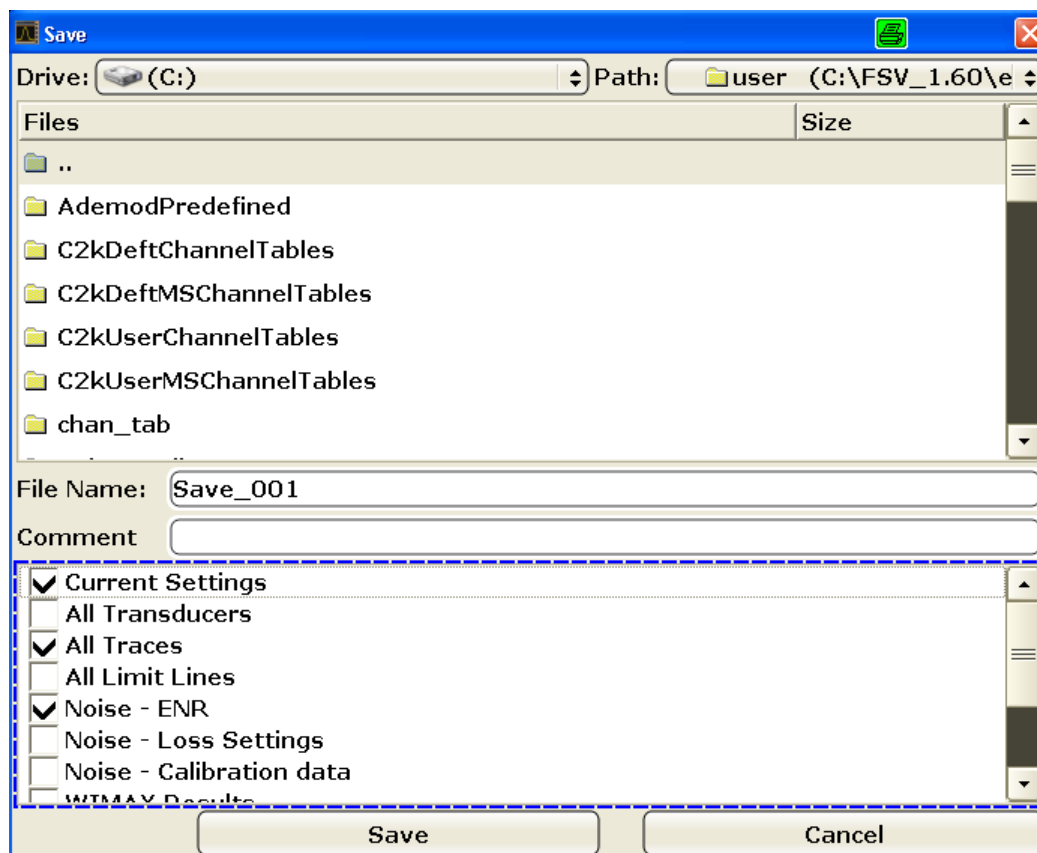

Drive

The data is stored on the internal flash disk or, if selected, on a memory stick or network drive. The mass media are assigned to the volume names as follows:

Drive	Designation	Comment
C	operating system, firmware and stored instrument settings	for customer data
A	USB floppy drive	if connected
D	USB memory stick or USB CD-ROM	if connected
E ...Z	additional USB mass storage devices or mounted LAN volumes	if connected

Path

The current path contains the drive and the complete file path to the currently selected folder.

To set the focus on the "Path" list, press the [Select Path/ Edit Path](#) softkey.

Files

This list contains the files and folders contained in the currently selected path.

To set the focus on the "Files" list, press the [Select File](#) softkey.

File Name

The "File Name" field contains the name of the data file without the path or extension.

To set the focus on "File Name" field, press the [Edit File Name](#) softkey.

In the "Save" dialog box, the field already contains a suggestion for a new name: the file name used in the last saving process is used, extended by an index. For example, if the name last used was `test_004`, the new name `test_005` is suggested, but only if this name is not in use. You can change the suggested name as you like.

By default, the name of a settings file consists of a base name followed by an underscore and three numbers, e.g. `limit_lines_005`. In the example, the base name is `limit_lines`. The base name can contain characters, numbers and underscores. The file extension `df1` is added automatically.

Comment

The comment is optional and may contain a description for the data file.

To set the focus on the "Comment" field, press the [Edit Comment](#) softkey.

Items

When saving data files you can select which data and settings are stored; when recalling such files, this field indicates which items were included during storage. In the "File Manager", this field is not available.

Which items are available depends on the installed options. The following items may be included:

Item	Description
Current Settings	Current measurement settings.
All Transducers	All transducer factor <i>files</i> . (Note: Restoring a saveset overwrites transducer factor files on the hard disk that have the same name as those in the saveset. For more information, read "Saving and recalling transducer and limit line settings" on page 529.)
All Traces	All active traces.
All Limit Lines	All limit line <i>files</i> . (Note: information on which limit lines are active is stored with the "Current Settings").
Spectrograms	Spectrogram trace data.
Peak List	Information of the peak list.

10.1.3 Importing and Exporting I/Q Data

In addition to instrument settings and displayed traces, also captured I/Q data can be exported to a file on the R&S ESR. The stored data can then be imported again at a later time, also by different applications, for further processing.

As opposed to storing trace data, which may be averaged or restricted to peak values, I/Q data is stored as it was captured, without further processing. The data is stored as complex values in 32-bit floating-point format. The I/Q data is stored in a packed format with the file extension `.iq.tar`.

The [IQ Import](#) and [IQ Export](#) functions are available from the "Save/Recall" menu, which is displayed when you press the [Save/Rcl] key on the front panel.

They can also be performed remotely using the following commands:

`MMEMory:STORe:IQ:STATe` on page 948

`MMEMory:LOAD:IQ:STATe` on page 889

10.1.3.1 iq-tar File Format Specification

I/Q data is stored in a compressed format with the file extension `.iq.tar`.

An `.iq.tar` file contains I/Q data in binary format together with meta information that describes the nature and the source of data, e.g. the sample rate. The objective of the `.iq.tar` file format is to separate I/Q data from the meta information while still having both inside one file. In addition, the file format allows you to preview the I/Q data in a web browser, and allows you to include user-specific data.

Contained files

An `iq-tar` file must contain the following files:

- **I/Q parameter XML file**, e.g. `xyz.xml`
Contains meta information about the I/Q data (e.g. sample rate). The filename can be defined freely, but there must be only one single I/Q parameter XML file inside an `iq-tar` file.
- **I/Q data binary file**, e.g. `xyz.complex.float32`
Contains the binary I/Q data of all channels. There must be only one single I/Q data binary file inside an `iq-tar` file.

Optionally, an `iq-tar` file can contain the following file:

- **I/Q preview XSLT file**, e.g. `open_IqTar_xml_file_in_web_browser.xslt`
Contains a stylesheet to display the I/Q parameter XML file and a preview of the I/Q data in a web browser.

I/Q Parameter XML File Specification



The content of the I/Q parameter XML file must comply with the XML schema `RsIqTar.xsd` available at: <http://www.rohde-schwarz.com/file/RsIqTar.xsd>.

In particular, the order of the XML elements must be respected, i.e. `iq-tar` uses an "ordered XML schema". For your own implementation of the `iq-tar` file format make sure to validate your XML file against the given schema.

The following example shows an I/Q parameter XML file. The XML elements and attributes are explained in the following sections.

Sample I/Q parameter XML file: `xyz.xml`

```
<?xml version="1.0" encoding="UTF-8"?>
<?xml-stylesheet type="text/xsl"
href="open_IqTar_xml_file_in_web_browser.xslt"?>
<RS_IQ_TAR_FileFormat fileFormatVersion="1"
xsi:noNamespaceSchemaLocation="RsIqTar.xsd"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <Name>FSV-K10</Name>
  <Comment>Here is a comment</Comment>
  <DateTime>2011-01-24T14:02:49</DateTime>
  <Samples>68751</Samples>
  <Clock unit="Hz">6.5e+006</Clock>
  <Format>complex</Format>
  <DataType>float32</DataType>
  <ScalingFactor unit="V">1</ScalingFactor>
  <NumberOfChannels>1</NumberOfChannels>
  <DataFilename>xyz.complex.float32</DataFilename>
  <UserData>
    <UserDefinedElement>Example</UserDefinedElement>
  </UserData>
```

Saving and Recalling Settings Files – SAVE/RCL Key

```
<PreviewData>...</PreviewData>
</RS_IQ_TAR_FileFormat>
```

Element	Description
RS_IQ_TAR_FileFormat	The root element of the XML file. It must contain the attribute <code>fileFormatVersion</code> that contains the number of the file format definition. Currently, <code>fileFormatVersion</code> "2" is used.
Name	Optional: describes the device or application that created the file.
Comment	Optional: contains text that further describes the contents of the file.
DateTime	Contains the date and time of the creation of the file. Its type is <code>xs:dateTime</code> (see <code>RsIqTar.xsd</code>).
Samples	Contains the number of samples of the I/Q data. For multi-channel signals all channels have the same number of samples. One sample can be: <ul style="list-style-type: none"> • A complex number represented as a pair of I and Q values • A complex number represented as a pair of magnitude and phase values • A real number represented as a single real value See also <code>Format</code> element.
Clock	Contains the clock frequency in Hz, i.e. the sample rate of the I/Q data. A signal generator typically outputs the I/Q data at a rate that equals the clock frequency. If the I/Q data was captured with a signal analyzer, the signal analyzer used the clock frequency as the sample rate. The attribute <code>unit</code> must be set to "Hz".
Format	Specifies how the binary data is saved in the I/Q data binary file (see <code>DataFilename</code> element). Every sample must be in the same format. The format can be one of the following: <ul style="list-style-type: none"> • Complex: Complex number in cartesian format, i.e. I and Q values interleaved. I and Q are unitless • Real: Real number (unitless) • Polar: Complex number in polar format, i.e. magnitude (unitless) and phase (rad) values interleaved. Requires <code>DataType = float32</code> or <code>float64</code>
DataType	Specifies the binary format used for samples in the I/Q data binary file (see <code>DataFilename</code> element and " I/Q Data Binary File " on page 542). The following data types are allowed: <ul style="list-style-type: none"> • <code>int8</code>: 8 bit signed integer data • <code>int16</code>: 16 bit signed integer data • <code>int32</code>: 32 bit signed integer data • <code>float32</code>: 32 bit floating point data (IEEE 754) • <code>float64</code>: 64 bit floating point data (IEEE 754)
ScalingFactor	Optional: describes how the binary data can be transformed into values in the unit Volt. The binary I/Q data itself has no unit. To get an I/Q sample in the unit Volt the saved samples have to be multiplied by the value of the <code>ScalingFactor</code> . For polar data only the magnitude value has to be multiplied. For multi-channel signals the <code>ScalingFactor</code> must be applied to all channels. <p>The <code>ScalingFactor</code> must be > 0. If the <code>ScalingFactor</code> element is not defined, a value of 1 V is assumed.</p>
NumberOfChannels	Optional: specifies the number of channels, e.g. of a MIMO signal, contained in the I/Q data binary file. For multi-channels, the I/Q samples of the channels are expected to be interleaved within the I/Q data file (see " I/Q Data Binary File " on page 542). If the <code>NumberOfChannels</code> element is not defined, one channel is assumed.

Element	Description
DataFilename	<p>Contains the filename of the I/Q data binary file that is part of the <code>iq-tar</code> file.</p> <p>It is recommended that the filename uses the following convention: <code><xyz>.<Format>.<Channels>ch.<Type></code></p> <ul style="list-style-type: none"> • <code><xyz></code> = a valid Windows file name • <code><Format></code> = complex, polar or real (see <code>Format</code> element) • <code><Channels></code> = Number of channels (see <code>NumberOfChannels</code> element) • <code><Type></code> = float32, float64, int8, int16, int32 or int64 (see <code>DataType</code> element) <p>Examples:</p> <ul style="list-style-type: none"> • xyz.complex.1ch.float32 • xyz.polar.1ch.float64 • xyz.real.1ch.int16 • xyz.complex.16ch.int8
UserData	<p>Optional: contains user, application or device-specific XML data which is not part of the <code>iq-tar</code> specification. This element can be used to store additional information, e.g. the hardware configuration. It is recommended that you add user data as XML content.</p>
PreviewData	<p>Optional: contains further XML elements that provide a preview of the I/Q data. The preview data is determined by the routine that saves an <code>iq-tar</code> file (e.g. R&S ESR). For the definition of this element refer to the <code>RsIqTar.xsd</code> schema. Note that the preview can be only displayed by current web browsers that have JavaScript enabled and if the XSLT stylesheet <code>open_IqTar_xml_file_in_web_browser.xslt</code> is available.</p>

Example: ScalingFactor

Data stored as `int16` and a desired full scale voltage of 1 V

$$\text{ScalingFactor} = 1 \text{ V} / \text{maximum int16 value} = 1 \text{ V} / 2^{15} = 3.0517578125\text{e-}5 \text{ V}$$

	Numerical value	Numerical value x ScalingFactor
Minimum (negative) int16 value	$-2^{15} = -32768$	-1 V
Maximum (positive) int16 value	$2^{15}-1 = 32767$	0.999969482421875 V

Example: PreviewData in XML

```

<PreviewData>
  <ArrayOfChannel length="1">
    <Channel>
      <PowerVsTime>
        <Min>
          <ArrayOfFloat length="256">
            <float>-95</float>
            <float>-94</float>
            ...
            <float>-93</float>
          </ArrayOfFloat>
        </Min>
        <Max>
          <ArrayOfFloat length="256">
            <float>0</float>

```



```

        <float>-41</float>
        ...
        <float>0</float>
    </ArrayOfFloat>
</Max>
</PowerVsTime>
<Spectrum>
    <Min>
        <ArrayOfFloat length="256">
            <float>-107</float>
            <float>-96</float>
            ...
            <float>-94</float>
        </ArrayOfFloat>
    </Min>
    <Max>
        <ArrayOfFloat length="256">
            <float>-25</float>
            <float>1</float>
            ...
            <float>1</float>
        </ArrayOfFloat>
    </Max>
</Spectrum>
</Channel>
</ArrayOfChannel>
</PreviewData>

```

I/Q Data Binary File

The I/Q data is saved in binary format according to the format and data type specified in the XML file (see `Format` element and `DataType` element). To allow reading and writing of streamed I/Q data all data is interleaved, i.e. complex values are interleaved pairs of I and Q values and multi-channel signals contain interleaved (complex) samples for channel 1, channel 2, channel 3 etc.

Example: NumberOfChannels - Element ordering for complex cartesian data

Complex data: I[channel no][time index], Q[channel no][time index]

```

I[0][0], Q[0][0],           // Channel 0, Complex sample 0
I[1][0], Q[1][0],           // Channel 1, Complex sample 0
I[2][0], Q[2][0],           // Channel 2, Complex sample 0

I[0][1], Q[0][1],           // Channel 0, Complex sample 1
I[1][1], Q[1][1],           // Channel 1, Complex sample 1
I[2][1], Q[2][1],           // Channel 2, Complex sample 1

I[0][2], Q[0][2],           // Channel 0, Complex sample 2
I[1][2], Q[1][2],           // Channel 1, Complex sample 2
I[2][2], Q[2][2],           // Channel 2, Complex sample 2

```

```

I[0][3], Q[0][3],           // Channel 0, Complex sample 3
I[1][3], Q[1][3],           // Channel 1, Complex sample 3
I[2][3], Q[2][3],           // Channel 2, Complex sample 3

...

```

10.2 Measurement Documentation – PRINT Key

The PRINT key is used to select and configure the printer and to customize the screen printout.

For detailed information on printer selection and installation refer to [Chapter 3.2.4.6, "Selecting and Configuring Printers"](#), on page 54.

To open the Print menu

- ▶ Press the PRINT key.
The "Print" menu is displayed.

Softkeys of the Print Menu

The following table shows all softkeys available in the "Print" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Print Screen.....	543
Device Setup.....	544
Device (1/2).....	544
Colors.....	544
L Select Print Color Set.....	545
L Color (On/Off).....	545
L Select Object.....	545
L Predefined Colors.....	545
L User Defined Colors.....	545
L Set to Default.....	545
Comment.....	545
Install Printer.....	545
Report.....	545

Print Screen

Starts to printout all test results displayed on the screen: diagrams, traces, markers, marker lists, limit lines etc. Comments, title, date, and time are included at the bottom margin of the printout. All displayed items belonging to the instrument software (softkeys, tables, dialog boxes) are not printed out.

The output is defined via the ["Device Setup"](#) on page 544 softkey. If the output is saved in a file, the file name used in the last saving process is counted up to the next unused name. If you use a file name that already exists, upon saving, a message is displayed. Selecting "Yes" overwrites the existing file, selecting "No" aborts the saving process. For further details on the file name and an example, refer to the "Save/Recall" menu, ["Edit File Name"](#) on page 531 softkey.

Path	Directory in which the file is stored. The default path is C:\r_s\instr\user
Files	List of the existing files in the same format
File Name	Name of the file

Remote command:

[HCOPY\[:IMMEDIATE<1|2>\]](#) on page 963

[HCOPY\[:IMMEDIATE<1|2>\]:NEXT](#) on page 964

[HCOPY:ITEM:ALL](#) on page 962

Device Setup

Opens the "Hardcopy Setup" dialog box to define the output: image file, clipboard, or the printer. The dialog box consists of two tabs which are selected via the ["Device \(1/2\)"](#) on page 544 softkey.

For further information refer to [Chapter 3.2.4.6, "Selecting and Configuring Printers"](#), on page 54.

Remote command:

[HCOPY:DEVICE:LANGUAGE<1|2>](#) on page 961

[HCOPY:DESTINATION<1|2>](#) on page 960

[HCOPY:PAGE:ORIENTATION<1|2>](#) on page 963

[HCOPY:TDSTAMP:STATE<1|2>](#) on page 963

[SYSTEM:COMMUNICATE:PRINTER:ENUMERATE:FIRST?](#) on page 965

[SYSTEM:COMMUNICATE:PRINTER:ENUMERATE\[:NEXT\]?](#) on page 965

Device (1/2)

Selects the tab of the device in the "Device Setup" dialog box. The analyzer is able to manage two print settings independently of each other. For each device the print setting is displayed on the corresponding tab of the "Device Setup" dialog box (["Device Setup"](#) on page 544 softkey).

For further information refer to [Chapter 3.2.4.6, "Selecting and Configuring Printers"](#), on page 54.

Colors

Opens a submenu to define the colors to be used. For details see ["Print Colors"](#) on page 522 softkey of the "Setup" menu.

The submenu contains the following commands:

- ["Select Print Color Set"](#) on page 545
- ["Color \(On/Off\)"](#) on page 545
- ["Select Object"](#) on page 545
- ["Predefined Colors"](#) on page 545
- ["User Defined Colors"](#) on page 545

- ["Set to Default"](#) on page 545

Select Print Color Set ← Colors

For details see ["Select Print Color Set"](#) on page 523 softkey of the "Setup" menu.

Color (On/Off) ← Colors

For details see ["Color \(On/Off\)"](#) on page 522 softkey of the "Setup" menu.

Select Object ← Colors

For details see ["Select Object"](#) on page 522 softkey of the "Setup" menu.

Predefined Colors ← Colors

For details see ["Predefined Colors"](#) on page 522 softkey of the "Setup" menu.

User Defined Colors ← Colors

For details see ["User Defined Colors"](#) on page 522 softkey of the "Setup" menu.

Set to Default ← Colors

For details see ["Set to Default"](#) on page 522 softkey of the "Setup" menu.

Comment

Opens dialog box to enter a comment. Max. 120 characters are allowed. 60 characters fit in one line. In the first line, at any point a manual line-feed can be forced by entering "@".

Date and time are inserted automatically. The comment is printed below the diagram area, but not displayed on the screen. If a comment should not be printed, it must be deleted.

For details on the alphanumeric entries refer to [Chapter 3.4.3.2, "Entering Alphanumeric Parameters"](#), on page 78.

Remote command:

`HCOPY:ITEM:WINDOW:TEXT` on page 962

Install Printer

Opens the "Printers and Faxes" window to install a new printer. All printers that are already installed are displayed.

For further information refer to [Chapter 3.2.4.6, "Selecting and Configuring Printers"](#), on page 54.

Only user accounts with administrator rights can install a printer.

Report

Provides access to the test report tool. For more information see [Chapter 10.3, "Working with Test Reports"](#), on page 546.

10.3 Working with Test Reports

The R&S ESR features a test report generator. A test report is a document that summarizes the results and configuration of measurements.

A test report is made up out of one or more datasets. Each dataset contains the results and configuration of one measurement.

- [Designing a Test Report Template](#)..... 546
- [Creating a Test Report](#)..... 549

10.3.1 Designing a Test Report Template

The R&S ESR allows you to create test report templates, for example if you handle different measurement tasks that require different information or a different layout in the test report. The following topics show you ways to customize your test reports and save those settings in a template.

[Selecting the Test Report Contents](#).....546


[Designing the Header of the Test Report](#)..... 547

[Defining the Contents of the Title Page](#).....548

[Managing Templates](#)..... 549

Selecting the Test Report Contents

The "Configuration" tab selects the information that each dataset in the test report contains. You can add or remove the items as required.

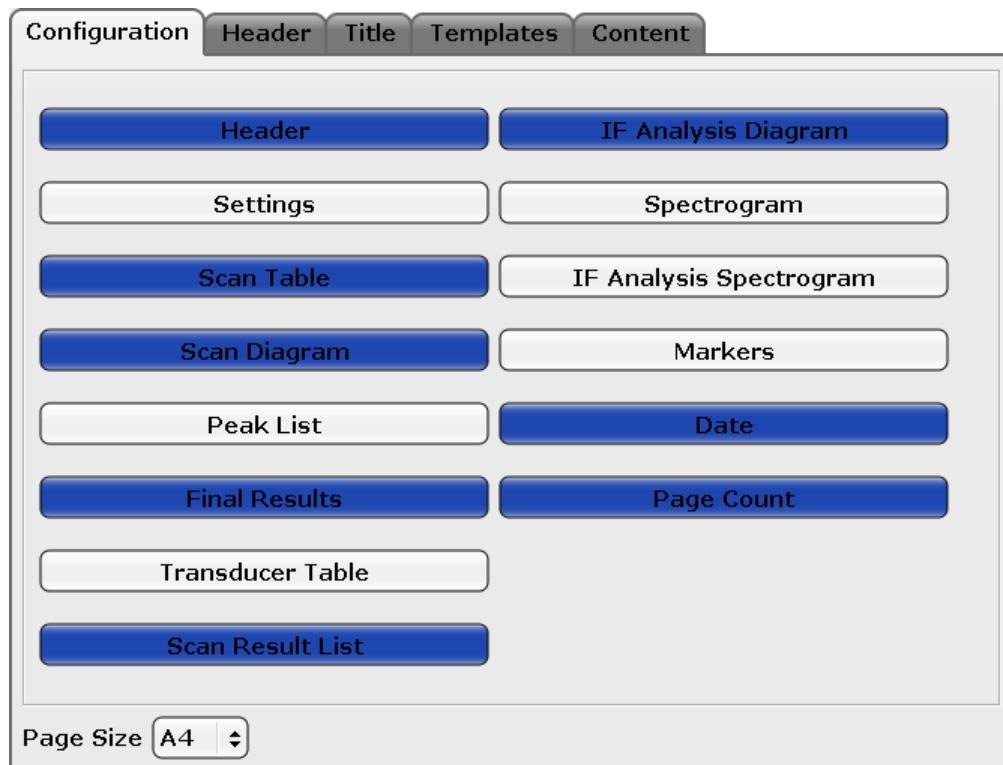

You can select to include the following types of information. (Note that the Spectrum application does not support all elements.)

- Header
Adds a page header to the dataset.
For more information see ["Designing the Header of the Test Report"](#) on page 547.
- Settings
Adds the general measurement configuration to the dataset (for example the frequency range, the resolution bandwidth or the measurement time).
- Scan Table
Adds the configuration for each scan subrange as defined in the scan table to the dataset. For more information see [Chapter 5.3.7.2, "Scan Table"](#), on page 189.
- Diagram
Adds a screenshot of the scan trace to the dataset.
- Final Results
Adds the (numerical) results of the final measurement to the dataset.
- Transducer Table
Adds the transducers that you are using for the measurement, and their characteristics to the dataset.
For more information see ["Transducer"](#) on page 507.
- Scan Result List
Adds the numerical scan results to the dataset.
Note that the test report will show only the results of the first 50000 measurement points. The rest is cut off.
- IF Analysis
Adds a screenshot of the IF analysis trace to the dataset.
- Spectrogram
Adds a screenshot of the spectrogram trace to the dataset.
- IF Analysis Spectrogram
Adds a screenshot of the IF analysis spectrogram trace to the dataset.
- Markers
Adds the marker information to the dataset.
- Date
Adds a time stamp to the dataset (system date and time).
- Page Count
Adds a page count to the dataset.

Remote command:

[HCOPY:TREPort:ITEM:SElect](#) on page 966

Designing the Header of the Test Report

The "Header" tab selects the information displayed in the page header.

You can create page headers consisting of up to **seven lines**, plus **one picture** (for example a company logo). Each of the seven lines consists of a **title** (which is printed in bold characters) and a **value** (which is displayed next to the title, but in normal characters). In addition, you can select how each line in the header is treated (the **visibility**).

Configuration			Header	Title	Templates
Title	Value	Visibility			
Heading	Oooh, a headline!	Always	▾		
Meas Type	Testing features.	Always	▾		
Equipment under Test	Not sure...	Always	▾		
Manufacturer	Homemade!	Always	▾		
OP Condition	What's OP?	Always	▾		
Operator	Me, myself and I	Always	▾		
Test Spec	Not using one..	Always	▾		
Logo	<input type="text"/>	...	Never ▾		

- **Title**
Defines a name for a variable that has different values depending on the measurement (for example the name of the EUT). The firmware comes with some predefined titles, but you can change and customize each title.
- **Value**
Defines the value of the variable defined by the title.
- **Visibility**
Selects if a line in the page header is displayed on every page in the report ("Always"), on the first page of a dataset ("Once") or not at all ("Never").
By default, all lines are displayed on all pages in the report.

Adding a logo

The page header may also contain a picture or logo. You can upload a picture with the "..." symbol. The "..." symbol opens a dialog box to select a file.

Reports in rtf format support pictures in bmp or jpg format. Reports in pdf format support pictures in bmp, jpg and png format.

Similar to the alphanumeric lines in the header, you can select the visibility for the logo as well. By default, the logo is not displayed in the report.

Remote command:

Title: `HCOPY:TREPort:ITEM:HEADer:LINE<line>:TITLe` on page 969

Value: `HCOPY:TREPort:ITEM:HEADer:LINE<line>:TEXT` on page 969

Visibility: `HCOPY:TREPort:ITEM:HEADer:LINE<line>:CONTrol` on page 968

Selection of logo: `HCOPY:TREPort:ITEM:LOGO` on page 970

Visibility of logo: `HCOPY:TREPort:ITEM:LOGO:CONTrol` on page 971

Defining the Contents of the Title Page

The "Title" tab defines the contents of the first page of the test report (title page).

You can define a title for the test report, which is printed in big and bold letters on the first page, and a short description of the contents of the test report (or the name of the author or something similar). This description is also part of the first test report page, but is printed in normal letters.

In addition you can select the format of the test report (either DIN A4 or US letter size).

Configuration Header Title Templates

Title

Description

Page Size ▾

Remote command:

Title: [HCOpy:TREPort:TITLe](#) on page 972

Description: [HCOpy:TREPort:DESCription](#) on page 971

Managing Templates

The "Templates" tab allows you manage test report templates.

Configuration Header Title Templates

Template	Origin
A test report	Receiver
And another one	Receiver
Another test report	Receiver

- Load
Restores the selected test report configuration.
- Save
Saves the current test report configuration. Before you save the configuration as a template, enter a name for the template in the corresponding field.
- Delete
Deletes the selected test report template.

The table shows all available templates, including the application it has been created in (Receiver, Spectrum, I/Q Analyzer or Realtime).

10.3.2 Creating a Test Report

- ▶ In the "Test Report" softkey menu, press the "Save" button.

The R&S ESR opens the "Test Report Content Selection" dialog box that contains all necessary functions to create a test report.




Test report limitations

The size of the test report is limited to about 50.000 measurement points.

If the number of measurement points is greater than that value, only the first 50.000 values are written to the report. The rest will be left out.

Try to do an ASCII file export when you have more measurement points.

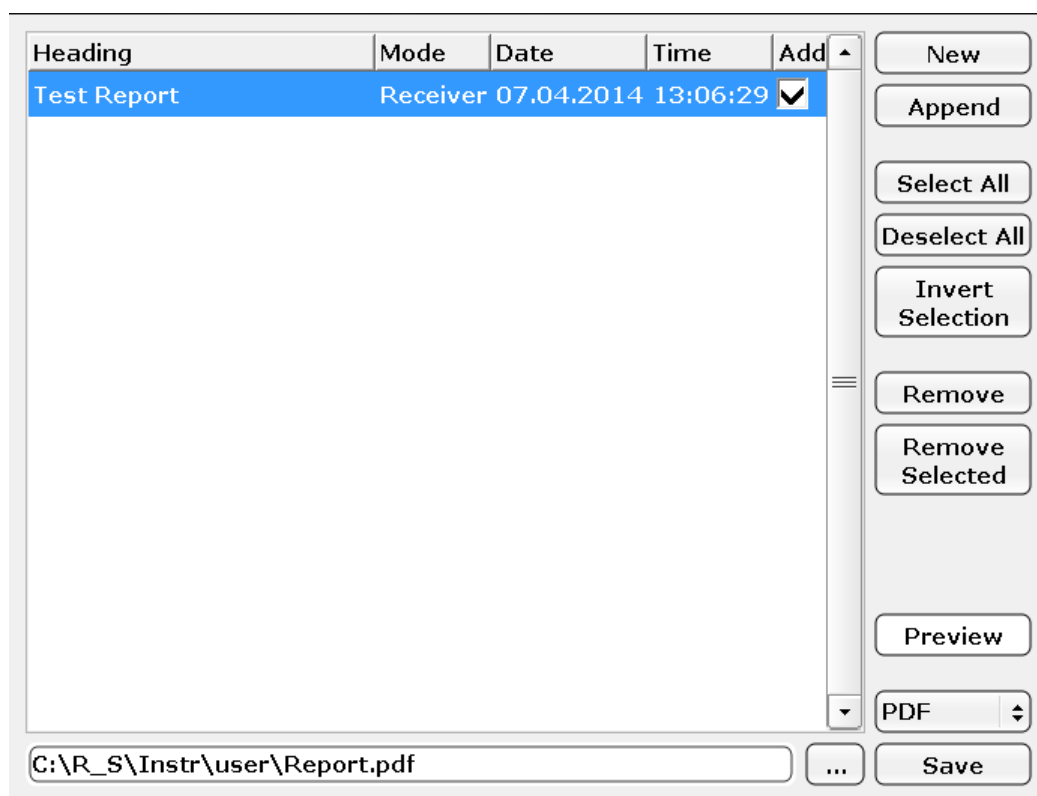

Configuring and Printing the Test Report	550
Adding and Removing Datasets	551
Selecting Datasets for the Report	551

Configuring and Printing the Test Report

You can save the test report either as a **pdf** document or an **rtf** document in the corresponding dropdown menu in the "Test Report Content Selection" dialog box.

The "Preview" button opens a preview version of the test report. Available for test reports in pdf format.

The "Save" button saves the test report in the directory you have specified in the input field next to the "Save" button. You can specify the directory with the "..." button or by entering a path and filename into the input field.

Remote command:

Print report: `HCOPY[:IMMEDIATE<1|2>]` on page 963

Report name and directory: `MMEMORY:NAME` on page 945

Format: `HCOPY:DEVICE:LANGUAGE<1|2>` on page 961

Adding and Removing Datasets

Before you can print a test report, you have to fill it with data.

Data in case of the test report comes in datasets. Each dataset contains the results of one measurement.

The "New" button or softkey creates a new test report. The last measurement result is added to the report. If you create a new report, the datasets of the previous report are lost.

The "Append" button or softkey adds a dataset to the current report.

The "Remove" button removes the selected dataset.

The "Remove Selection" removes all currently selected datasets.

Note that a test report has to contain at least one dataset.

When you add a dataset ("New" or "Append"), the R&S ESR opens a dialog box to define the values of the header variables.

Heading	<input type="text"/>
Meas Type	<input type="text"/>
Equipment under Test	<input type="text"/>
Manufacturer	<input type="text"/>
OP Condition	<input type="text"/>
Operator	<input type="text"/>
Test Spec	<input type="text"/>
<input type="button" value="Ok"/> <input type="button" value="Cancel"/>	

Enter descriptions of the variables as required.

For more information on changing the labels of the header see ["Designing the Header of the Test Report"](#) on page 547

Remote command:

New report: `HCOPY:TREPort:NEW` on page 974

Add dataset: `HCOPY:TREPort:APPend` on page 974

Remove single dataset: `HCOPY:TREPort:TEST:REMOve` on page 974

Remove several datasets: `HCOPY:TREPort:TEST:REMOve:SELEcted` on page 975

Selecting Datasets for the Report

When you add a dataset to the report, it is automatically included in the test report. You can exclude a dataset from the test report without removing the data itself in the "Add" column of the "Test Report Content Selection" dialog box: if a dataset is not checked in that column, the data is still available, but not part of the test report.

To make selecting datasets easier, the R&S ESR provides the "Select All" (selects all datasets), "Deselect All" (selects no dataset) and "Invert Selection" (selects all currently deselected datasets and vice versa) buttons.

Remote command:

Select a single dataset: [HCOpy:TREPort:TEST:SElect](#) on page 975

Select all datasets: [HCOpy:TREPort:TEST:SElect:ALL](#) on page 975

Invert selection: [HCOpy:TREPort:TEST:SElect:INVert](#) on page 976

Select no dataset: [HCOpy:TREPort:TEST:SElect:NONE](#) on page 976

11 Remote Control

• Remote Control - Basics.....	553
• Controlling the R&S ESR Remotely.....	594
• Selecting the Operating Mode.....	635
• Remote Commands in Receiver Mode.....	636
• Remote Commands in Spectrum Analyzer Mode.....	719
• Remote Commands in I/Q Analyzer Mode.....	887
• Remote Commands to Control the Tracking Generator.....	900
• Common Commands.....	915
• System Configuration.....	919
• Data Management.....	940
• Using Transducers.....	949
• Documentation.....	957
• Working with Test Reports.....	966
• Display Configuration.....	977
• Network Connection.....	987
• Status Register.....	994
• Remote Control – Programming Examples.....	997
• GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E.....	1039

11.1 Remote Control - Basics

This chapter provides basic information on operating an instrument via remote control.



The computer that is used for remote operation is called "controller" here.

For hints and tricks on remote control of spectrum analyzers see the Rohde & Schwarz Application Note [1EF62](#).

11.1.1 Remote Control Interfaces and Protocols

The instrument supports different interfaces for remote control. The following table gives an overview.

Table 11-1: Remote control interfaces and protocols

Interface	Protocols, VISA ^{*)} address string	Remarks
Local Area Network (LAN)	Protocols: <ul style="list-style-type: none"> • HiSLIP High-Speed LAN Instrument Protocol (IVI-6.1) TCPIP:: host address:: hislip0[:: INSTR] • VXI-11 • socket communication (Raw Ethernet, simple Telnet) TCPIP:: host address[:: LAN device name] : <port>::SOCKET Library: VISA or socketcontroller • RSIB • simple telnet (Raw Ethernet) VISA ^{*)} address string: TCPIP::host address[::LAN device name][::INSTR]	A LAN connector is located on the rear panel of the instrument. The interface is based on TCP/IP and supports various protocols. For a description of the protocols refer to: <ul style="list-style-type: none"> • HiSLIP Protocol • "VXI-11 Protocol" on page 557 • Socket Communication • "RSIB Protocol" on page 558 • "Telnet Protocol" on page 559
GPIB (IEC/IEEE Bus Interface)	VISA ^{*)} address string: GPIB::primary address[::INSTR] (no secondary address)	A GPIB bus interface according to the IEC 625.1/IEEE 488.1 standard is located on the rear panel of the instrument. For a description of the interface refer to Chapter 11.1.1.4, "GPIB Interface (IEC 625/IEEE 418 Bus Interface)" , on page 559.
^{*)} VISA is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control using the indicated interfaces (see also Chapter 11.1.1.1, "VISA Libraries" , on page 555).		



Within this interface description, the term GPIB is used as a synonym for the IEC/IEEE bus interface.

SCPI (Standard Commands for Programmable Instruments)

SCPI commands - messages - are used for remote control. Commands that are not taken from the SCPI standard follow the SCPI syntax rules. The instrument supports the SCPI version 1999. The SCPI standard is based on standard IEEE 488.2 and aims at the standardization of device-specific commands, error handling and the status registers. The tutorial "Automatic Measurement Control - A tutorial on SCPI and IEEE 488.2" from John M. Pieper (R&S order number 0002.3536.00) offers detailed information on concepts and definitions of SCPI.

The requirements that the SCPI standard places on command syntax, error handling and configuration of the status registers are explained in detail in the following sec-

tions. Tables provide a fast overview of the bit assignment in the status registers. The tables are supplemented by a comprehensive description of the status registers.

11.1.1.1 VISA Libraries

VISA is a standardized software interface library providing input and output functions to communicate with instruments. The I/O channel (LAN or TCP/IP, USB, GPIB,...) is selected at initialization time by means of the channel-specific address string ("VISA resource string") indicated in [Table 11-1](#), or by an appropriately defined VISA alias (short name). A VISA installation is a prerequisite for remote control using the VXI-11, raw socket, RSIB or the newer HiSLIP protocol. The necessary VISA library is available as a separate product. For details contact your local R&S sales representative.

For more information on VISA refer to the user documentation.

11.1.1.2 Messages

The messages transferred on the data lines are divided into the following categories:

- **Interface messages**
Interface messages are transmitted to the instrument on the data lines, with the attention line being active (LOW). They are used to communicate between the controller and the instrument. Interface messages can only be sent by instruments that have GPIB bus functionality. For details see the sections for the required interface.
- **Instrument messages**
Instrument messages are employed in the same way for all interfaces, if not indicated otherwise in the description. Structure and syntax of the instrument messages are described in [Chapter 11.1.4, "SCPI Command Structure"](#), on page 564. A detailed description of all messages available for the instrument is provided in the chapter "Remote Control Commands".
There are different types of instrument messages, depending on the direction they are sent:
 - Commands
 - Instrument responses

Commands

Commands (program messages) are messages the controller sends to the instrument. They operate the instrument functions and request information. The commands are subdivided according to two criteria:

- According to the effect they have on the instrument:
 - **Setting commands** cause instrument settings such as a reset of the instrument or setting the frequency.
 - **Queries** cause data to be provided for remote control, e.g. for identification of the instrument or polling a parameter value. Queries are formed by directly appending a question mark to the command header.
- According to their definition in standards:

- **Common commands:** their function and syntax are precisely defined in standard IEEE 488.2. They are employed identically on all instruments (if implemented). They refer to functions such as management of the standardized status registers, reset and self-test.
- **Instrument control commands** refer to functions depending on the features of the instrument such as frequency settings. Many of these commands have also been standardized by the SCPI committee. These commands are marked as "SCPI confirmed" in the command reference chapters. Commands without this SCPI label are device-specific; however, their syntax follows SCPI rules as permitted by the standard.

Instrument responses

Instrument responses (response messages and service requests) are messages the instrument sends to the controller after a query. They can contain measurement results, instrument settings and information on the instrument status.

11.1.1.3 LAN Interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols. The network card can be operated with a 10 MHz Ethernet IEEE 802.3 or a 100 MHz Ethernet IEEE 802.3u interface. For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ45 cable (shielded or unshielded twisted pair category 5). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and the VISA program library must be installed on the controller.

VISA library

Instrument access via VXI-11 or RSIB protocols is usually achieved from high level programming platforms using VISA as an intermediate abstraction layer. VISA encapsulates the low level VXI, RSIB or even GPIB function calls and thus makes the transport interface transparent for the user. See [Chapter 11.1.1.1, "VISA Libraries"](#), on page 555 for details.

IP address

Only the IP address or a valid DNS host name is required to set up the connection. The host address is part of the "VISA resource string" used by the programs to identify and control the instrument.

The VISA resource string has the form:

```
TCPIP::host address[::LAN device name][::INSTR]
```

or

```
TCPIP::host address::port::SOCKET
```

where:

- **TCPIP** designates the network protocol used
- **host address** is the IP address or host name of the device
- **LAN device name** defines the protocol and the instance number of a sub-instrument;
 - `inst0` selects the VXI-11 protocol (default)
 - `hislip0` selects the newer HiSLIP protocol
- **INSTR** indicates the instrument resource class (optional)
- **port** determines the used port number
- **SOCKET** indicates the raw network socket resource class

Example:

- Instrument has the IP address `192.1.2.3`; the valid resource string using VXI-11 protocol is:
`TCPIP::192.1.2.3::INSTR`
- The instrument name is `RSFSV`; the valid resource string is:
`TCPIP::RSFSV::INSTR`
- A raw socket connection can be established using:
`TCPIP::192.1.2.3::5025::SOCKET`
- The DNS host name name is `FSV-123456`; the valid resource string using HiSLIP is:
`TCPIP::FSV-123456::hislip0`

**Identifying instruments in a network**

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by means of the resource string.

For details on configuring the LAN connection, see [Chapter 11.2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 623.

VXI-11 Protocol

The VXI-11 standard is based on the ONC RPC (Open Network Computing Remote Procedure Call) protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

HiSLIP Protocol

The HiSLIP (**H**igh **S**peed **L**AN **I**nstrument **P**rotocol) is the successor protocol for VXI-11 for TCP-based instruments specified by the IVI foundation. The protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. `Device Clear` or `SRQ`).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections
- Compatible IEEE 488.2 support for Message Exchange Protocol, Device Clear, Serial Poll, Remote/Local, Trigger, and Service Request
- Uses a single IANA registered port (4880), which simplifies the configuration of fire-walls
- Supports simultaneous access of multiple users by providing versatile locking mechanisms
- Usable for IPv6 or IPv4 networks



Using VXI-11, each operation is blocked until a VXI-11 device handshake returns. However, using HiSLIP, data is sent to the device using the "fire and forget" method with immediate return. Thus, a successful return of a VISA operation such as `viWrite()` does not guarantee that the instrument has finished or started the requested command, but is delivered to the TCP/IP buffers.

For more information see also the application note:

[1MA208: Fast Remote Instrument Control with HiSLIP](#)

Socket Communication

An alternative way for remote control of the software is to establish a simple network communication using sockets. The socket communication, also referred to as "Raw Ethernet communication", does not necessarily require a VISA installation on the remote controller side. It is available by default on all operating systems.

The simplest way to establish socket communication is to use the built-in telnet program. The telnet program is part of every operating system and supports a communication with the software on a command-by-command basis. For more convenience and to enable automation by means of programs, user-defined sockets can be programmed.

Socket connections are established on a specially defined port. The socket address is a combination of the IP address or the host name of the instrument and the number of the port configured for remote-control. All R&S ESR use port number 5025 for this purpose. The port is configured for communication on a command-to-command basis and for remote control from a program.

RSIB Protocol

The R&S defined RSIB protocol uses the TCP/IP protocol for communication with the instrument. Remote control over RSIB is done on a message level basis using the SCPI command set of the instrument. The RSIB protocol allows you to control the instrument for example via Visual C++- and Visual Basic programs, via the Windows applications Word and Excel, as well as via National Instruments LabView, LabWindows/CVI, Agilent VEE and others. The control applications run on an external computer in the network.

RSIB Interface Functions

The library functions are adapted to the interface functions of National Instruments for GPIB programming. The functions supported by the libraries are listed in the following table.

Function	Description
RSDLLibfind()	Provides a handle for access to a device.
RSDLLibwrt()	Sends a zero-terminated string to a device.
RSDLLilwrt()	Sends a certain number of bytes to a device.
RSDLLibwrtf()	Sends the contents of a file to a device.
RSDLLibrd()	Reads data from a device into a string.
RSDLLiird()	Reads a certain number of bytes from a device.
RSDLLibrdf()	Reads data from a device into a file.
RSDLLibtmo()	Sets timeout for RSIB functions.
RSDLLibsre()	Switches a device to the local or remote state.
RSDLLibloc()	Temporarily switches a device to the local state.
RSDLLibeot()	Enables/disables the END message for write operations.
RSDLLibrsp()	Performs a serial poll and provides the status byte.
RSDLLibonl()	Sets the device online/offline.
RSDLLTestSrq()	Checks whether a device has generated an SRQ.
RSDLLWaitSrq()	Waits until a device generates an SRQ.
RSDLLSwapBytes	Swaps the byte sequence for binary numericdisplay (only required for non-Intel platforms).

Telnet Protocol

As an alternative to remote control the instrument can use a simple telnet protocol (port 5025). Unlike using the VXI-11 protocol, no VISA installation is necessary on the remote controller side. This protocol is sometimes also referred to as "socket communication" or "Raw Ethernet mode". To control the instrument, only a Telnet program is required. The Telnet program is part of every operating system.

11.1.1.4 GPIB Interface (IEC 625/IEEE 418 Bus Interface)

To be able to control the instrument via the GPIB bus, the instrument and the controller must be linked by a GPIB bus cable. A GPIB bus card, the card drivers and the program libraries for the programming language used must be provided in the controller. The controller must address the instrument with the GPIB bus address (see "[GPIB Instrument Address](#)" on page 562).

Notes and Conditions

In connection with the GPIB interface, note the following:

- Up to 15 instruments can be connected
- The total cable length is restricted to a maximum of 15 m or 2 m times the number of devices, whichever is less; the cable length between two instruments should not exceed 2 m.
- A wired "OR"-connection is used if several instruments are connected in parallel.
- Any connected IEC-bus cables should be terminated by an instrument or controller.

GPIB Interface Messages

Interface messages are transmitted to the instrument on the data lines, with the attention line (ATN) being active (LOW). They are used for communication between the controller and the instrument and can only be sent by a computer which has the function of a GPIB bus controller. GPIB interface messages can be further subdivided into:

- **Universal commands:** act on all instruments connected to the GPIB bus without previous addressing
- **Addressed commands:** only act on instruments previously addressed as listeners

The following figure provides an overview of the available communication lines used by the GPIB interface.

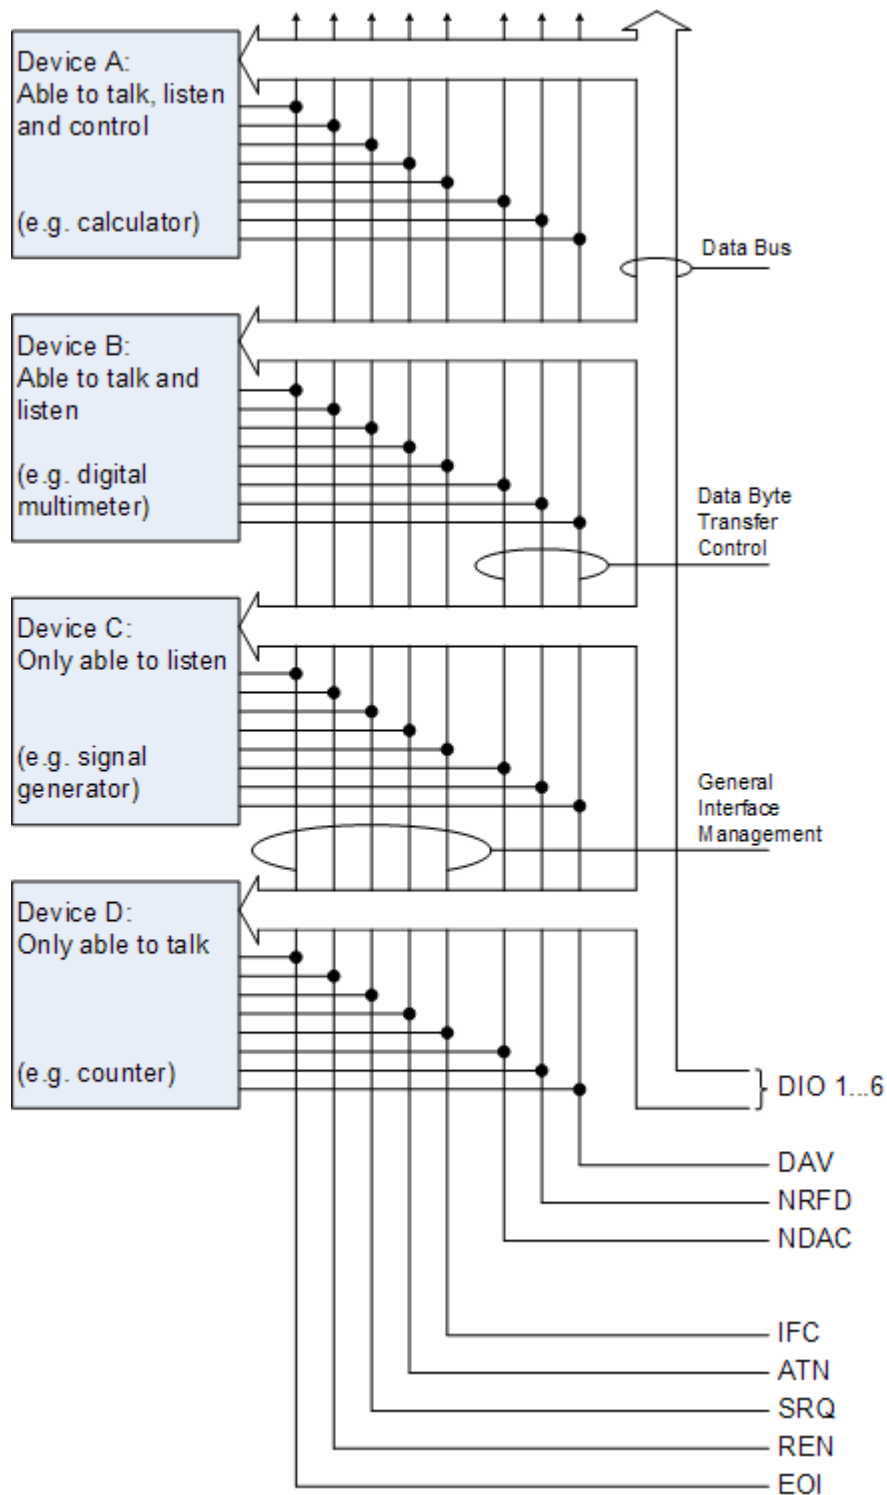


Figure 11-1: Communication lines used by the GPIB interface

Universal Commands

Universal commands are encoded in the range 10 through 1F hex. They affect all instruments connected to the bus and do not require addressing.

Command	Effect on the instrument
DCL (Device Clear)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument settings.
IFC (Interface Clear *)	Resets the interfaces to the default setting.
LLO (Local Lockout)	The "Local" softkey is disabled. Manual operation is no longer available until <i>GTL</i> is executed.
SPE (Serial Poll Enable)	Ready for serial poll.
SPD (Serial Poll Disable)	End of serial poll.
PPU (Parallel Poll Unconfigure)	End of the parallel-poll state.
*) IFC is not a real universal command, it is sent via a separate line; however, it also affects all instruments connected to the bus and does not require addressing	

Addressed Commands

Addressed commands are encoded in the range 00 through 0F hex. They only affect instruments addressed as listeners.

Command	Effect on the instrument
GET (Group Execute Trigger)	Triggers a previously active instrument function (e.g. a sweep). The effect of the command is the same as with that of a pulse at the external trigger signal input.
GTL (Go to Local)	Transition to the "local" state (manual control).
	Transition to the "remote" state (remote control).
PPC (Parallel Poll Configure)	Configures the instrument for parallel poll.
SDC (Selected Device Clear)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument setting.

GPIB Instrument Address

In order to operate the instrument via remote control, it must be addressed using the GPIB address. The remote control address is factory-set to 20, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIB address is maintained after a reset of the instrument settings.

Setting the GPIB address

1. On the R&S ESR, press the [SETUP] key.
2. Press the "General Setup" softkey.
3. Press the "GPIB" softkey.

The submenu for setting the parameters of the remote control interface is displayed.

4. Press the "GPIB Address" softkey.

The edit dialog box for the GPIB address is displayed.

5. Enter a value between 0 and 30.

Remote command: `SYST:COMM:GPIB:ADDR 18`

11.1.2 Starting a Remote Control Session

When you switch on the instrument, it is always in manual operation state ("local" state) and can be operated via the front panel.

Starting remote control

1. Send an addressed command (`GTR` - Go to Remote) from a controller to the instrument.

The instrument is switched to remote control ("remote" state). Operation via the front panel is disabled. Only the "Local" softkey is displayed to return to manual operation. The instrument remains in the remote state until it is reset to the manual state via the instrument or via remote control interfaces. Switching from manual operation to remote control and vice versa does not affect the other instrument settings.

2. During program execution, send the `SYSTem:DISPlay:UPDate ON` command to activate the display of results.

The changes in the device settings and the recorded measurement values are displayed on the instrument screen.

3. To obtain optimum performance during remote control, send the `SYSTem:DISPlay:UPDate OFF` command to hide the display of results and diagrams again (default setting in remote control).

4. To prevent unintentional return to manual operation, disable the keys of the instrument using the universal command `LLO`.

Switching to manual mode is only possible via remote control then. This function is only available for the GPIB interface.

5. To enable the keys of the R&S ESR again, switch the instrument to local mode (`GTL` - Go to Local), i.e. deactivate the `REN` line of the remote control interface.



If the instrument is operated exclusively in remote control, it is recommended that you switch on the power-save mode for the display. For more details on this mode refer to "[Switching the Screen Display On and Off](#)" on page 123.

11.1.3 Returning to Manual Operation

Before you switch back to manual operation, all remote command processing must be completed. Otherwise, the instrument will switch back to remote control immediately.

- ▶ Press the "Local" softkey or the [PRESET] key, or use the following GPIB command:

```
status = viGpibControlREN(vi, VI_GPIB_REN_ADDRESS_GTL)
```



If you select the "Local" softkey while a self-alignment or a self-test is still running (which was started remotely), the instrument only returns to the manual operation state when the alignment or test is completed.

11.1.4 SCPI Command Structure

SCPI commands consist of a header and, in most cases, one or more parameters. The header and the parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). The headers may consist of several mnemonics (keywords). Queries are formed by appending a question mark directly to the header.

The commands can be either device-specific or device-independent (common commands). Common and device-specific commands differ in their syntax.

11.1.4.1 Syntax for Common Commands

Common (= device-independent) commands consist of a header preceded by an asterisk (*), and possibly one or more parameters.

Table 11-2: Examples of common commands

*RST	RESET	Resets the instrument.
*ESE	EVENT STATUS ENABLE	Sets the bits of the event status enable registers.
*ESR?	EVENT STATUS QUERY	Queries the contents of the event status register.
*IDN?	IDENTIFICATION QUERY	Queries the instrument identification string.

11.1.4.2 Syntax for Device-Specific Commands



Not all commands used in the following examples are necessarily implemented in the instrument. For demonstration purposes only, assume the existence of the following commands for this section:

- DISPLAY[:WINDow<1...4>]:MAXimize <Boolean>
- FORMat:READings:DATA <type>[,<length>]
- HCOpy:DEvIce:COLor <Boolean>
- HCOpy:DEvIce:CMAP:COLor:RGB <red>,<green>,<blue>
- HCOpy[:IMMediate]
- HCOpy:ITEM:ALL
- HCOpy:ITEM:LABel <string>
- HCOpy:PAGE:DIMensions:QUADrant [<N>]
- HCOpy:PAGE:ORientation LANDscape | PORTrait
- HCOpy:PAGE:SCALE <numeric value>
- MMEMoRY:CoPY <file_source>,<file_destination>
- SENSE:BANDwidth|BWIDth[:RESolution] <numeric_value>
- SENSE:FREQuency:STOP <numeric value>
- SENSE:LIST:FREQuency <numeric_value>{,<numeric_value>}

• Long and short form	565
• Numeric Suffixes	565
• Optional Mnemonics	566

Long and short form

The mnemonics feature a long form and a short form. The short form is marked by upper case letters, the long form corresponds to the complete word. Either the short form or the long form can be entered; other abbreviations are not permitted.

Example:

HCOpy:DEvIce:COLor ON is equivalent to HCOP:DEV:COL ON.



Case-insensitivity

Upper case and lower case notation only serves to distinguish the two forms in the manual, the instrument itself is case-insensitive.

Numeric Suffixes

If a command can be applied to multiple instances of an object, e.g. specific channels or sources, the required instances can be specified by a suffix added to the command. Numeric suffixes are indicated by angular brackets (<1...4>, <n>, <i>) and are replaced by a single value in the command. Entries without a suffix are interpreted as having the suffix 1.

Example:

Definition: `HCOPY:PAGE:DIMensions:QUADrant [<N>]`

Command: `HCOP:PAGE:DIM:QUAD2`

This command refers to the quadrant 2.

**Different numbering in remote control**

For remote control, the suffix may differ from the number of the corresponding selection used in manual operation. SCPI prescribes that suffix counting starts with 1. Suffix 1 is the default state and used when no specific suffix is specified.

Some standards define a fixed numbering, starting with 0. If the numbering differs in manual operation and remote control, it is indicated for the corresponding command.

Optional Mnemonics

Some command systems permit certain mnemonics to be inserted into the header or omitted. These mnemonics are marked by square brackets in the description. The instrument must recognize the long command to comply with the SCPI standard. Some commands are considerably shortened by these optional mnemonics.

Example:

Definition: `HCOPY[:IMMEDIATE]`

Command: `HCOP:IMM` is equivalent to `HCOP`

**Optional mnemonics with numeric suffixes**

Do not omit an optional mnemonic if it includes a numeric suffix that is relevant for the effect of the command.

Example:

Definition: `DISPlay[:WINDow<1...4>]:MAXimize <Boolean>`

Command: `DISP:MAX ON` refers to window 1.

In order to refer to a window other than 1, you must include the optional `WINDow` parameter with the suffix for the required window.

`DISP:WIND2:MAX ON` refers to window 2.

11.1.4.3 SCPI Parameters

Many commands are supplemented by a parameter or a list of parameters. The parameters must be separated from the header by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank).

The parameters required for each command and the allowed range of values are specified in the command description.

Allowed parameters are:

• Numeric Values	567
• Special Numeric Values	567
• Boolean Parameters	568
• Text Parameters	568
• Character Strings	568
• Block Data	569

Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the exponent must lie inside the value range -32000 to 32000. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not allowed.

Example:

```
SENS:FREQ:STOP 1500000 = SENS:FREQ:STOP 1.5E6
```

Units

For physical quantities, the unit can be entered. If the unit is missing, the basic unit is used. Allowed unit prefixes are:

- G (giga)
- MA (mega), MOHM, MHZ
- K (kilo)
- M (milli)
- U (micro)
- N (nano)

Example:

```
SENSe:FREQ:STOP 1.5GHz = SENSe:FREQ:STOP 1.5E9
```

Some settings allow relative values to be stated in percent. According to SCPI, this unit is represented by the `PCT` string.

Example:

```
HCOP:PAGE:SCAL 90PCT
```

Special Numeric Values

The following mnemonics are special numeric values. In the response to a query, the numeric value is provided.

- **MIN and MAX:** denote the minimum and maximum value.
- **DEF:** denotes a preset value which has been stored in the EPROM. This value conforms to the default setting, as it is called by the `*RST` command.
- **UP and DOWN:** increases or reduces the numeric value by one step. The step width can be specified via an allocated step command for each parameter which can be set via `UP` and `DOWN`.

- **INF and NINF:** INFinity and negative INFinity (NINF) represent the numeric values 9.9E37 or -9.9E37, respectively. INF and NINF are only sent as instrument responses.
- **NAN:** Not A Number (NAN) represents the value 9.91E37. NAN is only sent as a instrument response. This value is not defined. Possible causes are the division of zero by zero, the subtraction of infinite from infinite and the representation of missing values.

Example:

Setting command: `SENSe:LIST:FREQ MAXimum`

Query: `SENS:LIST:FREQ?`

Response: `3.5E9`

**Queries for special numeric values**

The numeric values associated to `MAXimum`/`MINimum`/`DEFault` can be queried by adding the corresponding mnemonic after the quotation mark.

Example: `SENSe:LIST:FREQ? MAXimum`

Returns the maximum numeric value as a result.

Boolean Parameters

Boolean parameters represent two states. The "ON" state (logically true) is represented by "ON" or a numeric value 1. The "OFF" state (logically untrue) is represented by "OFF" or the numeric value 0. The numeric values are provided as the response for a query.

Example:

Setting command: `HCOPY:DEV:COL ON`

Query: `HCOPY:DEV:COL?`

Response: `1`

Text Parameters

Text parameters observe the syntactic rules for mnemonics, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the response to a query, the short form of the text is provided.

Example:

Setting command: `HCOPY:PAGE:ORIENTATION LANDscape`

Query: `HCOP:PAGE:ORI?`

Response: `LAND`

Character Strings

Strings must always be entered in quotation marks (' or ").

Example:

```
HCOP:ITEM:LABel "Test1"
```

```
HCOP:ITEM:LABel 'Test1'
```

Block Data

Block data is a format which is suitable for the transmission of large amounts of data. For example, a command using a block data parameter has the following structure:

```
FORMat:READings:DATA #45168xxxxxxxx
```

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted.

#0 specifies a data block of indefinite length. The use of the indefinite format requires a NL^END message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

11.1.4.4 Overview of Syntax Elements

The following tables provide an overview of the syntax elements and special characters.

Table 11-3: Syntax elements

:	The colon separates the mnemonics of a command.
;	The semicolon separates two commands of a command line. It does not alter the path.
,	The comma separates several parameters of a command.
?	The question mark forms a query.
*	The asterisk marks a common command.
' '	Quotation marks introduce a string and terminate it (both single and double quotation marks are possible).
#	The hash symbol introduces binary, octal, hexadecimal and block data. <ul style="list-style-type: none"> • Binary: #B10110 • Octal: #O7612 • Hexa: #HF3A7 • Block: #21312
	A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates the header from the parameters.

Table 11-4: Special characters

 	<p>Parameters</p> <p>A vertical stroke in parameter definitions indicates alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.</p> <p>Example:</p> <p>Definition: <code>HCOPY:PAGE:ORIENTATION LANDscape PORtrait</code></p> <p>Command <code>HCOP:PAGE:ORI LAND</code> specifies landscape orientation</p> <p>Command <code>HCOP:PAGE:ORI PORT</code> specifies portrait orientation</p> <p>Mnemonics</p> <p>A selection of mnemonics with an identical effect exists for several commands. These mnemonics are indicated in the same line; they are separated by a vertical stroke. Only one of these mnemonics needs to be included in the header of the command. The effect of the command is independent of which of the mnemonics is used.</p> <p>Example:</p> <p>Definition: <code>SENSE:BANDwidth BWIDTH[:RESolution] <numeric_value></code></p> <p>The two following commands with identical meaning can be created:</p> <p><code>SENS:BAND:RES 1</code></p> <p><code>SENS:BWID:RES 1</code></p>
[]	<p>Mnemonics in square brackets are optional and may be inserted into the header or omitted.</p> <p>Example: <code>HCOPY[:IMMEDIATE]</code></p> <p><code>HCOP:IMM</code> is equivalent to <code>HCOP</code></p>
{}	<p>Parameters in curly brackets are optional and can be inserted once or several times, or omitted.</p> <p>Example: <code>SENSE:LIST:FREQUENCY <numeric_value>{,<numeric_value>}</code></p> <p>The following are valid commands:</p> <p><code>SENS:LIST:FREQ 10</code></p> <p><code>SENS:LIST:FREQ 10,20</code></p> <p><code>SENS:LIST:FREQ 10,20,30,40</code></p>

11.1.4.5 Structure of a Command Line

A command line may consist of one or several commands. It is terminated by one of the following:

- <New Line>
- <New Line> with EOI
- EOI together with the last data byte

Several commands in a command line must be separated by a semicolon ";".

Example:

```
MMEM:COPY "Test1","MeasurementXY";:HCOP:ITEM ALL
```

This command line contains two commands. The first command belongs to the MMEM system, the second command belongs to the HCOP system. If the next command belongs to a different command system, the semicolon is followed by a colon.

Example:

```
HCOP:ITEM ALL;:HCOP:IMM
```

This command line contains two commands. Both commands are part of the HCOP command system, i.e. they have one level in common.

If the successive commands belong to the same system, having one or several levels in common, the command line can be abbreviated. When abbreviating the command line, the second command begins with the level below HCOP. The colon after the semi-colon is omitted. The abbreviated form of the command line reads as follows:

```
HCOP:ITEM ALL;IMM
```

Example:

```
HCOP:ITEM ALL
```

```
HCOP:IMM
```

A new command line always begins with the complete path.

11.1.4.6 Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

- The requested parameter is transmitted without a header.
Example: HCOP:PAGE:ORI?, **Response:** LAND
- Maximum values, minimum values and all other quantities that are requested via a special text parameter are returned as numeric values.
Example: SENSE:FREQUENCY:STOP? MAX, **Response:** 3.5E9
- Numeric values are output without a unit. Physical quantities are referred to the basic units or to the units set using the Unit command. The response 3.5E9 in the previous example stands for 3.5 GHz.
- Truth values (Boolean values) are returned as 0 (for OFF) and 1 (for ON).
Example:
Setting command: HCOpy:DEV:COL ON
Query: HCOpy:DEV:COL?
Response: 1
- Text (character data) is returned in a short form.
Example:
Setting command: HCOpy:PAGE:ORIENTATION LANDscape
Query: HCOP:PAGE:ORI?
Response: LAND
- Invalid numerical results
In some cases, particularly when a result consists of multiple numeric values, invalid values are returned as 9.91E37 (not a number).

11.1.5 Command Sequence and Synchronization

IEEE 488.2 defines a distinction between overlapped and sequential commands:

- A **sequential command** is one which finishes executing before the next command starts executing. Commands that are processed quickly are usually implemented as sequential commands.
- An **overlapping command** is one which does not automatically finish executing before the next command starts executing. Usually, overlapping commands take longer to process and allow the program to do other tasks while being executed. If overlapping commands do have to be executed in a defined order, e.g. in order to avoid wrong measurement results, they must be serviced sequentially. This is called synchronization between the controller and the instrument.

Setting commands within one command line, even though they may be implemented as sequential commands, are not necessarily serviced in the order in which they have been received. In order to make sure that commands are actually carried out in a certain order, each command must be sent in a separate command line.

Example: Commands and queries in one message

The response to a query combined in a program message with commands that affect the queried value is not predictable.

The following commands always return the specified result:

```
:FREQ:STAR 1GHZ;SPAN 100 :FREQ:STAR?
```

Result:

```
1000000000 (1 GHz)
```

Whereas the result for the following commands is not specified by SCPI:

```
:FREQ:STAR 1GHz;STAR?;SPAN 1000000
```

The result could be the value of `START` before the command was sent since the instrument might defer executing the individual commands until a program message terminator is received. The result could also be 1 GHz if the instrument executes commands as they are received.



As a general rule, send commands and queries in different program messages.

Example: Overlapping command with *OPC

The instrument implements `INITiate[:IMMEDIATE]` as an overlapped command. Assuming that `INITiate[:IMMEDIATE]` takes longer to execute than `*OPC`, sending the following command sequence results in initiating a sweep and, after some time, setting the `OPC` bit in the `ESR`:

```
INIT; *OPC.
```

Sending the following commands still initiates a sweep:

```
INIT; *OPC; *CLS
```

However, since the operation is still pending when the instrument executes `*CLS`, forcing it into the "Operation Complete Command Idle" State (OCIS), `*OPC` is effectively skipped. The `OPC` bit is not set until the instrument executes another `*OPC` command.

The following list includes the commands for which a synchronization via `*OPC`, `*OPC?` or `*WAI` is mandatory:

Command	Purpose
INIT	start measurement
INIT:CONM	continue measurement
CALC:MARK:FUNC:ZOOM	zoom frequency range around marker 1
CALC:STAT:SCAL:AUTO ONCE	optimize level settings for signal statistic measurement functions
[SENS:]POW:ACH:PRES:RLEV	optimize level settings for adjacent channel power measurements

11.1.5.1 Preventing Overlapping Execution

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used. All three commands cause a certain action only to be carried out after the hardware has been set. The controller can be forced to wait for the corresponding action to occur.

Table 11-5: Synchronization using *OPC, *OPC? and *WAI

Command	Action	Programming the controller
*OPC	Sets the Operation Complete bit in the <code>ESR</code> after all previous commands have been executed.	<ul style="list-style-type: none"> Setting bit 0 in the <code>ESE</code> Setting bit 5 in the <code>SRE</code> Waiting for service request (<code>SRQ</code>)
*OPC?	Stops command processing until 1 is returned. This occurs when all pending operations are completed.	Send <code>*OPC?</code> directly after the command whose processing must be terminated before other commands can be executed.
*WAI	Stops further command processing until all commands sent before <code>*WAI</code> have been executed.	Send <code>*WAI</code> directly after the command whose processing must be terminated before other commands are executed.

Command synchronization using `*WAI` or `*OPC?` is a good choice if the overlapped command takes only little time to process. The two synchronization commands simply

block overlapped execution of the command. Append the synchronization command to the overlapping command, for example:

```
SINGLE; *OPC?
```

For time consuming overlapped commands, you can allow the controller or the instrument to do other useful work while waiting for command execution. Use one of the following methods:

***OPC with a service request**

1. Set the OPC mask bit (bit no. 0) in the ESE: *ESE 1
2. Set bit no. 5 in the SRE: *SRE 32 to enable ESB service request.
3. Send the overlapped command with *OPC .
4. Wait for a service request.

The service request indicates that the overlapped command has finished.

***OPC? with a service request**

1. Set bit no. 4 in the SRE: *SRE 16 to enable MAV service request.
2. Send the overlapped command with *OPC?.
3. Wait for a service request.

The service request indicates that the overlapped command has finished.

Event status register (ESE)

1. Set the OPC mask bit (bit no. 0) in the ESE: *ESE 1
2. Send the overlapped command without *OPC, *OPC? or *WAI.
3. Poll the operation complete state periodically (with a timer) using the sequence:
*OPC; *ESR?

A return value (LSB) of 1 indicates that the overlapped command has finished.

11.1.6 Status Reporting System

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue. Both can be queried via GPIB bus or LAN interface (STATus... commands).

11.1.6.1 Hierarchy of Status Registers

- **STB, SRE**
The SStatus Byte (STB) register and its associated mask register Service Request Enable (SRE) form the highest level of the status reporting system. The STB pro-

vides a rough overview of the instrument status, collecting the information of the lower-level registers.

- **ESR, SCPI registers**

The STB receives its information from the following registers:

- The Event Status Register (ESR) with the associated mask register standard Event Status Enable (ESE)
- The STATUS:OPERation and STATUS:QUEStionable registers which are defined by SCPI and contain detailed information on the instrument

- **IST, PPE**

The IST flag ("Individual Status"), like the SRQ, combines the entire instrument status in a single bit. The PPE fulfills the same function for the IST flag as the SRE for the service request.

- **Output buffer**

The output buffer contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the overview.

All status registers have the same internal structure.



SRE, ESE

The service request enable register SRE can be used as ENABLE part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be used as the ENABLE part of the ESR.

11.1.6.2 Structure of a SCPI Status Register

Each standard SCPI register consists of 5 parts. Each part has a width of 16 bits and has different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus the contents of the register parts can be processed by the controller as positive integers.

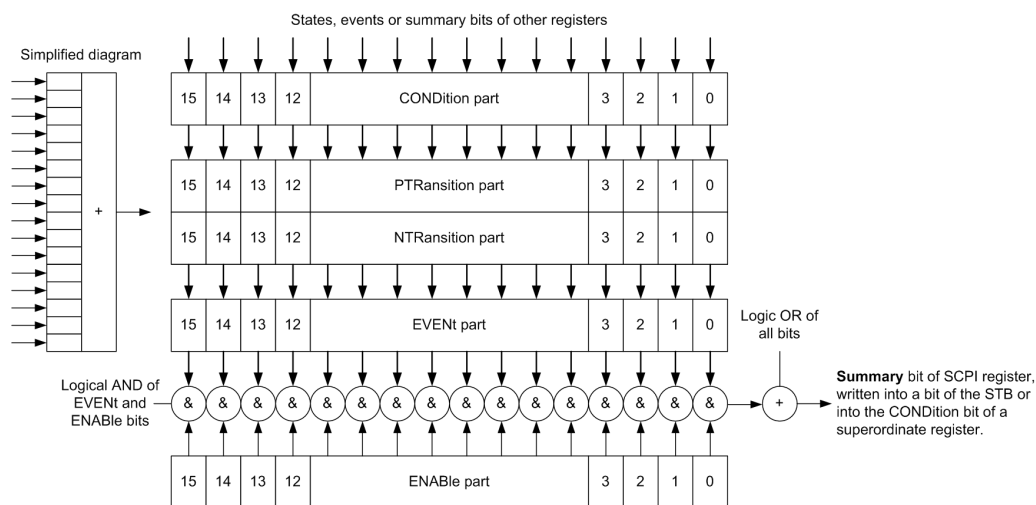


Figure 11-2: The status-register model

Description of the five status register parts

The five parts of a SCPI register have different properties and functions:

- **CONDition**

The **CONDition** part is written into directly by the hardware or the sum bit of the next lower register. Its contents reflect the current instrument status. This register part can only be read, but not written into or cleared. Its contents are not affected by reading.

- **PTRansition / NTRansition**

The two transition register parts define which state transition of the **CONDition** part (none, 0 to 1, 1 to 0 or both) is stored in the **EVENT** part.

The **Positive-TRansition** part acts as a transition filter. When a bit of the **CONDition** part is changed from 0 to 1, the associated **PTR** bit decides whether the **EVENT** bit is set to 1.

- **PTR** bit =1: the **EVENT** bit is set.
- **PTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the **CONDition** part is changed from 1 to 0, the associated **NTR** bit decides whether the **EVENT** bit is set to 1.

- **NTR** bit =1: the **EVENT** bit is set.
- **NTR** bit =0: the **EVENT** bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

- **EVENT**

The **EVENT** part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be

read by the user. Reading the register clears it. This part is often equated with the entire register.

- **ENABLE**

The `ENABLE` part determines whether the associated `EVENT` bit contributes to the sum bit (see below). Each bit of the `EVENT` part is "ANDed" with the associated `ENABLE` bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an "OR" function (symbol '+').

`ENABLE` bit = 0: the associated `EVENT` bit does not contribute to the sum bit

`ENABLE` bit = 1: if the associated `EVENT` bit is "1", the sum bit is set to "1" as well.

This part can be written into and read by the user as required. Its contents are not affected by reading.

Sum bit

The sum bit is obtained from the `EVENT` and `ENABLE` part for each register. The result is then entered into a bit of the `CONDition` part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event can lead to a service request throughout all levels of the hierarchy.

11.1.6.3 Contents of the Status Register

This chapter provides information on the contents of each status register the meaning for all bits that are used available for each operating mode.

Status Registers in Receiver Mode

This chapter contains the description of the registers and bits specific to spectrum mode.

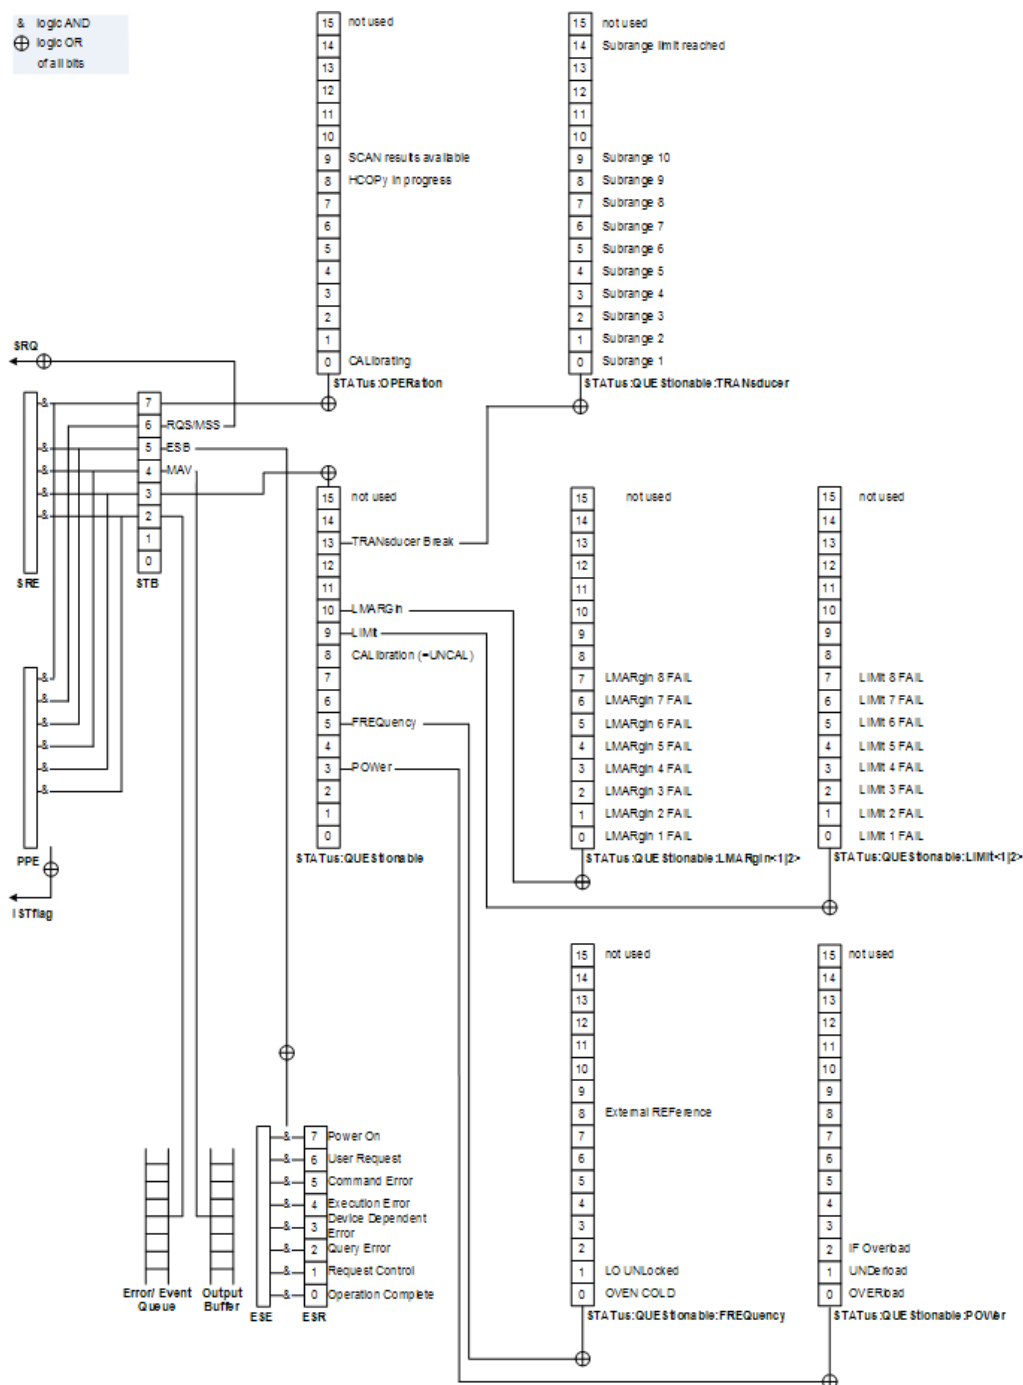


Figure 11-3: Overview of status registers in receiver mode

Status Byte (STB) and Service Request Enable Register (SRE)

The `STATUS_BYTE` (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB can thus be compared with the `CONDition` part of an SCPI register and assumes the highest level within the SCPI hierarchy.

The STB is read using the command `*STB?` or a serial poll.

The `STatus Byte` (STB) is linked to the `Service Request Enable` (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command `*SRE` and read using the command `*SRE?`.

Table 11-6: Meaning of the bits used in the status byte

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUESTIONable status register summary bit The bit is set if an <code>EVENT</code> bit is set in the <code>QUESTIONable</code> status register and the associated <code>ENABLE</code> bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the <code>STATUS:QUESTIONable</code> status register.
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (master status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	<code>STATUS:OPERation</code> status register summary bit The bit is set if an <code>EVENT</code> bit is set in the <code>OPERation</code> status register and the associated <code>ENABLE</code> bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the <code>STATUS:OPERation</code> status register.

IST Flag and Parallel Poll Enable Register (PPE)

As with the SRQ, the IST flag combines the entire status information in a single bit. It can be read by means of a parallel poll (see "[Parallel Poll](#)" on page 590) or using the command `*IST?`.

The parallel poll enable register (PPE) determines which bits of the STB contribute to the IST flag. The bits of the STB are "ANDed" with the corresponding bits of the PPE, with bit 6 being used as well in contrast to the SRE. The IST flag results from the "ORing" of all results. The PPE can be set using commands `*PRE` and read using command `*PRE?`.

Event Status Register (ESR) and Event Status Enable Register (ESE)

The Event Status Register (ESR) is the source for the registers on the highest levels and is similar to the `EVENT` part of a SCPI register. It is defined by IEEE 488.2. You can read out the ESR with `*ESR?`.

The corresponding `ENABLE` part of the ESR is the Event Status Enable mask register (ESE). The ESE is directly linked to the ESR. You can control the ESE with `*ESE`.

Table 11-7: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command <code>*OPC</code> exactly when all previous commands have been executed.
1	Unused
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent Error This bit is set if a device-dependent error occurs. The R&S ESR adds a number to the error queue. The number is either in the range between -300 and -399 or greater than 0. If the number is positive, it indicates the error type in greater detail.
4	Execution Error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command Error This bit is set if a remote command is undefined or has a incorrect syntax. The R&S ESR adds a number to the error queue. The number is in the range between -100 and -200 and indicates the error type in greater detail.
6	User Request This bit is set when you press the "Local" softkey.
7	Power On (supply voltage on) This bit is set when you turn on the instrument.

STATus:OPERation Register

The `STATus:OPERation` register contains information about actions the R&S ESR is currently executing. It also contains information about the actions the R&S ESR has executed since the last reading.

You can read out the state of the register with `STATus:OPERation:CONDition?` or `STATus:OPERation[:EVENT]?`.

Table 11-8: Meaning of the bits used in the STATUS:OPERation register

Bit No.	Meaning
0	CALibrating This bit is set as long as the instrument is performing a calibration.
1 to 7	Not used
8	HardCOpy in progress This bit is set while the instrument is printing a hardcopy.
9	SCAN results available This bit is set when a block of scan results is available. Note that this function must be enabled by TRACe:FEED:CONTo1 ALWays.
10	Sweep Break This bit is set when the end of a scan range is reached. To proceed, you have to use the INITiate:CONMeas command.
11	Not used
12	Threshold signal active
13 to 14	Not used
15	This bit is always 0.

STATUS:QUESTionable Register

The STATUS:QUESTionable register contains information about states that may occur if the R&S ESR is operated without meeting the specifications.

You can read out the state of the register with `STATUS:QUESTionable:CONDition?` and `STATUS:QUESTionable[:EVENT]?`.

Table 11-9: Meaning of the bits used in the STATUS:QUESTionable register

Bit No.	Meaning
0 - 2	These bits are not used
3	POWer This bit is set if a questionable power occurs (see " STATUS:QUESTionable:POWer Register " on page 584).
4	TEMPerature This bit is set if a questionable temperature occurs.
5	FREQuency The bit is set if a frequency is questionable (see " STATUS:QUESTionable:FREQuency Register " on page 582).
6 - 7	Not used
8	CALibration The bit is set if a measurement is performed unaligned ("UNCAL" display)
9	LIMit (device-specific) This bit is set if a limit value is violated (see " STATUS:QUESTionable:LIMit Register " on page 582)

Bit No.	Meaning
10	LMARgin (device-specific) This bit is set if a margin is violated (see " STATus:QUEStionable:LMARgin Register " on page 583)
11	Not used
12	ACPLimit (device-specific) This bit is set if a limit for the adjacent channel power measurement is violated (see " STATus:QUEStionable:ACPLimit Register " on page 588)
13	TRANsducer break This bit is set if a transducer break occurs and indicates the next range.
14	Not used
15	This bit is always 0.

STATus:QUEStionable:FREQuency Register

The STATus:QUEStionable:FREQuency register contains information about the condition of the local oscillator and the reference frequency.

You can read out the register with `STATus:QUEStionable:FREQuency:CONDition?` or `STATus:QUEStionable:FREQuency[:EVENT]?`.

Table 11-10: Meaning of the bits used in the STATus:QUEStionable:FREQuency register

Bit No.	Meaning
0	OVEN COLD This bit is set if the reference oscillator has not yet attained its operating temperature. "OCXO" is displayed.
1	LO UNLocked This bit is set if the local oscillator no longer locks. "LOUNL" is displayed.
2 to 7	Unused
8	EXTernalREFerence This bit is set if you have selected an external reference oscillator but did not connect a useable external reference source. In that case the synthesizer can not lock. The frequency in all probability is not accurate.
9 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:LIMit Register

The STATus:QUEStionable:LIMit register contains information about the results of a limit check when you are working with limit lines.

The number of LIMit registers depends on the number of measurement windows available in any operating mode.

You can read out the register with `STATus:QUEStionable:LIMit<n>:CONDition?` or `STATus:QUEStionable:LIMit<n>[:EVENT]?`.

Table 11-11: Meaning of the bits used in the STATUS:QUESTIONable:LIMit register

Bit No.	Meaning
0	LIMit 1 FAIL This bit is set if limit line 1 is violated.
1	LIMit 2 FAIL This bit is set if limit line 2 is violated.
2	LIMit 3 FAIL This bit is set if limit line 3 is violated.
3	LIMit 4 FAIL This bit is set if limit line 4 is violated.
4	LIMit 5 FAIL This bit is set if limit line 5 is violated.
5	LIMit 6 FAIL This bit is set if limit line 6 is violated.
6	LIMit 7 FAIL This bit is set if limit line 7 is violated.
7	LIMit 8 FAIL This bit is set if limit line 8 is violated.
8 to 14	Unused
15	This bit is always 0.

STATUS:QUESTIONable:LMARgin Register

This register contains information about the observance of limit margins.

You can read out the register with `STATUS:QUESTIONable:LMARgin<n>:CONDition?` or `STATUS:QUESTIONable:LMARgin<n>[:EVENT]?`.

Table 11-12: Meaning of the bits used in the STATUS:QUESTIONable:LMARgin register

Bit No.	Meaning
0	LMARgin 1 FAIL This bit is set if limit margin 1 is violated.
1	LMARgin 2 FAIL This bit is set if limit margin 2 is violated.
2	LMARgin 3 FAIL This bit is set if limit margin 3 is violated.
3	LMARgin 4 FAIL This bit is set if limit margin 4 is violated.
4	LMARgin 5 FAIL This bit is set if limit margin 5 is violated.
5	LMARgin 6 FAIL This bit is set if limit margin 6 is violated.

Bit No.	Meaning
6	LMARgin 7 FAIL This bit is set if limit margin 7 is violated.
7	LMARgin 8 FAIL This bit is set if limit margin 8 is violated.
8 to 14	Not used
15	This bit is always 0.

STATus:QUEStionable:POWer Register

The STATus:QUEStionable:POWer register contains information about possible overload situations that may occur during operation of the R&S ESR.

You can read out the registers with `STATus:QUEStionable:POWer:CONDition?` or `STATus:QUEStionable:POWer[:EVENT]?`.

Table 11-13: Meaning of the bits used in the STATus:QUEStionable:POWer register

Bit No.	Meaning
0	OVERload This bit is set if an overload occurs at the RF input. The R&S ESR displays the enhancement label "OVLN".
1	UNDerload This bit is set if an underload occurs at the RF input. The R&S ESR displays the enhancement label "UNLN".
2	IF_OVerload This bit is set if an overload occurs in the IF path. The R&S ESR displays the enhancement label "IFOVL".
3 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:TRANsducer Register

The STATus:QUEStionable:TRANsducer register contains information about transducer breaks.

It indicates that a transducer break has been reached. It also indicates the next range that is to be swept. You can continue the sweep with `INITiate<n>:CONMeas`.

You can read out the registers with `STATus:QUEStionable:TRANsducer:CONDition?` or `STATus:QUEStionable:TRANsducer[:EVENT]?` on page 995.

Table 11-14: Meaning of the bits used in the STATUS:QUESTIONable:TRANSDUCER register

Bit No.	Meaning
0	Range 1 This bit is set if subrange 1 has been reached.
1	Range 2 This bit is set if subrange 2 has been reached.
2	Range 3 This bit is set if subrange 3 has been reached.
3	Range 4 This bit is set if subrange 4 has been reached.
4	Range 5 This bit is set if subrange 5 has been reached.
5	Range 6 This bit is set if subrange 6 has been reached.
6	Range 7 This bit is set if subrange 7 has been reached.
7	Range 8 This bit is set if subrange 8 has been reached.
8	Range 9 This bit is set if subrange 9 has been reached.
9	Range 10 This bit is set if subrange 10 has been reached.
10 to 13	Unused
14	Subrange limit This bit is set when the transducer is at the point of changeover from one subrange to another.
15	This bit is always 0.

Status Registers in Spectrum Mode

This chapter contains the description of the registers and bits specific to spectrum mode. For a comprehensive description of the other status registers see "[Status Registers in Receiver Mode](#)" on page 577.

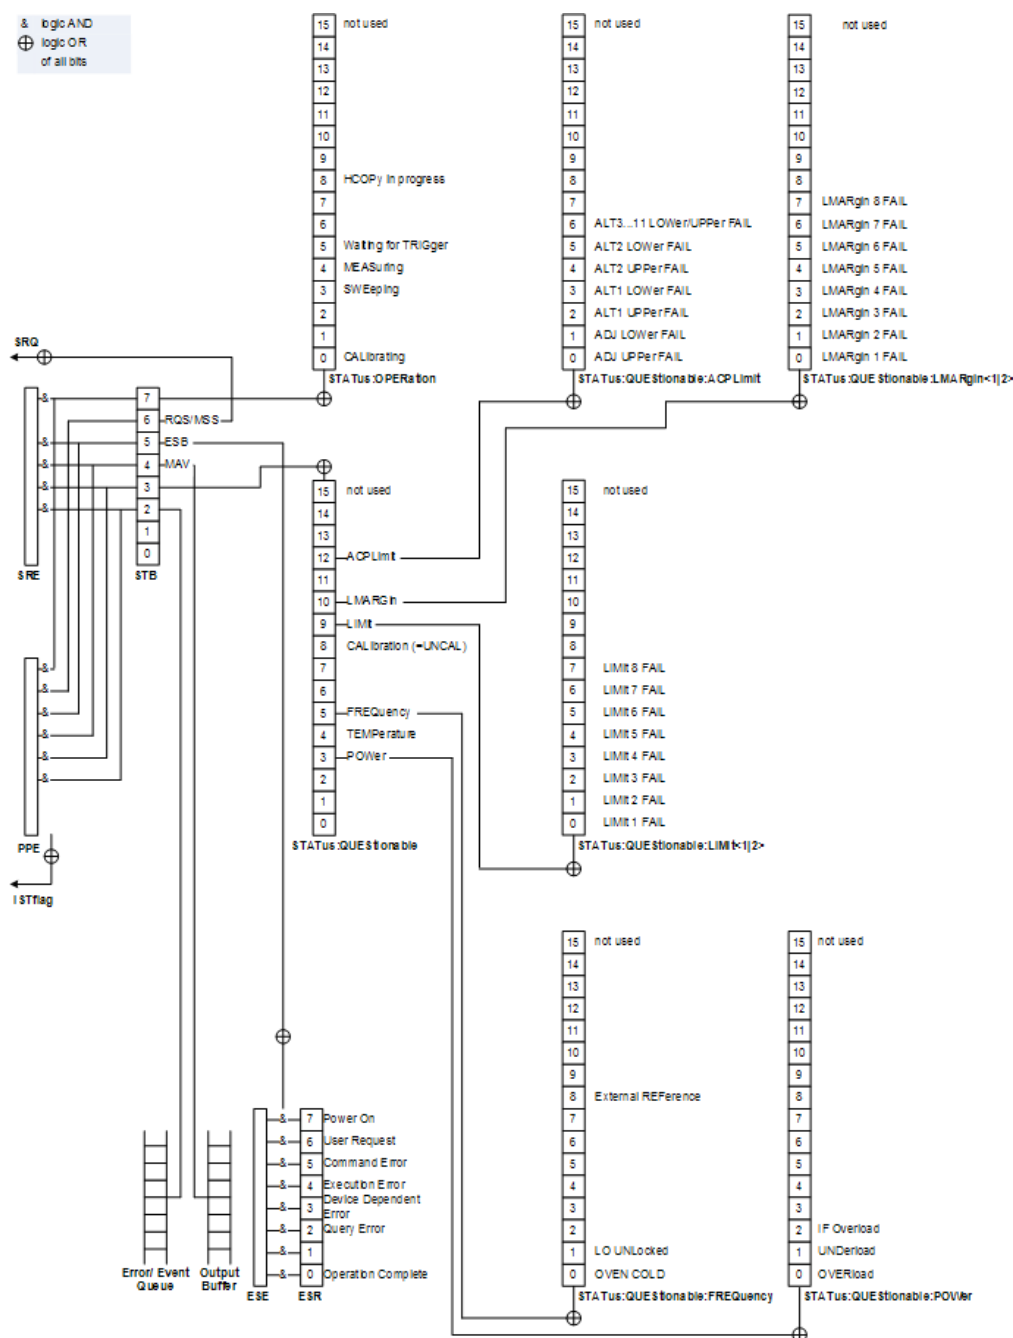


Figure 11-4: Overview of status registers in spectrum mode

STATUS:OPERation Register

The STATUS:OPERation register contains information on current activities of the R&S ESR. It also contains information on activities that have been executed since the last read out.

You can read out the register with `STATUS:OPERation:CONDition?` or `STATUS:OPERation[:EVENT]?`.

Table 11-15: Meaning of the bits used in the STATUS:OPERation register

Bit No.	Meaning
0	CALibrating This bit is set as long as the instrument is performing a calibration.
1-2	Not used
3	SWEeping Sweep is being performed; identical to bit 4
4	MEASuring Measurement is being performed; identical to bit 3
5	Waiting for TRigger Instrument is ready to trigger and waiting for trigger signal
6-7	Not used
8	HardCOpy in progress This bit is set while the instrument is printing a hardcopy.
9	Not used
10	Stop after Range This bit is set when a range in the sweep list has been completed if "Stop after Range" has been activated.
11-14	Not used
15	This bit is always 0.

STATUS:QUESTionable Register

The STATUS:QUESTionable register contains information on instrument states that do not meet the specifications.

You can read out the register with `STATUS:QUESTionable:CONDition?` or `STATUS:QUESTionable[:EVENT]?`.

Table 11-16: Meaning of the bits used in the STATUS:QUESTionable register

Bit No.	Meaning
0 - 2	Unused
3	POWer This bit is set if the measured power level is questionable. The STATUS:QUESTionable:POWer Register provides more information on the error type.
4	TEMPerature This bit is set if the temperature is questionable.
5	FREQuency This bit is set if there is anything wrong with the frequency of the local oscillator or the reference frequency. The STATUS:QUESTionable:FREQuency Register provides more information on the error type.
6 - 7	Unused

Bit No.	Meaning
8	CALibration This bit is set if the R&S ESR is unaligned ("UNCAL" display)
9	LIMit (device-specific) This bit is set if a limit value is violated. The STATus:QUEStionable:LIMit Register provides more information on the error type.
10	LMARgin (device-specific) This bit is set if a margin is violated. The STATus:QUEStionable:LMARgin Register provides more information on the error type.
11	Not used
12	ACPLimit (device-specific) This bit is set if a limit during ACLR measurements is violated. The STATus:QUEStionable:ACPLimit Register provides more information on the error type.
13 - 14	Not used
15	This bit is always 0.

STATus:QUEStionable:ACPLimit Register

The STATus:QUEStionable:ACPLimit register contains information about the results of a limit check during ACLR measurements.

You can read out the register with [STATus:QUEStionable:ACPLimit:CONDition?](#) or [STATus:QUEStionable:ACPLimit\[:EVENT\]?](#).

Table 11-17: Meaning of the bits used in the STATus:QUEStionable:ACPLimit register

Bit No.	Meaning
0	ADJ UPPer FAIL This bit is set if the limit is exceeded in the upper adjacent channel
1	ADJ LOWer FAIL This bit is set if the limit is exceeded in the lower adjacent channel.
2	ALT1 UPPer FAIL This bit is set if the limit is exceeded in the upper 1st alternate channel.
3	ALT1 LOWer FAIL This bit is set if the limit is exceeded in the lower 1st alternate channel.
4	ALT2 UPPer FAIL This bit is set if the limit is exceeded in the upper 2nd alternate channel.
5	ALT2 LOWer FAIL This bit is set if the limit is exceeded in the lower 2nd alternate channel.
6	ALT3 ... 11 LOWer/UPPer FAIL This bit is set if the limit is exceeded in one of the lower or upper alternate channels 3 ... 11.

Bit No.	Meaning
7 to 14	Unused
15	This bit is always 0.

11.1.6.4 Application of the Status Reporting System

The purpose of the status reporting system is to monitor the status of one or several devices in a measuring system. To do this and react appropriately, the controller must receive and evaluate the information of all devices. The following standard methods are used:

- **Service request** (SRQ) initiated by the instrument
- **Serial poll** of all devices in the bus system, initiated by the controller in order to find out who sent a SRQ and why
- **Parallel poll** of all devices
- Query of a **specific instrument status** by means of commands
- Query of the **error queue**

Service Request

Use of the command *OPC to generate an SRQ at the end of a sweep

1. `CALL InstrWrite(analyzer, "*ESE 1")` 'Set bit 0 in the ESE (Operation Complete)
2. `CALL InstrWrite(analyzer, "*SRE 32")` 'Set bit 5 in the SRE (ESB)
3. `CALL InstrWrite(analyzer, "**INIT;*OPC")` 'Generate an SRQ after operation complete

After its settings have been completed, the instrument generates an SRQ.

The SRQ is the only possibility for the instrument to become active on its own. Each controller program should cause the instrument to initiate a service request if errors occur. The program should react appropriately to the service request.

A detailed example for a service request routine can be found in [Chapter 11.17.1, "Service Request"](#), on page 999.

Serial Poll

In a serial poll, just as with command *STB, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster.

The serial poll method is defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works for instruments which do not adhere to SCPI or IEEE 488.2.

The serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

Parallel Poll

In a parallel poll, up to eight instruments are simultaneously requested by the controller using a single command to transmit 1 bit of information each on the data lines, i.e., to set the data line allocated to each instrument to a logical "0" or "1".

In addition to the SRE register, which determines the conditions under which an SRQ is generated, there is a Parallel Poll Enable register (PPE) which is ANDed with the STB bit by bit, considering bit 6 as well. This register is ANDed with the STB bit by bit, considering bit 6 as well. The results are ORed, the result is possibly inverted and then sent as a response to the parallel poll of the controller. The result can also be queried without parallel poll using the command `*IST?`.

The instrument first has to be set for the parallel poll using the command `PPC`. This command allocates a data line to the instrument and determines whether the response is to be inverted. The parallel poll itself is executed using `PPE`.

The parallel poll method is mainly used to find out quickly which one of the instruments connected to the controller has sent a service request. To this effect, SRE and PPE must be set to the same value.

Query of an instrument status

Each part of any status register can be read using queries. There are two types of commands:

- The common commands `*ESR?`, `*IDN?`, `*IST?`, `*STB?` query the higher-level registers.
- The commands of the `STATus` system query the SCPI registers (`STATus:QUEStionable...`)

The returned value is always a decimal number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

Decimal representation of a bit pattern

The STB and ESR registers contain 8 bits, the SCPI registers 16 bits. The contents of a status register are specified and transferred as a single decimal number. To make this possible, each bit is assigned a weighted value. The decimal number is calculated as the sum of the weighted values of all bits in the register that are set to 1.

Bits	0	1	2	3	4	5	6	7	...
Weight	1	2	4	8	16	32	64	128	...

Example:

The decimal value 40 = 32 + 8 indicates that bits no. 3 and 5 in the status register (e.g. the `QUEStionable` status summary bit and the `ESB` bit in the `Status Byte`) are set.

Error Queue

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain text error messages that can be looked up in the Error Log or queried via remote control using `SYSTem:ERRor[:NEXT]?`. Each call of `SYSTem:ERRor[:NEXT]?` provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

11.1.6.5 Reset Values of the Status Reporting System

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except `*RST` and `SYSTem:PRESet`, influence the functional instrument settings. In particular, `DCL` does not change the instrument settings.

Table 11-18: Resetting the status reporting system

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYS- Tem:PRE Set	STA- Tus:PRE- Set	*CLS
	0	1				
Clear STB, ESR	-	yes	-	-	-	yes
Clear SRE, ESE	-	yes	-	-	-	-
Clear PPE	-	yes	-	-	-	-
Clear EVENT parts of the registers	-	yes	-	-	-	yes
Clear ENABLE parts of all OPERation and QUEStionable registers; Fill ENABLE parts of all other registers with "1".	-	yes	-	-	yes	-
Fill PTRansition parts with "1"; Clear NTRansition parts	-	yes	-	-	yes	-
Clear error queue	yes	yes	-	-	-	yes
Clear output buffer	yes	yes	yes	1)	1)	1)

Event	Switching on supply voltage Power-On-Status-Clear		DCL, SDC (Device Clear, Selected Device Clear)	*RST or SYS-Tem:PRE Set	STA-Tus:PRE-Set	*CLS
	0	1				
Clear command processing and input buffer	yes	yes	yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.						

11.1.7 General Programming Recommendations

Initial instrument status before changing settings

Manual operation is designed for maximum possible operating convenience. In contrast, the priority of remote control is the "predictability" of the instrument status. Thus, when a command attempts to define incompatible settings, the command is ignored and the instrument status remains unchanged, i.e. other settings are not automatically adapted. Therefore, control programs should always define an initial instrument status (e.g. using the *RST command) and then implement the required settings.

Command sequence

As a general rule, send commands and queries in different program messages. Otherwise, the result of the query may vary depending on which operation is performed first (see also Preventing Overlapping Execution).

Reacting to malfunctions

The service request is the only possibility for the instrument to become active on its own. Each controller program should instruct the instrument to initiate a service request in case of malfunction. The program should react appropriately to the service request.

Error queues

The error queue should be queried after every service request in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

11.1.8 The IECWIN Tool

The R&S ESR is delivered with *IECWIN* installed, an auxiliary tool provided free of charge by R&S. IECWIN is a program to send SCPI commands to a measuring instrument either interactively or from a command script.



The R&S IECWIN32 tool is provided free of charge. The functionality may change in a future version without notice.

IECWIN offers the following features:

- Connection to instrument via several interfaces/protocols (GPIB, VISA, named pipe (if IECWIN is run on the instrument itself), RSIB)
- Interactive command entry
- Browsing available commands on the instrument
- Error checking following every command
- Execution of command scripts
- Storing binary data to a file
- Reading binary data from a file
- Generation of a log file

For command scripts, IECWIN offers the following features:

- Synchronization with the instrument on every command
- Checking expected result for query commands (as string or numeric value)
- Checking for expected errors codes
- Optional pause on error
- Nested command scripts
- Single step mode
- Conditional execution, based on the *IDN and *OPT strings



You can use the IECWIN to try out the programming examples provided in the R&S ESR User Manuals.

Starting IECWIN

IECWIN is available from the Windows "Start" menu on the R&S ESR, or by executing the following file:

```
C:\Program Files\Rohde-Schwarz\FSV\<<version>\iecwin32.exe
```

You can also copy the program to any Windows PC or laptop. Simply copy the `iecwin32.exe`, `iecwin.chm` and `rsib32.dll` files from the location above to the same folder on the target computer.

When the tool is started, a "Connection settings" dialog box is displayed. Define the connection from the computer the IECWIN tool is installed on to the R&S ESR you want to control. If you are using the tool directly on the R&S ESR, you can use an NT Pipe (COM Parser) connection, which requires no further configuration. For help on setting up other connection types, check the tool's online help (by clicking the "Help" button in the dialog box).



The IECWIN offers an online help with extensive information on how to work with the tool.

11.2 Controlling the R&S ESR Remotely

In addition to working with the R&S ESR interactively, located directly at the instrument, it is also possible to operate and control it from a remote PC.

Various methods for remote control are supported:

- Using the Windows Remote Desktop application in a LAN network (see [Chapter 11.2.1, "Operation with Windows Remote Desktop"](#), on page 594)
 - Using Virtual Network Computing (VNC, see [Chapter 11.2.2, "Operation with a VNC Client"](#), on page 600)
 - Connecting the instrument to a (LAN) network (see [Chapter 11.2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 623)
- | | |
|--|-----|
| • Operation with Windows Remote Desktop | 594 |
| • Operation with a VNC Client | 600 |
| • Brief Introduction to Remote Control | 601 |
| • Remote Control Interfaces and Protocols | 621 |
| • Configuring the GPIB Interface | 623 |
| • Setting Up a Network (LAN) Connection | 623 |
| • How to Configure the LAN Using the LXI Web Browser Interface | 629 |
| • Configuring the Network | 631 |

11.2.1 Operation with Windows Remote Desktop

In production test and measurement, a common requirement is central monitoring of the T&M instruments for remote maintenance and remote diagnostics. Equipped with the Windows Remote Desktop software, the R&S ESR ideally meets requirements for use in production. (The computer that is used for remote operation is called "controller" here.)

- Access to the control functions via a virtual front panel (soft front panel)
- Printout of measurement results directly from the controller
- Storage of measured data on the controller's hard disk

Note that monitoring real time measurements is not possible with the remote desktop. Use the [VNC client](#) instead.

The R&S ESR is connected via a LAN, in which case the Windows operating system also supports a connection via a modem. This section describes the configuration of the R&S ESR and the Remote Desktop Client of the controller. Details on how to set up a modem connection are described in the Windows documentation.

11.2.1.1 Configuring the R&S ESR for Remote Operation




To avoid problems, use a fixed IP address.

When a DHCP server is used, a new IP address is assigned each time the instrument is restarted. This address must first be determined on the instrument itself. Thus, using a DHCP server is not suitable for remote operation of the R&S ESR via Remote Desktop.



With the factory settings, the default "instrument" user can connect to the R&S ESR with the Remote Desktop program of the controller immediately. No further configuration is required. However, if the connection fails or other users need to connect, this section provides basic instructions on setting up the Remote Desktop for the R&S ESR.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. In the Windows "Start" menu, select "Settings > System".
3. Search for "remote access".
4. Select "Allow remote access to your computer".
5. Define which users are to be given access to the R&S ESR via Remote Desktop.
Note: The user account under which configuration is carried out is automatically enabled for Remote Desktop.

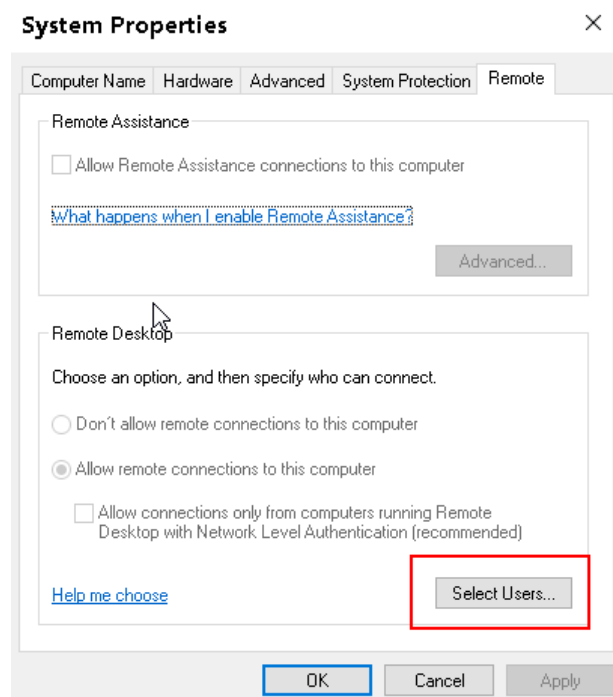

- a) Select the "Select Users" button.
 - b) Select the users or create new user accounts as described in [Chapter 11.2.8.2, "Creating Users"](#), on page 632.
 - c) Select "OK" to confirm the settings.
6. The R&S ESR is now ready for connection setup with the Remote Desktop program of the controller.


11.2.1.2 Configuring the Controller



Remote Desktop Client


The Windows Remote Desktop Client is part of the operating system and can be accessed via "Start > All Applications > Windows Accessories > Remote Desktop Connection".

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. From the "Start" menu, select "All Programs > Accessories > Remote Desktop Connection".
The "Remote Desktop Connection" dialog box is displayed.
3. Select the "Options >>" button.
The dialog box is expanded to display the configuration data.

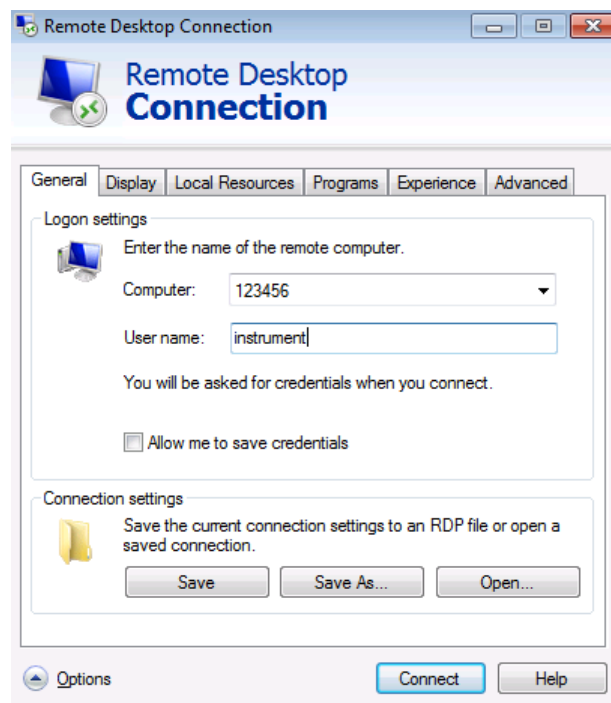

4. Open the "Experience" tab.
The settings on this tab are used to select and optimize the connection speed.

- In the list, select the appropriate connection (for example: LAN (10 Mbps or higher)).
Depending on your selection (and how powerful the connection is), the options are activated or deactivated.
- To improve the performance, you can deactivate the "Desktop background", "Show contents of window while dragging" and "Menu and window animation" options.
- Open the "Local Resources" tab for enabling printers, local drives and serial interfaces.
- If you will need to access drives of the controller from the R&S ESR (e.g. in order to store settings or to copy files from the controller to the R&S ESR), select "More", then enable the "Drives" option.

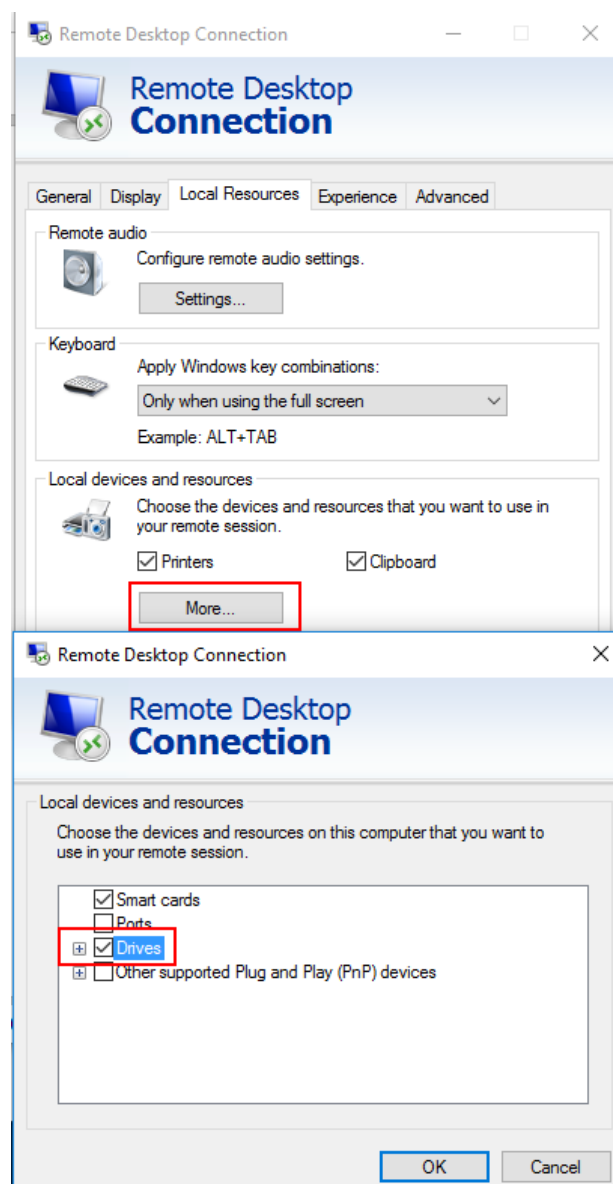

Windows will then map drives of the controller to the corresponding network drives.


9. To use printers connected to the controller while accessing them from the R&S ESR, activate the "Printers" option. Do not change the remaining settings.
10. Open the "Display" tab.
The options for configuring the R&S ESR screen display are displayed.
11. Under "Remote desktop size", you can set the size of the R&S ESR window on the desktop of the controller.
12. Under "Colors", do not change the settings.
13. Set the "Display the connection bar when I use the full screen" option:
 - If activated, a bar showing the network address of the R&S ESR will appear at the top edge of the screen. You can use this bar to reduce, minimize or close the window.
 - If deactivated, the only way you can return to the controller desktop from the R&S ESR screen in full screen mode is to select "Disconnect" from the "Start" menu.

11.2.1.3 Starting and Terminating Remote Operation

Setting up a connection to the R&S ESR


1. In the "Remote Desktop Connection" dialog box (see [Chapter 11.2.1, "Operation with Windows Remote Desktop"](#), on page 594), open the "General" tab.
2. In the "Computer" field, enter the IP address of the R&S ESR.
In the "User name" field, enter *instrument* to log in as an administrator, or *Normal User* to log in as a standard user.
In the "Password" field, enter *894129*.
3. To save the connection configuration for later use:
 - a) Select the "Save As" button.
The "Save As" dialog box is displayed.
 - b) Enter the name for the connection information (*.RDP).
4. To load an existing connection configuration:
 - a) Select the "Open" button.
The "Open" dialog box is displayed.
 - b) Select the *.RDP file.
5. Select the "Connect" button.
The connection is set up.
6. If the "Drives" option is activated on the "Local Resources" tab, a warning is displayed indicating that the drives are enabled for access from the R&S ESR.
Select "OK" to confirm the warning.

7. After a few moments, the R&S ESR screen is displayed.
If a dark screen appears or a dark square appears in the upper left-hand corner of the screen, you must restart the R&S ESR in order to see the modified screen resolution.

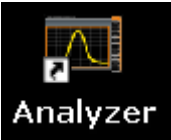	<ul style="list-style-type: none"> • Press the key combination [ALT] + [F4]. • The R&S ESR firmware is shut down, which may take a few seconds. • On the desktop, double-tap the "Analyzer" icon.
---	--

The firmware restarts and then automatically opens the "Soft Front Panel", i.e. the user interface on which all front panel controls and the rotary knob are mapped to buttons.

8. To deactivate or activate the "Soft Front Panel", press the [F6] key.
After the connection is established, the R&S ESR screen is displayed in the "Remote Desktop" application window.

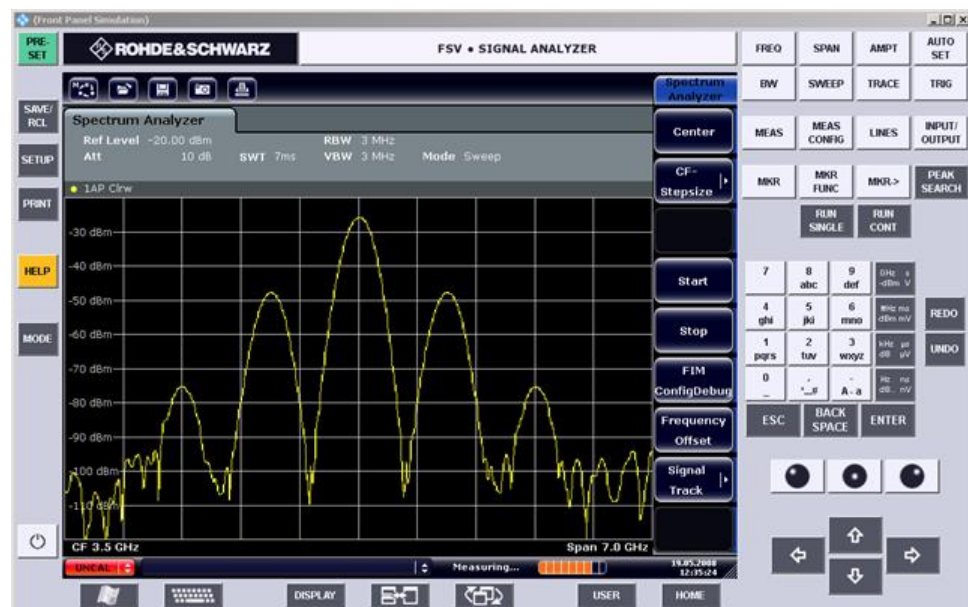

You can operate all keys and softkeys using the mouse. The rotary knob is simulated using the knob buttons.

The Windows "Start" menu can be made available by expanding the "Remote Desktop" window to full size.

During the connection with the controller, the login entry is displayed on the R&S ESR screen.

Terminating Remote Desktop control

The connection can be terminated by the controller or by a user at the R&S ESR:

- ▶ • On the controller, close the "Remote Desktop" window.
The connection to the R&S ESR is terminated (any time is possible).

- On the R&S ESR, a user logs on.
The connection to the controller is terminated as a result. A message is displayed on the controller display indicating that another user has assumed control of the instrument.

Restoring the connection to the R&S ESR

Follow the instructions above for setting up a connection to the R&S ESR. If the connection is terminated and then restored, the R&S ESR remains in the same state.

11.2.1.4 Deactivating the R&S ESR via Remote Operation

1. Click the R&S ESR soft front panel and close the application with the key combination [ALT] + [F4].
2. Click the desktop and press the key combination [ALT] + [F4] to shut down the R&S ESR.
A safety query is displayed to warn you that the instrument cannot be reactivated via remote operation and asks you whether you want to continue the shutdown process.
3. Respond to the safety query with "Yes".
The connection with the controller is terminated and the R&S ESR is shut down.

11.2.2 Operation with a VNC Client

Virtual Network Computing (VNC) allows you to control the R&S ESR (the VNC server) from a remote computer (the VNC client), for example to monitor the instruments in a production line. The handling of a VNC system is similar to using the Windows Remote Desktop, but VNC has some advantages compared to the Remote Desktop.

- You can view the contents of the instrument display on more than one client
- VNC clients are available for many operating systems. Thus, a VNC is independent of the platform you are using.
- You can still control the instrument itself when a remote connection has been established, and see what is happening on both the instrument display and the client. With the display running, you can also change settings both on the instrument and with the client simultaneously. (Using the Remote Desktop turns off the display and viewing the display contents is only possible on the controlling computer.)
- The complete mini soft front panel is available on the client ("Alt-M" opens the mini soft front panel).
- Monitoring real time measurements is possible with the VNC client (this does not work with the Remote Desktop).

All R&S ESR instruments support a VNC and are delivered with a version of the TightVNC software. On the client side, you can use a web browser or a VNC client to access the instrument.

Using a web browser

If you are using a web browser (for example Microsoft Internet Explorer), enter the IP address of the instrument and the port you are using for the connection into the address bar to establish a connection (for example "192.0.2.0:5800").

The browser then opens an interface that allows you to control the instrument after you have entered the password.

The default port is 5800 and the default password is 894129, but you can change this on the VNC software that comes with the instrument if required.

Note that using a browser requires you to install Java in order to run properly.

Using a VNC client

Alternatively, you can install a VNC client on your computer (for example a program like TightVNC) and use that to access the instrument. In that case, start the client and enter the IP address of the instrument to establish a connection.

11.2.3 Brief Introduction to Remote Control

The instrument can be remote-controlled via the network (LAN interface). For details on configuring the LAN interface see [Chapter 11.2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 623.

For details on setting the interface see [Chapter 3.2.6, "Configuring the GPIB Interface"](#), on page 59.

The following programming examples are structured hierarchically, i.e. the later examples are based on the preceding ones. This allows you to easily assemble a well-functioning program by using the modules of the program examples. More complex examples are provided in the User Manual, chapter "Remote Control - Programming Examples"

11.2.3.1 Basic Steps in Remote Control Programming

The following examples explain how to program the instrument and can be used as a basis for solving enhanced programming tasks.

Visual Basic was used as the programming language. However, the programs can be implemented in other languages as well.



Using backslashes

In programming languages such as C, C++ or programs such as MATLAB or NI Interactive Control, a backslash starts an escape sequence (e.g. "\n" is used to start a new line). In these programming languages and programs, two backslashes instead of one must be used in remote commands, e.g. in ["Storing Instrument Settings"](#) on page 136

```
instead of MMEM:STOR:STAT 1, 'C:\USER\DATA\TEST1'
```

```
use MMEM:STOR:STAT 1, 'C:\\USER\\DATA\\TEST1'
```

Linking the Remote Control Library for Visual Basic

Programming notes:


- **Outputting text using the print function**

Using the print method, this example displays the value of the variable `MyVar` in the "Immediate" window of the Visual Basic development environment. Note that the print method only applies to objects that can display text.

```
Debug.Print MyVar
```

- **Accessing the functions of the `VISA32.DLL`**


To enable users to create Visual Basic control applications, the `VISA32.BAS` file must be added to a project so that functions of the `VISA32.DLL` can be called. In addition, the `VPPTYPE.BAS` file must be added to the project. This file contains constants and definitions for error handling, timeout values, etc.

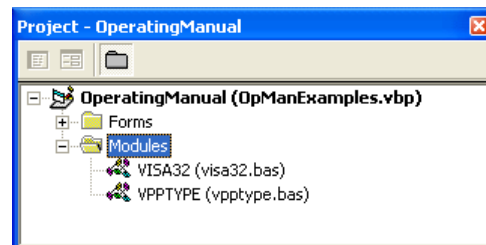

The modules `visa32.bas` and `vpptype.bas` can be found under

`<VXIpnPath>\WinNT\include` (typically `C:\VXIpnPath\WinNt\include`).

As an alternative, a reference to the `VISA32.DLL` can be added to the project.

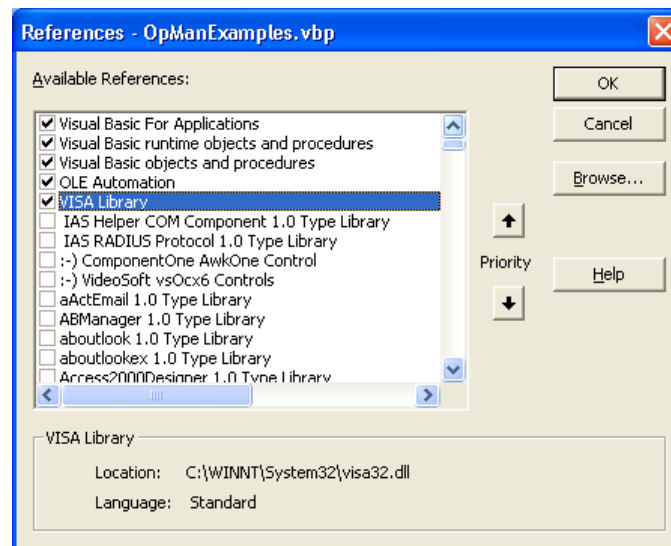

- **Creating a response buffer**

Since the DLL returns zero-terminated strings in responses, a string of sufficient length must be created before the functions `InstrRead()` and `ilrd()` are called, because Visual Basic inserts a length specification in front of the strings and this specification is not updated by the DLL. The following two means of creating the length specification for a string are provided:

```
Dim Rd as String * 100
```

```
Dim Rd as String
Rd = Space$(100)
```

- **Creating Wrapper Procedures for Writing and Reading**

Since the "VISA" functions require command and response strings and their corresponding length in two separate parameters, the main program code is easier to read and maintain if the read and write functions are encapsulated. Here, the procedure `InstrWrite()` encapsulates the function `viWrite()` and `InstrRead()` encapsulates `viRead()`. In addition, these wrappers include status checking:

```
Public Sub InstrWrite(ByVal vi As Long, ByVal Cmd As String)
Dim status As Long
Dim retCount As Long
    'Send command to instrument and check for status
status = viWrite(vi, Cmd, Len(Cmd), retCount)
    'Check for errors - this will raise an error if status is not VI_SUCCESS
CALL CheckError(vi, status)
End Sub

Public Sub InstrRead(ByVal vi As Long, Response As String, _
    ByVal count As Long, retCount As Long)
Dim status As Long
'Initialize response string
Response = Space(count)
    '...and read
status = viRead(vi, Response, count, retCount)
    'Check for errors - this will raise an error if status is not VI_SUCCESS
CALL CheckError(vi, status)
    'adjust string length
Response = Left(Response, retCount)
End Sub
```

The following function illustrates status/error checking. The procedure raises an exception when a VISA error occurs:

```
Public Sub CheckError(ByVal vi As Long, status As Long)
Dim ErrorMessage As String * 1024

'Initialize error message string
ErrorMessage = ""
If (status < 0) Then
    'Query the error message from VISA
    If (viStatusDesc(vi, status, ErrorMessage) = VI_SUCCESS) Then
        Err.Description = ErrorMessage
    End If
    Err.Raise (status)
End If
End Sub
```

Initialization and Default State

At the start of each program, the global variables used by all subroutines must be created. The remote control and the instrument settings will then be changed to a defined default state. The two subroutines `InitController` and `InitDevice` are used for this.

Creating Global Variables

In Visual Basic, global variables are stored in modules (data extension `.BAS`). Thus, at least one module (e.g. `GLOBALS.BAS`) must be created that contains the variables used by all subroutines, e.g. the variables for device addresses used by the remote control driver.

For all example programs shown below, the file must contain the following instructions:

```
Global analyzer As Long
Global defaultRM As Long
```

Initializing the Remote Control Session

```
REM ----- Initializing the remote control session -----
Public SUB Initialize()
    Dim status As Long
    'CALL viOpenDefaultRM to get the resource manager handle
    'Store this handle in defaultRM. The function viStatusDesc
    'returns a text description of the status code returned by viOpenDefaultRM
    status = viOpenDefaultRM(defaultRM)
    status = viStatusDesc(defaultRM, status, Response)
    'Open the connection to the device and store the handle
    'Note: The timeout value in viOpen() applies only for opening the interface
    'For setting the communication timeout, set the VI_ATTR_TMO_VALUE attribute
    'timeout values are in milliseconds
    'This example assumes the instrument IP address 10.0.0.10
    'If the network provides a name resolution mechanism, the hostname of
    'the instrument can be used instead of the numeric IP address
    'the resource string for GPIB would be "GPIB::20::INSTR"
    status = viOpen(defaultRM, "TCPIP::10.0.0.10::INSTR", 0, 1000, analyzer)
    'status = viOpen(defaultRM, "TCPIP::<hostname>::INSTR", 0, 1000, analyzer)
    'status = viOpen(defaultRM, "GPIB::20::INSTR", 0, 1000, analyzer)
    'Set timeout value - here 5s
    status = viSetAttribute(vi, VI_ATTR_TMO_VALUE, 5000)
END SUB
REM *****
```

Initializing the Instrument

Set the remote control status registers and instrument settings to the default state.

```
REM ----- Initializing the instrument -----
Public SUB InitDevice()
    CALL InstrWrite(analyzer, "*CLS")    'Reset status register
    CALL InstrWrite(analyzer, "*RST")    'Reset instrument
```

```
END SUB
REM*****
```

Switching the Screen Display On and Off

In the default setting, all remote control commands are carried out with the screen display switched off in order to attain optimum measurement speed. During the development phase of remote control programs, however, the screen display is required in order to visually check both the programming of the settings and the measurement results.

The following examples show functions with which the screen display can be switched on or off during remote control operation.

```
REM ----- Switching on the screen display -----
Public SUB DisplayOn()
CALL InstrWrite(analyzer, "SYST:DISP:UPD ON")
    'Switch on screen display
END SUB
REM*****
REM ----- Switching off the screen display -----
Public SUB DisplayOff()
CALL InstrWrite(analyzer, "SYST:DISP:UPD OFF")
    'Switch off screen display
END SUB
REM*****
```

Configuring the Power Save Function for the Display

During remote control operation, it is often unnecessary to display the measurement results on screen. Although the command `SYSTem:DISPlay:UPDate OFF` switches off the display of the measurement results, thus significantly improving speed in remote control operation, the display itself and the background lighting in particular remain switched on.

If you also want to switch off the display itself, you must use the power save function by setting the response time in minutes prior to activation.



The display is reactivated immediately when you press a key on the instrument's front panel.

```
Public SUB PowerSave()
CALL InstrWrite(analyzer, "DISPlay:PSAVE:HOLDoff 1")
    'Set response time to 1 minute
CALL InstrWrite(analyzer, "DISPlay:PSAVE ON")
    'Switch on Power Save function
```

Sending Simple Instrument Setting Commands

This example shows how the center frequency, span and reference level of the instrument are set.


```

REM ----- Instrument setting commands -----
PUBLIC SUB SimpleSettings()
CALL InstrWrite(analyzer, "FREQUENCY:CENTER 128MHZ")
    'Center frequency 128 MHz
CALL InstrWrite(analyzer, "FREQUENCY:SPAN 10MHZ")
    'Set span to 10 MHz
CALL InstrWrite(analyzer, "DISPLAY:TRACE:Y:RLEVEL -10dBm")
    'Set reference level to -10dBm
END SUB
REM *****

```

Switching to Manual Operation

```

REM ----- Switching instrument to manual operation -----
CALL viGpibControlREN(analyzer, VI_GPIB_REN_ADDRESS_GTL)
    'Set instrument to Local state
REM *****

```

Reading Out Instrument Settings

The settings made above can now be read out. To do so, the abbreviated commands are used.

```

REM ----- Reading out instrument settings -----
PUBLIC SUB ReadSettings()
Dim retCount as Long
CFfrequency$ = SPACE$(20)    'Provide text variable (20 characters)
CALL InstrWrite(analyzer, "FREQ:CENT?")
    'Request center frequency
CALL InstrRead(analyzer, CFfrequency$, 20, retCount)
    'Read value
CR&S FSVan$ = SPACE$(20)    'Provide text variable (20 characters)
CALL InstrWrite(analyzer, "FREQ:SPAN?")
    'Request span
CALL InstrRead(analyzer, CR&S FSVan$, 20, retCount)
    'Read value
RLlevel$ = SPACE$(20)    'Provide text variable (20 characters)
CALL InstrWrite(analyzer, "DISP:TRAC:Y:RLEV?")
    'Request ref level setting
CALL InstrRead(analyzer, RLlevel$, 20, retCount)
    'Read value
REM ----- Displaying values in the Immediate window -----
Debug.Print "Center frequency: "; CFfrequency$,
Debug.Print "Span:           "; CR&S FSVan$,
Debug.Print "Reference level: "; RLlevel$,
END SUB
REM *****

```

Marker Positioning and Readout

```

REM ----- Example of marker function -----
PUBLIC SUB ReadMarker()

```

```

Dim retCount as Long
CALL InstrWrite(analyzer, "CALC:MARKER ON;MARKER:MAX")
    'Activate marker 1 and search for peak
MKmark$ = SPACE$(30)    'Provide text variable (30 characters)
CALL InstrWrite(analyzer, "CALC:MARK:X?;Y?")
    'Query frequency and level
CALL InstrRead(analyzer, MKmark$, 30, retCount)
    'Read value
REM ----- Displaying values in the Immediate window -----
Debug.Print "Marker frequency/level "; MKmark$,
END SUB
REM *****

```

Command Synchronization

The synchronization methods used in the following example are described in the Operating Manual, chapter "Remote Control - Basics", section "Command Sequence and Command Synchronization".

```

REM ----- Commands for command synchronization -----
PUBLIC SUB SweepSync()
Dim retCount as Long
Dim SRQWaitTimeout As Long
Dim eventType As Long
Dim eventVi As Long
REM The command INITiate[:IMMediate] starts a single sweep if the
REM command INIT:CONT OFF has already been sent. The next command
REM must not be carried out until a full sweep has been completed.
CALL InstrWrite(analyzer, "INIT:CONT OFF")
REM ----- First method: Using *WAI -----
CALL InstrWrite(analyzer, "ABOR;INIT:IMM; *WAI")
REM ----- Second method: Using *OPC? -----
OpcOk$ = SPACE$(2)    'Provide space for *OPC? response
CALL InstrWrite(analyzer, "ABOR;INIT:IMM; *OPC?")
REM ----- In this case, the controller can use other instruments -----
CALL InstrRead(analyzer, OpcOk$, 2, retCount)
    'Wait for "1" from *OPC?
REM ----- Third method: Using *OPC -----
REM In order for the Service Request function to be used with a GPIB
REM driver from National Instruments, the setting "Disable
REM Auto Serial Poll" must be set to "yes" with IBCONF!
CALL InstrWrite(analyzer, "*SRE 32")    'Enable Service Request for ESR
CALL InstrWrite(analyzer, "*ESE 1")    'Set event enable bit for operation
    'complete bit
CALL viEnableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
    'Enable the event for service request
CALL InstrWrite(analyzer, "ABOR;INIT:IMM; *OPC")
    'Start sweep with Synchronization to OPC
SRQWaitTimeout = 5000    'Allow 5s for sweep completion
    'Now wait for the service request
CALL viWaitOnEvent(vi, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, _

```

```

        eventType, eventVi)
CALL viClose(eventVi)      'Close the context before continuing
CALL viDisableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE)
        'Disable subsequent events
REM Resume main program here.
END SUB
REM *****

```

Reading Output Buffers

```

REM ----- Subroutine for the individual STB bits -----
Public SUB Outputqueue()  'Reading the output queue
Dim retCount as Long
result$ = SPACE$(100)    'Create space for response
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Contents of Output Queue : "; result$
END SUB
REM *****

```

Reading Error Messages

```

REM ----- Subroutine for evaluating the error queue -----
Public SUB ErrorQueueHandler()
Dim retCount as Long
ERROR$ = SPACE$(100)    Subroutine for evaluating the error queue
CALL InstrWrite(analyzer, "SYSTEM:ERROR?")
CALL InstrRead(analyzer, ERROR$, 100, retCount)
Debug.Print "Error Description : "; ERROR$
END SUB
REM *****

```

11.2.3.2 Detailed Programming Examples

In the following sections, typical programming examples for setting measurement parameters and functions, general settings, printout and data management are provided.

Default Setting of the R&S ESR

The following settings provide typical examples of how to change the default setting of the R&S ESR.

Note that only some of the settings are necessary depending on the application example. In many cases, it is not necessary to set resolution bandwidth, video bandwidth and sweep time since these parameters are automatically calculated in the default setting when the span is changed. Likewise, the input attenuation is automatically calculated in the default setting as a function of the reference level. Last of all, the level detectors are linked to the selected trace mode in the default setting.

The settings automatically calculated in the default setting are indicated with an asterisk (*) in the following program example.

Setting the Remote Control Status Registers

```

REM *****
Public Sub SetupStatusReg()

'----- IEEE 488.2 status register -----
CALL InstrWrite(analyzer,"*CLS")      'Reset status registers
CALL InstrWrite(analyzer,"*SRE 168")  'Enable Service Request for
    'STAT:OPER-,STAT:QUES- and ESR-Register
CALL InstrWrite(analyzer,"*ESE 61")  'Set event enable bit for:
    'operation complete 'command-, execution-,
    'device dependent- and query error
'----- SCPI status register -----
CALL InstrWrite(analyzer,"STAT:OPER:ENAB 0")
    'Disable OPERation Status reg
CALL InstrWrite(analyzer,"STAT:QUES:ENAB 0")
    'Disable questionable Statusreg
End Sub
REM *****

```

Default Settings for Measurements

```

REM *****
Public Sub SetupInstrument()

'----- Default setting f the R&S FSV -----
CALL SetupStatusReg      'Configure status registers
CALL InstrWrite(analyzer,"*RST")  'Reset instrument
CALL InstrWrite(analyzer,"SYST:DISP:UPD ON")
    'ON: screen display on
    'OFF: off (improved performance)
CALL InstrWrite(analyzer,"INIT:CONT OFF")
    'Single sweep mode
'----- Frequency setting -----
CALL InstrWrite(analyzer,"FREQUENCY:CENTER 100MHz")
    'Center frequency
CALL InstrWrite(analyzer,"FREQ:SPAN 1 MHz")
    'Span
'----- Level setting -----
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:RLEV -20dBm")
    'Reference level
CALL InstrWrite(analyzer,"INP:ATT 10dB")
    'Input attenuation (*)
'----- Level scaling -----
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SPAC LOG")
    'Log level axis
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL 100dB")
    'Level range
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:MODE ABS")
    'Absolute scaling
CALL InstrWrite(analyzer,"CALC:UNIT:POW DBM")

```

```

'y meas. unit
'----- Trace and detector setting -----
CALL InstrWrite(analyzer,"DISP:TRAC1:MODE AVER")
'Trace1 average
CALL InstrWrite(analyzer,"AVER:TYPE VID")
'Average mode video; "LIN" for linear
CALL InstrWrite(analyzer,"SWE:COUN 10")
'Sweep count
CALL InstrWrite(analyzer,"DISP:TRAC2 OFF")
'Trace2 blank
CALL InstrWrite(analyzer,"DISP:TRAC3 OFF")
'Trace3 blank
CALL InstrWrite(analyzer,"DISP:TRAC4 OFF")
'Trace4 blank
CALL InstrWrite(analyzer,"DISP:TRAC5 OFF")
'Trace5 blank
CALL InstrWrite(analyzer,"DISP:TRAC6 OFF")
'Trace6 blank
CALL InstrWrite(analyzer,"CALC:MATH:STAT OFF")
'Trace difference off
CALL InstrWrite(analyzer,"DET1 RMS")
'Detector Trace1  (*)
CALL InstrWrite(analyzer,"DET2:AUTO ON")
'Detector Trace2  (*)
CALL InstrWrite(analyzer,"DET3:AUTO ON")
'Detector Trace3  (*)
CALL InstrWrite(analyzer,"DET4:AUTO ON")
'Detector Trace4  (*)
CALL InstrWrite(analyzer,"DET5:AUTO ON")
'Detector Trace5  (*)
CALL InstrWrite(analyzer,"DET6:AUTO ON")
'Detector Trace6  (*)
'----- Bandwidths and sweep time -----
CALL InstrWrite(analyzer,"BAND:RES 100KHz")
'Resolution bandwidth (*)
CALL InstrWrite(analyzer,"BAND:VID 1MHz")
'Video bandwidth (*)
CALL InstrWrite(analyzer,"SWE:TIME 100ms")
'Sweep time (*)
END SUB

```

Using Markers and Delta Markers

The markers are used for marking points on traces, reading out measurement results and for selecting a display area quickly.

Marker Search Functions, Restricting the Search Range

The following example is based on an AM-modulated signal at 100 MHz that has the following characteristics:

Carrier signal level	-30 dBm
AF frequency	100 kHz
Modulation depth	50 %

Marker 1 and then delta marker 2 are set to the largest maximum points on the trace. The frequency and level are then read. In the following measurements, the instrument's default setting can be used for measurements (SetupInstrument).

```

REM *****
Public Sub MarkerSearch()
Dim retCount as Long
result$ = Space$(100)
CALL SetupInstrument 'Default Setting
'----- Peak search without search range limits-----
CALL InstrWrite(analyzer,"INIT:CONT OFF")
'Switch to single sweep
CALL InstrWrite(analyzer,"CALC:MARK:PEXC 6DB")
'Define peak excursion
CALL InstrWrite(analyzer,"CALC:MARK:STAT ON")
'Enable marker 1
CALL InstrWrite(analyzer,"CALC:MARK:TRAC 1")
'Set marker 1 to trace 1
CALL InstrWrite(analyzer,"INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:MAX;X?;Y?")
'Marker to peak; read frequency and level
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Marker 1: ";result$
CALL InstrWrite(analyzer,"CALC:DELT2:STAT ON;MAX;MAX:LEFT")
'Activate delta marker 2,
'set to peak and then to next peak left
CALL InstrWrite(analyzer,"CALC:DELT2:X?;Y?")
'Read delta marker 2 frequency and level
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Delta 2: ";result$
'----- Peak search with search range limit in x direction -----
CALL InstrWrite(analyzer,"CALC:MARK:X:SLIM:STAT ON;LEFT _
0Hz;RIGHT 100.05MHz")
'Activate search limit,
'set at right below AF
CALL InstrWrite(analyzer,"CALC:DELT3:STAT ON;MAX;MAX:RIGHT")
'Activate delta marker 3,
'set to peak and then to next peak right
CALL InstrWrite(analyzer,"CALC:DELT3:X:REL?;:CALC:DELT3:Y?")
'Read delta marker 3 frequency and level;
'both must have a value of 0
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Print "Delta 3: ";result$

```

```
'----- Peak search with search range limit in y direction -----
CALL InstrWrite(analyzer,"CALC:THR:STAT ON")
CALL InstrWrite(analyzer,"CALC:THR -35DBM")
    'Activate threshold and set it above the AF
CALL InstrWrite(analyzer,"CALC:DELT3:STAT ON;MAX;MAX:NEXT")
    'Activate delta marker 3,
    'set to peak and then to next peak
    '=> is not found
CALL InstrWrite(analyzer,"CALC:DELT3:X:REL?;:CALC:DELT3:Y?")
    'Query and read delta marker 3
    'frequency and level;
    'both must have a value of 0
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Delta 3: ";result$
'---- Setting center frequency and reference level with markers -----
CALL InstrWrite(analyzer,"CALC:MARK2:FUNC:CENT")
    'Delta marker 2 -> marker and
    'center frequency = marker 2
CALL InstrWrite(analyzer,"CALC:MARK2:FUNC:REF")
    'Ref level = marker 2
CALL InstrWrite(analyzer,"INIT;*WAI")      'Sweep with sync
END SUB
REM *****
```

Frequency Counting

The following example is based on a signal at 100 MHz with a level of -30 dBm. Again, the instrument's default setting can be used (SetupInstrument). The purpose of frequency counting is to determine the exact frequency of the signal at 100 MHz.

```
REM *****
Public Sub MarkerCount()
Dim retCount as Long
CALL SetupInstrument      'Default setting
'----- Defining signal frequency with frequency counter -----
CALL InstrWrite(analyzer,"INIT:CONT OFF")
    'Switch to single sweep
CALL InstrWrite(analyzer,"CALC:MARK:PEXC 6DB")
    'Define peak excursion
CALL InstrWrite(analyzer,"CALC:MARK:STAT ON")
    'Activate marker 1
CALL InstrWrite(analyzer,"CALC:MARK:TRAC 1")
    'Set marker 1 to trace 1
CALL InstrWrite(analyzer,"CALC:MARK:X 100MHz")
    'Set marker 1 to 100 MHz
CALL InstrWrite(analyzer,"CALC:MARK:COUNT ON")
    'Activate frequency counter
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:COUNT:FREQ?")
    'Query and read measured frequency
```

```

result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Marker Count Freq: ";result$
END SUB
REM *****

```

Working with a Fixed Reference Point

The following example is based on a signal at 100 MHz with a level of -20 dBm. Thus, the harmonics of the signal are located at 200 MHz, 300 MHz, etc. For high-quality signal sources, these harmonics may be located outside the dynamic range of the R&S ESR. Nevertheless, to measure the harmonic suppression, the level setting must be changed to higher sensitivity when measuring the harmonics. In this case, it may be necessary to suppress the carrier by using a notch filter in order to prevent the RF input of the R&S ESR from being overloaded.

Thus, two measurements with different level settings are performed in the following example. First, a high reference level is used on the carrier frequency, and then a low reference level is used on the frequency of the third harmonic.

The default setting of the R&S ESR for measurements ("SetupInstrument") is also used as a starting point here, after which adaptations for the measurement are carried out.

```

REM *****
Public Sub RefFixed()
Dim retCount as Long
CALL SetupInstrument 'Default setting
'----- Measuring the reference point -----
CALL InstrWrite(analyzer,"INIT:CONT OFF")
'Switch to single sweep
CALL InstrWrite(analyzer,"CALC:MARK:PEXC 6DB")
'Define peak excursion
CALL InstrWrite(analyzer,"CALC:MARK:STAT ON")
'Activate marker 1
CALL InstrWrite(analyzer,"CALC:MARK:TRAC 1")
'Set marker 1 to trace 1
CALL InstrWrite(analyzer,"INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:MAX")
'Set marker 1 to 100 MHz
CALL InstrWrite(analyzer,"CALC:DELT:FUNC:FIX ON")
'Define reference point
'----- Setting frequency, level and bandwidth for measuring harmonics -----
CALL InstrWrite(analyzer,"FREQ:CENT 400MHz;Span 1MHz")
'Set freq of 3rd harmonic
CALL InstrWrite(analyzer,"BAND:RES 1kHz")
'Set suitable RBW
CALL InstrWrite(analyzer,"SWEEP:TIME:AUTO ON")
'Couple sweep time
CALL InstrWrite(analyzer,"INP:ATT:AUTO ON")
'Select more sensitive level setting
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:RLEV -50dBm")

```



```

CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:DELT:MAX;X:REL?;Y?")
      'Read delta marker
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
      'Read frequency and level
Debug.Print "Deltamarker 1: "; result$
END SUB
REM *****

```

Measuring Noise and Phase Noise

When phase noise is measured, the noise power related to a bandwidth of 1 Hz is set in relation to the power of an adjacent carrier signal. A commonly used offset between the measured frequency and the carrier frequency is 10 kHz.

When noise is measured, the measured absolute level is related to a bandwidth of 1 Hz.

The following example is also based on a signal at 100 MHz with a level of -30 dBm. Two markers are used to determine both the noise and the phase noise at a 10 kHz offset from the carrier signal.

```

REM *****
Public Sub Noise()
Dim retCount as Long
'----- Default setting of the R&S FSV -----
CALL SetupStatusReg      'Configure status register
CALL InstrWrite(analyzer,"*RST")      'Reset instrument
CALL InstrWrite(analyzer,"INIT:CONT OFF")
      'Single sweep mode
'----- Setting the frequency -----
CALL InstrWrite(analyzer,"FREQUENCY:CENTER 100MHz")
      'Center frequency
CALL InstrWrite(analyzer,"FREQ:SPAN 100 kHz")
      'Span
'----- Setting the level -----
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:RLEV -20dBm")
      'Reference level
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
'----- Setting the reference point -----
CALL InstrWrite(analyzer,"CALC:MARK:PEXC 6DB")
      'Define peak excursion
CALL InstrWrite(analyzer,"CALC:MARK:STAT ON")
      'Activate marker 1
CALL InstrWrite(analyzer,"CALC:MARK:TRAC 1")
      'Set marker 1 to trace 1
CALL InstrWrite(analyzer,"CALC:MARK:MAX")
      'Set marker 1 to 100 MHz
CALL InstrWrite(analyzer,"CALC:DELT:FUNC:PNO ON")
      'Define reference point for phase noise
'----- Measuring the phase noise -----

```

```

CALL InstrWrite(analyzer,"CALC:DELT:X 10kHz")
    'Position delta marker
CALL InstrWrite(analyzer,"CALC:DELT:FUNC:PNO:RES?")
    'Query and output phase noise result
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Debug.Print "Phase Noise [dBc/Hz]: "; result$
'----- Measuring the noise -----
CALL InstrWrite(analyzer,"CALC:MARK:X 99.96MHz")
    'Position marker 1
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:NOIS:RES?")
    'Query and output result
result$ = Space$(100)
CALL InstrRead(analyzer, result$, 100, retCount)
Print "Noise [dBm/Hz]: "; result$
END SUB
REM *****

```

Reading Out Trace Data

In the following example, the trace data obtained with the default setting is read from the instrument and displayed in a list on the screen. Readout occurs first in binary format and then in ASCII format, once with the span > 0 and once with the span = 0.

In binary format, the header of the message with the length specification is evaluated and used to calculate the x-axis values.

In ASCII format, merely the list of level values is output.

Binary data is read out in three steps:

1. The number of digits in the length specification is read out.
2. The length specification itself is read out.
3. The trace data itself is read out.

The procedure is required for programming languages that only support structures with data types of the same type (arrays, such as with Visual Basic), because the data types of the header and data sections are different in binary data.

The "VISA" library provides only a mechanism for reading into string buffers. In order to convert the data into an array of single precision values, the string contents must be copied into a buffer of that type. The following example uses an operating system function for the copy operation. The function declaration must be added to a module (.bas) as follows:



Array dimensions

The arrays for the measured data are dimensioned so they provide sufficient space for trace data of the R&S ESR (691 measurement points).

```

REM *****
Public Sub ReadTrace()
'----- Creating variables -----
Dim traceData(1400) As Single 'Buffer for floating point binary data
Dim digits As Byte 'Number of characters in
    'length specification
Dim traceBytes As Integer 'Len. of trace data in bytes
Dim traceValues As Integer 'No. of meas. values in buff.
Dim BinBuffer as String * 5600 'String buffer for binary data
Dim retCount as Long
asciiResult$ = Space$(28000) 'Buffer for ASCII trace data
result$ = Space$(100) 'Buffer for simple results
startFreq$ = Space$(100) 'Buffer for start frequency
span$ = Space$(100) 'Buffer for span
'----- Default setting of the R&S FSV -----
CALL SetupInstrument 'Default setting
CALL InstrWrite(analyzer,"INIT:CONT OFF")
    'Switch to single sweep
CALL InstrWrite(analyzer,"INIT;*WAI") 'Perform sweep with sync
'----- Defining the frequency range for output -----
CALL InstrWrite(analyzer,"FREQ:START?") 'Read start frequency
CALL InstrRead(analyzer,startFreq$, 100, retCount)
startFreq = Val(startFreq$)
CALL InstrWrite(analyzer,"FREQ:SPAN?") 'Read span
CALL InstrRead(analyzer,span$, 100, retCount)
span = Val(span$)
'----- Reading out in binary format -----
CALL InstrWrite(analyzer, "FORMAT REAL,32")
    'Set binary format
CALL InstrWrite(analyzer, "TRAC1? TRACE1")
    'Read trace 1
CALL InstrRead(analyzer, result$, 2, retCount)
    'Read and store length
digits = Val(Mid$(result$, 2, 1)) 'spec. for number of characters
result$ = Space$(100) 'Reinitialize buffer
CALL InstrRead(analyzer, result$, digits, retCount)
    'Read and store length
traceBytes = Val(Left$(result$, digits))
    'specification
CALL InstrRead(analyzer, BinBuffer, traceBytes, retCount)
    'Read trace data into buffer
CopyMemory traceData(0), ByVal BinBuffer, traceBytes
    'Copy data into float array
'----- Outputting binary data as frequency/level pairs -----
traceValues = traceBytes/4 'Single precision = 4 bytes
stepsize = span/traceValues 'Calculate frequency step size
For i = 0 To traceValues - 1
Debug.Print "Value["; i; "] = "; startFreq+stepsize*i; ", "; traceData(i)
Next i
'----- Default setting of zero span -----

```

```

CALL InstrWrite(analyzer,"FREQ:SPAN 0Hz")
    'Switch to zero span
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
'----- Reading out in ASCII format -----
CALL InstrWrite(analyzer,"FORMAT ASCII")
    'Set ASCII format
CALL InstrWrite(analyzer,"TRAC1? TRACE1")
    'Read and output
CALL InstrRead(analyzer, asciiResult$)
Print "Contents of Trace1: ",asciiResult$   'trace 1
END SUB
REM *****

```

Storing and Loading Instrument Settings

Settings and measured data can be stored and loaded. You can define which data set is loaded when the instrument is preset or started.

Storing Instrument Settings

In the following example, the settings/measured data to be stored are defined initially, in which case only the hardware settings are stored. However, the selection commands for the other settings are specified with the state "OFF" for the sake of completeness.

```

REM *****
Public Sub StoreSettings()
'This subroutine selects the settings to be stored and creates the
'data record "TEST1" in the directory C:\R_S\Instr\user. It uses the default
'setting and resets the instrument after the setting is stored.
'----- Default settings of the R&S FSV -----
CALL SetupInstrument
CALL InstrWrite(analyzer,"INIT:CONT OFF")
    'Change to single sweep
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform sweep with sync
'----- Selection of settings to be stored -----
CALL InstrWrite(analyzer,"MMEM:SEL:HWS ON")
    'Store hardware settings
CALL InstrWrite(analyzer,"MMEM:SEL:TRAC OFF")
    'Do not store any traces
CALL InstrWrite(analyzer,"MMEM:SEL:LIN:ALL OFF")
    'Store only the activated limit lines
'----- Storing on the instrument -----
CALL InstrWrite(analyzer,"MMEM:STOR:STAT 1,'C:\R_S\Instr\user\TEST1'")
'----- Resetting the instrument -----
CALL InstrWrite(analyzer,"*RST")
END SUB
REM *****

```

Loading Instrument Settings

In the following example, the TEST1 data record stored under C:\R_S\Instr\user is loaded by the instrument:

```

REM *****
Public Sub LoadSettings()
'This subroutine loads the TEST1 data record in the directory
'C:\R_S\Instr\user.
'----- Default setting of the status register -----
CALL SetupStatusReg      'Configure status register
'----- Loading the data record -----
CALL InstrWrite(analyzer,"MMEM:LOAD:STAT 1,'C:\R_S\Instr\user\TEST1'")
'----- Perform measurement using loaded data record -----
CALL InstrWrite(analyzer,"DISP:TRAC1:MODE WRIT")
      'Set trace to Clr/Write
CALL InstrWrite(analyzer,"INIT;*WAI")      'Start sweep
END SUB
REM *****

```

Setting the Data Record for Startup Recall

In the following example, the first step is to change the R&S ESR to the default state. In the next step, the TEST1 data record stored under C:\R_S\Instr\user is selected for the startup recall function, i.e. the data record is then set after each *RST, presetting and each time the instrument is started. For demonstration purposes, the command *RST is carried out again.

```

REM *****
Public Sub StartupRecallSettings()
'----- Resetting the R&S FSV -----
CALL InstrWrite(analyzer,"*RST")
'----- Default setting of the status register -----
CALL SetupStatusReg      'Configure status register
'----- Selecting the startup recall data record -----
CALL InstrWrite(analyzer,"MMEM:LOAD:AUTO 1,'C:\R_S\Instr\user\TEST1'")
'----- Activating the startup recall data record -----
CALL InstrWrite(analyzer,"*RST")
END SUB
REM *****

```

Configuring and Starting a Printout

The following example shows how to configure the output format and output device for printing out a measurement screen. The procedure is as follows:

1. Set the measurement you want for the printout.
2. Check which output devices are available on the instrument.
3. Select an output device.
4. Select the output interface.
5. Configure the output format.
6. Start the printout with synchronization to completion.

It is assumed that the desired setting is a signal at 100 MHz with a power of -20 dBm. It is also assumed that the sixth printer out of the available printers that are listed is the one you want. The printout is first output to the selected printer and then to a file.

```

REM *****
Public Sub HCopy()
Dim retCount as Long
Dim SRQWaitTimeout As Long
Dim eventType As Long
Dim eventVi As Long
Dim statusSRQ As Long
DIM Devices(100) as string      'Create buffer for printer name
FOR i = 0 TO 49
    Devices$(i) = Space$(50)    'Preallocate buffer for printer name
NEXT i
'----- Default setting of the R&S FSV -----
CALL SetupStatusReg      'Configure status register
CALL InstrWrite(analyzer,"*RST")      'Reset instrument
CALL InstrWrite(analyzer,"INIT:CONT OFF")
    'Single sweep mode
CALL InstrWrite(analyzer,"SYST:DISP:UPD ON")
    'Screen display on
'----- Measurement settings -----
CALL InstrWrite(analyzer,"FREQ:CENT 100MHz;SPAN 10MHz")
    'Frequency setting
CALL InstrWrite(analyzer,"DISP:TRAC:Y:RLEV -10dBm")
    'Reference level
CALL InstrWrite(analyzer,"INIT;*WAI")      'Perform measurement
'----- Querying the available output devices -----
CALL InstrWrite(analyzer,"SYST:COMM:PRIN:ENUM:FIRST?")
    'Read out and display first output device
CALL InstrRead(analyzer,Devices$(0), 50, retCount)
Debug.Print "Printer 0: "+Devices$(0)
For i = 1 to 99
    CALL InstrWrite(analyzer,"SYST:COMM:PRIN:ENUM:NEXT?")
        'Read out next printer name
    CALL InstrRead(analyzer,Devices$(i))
    IF Left$(Devices$(i),2) = "" THEN GOTO SelectDevice
        'Stop at end of list
    Debug.Print "Printer"+Str$(i)+"": " Devices$(i)
        'Display printer name
NEXT i
SelectDevice:
'---- Selection of output device, printer language and output interface ----
CALL InstrWrite(analyzer,"SYST:COMM:PRIN:SEL "+ Devices(6))
    'Printer selection #6
CALL InstrWrite(analyzer,"HCOP:DEST 'SYST:COMM:PRIN'")
    'Configuration: "Printout to
    'printer interface"
CALL InstrWrite(analyzer,"HCOP:DEV:LANG GDI")

```

```

        'Printers require printer language 'GDI'
'----- Selection of orientation (portrait/landscape) and colour/BW -----
CALL InstrWrite(analyzer,"HCOP:PAGE:ORI PORT")
        'Portrait orientation
CALL InstrWrite(analyzer,"HCOP:DEV:COL OFF")
        'Black-and-white printout
'----- Configuring and starting the printout -----
CALL InstrWrite(analyzer,"HCOP:ITEM:ALL")
        'All screen contents
'CALL InstrWrite(analyzer,"HCOP:ITEM:TRAC:STAT ON")
        'Alternative: only traces
CALL InstrWrite(analyzer,"*CLS")      'Reset status registers
CALL viEnableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
        'Enable the event for service request
CALL InstrWrite(analyzer,"HCOP;*OPC")
        'Start printout
SRQWaitTimeout = 5000      'Allow 5s for completion
        'Now wait for the service request
statusSRQ = viWaitOnEvent(vi, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, _
        eventType, eventVi)
CALL viClose(eventVi)      'Close the context before continuing
CALL viDisableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE)
        'Disable subsequent events
IF NOT(statusSRQ = 0) THEN CALL Srq      'If SRQ not detected =>
        'Subroutine for evaluation
'---- Printout in WMF format (BMP format) to file -----
CALL InstrWrite(analyzer,"HCOP:DEST 'MMEM'")
        'Configuration: "Printout to file"
CALL InstrWrite(analyzer,"HCOP:DEV:LANG WMF")
        'WMF file format
'CALL InstrWrite(analyzer,"HCOP:DEV:LANG BMP")
        'BMP file format
CALL InstrWrite(analyzer,"MMEM:NAME 'C:\R_S\Instr\user\PRINT1.WMF'")
        'Define file name
CALL InstrWrite(analyzer,"*CLS")      'Reset Status registers
CALL viEnableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
        'Enable the event for service request
CALL InstrWrite(analyzer,"HCOP:IMMediate;*OPC")
        'Start printout
SRQWaitTimeout = 5000      'Allow 5s for completion
        ' Now wait for the service request
statusSRQ = viWaitOnEvent(vi, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, _
        eventType, eventVi)
CALL viClose(eventVi)      'Close the context before continuing
CALL viDisableEvent(vi, VI_EVENT_SERVICE_REQ, VI_QUEUE)
        'Disable subsequent events
IF NOT(statusSRQ = 0) THEN CALL Srq      'If SRQ not detected =>
        'Subroutine for evaluation

```

```
END SUB
REM *****
```

11.2.4 Remote Control Interfaces and Protocols

The R&S ESRP supports different interfaces and protocols for remote control. The following table gives an overview.

Table 11-19: Remote control interfaces and protocols

Interface	Protocols, VISA ^{*)} address string	Remarks
Local Area Network (LAN)	<ul style="list-style-type: none"> • HiSLIP High-Speed LAN Instrument Protocol (IVI-6.1) TCPIP::host address::hislip0[::INSTR] • VXI-11 TCPIP::host address::inst0[::INSTR] Library: VISA 	The interface is based on TCP/IP and supports various protocols. For a description of the protocols refer to: VXI-11 Protocol HiSLIP Protocol

^{*)} VISA is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control using the indicated interfaces.

11.2.4.1 LAN Interface

For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ45 cable (shielded or unshielded twisted pair category 5). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and the VISA program library must be installed on the controller.

VISA library

IP address

Only the IP address or a valid DNS host name is required to set up the connection. The host address is part of the "VISA resource string" used by the programs to identify and control the instrument.

The VISA resource string has the form:

```
TCPIP::host address[::LAN device name][::INSTR]
```

where:

- **TCPIP** designates the network protocol used
- **host address** is the IP address or host name of the device
- **LAN device name** defines the protocol and the instance number of a sub-instrument;
 - inst0 selects the VXI-11 protocol (default)
 - hislip0 selects the newer HiSLIP protocol

- **INSTR** indicates the instrument resource class (optional)

Example:

- Instrument has the IP address *192.1.2.3*; the valid resource string using VXI-11 protocol is:

```
TCPIP::192.1.2.3::INSTR
```



Identifying instruments in a network

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by means of the resource string.

- [VXI-11 Protocol](#)..... 622
- [HiSLIP Protocol](#)..... 622

VXI-11 Protocol

The VXI-11 standard is based on the ONC RPC (Open Network Computing Remote Procedure Call) protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

HiSLIP Protocol

The HiSLIP (**H**igh **S**peed **L**AN **I**nstrument **P**rotocol) is the successor protocol for VXI-11 for TCP-based instruments specified by the IVI foundation. The protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. `Device Clear` or `SRQ`).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections
- Compatible IEEE 488.2 support for Message Exchange Protocol, Device Clear, Serial Poll, Remote/Local, Trigger, and Service Request
- Uses a single IANA registered port (4880), which simplifies the configuration of firewalls
- Supports simultaneous access of multiple users by providing versatile locking mechanisms
- Usable for IPv6 or IPv4 networks



Using VXI-11, each operation is blocked until a VXI-11 device handshake returns. However, using HiSLIP, data is sent to the device using the "fire and forget" method with immediate return. Thus, a successful return of a VISA operation such as `viWrite()` does not guarantee that the instrument has finished or started the requested command, but is delivered to the TCP/IP buffers.

For more information see also the application note:

[1MA208: Fast Remote Instrument Control with HiSLIP](#)

11.2.5 Configuring the GPIB Interface

A GPIB interface is integrated on the rear panel of the instrument. You can set the GPIB address and the ID response string. The GPIB language is set as SCPI by default and cannot be changed for the R&S ESR.

Displaying the GPIB submenu

1. Press the [SETUP] key.
2. Press the "General Setup" softkey.
3. Press the "GPIB" softkey.

The submenu for setting the parameters of the remote control interface is displayed.

Setting the GPIB address

- ▶ In the "GPIB" menu, press the "GPIB Address" softkey.

The edit dialog box for the GPIB address is displayed. The setting range is from 0 to 30. If SCPI is selected as the GPIB language, the default address is 20.

Remote command:
`SYST:COMM:GPIB:ADDR 20`

Setting the default ID response string

- ▶ In the "GPIB" menu, press the "ID String Factory" softkey to select the default response to the `*IDN?` command.

Setting a user-defined ID response string

- ▶ In the "GPIB" menu, press the "ID String User" softkey to enter a user-defined response to the `*IDN?` command. The maximum length of the output string is 36 characters.

11.2.6 Setting Up a Network (LAN) Connection

A LAN connection is the prerequisite for all network operations. The LAN connection settings can be configured directly in the Windows operating system.

The R&S ESR is equipped with a network interface and can be connected to an Ethernet LAN (local area network). Provided the network administrator has assigned you the appropriate rights and adapted the Windows firewall configuration, you can use the interface, for example:

- To transfer data between a controlling device and the test device, e.g. to run a remote control program.

See chapter "Remote Control" in the R&S ESR user manual.
See chapter "Remote Control".

- To access or control the measurement from a remote computer using the "Remote Desktop" application (or a similar tool)
- To connect external network devices (e.g. printers)
- To transfer data from a remote computer and back, e.g. using network folders

This section describes how to configure the LAN interface. It includes the following topics:

- [Chapter 11.2.6.1, "Connecting the Instrument to the Network"](#), on page 624
- [Chapter 11.2.6.2, "Assigning the IP Address"](#), on page 625

Note that only user accounts with administrator rights can configure LAN networks.



LXI

The R&S ESR supports the LXI core features. LXI gives you direct access to the LAN settings described below.

For further information on the LXI interface, refer to the "LXI Configuration".

11.2.6.1 Connecting the Instrument to the Network

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network made with an ordinary RJ-45 network cable. The instrument is assigned an IP address and can coexist with a computer and with other hosts on the same network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer made with a (crossover) RJ-45 network cable. The computer must be equipped with a network adapter and is directly connected to the instrument. The use of hubs, switches, or gateways is not required, however, data transfer is still performed using the TCP/IP protocol. You must assign an IP address to the instrument and the computer, see [Chapter 11.2.6.2, "Assigning the IP Address"](#), on page 625.

Note: As the R&S ESR uses a 1 GBit LAN, a crossover cable is not necessary (due to Auto-MDI(X) functionality).

NOTICE**Risk of network failure**

Consult your network administrator before performing the following tasks:

- Connecting the instrument to the network
- Configuring the network
- Changing IP addresses
- Exchanging hardware

Errors can affect the entire network.

- ▶ To establish a non-dedicated network connection, connect a commercial RJ-45 cable to one of the LAN ports.
To establish a dedicated connection, connect a (crossover) RJ-45 cable between the instrument and a single PC.

If the instrument is connected to the LAN, Windows automatically detects the network connection and activates the required drivers.

The network card can be operated with a 1 GBit Ethernet IEEE 802.3u interface.

11.2.6.2 Assigning the IP Address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports dynamic TCP/IP configuration using the Dynamic Host Configuration Protocol (DHCP), all address information can be assigned automatically.
- If the network does not support DHCP, or if the instrument is set to use alternate TCP/IP configuration, the addresses must be set manually.

By default, the instrument is configured to use dynamic TCP/IP configuration and obtain all address information automatically. This means that it is safe to establish a physical connection to the LAN without any previous instrument configuration.

NOTICE**Risk of network errors**

Connection errors can affect the entire network. If your network does not support DHCP, or if you choose to disable dynamic TCP/IP configuration, you must assign valid address information before connecting the instrument to the LAN. Contact your network administrator to obtain a valid IP address.

Assigning the IP address on the instrument

1. Press the [SETUP] key.
2. Press the "General Setup" softkey.

3. Press the "Network Address" softkey.
The submenu is displayed.
4. Toggle the "DHCP On/Off" softkey to the required mode.
If DHCP is "Off", you must enter the IP address manually, as described in the following steps.
Note: When DHCP is changed from "On" to "Off", the previously set IP address and subnet mask are retrieved.
If DHCP is "On", the IP address of the DHCP server is obtained automatically. The configuration is saved, and you are prompted to restart the instrument. You can skip the remaining steps.
Note: When a DHCP server is used, a new IP address may be assigned each time the instrument is restarted. This address must first be determined on the instrument itself. Thus, when using a DHCP server, it is recommended that you use the permanent computer name, which determines the address via the DNS server (see [Chapter 11.2.6.3, "Using Computer Names"](#), on page 628).
5. Press the "IP Address" softkey and enter the IP address, for example *192.0.2.0*.
The IP address consists of four number blocks separated by dots. Every block contains a maximum of 3 numbers.
6. Press the "Subnet Mask" softkey and enter the subnet mask, for example *255.255.255.0*. The subnet mask consists of four number blocks separated by dots. Every block contains a maximum of 3 numbers.

If you have entered an invalid IP address or subnet mask, the message "out of range" is displayed in the status line. The "Edit" dialog box remains open, and you can start again. If the settings are correct, the configuration is saved, and you are prompted to restart the instrument.
7. Confirm the displayed message ("Yes" button) to restart the instrument.

Assigning the IP address on the instrument

1. Press the [SETUP] key.
2. Press the "Network + Remote" softkey.
3. Select the "Network" tab.
4. In the "Network + Remote" dialog, toggle the "DHCP On/Off" setting to the required mode.
If DHCP is "Off", you must enter the IP address manually, as described in the following steps.
Note: When DHCP is changed from "On" to "Off", the previously set IP address and subnet mask are retrieved.
If DHCP is "On", the IP address of the DHCP server is obtained automatically. The configuration is saved, and you are prompted to restart the instrument. You can skip the remaining steps.
Note: When a DHCP server is used, a new IP address may be assigned each time the instrument is restarted. This address must first be determined on the instrument


itself. Thus, when using a DHCP server, it is recommended that you use the permanent computer name, which determines the address via the DNS server (See "Using a DNS server to determine the IP address" on page 627 and Chapter 11.2.6.3, "Using Computer Names", on page 628).

5. Enter the "IP Address", for example *192.0.2.0*. The IP address consists of four number blocks separated by dots. Every block contains a maximum of 3 numbers.
6. Enter the "Subnet Mask", for example *255.255.255.0*. The subnet mask consists of four number blocks separated by dots. Every block contains a maximum of 3 numbers.
7. Select "Configure Network".
If you have entered an invalid IP address or subnet mask, the message "out of range" is displayed in the status line. If the settings are correct, the configuration is saved, and you are prompted to restart the instrument.
8. Confirm the displayed message ("Yes" button) to restart the instrument.

Using a DNS server to determine the IP address


If a DNS server is configured on the R&S ESR, the server can determine the current IP address for the connection using the permanent computer name.

1. Obtain the name of your DNS domain and the IP addresses of the DNS and WINS servers on your network.
2. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
3. Select "Start > Settings > Network & Internet > Ethernet > Network and Sharing Center > Connections: Ethernet".

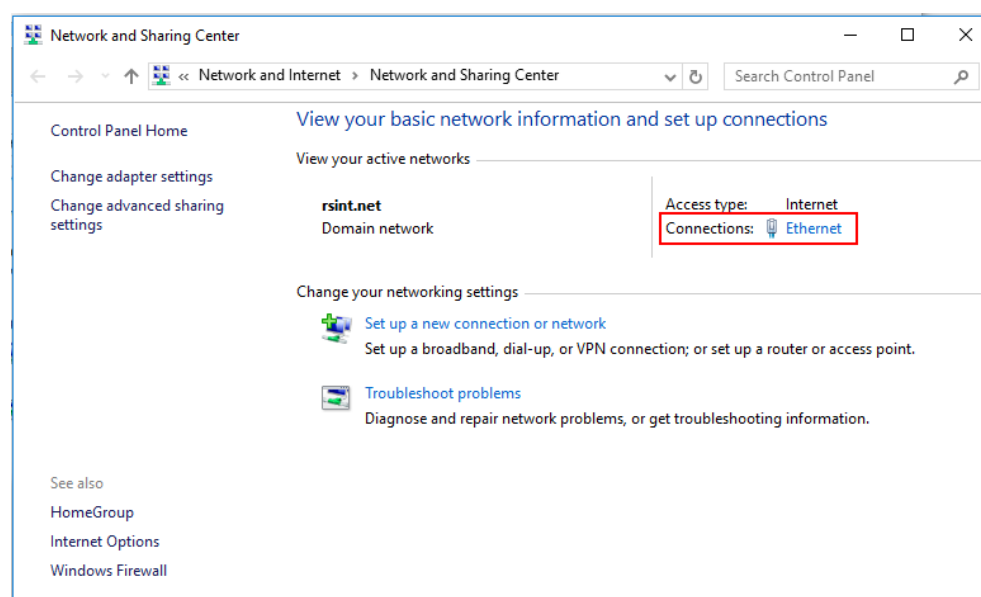

4. In the "Ethernet Status" dialog box, select the "Properties" button.

The items used by the LAN connection are displayed.

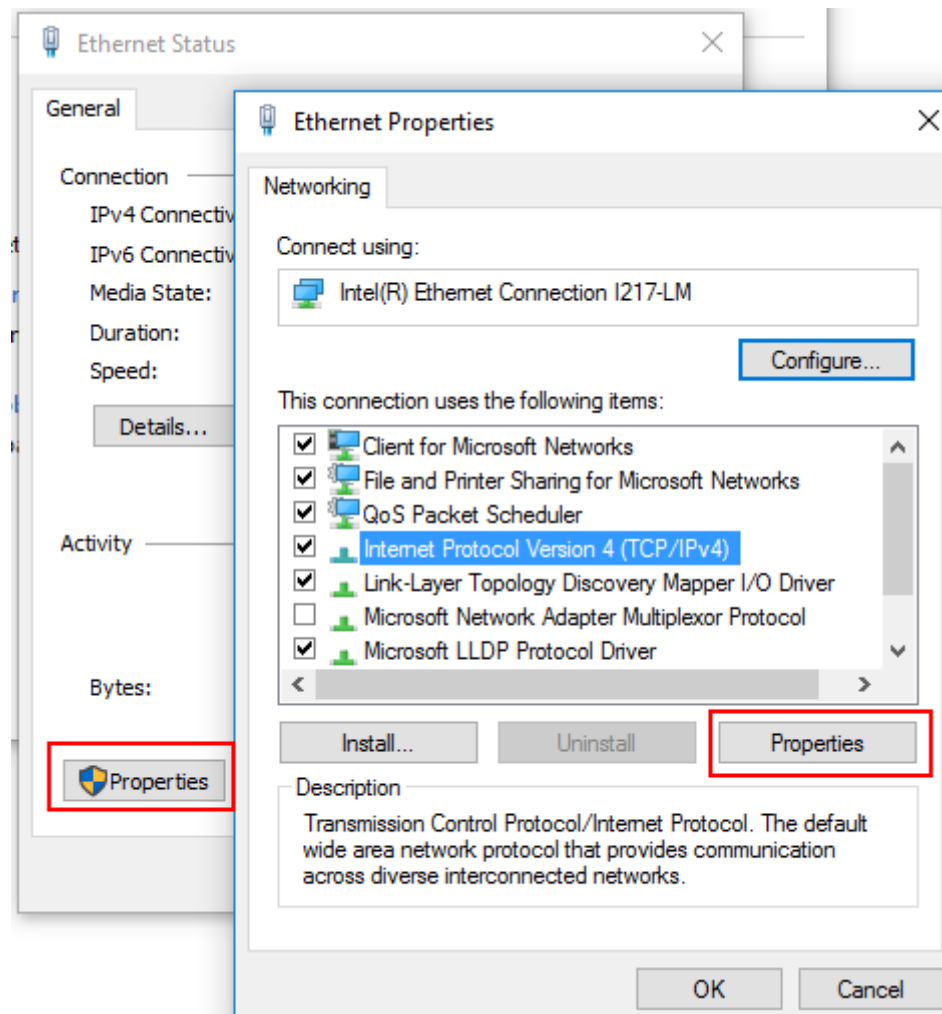

5. Tap the entry named "Internet Protocol Version 4 (TCP/IPv4)" to highlight it.
6. Select the "Properties" button.
7. On the "General" tab, select "Use the following DNS server addresses" and enter your own DNS addresses.

For more information, refer to the Windows operating system help.

11.2.6.3 Using Computer Names

In a LAN that uses a DNS server (Domain Name System server), each PC or instrument connected in the LAN can be accessed via an unambiguous computer name instead of the IP address. The DNS server translates the host name to the IP address. This is especially useful when a DHCP server is used, as a new IP address may be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned computer name, but this name can be changed.

The default instrument name is a non-case-sensitive string with the following syntax:

<Type><variant>-<serial_number>

The serial number can be found on the rear panel of the instrument. It is the third part of the device ID printed on the bar code sticker:



To change the computer name

1. Press the [Setup] key and select "General setup" > "Computer name".
The current computer name is displayed here.
2. Enter the new computer name.
3. Confirm the entry.

11.2.6.4 Changing the Windows Firewall Settings

A firewall protects an instrument by preventing unauthorized users from gaining access to it through a network. Rohde & Schwarz highly recommends the use of the firewall on your instrument. Rohde & Schwarz instruments are shipped with the Windows firewall enabled and preconfigured in such a way that all ports and connections for remote control are enabled.

For more details on firewall configuration, see the following Rohde & Schwarz White Paper:

- [1EF96: Malware Protection Windows 10](#)

Note that changing firewall settings requires administrator rights.

11.2.7 How to Configure the LAN Using the LXI Web Browser Interface

The instrument's LXI browser interface works correctly with all W3C compliant browsers.

- ▶ In the web browser, open the `http://<instrument-hostname>` or `http://<instrument-ip-address>` page, e.g. `http://10.113.10.203`.

The default password to change LAN configurations is *LxiWebIfc*.

The "Instrument Home Page" (welcome page) opens.

The screenshot shows the 'Instrument Properties' page in the LXI web interface. The left sidebar contains navigation options: LXI, Home, Lan Configuration, Status, Utilities, Instrument Control, VNC Control, License Manager, Manage Licenses, and Help. The main content area displays the following information:

Instrument Model	R&S ESR EMI Test Receiver
Manufacturer	Rohde & Schwarz GmbH & Co. KG
Serial Number	100005
Description	R&S EMI Test Receiver / ESR / 100005
LXI Version	1.4 LXI Core 2011
LXI Extended Features	LXI HISLIP
DNS Host Name(s)	██████████
MAC Address	██████████
IP Address	██████████
Firmware Revision	3.36
Current Time	Friday, 2017/03/10, 10:24:19
Current Time source	Operating System
VISA resource string	TCPIP::██████████:inst0:INSTR TCPIP::██████████:hislip0:INSTR
Device Indicator	INACTIVE (press to toggle)

The instrument home page displays the device information required by the LXI standard including the VISA resource string in read-only format.

The most important control elements in the navigation pane of the browser interface are the following:

- "LAN Configuration" opens the menu with configuration pages.
- "Status" displays information about the LXI status of the instrument.
- "Help > Glossary" opens a document with a glossary of terms related to the LXI standard.

11.2.7.1 LAN Configuration

The LAN configuration consists of three parts:

- "IP configuration" provides all mandatory LAN parameters.
- "Advanced LAN Configuration" provides LAN settings that are not declared mandatory by the LXI standard.
- "Ping Client" provides the ping utility to verify the connection between the instrument and other devices.

IP Configuration

The "LAN Configuration > IP configuration" web page displays all mandatory LAN parameters and allows their modification.

For the manual configuration mode, the static IP address, subnet mask, and default gateway are used to configure the LAN. The automatic configuration mode uses DHCP server or Dynamic Link Local Addressing (Automatic IP) to obtain the instrument IP address.



Changing the LAN configuration is password-protected. The default password is *Lxi-WebIfc* (notice upper and lower case characters).

Advanced LAN Configuration

The "LAN Configuration > Advanced LAN Configuration" parameters are used as follows:

- The "Negotiation" configuration field provides different Ethernet speed and duplex mode settings. In general, the "Auto Detect" mode is sufficient.
- "ICMP Ping" must be enabled to use the ping utility.
- "VXI-11" is the protocol that is used to detect the instrument in the LAN. According to the standard, LXI devices must use VXI-11 to provide a detection mechanism; other additional detection mechanisms are permitted.
- mDNS and DNS-SD are two additional protocols: Multicast DNS and DNS Service Discovery. They are used for device communication in zero configuration networks working without DNS and DHCP

Ping Client

Ping is a utility that verifies the connection between the LXI-compliant instrument and another device. The ping command uses the ICMP echo request and echo reply packets to determine whether the LAN connection is functional. Ping is useful for diagnosing IP network or router failures. The ping utility is not password-protected.

To initiate a ping between the LXI-compliant instrument and a second connected device:

1. Enable "ICMP Ping" on the "Advanced LAN Configuration" page (enabled after an LCI).
2. Enter the IP address of the second device **without the ping command and without any further parameters** into the "Destination Address" field (e.g. *10.113.10.203*).
3. Select "Submit".

11.2.8 Configuring the Network

After network support has been installed, data can be exchanged between the instrument and other computers, and network printers can be used.

Network operation is only possible if you are authorized to access network resources. Typical resources are file directories of other computers or even central printers. Authorization is assigned by the network or server administrator.

⚠ WARNING**Connection to networks**

Before connecting the instrument to the network or configuring the network, consult your network administrator, particularly for large LAN installations. Errors may affect the entire network.

Never connect your analyzer to a network unprotected against virus infection because this may cause damage to the instrument software.

To integrate the instrument into your network, you can change the following system properties:

- Computer name
- Domain
- Workgroup

Operation on the network includes the following administrative tasks:

- [Operating the Instrument Without a Network](#)..... 632
- [Creating Users](#)..... 632
- [Changing the User Password](#)..... 633
- [Mapping Network Drives](#)..... 633
- [Sharing Directories \(only with Microsoft Networks\)](#)..... 635

11.2.8.1 Operating the Instrument Without a Network

To operate the instrument without a network connection either temporarily or permanently, no special measures are necessary. Windows automatically detects the interruption of the network connection and does not set up the connection when the instrument is switched on.

If you are not prompted to enter the user name and password, see "[Automatic Login Function](#)" on page 57.

11.2.8.2 Creating Users

After the software for the network has been installed, the instrument issues an error message the next time it is switched on because there is no user named "instrument" (= user ID for Windows automatic login) in the network. Thus, a matching user must be created in Windows and in the network, the password must be adapted to the network password, and the automatic login mechanism must then be deactivated.

The network administrator is responsible for creating new users in the network.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. Select "Start > Settings > Accounts > Other users".
3. Select "Add someone else to this PC".

4. In the "Microsoft account" dialog box, enter the new user name and password.
5. Select "OK".
6. Select "Finish".
The new user is created.

11.2.8.3 Changing the User Password

After the new user has been created on the instrument, the password must be adapted to the network password.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. Press [Ctrl + Alt + Delete], then select "Change a password".
3. Enter the user account name.
4. Enter the old password.
5. Enter the new password in the upper text line and repeat it in the following line.
6. Press [Enter].
The new password is now active.




Logging on to the Network

At the same time you log on to the operating system, you are automatically logged on to the network (see "[Automatic Login Function](#)" on page 57). As a prerequisite, the user name and the password must be identical under Windows and on the network.

11.2.8.4 Mapping Network Drives

1. Press the [SAVE/ RCL] key on the front panel of the R&S ESR.
2. Press the "File Manager" softkey.
3. Press the "More" softkey.
4. Press the "Network Drive" softkey.
The "Map Network Drive" dialog box is displayed.

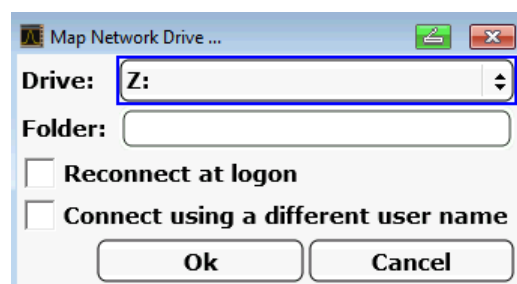

5. Press the "Drive" list to open the network drive list and select the drive you want to map.


Alternatively:

- Press the "Map Network Drive" softkey to set the focus on the "Drive" list.
- Press [ENTER] to open the network drive list and select the drive you want to map using the arrow keys.

6. To have the connection set up automatically each time the instrument is started, in the "Map Network Drive" dialog box, activate the "Reconnect at logon" option.

7. To connect using a different user name, activate the "Connect using a different user name" option.

The "Map Network Drive" dialog box is extended by the "User name" and "Password" fields.

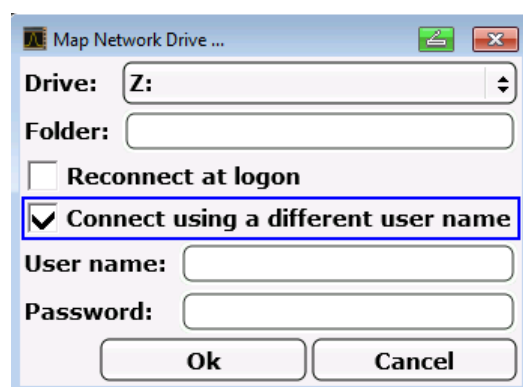

8. Enter your user name and password.

9. Confirm with "OK".

The drive is displayed in the Explorer.

Note: Only networks that you authorized to access are connected.

Disconnecting network drives

1. Press the [SAVE/ RCL] key on the front panel of the R&S ESR.
2. Press the "File Manager" softkey.
3. Press the "More" softkey.
4. Press the "Network Drive" softkey.
5. Press the "Disconnect Network Drive" softkey.
The "Disconnect Network Drive" dialog box is displayed.
6. In the "Drive" list, select the drive you want to disconnect.
7. Confirm with "OK".

11.2.8.5 Sharing Directories (only with Microsoft Networks)

Sharing directories makes data available for other users. This is only possible in Microsoft networks. Sharing is a property of a file or directory.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. Open the "Windows Explorer".
3. Select the desired folder with the right mouse button.
4. In the context menu, select "Share with > Specific people".
5. Select the users on your network you want to allow access to the directory to.
6. Select "Share" to confirm the settings.
7. Select "Done" to close the dialog box.
The drive is shared and can be accessed by the selected users.

11.3 Selecting the Operating Mode

INSTrument:CREate[:NEW]	635
INSTrument:DELeTe	636
INSTrument[:SELeCt]	636

INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>

This command adds an additional spectrum display. You can add up to three additional spectrum displays.

Also see

- [INSTrument\[:SELeCt\]](#) on page 636
- [INSTrument:DELeTe](#) on page 636
- Remote program example: [Chapter 11.17.16, "Usage of Four Spectrum Instances"](#), on page 1037

Parameters:

<ChannelType>	SANalyzer The channel type is always <code>SANalyzer</code> to add a new spectrum display.
<ChannelName>	String containing the name of the channel you want to create.

Example:

```
INST:CRE SAN, 'Spectrum 2'
```

Adds a second spectrum display.

INSTrument:DELeTe <ChannelName>

This command deletes a spectrum display.

Also see

- [INSTrument:CREate\[:NEW\]](#) on page 635
- Remote program example: [Chapter 11.17.16, "Usage of Four Spectrum Instances"](#), on page 1037

Parameters:

<ChannelName> String containing the name of the channel you want to delete. A channel must exist in order to be able delete it.

Example:

```
INST:DEL 'Spectrum 4'
Deletes the fourth spectrum display.
```

INSTrument[:SELeCt] <Mode> | <ChannelName>

This command activates a new measurement channel with the defined channel type, or selects an existing measurement channel with the specified name.

- [INSTrument:CREate\[:NEW\]](#) on page 635
- Remote program example: [Chapter 11.17.16, "Usage of Four Spectrum Instances"](#), on page 1037

Parameters:

<Mode>	RECeiver Receiver mode
	RTIME Realtime mode
	SANalyzer Spectrum mode
	Spectrum 2 Spectrum 3 Spectrum 4 Selects one of the additional spectrum displays. The first spectrum display is always active. You can select it with <code>SANalyzer</code> . A spectrum display must exist in order to be able to select it.
	*RST: RECeiver

11.4 Remote Commands in Receiver Mode

The following remote commands configure and perform EMI measurements. They are available in receiver mode only.

- [Measurements and Result Displays](#).....637
- [Defining the Frequency](#).....665
- [Configuring the Vertical Axis](#).....667
- [Selecting the Bandwidth](#).....670
- [Controlling Inputs and Outputs](#).....672

- Test Automation..... 673
- Working with Markers.....687
- Limit Lines.....703

11.4.1 Measurements and Result Displays

- Display Configuration.....637
- Bargraph Control.....637
- Scan Control.....640
- Final Measurements and Automated Test Sequence Control.....642
- Trace Data and Result Query.....643
- Fixed Frequency Scans.....647
- Demodulating Analog Signals.....648
- Spectrogram Control.....649

11.4.1.1 Display Configuration

- CALCulate<n>:FEED..... 637

CALCulate<n>:FEED <ResultDisplay>

This command selects the result display.

Suffix:

<n> 1...3
Selects the measurement window.

Parameters:

<ResultDisplay> **'NONE'**
Removes the window selected with the suffix <n>.

'XTIM:SPECTrum'
Selects the IF analysis result display.

'XTIM:BARGraph'
Selects the bargraph.
Note that the Bargraph always has to be in window 1.

'XFRequency[:SPECTrum]'
Selects the scan result display.

'XFRequency:SGRam'
Selects the spectrogram result display.
Note that you can add a spectrogram only if you have already turned on either Scan or IF Analysis. If you are displaying Scan and IF Analysis simultaneously, the Spectrogram is unavailable.

11.4.1.2 Bargraph Control

- DISPlay:BARGraph:LEVel:LOWer?.....638
- DISPlay:BARGraph:LEVel:UPPer?.....638
- DISPlay:BARGraph:PHOLd[:STATe].....638

DISPlay:BARGraph:PHOLd:RESet.....	638
DISPlay:BARGraph:TCOupling[:STATe].....	638
[SENSe:]DETEctor:RECeiver[:FUNCTion].....	639
[SENSe:]SWEEp:TIME.....	639

DISPlay:BARGraph:LEVel:LOWer?

This command queries the minimum level of the bargraph.

Example: :DISP: BARG: LEV: LOW?

Usage: Query only

DISPlay:BARGraph:LEVel:UPPer?

This command queries the maximum level of the bargraph.

Example: :DISP: BARG: LEV: UPP?

Usage: Query only

DISPlay:BARGraph:PHOLd[:STATe] <State>

This command switches the indication of the maxhold value of the bar graph measurement on or off.

Parameters:

<State> **ON**
 OFF
 *RST: OFF

Example: DISP: BARG: PHOL ON

Manual operation: See "[Bargraph Maxhold](#)" on page 158

DISPlay:BARGraph:PHOLd:RESet

This command resets the maxhold value of the numeric indication of the bargraph measurement.

Example: :DISP: BARG: PHOL: RES

Usage: Event

Manual operation: See "[Maxhold Reset](#)" on page 158

DISPlay:BARGraph:TCOupling[:STATe] <State>

This command couples or decouples the bargraph detector and scan trace detector.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `DISP:BARG:TCO ON`
Couples the type and color of bargraph and scan trace.

Manual operation: See ["Couple to Scan Trace"](#) on page 163

[SENSe:]DETEctor:RECeiver[:FUNCTion] <Detector>, [<Detector>, <Detector>]

This command selects the detector for the bargraph measurement.

Parameters:

<Detector>,
[<Detector>,
<Detector>]

You can select up to three detectors, one for each active bargraph.

AVERage

Selects the Average detector.

CAVerage

Selects the CISPR Average detector.

CRMS

Selects the CISPR RMS detector.

NEGative

Selects the Min Peak detector.

POSitive

Selects the Max Peak detector.

QPEak

Selects the Quasipeak detector.

RMS

Selects the RMS detector.

*RST: AVERage

Example: `DET:REC POS,AVER,QPE`
Selects the peak, average and quasipeak detectors.

Manual operation: See ["Bargraph Detector"](#) on page 163

[SENSe:]SWEep:TIME <Time>

This command defines the measurement or acquisition time for bargraph measurements, scans and CISPR APD measurements.

Parameters:

<Time> Range: 10 μ s to 100 s

Example: `SWE:TIME 10s`
Defines a measurement time of 10 s.

Manual operation: See ["Measurement Time"](#) on page 163
See ["Acquisition Time"](#) on page 311

11.4.1.3 Scan Control

ABORt	640
HOLD	640
INITiate<n>:CONMeas	640
INITiate<n>:CONTinuous	641
INITiate<n>[:IMMediate]	641

ABORt

This command stops a measurement and resets the trigger system.

Example: ABOR; INIT: IMM
 Aborts the measurement and restarts it.

Usage: SCPI confirmed

Manual operation: See "Stop Scan" on page 159
 See "Stop Final Measurement" on page 162
 See "Meas Start/Stop" on page 267

HOLD

This command interrupts a running scan measurement.

To resume the scan, use `INITiate<n>[:IMMediate]`.

Example: HOLD
 Interrupts the scan.

Manual operation: See "Hold Scan" on page 159
 See "Continue at Rec Frequency" on page 159
 See "Hold Final Measurement" on page 161

INITiate<n>:CONMeas

This command resumes a scan that was interrupted by a transducer stop at the current receiver frequency.

If the scan was interrupted by the `HOLD` command, you have to resume it with `INITiate<n>[:IMMediate]` on page 641.

Example: INIT2:CONT OFF
 Selects single scan mode.
 SWE:COUN 20
 Forms an average over 20 scans.
 INIT2;*WAI
 Starts the measurement and waits for the end of the 20 scans.
 INIT2:CONM;*WAI
 Continues the measurement (next 20 sequences) and waits for the end.

Usage: Event

Manual operation: See ["Continue at Hold"](#) on page 159

INITiate<n>:CONTInuous <State>

This command turns single measurements on and off.

The measurement starts immediately.

Parameters:

<State> **ON**
 Continuous measurements.

OFF
 Single measurements.

Example: INIT2:CONT OFF
 Turns on a single measurement.

Manual operation: See ["Continuous Bargraph / Single Bargraph"](#) on page 158
 See ["Run Continuous / Run Single"](#) on page 185
 See ["Continuous Sweep"](#) on page 370
 See ["Single Sweep"](#) on page 370

INITiate<n>[:IMMediate]

The command initiates a new measurement.

In case of a single measurement, the R&S ESR stops measuring when it has reached the end frequency. When you start a continuous measurement, it stops only if you abort it deliberately.

If you are using trace modes MAXHold, MINHold and AVERage, previous results are reset when you restart the measurement.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Example: INIT2:CONT OFF
 Selects single measurement mode.

 SWE:COUN 20
 Forms an average over 20 measurements.

 INIT2;*WAI
 Starts the measurement and waits for the end of the complete measurement.

Usage: Event

Manual operation: See ["Continue at Rec Frequency"](#) on page 159
 See ["Run Continuous / Run Single"](#) on page 185

11.4.1.4 Final Measurements and Automated Test Sequence Control

INITiate<n>:EMITest.....	642
INITiate<n>:FMEasurement.....	642
[SENSe:]DETEctor<t>:FMEasurement.....	642
[SENSe:]FMEasurement:AUTO.....	643
[SENSe:]FMEasurement:TIME.....	643

INITiate<n>:EMITest

This command initiates an automated test sequence.

The sequence consists of a scan, a peak search and a final measurement.

Example: INIT2:EMIT
Starts the test sequence.

Usage: Event

INITiate<n>:FMEasurement

This command initiates a final measurement based on the peak list.

Example: INIT2:FME
Starts the final measurement.

Usage: Event

[SENSe:]DETEctor<t>:FMEasurement <Detector>

This command selects the detector for the final measurement.

Parameters:

<Detector>

AVERage

Selects the Average detector.

CAVerage

Selects the CISPR Average detector.

CRMS

Selects the CISPR RMS detector.

NEGative

Selects the Min Peak detector.

NONE

Ignores the peaks found on that trace during the final measurement.

POSitive

Selects the Max Peak detector.

QPEak

Selects the Quasipeak detector.

RMS

Selects the RMS detector.

*RST: QPEak

Example: DET:FME POS

Manual operation: See "Trace 1 to 6" on page 196
See "Trace 1 - 6" on page 199

[SENSe:]FMEasurement:AUTO <State>

This command turns automatic final measurements on and off.

Parameters:

<State>

ON

Turns on automatic final measurement.

OFF

Turns on interactive final measurement.

*RST: ON

Example: FME:AUTO ON

Manual operation: See "Automatic Final" on page 161
See "Interactive Final" on page 161
See "Interactive Mode" on page 196

[SENSe:]FMEasurement:TIME <Time>

This command defines the time each frequency in the peak list is measured during the final measurement.

Parameters:

<Time>

*RST: 1 s

Example: FME:TIME 1us

Defines a measurement time of 1 μ s.

11.4.1.5 Trace Data and Result Query

This section contains information on the TRACe:DATA command and a detailed description of the characteristics of that command. Basically, the command queries the results of the current measurement. The command supports various SCPI parameters in combination with the query. Each SCPI parameter returns a different aspect of the measurement.

The format of the return values is either in ASCII or binary characters and depends on the format you have set with FORMat[:DATA] on page 850.

Querying trace data

The SCPI parameters TRACE1 | ... | TRACE6 return the trace data for the corresponding trace.

Example:

```
TRAC? TRACE1
```

The number of results depends on the currently selected number of sweep points. For each sweep point, the command returns one level value. The unit depends on the measurement and on the unit you have currently set.

The trace has to be active for the command to work.

Querying bargraph results

The SCPI parameters `SINGLE` and `PHOLD` return the results of the bargraph measurement.

`SINGLE` returns the current bargraph results for each active bargraph detector.

The order of detectors is as shown in the user interface: maximum peak, minimum peak, quasipeak, average, RMS. Inactive detectors are ignored.

Example:

```
TRAC? SINGLE
```

`PHOLD` returns the bargraph maxhold results for each active bargraph detector.

Each result is made up out of two values:

- Absolute level
- Frequency

The order of detectors is as shown in the user interface: maximum peak, minimum peak, quasipeak, average, RMS. Inactive detectors are ignored.

Example:

```
TRAC? PHOLD
```

Querying scan characteristics

The SCPI parameter `SCAN` returns the scan characteristics while the scan is running.

The amount of returned results depends on the scan settings.

The type of returned data is as follows:

- 4 byte, trace status:
 - bit 0 to 9 represent the subscan
 - bit 10 represents the last block of a subscan
 - bit 11 represents the last block of the last subscan
 - bit 12 represents the last of all blocks (for multiple scans after the last scan)
- 4 byte, number *n* of measurement results contained in one trace
- 4 byte, bit 0 represents the state of trace 1 (0/1)
- 4 byte, bit 0 represents the state of trace 2 (0/1)
- 4 byte, bit 0 represents the state of trace 3 (0/1)

- 4 byte, bit 0 represents the state of trace 4 (0/1)

Note:

If more than 4 traces are active, the state of trace 5 and 6 is indicated by an additional bit (bit 8) in the UINT32 field of trace 1 and 2.

- n*4 byte, measurement results for trace 1; only if trace 1 is active
- n*4 byte, measurement results for trace 2; only if trace 2 is active
- n*4 byte, measurement results for trace 3; only if trace 3 is active
- n*4 byte, measurement results for trace 4; only if trace 4 is active
- n*4 byte, measurement results for trace 5; only if trace 5 is active
- n*4 byte, measurement results for trace 6; only if trace 6 is active
- n*1 byte, status information for each measurement result
 - bit 2 represents overrange for trace 1 to trace 6

The data is always returned in binary format (`FORM REAL, 32`).

Note that the `SCAN` parameter only works while the scan is actually running.

Example:

```
TRAC? SCAN
```

Querying results for a peak search

The SCPI parameters `PLIST1 | ... | PLIST6` returns the results of a peak search for a particular trace or detector (1 to 6).

Each result is made up out of three values:

- 4 byte, frequency
- 4 byte, absolute level
- 4 byte, Delta between absolute level and limit line value at corresponding frequency
 - If no limit line is active, the delta value is set to 0.0

The trace has to be active for the command to work.

Example:

```
TRAC? PLIST3
```

Querying results for the final measurement

The SCPI parameters `FINAL1 | ... | FINAL6` return the results of the final measurement for a particular trace or detector (1 to 6).

Each result is made up out of three values:

- 4 byte, frequency
- 4 byte, absolute level
- 4 byte, Delta between absolute level and limit line value at corresponding frequency
 - If no limit line is active, the delta value is set to 0.0

The trace has to be active for the command to work.

Querying the status of the measurement results

The SCPI parameter `STATUS` returns the status information for each measurement result. Thus, the number of returned values depends on the number of measurement results n . For each measurement result, the parameter queries 1 byte of status information.

→ bit 2 represents overrange for trace 1 to trace 6

Note that the `SCAN` parameter only works while the scan is actually running.

Example:

```
TRAC? STATUS
```

Querying spectrogram data

The SCPI parameter `SGRam` returns the contents of the spectrogram.

For every frame (horizontal line) in the spectrogram, the command returns the power levels that have been measured, one for each sweep or measurement point. The number of frames depends on the size of the history depth. The power level depends on the unit you have currently set.

FORMat:DEXPort:TRACes <Selection>

This command selects the data to be included in a data export file.

Parameters:

<Selection>

ALL

Selects all active traces for export to an ASCII file.

The <trace> parameter for the `MMEMoRY:STORe<n>:TRACe` command is ignored.

SINGLE

Only a single trace is selected for export, namely the one specified by the `MMEMoRY:STORe<n>:TRACe` command.

```
*RST:      SINGLE
```

Manual operation: See "[ASCII Trace Export](#)" on page 199

TRACe[:DATA] <ResultType>

This command queries current trace data and measurement results.

The data format depends on `FORMat[:DATA]`.

Query parameters:

<Trace>

TRACE1 | ... | TRACE6

See "[Querying trace data](#)" on page 643.

FINAL1 | ... | FINAL6

See "[Querying results for the final measurement](#)" on page 645.

PLIST1 | ... | PLIST6

See "[Querying results for a peak search](#)" on page 645.

PHOLD

See "Querying bargraph results" on page 644.

SCAN

See "Querying scan characteristics" on page 644.

SGRam

See "Querying spectrogram data" on page 646

SINGLE

See "Querying bargraph results" on page 644.

STATUS

See "Querying scan characteristics" on page 644.

Return values:

<TraceData> For more information see tables below.

Example:

TRAC? TRACE1

Queries the level for each trace point of trace 1.

TRACe<n>:IF[:DATA] <ResultType>

This command queries current trace data and measurement results for IF analysis.

The data format depends on FORMat [:DATA].

Suffix:

<n> irrelevant

Parameters:

<ResultType>

TRACE1 | ... | TRACE3

Returns the level values displayed on the corresponding trace.

Example:

TRAC:IF? TRACE1

Queries the level for each trace point of trace 1.

11.4.1.6 Fixed Frequency Scans

Commands useful to configure the fixed frequency scans described elsewhere:

- [SENSe:]FREQuency:MODE on page 666

[SENSe:]SCAN:TDOMain..... 647

[SENSe:]SCAN:TDOMain <Time>

This command defines the measurement time for fixed frequency scans.

Parameters:

<Time>

Measurement time in seconds.

The range indicated below is the maximum range. The actual range depends on the measurement time defined with [SENSe:]SWEp:TIME on page 639.

Range: 10 ms to 10000 s

Example: SCAN:TDOM 100 s
 Defines a measurement time of 100 s.

Manual operation: See "Fixed Frequency" on page 189

11.4.1.7 Demodulating Analog Signals

[SENSe:]DEMod.....	648
[SENSe:]DEMod:SQUelch:LEVel.....	648
[SENSe:]DEMod:SQUelch[:STATe].....	649

[SENSe:]DEMod <Demod>

This command turns analog demodulation at the receiver frequency on and off and selects the type of analog demodulation.

Parameters:

<Demod> **OFF**
 Turns demodulation off.

AM
 Turns AM demodulation on.

FM
 Turns FM demodulation on.

*RST: OFF

Example: DEM FM
 Turns FM demodulation on.

Manual operation: See "Demod (On Off)" on page 163
 See "AM / FM" on page 163

[SENSe:]DEMod:SQUelch:LEVel <Threshold>

This command defines the threshold for selective demodulation. Squelching must be active for this command to work (see [SENSe:]DEMod:SQUelch[:STATe]).

All signals below the threshold are not demodulated.

This command is only available if the R&S FSV-B3 option (Audio Demodulation) is installed.

Parameters:

<Threshold> The threshold level as a percentage of the display height.

 Range: 0 to 100

 *RST: 60

Example: DEM:SQU:LEV 80
 Sets the squelch level to 80% of the displayed signal.

Usage: SCPI confirmed

Manual operation: See "Squelch" on page 164
 See "Squelch Level" on page 421

[SENSe:]DEMod:SQUelch[:STATe] <State>

This command turns selective demodulation at the marker position on and off.

A video trigger is automatically activated with the same level as the squelch level, any other trigger or gate settings are deactivated.

This command is only available if the R&S FSV-B3 option (Audio Demodulation) is installed.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

DEM:SQU ON
Signals below the level threshold are not sent to the audio output.

Usage: SCPI confirmed

Manual operation: See "Squelch" on page 164
See "Squelch" on page 421

11.4.1.8 Spectrogram Control

- [Configuring Spectrograms](#)..... 649
- [Using Markers](#)..... 653
- [Using Deltamarkers](#)..... 659

Configuring Spectrograms

CALCulate<n>:SGRam:CLEar[:IMMediate]	649
DISPlay:WINDow:SGRam:COLor:DEFault	650
DISPlay:WINDow:SGRam:COLor:LOWer	650
DISPlay:WINDow:SGRam:COLor:SHAPE	650
DISPlay:WINDow:SGRam:COLor:UPPer	650
DISPlay:WINDow:SGRam:COLor:STYLe]	651
CALCulate<n>:SGRam:HDEPth	651
CALCulate:SGRam:TRACe	651
CALCulate<n>:SGRam:TSTamp:DATA?	652
MMEMory:STORE:SGRam	652

CALCulate<n>:SGRam:CLEar[:IMMediate]

This command resets the Spectrogram result display and clears the history buffer.

Suffix:

<n> 1...4
Selects the measurement window.

Example:

CALC:SGR:CLE
Resets the result display and clears the memory.

Usage: Event

Manual operation: See ["Spectrogram Clear"](#) on page 374
See ["Clear Spectrogram"](#) on page 406

DISPlay:WINDow:SGRam:COLor:DEFault

This command sets the color settings for the spectrogram result display to its default state.

Usage: Event

DISPlay:WINDow:SGRam:COLor:LOWer <Percentage>

This command sets the lower percentage boundary of the spectrogram.

Parameters:

<Percentage> Statistical frequency percentage.
Range: 0 to 66
*RST: 0
Default unit: %

Example: DISP:WIND:SGR:COL:LOW 10
Sets the start of the color map to 10%.

Manual operation: See ["Color Mapping"](#) on page 406

DISPlay:WINDow:SGRam:COLor:SHAPe <Shape>

This command defines the shape and focus of the color curve for the spectrogram result display.

Parameters:

<Shape> Shape of the color curve.
Range: -1 to 1
*RST: 0

DISPlay:WINDow:SGRam:COLor:UPPer <Percentage>

This command sets the upper percentage boundary of the spectrogram.

Parameters:

<Percentage> Statistical frequency percentage.
Range: 0 to 66
*RST: 0
Default unit: %

Example: DISP:WIND:SGR:COL:UPP 95
Sets the start of the color map to 95%.

Manual operation: See ["Color Mapping"](#) on page 406

DISPlay:WINDow:SGRam:COLor[:STYLE] <ColorScheme>

This command sets the color scheme for the spectrogram.

Parameters:

<ColorScheme>

HOT

Uses a color range from blue to red. Blue colors indicate low levels, red colors indicate high ones.

COLD

Uses a color range from red to blue. Red colors indicate low levels, blue colors indicate high ones.

RADar

Uses a color range from black over green to light turquoise with shades of green in between. Dark colors indicate low levels, light colors indicate high ones.

GRAYscale

Shows the results in shades of gray. Dark gray indicates low levels, light gray indicates high ones.

*RST: HOT

Example:

```
DISP:WIND:SGR:COL GRAY
```

Changes the color scheme of the spectrogram to black and white.

CALCulate<n>:SGRam:HDEPth <HistoryDepth>

This command sets the number of frames to be stored in the R&S ESR's memory.

Suffix:

<n>

1...4

Selects the measurement window.

Parameters:

<HistoryDepth>

The maximum number of frames depends on the number of sweep points.

Range: 781 to 20000

Increment: 1

*RST: 3000

Example:

```
CALC:SGR:HDEP 1500
```

Sets the history depth to 1500.

Manual operation:

See "[Frame Count](#)" on page 373

See "[History Depth](#)" on page 405

CALCulate:SGRam:TRACe <Trace>

This command selects the trace the spectrogram is based on.

Parameters:

<Trace> Number of the trace. The range depends on the result display. Scans support six traces, IF Analysis supports three traces.

Example:

```
CALC:SGR:TRAC 2
```

Assigns trace two to the spectrogram.

Manual operation: See ["Trace to Spectrogram"](#) on page 165

CALCulate<n>:SGRam:TSTamp:DATA? <Mode>

This command queries the time stamp of the frames.

All available frame results are returned by [TRACe<n>:DATA](#) on page 726.

Suffix:

<n> 1...4
Selects the measurement window.

Query parameters:

<Mode> **CURRENT**
Returns the time stamp of the current frame.

ALL
Returns the time stamps of all frames. The result are sorted in descending order, beginning with the current frame.

Return values:

<TimeStamp> The return values consist of four values for each frame. The first value is the date of the measurement in seconds that have passed since 01.01.1970 in seconds. For a better resolution the second value shows the additional milliseconds. This value is also displayed on screen. These numbers are appropriate for relative uses, but you can also calculate the absolute date and time as displayed on the screen. The third and fourth value are reserved for future uses. If the Spectrogram is empty, the command returns '0,0,0,0'

Example:

```
CALC:SGR:TST ON
```

Activates the time stamp.

```
CALC:SGR:TST:DATA? ALL
```

Returns the time stamp of all frames sorted in a descending order.

Usage:

Query only

MMEMory:STORe:SGRam <File>

This command exports the spectrogram data to a ASCII file.

The file contains the data for every frame in the history buffer. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded.

Note that, depending on the size of the history buffer, the process of exporting the data can take a while.

Parameters:

<File> string containing the file name of the destination file

Example:

MMEM:STOR:SGR

Copies the spectrogram data to a file.

Manual operation: See "ASCII Trace Export" on page 199

Using Markers

Commands useful to work with markers in the spectrogram described elsewhere:

- [CALCulate<n>:MARKer<m>:MAXimum:LEFT](#) on page 691
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) on page 692
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 692
- [CALCulate<n>:MARKer<m>:MAXimum:RIGHT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum:LEFT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum:NEXT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) on page 694
- [CALCulate<n>:MARKer<m>:MINimum:RIGHT](#) on page 694

Command exclusive to position markers in the spectrogram:

CALCulate<n>:MARKer<m>:SGRam:FRAMe	653
CALCulate<n>:MARKer<m>:SGRam:SARea	654
CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]	654
CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]	655
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVe	655
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW	656
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT	656
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]	657
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVe	657
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW	657
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT	658
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]	658

CALCulate<n>:MARKer<m>:SGRam:FRAMe <Frame> | <Time>

This command positions the marker on a particular frame.

The command is available for the spectrogram.

Suffix:

<n> 1...4

Selects the measurement window.

<m> 1...16
Selects the marker.

Parameters:

<Frame> | <Time> **<Frame> (if time stamp is off)**
Defines the frame to place the marker on. The range is {0...number of recorded frames-1}
Note that in receiver mode, it is not possible to select a frame, only a time.

<time> (if time stamp is on)
Defines the distance of the marker in seconds to the last measured frame (frame 0).

Example:

```
CALC:MARK:SGR:FRAM -20
```

Sets the marker on the 20th frame before the present.

```
CALC:MARK2:SGR:FRAM 2 s
```

Sets second marker on the frame 2 seconds ago.

CALCulate<n>:MARKer<m>:SGRam:SARea <SearchArea>

This command defines the marker search area.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Parameters:

<SearchArea> **VISible**
Performs a search in the visible frames.
Note that VISible is ignored if Spectrogram is not visible for any reason (e.g. if the Spectrum Analyzer is in full screen mode or display update is inactive).

MEMory

Performs a search over all frames in the memory.

```
*RST: VISible
```

Example:

```
CALC:DELT:SGR: SAR MEM
```

Performs a search over all frames in the memory.

Manual operation: See "[Select Search Area](#)" on page 208

CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]

This command positions the specified marker on the current peak level of the spectrogram. The possible position depends on the marker search area.

The command is available for the spectrogram.

For more information, see [CALCulate<n>:MARKer<m>:SGRam:SARea](#) on page 654.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

```
CALC:MARK2:SGR: SAR VIS
```

```
CALC:MARK2:SGR: XY:MAX
```

Activates and positions marker 2 on the peak level in the visible Spectrogram.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]

This command positions the specified marker on the current minimum level of the spectrogram. The possible position depends on the marker search area.

The command is available for the spectrogram.

For more information, see [CALCulate<n>:MARKer<m>:SGRam:SARea](#) on page 654 .

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

```
CALC:MARK3:SGR: SAR VIS
```

```
CALC:MARK3:SGR: XY:MIN
```

Activates and positions marker 3 on the minimum level in the visible Spectrogram.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE

This command positions the specified marker on the next peak level of the vertical axis. The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example: `CALC:MARK2:SGR:Y:MAX`
 Activates and positions marker 2 on the peak level of the y-axis.
`CALC:MARK2:SGR:Y:MAX:ABV`
 Positions marker 2 on the next higher level found in the diagram area above the current marker position.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW

This command positions the specified marker on the next peak level of the vertical axis. The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:MARK2:SGR:Y:MAX`
 Activates and positions marker 2 on the peak level of the y-axis.
`CALC:MARK2:SGR:Y:MAX:BEL`
 Positions marker 2 on the next higher level found in the diagram area below the current marker position.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT

This command positions the specified marker on the next peak level of the vertical axis. The search includes frames above and below the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:MARK2:SGR:Y:MAX`
 Activates and positions marker 2 on the peak level of the y-axis.
`CALC:MARK2:SGR:Y:MAX:NEXT`
 Positions marker 2 on the next higher level.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]

This command positions the specified marker on the current peak level of the vertical axis. The search is performed over all frames. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:MARK2:SGR:Y:MAX`

Activates and positions marker 2 on the peak level of the y-axis.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE

This command positions the specified marker on the next minimum level of the vertical axis. The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:MARK2:SGR:Y:MIN`

Activates and positions marker 2 on the minimum level of the y-axis.

`CALC:MARK2:SGR:Y:MIN:ABOV`

Positions marker 2 on the next minimum level found in the diagram area above the current marker position.

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW

This command positions the specified marker on the next minimum level of the vertical axis. The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m>	1...16 Selects the marker.
Example:	<code>CALC:MARK2:SGR:Y:MIN</code> Activates and positions marker 2 on the minimum level of the y-axis. <code>CALC:MARK2:SGR:Y:MAX:BEL</code> Positions marker 2 on the next minimum level found in the diagram area below the current marker position.
Usage:	Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT

This command positions the specified marker on the next minimum level of the vertical axis. The search includes frames above and below the current marker position. It does not change the horizontal position of the marker.

The command is available for the spectrogram.

Suffix:

<n>	1...4 Selects the measurement window.
<m>	1...16 Selects the marker.

Example:	<code>CALC:MARK2:SGR:Y:MIN</code> Activates and positions marker 2 on the minimum level of the y-axis. <code>CALC:MARK2:SGR:Y:MIN:NEXT</code> Positions marker 2 on the next minimum level.
Usage:	Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]

This command positions the specified marker on the current minimum level of the vertical axis. The search is performed over all captured frames. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n>	1...4 Selects the measurement window.
<m>	1...16 Selects the marker.

Example:	<code>CALC:MARK2:SGR:Y:MIN</code> Activates and positions marker 2 on the minimum level of the y-axis.
Usage:	Event

Using Deltamarkers

Commands useful to work with markers in the spectrogram described elsewhere:

- `CALCulate<n>:DELTamarker<m>:MAXimum:LEFT` on page 698
- `CALCulate<n>:DELTamarker<m>:MAXimum:NEXT` on page 698
- `CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]` on page 699
- `CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT` on page 699
- `CALCulate<n>:DELTamarker<m>:MINimum:LEFT` on page 699
- `CALCulate<n>:DELTamarker<m>:MINimum:NEXT` on page 700
- `CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]` on page 700
- `CALCulate<n>:DELTamarker<m>:MINimum:RIGHT` on page 700

Command exclusive to position markers in the spectrogram:

<code>CALCulate<n>:DELTamarker<m>:SGRam:FRAME</code>	659
<code>CALCulate<n>:DELTamarker<m>:SGRam:SARea</code>	660
<code>CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK]</code>	660
<code>CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK]</code>	661
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVE</code>	661
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELOW</code>	662
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT</code>	662
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]</code>	662
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVE</code>	663
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW</code>	663
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT</code>	664
<code>CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK]</code>	664

`CALCulate<n>:DELTamarker<m>:SGRam:FRAME <Frame> | <Time>`

This command positions the delta marker on a particular frame. The frame is relative to the position of marker 1.

The command is available for the spectrogram.

Suffix:

<code><n></code>	1...4 Selects the measurement window.
<code><m></code>	1...16 Selects the marker.

Parameters:

<code><Frame> <Time></code>	<Frame> (if time stamp is off) Defines the distance of the deltamarker in frames and in relation to the position of marker 1. Note that in receiver mode, it is not possible to select a frame, only a time.
---	---

<time> (if time stamp is on)

Defines the distance of the deltamarker in seconds and in relation to the position of marker 1. The reference is the time stamp of marker 1.

Example:

```
CALC:DELT4:SGR:FRAM -20
```

Sets fourth deltamarker 20 frames below marker 1.

```
CALC:DELT4:SGR:FRAM 2 s
```

Sets fourth deltamarker 2 seconds above the position of marker 1.

CALCulate<n>:DELTamarker<m>:SGRam:SARea <SearchArea>

This command defines the deltamarker search area.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Parameters:

<SearchArea>

VISible

Performs a search in the visible frames.

Note that VISible is ignored if Spectrogram is not visible for any reason (e.g. if the Spectrum Analyzer is in full screen mode or display update is inactive).

MEMory

Performs a search over all frames in the memory.

```
*RST: VISible
```

Example:

```
CALC:DELT:SGR:SAR MEM
```

Performs a search over all frames in the memory.

CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK]

This command positions the specified delta marker on the current peak level of the spectrogram. The possible position depends on the deltamarker search area.

The command is available for the spectrogram.

For more information, see [CALCulate<n>:DELTamarker<m>:SGRam:SARea](#) on page 660.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example: `CALC:DELT2:SGR:SAR VIS`
 `CALC:DELT2:SGR:XY:MAX`
 Activates and positions delta marker 2 on the peak level in the visible Spectrogram.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK]

This command positions the specified delta marker on the current minimum level of the spectrogram. The possible position depends on the deltamarker search area.

The command is available for the spectrogram.

For more information, see [CALCulate<n>:DELTamarker<m>:SGRam:SARea](#) on page 660.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:DELT3:SGR:SAR VIS`
 `CALC:DELT3:SGR:XY:MIN`
 Activates and positions delta marker 3 on the minimum level in the visible Spectrogram.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVE

This command positions the specified delta marker on the next peak level of the vertical axis. The search includes only frames above the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:DELT2:SGR:Y:MAX`
 Activates and positions delta marker 2 on the peak level of the y-axis.
 `CALC:DELT2:SGR:Y:MAX:ABOV`
 Positions delta marker 2 on the next higher level found in the diagram area above the current marker position.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELow

This command positions the specified delta marker on the next peak level of the vertical axis. The search includes only frames below the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:DELT2:SGR:Y:MAX`

Activates and positions delta marker 2 on the peak level of the y-axis.

`CALC:DELT2:SGR:Y:MAX:BEL`

Positions delta marker 2 on the next higher level found in the diagram area below the current marker position.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT

This command positions the specified delta marker on the next peak level of the vertical axis. The search includes frames above and below the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
Selects the measurement window.

<m> 1...16
Selects the marker.

Example:

`CALC:DELT2:SGR:Y:MAX`

Activates and positions delta marker 2 on the peak level of the y-axis.

`CALC:DELT2:SGR:Y:MAX:NEXT`

Positions delta marker 2 on the next higher level.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]

This command positions the specified delta marker on the current peak level of the vertical axis. The search is performed over all frames. It does not change the horizontal position of the deltamarker.

The command is available for the spectrogram.

Suffix:	
<n>	1...4 Selects the measurement window.
<m>	1...16 Selects the marker.
Example:	<code>CALC:DELT2:SGR:Y:MAX</code> Activates and positions delta marker 2 on the peak level of the y-axis.
Usage:	Event

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MINimum:ABOVE

This command positions the specified delta marker on the next minimum level of the vertical axis. The search includes only frames above the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:	
<n>	1...4 Selects the measurement window.
<m>	1...16 Selects the marker.
Example:	<code>CALC:DELT2:SGR:Y:MIN</code> Activates and positions delta marker 2 on the minimum level of the y-axis. <code>CALC:DELT2:SGR:Y:MIN:ABOV</code> Positions delta marker 2 on the next minimum level found in the diagram area above the current marker position.
Usage:	Event

CALCulate<n>:DELTaMarker<m>:SGRam:Y:MINimum:BELOW

This command positions the specified delta marker on the next minimum level of the vertical axis. The search includes only frames below the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:	
<n>	1...4 Selects the measurement window.
<m>	1...16 Selects the marker.

Example: `CALC:DELT2:SGR:Y:MIN`
 Activates and positions delta marker 2 on the minimum level of the y-axis.
`CALC:DELT2:SGR:Y:MAX:BEL`
 Positions delta marker 2 on the next minimum level found in the diagram area below the current marker position.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT

This command positions the specified delta marker on the next minimum level of the vertical axis. The search includes frames above and below the current marker position. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:DELT2:SGR:Y:MIN`
 Activates and positions delta marker 2 on the minimum level of the y-axis.
`CALC:DELT2:SGR:Y:MIN:NEXT`
 Positions delta marker 2 on the next minimum level.

Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK]

This command positions the specified delta marker on the current minimum level of the vertical axis. The search is performed over all captured frames. It does not change the horizontal position of the delta marker.

The command is available for the spectrogram.

Suffix:

<n> 1...4
 Selects the measurement window.

<m> 1...16
 Selects the marker.

Example: `CALC:DELT2:SGR:Y:MIN`
 Activates and positions delta marker 2 on the minimum level of the y-axis.

Usage: Event

11.4.2 Defining the Frequency

DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing.....	665
[SENSe:]FREQUency:CENTer.....	665
[SENSe:]FREQUency:CENTer:STEP.....	665
[SENSe:]FREQUency:MODE.....	666
[SENSe:]FREQUency:STARt.....	666
[SENSe:]FREQUency:STOP.....	666

DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing <Scale>

This command selects the scale of the frequency axis.

Parameters:

<Scale>	LINear Linear scale of the frequency axis.
	LOGarithmic Logarithmic scale of the frequency axis.
	*RST: LOGarithmic

Example: DISP:TRAC:X:SPAC LIN
Selects linear scale for the frequency axis.

Manual operation: See "Freq Axis (Lin Log)" on page 185
See "Freq (Lin Log)" on page 302

[SENSe:]FREQUency:CENTer <Frequency>

This command defines the receiver frequency for measurements in the frequency or time domain.

Parameters:

<Frequency>	0 to fmax
	Range: 0 Hz to fmax
	*RST: fmax /2

Example: FREQ:CENT 100MHz
Defines a receiver frequency of 100 MHz.

Manual operation: See "Continue at Rec Frequency" on page 159
See "Receiver Frequency" on page 162

[SENSe:]FREQUency:CENTer:STEP <StepSize>

This command defines the center frequency step size.

Parameters:

<StepSize>	Range: 1 to fmax
	*RST: 0.1 x
	Default unit: Hz

Example: FREQ:CENT:STEP 120 MHz

Manual operation: See ["Stepsize"](#) on page 179
See ["Manual"](#) on page 347

[SENSe:]FREQuency:MODE <Mode>

This command selects the scan mode.

Parameters:

<Mode>

CW

Selects fixed frequency scans.

Define the frequency with [\[SENSe:\]FREQuency:CENTer](#) on page 665.

SCAN

Selects the stepped scans in the frequency domain.

In the frequency domain, define the frequency with:

- [\[SENSe:\]FREQuency:START](#) on page 666
- [\[SENSe:\]FREQuency:STOP](#) on page 666
- [\[SENSe:\]SCAN<range>:START](#) on page 677
- [\[SENSe:\]SCAN<range>:STOP](#) on page 677
- [\[SENSe:\]FREQuency:SPAN](#) on page 825
- [\[SENSe:\]FREQuency:CENTer](#) on page 665

TDOMain

Selects time domain scans in the frequency domain. See [SCAN](#) on how to define the frequency.

Time domain scans are available with options R&S ESR-B50 and R&S ESR-K53.

*RST: TDOMain

Example:

FREQ:MODE TDOM

Selects time domain scans.

Manual operation: See ["Fixed Frequency"](#) on page 189
See ["Time Domain Scan \(On Off\)"](#) on page 191

[SENSe:]FREQuency:START <Start>

This command defines the start frequency for scans in the frequency domain.

Parameters:

<Start>

Range: 0 Hz to fmax

*RST: 0 Hz

Example:

FREQ:STAR 20MHz

Manual operation: See ["Start / Stop Frequency"](#) on page 180

[SENSe:]FREQuency:STOP <Stop>

This command defines the stop frequency for scans in the time domain.

Parameters:

<Stop> Range: 0 Hz to fmax
 *RST: fmax

Example: `FREQ:STOP 20MHz`

Manual operation: See "Start / Stop Frequency" on page 180

11.4.3 Configuring the Vertical Axis

<code>CALCulate<n>:UNIT:POWER</code>	667
<code>DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:BOTTom</code>	667
<code>DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing</code>	668
<code>INPut:ATTenuation</code>	668
<code>INPut:ATTenuation:AUTO</code>	668
<code>INPut:ATTenuation:PROTection[:STATe]</code>	669
<code>INPut:GAIN:AUTO</code>	669
<code>INPut:GAIN:STATe</code>	669
<code>INPut:IMPedance</code>	670

`CALCulate<n>:UNIT:POWER <Unit>`

This command selects the unit for the y-axis.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | DBPW_MHZ | DBUV | DBUV_MHZ |
 DBMV | DBMV_MHZ | DBUA | DBUA_MHZ | DBPT |
 DBPT_MHZ | DBUV_M | DBUV_MMHZ | DBUA_M |
 DBUA_MMHZ
 *RST: dB μ V

Example: `CALC:UNIT:POW DBM`
 Selects the unit dBm.

Manual operation: See "Unit" on page 182
 See "dBx/MHz" on page 182

`DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:BOTTom <Level>`

This command defines the minimum level displayed on the vertical diagram axis.

Parameters:

<Level> Minimum displayed level. The unit depends on the one you have selected.

Example: `DISP:TRAC:Y:BOT -20`
 The minimum grid level is set to -20 dBuV (pre-condition: the default unit has not been changed)

Manual operation: See "Grid Range / Grid Min Level" on page 183

DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing <ScalingType>

This command selects the scaling of the y-axis.

Suffix:

<n> Selects the measurement window.
 <t> irrelevant

Parameters:

<ScalingType> **LOGarithmic**
 Logarithmic scaling.
 LINear
 Linear scaling in %.
 LDB
 Linear scaling in dB.
 *RST: LOGarithmic

Example:

DISP:TRAC:Y:SPAC LIN
 Select a linear scale.

Manual operation: See "[Range Log 100 dB](#)" on page 317
 See "[Range Log 50 dB](#)" on page 317
 See "[Range Log 10 dB](#)" on page 318
 See "[Range Log 5 dB](#)" on page 318
 See "[Range Log 1 dB](#)" on page 318
 See "[Range Log Manual](#)" on page 318
 See "[Range Linear %](#)" on page 318
 See "[Range Lin. Unit](#)" on page 319

INPut:ATTenuation <Attenuation>

This command defines the attenuation level at the RF input.

To protect the input mixer, attenuation levels of 10 dB or less are possible only if you have turned the input protection off with [INPut:ATTenuation:PROTection\[:STATe\]](#).

Parameters:

<Attenuation> Range: 0 dB to 75 dB
 Increment: 5 dB
 *RST: 10 dB

Example:

INP:ATT 40dB
 Defines an attenuation level of 40 dB.

Manual operation: See "[RF Atten Manual](#)" on page 181

INPut:ATTenuation:AUTO <State>

This command turns automatic configuration of the attenuation on and off.

If on, the R&S ESR selects an attenuation that results in a good signal-to-noise ratio without overloading the receiver.

Parameters:

<State> ON | OFF
*RST: ON

Example:

INP:ATT:AUTO ON
Turns the auto ranging function on.

Manual operation: See "[Auto Range \(On Off\)](#)" on page 182

INPut:ATTenuation:PROTection[:STATe] <State>

This command turns the availability of attenuation levels of 10 dB or less on and off.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

INP:ATT:PROT ON

Manual operation: See "[10 dB Min](#)" on page 181

INPut:GAIN:AUTO <State>

Turns automatic selection of the preamplifier state on and off.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

:INP:GAIN:AUTO ON
Includes the preamplifier into the auto range function

Manual operation: See "[Auto Preamp \(On Off\)](#)" on page 182

INPut:GAIN:STATe <State>

This command turns the preamplifier on and off. (For the exact amplification value, see the data sheet).

Parameters:

<State> ON | OFF
*RST: OFF

Example:

INP:GAIN:STAT ON
Turns the preamplifier on.

Manual operation: See "[Preamp On/Off](#)" on page 181

INPut:IMPedance <Impedance>

This command selects the nominal input impedance.

75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω /50 Ω).

Parameters:

<Impedance> 50 | 75
 *RST: 50 Ω

Example: INP:IMP 75

Manual operation: See "[Input 50 \$\Omega\$ /75 \$\Omega\$](#) " on page 184

11.4.4 Selecting the Bandwidth

[SENSe:]BANDwidth:IF	670
[SENSe:]BANDwidth BWIDTH[:RESolution]	670
[SENSe:]BANDwidth BWIDTH[:RESolution]:AUTO	671
[SENSe:]BANDwidth BWIDTH[:RESolution]:TYPE	671

[SENSe:]BANDwidth:IF <Bandwidth>

This command defines the resolution bandwidth for IF analysis.

Parameters:

<Bandwidth> Resolution filter bandwidth with a 6 dB bandwidth in the range from 10 Hz to 100 kHz in steps of 1-3-10-....
 The available bandwidths depend on the current frequency span.
 *RST: 3 kHz

Example: BAND:IF 10KHZ
 Defines a resolution bandwidth of 10 kHz.

Manual operation: See "[IF Analysis RBW](#)" on page 185

[SENSe:]BANDwidth|BWIDTH[:RESolution] <Bandwidth>

This command defines the resolution bandwidth.

The available bandwidths depend on the selected filter type. For more information see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166.

A change of the resolution bandwidth automatically turns the coupling to the span off.

Parameters:

<Bandwidth> refer to data sheet
 *RST: (AUTO is set to ON)

- Example:** BAND 1 MHz
Sets the resolution bandwidth to 1 MHz
- Manual operation:** See "Res BW Manual" on page 184
See "Res BW CISPR / CISPR (6 dB)" on page 301
See "Res BW Mil Std/ MIL Std (6 dB)" on page 301
See "Res BW" on page 316
See "Res BW Manual" on page 361

[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State>

This command couples or decouples the resolution bandwidth to the selected frequency.

The resolution bandwidth is coupled to the frequency only if you have selected the Quasipeak, CISPR Average or CISPR RMS detector.

For more information see [Chapter 5.2.1, "Measurement Bandwidth"](#), on page 166.

Parameters:

<State> ON | OFF
*RST: ON

- Example:** BAND:AUTO OFF
Decouples the measurement bandwidth from the frequency range.

- Manual operation:** See "[CISPR RBW Uncoupled](#)" on page 184

[SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE <FilterType>

This command selects the type of resolution filter.

For detailed information on filters see [Chapter 6.2.6.3, "Selecting the Appropriate Filter Type"](#), on page 366 and [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367.

When changing the filter type, the next larger filter bandwidth is selected if the same filter bandwidth is not available for the new filter type.

5 Pole filters are not available when using the sweep type "FFT".

Parameters:

<FilterType> **NORMAL**
Gaussian filters
CFILTER
Channel filters
RRC
RRC filters
P5
5 Pole filters

CISPr (PULSe)

6 dB CISPR filter (commercial EMI standards)

Note: when the filter type is queried, the CISPR filter returns 'PULS'.

*RST: NORMal

Example: BAND:TYPE NORM

Manual operation: See "Filter Type" on page 184
 See "Filter Type" on page 301
 See "Res BW CISPR / CISPR (6 dB)" on page 301
 See "Res BW Mil Std/ MIL Std (6 dB)" on page 301

11.4.5 Controlling Inputs and Outputs

INPut:COUPling.....	672
INPut:TYPE.....	672

INPut:COUPling <CouplingType>

Toggles the RF input of the R&S ESR between AC and DC coupling.

Parameters:

<CouplingType> AC | DC
 *RST: AC

Example: INP:COUP DC**Manual operation:** See "Input (AC/DC)" on page 187**INPut:TYPE <Input>**

The command selects the signal source.

Parameters:

<Input> **INPUT1**
 Selects RF input 1.
INPUT2
 Selects RF input 2.
 *RST: INPUT1

Example: INP:TYPE INPUT1
Selects RF input 1.

Manual operation: See "Input (1 2)" on page 187
 See "Range 1 to 10" on page 191

11.4.6 Test Automation

- [General Scan Configuration](#).....673
- [Scan Table](#).....674
- [Peak Search](#).....678
- [Peak Lists](#).....681
- [Trace Configuration](#).....682
- [LISN Settings](#).....684

11.4.6.1 General Scan Configuration

[SENSe:]SWEep:COUNT	673
[SENSe:]SWEep:COUNT:CURRent	673
TRACe<n>:FEED:CONTRol<t>	674
TRACe<n>:POINts	674

[SENSe:]SWEep:COUNT <SweepCount>

This command defines the number of scans performed during a single sweep.

Parameters:

<SweepCount>	Range:	0 to 32767
	*RST:	0

Example:

```
SWE:COUN 64
Sets the number of sweeps to 64.
INIT:CONT OFF
Switches to single-sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
```

Manual operation: See "[Scan Count](#)" on page 189

[SENSe:]SWEep:COUNT:CURRent

This command queries the number of scans that have started in single scan mode with more than one scan (`SENSe:SWEep:COUNT > 1`).

Example:

```
SWE:COUNT 64
sets scan count to 64
INIT:CONT OFF
switches to single scan mode
INIT
starts a scan (without waiting for the scan end!)
SWE:COUN:CURR?
queries the number of started scans
```

Manual operation: See "[Scan Count](#)" on page 189

TRACe<n>:FEED:CONTrol<t> <Occasion>

This command turns block data transmission during a scan on and off.

The availability of data is reported in the STATus:OPERation-Register.

The block size depends on scan time and the upper limit defined by [TRACe<n>:POINTs](#) on page 674.

Suffix:

<n> irrelevant
<t> Selects a trace.

Parameters:

<Occasion> **ALWays**
Block data transmission is on.
NEVer
Block data transmission is off.
*RST: NEVer

Example:

TRAC:FEED:CONT ALW
Switches to single sweep mode.

TRACe<n>:POINTs LIMit, <Points>

This command defines the maximum number of measurement points that are transferred in one block after using `TRAC? SCAN`.

The total amount of bytes which is transferred depends on the number of active traces.

Suffix:

<n> irrelevant

Parameters:

<Points> Range: 1 to 10000
*RST: 1000

Example:

TRAC:POIN LIM, 8000
Transfers a maximum of 8000 measurement values per trace with a single query.

11.4.6.2 Scan Table

[SENSe:]SCAN<range>:BANDwidth:RESolution	675
[SENSe:]SCAN<range>:INPut:ATTenuation	675
[SENSe:]SCAN<range>:INPut:ATTenuation:AUTO	675
[SENSe:]SCAN<range>:INPut:GAIN:AUTO	676
[SENSe:]SCAN<range>:INPut:GAIN[:STATE]	676
[SENSe:]SCAN<range>:INPut:TYPE	676
[SENSe:]SCAN:RANGes[:COUNT]	676
[SENSe:]SCAN<range>:START	677
[SENSe:]SCAN<range>:STEP	677

[SENSe:]SCAN<range>:STOP.....	677
[SENSe:]SCAN<range>:TIME.....	678
[[SENSe:]SWEep:SPACing.....	678

[SENSe:]SCAN<range>:BANDwidth:RESolution <Bandwidth>

This command defines the measurement bandwidth for a particular scan range.

Suffix:

<range> 1...10
Selects the scan range.

Parameters:

<Bandwidth> Range: 10 Hz to 10 MHz
 *RST: 9 kHz

Example:

SCAN4 : BAND : RES 1MHz
Defines a measurement bandwidth of 1 MHz for the 4th scan range.

[SENSe:]SCAN<range>:INPut:ATTenuation <Attenuation>

This command defines the attenuation level for a particular scan range.

Suffix:

<range> 1...10
Selects the scan range.

Parameters:

<Attenuation> dBmin to dBmax
 Range: Att(min) to Att(max)
 *RST: 10 dB

Example:

SCAN4 : INP : ATT 30dB
Defines an attenuation level of 30 dB for the 4th scan range.

[SENSe:]SCAN<range>:INPut:ATTenuation:AUTO <State>

This command turns auto ranging in a particular scan range on and off.

Suffix:

<range> 1...10
Selects the scan range.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

SCAN4 : INP : ATT : AUTO OFF
Turns off auto ranging in the 4th scan range.

[SENSe:]SCAN<range>:INPut:GAIN:AUTO <State>

This command includes the preamplifier in the autoranging function of the selected receiver scan range.

Parameters:

<State> **ON**
 OFF
 *RST: OFF

Example:

```
:SCAN1:INP:GAIN:AUTO ON
```

Includes the preamplifier in the autoranging function for scan range 1

[SENSe:]SCAN<range>:INPut:GAIN[:STATE] <State>

This command turns the preamplifier in a particular scan range on and off.

Suffix:

<range> 1...10
 Selects the scan range.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
SCAN4:INP:GAIN:STAT ON
```

Turns on the preamplifier for the 4th scan range.

[SENSe:]SCAN<range>:INPut:TYPE <Input>

This command selects the signal source for a particular scan range.

Suffix:

<range> 1...10
 Selects the scan range.

Parameters:

<Input> **INPUT1**
 Selects RF input 1.
 INPUT2
 Selects RF input 2.
 *RST: INPUT1

Example:

```
SCAN4:INP:TYPE INPUT2
```

Selects RF input 2 as the signal source for the 4th scan range.

[SENSe:]SCAN:RANGes[:COUNT] <Ranges>

This command defines the number of scan ranges.

Parameters:

<Ranges> Number of ranges in the scan table.
 If you enter the value "0", the R&S ESR ignores the configuration of the scan table. instead, it performs the measurement based on the current receiver configuration.

Range: 0 to 10

*RST: 0

Example:

SCAN:RANG:COUN 4

Defines 4 scan ranges.

[SENSe:]SCAN<range>:START <Frequency>

This command defines the start frequency of a particular scan range.

Suffix:

<range> 1...10
 Selects the scan range.

Parameters:

<Frequency> Range: fmin to fmax

*RST: 150 kHz

Example:

SCAN4:STAR 30MHz

Defines a start frequency of 30 MHz for the 4th scan range.

[SENSe:]SCAN<range>:STEP <Frequency>

This command defines the frequency stepsize within a particular scan range.

Suffix:

<range> 1...10
 Selects the scan range.

Parameters:

<Frequency> Range: fmin to fmax

*RST: 4 kHz

Example:

SCAN4:STEP 1MHz

Defines a step size of 1 MHz for the 4th scan range.

[SENSe:]SCAN<range>:STOP <Frequency>

This command defines the stop frequency of a particular scan range.

Suffix:

<range> 1...10
 Selects the scan range.

Parameters:

<Frequency> Range: fmin to fmax

*RST: 30 MHz

Example: `SCAN4:STOP 500MHz`
 Defines a stop frequency of 500 MHz for the 4th scan range.

[SENSe:]SCAN<range>:TIME <Time>

This command defines the measurement time for a particular scan range.

Note that for time domain scans (R&S ESR-K53), the available measurement time range depends on the resolution bandwidth.

Suffix:

<range> 1...10
 Selects the scan range.

Parameters:

<Time> Range: 10 μ s to 100 s
 *RST: 1 ms

Example: `SCAN4:TIME 1 ms`
 Defines a measurement time of 1 ms for the 4th scan range.

[[SENSe:]SWEep:SPACing <Spacing>

This command selects the frequency step mode.

Note that the command has no effect on the scale and display of the frequency axis.

Parameters:

<Spacing> **LINear**
 Linear frequency steps with a fix stepsize.

LOGarithmic
 Logarithmic frequency steps with the stepsize being a percent-
 age of the current frequency.

AUTO
 The stepsize is coupled to the resolution bandwidth to get the
 best measurement results.

*RST: LINear

Example: `SWE:SPAC LOG`
 Selects logarithmic frequency steps.

Manual operation: See "[Step Mode](#)" on page 190

11.4.6.3 Peak Search

<code>CALCulate<n>:MARKer<m>:PEXCursion</code>	679
<code>CALCulate<n>:PEAKsearch PSEarch:ADD</code>	679
<code>CALCulate:PEAKsearch PSEarch:CLEAr[:IMMEDIATE]</code>	679
<code>CALCulate<n>:PEAKsearch PSEarch[:IMMEDIATE]</code>	680
<code>CALCulate<n>:PEAKsearch PSEarch:MARGIn</code>	680

CALCulate<n>:PEAKsearch PSEArch:METHod.....	680
CALCulate<n>:PEAKsearch PSEArch:SUBRanges.....	680
CALCulate<n>:PEAKsearch PSEArch:SUBRanges:PCOunt.....	681

CALCulate<n>:MARKer<m>:PEXCursion <Excursion>

This command defines the peak excursion

The peak excursion sets the requirements for a peak to be detected during a peak search.

Suffix:

<n>	Selects the measurement window.
<m>	irrelevant

Parameters:

<Excursion>	The peak excursion is the distance to a trace maximum that must be attained before a new maximum is recognized, or the distance to a trace minimum that must be attained before a new minimum is recognized
	*RST: 6 dB

Example:

```
CALC:MARK:PEXC 10dB
Defines peak excursion 10 dB.
```

Manual operation: See ["Peak Excursion"](#) on page 193
See ["Peak Excursion"](#) on page 207

CALCulate<n>:PEAKsearch|PSEArch:ADD <Frequency>

This command manually adds a particular frequency to the peak list, regardless if the level threshold conditions have been fulfilled for that frequency.

Note that the frequency has to be in the displayed frequency range.

Suffix:

<n>	irrelevant
-----	------------

Parameters:

<Frequency>	Numeric value in Hz. The range depends on the measurement.
-------------	--

Example:

```
CALC:PEAK:ADD 93MHz
Adds the frequency 93 MHz to the peak list.
```

Manual operation: See ["Insert Frequency"](#) on page 194

CALCulate:PEAKsearch|PSEArch:CLEAr[:IMMEDIATE]

This command deletes the contents of the peak list.

Example:

```
CALC:PEAK:CLE
Deletes the contents of the peak list.
```

Usage: Event

CALCulate<n>:PEAKsearch|PSEarch[:IMMEDIATE]

This command initiates a peak search and creates a peak list.

Example: CALC:PEAK
 Initiates a peak search.

Usage: Event

CALCulate<n>:PEAKsearch|PSEarch:MARGIN <Margin>

This command defines a margin for the peak search.

Suffix:
<n> irrelevant

Parameters:
<Margin> Range: -200 dB to 200 dB
 *RST: 6 dB

Example: CALC:PEAK:MARG 5 dB

Manual operation: See "[Margin](#)" on page 193
 See "[Margin](#)" on page 264
 See "[Margin](#)" on page 293

CALCulate<n>:PEAKsearch|PSEarch:METHOD <Method>

This command selects the way the R&S ESR creates a peak list.

Suffix:
<n> irrelevant

Parameters:
<Method> **SUBRange**
 Divides the scan range into smaller subranges and looks for a particular number of peaks in each subrange.
 PEAK
 Looks for a particular number of peaks over the complete scan range.
 *RST: PEAK

Example: CALC:PEAK:METH SUBR
 Divides the scan range into smaller subranges for the peak search.

Manual operation: See "[Peak Search Mode \(Peaks Subranges\)](#)" on page 192

CALCulate<n>:PEAKsearch|PSEarch:SUBRANGES <Peaks> | <Subranges>

The effects of this command depend on the peak search mode that you have selected.

Suffix:	
<n>	irrelevant
Parameters:	
<Peaks>	If you have selected the "Peaks" search mode, the command defines the number of peaks to look for during the peak search. Range: 1 to 500 *RST: 50
<Subranges>	If you have selected the Subranges search mode, the command defines the number of subranges that the scan range is split into. Range: 1 to 50 *RST: 10
Example:	<pre>CALC:PEAK:METH SUBR CALC:PEAK:SUBR 25</pre> Selects a subrange search and defines 25 subranges.
Manual operation:	See "No Of Peaks" on page 193 See "No of Subranges / Peaks per Subrange" on page 193

CALCulate<n>:PEAKsearch|PSEarch:SUBRanges:PCOunt <Peaks>

This command defines the number of peaks to be found in each subrange.

Before you can use this command, you have to select the subrange peak search mode with `CALCulate<n>:PEAKsearch|PSEarch:METHOD`.

Parameters:	
<Peaks>	Number of peaks in one subrange. Note that the maximum number of peaks is 500. Thus, the maximum number of peaks per subrange depends on the number of subranges you have defined. Range: 1 to depends on the number of subranges *RST: 1

Example:

```
CALC:PSE:METH SUBR
CALC:PSE:SUBR 20
CALC:PSE:SUBR:PCO 5
```

Looks for 5 peaks in each of 20 subranges.

Manual operation: See "No of Subranges / Peaks per Subrange" on page 193

11.4.6.4 Peak Lists

Commands useful to read peak lists described elsewhere:

- `FORMAT:DEXPort:DSEPARATOR` on page 850

<code>DISPlay[:WINDow<n>]:TRACe<t>:SYMBOL</code>	682
<code>MMEMory:STORE:FINAl</code>	682
<code>MMEMory:STORE:PEAKlist</code>	682

DISPlay[:WINDow<n>]:TRACe<t>:SYMBol <Symbol>

This command turns the peak labels in the diagram on and off.

Parameters:

<Symbol>	CROSSs Each peak is labelled by a symbol. The symbol and its color depend on the trace the peak is on.
	OFF Peak labels are off.
	*RST: OFF

Example: DISP:TRAC:SYMB CROSS

Manual operation: See "[Symbols \(On Off\)](#)" on page 195

MMEMory:STORe:FINal <FileName>

This command exports the contents of the final measurement peak list to a file in ASCII format.

Parameters:

<FileName> String containing the file name. The extension of the file is *.dat.

Example: :MMEM:STOR:FIN 'A:\TEST.DAT'

Usage: Event

Manual operation: See "[Peak List Export](#)" on page 195

MMEMory:STORe:PEAKlist <FileName>

This command exports the contents of a peak list to a file in ASCII format.

Parameters:

<FileName> String containing the file name. The extension of the file is *.dat.

Example: MMEM:STOR:PEAK 'D:\TEST.DAT'

Manual operation: See "[Peak List Export](#)" on page 195

11.4.6.5 Trace Configuration

Commands useful to configure traces and final measurements described elsewhere:

- [\[SENSe:\] FMEasurement:AUTO](#) on page 643
- [\[SENSe:\] FMEasurement:TIME](#) on page 643
- [\[SENSe:\] DETector<t>: FMEasurement](#) on page 642

[SENSe:][WINDow:]DETector<trace>[:FUNCTION]	683
DISPlay[:WINDow<n>]:TRACe<t>:MODE	683

[SENSe:][WINDow:]DETEctor<trace>[:FUNction] <Detector>

This command selects the detector for the scan.

Suffix:

<trace> 1...6
Selects the trace.

Parameters:

<Detector> NEGative | POSitive | RMS | AVERAge | QPEak | CAverage |
CRMS
*RST: APEak

Example:

DET RMS
Selects the RMS detector.

Manual operation: See "Trace 1 to 6" on page 196

DISPlay[:WINDow<n>]:TRACe<t>:MODE <Mode>

This command defines the type of display and the evaluation of the traces. WRITE corresponds to the Clr/Write mode of manual operation. The trace is switched off (= BLANK in manual operation) with `DISPlay[:WINDow<n>]:TRACe<t>[:STATe]`.

The number of measurements for AVERAge, MAXHold and MINHold is defined with the `[SENSe:]AVERAge<n>:COUNT` or `[SENSe:]SWEep:COUNT` commands. It should be noted that synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

If calculation of average values is active, selection between logarithmic and linear averaging is possible. For more detail see `[SENSe:]AVERAge<n>:TYPE` on page 852.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<Mode> For more information on trace modes see [Chapter 5.2.3, "Trace Modes"](#), on page 171.

AVERAge

Average trace mode.

BLANK

Blank trace.

MAXHold

Maximum value trace.

MINHold

Minimum value trace.

VIEW

Frozen trace.

WRITe

Clear write trace mode.

Example:

```
INIT:CONT OFF
```

Switching to single sweep mode.

```
SWE:COUN 16
```

Sets the number of measurements to 16.

```
DISP:TRAC3:MODE MAXH
```

Switches on the calculation of the maximum peak for trace 3.

```
INIT;*WAI
```

Starts the measurement and waits for the end of the 16 sweeps.

Manual operation:

See ["Clear Write"](#) on page 171

See ["Max Hold"](#) on page 171

See ["Min Hold"](#) on page 172

See ["View"](#) on page 172

See ["Trace 1 to 6"](#) on page 196

See ["Trace 1 - 6"](#) on page 199

See ["Average"](#) on page 390

11.4.6.6 LISN Settings

[SENSe:]FMEasurement:LISN:FILTer:HPAS[:STATe]	684
[SENSe:]FMEasurement:LISN:PHASe	684
[SENSe:]FMEasurement:LISN[:TYPE]	685
INPut:LISN:FILTer:HPAS[:STATe]	685
INPut:LISN:PHASe	686
INPut:LISN[:TYPE]	686

[SENSe:]FMEasurement:LISN:FILTer:HPAS[:STATe] <State>

This command turns the 150 kHz highpass filter of the ENV216 network for the final measurement on and off.

The command is available for the R&S ENV216 network.

Parameters:

```
<State>          ON | OFF
                 *RST:    ON
```

Example:

```
FME:LISN:FILT:HPAS ON
```

Turns on the highpass filter.

Manual operation: See ["150 kHz Highpass Filter"](#) on page 198

[SENSe:]FMEasurement:LISN:PHASe <Phase>, [<Phase>]

This command selects the phase of the network used for the final measurement.

Parameters:

```
<Phase>          L1
```

L2

Available for networks with four phases (R&S ESH2Z5, R&S ENV4200 and R&S ENV432)

L3

Available for networks with four phases (R&S ESH2Z5, R&S ENV4200 and R&S ENV432)

N

*RST: L1

Example: FME:LISN:PHAS L1,N

Manual operation: See "[Final Test Phase](#)" on page 197

[SENSe:]FMEasurement:LISN[:TYPE] <Type>

This command turns automatic control of the network used for the final measurement on and off. It also selects the type of network in use.

Parameters:

<Type>

ENV216

R&S ENV 216: two phases and highpass are controllable.

ENV432

R&S ENV 432: four phases are controllable.

ENV4200

R&S ENV 4200: four phases are controllable.

ESH2Z5

R&S ESH2-Z5: four phases and protective earth are controllable.

ESH3Z5

R&S ESH3-Z5: two phases and protective earth are controllable.

FOURphase

R&S ESH2-Z5: four phases and protective earth are controllable.

OFF

Turns off remote control of the LISN.

TWOPhase

R&S ESH3-Z5: two phases and protective earth are controllable.

*RST: OFF

Example: FME:LISN TWOP

Turns automatic control of the network on and selects the R&S ESH3-Z5 network.

Manual operation: See "[LISN Type](#)" on page 197

INPut:LISN:FILTer:HPAS[:STATe] <State>

This command turns the 150 kHz highpass filter of the ENV216 network for the pre-measurement on and off.

The command is available for the R&S ENV216 network.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

INP:LISN:FILT:HPAS ON
Turns on the highpass filter.

Manual operation: See "[150 kHz Highpass Filter](#)" on page 198
See "[LISN Control](#)" on page 302

INPut:LISN:PHASe <Phase>, [<Phase>]

This command selects the phase of the network used for the premeasurement.

Parameters:

<Phase> **L1**
L2
Available for networks with four phases (R&S ESH2Z5, R&S ENV4200 and R&S ENV432)
L3
Available for networks with four phases (R&S ESH2Z5, R&S ENV4200 and R&S ENV432)
N
*RST: L1

Example:

INP:LISN:PHAS L1, L2
Selects phases L1 and L2 for the scan.

Manual operation: See "[Prescan Phase](#)" on page 197
See "[LISN Control](#)" on page 302

INPut:LISN[:TYPE] <Type>

This command turns automatic control of the network used for the premeasurement on and off. It also selects the type of network in use.

Parameters:

<Type> **ENV216**
R&S ENV 216: two phases and highpass are controllable.
ENV432
R&S ENV 432: four phases are controllable.
ENV4200
R&S ENV 4200: four phases are controllable.
ESH2Z5
R&S ESH2-Z5: four phases and protective earth are controllable.
ESH3Z5
R&S ESH3-Z5: two phases and protective earth are controllable.

FOURphase

R&S ESH2-Z5: four phases and protective earth are controllable.

OFF

Turns off remote control of the LISN.

TWOPhase

R&S ESH3-Z5: two phases and protective earth are controllable.

*RST: OFF

Example:

INP:LISN TWOP

Turns automatic control of the network on and selects the R&S ESH3-Z5 network.

Manual operation: See "LISN Type" on page 197
See "LISN Control" on page 302

11.4.7 Working with Markers

- [Configuring Marker Functionality](#)..... 687
- [Using Markers](#)..... 691
- [Using Delta Markers](#)..... 697

11.4.7.1 Configuring Marker Functionality

CALCulate<n>:MARKer<m>:COUPled[:STATe]	687
CALCulate<n>:MARKer<m>:FUNCTion:CENTer	688
CALCulate<n>:MARKer<m>:FUNCTion:CSTep	688
CALCulate<n>:MARKer<m>:FUNCTion:ZOOM	688
CALCulate<n>:MARKer<m>:SCOUPled[:STATe]	689
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT	689
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT	689
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]	690
DISPlay[:WINDow<n>]:MINFo:STATe	690

CALCulate<n>:MARKer<m>:COUPled[:STATe] <State>

This command couples or decouples the receiver frequency to the current marker frequency.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CALC:MARK:COUP ON

Couples the frequency to the marker frequency.

Manual operation: See "Marker Track" on page 204

CALCulate<n>:MARKer<m>:FUNction:CENTer

This command matches the center or receiver frequency to the frequency of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

CALC:MARK2:FUNC:CENT

Sets the center frequency to the frequency of marker 2.

Manual operation:

See ["Tune to Marker"](#) on page 203

See ["Center =Mkr Freq \(span > 0\)"](#) on page 412

CALCulate<n>:MARKer<m>:FUNction:CSTep

This command matches the frequency step size to the current marker frequency.

The command turns delta markers into normal markers.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

CALC:MARK3:FUNC:CST

Sets the center frequency to the same value as the frequency of marker 3.

Usage:

Event

Manual operation:

See ["Marker to Stepsize"](#) on page 204

CALCulate<n>:MARKer<m>:FUNction:ZOOM <Range>

This command defines the range to be zoomed around marker 1. Marker 1 is activated first, if necessary.

The marker frequency becomes the new receiver or center frequency and the span is adjusted according to the zoom factor.

Note that you should perform a complete measurement with synchronization to the end of the measurement. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Range> <numeric_value>

Example: INIT:CONT OFF
 Switches to single sweep mode
 CALC:MARK:FUNC:ZOOM 1kHz; *WAI
 Activates zooming and waits for its end.

Manual operation: See "[Marker Zoom \(span > 0\)](#)" on page 408

CALCulate<n>:MARKer<m>:SCOupled[:STATe] <State>

This command couples or decouples the marker frequency to the scan range settings.

Parameters:

<State> ON | OFF
 *RST: ON

Example: CALC:MARK:SCO ON
 Couples the scan range settings to the marker frequency.

Manual operation: See "[Settings Coupled](#)" on page 204

CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <Limit>

This command sets the left limit of the marker search range.

If the power measurement in zero span is active, this command limits the evaluation range to the trace.

Note: The function is only available if the search limit for marker and delta marker is switched on (see [CALCulate<n>:MARKer<m>:X:SLIMits\[:STATe\]](#)).

Suffix:

<n> Selects the measurement window.
 <m> irrelevant

Parameters:

<Limit> The value range depends on the span or sweep time.
 The unit is Hz for frequency domain measurements and s for
 time domain measurements.
 Range: 0 to MAX
 *RST: left diagram border

Example: CALC:MARK:X:SLIM ON
 Switches the search limit function on.
 CALC:MARK:X:SLIM:LEFT 10MHz
 Sets the left limit of the search range to 10 MHz.

Manual operation: See "[Left Limit](#)" on page 206
 See "[Left Limit](#)" on page 297

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <Limit>

This command sets the right limit of the marker search range.

If the power measurement in zero span is active, this command limits the evaluation range to the trace.

Note: The function is only available if the search limit for marker and delta marker is switched on (`CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]`).

Suffix:

<n> Selects the measurement window.
 <m> irrelevant

Parameters:

<Limit> The value range depends on the span or sweep time.
 The unit is Hz for frequency domain measurements and s for
 time domain measurements.
 Range: 0 to MAX
 *RST: left diagram border

Example:

```
CALC:MARK:X:SLIM ON
Switches the search limit function on.
CALC:MARK:X:SLIM:RIGH 20MHz
Sets the right limit of the search range to 20 MHz.
```

Manual operation: See "[Right Limit](#)" on page 206
 See "[Right Limit](#)" on page 297

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

This command turns marker search limits on and off.

If the power measurement in zero span is active, this command limits the evaluation range on the trace.

Suffix:

<n> Selects the measurement window.
 <m> marker

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:MARK:X:SLIM ON
Switches on search limitation.
```

Manual operation: See "[Search Limits](#)" on page 206
 See "[Search Lim Off](#)" on page 207
 See "[Limits \(On/Off\)](#)" on page 296

DISPlay[:WINDow<n>]:MINFo:STATe <State>

This command turns the marker info field in the diagram on and off.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

DISP:MINF:STAT ON
 Turns the marker info field on.

Manual operation: See "[Marker Info \(On Off\)](#)" on page 203

11.4.7.2 Using Markers

CALCulate<n>:MARKer<m>:AOFF.....	691
CALCulate<n>:MARKer<m>:MAXimum:LEFT.....	691
CALCulate<n>:MARKer<m>:MAXimum:NEXT.....	692
CALCulate<n>:MARKer<m>:MAXimum[:PEAK].....	692
CALCulate<n>:MARKer<m>:MAXimum:RIGHT.....	693
CALCulate<n>:MARKer<m>:MINimum:LEFT.....	693
CALCulate<n>:MARKer<m>:MINimum:NEXT.....	693
CALCulate<n>:MARKer<m>:MINimum[:PEAK].....	694
CALCulate<n>:MARKer<m>:MINimum:RIGHT.....	694
CALCulate<n>:MARKer<m>[:STATE].....	695
CALCulate<n>:MARKer<m>:TRACe.....	695
CALCulate<n>:MARKer<m>:X.....	695
CALCulate<n>:MARKer<m>:Y.....	696

CALCulate<n>:MARKer<m>:AOFF

This command all markers off, including delta markers and marker measurement functions.

Suffix:

<n> Selects the measurement window.
 <m> depends on mode
 irrelevant

Example:

CALC:MARK:AOFF
 Switches off all markers.

Usage:

Event

Manual operation:

See "[All Marker Off](#)" on page 203
 See "[Marker Configuration](#)" on page 303

CALCulate<n>:MARKer<m>:MAXimum:LEFT

This command positions a marker to the next smaller trace maximum on the left of the current position (i.e. in descending X values).

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:	
<n>	Selects the measurement window.
<m>	Selects the marker.
Example:	<pre>CALC:MARK2:MAX:LEFT</pre> Positions marker 2 to the next lower maximum value to the left of the current value.
Usage:	Event
Manual operation:	See "Next Mode" on page 205

CALCulate<n>:MARKer<m>:MAXimum:NEXT

This command positions the marker to the next smaller trace maximum.

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:	
<n>	Selects the measurement window.
<m>	Selects the marker.
Example:	<pre>CALC:MARK2:MAX:NEXT</pre> Positions marker 2 to the next lower maximum value.
Usage:	Event
Manual operation:	See "Next Peak" on page 205 See "Next Mode" on page 205

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

This command positions the marker on the current trace maximum.

The corresponding marker is activated first or switched to the marker mode.

If no maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:	
<n>	Selects the measurement window.
<m>	depends on mode Selects the marker.
Example:	<pre>CALC:MARK2:MAX</pre> Positions marker 2 to the maximum value of the trace.
Usage:	Event
Manual operation:	See "Peak" on page 205

CALCulate<n>:MARKer<m>:MAXimum:RIGHT

This command positions a marker to the next smaller trace maximum on the right of the current value (i.e. in ascending X values).

If no next smaller maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:MAX:RIGH`

Positions marker 2 to the next lower maximum value to the right of the current value.

Usage: Event

Manual operation: See "[Next Mode](#)" on page 205

CALCulate<n>:MARKer<m>:MINimum:LEFT

This command positions a marker to the next higher trace minimum on the left of the current value (i.e. in descending X direction).

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:MIN`

Positions marker 2 to the minimum value of the trace.

`CALC:MARK2:MIN:LEFT`

Positions marker 2 to the next higher minimum value to the left of the current value.

Usage: Event

Manual operation: See "[Next Mode](#)" on page 205

CALCulate<n>:MARKer<m>:MINimum:NEXT

This command positions a marker to the next higher trace minimum.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:MARK2:MIN`
 Positions marker 2 to the minimum value of the trace.
 `CALC:MARK2:MIN:NEXT`
 Positions marker 2 to the next higher maximum value.

Usage: Event

Manual operation: See "Next Min" on page 205
 See "Next Mode" on page 205

CALCulate<n>:MARKer<m>:MINimum[:PEAK]

This command positions the marker on the current trace minimum.

The corresponding marker is activated first or switched to marker mode, if necessary.

If no minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> depends on mode
 Selects the marker.

Example: `CALC:MARK2:MIN`
 Positions marker 2 to the minimum value of the trace.

Usage: Event

Manual operation: See "Min" on page 205

CALCulate<n>:MARKer<m>:MINimum:RIGHT

This command positions a marker to the next higher trace minimum on the right of the current value (i.e. in ascending X direction).

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example: `CALC:MARK2:MIN`
 Positions marker 2 to the minimum value of the trace.
 `CALC:MARK2:MIN:RIGH`
 Positions marker 2 to the next higher minimum value to the right
 of the current value.

Usage: Event

Manual operation: See "Next Mode" on page 205

CALCulate<n>:MARKer<m>[:STATe] <State>

This command turns markers on and off.

If the corresponding marker number is currently active as a deltamarker, it is turned into a normal marker.

Suffix:

<n> Selects the measurement window.
 <m> depends on mode
 Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MARK3 ON
 Switches on marker 3 or switches to marker mode.

Manual operation: See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201
 See "[Marker Wizard](#)" on page 202

CALCulate<n>:MARKer<m>:TRACe <Trace>

This command selects the trace a marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

If necessary, the corresponding marker is switched on prior to the assignment.

Suffix:

<n> Selects the measurement window.
 <m> depends on mode
 Selects the marker.

Parameters:

<Trace> **1 ... 6**
 Trace number the marker is positioned on.

Example:

CALC:MARK3:TRAC 2
 Assigns marker 3 to trace 2.

Manual operation: See "[Marker to Trace](#)" on page 202
 See "[Marker Wizard](#)" on page 202
 See "[Marker Configuration](#)" on page 303

CALCulate<n>:MARKer<m>:X <Position>

This command positions a marker on a particular coordinate on the x-axis.

If marker 2, 3 or 4 is selected and used as delta marker, it is switched to marker mode.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Position> Numeric value that defines the marker position on the x-axis. The unit is either Hz (frequency domain) or s (time domain) or dB (statistics).

Range: The range depends on the current x-axis range.

Example:

```
CALC:MARK2:X 1.7MHz
```

Positions marker 2 to frequency 1.7 MHz.

Manual operation: See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201

CALCulate<n>:MARKer<m>:Y <MarkerPosition>

This command queries the measured value of a marker.

If necessary, the command activates the marker or turns a delta marker into a normal marker.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

The unit of results depends on the result display and the unit you have selected.

In the default setting, the output is made depending on the unit determined with `CALCulate<n>:UNIT:POWER`; only with linear level scaling the output is in %.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<MarkerPosition> Defines the vertical marker position in the persistence spectrum result display.

Return values:

<Result> The measured value of the selected marker is returned. In I/Q Analyzer mode, if the result display configuration "Real/Imag (I/Q)" is selected, this query returns the Real (Q) value of the marker first, then the Imag (I) value.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK2 ON
Switches marker 2.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK2:Y?
Outputs the measured value of marker 2.
In I/Q Analyzer mode, for "Real/Imag (I/Q)", for example:
1.852719887E-011,0
```

Manual operation: See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201

11.4.7.3 Using Delta Markers

CALCulate<n>:DELTamarker<m>:AOFF.....	697
CALCulate<n>:DELTamarker<m>:LINK.....	697
CALCulate<n>:DELTamarker<m>:MAXimum:LEFT.....	698
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT.....	698
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK].....	699
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT.....	699
CALCulate<n>:DELTamarker<m>:MINimum:LEFT.....	699
CALCulate<n>:DELTamarker<m>:MINimum:NEXT.....	700
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK].....	700
CALCulate<n>:DELTamarker<m>:MINimum:RIGHT.....	700
CALCulate<n>:DELTamarker<m>:MODE.....	701
CALCulate<n>:DELTamarker<m>[:STATE].....	701
CALCulate<n>:DELTamarker<m>:TRACe.....	701
CALCulate<n>:DELTamarker<m>:X.....	702
CALCulate<n>:DELTamarker<m>:X:RELative?.....	702
CALCulate<n>:DELTamarker<m>:Y.....	703

CALCulate<n>:DELTamarker<m>:AOFF

This command turns all active delta markers off.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example:

```
CALC:DELT:AOFF
Switches off all delta markers.
```

Manual operation: See "[Marker Configuration](#)" on page 303

CALCulate<n>:DELTamarker<m>:LINK <State>

This command links delta marker 1 to marker 1.

If you change the horizontal position of the marker, so does the delta marker.

Suffix:

<n> Selects the measurement window.
 <m> 1
 irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC:DELT:LINK ON

Manual operation: See "[Link Mkr1 and Delta1](#)" on page 408

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT

This command positions the delta marker to the next smaller trace maximum on the left of the current value (i.e. descending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example:

CALC:DELT:MAX:LEFT

Sets delta marker 1 to the next smaller maximum value to the left of the current value.

Manual operation: See "[Next Mode](#)" on page 205

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT

This command positions the delta marker to the next smaller trace maximum. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Example:

CALC:DELT2:MAX:NEXT

Sets delta marker 2 to the next smaller maximum value.

Manual operation: See "[Next Peak](#)" on page 205
 See "[Next Mode](#)" on page 205

CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]

This command positions the delta marker to the current trace maximum. If necessary, the corresponding delta marker is activated first.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT3:MAX`

Sets delta marker 3 to the maximum value of the associated trace.

Manual operation: See "[Peak](#)" on page 205

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT

This command positions the delta marker to the next smaller trace maximum on the right of the current value (i.e. ascending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT:MAX:RIGH`

Sets delta marker 1 to the next smaller maximum value to the right of the current value.

Manual operation: See "[Next Mode](#)" on page 205

CALCulate<n>:DELTamarker<m>:MINimum:LEFT

This command positions the delta marker to the next higher trace minimum on the left of the current value (i.e. descending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT:MIN:LEFT`

Sets delta marker 1 to the next higher minimum to the left of the current value.

Manual operation: See "[Next Mode](#)" on page 205

CALCulate<n>:DELTamarker<m>:MINimum:NEXT

This command positions the delta marker to the next higher trace minimum. The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT2:MIN:NEXT`

Sets delta marker 2 to the next higher minimum value.

Manual operation: See "Next Min" on page 205
See "Next Mode" on page 205

CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]

This command positions the delta marker to the current trace minimum. The corresponding delta marker is activated first, if necessary.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT3:MIN`

Sets delta marker 3 to the minimum value of the associated trace.

Manual operation: See "Min" on page 205

CALCulate<n>:DELTamarker<m>:MINimum:RIGHT

This command positions the delta marker to the next higher trace minimum on the right of the current value (i.e. ascending X values). The corresponding delta marker is activated first, if necessary.

If no next higher minimum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT:MIN:RIGH`

Sets delta marker 1 to the next higher minimum value to the right of the current value.

Manual operation: See "Next Mode" on page 205

CALCulate<n>:DELTamarker<m>:MODE <Mode>

This command selects the delta marker mode.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<Mode> **ABSolute**
 Delta marker position in absolute terms.
RELative
 Delta marker position in relation to a reference marker.
 *RST: REL

Example:

CALC:DELT:MODE ABS
 Absolute delta marker position.

CALCulate<n>:DELTamarker<m>[:STATE] <State>

This command turns delta markers on and off.

If the corresponding marker was a normal marker, it is turned into a delta marker.

No suffix at DELTmarker turns on delta marker 1.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT1 ON
 Switches marker 1 to delta marker mode.

Manual operation: See ["Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta"](#) on page 201
 See ["Marker Wizard"](#) on page 202

CALCulate<n>:DELTamarker<m>:TRACe <TraceNumber>

This command selects the trace a delta marker is positioned on.

The corresponding trace must have a trace mode other than "Blank".

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<TraceNumber> **1 ... 6**
Trace number the marker is positioned on.

Example:

`CALC:DELT3:TRAC 2`
Assigns delta marker 3 to trace 2.

Manual operation:

See "[Marker to Trace](#)" on page 202
See "[Marker Wizard](#)" on page 202
See "[Marker Configuration](#)" on page 303

CALCulate<n>:DELTamarker<m>:X <Position>

This command positions a delta marker on a particular coordinate on the x-axis.

The position is an absolute value.

You can enter a relative value, if you activate relative entry first with `CALCulate<n>:DELTamarker<m>:MODE`.

If fixed reference is active, the position is relative to the fixed reference (`CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed[:STATe]` is ON). A query always returns the absolute position.

Suffix:

<n> Selects the measurement window.
<m> Selects the marker.

Parameters:

<Position> 0 to maximum frequency or sweep time

Example:

`CALC:DELT:X?`
Outputs the absolute frequency/time of delta marker 1.

Manual operation:

See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201

CALCulate<n>:DELTamarker<m>:X:RELative?

This command queries the x-value of the selected delta marker relative to marker 1 or to the reference position (for `CALC:DELT:FUNC:FIX:STAT ON`). The command activates the corresponding delta marker, if necessary.

Suffix:

<n> Selects the measurement window.
<m> Selects the marker.

Example:

`CALC:DELT3:X:REL?`
Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.

Usage:

Query only

Manual operation: See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201

CALCulate<n>:DELTamarker<m>:Y

This command queries the measured value of a delta marker. The corresponding delta marker is activated, if necessary. The output is always a relative value referred to marker 1 or to the reference position (reference fixed active).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

The unit of results depends on the result display and the unit you have selected.

Table 11-20: Base unit

Parameter, measuring function or result display	Output unit
DBM DBPW DBUV DBMV DBUA	dB (lin/log)
WATT VOLT AMPere	dB (lin), % (log)
statistics function (APD or CCDF) on	dimensionless output

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
INIT;*WAI
Starts a sweep and waits for its end.
CALC:DELT2 ON
Switches on delta marker 2.
CALC:DELT2:Y?
Outputs measurement value of delta marker 2.
```

Manual operation: See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16, / Marker Norm/Delta](#)" on page 201

11.4.8 Limit Lines

- [Using Display Lines](#).....703
- [Using Frequency Lines](#).....704
- [Using Limit Lines](#).....705

11.4.8.1 Using Display Lines

CALCulate<n>:DLINe<k>.....704
 CALCulate<n>:DLINe<k>:STATe.....704

CALCulate<n>:DLINe<k> <Position>

This command defines the (vertical) position of a display line.

Suffix:

<n> Selects the measurement window.
 <k> 1 | 2
 Selects the display line.

Parameters:

<Position> The value range is variable.
 The unit depends on `CALCulate<n>:UNIT:POWer`.
 *RST: (state is OFF)

Example: `CALC:DLIN -20dBm`

Manual operation: See "Display Line 1 / Display Line 2" on page 212

CALCulate<n>:DLINe<k>:STATe <State>

This command turns a display line on and off.

Suffix:

<n> Selects the measurement window.
 <k> 1 | 2
 Selects the display line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `CALC:DLIN2:STAT OFF`

Manual operation: See "Display Line 1 / Display Line 2" on page 212

11.4.8.2 Using Frequency Lines

<code>CALCulate<n>:FLINe<k></code>	704
<code>CALCulate<n>:FLINe<k>:STATe</code>	705
<code>CALCulate:TFLINe:STATe</code>	705

CALCulate<n>:FLINe<k> <Frequency>

This command defines the position of a frequency line.

Suffix:

<n> Selects the measurement window.
 <k> 1 | 2
 Selects the frequency line.

Parameters:

<Frequency> Range: 0 Hz to fmax
 *RST: (STATe to OFF)

Example: CALC:FLIN2 120MHz

Manual operation: See "Frequency Line 1 / Frequency Line 2 " on page 213

CALCulate<n>:FLINe<k>:STATe <State>

This command turns a frequency line on and off.

Suffix:

<n> Selects the measurement window.

<k> 1 | 2
 Selects the frequency line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC:FLIN2:STAT ON

Manual operation: See "Frequency Line 1 / Frequency Line 2 " on page 213

CALCulate:TFLine:STATe <State>

This command turns a frequency line coupled to the receiver frequency on and off.

Parameters:

<State> ON | OFF

Example: CALC:TFL:STAT ON
 Turns on the frequency line.

Manual operation: See "Tuned Frequency (On Off)" on page 213

11.4.8.3 Using Limit Lines

- [Managing Limit Lines](#)..... 705
- [Configuring Limit Lines](#).....708
- [Checking Limits](#).....717

Managing Limit Lines

CALCulate<n>:LIMit<k>:ACTive?	706
CALCulate<n>:LIMit<k>:COMMeNt	706
CALCulate<n>:LIMit<k>:COpy	706
CALCulate<n>:LIMit<k>:DELeTe	707
CALCulate<n>:LIMit<k>:NAME	707
CALCulate<n>:LIMit<k>:TRACe	707
CALCulate<n>:LIMit<k>:UNIT	708

CALCulate<n>:LIMit<k>:ACTive?

This command queries the names of all active limit lines.

Suffix:

<n> irrelevant
<k> irrelevant

Return values:

<LimitLines> String containing the names of all active limit lines in alphabetical order.

Example:

`CALC:LIM:ACT?`
Queries the names of all active limit lines.

Usage:

Query only

CALCulate<n>:LIMit<k>:COMMent <Comment>

This command defines a comment for the selected limit line in all windows.

Suffix:

<n> irrelevant
<k> Selects the limit line.

Parameters:

<Comment> String containing the comment. The maximum number of characters the string may contain is 40.

Example:

`CALC:LIM5:COMM 'Upper limit for spectrum'`
Defines the comment for limit line 5.

Manual operation:

See "[Edit Comment](#)" on page 210

CALCulate<n>:LIMit<k>:COpy <Line>

This command copies a limit line.

Suffix:

<n> irrelevant
<k> Selects the limit line.

Parameters:

<Line> **1 to 8**
 number of the new limit line
<name>
 String containing the name of the limit line.

Example:

`CALC:LIM1:COpy 2`
Copies limit line 1 to line 2.
`CALC:LIM1:COpy 'FM2'`
Copies limit line 1 to a new line named FM2.

Manual operation: See ["Copy to"](#) on page 211

CALCulate<n>:LIMit<k>:DELete

This command deletes a limit line.

Suffix:

<n> irrelevant

<k> Selects the limit line.

Example: `CALC:LIM1:DEL`
Deletes limit line 1.

Usage: Event

Manual operation: See ["Delete"](#) on page 212

CALCulate<n>:LIMit<k>:NAME <Name>

This command selects a limit line that already exists or defines a name for a new limit line.

Suffix:

<n> irrelevant

<k> 1...8 (NF: 1...6)
Selects the limit line.

Parameters:

<Name> String containing the limit line name.
*RST: REM1 to REM8 for lines 1 to 8

Example: `CALC:LIM1:NAME 'FM1'`
Assigns the name FM1 to limit line 1.

CALCulate<n>:LIMit<k>:TRACe <TraceNumber>

This command links a limit line to one or more traces.

Suffix:

<n> irrelevant

<k> Selects the limit line.

Parameters:

<TraceNumber> Range: 1 to 6
*RST: 1

Example: `CALC:LIM2:TRAC 3`
Assigns limit line 2 to trace 3.

Manual operation: See ["Select Traces to check"](#) on page 210

CALCulate<n>:LIMit<k>:UNIT <Unit>

This command defines the unit of a limit line.

Upon selection of the unit DB the limit line is automatically switched to the relative mode. For units different from DB the limit line is automatically switched to absolute mode.

Suffix:

<n> irrelevant
<k> Selects the limit line.

Parameters:

<Unit> DBM | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere | DB | DBUV_M | DBUA_M | DEG | RAD | S | HZ | PCT | (unitless)

If you select dB as the limit line unit, the command automatically turns the limit line into a relative limit line.

In spectrum mode, units deg, rad, s, Hz and PCT are unavailable.

*RST: DBM

Example:

CALC:LIM4:UNIT DBUV
Sets the unit of limit line 4 to dBµV.

Configuring Limit Lines

CALCulate<n>:LIMit<k>:CONTrol[:DATA].....	709
CALCulate<n>:LIMit<k>:CONTrol:DOMain.....	709
CALCulate<n>:LIMit<k>:CONTrol:MODE.....	709
CALCulate<n>:LIMit<k>:CONTrol:OFFSet.....	710
CALCulate<n>:LIMit<k>:CONTrol:SHIFt.....	710
CALCulate<n>:LIMit<k>:CONTrol:SPACing.....	711
CALCulate<n>:LIMit<k>:LOWer[:DATA].....	711
CALCulate<n>:LIMit<k>:LOWer:MARGin.....	711
CALCulate<n>:LIMit<k>:LOWer:MODE.....	712
CALCulate<n>:LIMit<k>:LOWer:OFFSet.....	712
CALCulate<n>:LIMit<k>:LOWer:SHIFt.....	713
CALCulate<n>:LIMit<k>:LOWer:SPACing.....	713
CALCulate<n>:LIMit<k>:LOWer:STATe.....	713
CALCulate<n>:LIMit<k>:LOWer:THReshold.....	714
CALCulate<n>:LIMit<k>:UPPer[:DATA].....	714
CALCulate<n>:LIMit<k>:UPPer:MARGin.....	715
CALCulate<n>:LIMit<k>:UPPer:MODE.....	715
CALCulate<n>:LIMit<k>:UPPer:OFFSet.....	715
CALCulate<n>:LIMit<k>:UPPer:SHIFt.....	716
CALCulate<n>:LIMit<k>:UPPer:SPACing.....	716
CALCulate<n>:LIMit<k>:UPPer:STATe.....	717
CALCulate<n>:LIMit<k>:UPPer:THReshold.....	717

CALCulate<n>:LIMit<k>:CONTrol[:DATA] <LimitLinePoints>

This command defines the horizontal definition points of a lower limit line.

Suffix:

<n>	Selects the measurement window.
<k>	1...8 Selects the limit line.

Parameters:

<LimitLinePoints>	Variable number of x-axis values. Note that the number of horizontal values has to be the same as the number of vertical values set with <code>CALCulate<n>:LIMit<k>:LOWer[:DATA]</code> or <code>CALCulate<n>:LIMit<k>:UPPer[:DATA]</code> . If not, the R&S ESR either adds missing values or ignores surplus values. The unit is Hz or s, depending on <code>CALCulate<n>:LIMit<k>:CONTrol:DOMain</code> .
-------------------	---

*RST: - (CALC:LIM is set to OFF)

Example:

```
CALC:LIM2:CONT 1 MHz,30 MHz,100 MHz,300 MHz,1 GHz
```

Defines 5 reference values for the x-axis of limit line 2.

```
CALC:LIM2:CONT?
```

Outputs the reference values for the x-axis of limit line 2 separated by a comma.

Manual operation: See ["Edit Value"](#) on page 211

CALCulate<n>:LIMit<k>:CONTrol:DOMain <SpanSetting>

This command selects the domain of the limit line.

Suffix:

<n>	Selects the measurement window.
<k>	1...8 Selects the limit line.

Parameters:

<SpanSetting>	FREQuency TIME
---------------	------------------

*RST: FREQuency

Example:

```
CALC:LIM2:CONT:DOM TIME
```

Defines zero span for the x-axis of limit line 2.

CALCulate<n>:LIMit<k>:CONTrol:MODE <Mode>

This command selects the horizontal limit line scaling.

Suffix:

<n>	Selects the measurement window.
-----	---------------------------------

<k> 1...8
Selects the limit line.

Parameters:

<Mode>

ABSolute

Limit line is defined by absolute physical values (Hz or s).

RELative

Limit line is defined by relative values related to the center frequency (frequency domain) or the left diagram border (time domain).

*RST: ABSolute

Example:`CALC:LIM2:CONT:MODE REL`

Defines the x-axis of limit line 2 as relatively scaled.

CALCulate<n>:LIMit<k>:CONTrol:OFFSet <Offset>

This command defines an offset for a complete limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> Selects the measurement window.

<k> 1...8
Selects the limit line.**Parameters:**

<Offset>

Numeric value that defines the offset.

The unit of the offset depends on the scale of the x-axis.

*RST: 0

Example:`CALC:LIM2:CONT:OFFS 100us`

Sets the X offset for limit line 2 (defined in zero span) to 100µs.

Manual operation: See "[X Offset](#)" on page 212**CALCulate<n>:LIMit<k>:CONTrol:SHIFt <Distance>**

This command moves a complete limit line horizontally.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> Selects the measurement window.

<k> Selects the limit line.

Parameters:

<Distance>

Numeric value that defines the distance of the shift.

The unit depends on the scale of the x-axis.

Example: `CALC:LIM2:CONT:SHIF 50KHZ`
Shifts all reference values of limit line 2 by 50 kHz.

CALCulate<n>:LIMit<k>:CONTrol:SPACing <InterpolMode>

This command selects linear or logarithmic interpolation for the calculation of limit lines from frequency points.

Suffix:

<n> Selects the measurement window.
<k> 1...8
 Selects the limit line.

Parameters:

<InterpolMode> LINear | LOGarithmic
*RST: LIN

Example: `CALC:LIM:CONT:SPAC LIN`

CALCulate<n>:LIMit<k>:LOWer[:DATA] <LimitLinePoints>

This command defines the vertical definition points of a lower limit line.

If the measured values are smaller than the LOWER limit line, the limit check is violated.

Suffix:

<n> irrelevant
<k> 1...8
 Selects the limit line.

Parameters:

<LimitLinePoints> Variable number of x-axis values.
Note that the number of horizontal values has to be the same as the number of vertical values set with `CALCulate<n>:LIMit<k>:CONTrol[:DATA]`. If not, the R&S ESR either adds missing values or ignores surplus values.
The unit depends on `CALCulate<n>:LIMit<k>:UNIT`.
*RST: (LIMit:STATe is set to OFF)

Example: `CALC:LIM2:LOW -30,-40,-10,-40,-30`
Defines 5 lower limit values for limit line 2 in the preset unit.
`CALC:LIM2:LOW?`
Outputs the lower limit values of limit line 2 separated by a comma.

Manual operation: See "Edit Value" on page 211

CALCulate<n>:LIMit<k>:LOWer:MARGin <Margin>

This command defines an area around a lower limit line where limit check violations are still tolerated.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<Margin> Numeric value that defines the margin.
In spectrum mode, the unit is always dB.

*RST: 0

Example:

CALC:LIM:LOW:MARG 10dB

CALCulate<n>:LIMit<k>:LOWer:MODE <Mode>

This command selects the vertical limit line scaling.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<Mode>

ABSolute

Limit line is defined by absolute physical values. The unit is variable.

RELative

Limit line is defined by values relative to the reference level (dB).

*RST: ABSolute

Example:

CALC:LIM:LOW:MODE REL

Defines the y-axis of limit line 2 as relative scaled.

Manual operation: See "[Edit Name](#)" on page 210

CALCulate<n>:LIMit<k>:LOWer:OFFSet <Offset>

This command defines an offset for a complete lower limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<Offset>

Numeric value that defines the offset.

*RST: 0

Example: `CALC:LIM2:LOW:OFFS 3dB`
Shifts limit line 2 by 3 dB upwards.

Manual operation: See "[Y Offset](#)" on page 212

CALCulate<n>:LIMit<k>:LOWer:SHIFt <Distance>

This command moves a complete lower limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant
<k> Selects the limit line.

Parameters:

<Distance> Numeric value that defines the distance of the shift.
The unit depends on `CALCulate<n>:LIMit<k>:UNIT` on page 708.

Example: `CALC:LIM3:LOW:SHIF 20DB`
Shifts all Y values of limit line 3 by 20 dB.

CALCulate<n>:LIMit<k>:LOWer:SPACing <InterpolType>

This command selects linear or logarithmic interpolation for the lower limit line.

Suffix:

<n> irrelevant
<k> 1...8
Selects the limit line.

Parameters:

<InterpolType> LINear | LOGarithmic
*RST: LIN

Example: `CALC:LIM:LOW:SPAC LIN`

CALCulate<n>:LIMit<k>:LOWer:STATe <State>

This command turns a lower limit line on and off.

Before you can use this command, you have to select a limit line with `CALCulate<n>:LIMit<k>:NAME`.

The limit check is turned on separately. For more information see "[Using Frequency Lines](#)" on page 860.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CALC:LIM4:LOW:STAT ON
Switches on limit line 4 (lower limit).

CALCulate<n>:LIMit<k>:LOWer:THReshold <Threshold>

This command defines a threshold for relative limit lines.

The R&S ESR uses the threshold for the limit check, if the limit line violates the threshold.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<Threshold> Numeric value that defines the threshold.
The unit depends on `CALCulate<n>:LIMit<k>:UNIT`.
*RST: -200 dBm

Example:

CALC:LIM2:LOW:THR -35DBM
Defines an absolute threshold value for limit line 2.

CALCulate<n>:LIMit<k>:UPPer[:DATA] <LimitLinePoints>

This command defines the vertical definition points of an upper limit line.

If the measured values exceed the UPPer limit line, the limit is violated.

Suffix:

<n> irrelevant

<k> 1...8
Selects the limit line.

Parameters:

<LimitLinePoints> Variable number of x-axis values.
Note that the number of horizontal values has to be the same as the number of vertical values set with `CALCulate<n>:LIMit<k>:CONTRol[:DATA]`. If not, the R&S ESR either adds missing values or ignores surplus values.
The unit depends on `CALCulate<n>:LIMit<k>:UNIT`.
*RST: (LIMit:STATe is set to OFF)

Example: `CALC:LIM2:UPP -10,0,0,-10,-5`
 Defines 5 upper limit values for limit line 2 in the preset unit.
`CALC:LIM2:UPP?`
 Outputs the upper limit values for limit line 2 separated by a comma.

Manual operation: See "Edit Value" on page 211

CALCulate<n>:LIMit<k>:UPPer:MARGin <Margin>

This command defines an area around a upper limit line where limit check violations are still tolerated.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<Margin> Numeric value that defines the margin.
 In spectrum mode, the unit is always dB.
 *RST: 0

Example: `CALC:LIM2:UPP:MARG 10dB`
 Defines the margin of limit line 2 to 10 dB below the limit value.

CALCulate<n>:LIMit<k>:UPPer:MODE <Mode>

This command selects the vertical limit line scaling.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<Mode> **ABSolute**
 Limit line is defined by absolute physical values. The unit is variable.
RELative
 Limit line is defined by values relative to the reference level (dB).
 *RST: ABSolute

Example: `CALC:LIM2:UPP:MODE REL`
 Defines the y-axis of limit line 2 as relative scaled.

CALCulate<n>:LIMit<k>:UPPer:OFFSet <Offset>

This command defines an offset for a complete upper limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<Offset> Numeric value that defines the offset.
 *RST: 0

Example:

`CALC:LIM2:UPP:OFFS 3dB`
 Shifts limit line 2 by 3 dB upwards.

Manual operation: See "Y Offset" on page 212

CALCulate<n>:LIMit<k>:UPPer:SHIFt <Value>

This command moves a complete upper limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<Distance> Numeric value that defines the distance of the shift.
 The unit depends on `CALCulate<n>:LIMit<k>:UNIT` on page 708.

Example:

`CALC:LIM3:UPP:SHIF 20`
 Shifts all Y values of limit line 3 by 20 limit line units, e.g. dB.

Usage: Event

CALCulate<n>:LIMit<k>:UPPer:SPACing <InterpolType>

This command selects linear or logarithmic interpolation for the upper limit line.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<InterpolType> LINear | LOGarithmic
 *RST: LIN

Example:

`CALC:LIM:UPP:SPAC LIN`

CALCulate<n>:LIMit<k>:UPPer:STATe <State>

This command turns a lower limit line on and off.

Before you can use this command, you have to select a limit line with

[CALCulate<n>:LIMit<k>:NAME](#).

The limit check is turned on separately. For more information see ["Using Frequency Lines"](#) on page 860.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM4:UPP:STAT ON
 Switches on limit line 4 (upper limit).

CALCulate<n>:LIMit<k>:UPPer:THReshold <Threshold>

This command defines a threshold for relative limit lines.

The R&S ESR uses the threshold for the limit check, if the limit line violates the threshold.

Suffix:

<n> irrelevant
 <k> 1...8
 Selects the limit line.

Parameters:

<Threshold> Numeric value that defines the threshold.
 The unit depends on [CALCulate<n>:LIMit<k>:UNIT](#).
 *RST: -200 dBm

Example:

CALC:LIM2:UPP:THR -35DBM
 Defines an absolute threshold value for limit line 2.

Checking Limits

CALCulate<n>:LIMit<k>:CLEar[:IMMEDIATE]	717
CALCulate<n>:LIMit<k>:FAIL?	718
CALCulate<n>:LIMit<k>:STATe	718

CALCulate<n>:LIMit<k>:CLEar[:IMMEDIATE]

This command deletes the result of the current limit check for all limit lines in all windows.

Suffix:	
<n>	irrelevant
<k>	irrelevant
Example:	<code>CALC:LIM:CLE</code> Deletes the result of the limit check.
Usage:	Event

CALCulate<n>:LIMit<k>:FAIL?

This command queries the result of a limit check.

Note that for SEM measurements, the limit line suffix <k> is irrelevant, as only one specific SEM limit line is checked for the currently relevant power class.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:	
<n>	irrelevant
<k>	limit line
Return values:	
<Result>	0 PASS
	1 FAIL
Example:	<code>INIT;*WAI</code> Starts a new sweep and waits for its end. <code>CALC:LIM3:FAIL?</code> Queries the result of the check for limit line 3.
Usage:	Query only
Manual operation:	See " Limit Check 1-4 " on page 261 See " Limit Check 1-4 " on page 291

CALCulate<n>:LIMit<k>:STATe <State>

This command turns the limit check on and off.

To query the limit check result, use `CALCulate<n>:LIMit<k>:FAIL?`.

Suffix:	
<n>	irrelevant
<k>	Selects the limit line.
Parameters:	
<State>	ON OFF
	*RST: OFF

- Example:** `CALC:LIM:STAT ON`
Switches on the limit check for limit line 1.
- Manual operation:** See "[Select Traces to check](#)" on page 210
See "[Deselect All](#)" on page 210

11.5 Remote Commands in Spectrum Analyzer Mode

The following remote commands configure and perform spectrum measurements. They are available in spectrum analyzer mode only.

- [Measurements and Result Displays](#).....719
- [Configuring Spectrum Measurements](#).....822
- [Analyzing Spectrum Measurements](#)..... 847

11.5.1 Measurements and Result Displays

- [Controlling Power Measurements](#).....719
- [Measuring Channel Power](#).....727
- [Measuring the Occupied Bandwidth](#).....748
- [Measuring Spurious Emissions](#).....749
- [Testing Against a Spectrum Emission Mask](#).....759
- [Performing EMI Measurements](#).....778
- [Measuring the Modulation Depth](#).....784
- [Measuring the Harmonic Distortion](#).....786
- [Measuring the Carrier-to-Noise Ratio](#).....790
- [Measuring the Third Order Intercept Point](#).....790
- [Measuring Statistics](#).....791
- [Measuring in the Time Domain](#).....799
- [Measuring the Pulse Power](#).....811
- [Performing List Evaluations](#).....815
- [Probe Configuration](#).....820

11.5.1.1 Controlling Power Measurements

The following commands control power measurements (channel power, occupied bandwidth etc.) in general.

- `CALCulate<n>:MARKer<m>:FUNCTION:POWER:SElect`.....720
- `CALCulate<n>:MARKer<m>:FUNCTION:POWER:RESult?`.....721
- `CALCulate<n>:MARKer<m>:FUNCTION:POWER[:STATe]`.....724
- `CALCulate<n>:MARKer<m>:FUNCTION:POWER:MODE`.....724
- `[SENSe:]POWER:TRACe`.....725
- `[SENSe:]POWER:ACHannel:PRESet`.....725
- `[SENSe:]POWER:ACHannel:PRESet:RLEVel`.....726
- `TRACe<n>:DATA`.....726

CALCulate<n>:MARKer<m>:FUNCTION:Power:SElect <MeasType>

This command selects – and switches on – the specified power measurement type in the window specified by the suffix <n>.

The channel spacings and channel bandwidths are configured in the `SENSe:POWer` subsystem.

Note: If `CPOWer` is selected, the number of adjacent channels (`[SENSe:]POWer:ACHannel:ACPairs`) is set to 0. If `ACPOWer` is selected, the number of adjacent channels is set to 1, unless adjacent-channel power measurement is switched on already.

The channel/adjacent-channel power measurement is performed for the trace selected with `[SENSe:]POWer:TRACe`.

The occupied bandwidth measurement is performed for the trace on which marker 1 is positioned. To select another trace for the measurement, marker 1 is to be positioned on the desired trace by means of `CALCulate<n>:MARKer<m>:TRACe`.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<MeasType> `ACPOWer` | `CPOWer` | `MCACpower` | `OBANdwidth` | `OBWidth` | `CN` | `CNO`

ACPOWer
 Adjacent-channel power measurement with a single carrier signal

CPOWer
 Channel power measurement with a single carrier signal (equivalent to adjacent-channel power measurement with "NO. OF ADJ CHAN" = 0)

MCACpower
 Channel/adjacent-channel power measurement with several carrier signals

OBANdwidth | **OBWidth**
 Measurement of occupied bandwidth

CN
 Measurement of carrier-to-noise ratio

CNO
 Measurement of carrier-to-noise ratio referenced to 1 Hz bandwidth

Example:

```
CALC:MARK:FUNC:POW:SEL ACP
Switches on adjacent-channel power measurement.
```

Manual operation: See "Ch Power ACLR" on page 223
 See "OBW (span > 0)" on page 223
 See "Ch Power ACLR" on page 236
 See "C/N" on page 251
 See "C/No" on page 251
 See "OBW" on page 254

CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult? <ResultType>

This command queries the result of the performed power measurement in the window specified by the suffix <n>. If necessary, the measurement is switched on prior to the query.

The channel spacings and channel bandwidths are configured in the `SENSe:POWer` subsystem.

To obtain a correct result, a complete sweep with synchronization to the end of the sweep must be performed before a query is output. Synchronization is possible only in the single sweep mode.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<ResultType> ACPower | AOBW | CN | CN0 | CPOWer | PPOWer |
 MCACpower | OBANdwidth | OBWidth | BANDwidth

ACPower

Adjacent-channel power measurement

Results are output in the following sequence, separated by commas:

Power of transmission channel
 Power of lower adjacent channel
 Power of upper adjacent channel
 Power of lower alternate channel 1
 Power of upper alternate channel 1
 Power of lower alternate channel 2
 Power of upper alternate channel 2

The number of measured values returned depends on the number of adjacent/alternate channels selected with `[SENSe:]POWer:ACHannel:ACPairs`.

With logarithmic scaling (RANGE "LOG"), the power is output in the currently selected level unit; with linear scaling (RANGE "LIN dB" or "LIN %"), the power is output in W. If `[SENSe:]POWer:ACHannel:MODE` is set to "REL", the adjacent/alternate-channel power is output in dB.

AOBW (AllOccupiedBandWidth)

Returns the occupied bandwidth, as well as the position and level of the temporary markers T1 and T2 used to calculate the occupied bandwidth.

The syntax of the result is:

<Occupied bandwidth>,<T1 x-value>,<T1 y-value>,<T2 x-value>,<T2 y-value>

CN

Measurement of carrier-to-noise ratio

The carrier-to-noise ratio in dB is returned.

CNO

Measurement of carrier-to-noise ratio referenced to 1 Hz bandwidth.

The carrier-to-noise ratio in dB/Hz is returned.

CPOWer

Channel power measurement

In a Spectrum Emission Mask measurement, the query returns the power result for the reference range, if this power reference type is selected.

With logarithmic scaling (RANGE LOG), the channel power is output in the currently selected level unit; with linear scaling (RANGE LIN dB or LIN %), the channel power is output in W.

PPOWer

Power of the highest peak

In a Spectrum Emission Mask measurement, the query returns the power result for the reference range, if this power reference type is selected.

MCACpower

Channel/adjacent-channel power measurement with several carrier signals

Results are output in the following sequence, separated by commas:

Power of carrier signal 1 to 18s in ascending order

Total power of all carrier signals

Power of lower adjacent channel

Power of upper adjacent channel

Power of lower alternate channel 1

Power of upper alternate channel 1

Power of lower alternate channel 2

Power of upper alternate channel 2

The number of measured values returned depends on the number of carrier signals and adjacent/alternate channels selected with `[SENSe:]POWer:ACHannel:TXChannel:COUNT` and

`[SENSe:]POWer:ACHannel:ACPairs`.

If only one carrier signal is measured, the total value of all carrier signals is not output.

With logarithmic scaling (RANGE LOG), the power is output in dBm; with linear scaling (RANGE LIN dB or LIN %), the power is output in W. If `[SENSe:]POWer:ACHannel:MODE` is set to "REL", the adjacent/alternate-channel power is output in dB.

OBANDwidth | OBWidth

Measurement of occupied bandwidth

The occupied bandwidth in Hz is returned.

Example:

For an example of channel/adjacent-channel power measurement see [Chapter 11.17.4, "Measuring the Channel and Adjacent Channel Power"](#), on page 1010.

Example of occupied bandwidth measurement

```
POW:BAND 90PCT
```

Defines 90 % as the percentage of the power to be contained in the bandwidth range to be measured.

```
INIT:CONT OFF
```

Switches over to single sweep mode.

```
INIT;*WAI
```

Starts a sweep and waits for the end of the sweep.

```
CALC:MARK:FUNC:POW:RES? OBW
```

Queries the occupied bandwidth measured.

Manual operation:

See "[Ch Power ACLR](#)" on page 223

See "[OBW \(span > 0\)](#)" on page 223

See "[Ch Power ACLR](#)" on page 236

See "[C/N](#)" on page 251

See "[C/No](#)" on page 251

See "[OBW](#)" on page 254

CALCulate<n>:MARKer<m>:FUNction:POWer[:STATe] <State>

This command switches off the power measurement in the window specified by the suffix <n>.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> OFF

Example:

`CALC:MARK:FUNC:POW OFF`
 Switches off the power measurement.

Usage: Event

Manual operation: See "[Ch Power ACLR](#)" on page 223
 See "[OBW \(span > 0\)](#)" on page 223
 See "[Ch Power ACLR](#)" on page 236
 See "[C/N](#)" on page 251
 See "[C/No](#)" on page 251
 See "[OBW](#)" on page 254

CALCulate<n>:MARKer<m>:FUNction:POWer:MODE <Mode>

This commands defines the method by which the channel power values are calculated from the current trace in the window specified by the suffix <n>.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<Mode> WRITe | MAXHold

WRITe

The channel power and the adjacent channel powers are calculated directly from the current trace

MAXHold

The power values are calculated from the current trace and compared with the previous power value using a maximum algorithm.

Example:

`CALC:MARK:FUNC:POW:MODE MAXH`
 Sets the Maxhold channel power mode.

Manual operation: See "[Clear/Write](#)" on page 242
 See "[Max Hold](#)" on page 243

[SENSe:]POWer:TRACe <TraceNumber>

This command assigns the channel/adjacent channel power measurement to the indicated trace. The corresponding trace must be active, i.e. its state must be different from blank.

Note: The measurement of the occupied bandwidth (OBW) is performed on the trace on which marker 1 is positioned. To evaluate another trace, marker 1 must be positioned to another trace with `CALCulate<n>:MARKer<m>:TRACe`.

Parameters:

<TraceNumber> 1 to 6

Example:

```
POW:TRAC 2
Assigns the measurement to trace 2.
```

Manual operation: See ["Select Trace"](#) on page 243

[SENSe:]POWer:ACHannel:PRESet <Setting>

This command adjusts the frequency span, the measurement bandwidths and the detector as required for the number of channels, the channel bandwidths and the channel spacings selected in the active power measurement. If necessary, adjacent-channel power measurement is switched on prior to the adjustment.

To obtain correct results, a complete sweep with synchronization to the end of the sweep must be performed after the adjustment. Synchronization is possible only in the single sweep mode.

The result is queried with the `CALCulate<n>:MARKer<m>:FUNCTION:POWer:RESult?` command.

Parameters:

<Setting> ACPower | CPOWer | MCACpower | OBANdwidth | OBWidth | CN | CNO

Example:

```
POW:ACH:PRES ACP
Sets the frequency span, the measurement bandwidths and the detector as required for the ACLR measurement.
INIT:CONT OFF
Switches over to single sweep mode.
INIT;*WAI
Starts a sweep and waits for the end of the sweep.
CALC:MARK:FUNC:POW:RES? ACP
Queries the result of the adjacent-channel power measurement.
```

Manual operation: See ["Adjust Settings"](#) on page 243
See ["Adjust Settings"](#) on page 252

[SENSe:]POWER:ACHannel:PRESet:RLEVel

This command adapts the reference level to the measured channel power and – if required – switches on previously the adjacent channel power measurement. This ensures that the signal path of the instrument is not overloaded. Since the measurement bandwidth is significantly smaller than the signal bandwidth in channel power measurements, the signal path can be overloaded although the trace is still significantly below the reference level. If the measured channel power equals the reference level, the signal path is not overloaded.

Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the auto range process which would otherwise be aborted.

Example: POW:ACH:PRESet:RLEV; *WAI
Adapts the reference level to the measured channel power.

Manual operation: See "Adjust Ref Lvl" on page 246
See "Adjust Ref Lvl (span > 0)" on page 255

TRACe<n>:DATA <Trace>, <Data> | <ResultType>

This command queries current trace data and measurement results.

If you use it as a setting command, it transfers trace data from an external source to the R&S ESR.

The data format depends on FORMat [:DATA].

Parameters:

<Trace> Selects the trace to write data to.
TRACE1 | ... | TRACE6

<Data> Contains the data to transfer.

Query parameters:

<ResultType> Selects the type of result to be returned.
TRACE1 | ... | TRACE6
Returns the trace data for the corresponding trace.
LIST
Returns the results of the peak list evaluation for Spurious Emission and Spectrum Emission Mask measurements.
SPURious
Returns the peak list of Spurious Emission measurements.

Return values:

<TraceData> For more information see tables below.

Example: TRAC TRACE1,+A\$
Transfers trace data ('+A\$') to trace 1.

Example: TRAC? TRACE3
Queries the data of trace 3.

Manual operation: See "List Evaluation (On/Off)" on page 264
See "List Evaluation (On/Off)" on page 293

Table 11-21: Return values for TRACE1 to TRACE6 parameter

The trace data consists of a list of power levels that have been measured. The number of power levels in the list depends on the currently selected number of sweep points. The unit depends on the measurement and on the unit you have currently set.

If you are measuring with the auto peak detector, the command returns positive peak values only.

If you are working with the "Real/Imag (I/Q)" result display in I/Q Analyzer mode, the command returns two values for each trace point, first the real parts of the signal, then the imaginary parts ($I_1, \dots, I_n, Q_1, \dots, Q_n$).

For SEM or Spurious Emission measurement results, the x-values should be queried as well, as they are not equi-distant (see `TRACe<n>[:DATA]:X?` on page 856).

Table 11-22: Return values for LIST parameter

For every measurement range you have defined (range 1...n), the command returns eight values in the following order.

<No>, <StartFreq>, <StopFreq>, <RBW>, <PeakFreq>, <PowerAbs>, <PowerRel>, <PowerDelta>, <LimitCheck>, <Unused1>, <Unused2>

- <No>: range number
- <StartFreq>, <StopFreq>: start and stop frequency of the range
- <RBW>: resolution bandwidth
- <PeakFreq>: frequency of the peak in a range
- <PowerAbs>: absolute power of the peak in dBm
- <PowerRel>: power of the peak in relation to the channel power in dBc
- <PowerDelta>: distance from the peak to the limit line in dB, positive values indicate a failed limit check
- <LimitCheck>: state of the limit check (0 = PASS, 1 = FAIL)
- <Unused1>, <Unused2>: reserved (0.0)

11.5.1.2 Measuring Channel Power

The following commands configure and perform channel power or ACLR measurements.

- [Managing Measurement Configurations](#)..... 727
- [Configuring ACLR Channels](#)..... 729
- [Defining Weighting Filters](#)..... 734
- [Selecting the Reference Channel](#)..... 736
- [Checking Limits](#)..... 737
- [Analyzing Results](#)..... 745
- [Predefined CP/ACLR Standards](#)..... 748

Managing Measurement Configurations

The following commands control measurement configurations for ACLR measurements.

- [CALCulate<n>:MARKer<m>:FUNCTION:POWER:PRESet](#)..... 728
- [CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANdard:CATalog?](#)..... 729
- [CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANdard:DELeTe](#)..... 729
- [CALCulate<n>:MARKer<m>:FUNCTION:POWER:STANdard:SAVE](#)..... 729

CALCulate<n>:**MARKer**<m>:**FUNCTION:POWer:PRESet** <Standard> |
<UserStandard>

This command selects the power measurement setting for a standard and switches on the corresponding measurement, if required.

The configuration for a standard comprises of the parameters weighting filter, channel bandwidth and spacing, resolution and video bandwidth, as well as detector and sweep time.

The settings for standards IS95A and C differ as far as the calculation method of channel spacings is concerned. For IS95A and J-STD008 the spacing is calculated from the center of the main channel to the center of the corresponding adjacent channel, for IS95C from the center of the main channel to the nearest border of the adjacent channel.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Setting parameters:

<Standard> Note that predefined standards go without quotes, while user standards have to be in quotes ('user standard').

<Predefined standard>

Predefine standard according to table in "[Predefined CP/ACLR Standards](#)" on page 748.

'<string>'

User-defined standard with <string> being the name of the user standard.

Return values:

<Standard> <Predefined standard> | USER | NONE

<Predefined standard>

Predefine standard according to table in "[Predefined CP/ACLR Standards](#)" on page 748.

USER

User-defined standard is set

NONE

not yet defined

with <string> being the name of a user standard. Note that predefined standards go without quotes, while user standards have to be in quotes ('user standard').

For further details refer to "[Predefined CP/ACLR Standards](#)" on page 748.

Example:

CALC:MARK:FUNC:POW:PRES TETRA

Selects the standard setting for TETRA

Example:

CALC:MARK:FUNC:POW:PRES 'my_aclr_standard'

Selects the user standard my_aclr_standard

Manual operation: See "CP/ACLR Standard" on page 236
See "Load" on page 245

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:CATalog?

This command queries all available standards, including user standards.

The numeric suffix at MARKer is irrelevant.

Example: `CALC:MARK:FUNC:POW:STAN:CAT?`
Queries the available standards.

Usage: Query only

Manual operation: See "Load" on page 245

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:DELeTe <Standard>

This command deletes an ACLR standard.

The numeric suffix at MARKer is irrelevant.

Parameters:
<Standard> Name of the standard you want to delete.

Example: `CALC:MARK:FUNC:POW:STAN:DEL 'CDMA2000'`
Deletes the CDMA2000 standard.

Manual operation: See "Delete" on page 245

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:SAVE <Standard>

This command saves a customized ACLR standard.

The numeric suffix at MARKer is irrelevant.

Parameters:
<Standard> Specifies the name of the user standard.

Example: `CALC:MARK:FUNC:POW:STAN:SAVE 'CDMA2000'`
Saves the user standard with the name CDMA2000.

Manual operation: See "Save" on page 245

Configuring ACLR Channels

The following commands configure channels for channel power and ACLR measurements.

<code>[SENSe:]POWer:ACHannel:ACPairs</code>	730
<code>[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ACHannel</code>	730
<code>[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ALternate<channel></code>	730
<code>[SENSe:]POWer:ACHannel:BANDwidth BWIDth[:CHANnel<channel>]</code>	731
<code>[SENSe:]POWer:ACHannel:NAME:ACHannel</code>	731
<code>[SENSe:]POWer:ACHannel:NAME:ALternate<channel></code>	732

[SENSe:]POWer:ACHannel:NAME:CHANnel<channel>.....	732
[SENSe:]POWer:ACHannel:SPACing[:ACHannel].....	732
[SENSe:]POWer:ACHannel:SPACing:ALTErnate<channel>.....	733
[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel>.....	733
[SENSe:]POWer:ACHannel:TXCHannel:COUNT.....	733

[SENSe:]POWer:ACHannel:ACPairs <ChannelPairs>

This command sets the number of adjacent channels (upper and lower channel in pairs). The figure 0 stands for pure channel power measurement.

Parameters:

<ChannelPairs> 0 to 12
 *RST: 1

Example:

POW:ACH:ACP 3
 Sets the number of adjacent channels to 3, i.e. the adjacent channel and alternate adjacent channels 1 and 2 are switched on.

Manual operation: See "[# of Adj Chan](#)" on page 237
 See "[Channel Bandwidth](#)" on page 251

[SENSe:]POWer:ACHannel:BANDwidth|BWIDth:ACHannel <Bandwidth>

This command defines the channel bandwidth of the adjacent channel of the radio transmission system. If the bandwidth of the adjacent channel is changed, the bandwidths of all alternate adjacent channels are automatically set to the same value.

With [SENSe<source>:]POWer:HSPeed set to ON, steep-edged channel filters are available. For further information on filters refer to [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367 .

Parameters:

<Bandwidth> 100 Hz to 40 GHz
 *RST: 14 kHz

Example:

POW:ACH:BWID:ACH 30 kHz
 Sets the bandwidth of all adjacent channels to 30 kHz.

Manual operation: See "[Bandwidth](#)" on page 238

[SENSe:]POWer:ACHannel:BANDwidth|BWIDth:ALTErnate<channel> <Bandwidth>

This command defines the channel bandwidth of the specified alternate adjacent channels of the radio transmission system. If the channel bandwidth of one alternate adjacent channel is changed (e.g. channel 3), the bandwidth of all subsequent alternate adjacent channels (e.g. 4–11) is automatically set to the same value.

With [SENSe<source>:] POWer:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367 .

Suffix:

<channel> 1...11
the alternate adjacent channel

Parameters:

<Bandwidth> 100 Hz to 40 GHz
*RST: 14 kHz

Example:

POW:ACH:BWID:ALT2 30 kHz

Manual operation: See "[Bandwidth](#)" on page 238

**[SENSe:]POWER:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>]
<Bandwidth>**

This command sets the channel bandwidth of the specified TX channel in the radio communication system. The bandwidths of adjacent channels are not influenced by this modification.

With [SENSe<source>:] POWer:HSPEED set to ON, steep-edged channel filters are available. For further information on filters refer to [Chapter 6.2.6.4, "List of Available RRC and Channel Filters"](#), on page 367.

Parameters:

<Bandwidth> 100 Hz to 40 GHz
*RST: 14 kHz

Example:

POW:ACH:BWID:CHAN2 30 kHz

Sets the bandwidth of the TX channel 2 to 30 kHz.

Manual operation: See "[Bandwidth](#)" on page 238

See "[Channel Bandwidth \(span > 0\)](#)" on page 255

[SENSe:]POWER:ACHannel:NAME:ACHannel <Name>

This command defines a name for the adjacent channel. The name is displayed in the result diagram and the result table.

Parameters:

<Name> *RST: Adj

Example:

POW:ACH:NAME:ACH 'XYZ'

Defines the name of the adjacent channel as 'XYZ'.

Manual operation: See "[Names](#)" on page 240

[SENSe:]POWer:ACHannel:NAME:ALternate<channel> <Name>

This command defines a name for the specified alternate channel. The name is displayed in the result diagram and the result table.

Suffix:

<channel> 1...11
the alternate channel

Parameters:

<Name> *RST: ALT<1...11>

Example:

POW:ACH:NAME:ALT3 'XYZ'
Defines the name of the third alternate channel as 'XYZ'.

Manual operation: See "[Names](#)" on page 240

[SENSe:]POWer:ACHannel:NAME:CHANnel<channel> <Name>

This command defines a name for the specified TX channel. The name is displayed in the result diagram and the result table.

Suffix:

<channel> 1...12
the TX channel

Parameters:

<Name> *RST: TX<1...12>

Example:

POW:ACH:NAME:CHAN3 'XYZ'
Defines the name of the third transmission channel as 'XYZ'.

Manual operation: See "[Names](#)" on page 240

[SENSe:]POWer:ACHannel:SPACing[:ACHannel] <Spacing>

This command defines the spacing between the carrier signal and the adjacent channel (ADJ). The modification of the adjacent-channel spacing (ADJ) causes a change in all higher adjacent-channel spacings (ALT1, ALT2, ...): they are all multiplied by the same factor (new spacing value/old spacing value).

Parameters:

<Spacing> 100 Hz to 20 GHz
*RST: 14 kHz

Example:

POW:ACH:SPAC 33kHz
Sets the spacing between the carrier signal and the adjacent channel to 33 kHz, the alternate adjacent channel 1 to 66 kHz, the alternate adjacent channel 2 to 99 kHz, and so on.

Manual operation: See "[Spacing](#)" on page 239

[SENSe:]POWer:ACHannel:SPACing:ALTerNate<channel> <Spacing>

This command defines the spacing between the alternate adjacent channels and the TX channel (ALT1, ALT2, ...). A modification of a higher adjacent-channel spacing causes a change by the same factor (new spacing value/old spacing value) in all higher adjacent-channel spacings, while the lower adjacent-channel spacings remain unchanged.

Suffix:

<channel> 1...11
the alternate adjacent channel

Parameters:

<Spacing> 100 Hz to 20 GHz
*RST: 40 kHz (ALT1), 60 kHz (ALT2), 80 kHz (ALT3), ...

Example:

POW:ACH:SPAC:ALT1 100 kHz

Sets the spacing between TX channel and alternate adjacent channel 1 (ALT1) from 40 kHz to 100 kHz. In consequence, the spacing between the TX channel and all higher alternate adjacent channels is increased by the factor $100/40 = 2.5$: ALT2 = 150 kHz, ALT3 = 200 kHz, ALT4 = 250 kHz.

Manual operation: See "[Spacing](#)" on page 239

[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel> <Spacing>

This command defines the channel spacing for the carrier signals.

Suffix:

<channel> 1...11
the TX channel

Parameters:

<Spacing> 14 kHz to 20 GHz
*RST: 20 kHz

Example:

POW:ACH:SPAC:CHAN 25kHz

Manual operation: See "[Spacing](#)" on page 239

[SENSe:]POWer:ACHannel:TXChannel:COUNT <Number>

This command selects the number of carrier signals.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 (see [CALCulate<n>:MARKer<m>:FUNCTION:POWer:SElect](#) on page 720).

Parameters:

<Number> 1 to 18
*RST: 1

Example:

POW:ACH:TXCH:COUN 3

Manual operation: See "[# of TX Chan](#)" on page 237

Defining Weighting Filters

The following commands define weighting filters for ACLR measurements.

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel.....	734
[SENSe:]POWer:ACHannel:FILTer:ALPHa[:ALL].....	734
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTerNate<channel>.....	734
[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel>.....	735
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel.....	735
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTerNate<channel>.....	735
[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel>.....	735
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALL.....	736

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel <Alpha>

This command defines the roll-off factor for the weighting filter of the adjacent channel.

Parameters:

<Alpha> <numeric value>
 *RST: 0,22

Example: POW:ACH:FILT:ALPH:ACH 0,35

Manual operation: See "[Weighting Filter](#)" on page 240

[SENSe:]POWer:ACHannel:FILTer:ALPHa[:ALL] <Alpha>

This command defines the roll-off factor for the weighting filter of all channels.

Parameters:

<Alpha> <numeric value>
 *RST: 0,22

Example: POW:ACH:FILT:ALPH:ALL 0,35

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTerNate<channel> <Alpha>

This command defines the roll-off factor for the weighting filter of the specified alternate channel.

Suffix:

<channel> 1...11
 the alternate channel

Parameters:

<Alpha> <numeric value>
 *RST: 0,22

Example: POW:ACH:FILT:ALPH:ALT3 0,35
 Sets the alpha value for the weighting filter for the alternate channel 3 to 0,35.

Manual operation: See "Weighting Filter" on page 240

[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel> <Alpha>

This command defines the roll-off factor for the weighting filter of the specified TX channel.

Suffix:

<channel> 1...11
the TX channel

Parameters:

<Alpha> <numeric value>
*RST: 0,22

Example:

POW:ACH:FILT:ALPH:CHAN3 0,35
Sets the alpha value for the weighting filter for the TX channel 3 to 0,35.

Manual operation: See "Weighting Filter" on page 240

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel <State>

This command activates the weighting filter for the adjacent channel.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

POW:ACH:FILT:ACH ON

Manual operation: See "Weighting Filter" on page 240

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnate<channel> <State>

This command activates the weighting filter for the specified alternate channel.

Suffix:

<channel> 1...11
the alternate adjacent channel

Parameters:

<State> ON | OFF
*RST: OFF

Example:

POW:ACH:FILT:ALT3 ON
Activates the weighting filter for alternate channel 3.

Manual operation: See "Weighting Filter" on page 240

[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel> <State>

This command activates the weighting filter for the specified TX channel.

Suffix:
 <channel> 1...18
 the TX channel

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: POW:ACH:FILT:CHA3 ON
 Activates the weighting filter for TX channel 3.

Manual operation: See "[Weighting Filter](#)" on page 240

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALL <State>

This command activates the weighting filter for all channels.

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: POW:ACH:FILT ON

Selecting the Reference Channel

The following commands define the reference channel for relative ACLR measurements.

[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE.....	736
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO.....	736
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual.....	737

[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE

This command sets the reference value to the currently measured channel power for the relative measurement.

Example: POW:ACH:REF:AUTO ONCE

Manual operation: See "[Set CP Reference](#)" on page 244

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO <Channel>

This command activates the automatic selection of a transmission channel to be used as a reference channel in relative adjacent-channel power measurements.

The transmission channel with the highest power, the transmission channel with the lowest power, or the transmission channel nearest to the adjacent channels can be defined as a reference channel.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 (`CALCulate<n>:MARKer<m>:FUNction:POWer:SElect` on page 720).

Parameters:

<Channel> MINimum | MAXimum | LHIGhest

MINimum
Transmission channel with the lowest power

MAXimum
Transmission channel with the highest power

LHIGhest
Lowermost transmission channel for the lower adjacent channels, uppermost transmission channel for the upper adjacent channels

Example:

`POW:ACH:REF:TXCH:AUTO MAX`
The transmission channel with the highest power is used as a reference channel.

Manual operation: See "[ACLR Reference](#)" on page 239

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual <ChannelNumber>

This command selects a transmission channel to be used as a reference channel in relative adjacent-channel power measurements.

The command is available only for multicarrier channel and adjacent-channel power measurements with span > 0 (`CALCulate<n>:MARKer<m>:FUNction:POWer:SElect` on page 720).

Parameters:

<ChannelNumber> 1 to 18

*RST: 1

Example:

`POW:ACH:REF:TXCH:MAN 3`
Transmission channel 3 is used as a reference channel.

Manual operation: See "[ACLR Reference](#)" on page 239

Checking Limits

The following commands configure limit checks for channel power and ACLR measurements.

<code>CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute</code>	738
<code>CALCulate<n>:LIMit<k>:ACPower:ACHannel:ABSolute:STATe</code>	738
<code>CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]</code>	739
<code>CALCulate<n>:LIMit<k>:ACPower:ACHannel[:RELative]:STATe</code>	740
<code>CALCulate<n>:LIMit<k>:ACPower:ACHannel:RESult</code>	740
<code>CALCulate<n>:LIMit<k>:ACPower:ALTErnate<Channel>:ABSolute</code>	741
<code>CALCulate<n>:LIMit<k>:ACPower:ALTErnate<Channel>:ABSolute:STATe</code>	742
<code>CALCulate<n>:LIMit<k>:ACPower:ALTErnate<channel>[:RELative]</code>	743

CALCulate<n>:LIMit<k>:ACPoweR:ALTeRnate<Channel>[:RELative]:STATe.....	743
CALCulate<n>:LIMit<k>:ACPoweR:ALTeRnate<Channel>:RESult?.....	744
CALCulate<n>:LIMit<k>:ACPoweR[:STATe].....	745

CALCulate<n>:LIMit<k>:ACPoweR:ACHannel:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit value for the lower/upper adjacent channel during adjacent-channel power measurement (Adjacent Channel Power).

Note that the absolute limit value has no effect on the limit check as soon as it is below the relative limit value defined with `CALCulate<n>:LIMit<k>:ACPoweR:ACHannel[:RELative]`. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n>	Selects the measurement window.
<k>	irrelevant

Parameters:

<LowerLimit>, <UpperLimit>	first value: -200DBM to 200DBM; limit for the lower and the upper adjacent channel
*RST:	-200DBM

Example:

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

CALCulate<n>:LIMit<k>:ACPoweR:ACHannel:ABSolute:STATe <State>

This command activates the limit check for the adjacent channel when adjacent-channel power measurement (Adjacent Channel Power) is performed. Before the command, the limit check for the channel/adjacent-channel measurement must be globally switched on using `CALCulate<n>:LIMit<k>:ACPoweR[:STATe]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPoweR:ACHannel:RESult`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n>	Selects the measurement window.
<k>	irrelevant

Parameters:

<State>	ON OFF
*RST:	OFF

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent-channel measurement.

```
CALC:LIM:ACP:ACH:REL:STAT ON
```

Switches on the check of the relative limit values for adjacent channels.

```
CALC:LIM:ACP:ACH:ABS:STAT ON
```

Switches on the check of absolute limit values for the adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check result in the adjacent channels.

Manual operation: See "[Absolute Limit](#)" on page 242

CALCulate<n>:**LIMit**<k>:**ACP**ower:**ACH**annel[:**REL**ative] <LowerLimit>, <UpperLimit>

This command defines the relative limit of the upper/lower adjacent channel for adjacent-channel power measurements. The reference value for the relative limit value is the measured channel power.

It should be noted that the relative limit value has no effect on the limit check as soon as it is below the absolute limit value defined with the [CALCulate](#)<n>:[LIMit](#)<k>:[ACP](#)ower:[ACH](#)annel:[ABS](#)olute command. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> Selects the measurement window.
<k> irrelevant

Parameters:

<LowerLimit>, 0 to 100dB; the value for the lower limit must be lower than the
<UpperLimit> value for the upper limit
*RST: 0 dB

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]:STATe <State>

This command activates the limit check for the relative limit value of the adjacent channel when adjacent-channel power measurement is performed. Before this command, the limit check must be activated using `CALCulate<n>:LIMit<k>:ACPpower[:STATe]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPpower:ACHannel:RESult`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ACH:STAT ON
```

Switches on the check of the relative limit values for adjacent channels.

```
CALC:LIM:ACP:ACH:ABS:STAT ON
```

Switches on the check of absolute limit values for the adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check result in the adjacent channels.

CALCulate<n>:LIMit<k>:ACPpower:ACHannel:RESult

This command queries the result of the limit check for the upper/lower adjacent channel when adjacent channel power measurement is performed.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant

Return values:

Result The result is returned in the form <result>, <result> where <result> = PASSED | FAILED, and where the first returned value denotes the lower, the second denotes the upper adjacent channel.

Example:

```
CALC:LIM:ACP:ACH 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper adjacent channel to -35 dB.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ACH:STAT ON
```

Switches on the limit check for the adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ACH:RES?
```

Queries the limit check result in the adjacent channels.

Manual operation: See "[Limit Checking](#)" on page 241

CALCulate<n>:LIMit<k>:ACPpower:ALternate<Channel>:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit value for the lower/upper alternate adjacent-channel power measurement (Adjacent Channel Power).

Note that the absolute limit value for the limit check has no effect as soon as it is below the relative limit value defined with [CALCulate<n>:LIMit<k>:ACPpower:ACHannel\[:RELative\]](#). This mechanism allows automatic checking of the absolute basic values defined in mobile radio standards for the power in adjacent channels.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

<Channel> 1...11
the alternate channel

Parameters:

<LowerLimit>, <UpperLimit> first value: -200DBM to 200DBM; limit for the lower and the upper alternate adjacent channel

*RST: -200DBM

Example:

```
CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

CALCulate<n>:LIMit<k>:ACPpower:ALternate<Channel>:ABSolute:STATe <State>

This command activates the limit check for the alternate adjacent channels for adjacent-channel power measurement (Adjacent Channel Power).

Before the command, the limit check must be globally switched on for the channel/adjacent-channel power with the `CALCulate<n>:LIMit<k>:ACPpower[:STATe]` command.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPpower:ALternate<channel>[:RELative]`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are available.

Suffix:

<n>	Selects the measurement window.
<k>	irrelevant
<Channel>	1...11 the alternate channel

Parameters:

<State>	ON OFF
*RST:	OFF

Example:

```
CALC:LIM:ACP:ALT2 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ALT2:STAT ON
```

Switches on the check of the relative limit values for the lower and upper second alternative adjacent channels.

```
CALC:LIM:ACP:ALT2:ABS:STAT ON
```

Switches on the check of absolute limit values for the lower and upper second alternative adjacent channels.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ALT2:RES?
```

Queries the limit check result in the second alternate adjacent channels.

CALCulate<n>:LIMit<k>:ACPpower:ALternate<channel>[:RELative] <LowerLimit>, <UpperLimit>

This command defines the limit for the alternate adjacent channels for adjacent channel power measurements. The reference value for the relative limit value is the measured channel power.

Note that the relative limit value has no effect on the limit check as soon as it is below the absolute limit defined with `CALCulate<n>:LIMit<k>:ACPpower:ALternate<Channel>:ABSolute`. This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant
 <Channel> 1...11
 the alternate channel

Parameters:

<LowerLimit>, first value: 0 to 100dB; limit for the lower and the upper alternate adjacent channel
 <UpperLimit>
 *RST: 0 DB

Example:

`CALC:LIM:ACP:ALT2 30DB, 30DB`

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

Manual operation: See "[Limit Checking](#)" on page 241

CALCulate<n>:LIMit<k>:ACPpower:ALternate<Channel>[:RELative]:STATE <State>

This command activates the limit check for the alternate adjacent channels for adjacent channel power measurements. Before the command, the limit check must be activated using `CALCulate<n>:LIMit<k>:ACPpower[:STATE]`.

The result can be queried with `CALCulate<n>:LIMit<k>:ACPpower:ALternate<channel>[:RELative]`. Note that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no correct results are obtained.

Suffix:

<n> Selects the measurement window.
 <k> irrelevant
 <Channel> 1...11
 the alternate channel

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:LIM:ACP:ALT2 30DB, 30DB
```

Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.

```
CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM
```

Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.

```
CALC:LIM:ACP ON
```

Switches on globally the limit check for the channel/adjacent channel measurement.

```
CALC:LIM:ACP:ALT2:STAT ON
```

Switches on the check of the relative limit values for the lower and upper second alternate adjacent channel.

```
CALC:LIM:ACP:ALT2:ABS:STAT ON
```

Switches on the check of absolute limit values for the lower and upper second alternate adjacent channel.

```
INIT;*WAI
```

Starts a new measurement and waits for the sweep end.

```
CALC:LIM:ACP:ALT2:RES?
```

Queries the limit check result in the second alternate adjacent channels.

CALCulate<n>:LIMit<k>:ACPpower:ALTErnate<Channel>:RESult?

This command queries the result of the limit check for the alternate adjacent channels for adjacent channel power measurements.

If the power measurement of the adjacent channel is switched off, the command produces a query error.

Suffix:

<n> Selects the measurement window.

<k> irrelevant

<Channel> 1...11
 the alternate channel

Return values:

<Result> The result is returned in the form <result>, <result> where <result> = PASSED | FAILED and where the first (second) returned value denotes the lower (upper) alternate adjacent channel.

Example:	<pre>CALC:LIM:ACP:ALT2 30DB, 30DB</pre> <p>Sets the relative limit value for the power in the lower and upper second alternate adjacent channel to 30 dB below the channel power.</p> <pre>CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM</pre> <p>Sets the absolute limit value for the power in the lower and upper second alternate adjacent channel to -35 dBm.</p> <pre>CALC:LIM:ACP ON</pre> <p>Switches on globally the limit check for the channel/adjacent channel measurement.</p> <pre>CALC:LIM:ACP:ALT2:STAT ON</pre> <p>Switches on the limit check for the lower and upper second adjacent channel.</p> <pre>INIT;*WAI</pre> <p>Starts a new measurement and waits for the sweep end.</p> <pre>CALC:LIM:ACP:ALT2:RES?</pre> <p>Queries the limit check result in the second alternate adjacent channels.</p>
Usage:	Query only

CALCulate<n>:LIMit<k>:ACPpower[:STATe] <State>

This command switches on and off the limit check for adjacent-channel power measurements. The commands `CALCulate<n>:LIMit<k>:ACPpower:ACHannel[:RELative]:STATe` or `CALCulate<n>:LIMit<k>:ACPpower:ALternate<Channel>[:RELative]:STATe` must be used in addition to specify whether the limit check is to be performed for the upper/lower adjacent channel or for the alternate adjacent channels.

Suffix:

<n>	Selects the measurement window.
<k>	irrelevant

Parameters:

<State>	ON OFF
*RST:	OFF

Example:	<pre>CALC:LIM:ACP ON</pre> <p>Switches on the ACLR limit check.</p>
-----------------	---

Manual operation:	<p>See "Limit Checking" on page 241</p> <p>See "Relative Limit" on page 242</p> <p>See "Absolute Limit" on page 242</p>
--------------------------	---

Analyzing Results

The following commands analyze and retrieve measurement results for ACLR measurements.

CALCulate<n>:MARKer<m>:FUNction:POWer:RESult:PHZ.....	746
[SENSe:]POWer:ACHannel:MODE.....	746
[SENSe:]POWer:HSPeed.....	747
[SENSe:]POWer:NCORrection.....	747

CALCulate<n>:MARKer<m>:FUNction:POWer:RESult:PHZ <State>

This command switches the query response of the power measurement results between output of absolute values and output referred to the measurement bandwidth.

The measurement results are output with the `CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?` command.

Suffix:

<n>	Selects the measurement window.
<m>	Selects the marker.

Parameters:

<State>	ON OFF
	ON
	Results output: channel power density in dBm/Hz
	OFF
	Results output: channel power is displayed in dBm
	*RST: OFF

Example:

`CALC:MARK:FUNC:POW:RES:PHZ ON`
 Output of results referred to the channel bandwidth.
 For details on a complete measurement example refer to `CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?` on page 721.

Manual operation: See "Chan Pwr/Hz" on page 242

[SENSe:]POWer:ACHannel:MODE <Mode>

This command switches between absolute and relative adjacent channel measurement. The command is only available with span > 0 and if the number of adjacent channels is greater than 0.

For the relative measurement the reference value is set to the currently measured channel power using the command `[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE`.

Parameters:

<Mode>	ABSolute RELative
	ABSolute
	absolute adjacent channel measurement
	RELative
	relative adjacent channel measurement
	*RST: RELative

Example: `POW:ACH:MODE REL`
Sets the adjacent channel measurement mode to relative.

Manual operation: See "[ACLR \(Abs/Rel\)](#)" on page 243

[SENSe:]POWer:HSPeed <State>

This command switches on or off the high-speed channel/adjacent channel power measurement. The measurement itself is performed in zero span on the center frequencies of the individual channels. The command automatically switches to zero span and back.

Depending on the selected mobile radio standard, weighting filters with characteristic or very steep-sided channel filters are used for band limitation.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `POW:HSP ON`

Manual operation: See "[Fast ACLR \(On/Off\)](#)" on page 244

[SENSe:]POWer:NCORrection <Mode>

This command turns noise cancellation on and off.

If noise cancellation is on, the R&S ESR performs a reference measurement to determine its inherent noise and subtracts the result from the channel power measurement result (first active trace only).

The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A corresponding message is displayed on the screen. Noise correction must be turned on again manually after the change.

Parameters:

<Mode> **ON**
 Performs noise correction.
 OFF
 Performs no noise correction.
 AUTO
 Performs noise correction.
 After a parameter change, noise correction is restarted automatically and a new correction measurement is performed.
*RST: OFF

Example: `POW:NCOR ON`

Manual operation: See "[Noise Correction](#)" on page 245

Predefined CP/ACLR Standards

Parameter	Standard
W-CDMA 3GPP FWD	W-CDMA 3.84 MHz forward
W-CDMA 3GPP REV	W-CDMA 3.84 MHz reverse
CDMA IS95A FWD	CDMA IS95A forward
CDMA IS95A REV	CDMA IS95A reverse
CDMA IS95C Class 0 FWD	CDMA IS95C Class 0 forward
CDMA IS95C Class 0 REV	CDMA IS95C Class 0 reverse
CDMA J-STD008 FWD	CDMA J-STD008 forward
CDMA J-STD008 REV	CDMA J-STD008 reverse
CDMA IS95C Class 1 FWD	CDMA IS95C Class 1 forward
CDMA IS95C Class 1 REV	CDMA IS95C Class 1 reverse
CDMA 2000	CDMA 2000
TD SCDMA FWD	TD-SCDMA forward
TD SCDMA REV	TD-SCDMA reverse
WLAN 802.11A	WLAN 802.11A
WLAN 802.11B	WLAN 802.11B
WiMAX	WiMAX
WiBRO	WiBRO
RFID 14443	RFID 14443
EUTRa	EUTRA/LTE Square
REUTra	EUTRA/LTE Square/RRC
TETRA	TETRA
PDC	PDC
PHS	PHS
CDPD	CDPD
GSM	GSM

11.5.1.3 Measuring the Occupied Bandwidth

The following commands configure measurements of the occupied bandwidth.

Commands useful to measure the occupied bandwidth described elsewhere:

- `CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?` on page 721
- `CALCulate<n>:MARKer<m>:FUNction:POWer:SElect` on page 720
- `CALCulate<n>:MARKer<m>:FUNction:POWer[:STATe]` on page 724

- [SENSe:]POWER:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>] on page 731
- [SENSe:]POWER:ACHannel:PRESet on page 725
- [SENSe:]POWER:ACHannel:PRESet:RLEVel on page 726
- TRACe<n>:DATA on page 726

[SENSe:]POWER:BANDwidth|BWIDth..... 749

[SENSe:]POWER:BANDwidth|BWIDth <Percentage>

This command defines the percentage of the power with respect to the total power.

This value is the basis for the occupied bandwidth measurement (see [SENSe:]POWER:ACHannel:PRESet on page 725).

Parameters:

<Percentage> 10 to 99.9PCT
 *RST: 99PCT

Example: POW:BWID 95PCT

Manual operation: See "% Power Bandwidth (span > 0)" on page 255

11.5.1.4 Measuring Spurious Emissions

The following commands configure and perform spurious emission measurements.

- Controlling the Measurement..... 749
- Managing a Sweep List..... 750
- Configuring List Evaluation..... 758
- Retrieving Results..... 759

Controlling the Measurement

Note that the spurious measurement must be initialized before you can start configuring the sweep list or list evaluation.

Commands useful to retrieve results described elsewhere:

- [SENSe:]SWEep:MODE on page 761

INITiate<n>:SPURious..... 749
 MMEMory:STORe<n>:SPURious..... 750

INITiate<n>:SPURious

This command initiates a Spurious Emissions measurement.

Suffix:

<n> irrelevant

Example: INIT:SPUR
 Starts a Spurious Emissions measurement.

Usage: Event

MMEMory:STORe<n>:SPURious <FileName>

This command exports the marker peak list available for spurious emission measurements to a file.

Suffix:

<n> irrelevant

Parameters:

<FileName> String containing the path and name of the target file.

Example:

MMEM:STOR:SPUR 'test'

Saves the current marker peak list in the file test.dat.

Usage:

Event

Managing a Sweep List

The following commands configure the sweep list for spurious emission measurements.

[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution]	750
[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo	751
[SENSe:]LIST:RANGe<range>:BREak	751
[SENSe:]LIST:RANGe<range>:COUNT	751
[SENSe:]LIST:RANGe<range>:DELete	752
[SENSe:]LIST:RANGe<range>:DETector	752
[SENSe:]LIST:RANGe<range>:FILTer:TYPE	752
[SENSe:]LIST:RANGe<range>[:FREQuency]:START	753
[SENSe:]LIST:RANGe<range>[:FREQuency]:STOP	753
[SENSe:]LIST:RANGe<range>:INPut:ATTenuation	754
[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO	754
[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe	754
[SENSe:]LIST:RANGe<range>:LIMit:START	755
[SENSe:]LIST:RANGe<range>:LIMit:STATe	755
[SENSe:]LIST:RANGe<range>:LIMit:STOP	756
[SENSe:]LIST:RANGe<range>:POINts	756
[SENSe:]LIST:RANGe<range>:RLEVel	756
[SENSe:]LIST:RANGe<range>:SWEep:TIME	757
[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO	757
[SENSe:]LIST:RANGe<range>:TRANsducer	757

[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution] <Value>

This command sets the RBW value for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.

*RST: 30.0 kHz

Example: `LIST:RANG2:BAND:RES 5000`
Sets the RBW for range 2 to 5 kHz.

Manual operation: See "[RBW](#)" on page 290

[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo

This command sets the VBW value for the specified range.

Suffix:
<range> 1...20
range

Parameters:
<Value> Refer to the data sheet.
*RST: 10.0 MHz

Example: `LIST:RANG1:BAND:VID 5000000`
Sets the VBW for range 1 to 5 MHz.

Manual operation: See "[VBW](#)" on page 290

[SENSe:]LIST:RANGe<range>:BREak <State>

This command configures the sweep behavior.

The suffixes are irrelevant.

Suffix:
<range> 1...20
range

Parameters:
<State> **ON**
The R&S ESR stops after one range is swept and continues only if you confirm (a message box is displayed).
OFF
The R&S ESR sweeps all ranges in one go.
*RST: OFF

Example: `LIST:RANG:BRE ON`
Configures a stop after each range.

Manual operation: See "[Stop After Sweep](#)" on page 291

[SENSe:]LIST:RANGe<range>:COUNT

This command returns the number of defined ranges.

Suffix:
<range> 1...20
range

Example: `LIST:RANG:COUNT?`
Returns the number of defined ranges.

[SENSe:]LIST:RANGe<range>:DELeTe

This command deletes the specified range. The range numbers are updated accordingly. The reference range cannot be deleted. A minimum of three ranges is mandatory.

Suffix:
<range> 1...20
range

Example: `LIST:RANG4:DEL`
Deletes range 4.

Manual operation: See "[Delete Range](#)" on page 292

[SENSe:]LIST:RANGe<range>:DETEctor <Detector>

This command sets the detector for the specified range. For details refer to "[Detector](#)" on page 290.

Suffix:
<range> 1...20
range

Parameters:
<Detector> NEGative | POSitive | SAMPlE | RMS | AVERAge

NEGative
minimum peak detector

POSitive
peak detector

SAMPlE
sample detector

RMS
RMS detector

AVERAge
average detector

*RST: RMS

Example: `LIST:RANGe3:DET SAMP`
Sets the sample detector for range 3.

Manual operation: See "[Detector](#)" on page 290

[SENSe:]LIST:RANGe<range>:FILTer:TYPE <Type>

This command sets the filter type for the specified range.

Suffix:	
<range>	1...20 range
Parameters:	
<Type>	NORMal Gaussian filters CFILter channel filters RRC RRC filters P5 5 Pole filters *RST: NORM The available bandwidths of the filters are specified in the data sheet.
Example:	<code>LIST:RANG1:FILT:TYPE RRC</code> Sets the RRC filter type for range 1.
Manual operation:	See " Filter Type " on page 289

[SENSe:]LIST:RANGe<range>[:FREQUENCY]:START <Frequency>

This command sets the start frequency for the specified range.

In order to change the start/stop frequency of the first/last range, select the appropriate span. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last range are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Suffix:	
<range>	1...20 range
Parameters:	
<Frequency>	see rules in chapter 4, "Ranges and settings" *RST: -250.0 MHz (range 1), -2.52 MHz (range 2), 2.52 MHz (range 3)
Example:	<code>LIST:RANG1:STAR 100000000</code> Sets the start frequency for range 1 to 100 MHz.
Manual operation:	See " Range Start / Range Stop " on page 289

[SENSe:]LIST:RANGe<range>[:FREQUENCY]:STOP <Frequency>

This command sets the stop frequency for the specified range. See also [\[SENSe:\]LIST:RANGe<range>\[:FREQUENCY\]:START](#) on page 753.

Suffix:	
<range>	1...20 range
Parameters:	
<Frequency>	see rules in chapter 4, "Ranges and settings"
*RST:	-2.52 MHz (range 1), 2.52 MHz (range 2), 250.0 MHz (range 3)
Example:	LIST:RANG3:STOP 10000000 Sets the stop frequency for range 2 to 10 MHz.
Manual operation:	See " Range Start / Range Stop " on page 289

[SENSe:]LIST:RANGe<range>:INPut:ATTenuation <Value>

This command sets the attenuation for the specified range.

Suffix:	
<range>	1...20 range
Parameters:	
<Value>	Refer to the data sheet.
*RST:	0 dB
Example:	LIST:RANG3:INP:ATT 10 Sets the attenuation of range 3 to 10 dB.
Manual operation:	See " RF Attenuator " on page 290

[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO <State>

This command activates or deactivates the automatic RF attenuation setting for the specified range.

Suffix:	
<range>	1...20 range
Parameters:	
<State>	ON OFF
*RST:	ON
Example:	LIST:RANG2:INP:ATT:AUTO OFF Deactivates the RF attenuation auto mode for range 2.
Manual operation:	See " RF Att. Mode " on page 290

[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe <State>

This command switches the preamplifier on or off for the specified range.

Suffix:
 <range> 1...20
 range

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: LIST:RANG3:INP:GAIN:STATe ON
 Switches the preamplifier for range 3 on or off.

Manual operation: See "[Preamp](#)" on page 290

[SENSe:]LIST:RANGe<range>:LIMit:STARt <Limit>

This command sets an absolute limit value at the start frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:
 <range> 1...20
 range

Parameters:
 <Limit> -400 to in 400 dBm
 *RST: 13 dBm

Example: LIST:RANG1:LIM:ABS:STAR 10
 Sets an absolute limit of 10 dBm at the start frequency of the range.

Manual operation: See "[Abs Limit Start](#)" on page 291

[SENSe:]LIST:RANGe<range>:LIMit:STATe

This command activates or deactivates the limit check for all ranges.

Suffix:
 <range> irrelevant

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: LIST:RANG3:LIM:STAT ON
 Activates a limit check for all ranges.

Manual operation: See "[Limit Check 1-4](#)" on page 291

[SENSe:]LIST:RANGe<range>:LIMit:STOP <Limit>

This command sets an absolute limit value at the stop frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:

<range> 1...20
range

Parameters:

<Limit> -400 to in 400 dBm
*RST: 13 dBm

Example:

LIST:RANG1:LIM:STOP 20

Sets an absolute limit of 20 dBm at the stop frequency of the range.

Manual operation: See "[Abs Limit Stop](#)" on page 291

[SENSe:]LIST:RANGe<range>:POINts <Value>

This command sets the number of sweep points for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<Value> For details on possible values refer to chapter 4, **Sweep Points** softkey of the "Sweep" menu.
*RST: 691

Example:

LIST:RANG3:POIN 601

Sets 601 sweep points for range 3.

Manual operation: See "[Sweep Points](#)" on page 291

[SENSe:]LIST:RANGe<range>:RLEVel <Value>

This command sets the reference level for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: -20 dBm

Example:

LIST:RANG2:RLEV 0

Sets the reference level of range 2 to 0 dBm.

Manual operation: See "[Ref. Level](#)" on page 290

[SENSe:]LIST:RANGe<range>:SWEep:TIME

This command sets the sweep time for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<SweepTime> Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

*RST: 0.27 s

Example:

LIST:RANG1:SWE:TIME 1

Sets the sweep time for range 1 to 1 s.

Manual operation: See "[Sweep Time](#)" on page 290

[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO

This command activates or deactivates the automatic sweep time setting for the specified range.

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF

*RST: ON

Example:

LIST:RANG3:SWE:TIME:AUTO OFF

Deactivates the sweep time auto mode for range 3.

Manual operation: See "[Sweep Time Mode](#)" on page 290

[SENSe:]LIST:RANGe<range>:TRANsducer <TransducerName>

This command sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

Suffix:

<range> 1...20
range

Parameters:

<TransducerName> 'string' = name of the transducer

Example:

SENS:LIST:RANG1:TRAN 'test'

Sets the transducer called "test" for range 1.

Manual operation: See "Transd. Factor" on page 291

Configuring List Evaluation

The following commands configure the list evaluation.

- `CALCulate<n>:PEAKsearch|PSEarch:MARGin` on page 680
- `MMEMoRY:STORe<n>:LIST` on page 777

<code>CALCulate<n>:PEAKsearch PSEarch[:IMMEDIATE]</code>	758
<code>CALCulate<n>:PEAKsearch PSEarch:AUTO</code>	758
<code>CALCulate<n>:PEAKsearch PSEarch:PSHOW</code>	758
<code>CALCulate<n>:PEAKsearch PSEarch:SUBRANGES</code>	759

`CALCulate<n>:PEAKsearch|PSEarch[:IMMEDIATE]`

This command switches the spurious limit check off.

If you want to read out the values peak values including the delta to a limit, you have to switch on the limit again.

This command is only for FSP compatibility, and not necessary to use on the R&S ESR.

Suffix:

<n> irrelevant

Example:

`CALC:PSE`
Starts to determine the list.

`CALCulate<n>:PEAKsearch|PSEarch:AUTO <State>`

This command activates or deactivates the list evaluation.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: ON

Example:

`CALC:ESP:PSE:AUTO OFF`
Deactivates the list evaluation.

Manual operation: See "List Evaluation (On/Off)" on page 264
See "List Evaluation (On/Off)" on page 293

`CALCulate<n>:PEAKsearch|PSEarch:PSHOW`

This command marks all peaks with blue squares in the diagram.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:ESP:PSE:PSH ON
 Marks all peaks with blue squares.

Manual operation: See ["Show Peaks"](#) on page 293

CALCulate<n>:PEAKsearch|PSEarch:SUBRanges <NumberPeaks>

This command sets the number of peaks per range that are stored in the list. Once the selected number of peaks has been reached, the peak search is stopped in the current range and continued in the next range.

Suffix:

<n> irrelevant

Parameters:

<NumberPeaks> 1 to 50
 *RST: 25

Example:

CALC:PSE:SUBR 10
 Sets 10 peaks per range to be stored in the list.

Manual operation: See ["Peaks per Range"](#) on page 293

Retrieving Results

The following commands analyze and retrieve measurement results for spurious emission measurements.

- [CALCulate<n>:LIMIT<k>:FAIL?](#) on page 718
- [TRACe<n>:DATA](#) on page 726

11.5.1.5 Testing Against a Spectrum Emission Mask

The following commands configure and perform spectrum emission mask (SEM) measurements.

- [Managing Measurement Configurations](#)..... 759
- [Controlling the Measurement](#)..... 761
- [Managing a Sweep List](#)..... 762
- [Configuring the Reference Range](#)..... 771
- [Configuring Power Classes](#)..... 772
- [Configuring List Evaluation](#)..... 776
- [Retrieving Results](#)..... 778

Managing Measurement Configurations

The following commands control measurement configurations for SEM measurements.

CALCulate<n>:LIMit<k>:ESPectrum:RESTore.....	760
[SENSe:]ESPectrum:PRESet[:STANdard].....	760
[SENSe:]ESPectrum:PRESet:RESTore.....	760
[SENSe:]ESPectrum:PRESet:STORe.....	760

CALCulate<n>:LIMit<k>:ESPectrum:RESTore

This command restores the predefined limit lines for the Spectrum Emission Mask measurement. All modifications made to the predefined limit lines are lost and the factory-set values are restored.

Suffix:

<n> 1...4
 window

<k> irrelevant

Example:

```
CALC:LIM:ESP:REST
```

Resets the limit lines for the Spectrum Emission Mask to the default setting.

[SENSe:]ESPectrum:PRESet[:STANdard]

This command selects the specified XML file under C:\r_s\instr\sem_std. If the file is stored in a subdirectory, include the relative path.

Example:

```
ESP:PRES 'WCDMA\3GPP\DL\PowerClass_31_39.xml'
```

Selects the PowerClass_31_39.xml XML file in the C:\R_S\instr\sem_std\WCDMA\3GPP\DL directory.

```
ESP:PRES?
```

```
W-CDMA 3GPP DL (31,39) dBm
```

The query returns information about the selected standard, the link direction and the power class. If no standard has been selected, the query returns None.

Manual operation: See "[Load Standard](#)" on page 267

[SENSe:]ESPectrum:PRESet:RESTore

This command copies the XML files from the C:\R_S\instr\sem_backup folder to the C:\R_S\instr\sem_std folder. Files of the same name are overwritten.

Example:

```
ESP:PRES:REST
```

Restores the originally provided XML files.

Manual operation: See "[Restore Standard Files](#)" on page 267

[SENSe:]ESPectrum:PRESet:STORe <FileName>

This command stores the current settings as presettings in the specified XML file under C:\r_s\instr\sem_backup.

Parameters:

<FileName>

Example:

ESP:PRES:STOR

'WCDMA\3GPP\DL\PowerClass_31_39.xml'

Stores the settings in the PowerClass_31_39.xml file in the C:\R_S\instr\sem_std\WCDMA\3GPP\DL directory.

Manual operation: See ["Save As Standard"](#) on page 267

Controlling the Measurement

The following commands control the measurement itself.

INITiate<n>:ESpectrum	761
[SENSe:]SWEep:MODE	761

INITiate<n>:ESpectrum

This command starts a Spectrum Emission Mask measurement.

Suffix:

<n> irrelevant

Example:

INIT:ESP

Starts a Spectrum Emission Mask measurement.

Manual operation: See ["Meas Start/Stop"](#) on page 267

[SENSe:]SWEep:MODE <Mode>

This command selects the spurious emission and spectrum emission mask measurements.

Parameters:

<Mode> AUTO | ESpectrum | LIST

AUTO

Switches to "Spectrum" measurement mode or stays in the current mode if it is not ESP/LIST

ESpectrum

"Spectrum Emission Mask" measurement mode

LIST

"Spurious Emissions" measurement mode

*RST: AUTO

Example:

SWE:MODE ESP

Sets the Spectrum Emission Mask measurement mode.

Manual operation: See ["Spectrum Emission Mask"](#) on page 223

See ["Spurious Emissions"](#) on page 224

See ["Spectrum Emission Mask"](#) on page 258

See ["Spurious Emissions"](#) on page 289

Managing a Sweep List

The following commands define a sweep list for SEM measurements.

[SENSe:]ESpectrum:HighSPeed.....	762
[SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution].....	763
[SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo.....	763
[SENSe:]ESpectrum:RANGe<range>:COUNT.....	764
[SENSe:]ESpectrum:RANGe<range>:DELeTe.....	764
[SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE.....	764
[SENSe:]ESpectrum:RANGe<range>[:FREQuency]:STARt.....	765
[SENSe:]ESpectrum:RANGe<range>[:FREQuency]:STOP.....	765
[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation.....	766
[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO.....	766
[SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe.....	766
[SENSe:]ESpectrum:RANGe<range>:INSert.....	767
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STARt.....	767
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP.....	767
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STARt.....	768
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP.....	768
[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:STATe.....	769
[SENSe:]ESpectrum:RANGe<range>:RLEVel.....	769
[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME.....	769
[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO.....	770
[SENSe:]ESpectrum:RANGe<range>:TRANSDucer.....	770

[SENSe:]ESpectrum:HighSPeed <State>

This command activates Fast SEM mode to accelerate spurious emission mask measurements. For details see "[Fast Spectrum Emission Mask Measurements](#)" on page 281.

Note that in Fast SEM mode, the following parameters cannot be changed in all ranges:

- Filter type, see [SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE on page 764
- RBW, see [SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution] on page 763
- VBW, see [SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo on page 763
- Sweep Time Mode, see [SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO on page 770
- Sweep Time, see [SENSe:]ESpectrum:RANGe<range>:SWEep:TIME on page 769
- Reference level, see [SENSe:]ESpectrum:RANGe<range>:RLEVel on page 769
- RF Att Mode, see [SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO on page 766

- Rf Attenuation, see [\[SENSe:\]ESpectrum:RANGe<range>:INPut:ATTenuation](#) on page 766
- Preamp, see [\[SENSe:\]ESpectrum:RANGe<range>:INPut:GAIN:STATE](#) on page 766

Parameters:

<State> ON | OFF
 *RST: OFF

Example: ESP:HSP ON

Manual operation: See "Fast SEM" on page 259

[SENSe:]ESpectrum:RANGe<range>:BANDwidth[:RESolution] <Value>

This command sets the RBW value for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSpeed](#) on page 762).

Suffix:

<range> 1...20
 range

Parameters:

<Value> Refer to the data sheet.
 *RST: 30.0 kHz

Example: ESP:RANG2:BAND:RES 5000
 Sets the RBW for range 2 to 5 kHz.

Manual operation: See "RBW" on page 259

[SENSe:]ESpectrum:RANGe<range>:BANDwidth:VIDeo <Value>

This command sets the VBW value for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSpeed](#) on page 762).

Suffix:

<range> 1...20
 range

Parameters:

<Value> Refer to the data sheet.
 *RST: 10.0 MHz

Example: ESP:RANG1:BAND:VID 5000000
 Sets the VBW for range 1 to 5 MHz.

Manual operation: See "VBW" on page 260

[SENSe:]ESpectrum:RANGe<range>:COUNT

This command returns the number of defined ranges.

Suffix:

<range> 1...20
range

Example:

ESP:RANG:COUNT?
Returns the number of defined ranges.

[SENSe:]ESpectrum:RANGe<range>:DELEte

This command deletes the specified range. The range numbers are updated accordingly. The reference range cannot be deleted. A minimum of three ranges is mandatory.

Suffix:

<range> 1...20
range

Example:

ESP:RANG4:DEL
Deletes range 4.

Manual operation: See "[Delete Range](#)" on page 262

[SENSe:]ESpectrum:RANGe<range>:FILTer:TYPE <Type>

This command sets the filter type for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSpeed](#) on page 762).

Suffix:

<range> 1...20
range

Parameters:

<Type> **NORMAL**
Gaussian filters
CFILter
channel filters
RRC
RRC filters
P5
5 Pole filters
*RST: NORM
The available bandwidths of the filters are specified in the data sheet.

Example:

ESP:RANG1:FILT:TYPE RRC
Sets the RRC filter type for range 1.

Manual operation: See ["Filter Type"](#) on page 259

[SENSe:]ESpectrum:RANGe<range>[:FREQUENCY]:START <Frequency>

This command sets the start frequency for the specified range.

In order to change the start/stop frequency of the first/last range, select the appropriate span. If you set a span that is smaller than the overall span of the ranges, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last range are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Note the rules for the <Frequency> parameter specified in ["Ranges and Range Settings"](#) on page 269.

Suffix:

<range> 1...20
range

Parameters:

<Frequency> numeric value
*RST: -250.0 MHz (range 1), -2.52 MHz (range 2), 2.52 MHz (range 3)

Example:

ESP:RANG1:STAR 100000000
Sets the start frequency for range 1 to 100 MHz.

Manual operation: See ["Range Start / Range Stop"](#) on page 259

[SENSe:]ESpectrum:RANGe<range>[:FREQUENCY]:STOP <Frequency>

This command sets the stop frequency for the specified range. For further details refer to the [\[SENSe:\]ESpectrum:RANGe<range>\[:FREQUENCY\]:START](#) command.

Note the rules for the <Frequency> parameter specified in ["Ranges and Range Settings"](#) on page 269.

Suffix:

<range> 1...20
range

Parameters:

<Frequency> numeric value
*RST: -2.52 MHz (range 1), 2.52 MHz (range 2), 250.0 MHz (range 3)

Example:

ESP:RANG3:STOP 10000000
Sets the stop frequency for range 2 to 10 MHz.

Manual operation: See ["Range Start / Range Stop"](#) on page 259

[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation <Value>

This command sets the attenuation for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 762).

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.
*RST: 0 dB

Example:

ESP:RANG3:INP:ATT 10
Sets the attenuation of range 3 to 10 dB.

Manual operation: See ["RF Attenuator"](#) on page 260

[SENSe:]ESpectrum:RANGe<range>:INPut:ATTenuation:AUTO <State>

This command activates or deactivates the automatic RF attenuation setting for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 762).

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF
*RST: ON

Example:

ESP:RANG2:INP:ATT:AUTO OFF
Deactivates the RF attenuation auto mode for range 2.

Manual operation: See ["RF Att. Mode"](#) on page 260

[SENSe:]ESpectrum:RANGe<range>:INPut:GAIN:STATe <State>

This command switches the preamplifier on or off for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSPeed](#) on page 762).

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF
*RST: OFF

Example: `ESP:RANG3:INP:GAIN:STATe ON`
Switches the preamplifier for range 3 on or off.

Manual operation: See ["Preamp"](#) on page 260

[SENSe:]ESpectrum:RANGe<range>:INSert <Mode>

This command inserts a new range before or after the specified range. The range numbers are updated accordingly.

Suffix:
<range> 1...20
 range

Parameters:
<Mode> AFTer | BEFore

Example: `ESP:RANG3:INS BEF`
Inserts a new range before range 3.
`ESP:RANG1:INS AFT`
Inserts a new range after range 1.

Manual operation: See ["Insert before Range"](#) on page 262
See ["Insert after Range"](#) on page 262

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STARt <Level>

This command sets an absolute limit value at the start frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:
<range> 1...20
 range

Parameters:
<Level> -400 to in 400 dBm
*RST: 13 dBm

Example: `ESP:RANG1:LIM:ABS:STAR 10`
Sets an absolute limit of 10 dBm at the start frequency of the range.

Manual operation: See ["Abs Limit Start"](#) on page 261

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:ABSolute:STOP <Level>

This command sets an absolute limit value at the stop frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:	
<range>	1...20 range
Parameters:	
<Level>	-400 to in 400 dBm *RST: 13 dBm
Example:	ESP:RANG1:LIM:ABS:STOP 20 Sets an absolute limit of 20 dBm at the stop frequency of the range.
Manual operation:	See " Abs Limit Stop " on page 261

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STARt <Limit>

This command sets a relative limit value at the start frequency of the specified range. Different from manual operation, this setting is independent of the defined limit check type.

Suffix:	
<range>	1...20 range
Parameters:	
<Limit>	-400 to in 400 dBc *RST: -50 dBc
Example:	ESP:RANG3:LIM:REL:STAR -20 Sets a relative limit of -20 dBc at the start frequency of the range.
Manual operation:	See " Rel Limit Start " on page 261

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:RELative:STOP <Limit>

This command sets a relative limit value at the stop frequency of the specified range. Different from manual operation, this setting is independently of the defined limit check type.

Suffix:	
<range>	1...20 range
Parameters:	
<Limit>	-400 to in 400 dBc *RST: -50 dBc
Example:	ESP:RANG3:LIM:REL:STOP 20 Sets a relative limit of 20 dBc at the stop frequency of the range.
Manual operation:	See " Rel Limit Stop " on page 261

[SENSe:]ESpectrum:RANGe<range>:LIMit<source>:STATe <State>

This command sets the type of limit check for all ranges.

Suffix:

<range> irrelevant

Parameters:

<State> ABSolute | RELative | AND | OR

ABSolute

Checks only the absolute limits defined.

RELative

Checks only the relative limits. Relative limits are defined as relative to the measured power in the reference range.

AND

Combines the absolute and relative limit. The limit check fails when both limits are violated.

OR

Combines the absolute and relative limit. The limit check fails when one of the limits is violated.

*RST: REL

Example:

ESP:RANG3:LIM:STAT AND

Sets for all ranges the combined absolute/relative limit check.

Manual operation: See "[Limit Check 1-4](#)" on page 261

[SENSe:]ESpectrum:RANGe<range>:RLEVel <Value>

This command sets the reference level for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSpeed](#) on page 762).

Suffix:

<range> 1...20
range

Parameters:

<Value> Refer to the data sheet.

*RST: -20 dBm

Example:

ESP:RANG2:RLEV 0

Sets the reference level of range 2 to 0 dBm.

Manual operation: See "[Ref. Level](#)" on page 260

[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME <SweepTime>

This command sets the sweep time for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSpeed](#) on page 762).

Suffix:

<range> 1...20
range

Parameters:

<SweepTime> Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet.

*RST: 0.27 s

Example:

ESP:RANG1:SWE:TIME 1

Sets the sweep time for range 1 to 1 s.

Manual operation: See "[Sweep Time](#)" on page 260

[SENSe:]ESpectrum:RANGe<range>:SWEep:TIME:AUTO <State>

This command activates or deactivates the automatic sweep time setting for the specified range.

Note that this parameter can not be set for all ranges if "Fast SEM" mode is activated (see [\[SENSe:\]ESpectrum:HighSpeed](#) on page 762).

Suffix:

<range> 1...20
range

Parameters:

<State> ON | OFF

*RST: ON

Example:

ESP:RANG3:SWE:TIME:AUTO OFF

Deactivates the sweep time auto mode for range 3.

Manual operation: See "[Sweep Time Mode](#)" on page 260

[SENSe:]ESpectrum:RANGe<range>:TRANsducer <TransducerName>

This command sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

Suffix:

<range> 1...20
range

Parameters:

<TransducerName> 'string' = name of the transducer

Example: `ESP:RANG1:TRAN 'test'`
Sets the transducer called test for range 1.

Manual operation: See ["Transd. Factor"](#) on page 260

Configuring the Reference Range

The following commands define the reference range for the SEM sweep list.

[SENSe:]ESpectrum:BWID	771
[SENSe:]ESpectrum:FILTer[:RRC]:ALPHA	771
[SENSe:]ESpectrum:FILTer[:RRC][:STATe]	772
[SENSe:]ESpectrum:RRANge	772
[SENSe:]ESpectrum:RTYPe	772

[\[SENSe:\]ESpectrum:BWID](#) <Bandwidth>

This command defines the bandwidth used for measuring the channel power (reference range). This setting takes only effect if channel power is selected as power reference type (see [\[SENSe:\]ESpectrum:RTYPe](#) on page 772).

Parameters:

<Bandwidth> minimum span ≤ value ≤ span of reference range
*RST: 3.84 MHz

Example: `ESP:RTYP CPOW`
Sets the power reference type to channel power.
`ESP:BWID 1 MHZ`
Sets the Tx bandwidth to 1 MHz.

Manual operation: See ["Edit Reference Range"](#) on page 263

[\[SENSe:\]ESpectrum:FILTer\[:RRC\]:ALPHA](#) <Value>

This command sets the alpha value of the RRC filter. This setting takes only effect if channel power is selected as power reference type ([\[SENSe:\]ESpectrum:RTYPe](#) command) and if the RRC filter is activated ([\[SENSe:\]ESpectrum:FILTer\[:RRC\] \[:STATe\]](#) command).

Parameters:

<Value> 0 to 1
*RST: 0.22

Example: `ESP:RTYP CPOW`
Sets the power reference type to channel power.
`ESP:FILT ON`
Activates the use of an RRC filter.
`ESP:FILT:ALPH 0.5`
Sets the alpha value of the RRC filter to 0.5.

Manual operation: See ["Edit Reference Range"](#) on page 263

[SENSe:]ESpectrum:FILTer[:RRC][:STATe] <State>

This command activates or deactivates the use of an RRC filter. This setting only takes effect if channel power is selected as power reference type (see [SENSe:]ESpectrum:RTYPE on page 772).

Parameters:

<State> ON | OFF
*RST: ON

Example:

```
ESP:RTYP CPOW
Sets the power reference type to channel power.
ESP:FILT OFF
Deactivates the use of an RRC filter.
```

Manual operation: See "Edit Reference Range" on page 263

[SENSe:]ESpectrum:RRANge

This command returns the current position (number) of the reference range.

Example:

```
ESP:RRAN?
Returns the current position (number) of the reference range.
```

[SENSe:]ESpectrum:RTYPE <Type>

This command sets the power reference type.

Parameters:

<Type> PEAK | CPOWer
PEAK
Measures the highest peak within the reference range.
CPOWer
Measures the channel power within the reference range (integral bandwidth method).
*RST: CPOWer

Example:

```
ESP:RTYP PEAK
Sets the peak power reference type.
```

Manual operation: See "Edit Reference Range" on page 263

Configuring Power Classes

The following commands define the power classes for SEM measurements.

CALCulate<n>:LIMit<k>:ESpectrum:LIMits.....	773
CALCulate<n>:LIMit<k>:ESpectrum:MODE.....	773
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:COUNT.....	774
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLusive].....	774
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:LIMit[:STATe].....	774

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum.....	775
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum.....	775
CALCulate<n>:LIMit<k>:ESpectrum:VALue.....	776

CALCulate<n>:LIMit<k>:ESpectrum:LIMits <Limits>

This command sets or queries up to 4 power classes in one step.

Suffix:

<n>	irrelevant
<k>	irrelevant

Parameters:

<Limits>	1–3 numeric values between -200 and 200, separated by commas -200, <0-3 numeric values between -200 and 200, in ascending order, separated by commas>, 200
----------	---

Example:

```
CALC:LIM:ESP:LIM -50,50,70
Defines the following power classes:
<-200, -50>
<-50, 50>
<50, 70>
<70, 200>
Query:
CALC:LIM:ESP:LIM?
Response:
-200,-50,50,70,200
```

CALCulate<n>:LIMit<k>:ESpectrum:MODE <Mode>

This command activates or deactivates the automatic selection of the limit line in the Spectrum Emission Mask measurement.

Suffix:

<n>	1...4 window
<k>	irrelevant

Parameters:

<Mode>	AUTO MANUAL AUTO The limit line depends on the measured channel power. MANUAL One of the three specified limit lines is set. *RST: AUTO
--------	--

Example:

```
CALC:LIM:ESP:MODE AUTO
Activates automatic selection of the limit line.
```


CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:COUNT <NoPowerClasses>

This command sets the number of power classes to be defined.

Suffix:

<n>	irrelevant
<k>	irrelevant
<Class>	irrelevant

Parameters:

<NoPowerClasses>	1 to 4
*RST:	1

Example:

```
CALC:LIM:ESP:PCL:COUN 2
```

Two power classes can be defined.

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>[:EXCLusive] <State>

This command sets the power classes used in the spectrum emission mask measurement. It is only possible to use power classes for which limits are defined. Also, either only one power class at a time or all power classes together can be selected.

Suffix:

<n>	irrelevant
<k>	irrelevant
<Class>	1...4 the power class to be evaluated

Parameters:

<State>	ON OFF
*RST:	OFF

Example:

```
CALC:LIM:ESP:PCL1 ON
```

Activates the first defined power class.

Manual operation: See ["Used Power Classes"](#) on page 266
See ["Add/Remove"](#) on page 267

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:LIMit[:STATe] <State>

This command defines which limits are evaluated in the measurement.

Suffix:

<n>	irrelevant
<k>	irrelevant
<Class>	1...4 the power class to be evaluated

Parameters:

<State>	ABSolute RELative AND OR
---------	--------------------------------

ABSolute

Evaluates only limit lines with absolute power values

RELative

Evaluates only limit lines with relative power values

AND

Evaluates limit lines with relative and absolute power values. A negative result is returned if both limits fail.

OR

Evaluates limit lines with relative and absolute power values. A negative result is returned if at least one limit failed.

*RST: REL

Example: CALC:LIM:ESP:PCL:LIM ABS

Manual operation: See "Used Power Classes" on page 266

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MAXimum <Level>

This command sets the upper limit level for one power class. The unit is dBm. The limit always ends at + 200 dBm, i.e. the upper limit of the last power class can not be set. If more than one power class is in use, the upper limit must equal the lower limit of the next power class.

Suffix:

<n>	irrelevant
<k>	irrelevant
<Class>	1...4 the power class to be evaluated

Parameters:

<Level>	<numeric value>
*RST:	+200

Example: CALC:LIM:ESP:PCL1:MAX -40 dBm
Sets the maximum power value of the first power class to -40 dBm.

Manual operation: See "PMin/PMax" on page 266

CALCulate<n>:LIMit<k>:ESPectrum:PCLass<Class>:MINimum <Level>

This command sets the minimum lower level limit for one power class. The unit is dBm. The limit always start at – 200 dBm, i.e. the first lower limit can not be set. If more than one power class is in use, the lower limit must equal the upper limit of the previous power class.

Suffix:

<n>	irrelevant
<k>	irrelevant

<Class> 1...4
the power class to be evaluated

Parameters:

<Level> <numeric_value>
*RST: -200 for class1, otherwise +200

Example:

CALC:LIM:ESP:PCL2:MIN -40 dBm
Sets the minimum power value of the second power class to -40 dBm.

Manual operation: See "PMin/PMax" on page 266

CALCulate<n>:LIMit<k>:ESPectrum:VALue <Power>

This command activates the manual limit line selection and specifies the expected power as a value. Depending on the entered value, one of the predefined limit lines is selected.

Suffix:

<n> 1...4
window

<k> irrelevant

Parameters:

<Power> 33 | 28 | 0
33
P ≥ 33
28
28 < P < 33
0
P < 28
*RST: 0

Example:

CALC:LIM:ESP:VAL 33
Activates manual selection of the limit line and selects the limit line for P = 33.

Configuring List Evaluation

The following commands configure the list evaluation.

MMEMory:STORe<n>:LIST.....	777
CALCulate<n>:ESPectrum:PSEarch PEAKsearch:[IMMediate].....	777
CALCulate<n>:ESPectrum:PSEarch PEAKsearch:AUTO.....	777
CALCulate<n>:ESPectrum:PSEarch PEAKsearch:MARGin.....	777
CALCulate<n>:ESPectrum:PSEarch PEAKsearch:PSHow.....	778

MMEMory:STORe<n>:LIST <FileName>

This command stores the current list evaluation results in a `<file name>.dat` file. The file consists of a data section containing the list evaluation results.

Suffix:

<n> irrelevant

Parameters:

<FileName> <file name>

Example:

MMEM:STOR:LIST 'test'

Stores the current list evaluation results in the `test.dat` file.

Manual operation:

See ["Save Evaluation List"](#) on page 264

See ["ASCII File Export"](#) on page 264

See ["Save Evaluation List"](#) on page 293

See ["ASCII File Export"](#) on page 293

CALCulate<n>:ESPectrum:PSEarch|:PEAKsearch:[IMMediate]

This command starts the list evaluation.

Suffix:

<n> Selects the measurement window.

Example:

CALC:ESP:PSE

Usage:

Event

CALCulate<n>:ESPectrum:PSEarch|:PEAKsearch:AUTO <State>

This command activates or deactivates the list evaluation.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF

*RST: ON

Example:

CALC:ESP:PSE:AUTO OFF

Deactivates the list evaluation.

CALCulate<n>:ESPectrum:PSEarch|:PEAKsearch:MARGin <Margin>

This command sets the margin used for the limit check/peak search.

Suffix:

<n> Selects the measurement window.

Parameters:

<Margin> -200 to 200 dB

*RST: 200 dB

Example: `CALC:ESP:PSE:MARG 100`
Sets the margin to 100 dB.

CALCulate<n>:ESpectrum:PSEarch|:PEAKsearch:PSHow <State>

This command marks all peaks with blue squares in the diagram.

Suffix:

<n> Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:ESP:PSE:PSH ON`
Marks all peaks with blue squares.

Manual operation: See "Show Peaks" on page 264

Retrieving Results

The following commands analyze and retrieve measurement results for SEM measurements.

- [CALCulate<n>:LIMit<k>:FAIL?](#) on page 718
- [CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?](#) on page 721
- [TRACe<n>:DATA](#) on page 726

11.5.1.6 Performing EMI Measurements

The following commands configure and perform EMI measurements.

- [Configuring the Measurement](#)..... 778
- [Performing a Peak Search](#)..... 779
- [Evaluating the Results](#)..... 781

Configuring the Measurement

Commands useful to configure EMI measurements described elsewhere:

- [DISPlay\[:WINDow<n>\]:TRACe<t>:X:SPACing](#) on page 665
- [INPut:LISN:FILTer:HPAS\[:STATe\]](#) on page 685
- [INPut:LISN:PHASe](#) on page 686
- [INPut:LISN\[:TYPE\]](#) on page 686
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]](#) on page 670
- [\[SENSe:\]BANDwidth|BWIDth\[:RESolution\]:TYPE](#) on page 671
- [\[SENSe:\] \[WINDow:\]DETEctor<trace>\[:FUNction\]](#) on page 683
- [\[SENSe:\]SWEep:POINts](#) on page 834

Remote commands exclusive to EMI measurements:

[CALCulate<n>:MARKer<m>:FUNction:FMEasurement:STATe](#)..... 779

CALCulate<n>:MARKer<m>:FUNction:FMEasurement:STATe <State>

This command turns the EMI measurement marker functionality on and off.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> **ON | OFF**

Performing a Peak Search

Commands useful to perform EMI measurements described elsewhere:

- [CALCulate<n>:DELTamarker<m>:AOFF](#) on page 697
- [CALCulate<n>:DELTamarker<m>:TRACe](#) on page 701
- [CALCulate<n>:MARKer<m>:AOFF](#) on page 691
- [CALCulate<n>:MARKer<m>:TRACe](#) on page 695

Remote commands exclusive to EMI measurements:

[CALCulate<n>:DELTamarker<m>:FUNction:FMEasurement:DETEctor](#)..... 779

[CALCulate<n>:MARKer<m>:FUNction:FMEasurement:DETEctor](#)..... 780

[CALCulate<n>:MARKer<m>:FUNction:FMEasurement:DWELl](#)..... 780

[CALCulate<n>:MARKer<m>:FUNction:FMEasurement:PSEarch:AUTO](#)..... 781

CALCulate<n>:DELTamarker<m>:FUNction:FMEasurement:DETEctor <Detector>

This command selects the detector for a specific deltamarker during the final evaluation.

If the deltamarker hasn't been active yet, the command also turns the deltamarker on.

Suffix:

<n> irrelevant

<m> deltamarker

Parameters:

<Detector> **OFF**
turns the deltamarker off

AVER
average detector

CAV
CISPR Average detector

CRMS
RMS Average detector

POS
maximum peak detector

QPE
quasi-peak detector

*RST: OFF

Manual operation: See "[Marker Configuration](#)" on page 303

CALCulate<n>:MARKer<m>:FUNction:FMEasurement:DETector <Detector>

This command selects the detector for a specific marker during the final measurement. If the marker hasn't been active yet, the command also turns the marker on.

Suffix:

<n> irrelevant

<m> marker

Parameters:

<Detector> **OFF**
turns the marker off

AVER
average detector

CAV
CISPR Average detector

CRMS
RMS Average detector

POS
maximum peak detector

QPE
quasi-peak detector

*RST: OFF

Manual operation: See "[Marker Configuration](#)" on page 303

CALCulate<n>:MARKer<m>:FUNction:FMEasurement:DWELI <Time>

This command defines the dwell time during the final measurement.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<Time> Range: min value to max value
*RST: 1 s
Default unit: seconds

Manual operation: See "[Marker Configuration](#)" on page 303
See "[Dwell Time](#)" on page 305

CALCulate<n>:MARKer<m>:FUNction:FMEasurement:PSEarch:AUTO

This command initiates a marker peak search.

Instead of the syntax element PSEarch you can also use PEAKsearch.

Suffix:

<n> irrelevant

<m> irrelevant

Usage: Event

Manual operation: See "Auto Peak Search" on page 303
See "Marker Configuration" on page 303

Evaluating the Results

CALCulate<n>:DELTamarker<m>:FUNction:FMEasurement:LIMit<k>:CONDition ?.....	781
CALCulate<n>:DELTamarker<m>:FUNction:FMEasurement:LIMit<k>:DELTA?.....	782
CALCulate<n>:DELTamarker<m>:FUNction:FMEasurement:RESult?.....	782
CALCulate<n>:MARKer<m>:FUNction:FMEasurement:LIMit<k>:CONDition ?.....	782
CALCulate<n>:MARKer<m>:FUNction:FMEasurement:LIMit<k>:DELTA?.....	783
CALCulate<n>:MARKer<m>:FUNction:FMEasurement:RESult?.....	783

CALCulate<n>:DELTamarker<m>:FUNction:FMEasurement:LIMit<k>:CONDition ? <Condition>

This command queries the condition of a deltamarker position in relation to a certain limit line.

Suffix:

<n> irrelevant

<m> 1...16
deltamarker

<k> 1...8
limit line

Return values:

<Condition> **0**
The deltamarker has passed the limit check.

1
The deltamarker is inside the margins of a limit line.

2
The deltamarker has failed the limit check.

Example: CALC : DELT2 : FUNC : FME : LIM2 : COND?
Queries the condition of deltamarker 2 in relation to limit line 2.

Usage: Query only

Manual operation: See "Marker Table" on page 305

CALCulate<n>:DELTamarker<m>:FUNction:FMEasurement:LIMit<k>:DELta?

This command queries the vertical distance from the deltamarker position to the limit line. The unit is dB.

If the deltamarker has been assigned to a different trace than the limit line, the command returns -200.

Suffix:

<n>	irrelevant
<m>	1...16 deltamarker
<k>	1...8 limit line

Return values:

<Amplitude> Vertical distance to the limit line in dB.

Example:

CALC:DELT3:FUNC:FME:LIM2:DELTA?

Queries the distance of deltamarker 3 to the second limit line.

Usage:

Query only

Manual operation: See "[Marker Table](#)" on page 305

CALCulate<n>:DELTamarker<m>:FUNction:FMEasurement:RESult? <Result>

This command queries the result of the EMI measurement at the deltamarker position.

Suffix:

<n>	irrelevant
<m>	1...16 marker

Return values:

<Result> Power level in dB related to the reference marker you have set for that delta marker.

Example:

CALC:DELT3:FUNC:FME:RES?

Queries the result of delta marker 3.

Usage:

Query only

Manual operation: See "[Marker Table](#)" on page 305

**CALCulate<n>:MARKer<m>:FUNction:FMEasurement:LIMit<k>:CONDition ?
<Condition>**

This command queries the condition of a marker position in relation to a certain limit line.

Suffix:

<n>	irrelevant
-----	------------

<m> 1...16
marker

<k> 1...8
limit line

Return values:

<Condition> **0**
The marker has passed the limit check.
1
The marker is inside the margins of a limit line.
2
The marker has failed the limit check.

Example:

CALC:MARK1:FUNC:FME:LIM2:COND?
Queries the condition of marker 1 in relation to limit line 2.

Usage: Query only

Manual operation: See "[Marker Table](#)" on page 305

CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:LIMit<k>:DELTA?
<Amplitude>

This command queries the vertical distance from the marker position to the limit line. The unit is dB.

If the marker has been assigned to a different trace than the limit line, the command returns -200.

Suffix:

<n> irrelevant

<m> 1...16
marker

<k> 1...8
limit line

Return values:

<Amplitude> Vertical distance to the limit line in dB.

Example:

CALC:MARK3:FUNC:FME:LIM2:DELT?
Queries the distance of marker 3 to the second limit line.

Usage: Query only

Manual operation: See "[Marker Table](#)" on page 305

CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:RESult? <Result>

This command queries the result of the EMI measurement at the marker position.

Suffix:

<n> irrelevant

<m> 1...16
marker

Return values:

<Result> Power level. The unit depends on the one you have currently set.

Example: CALC:MARK1:FUNC:FME:RES?
Queries the result of marker 1.

Usage: Query only

Manual operation: See "[Marker Table](#)" on page 305

11.5.1.7 Measuring the Modulation Depth

The following commands configure and perform AM modulation depth measurements.

CALCulate<n>:MARKer<m>:FUNCTion:MDEPth:SEARChsignal ONCE.....	784
CALCulate<n>:MARKer<m>:FUNCTion:MDEPth:RESult?.....	784
CALCulate<n>:MARKer<m>:FUNCTion:MDEPth[:STATE].....	785

CALCulate<n>:MARKer<m>:FUNCTion:MDEPth:SEARChsignal ONCE

This command initiates a search for the signals required for the AM depth measurement.

Note that the command does not perform a new measurement, but looks for the signals on the current trace.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Example: CALC:MARK:FUNC:MDEP:SEAR ONCE
Executes the search of an AM modulated signal at the currently available trace.

Usage: Event
SCPI confirmed

Manual operation: See "[Search Signals](#)" on page 337

CALCulate<n>:MARKer<m>:FUNCTion:MDEPth:RESult?

This command queries the results of the AM modulation depth measurement..

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Example:	<pre>INIT:CONT OFF Switches to single sweep mode. CALC:MARK:X 10MHZ Sets the reference marker (marker 1) to the carrier signal at 10 MHz. CALC:MARK:FUNC:MDEP ON Switches on the modulation depth measurement. INIT;*WAI Starts a sweep and waits for the end. CALC:MARK:FUNC:MDEP:RES? Outputs the measured value.</pre>
Usage:	Query only
Manual operation:	See "AM Mod Depth" on page 224 See "AM Mod Depth" on page 336

CALCulate<n>:MARKer<m>:FUNCtion:MDEPth[:STATe] <State>

This command turns the AM Modulation Depth measurement on and off.

To work correctly, the measurement requires an AM modulated signal.

If necessary, the command positions marker 1 on the signal with the highest level.

The level value of marker 1 is regarded as the carrier level. On activating the function, marker 2 and marker 3 are automatically set as delta markers symmetrically to the carrier to the adjacent maxima of the trace.

If the position of delta marker 2 is changed, delta marker 3 is moved symmetrically with respect to the reference marker (marker 1). If the position of delta marker 3 is changed, fine adjustment can be performed independently of delta marker 2.

The power at the marker positions is calculated from the measured levels.

The AM modulation depth is calculated from the ratio of power values at the reference marker and the delta markers. If the two AM sidebands differ in power, the average value of the two power values is used for calculating the AM modulation depth.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

- Example:**
- `CALC:MARK:X 10MHZ`
Sets the reference marker (marker 1) to the carrier signal at 10 MHz.
- `CALC:MARK:FUNC:MDEP ON`
Switches on the modulation depth measurement.
- `CALC:DELT2:X 10KHZ`
Sets delta markers 2 and 3 to the signals at 10 kHz from the carrier signal.
- `CALC:DELT3:X 9.999KHZ`
Corrects the position of delta marker 3 relative to delta marker 2.
- Manual operation:** See "AM Mod Depth" on page 224
See "AM Mod Depth" on page 336

11.5.1.8 Measuring the Harmonic Distortion

The following commands configure and perform measurements to determine the harmonic distortion of a signal.

Commands useful to retrieve results described elsewhere:

- `TRACe<n>:DATA` on page 726

<code>CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:BANDwidth:AUTO</code>	786
<code>CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:DIS TORTion?</code>	787
<code>CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:LIST?</code>	787
<code>CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:NHARMonics</code>	788
<code>CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:PRESet</code>	788
<code>CALCulate<n>:MARKer<m>:FUNCtion:HARMonics[:STATe]</code>	789
<code>UNIT:THD</code>	789

`CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:BANDwidth:AUTO <State>`

This command selects the resolution bandwidth of the harmonic in respect to the bandwidth of the first harmonic.

For details refer to "Harmonic RBW Auto" on page 341.

Suffix:

`<n>` Selects the measurement window.

`<m>` irrelevant

Parameters:

`<State>` OFF | ON

OFF
identical

ON
a multiple

*RST: ON

- Example:**
- `CALC:MARK:FUNC:HARM:BAND:AUTO OFF`
Deactivates the automatic bandwidth enlargement.

Manual operation: See ["Harmonic RBW Auto"](#) on page 341

CALCulate<n>:MARKer<m>:FUNcTion:HARMonics:DISToRTion?

This command queries the total harmonic distortion of the signal.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

TOTAL

Return values:

<Result> <Distortion_%>,<Distortion_dB>
Pair of values, one showing the THD in %, one in dB.

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
CALC:MARK:FUNC:HARM:NHARM 3
```

Sets the number of harmonics to be measured to 3.

```
CALC:MARK:FUNC:HARM ON
```

Activates the harmonic distortion measurement.

```
INIT;*WAI
```

Starts a sweep and waits for the end of the sweep.

```
CALC:MARK:FUNC:HARM:DIS? TOT
```

Returns the total distortion in % and dB.

Usage: Query only

Manual operation: See ["Harmonic Distortion"](#) on page 225
See ["Harmonic Distortion"](#) on page 340

CALCulate<n>:MARKer<m>:FUNcTion:HARMonics:LIST?

This command queries the position of the harmonics.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Harmonics> Returns one value for every harmonic. The first value is the absolute power of the first harmonic. The unit is variable. The other values are power levels relative to the first harmonic. The unit for these is dB.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:HARM:NHARM 3
Sets the number of harmonics to be measured to 3.
CALC:MARK:FUNC:HARM ON
Activates the harmonic distortion measurement.
INIT;*WAI
Starts a sweep and waits for the end of the sweep.
CALC:MARK:FUNC:HARM:LIST?
Returns the values for the 3 measured harmonics.
```

Usage: Query only

Manual operation: See ["Harmonic Distortion"](#) on page 225
See ["Harmonic Distortion"](#) on page 340

CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:NHARmonics <NoHarmonics>

This command sets the number of harmonics to be measured.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<NoHarmonics> Range: 1 to 26
*RST: 10

Example:

```
CALC:MARK:FUNC:HARM:NHARM 3
Sets the number of harmonics to be measured to 3.
```

Manual operation: See ["No. of Harmonics"](#) on page 341

CALCulate<n>:MARKer<m>:FUNCTION:HARMonics:PRESet

This command initiates a measurement to determine the ideal configuration for the harmonic distortion measurement.

The method depends on the span.

- Frequency domain (span > 0)
Frequency and level of the first harmonic are determined and used for the measurement list.
- Time domain (span = 0)
The level of the first harmonic is determined. The frequency remains unchanged.

Suffix:
 <n> Selects the measurement window.
 <m> irrelevant

Example: `CALC:MARK:FUNC:HARM:PRES`
 Optimizes the device settings for the harmonic measurement.

Usage: Event

Manual operation: See ["Adjust Settings"](#) on page 341

CALCulate<n>:MARKer<m>:FUNCTion:HARMonics[:STATe] <State>

This command turns the harmonic distortion measurement on and off.

Note the following:

- If you perform the measurement in the frequency domain, the search range for the frequency of the first harmonic, whose power is determined, is defined by the last span.
- If you perform the measurement in the time domain, the current center frequency is used as the frequency of the first harmonic. Thus, the frequency search is bypassed. The first harmonic frequency is set by a specific center frequency in zero span before the harmonic measurement is started.

Suffix:
 <n> Selects the measurement window.
 <m> irrelevant

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: `CALC:MARK:FUNC:HARM ON`
 Activates the harmonic distortion measurement.

Manual operation: See ["Harmonic Distortion"](#) on page 225
 See ["Harmonic Distortion"](#) on page 340

UNIT:THD <Mode>

This command selects the unit for THD measurements.

Parameters:
 <Mode> DB | PCT
 *RST: DB

Example: `UNIT:THD PCT`

11.5.1.9 Measuring the Carrier-to-Noise Ratio

Commands useful to measure the C/N ratio described elsewhere:

- `CALCulate<n>:MARKer<m>:FUNcTion:POWer:RESult?` on page 721
- `CALCulate<n>:MARKer<m>:FUNcTion:POWer:SElect` on page 720
- `CALCulate<n>:MARKer<m>:FUNcTion:POWer[:STATe]` on page 724
- `[SENSe:]POWer:ACHannel:BANDwidth|BWIDth[:CHANnel<channel>]` on page 731
- `[SENSe:]POWer:ACHannel:PRESet` on page 725

11.5.1.10 Measuring the Third Order Intercept Point

The following commands configure and control measurements to determine the third intercept point (TOI).

<code>CALCulate<n>:MARKer<m>:FUNcTion:TOI:SEARChsignal ONCE</code>	790
<code>CALCulate<n>:MARKer<m>:FUNcTion:TOI[:STATe]</code>	790
<code>CALCulate<n>:MARKer<m>:FUNcTion:TOI:RESult?</code>	791

`CALCulate<n>:MARKer<m>:FUNcTion:TOI:SEARChsignal ONCE`

This command initiates a search for signals in the current trace to determine the third intercept point.

No new measurement is performed. Only the currently available trace selected for the TOI measurement is used.

Suffix:

<code><n></code>	Selects the measurement window.
<code><m></code>	Selects the marker.

Example:

`CALC:MARK:FUNC:TOI:SEAR ONCE`
Executes the search for 2 signals and their intermodulation product at the currently available trace.

Usage:

Event
SCPI confirmed

Manual operation: See "[Search Signals](#)" on page 335

`CALCulate<n>:MARKer<m>:FUNcTion:TOI[:STATe] <State>`

This command initiates a measurement to determine the third intercept point.

A two-tone signal with equal carrier levels is expected at the RF input of the instrument. Marker 1 and marker 2 (both normal markers) are set to the maximum of the two signals. Delta marker 3 and delta marker 4 are positioned to the intermodulation products. The delta markers can be modified separately afterwards with `CALCulate<n>:DELTAmarker<m>:X`.

The third-order intercept is calculated from the level spacing between the normal markers and the delta markers.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK:FUNC:TOI ON

Switches on the measurement of the third-order intercept.

Manual operation: See "TOI" on page 224

See "TOI" on page 335

CALCulate<n>:MARKer<m>:FUNCTion:TOI:RESult?

This command queries the results for the third order intercept point measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Return values:

<TOI> Third order intercept point.

Example:

INIT:CONT OFF

Switches to single sweep mode.

CALC:MARK:FUNC:TOI ON

Switches the intercept measurement.

INIT;*WAI

Starts a sweep and waits for the end.

CALC:MARK:FUNC:TOI:RES?

Outputs the measured value.

Usage: Query only

Manual operation: See "TOI" on page 224

See "TOI" on page 335

11.5.1.11 Measuring Statistics

The following commands configure and perform statistics measurements.

- [Configuring Statistical Measurements](#).....792
- [Retrieving Results](#).....793
- [Using Gate Ranges for Statistical Measurements](#).....794
- [Scaling the Diagram](#).....796

Configuring Statistical Measurements

The following commands configure the measurement.

CALCulate<n>:STATistics:APD[:STATE]	792
CALCulate<n>:STATistics:CCDF[:STATE]	792
CALCulate<n>:STATistics:NSAMPLES	793

CALCulate<n>:STATistics:APD[:STATE] <State>

This command switches on or off the measurement of amplitude distribution (APD). On activating this function, the CCDF measurement is switched off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:STAT:APD ON
 Switches on the APD measurement.

Manual operation: See ["APD"](#) on page 224
 See ["APD"](#) on page 316

CALCulate<n>:STATistics:CCDF[:STATE] <State>

This command switches on or off the measurement of the complementary cumulative distribution function (CCDF). On activating this function, the APD measurement is switched off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:STAT:CCDF ON
 Switches on the CCDF measurement.

Manual operation: See ["CCDF"](#) on page 224
 See ["CCDF"](#) on page 321

CALCulate<n>:STATistics:NSAMples <NoMeasPoints>

This command sets the number of measurement points to be acquired for the statistical measurement functions.

Suffix:

<n> irrelevant

Parameters:

<NoMeasPoints> 100 to 1E9
*RST: 100000

Example:

CALC:STAT:NSAM 500
Sets the number of measurement points to be acquired to 500.

Manual operation: See "[# of Samples](#)" on page 317

Retrieving Results

The following commands are required to retrieve the measurement results.

Commands useful to retrieve results described elsewhere:

- [CALCulate<n>:MARKer<m>:X](#) on page 695
- [TRACe<n>:DATA](#) on page 726

CALCulate<n>:STATistics:CCDF:X<Trace>	793
CALCulate<n>:STATistics:RESult<Trace>	794

CALCulate<n>:STATistics:CCDF:X<Trace> <Probability>

This command queries the results of the complementary cumulative distribution function (CCDF) for the specified probability (corresponding to the "Percent Marker" in the display, see "[Percent Marker](#)" on page 322). The suffix of X defines the trace number.

Suffix:

<n> irrelevant
<Trace> 1...6
trace

Parameters:

<Probability> P0_01: Level value for 0.01 % probability
P0_1: Level value for 0.1 % probability
P1: Level value for 1 % probability
P10: Level value for 10 % probability

Example:

CALC:STAT:CCDF:X1? P10
Returns the level values that are over 10 % above the mean value.

Manual operation: See "[CCDF](#)" on page 321

CALCulate<n>:STATistics:RESult<Trace> <ResultType>

This command reads out the results of statistical measurements of a recorded trace.

Suffix:

<n>	irrelevant
<Trace>	1...6 trace

Parameters:

<ResultType> MEAN | PEAK | CFACtor | ALL

MEAN

Average (=RMS) power in dBm measured during the measurement time.

PEAK

Peak power in dBm measured during the measurement time.

CFACtor

Determined CREST factor (= ratio of peak power to average power) in dB.

ALL

Results of all three measurements mentioned before, separated by commas: <mean power>,<peak power>,<crest factor>

The required result is selected via the following parameters:

Example:

`CALC:STAT:RES2? ALL`

Reads out the three measurement results of trace 2. Example of answer string: 5.56,19.25,13.69 i.e. mean power: 5.56 dBm, peak power 19.25 dBm, CREST factor 13.69 dB

Using Gate Ranges for Statistical Measurements

The following commands control gated statistical measurements.

<code>[SENSe:]SWEep:EGATe:TRACe<k>:COMMENT</code>	794
<code>[SENSe:]SWEep:EGATe:TRACe<k>:PERiod</code>	795
<code>[SENSe:]SWEep:EGATe:TRACe<k>:STARt<range></code>	795
<code>[SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>]</code>	795
<code>[SENSe:]SWEep:EGATe:TRACe<k>:STOP<range></code>	796

[SENSe:]SWEep:EGATe:TRACe<k>:COMMENT <Comment>

Defines a comment for one of the traces for gated triggering.

Suffix:

<k>	1...6 trace
-----	----------------

Parameters:

<Comment>

Example:

`SWE:EGAT:TRAC1:COMM "SlotA"`

Manual operation: See "Gate Ranges" on page 320

[SENSe:]SWEep:EGATe:TRACe<k>:PERiod <Value>

This command defines the length of the period to be traced using gated triggering.

Suffix:

<k> 1...6
trace

Parameters:

<Value> <numeric value>
*RST: 0 s

Example:

SWE:EGAT:TRAC1:PER 5ms
Defines the period for gated triggering to 5 ms.

Manual operation: See "Gate Ranges" on page 320

[SENSe:]SWEep:EGATe:TRACe<k>:STARt<range> <Value>

This command defines the starting point for the range to be traced using gated triggering.

Suffix:

<k> 1...6
trace

<range> 1...3
range

Parameters:

<Value> <numeric value>
*RST: OFF

Example:

SWE:EGAT:TRAC1:STAR1 3ms
Sets the Starting point for range 1 on trace 1 at 3 ms.

Manual operation: See "Gate Ranges" on page 320

[SENSe:]SWEep:EGATe:TRACe<k>[:STATe<range>] <State>

This command activates or deactivates tracing for a specific range using gated triggering.

Suffix:

<k> 1...6
trace

<range> 1...3
range

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

SWE:EGAT:TRAC1:STAT1 ON
 Activates tracing for range 1 of trace 1.

Manual operation: See "Gate Ranges" on page 320

[SENSe:]SWEEp:EGATe:TRACe<k>: STOP<range> <Value>

This command defines the stopping point for the range to be traced using gated triggering

Suffix:

<k> 1...6
 trace
 <range> 1...3
 range

Parameters:

<Value> <numeric value>
 *RST: 1 μ s

Example:

SWE:EGAT:TRAC1:STOP1 5ms
 Sets the stopping point for range 1 on trace 1 at 5 ms.

Manual operation: See "Gate Ranges" on page 320

Scaling the Diagram

The following commands configure the diagram for statistical measurements.

CALCulate<n>:STATistics:PRESet.....	796
CALCulate<n>:STATistics:SCALE:AUTO ONCE.....	797
CALCulate<n>:STATistics:SCALE:X:RANGe.....	797
CALCulate<n>:STATistics:SCALE:X:RLEVel.....	798
CALCulate<n>:STATistics:SCALE:Y:LOWer.....	798
CALCulate<n>:STATistics:SCALE:Y:UNIT.....	798
CALCulate<n>:STATistics:SCALE:Y:UPPer.....	799

CALCulate<n>:STATistics:PRESet

This command resets the scaling of the X and Y axes in a statistical measurement. The following values are set:

x-axis ref level:	-20 dBm
x-axis range APD:	100 dB
x-axis range CCDF:	20 dB

y-axis upper limit:	1.0
y-axis lower limit:	1E-6

Suffix:

<n> irrelevant

Example:

CALC:STAT:PRES

Resets the scaling for statistical functions

Manual operation: See ["Default Settings"](#) on page 319

CALCulate<n>:STATistics:SCALE:AUTO ONCE

This command optimizes the level setting of the instrument depending on the measured peak power, in order to obtain maximum instrument sensitivity.

To obtain maximum resolution, the level range is set as a function of the measured spacing between peak power and the minimum power for the APD measurement and of the spacing between peak power and mean power for the CCDF measurement. In addition, the probability scale for the number of test points is adapted.

Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the auto range process which would otherwise be aborted.

Suffix:

<n> irrelevant

Example:

CALC:STAT:SCAL:AUTO ONCE;*WAI

Adapts the level setting for statistical measurements.

Manual operation: See ["Adjust Settings"](#) on page 320

CALCulate<n>:STATistics:SCALE:X:RANGe <Value>

This command defines the level range for the x-axis of the measurement diagram. The setting is identical to the level range setting defined with the [DISPlay\[:WINDow<n>\]:TRACe<t>:Y\[:SCALE\]](#) command.

Suffix:

<n> irrelevant

Parameters:

<Value> 10dB to 200dB

*RST: 100dB

Example:

CALC:STAT:SCAL:X:RANG 20dB

Manual operation: See ["x-Axis Range"](#) on page 317

CALCulate<n>:STATistics:SCALE:X:RLEVel <Value>

This command defines the reference level for the x-axis of the measurement diagram. The setting is identical to the reference level setting using the `DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel` command.

With the reference level offset `<> 0` the indicated value range of the reference level is modified by the offset.

The unit depends on the setting performed with `CALCulate<n>:UNIT:POWer`.

Suffix:

<n> irrelevant

Parameters:

<Value> -120dBm to 20dBm
*RST: -20dBm

Example: `CALC:STAT:SCAL:X:RLEV -60dBm`

Manual operation: See "[x-Axis Ref Level](#)" on page 317

CALCulate<n>:STATistics:SCALE:Y:LOWer <Value>

This command defines the lower limit for the y-axis of the diagram in statistical measurements. Since probabilities are specified on the y-axis, the entered numeric values are dimensionless.

Suffix:

<n> selects the screen

Parameters:

<Value> 1E-9 to 0.1
*RST: 1E-6

Example: `CALC:STAT:SCAL:Y:LOW 0.001`

Manual operation: See "[y-Axis Min Value](#)" on page 319

CALCulate<n>:STATistics:SCALE:Y:UNIT <Unit>

This command defines the scaling type of the y-axis.

Suffix:

<n> selects the screen

Parameters:

<Unit> PCT | ABS
*RST: ABS

Example: `CALC:STAT:SCAL:Y:UNIT PCT`
Sets the percentage scale.

Manual operation: See "[y-Unit % / Abs](#)" on page 319

CALCulate<n>:STATistics:SCALe:Y:UPPer <Value>

This command defines the upper limit for the y-axis of the diagram in statistical measurements. Since probabilities are specified on the y-axis, the entered numeric values are dimensionless.

Suffix:

<n> irrelevant

Parameters:

<Value> 1E-8 to 1.0
*RST: 1.0

Example: CALC:STAT:SCAL:Y:UPP 0.01

Manual operation: See "y-Axis Max Value" on page 319

11.5.1.12 Measuring in the Time Domain

The following commands configure and perform time domain power measurements.

Configuring the Measurement

The following commands control measurement configurations for measurements of the time domain power

CALCulate<n>:MARKer<m>:FUNction:SUMMery:AOff.....	799
CALCulate<n>:MARKer<m>:FUNction:SUMMery:AVERage.....	799
CALCulate<n>:MARKer<m>:FUNction:SUMMery:MODE.....	800
CALCulate<n>:MARKer<m>:FUNction:SUMMery:PHOLd.....	800
CALCulate<n>:MARKer<m>:FUNction:SUMMery:REFerence:AUTO ONCE.....	801
CALCulate<n>:MARKer<m>:FUNction:SUMMery[:STATe].....	801

CALCulate<n>:MARKer<m>:FUNction:SUMMery:AOff

This command turns all time domain power measurements off.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

CALC:MARK:FUNC:SUMM:AOff

Switches off the functions for power measurement in zero span.

Usage:

Event

CALCulate<n>:MARKer<m>:FUNction:SUMMery:AVERage <State>

This command turns averaging for the active power measurement in zero span on and off.

Averaging is reset by switching it off and on again.

The number of results required for the calculation of average is defined with `[SENSe:]AVERAge<n>:COUNT`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:AVER ON
Switches on the calculation of average.
AVER:COUN 200
Sets the measurement counter to 200.
INIT;*WAI
Starts a sweep and waits for the end.
```

CALCulate<n>:MARKer<m>:FUNctioN:SUMMery:MODE <Mode>

This command selects absolute or relative power measurement in zero span.

The reference power for relative measurement is defined with `CALCulate<n>:MARKer<m>:FUNctioN:SUMMery:REfereNce:AUTO ONCE`. If the reference power is not defined, the value 0 dBm is used.

Suffix:

<n> Selects the measurement window.
 <m> irrelevant

Parameters:

<Mode> ABSolute | RELative
 *RST: ABSolute

Example:

```
CALC:MARK:FUNC:SUMM:MODE REL
Switches the power measurement in zero span to relative.
```

CALCulate<n>:MARKer<m>:FUNctioN:SUMMery:PHOLd <State>

This command turns the peak hold function for the active power measurement in zero span on and off.

If on, the measurement results show only the maximum power that has been measured for each sweep point.

The peak hold function is reset by switching it off and on again.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK:FUNC:SUMM:PHOL ON
Switches on the function.

CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:REFerence:AUTO ONCE

This command sets the currently measured average value (`CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:MEAN[:STATe]`) and RMS value (`CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:RMS[:STATe]`) as reference values for relative measurements in zero span.

If the measurement of RMS value and average is not activated, the reference value 0 dBm is used.

If the function `CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:AVERage` or `CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:PHOLd` is switched on, the current value is the accumulated measurement value at the time considered.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Example:

CALC:MARK:FUNC:SUMM:REF:AUTO ONCE

Takes the currently measured power as reference value for the relative power measurement in zero span.

Usage:

Event

CALCulate<n>:MARKer<m>:FUNCTion:SUMMary[:STATe] <State>

This command turns time domain power measurements on and off. This measurement is only available in zero span.

Thus one or several measurements can be first selected and then switched on and off together using this command.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK:FUNC:SUMM:STAT ON

Manual operation: See "Time Domain Power (zero span)" on page 224
See "Time Domain Power" on page 296

Retrieving Measurement Results

The following commands analyze and retrieve measurement results for time domain power measurements.

Commands useful to retrieve results described elsewhere:

- `TRACe<n>:DATA` on page 726

<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:MEAN:AVERage:RESult?</code>	802
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:MEAN:PHOLd:RESult?</code>	803
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:MEAN:RESult?</code>	803
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:MEAN[:STATe]</code>	804
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:PPEak:AVERage:RESult?</code>	804
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:PPEak:PHOLd:RESult?</code>	805
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:PPEak:RESult?</code>	805
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:PPEak[:STATe]</code>	806
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:RMS:AVERage:RESult?</code>	806
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:RMS:PHOLd:RESult?</code>	807
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:RMS:RESult?</code>	808
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:RMS[:STATe]</code>	808
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:SDEViation:AVERage:RESult?</code>	809
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:SDEViation:PHOLd:RESult?</code>	809
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:SDEViation:RESult?</code>	810
<code>CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:SDEViation[:STATe]</code>	810

`CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:MEAN:AVERage:RESult?`

This command queries the average mean time domain power. The query is only possible if averaging has been activated previously using `CALCulate<n>:MARKer<m>:FUNCTion:SUMMary:AVERage`.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

`<n>` Selects the measurement window.
`<m>` Selects the marker.

Return values:

`<MeanPower>` Mean power of the signal during the measurement time.

Example: INIT:CONT OFF
 Switches to single sweep mode.
 CALC:MARK:FUNC:SUMM:MEAN ON
 Switches on the function.
 CALC:MARK:FUNC:SUMM:AVER ON
 Switches on the average value calculation.
 INIT;*WAI
 Starts a sweep and waits for the end.
 CALC:MARK:FUNC:SUMM:MEAN:AVER:RES?
 Outputs the result.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:SUMMary:MEAN:PHOLd:RESult?

This command queries the maximum mean time domain power. The query is only possible if the peak hold function has been activated previously using [CALCulate<n>:MARKer<m>:FUNction:SUMMary:PHOLd](#).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<MeanPower> Mean power of the signal during the measurement time.

Example: INIT:CONT OFF
 Switches to single sweep mode.
 CALC:MARK:FUNC:SUMM:MEAN ON
 Switches on the function.
 CALC:MARK:FUNC:SUMM:PHOL ON
 Switches on the peak value measurement.
 INIT;*WAI
 Starts a sweep and waits for the end.
 CALC:MARK:FUNC:SUMM:MEAN:PHOL:RES?
 Outputs the result.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:SUMMary:MEAN:RESult?

This command queries the mean time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<MeanPower> Mean power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
CALC:MARK:FUNC:SUMM:MEAN ON
```

Switches on the function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:SUMM:MEAN:RES?
```

Outputs the result.

Usage: Query only

Manual operation: See "Mean" on page 296

CALCulate<n>:MARKer<m>:FUNction:SUMMery:MEAN[:STATe] <State>

This command turns the measurement of the mean time domain power on and off.

Note: The measurement is performed on the trace marker 1 is positioned. In order to evaluate another trace, marker 1 must be positioned on another trace with

[CALCulate<n>:MARKer<m>:TRACe](#).

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

```
*RST: OFF
```

Example:

```
CALC:MARK:FUNC:SUMM:MEAN ON
```

Switches on the function.

Manual operation: See "Mean" on page 296

CALCulate<n>:MARKer<m>:FUNction:SUMMery:PPEak:AVERAge:RESult?

This command queries the average positive peak time domain power. The query is only possible if averaging has been activated previously using [CALCulate<n>:](#)

[MARKer<m>:FUNction:SUMMery:AVERAge](#).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m>	Selects the marker.
Return values:	
<PeakPower>	Peak power of the signal during the measurement time.
Example:	<pre>INIT:CONT OFF Switches to single sweep mode. CALC:MARK:FUNC:SUMM:PPE ON Switches on the function. CALC:MARK:FUNC:SUMM:AVER ON Switches on the calculation of average. INIT;*WAI Starts a sweep and waits for the end. CALC:MARK:FUNC:SUMM:PPE:AVER:RES? Outputs the result.</pre>
Usage:	Query only

CALCulate<n>:MARKer<m>:FUNction:SUMMary:PPEak:PHOLd:RESult?

This command queries the maximum positive peak time domain power. The query is only possible if the peak hold function has been activated previously using [CALCulate<n>:MARKer<m>:FUNction:SUMMary:PHOLd](#).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:	
<n>	Selects the measurement window.
<m>	Selects the marker.
Return values:	
<PeakPower>	Peak power of the signal during the measurement time.
Example:	<pre>INIT:CONT OFF Switches to single sweep mode. CALC:MARK:FUNC:SUMM:PPE ON Switches on the function. CALC:MARK:FUNC:SUMM:PHOL ON Switches on the measurement of the peak value. INIT;*WAI Starts a sweep and waits for the end. CALC:MARK:FUNC:SUMM:PPE:PHOL:RES? Outputs the result.</pre>
Usage:	Query only

CALCulate<n>:MARKer<m>:FUNction:SUMMary:PPEak:RESult?

This command queries the positive peak time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<PeakPower> Peak power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:PPE ON
Switches on the function.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:PPE:RES?
Outputs the result.
```

Usage: Query only

Manual operation: See "Peak" on page 296

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:PPEak[:STATE] <State>

This command turns the measurement of the positive peak time domain power on and off.

Note: The measurement is performed on the trace marker 1 is positioned. In order to evaluate another trace, marker 1 must be positioned on another trace with

[CALCulate<n>:MARKer<m>:TRACe](#).

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:MARK:FUNC:SUMM:PPE ON
```


Switches on the function.

Manual operation: See "Peak" on page 296

CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:RMS:AVERAGE:RESULT?

This command queries the average RMS time domain power. The query is only possible if averaging has been activated previously using [CALCulate<n>:MARKer<m>:FUNCTION:SUMMARY:AVERAGE](#).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:RMS ON
Switches on the function.
CALC:MARK:FUNC:SUMM:AVER ON
Switches on the average value calculation.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:RMS:AVER:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:SUMMary:RMS:PHOLd:RESult?

This command queries the maximum RMS time domain power. The query is only possible if the peak hold function has been activated previously using [CALCulate<n>:MARKer<m>:FUNction:SUMMary:PHOLd](#).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:RMS ON
Switches on the function.
CALC:MARK:FUNC:SUMM:PHOL ON
Switches on the peak value measurement.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:RMS:PHOL:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNcTion:SUMMary:RMS:RESult?

This command queries the RMS time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:RMS ON
Switches on the function.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:RMS:RES?
Outputs the result.
```

Usage: Query only

Manual operation: See "RMS" on page 296

CALCulate<n>:MARKer<m>:FUNcTion:SUMMary:RMS[:STATe] <State>

This command turns the measurement of the RMS time domain power on and off.

Note: The measurement is performed on the trace marker 1 is positioned. In order to evaluate another trace, marker 1 must be positioned on another trace with [CALCulate<n>:MARKer<m>:TRACe](#).

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:MARK:FUNC:SUM:RMS ON
Switches on the function.
```

Manual operation: See "RMS" on page 296

CALCulate<n>:MARKer<m>:FUNction:SUMMary:SDEViation:AVERage:RESult?

This command queries the average standard deviation of the time domain power. The query is only possible if averaging has been activated previously using [CALCulate<n>:MARKer<m>:FUNction:SUMMary:AVERage](#).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<StandardDeviation> Standard deviation of the signal during the measurement time.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:SUMM:SDEV ON
Switches on the function.
CALC:MARK:FUNC:SUMM:AVER ON
Switches on the calculation of average.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:SUMM:MEAN:SDEV:RES?
Outputs the result.
```

Usage: Query only

CALCulate<n>:MARKer<m>:FUNction:SUMMary:SDEViation:PHOLd:RESult?

This command queries the maximum standard deviation of the time domain power. The query is only possible if the peak hold function has been activated previously using [CALCulate<n>:MARKer<m>:FUNction:SUMMary:PHOLd](#).

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Return values:

<StandardDeviation> Standard deviation of the signal during the measurement time.

Example: INIT:CONT OFF
 Switches to single sweep mode.
 CALC:MARK:FUNC:SUMM:SDEV ON
 Switches on the function.
 CALC:MARK:FUNC:SUMM:PHOL ON
 Switches on the peak value measurement.
 INIT;*WAI
 Starts a sweep and waits for the end.
 CALC:MARK:FUNC:SUMM:SDEV:PHOL:RES?
 Outputs the result.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:RESult?

This command queries the standard deviation of the time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:
 <StandardDeviation> Standard deviation of the signal during the measurement time.

Example: INIT:CONT OFF
 Switches to single sweep mode.
 CALC:MARK:FUNC:SUMM:SDEV ON
 Switches on the function.
 INIT;*WAI
 Starts a sweep and waits for the end.
 CALC:MARK:FUNC:SUMM:SDEV:RES?
 Outputs the result.

Usage: Query only

Manual operation: See "[Std Dev](#)" on page 296

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:SDEViation[:STATE] <State>

This command turns the measurement of the standard deviation of the time domain power on and off.

Note: The measurement is performed on the trace marker 1 is positioned. In order to evaluate another trace, marker 1 must be positioned on another trace with [CALCulate<n>:MARKer<m>:TRACe](#).

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK:FUNC:SUMM:SDEV ON

Switches on the measurement of the standard deviation.


Manual operation: See "Std Dev" on page 296

11.5.1.13 Measuring the Pulse Power

The commands of this subsystem are used to determine the mean burst power or peak burst power for a given number of signal bursts, and for outputting the results in a list. Since all the settings required for a measurement are combined in a single command, the measurement speed is considerably higher than when using individual commands.

For measuring the signal bursts, the gated sweep function is used in zero span. The gate is controlled either by an external trigger signal or by the video signal. An individual trigger event is required for each burst to be measured. If an external trigger signal is used, the threshold is fixed to TTL level, while with a video signal the threshold can be set as desired.

The following graphics shows the relation between trigger time, trigger offset (for delayed gate opening) and measurement time.

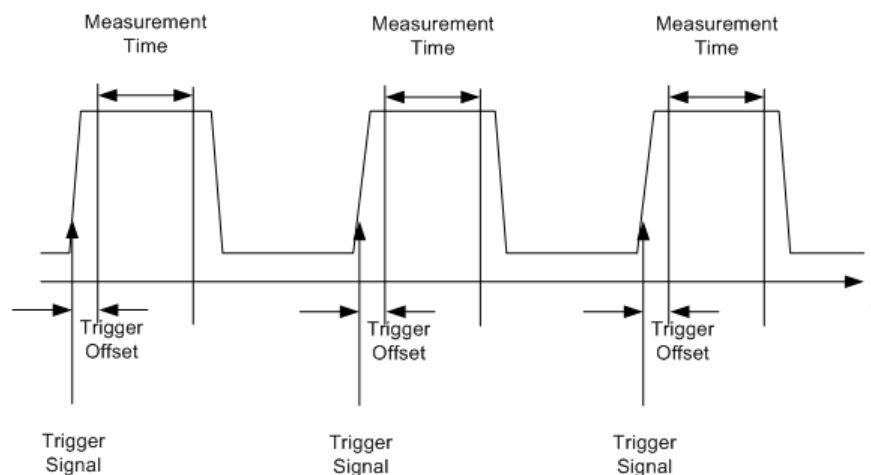

Depending on the settings made, the measurements are performed with the RMS detector for RMS power or the PEAK detector for peak power. For all these measurements, trace 1 of the selected system is used.

The commands of this subsystem can be used in two different ways:

- Setting up the instrument and at the same time querying the result list: This method ensures the smallest delay between measurement and the output of the measured values, but requires the control computer to wait actively for the response of the instrument.

- Setting up the instrument and querying the result list after synchronization to the end of measurement: With this method the control computer can be used for other activities while the instrument is performing the measurement at the cost of additional time needed for synchronization via service request.

[SENSe:]MPOWer:FTYPE.....	812
[SENSe:]MPOWer:RESult[:LIST]?.....	812
[SENSe:]MPOWer:RESult:MIN?.....	813
[SENSe:]MPOWer[:SEQUence].....	813

[SENSe:]MPOWer:FTYPE <FilterType>

This command selects the filter type for pulse power measurements.

Parameters:

<FilterType> NORMAl | CFILter | RRC

Example:

SENSe:MPOWer:FTYPE CFILter

[SENSe:]MPOWer:RESult[:LIST]?

This command queries the results of the pulse power measurement.

This command may be used to obtain measurement results in an asynchronous way, using the service request mechanism for synchronization to the end of the measurement.

If there are no results, the command returns an error.

Parameters:

<PulsePower> List of pulse powers.
 The number of values depends on the number of pulses you have been measuring.
 The unit is dBm.

Example:

```
*ESE 1
*SRE 32
Configuration of status reporting systems for the generation of
an SRQ on operation complete
SENSe:MPOWer 935.2MHz,1MHz,434us,VIDEO,50PCT,
5us,MEAN,20;*OPC
Configuring and starting the measurement
...
Further actions of the control computer during measurement
On SRQ:
Response to service request
SENSe:MPOWer:RESult?
```

Usage:

Query only

[SENSe:]MPOWer:RESult:MIN?

This command queries the lowest pulse power that has been measured during a pulse power measurement.

If there are no results, the command returns an error.

Return values:

<PulsePower> Lowest power level of the pulse power measurement.
The unit is dBm.

Example:

```
*ESE 1
*SRE 32
Configuration of status reporting systems for the generation of
an SRQ on operation complete
SENSe:MPOWer 935.2MHz,1MHz,434us,VIDEO,50PCT,
5us,MEAN,20;*OPC
Configuring and starting the measurement
...
Further actions of the control computer during measurement
On SRQ:
Response to service request
SENSe:MPOWer:RESult:MIN?
```

Usage: Query only

[SENSe:]MPOWer[:SEQuence] <Frequency>, <RBW>, <MeasTime>, <TriggerSource>, <TriggerLevel>, <TriggerOffset>, <Detector>, <#OfPulses>

This command configures and initiates the pulse power measurement.

The R&S ESR caches all measurement parameters that you can set with this command. If you use the command repeatedly, the R&S ESR only changes those settings that you have actually changed before initiating the measurement. Thus, measurement times are kept as low as possible.

If you synchronize the measurement with *OPC, the R&S ESR produces a service request when all frequencies have been measured and the number of individual measurements has been performed.

Note that using the command as a query initiates the measurement and returns the results if all frequencies have been measured. For more information on querying the results see .

To reduce the setting time, the setup is performed simultaneously for all selected parameters.

The query adapts the instrument settings, performs the defined number of measurements and outputs the measurement results list.

This measurement is not compatible with other measurements, especially as far as marker functions, adjacent-channel measurement or statistics are concerned. The corresponding functions are therefore automatically switched off. In return, incompatible commands automatically deactivate the multi burst power function.

The function is only available in the REMOTE operation. It is deactivated on switching back to LOCAL.

Parameters:

<Frequency>	Defines the pulse frequency. Range: 0 Hz to fmax
<RBW>	Defines the resolution bandwidth. Range: 10 Hz to 10 MHz in steps of 1, 3, 10
<MeasTime>	Defines the measurement time. Range: 1 μ s to 30 s
<TriggerSource>	Selects a trigger source. EXtErnal The trigger signal is fed from the "Ext. Trigger/Gate" input on the rear of the unit. VIDeo The internal video signal is used as trigger signal.
<TriggerLevel>	Defines a trigger level. The trigger level is available for the video trigger. In that case, the level is a percentage of the diagram height. In case of an external trigger, the R&S ESR uses a fix TTL level. Range: 0 PCT to 100 PCT
<TriggerOffset>	Defines the trigger delay. The trigger delay is the time between the detection of the trigger signal and the start of the measurement. Range: see data sheet
<Detector>	Selects the detector and therefore the way the measurement is evaluated. MEAN Calculates the RMS pulse power. PEAK Calculates the peak pulse power.
<#OfPulses>	Defines the number of pulses included in the measurement. Range: 1 to 32001
Return values:	
<PowerLevel>	Pulse power level. The result is a list of floating point values separated by commas. The unit is dBm.

Example:**Sample setting:**

```
SENSE:MPOWer 935.2MHz, 1MHz, 434us, VIDEO, 50PCT,
5us, MEAN, 20
```

Performs a measurement sequence with the following settings:

```
Frequency = 935.2 MHz,
Resolution bandwidth = 1 MHz
Measurement time = 434 µs
Trigger source = VIDEO
Trigger threshold = 50 %
Trigger offset = 5 µs
Type of measurement = MEAN power
No. of measurements = 20
```

Sample query:

```
SENSe:MPOWer? 935.2MHz, 1MHz, 434us, VIDEO,
50PCT, 5us, MEAN, 20
```

Performs the same measurement and in addition returns the results list immediately after completion of the last measurement.

Sample result:

```
18.3,18.6,18.1,18.0,17.9,18.3,18.6,18.1,18.0,17.9,18.3,18.6,18.
1,18.0,17.9,18.3,18.6,18.1,18.0,17.9
```

11.5.1.14 Performing List Evaluations

The commands of this subsystem are used for measuring the power at a list of frequency points with different device settings. The measurement is always performed in zero span. A new trigger event is required for each test point (exception: trigger "FREE RUN").

The results are output as a list in the order of the entered frequency points. The number of results per test point depends on the number of concurrently active measurements (peak/RMS/average). The number of frequencies is limited to 200 entries.

Selection of concurrently active measurements and setting of parameters that are constant for the whole measurement is performed via a configuration command (`[SENSe:]LIST:POWER:SET`). This also includes the setting for trigger and gate parameters.



Settings that are not directly included in commands of this subsystem can be configured by sending the corresponding commands prior to the `[SENSe:]LIST:... commands`.

Please note that changes to the trigger level have to be executed in zero span in order to take effect for the `[SENSe:]LIST:... commands`.

The commands of this subsystem can be used in two different ways:

- Instrument setup, measurement and querying of the results in a single command line. With this method, there is the least delay between the measurement and the result output. However, it requires the control computer to wait for the response from the instrument.

- Instrument setup and querying of the result list at the end of the measurement: With this method, the control computer may be used for other activities while the measurement is being performed. However, more time is needed for synchronization via service request.

[SENSe:]LIST:POWer:RESult?	816
[SENSe:]LIST:POWer[:SEQuence]	817
[SENSe:]LIST:POWer:SET	819
[SENSe:]LIST:POWer:STATe	820

[SENSe:]LIST:POWer:RESult?

This command queries the results of the list evaluation.

This command may be used to obtain measurement results in an asynchronous way, using the service request mechanism for synchronization to the end of the measurement.

If there are no results, the command returns an error.

Return values:

<PowerLevel> Power level for each frequency included in the measurement. The command returns up to 3 power levels for each frequency, depending on the number of evaluation modes you have turned on with [SENSe:]LIST:POWer:SET on page 819. The result is a list of floating point values separated by commas. The unit depends on [SENSe:]LIST:POWer[:SEQuence].

Example:

```
*ESE 1
*SRE 32
Configuration of the status reporting system for the generation of
an SRQ on operation complete
SENSe:LIST:POWer
935.2 MHz,-20dBm,10dB,OFF,NORM,1 MHz,3 MHz,
434us,0,
935.4 MHz,-20dBm,10dB,10dB,NORM,30 kHz,100 kHz,
434us,0,
935.6 MHz,-20dBm,10dB,20dB,NORM,30 kHz,100 kHz,
434us,0;
*OPC
Configuring and starting the measurement
...
Further actions of the control computer during measurement
On SRQ:
SENSe:LIST:POWer:RESult?
Response to service request
```

Usage: Query only

[SENSe:]LIST:POWer[:SEQuence]

<Frequency>, <RefLevel>, <RfAtt>, <EIAtt>, <FilterType>, <RBW>, <VBW>, <Meas Time>, <TriggerLevel>

This command configures and initiates the List Evaluation measurement.

The list can contain up to 200 entries (frequencies). You can define a different instrument setup for each frequency that is in the list.

If you synchronize the measurement with *OPC, the R&S ESR produces a service request when all frequencies have been measured and the number of individual measurements has been performed.

To reduce the setting time, all indicated parameters are set up simultaneously at each test point.

The measurement is performed in zero span and therefore the span is set to 0 Hz. If the span > 0 is set, the function is automatically switched off.

The measurement is not compatible with other measurements, especially as far as marker, adjacent channel power measurement or statistics are concerned. The corresponding commands thus automatically deactivate the function.

The function is only available in REMOTE operation. It is deactivated when switching the instrument back to LOCAL.

Note that using the command as a query initiates the measurement and returns the results if all frequencies have been measured. For more information on querying the results see [\[SENSe:\]LIST:POWer:RESult?](#) on page 816 .

The following parameters are the settings for an individual frequency point. They are repeated for each frequency point.

Setting parameters:

<Frequency>	Defines the receive frequency. Each frequency corresponds to one list entry. Range: 0 Hz to fmax
<RefLevel>	Defines the reference level for a list entry. Range: -130 dBm to 30 dBm Increment: 0.01 dBm
<RfAtt>	Defines the RF attenuation for a list entry. Range: 0 dB to 70 dB Increment: 5 dB
<FilterType>	Selects the filter type for a list entry. For more information see [SENSe:]BANDwidth BWIDth[:RESolution]:TYPE on page 671.
<RBW>	Defines the resolution bandwidth for a list entry. For the range of values refer to "Res BW Manual" on page 361. Refer to Chapter 6.2.6.3, "Selecting the Appropriate Filter Type" , on page 366 for possible combinations of filter type and filter bandwidth for the <filter type> = CFILter and <filter type> = RRC.

<VBW>	<p>Defines the video bandwidth for a list entry. The value is ignored for <filter type> = "CFILter" or "RRC" Range: 1 Hz to 10 MHz in 1, 3, 10 steps</p>
<MeasTime>	<p>Defines the measurement time for a list entry. For details refer to "Sweeptime Manual" on page 362. Range: 1 μs to 16000 s</p>
<TriggerLevel>	The trigger level must be 0.
Return values:	
<PowerLevel>	<p>Power level for each frequency included in the measurement. The command returns up to 3 power levels for each frequency, depending on the number of evaluation modes you have turned on with [SENSE:]LIST:POWer:SET on page 819. The result is a list of floating point values separated by commas. The unit depends on CALCulate<n>:UNIT:POWer.</p>
Example:	<pre>SENSE:LIST:POWer? 935.2 MHz,0 dBm,10 dB,OFF,NORM,1 MHz,3 MHz, 440us,0, 935.4 MHz,0dBm,10dB,10dB,NORM,30 kHz,100 kHz, 440us,0, 935.6 MHz,0dBm,10dB,20dB,NORM,30 kHz,100 kHz, 440us,0 Result list: -28.3,-30.6,-38.1</pre>
Example:	<pre>SENSE:LIST:POWer:SET ON,ON,ON,IMM,POS,0,0 Activates the power measurement of the peak, RMS and average values. SENSE:LIST:POWer? 935.2 MHz,0dBm,10dB,OFF,NORM,1 MHz,3 MHz,440us, 0, 935.4 MHz,0dBm,10dB,10dB,NORM,30 kHz,100 kHz, 440us,0, 935.6 MHz,0dBm,10dB,20dB,NORM,30 kHz,100 kHz, 440us,0 Result list (3 results per frequency point): -28.3, -29.6, 1.5, -30.6, -31.9, 0.9, -38.1, -40.0, 2.3</pre>

Example:

```
SENSe:LIST:POWer
935.2 MHz,0dBm,10dB,OFF,NORM,1 MHz,3 MHz,440us,
0,
935.4 MHz,0dBm,10dB,10dB,CFIL,30 kHz,100 kHz,
440us,0,
935.6 MHz,0dBm,10dB,20dB,CFIL,30 kHz,100 kHz,
440us,0
```

Performs a measurement sequence with the settings described in [Table 11-23](#).

```
SENSe:LIST:POWer?
935.2 MHz,0dBm,10dB,OFF,NORM,1 MHz,3 MHz,440us,
0,
935.4 MHz,0dBm,10dB,10dB,CFIL,30 kHz,100 kHz,
440us,0,
935.6 MHz,0dBm,10dB,20dB,CFIL,30 kHz,100 kHz,
440us,0
```

Performs the same measurement and returns the result list immediately after the last frequency point.

Table 11-23: Settings for power list example

Step	Freq. [MHz]	Ref Level [dBm]	RF Att [dB]	el Att [dB]	Filter type	RBW	VBW	Meas Time [us]	TRG Level (reserved)
1	935.2	0	10	OFF	Normal	1 MHz	3 MHz	440	0
2	935.4	0	10	10	Channel	30 kHz	100 kHz	440	0
3	935.6	0	10	20	Channel	30 kHz	100 kHz	440	0

[SENSe:]LIST:POWer:SET

<PeakPower>,<RMSPower>,<AVGPower>,<TriggerSource>,<TriggerSlope>,<TriggerOffset>,<GateLength>

This command defines global List Evaluation parameters.

These parameters are valid for every frequency you want to measure.

The state of the first three parameters (<PeakPower>, <RMSPower> and <AVGPower>) define the number of results for each frequency in the list.

Note that you have to set the trigger level *after* sending this command.

Parameters:

<PeakPower> ON | OFF
 Turns peak power evaluation on and off.
 *RST: ON

<RMSPower> ON | OFF
 Turns RMS power evaluation on and off.
 *RST: OFF

<AVGPower>	ON OFF Turns average power evaluation on and off. *RST: OFF
<TriggerSource>	IMMediate EXTernal VIDEo IFPower RFPower Selects a trigger source. For more information see " Trg/Gate Source " on page 375. *RST: IMM
<TriggerSlope>	NEGative POSitive Selects the trigger slope. *RST: POS
<TriggerOffset>	Defines the trigger delay. The trigger delay is the time between the detection of the trigger signal and the start of the measurement at the next frequency point. Range: span = 0 Hz: (-sweep time) to 30 s; span > 10 Hz: 31.25 ns to 30 s *RST: 0 s
<GateLength>	Defines the gate length for gated measurements. Setting 0 seconds turns gated measurements off. Other values activate the gated trigger function. To perform gated measurements, the trigger source must be different from IMMEDIATE. Range: 31.25 ns to 30 s *RST: 0 s
Example:	<code>SENSe:LIST:POWer:SET ON,OFF,OFF,EXT,POS,10US,434US</code>

[SENSe:]LIST:POWer:STATe <State>

This command turns the List Evaluation off.

Parameters:

<State> OFF

Example: `SENS:LIST:POW:STAT OFF`

11.5.1.15 Probe Configuration

PROBe:ID:PARTnumber?	821
PROBe:ID:SRNumber?	821
PROBe:SETup:MODE	821
PROBe:SETup:NAME?	821
PROBe:SETup:STATe?	821
PROBe[:STATe]	822

PROBe:ID:PARTnumber?

This command returns the material part number of the connected probe.

Example: PROB:ID:PART?

Usage: Query only

Manual operation: See "[Part number](#)" on page 387

PROBe:ID:SRNumber?

This command returns the serial number of the connected probe.

Example: PROB:ID:SRN?

Usage: Query only

Manual operation: See "[Serial Number](#)" on page 387

PROBe:SETup:MODE <Mode>

This command defines which action is taken when the probe's micro button is pressed.

Parameters:

<Mode> **RSINgLe**
 A single sweep is performed.

NOACtion
 No action is taken.

 *RST: OFF

Example: PROB:SET:STAT ON

Manual operation: See "[Probe Config](#)" on page 384
 See "[Micro Button Action](#)" on page 387

PROBe:SETup:NAME?

This command returns the name of the connected probe.

Example: PROB:SET:NAME?

Usage: Query only

Manual operation: See "[Name](#)" on page 387

PROBe:SETup:STATe?

This command queries whether a probe is connected to the instrument's [RF Input] and USB connectors and was recognized by the R&S ESR.

Example: PROB:SET:STAT ON

Usage: Query only

PROBe]:STATe] <State>

This command activates a connected probe. Use this command to switch off the probe and measure the digital input without considering the transducer factor of the probe.

Parameters:

<State> **ON | OFF**
 *RST: OFF

Example: PROB:STAT ON

Manual operation: See "[Probe Config](#)" on page 384
 See "[State](#)" on page 387

11.5.2 Configuring Spectrum Measurements

- [Frequency Settings](#)..... 822
- [Automatic Measurement Configuration](#)..... 827
- [Bandwidth Settings](#)..... 830
- [Sweep Configuration](#)..... 833
- [Trigger Configuration](#)..... 836
- [Vertical Axis Configuration](#)..... 843

11.5.2.1 Frequency Settings

The following commands select the frequency characteristics the R&S ESR uses for the measurement.

Defining Frequency Characteristics

Commands useful to define the frequency described elsewhere:

- [\[SENSe:\]FREQUENCY:CENTer:STEP](#) on page 665

[SENSe:]FREQUENCY:CENTer	822
[SENSe:]FREQUENCY:CENTer:STEP:AUTO	823
[SENSe:]FREQUENCY:CENTer:STEP:LINK	823
[SENSe:]FREQUENCY:CENTer:STEP:LINK:FACTor	824
[SENSe:]FREQUENCY:MODE	824
[SENSe:]FREQUENCY:OFFSet	824
[SENSe:]FREQUENCY:STARt	825
[SENSe:]FREQUENCY:STOP	825
[SENSe:]FREQUENCY:SPAN	825
[SENSe:]FREQUENCY:SPAN:FULL	825

[SENSe:]FREQUENCY:CENTer <Frequency>

This command defines the center frequency (frequency domain) or measuring frequency (time domain).

Parameters:

<Frequency> Range: 0 to f_{max}
 *RST: f_{max}/2
 Default unit: Hz
 f_{max} is specified in the data sheet. min span is 10 Hz
 (SEM and Spurious: min span = 20 Hz)

Example: `FREQ:CENT 100 MHz`

Manual operation: See "[Center](#)" on page 345

[SENSe:]FREQuency:CENTer:STEP:AUTO <State>

This command couples the step size of the center frequency to the span (ON) or sets the value of the center frequency entered via [\[SENSe:\]FREQuency:CENTer](#) (OFF).

Parameters:

<State> ON | OFF
 *RST: ON

Example: `FREQ:CENT:STEP:AUTO ON`
 Activates the coupling of the step size to the span.

[SENSe:]FREQuency:CENTer:STEP:LINK <CouplingType>

This command couples and decouples the center frequency step size to the span or the resolution bandwidth.

Parameters:

<CouplingType> **SPAN**
 Couples the step size to the span. Available for measurements in the frequency domain.
 RBW
 Couples the step size to the resolution bandwidth. Available for measurements in the time domain.
 OFF
 Decouples the step size (manual input).
 *RST: SPAN

Example: `FREQ:CENT:STEP:LINK SPAN`

Manual operation: See "[0.1*Span \(span > 0\)](#)" on page 345
 See "[0.1*RBW \(span > 0\)](#)" on page 345
 See "[0.5*Span \(span > 0\)](#)" on page 346
 See "[0.5*RBW \(span > 0\)](#)" on page 346
 See "[x*Span \(span > 0\)](#)" on page 346
 See "[x*RBW \(span > 0\)](#)" on page 346

[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor <Factor>

This command defines a step size factor if the center frequency step size is coupled to the span or the resolution bandwidth.

Parameters:

<Factor> Range: 1 to 100
 *RST: 10
 Default unit: PCT

Example: `FREQ:CENT:STEP:LINK:FACT 20PCT`

Manual operation: See "[0.1*Span \(span > 0\)](#)" on page 345
 See "[0.1*RBW \(span > 0\)](#)" on page 345
 See "[0.5*Span \(span > 0\)](#)" on page 346
 See "[0.5*RBW \(span > 0\)](#)" on page 346

[SENSe:]FREQuency:MODE <Mode>

This command selects the frequency mode.

between span > 0 and zero span in the "Spectrum" mode.

Parameters:

<Mode> **CW**
 Selects the time domain (span = 0).
 In the time domain, define the measurement frequency with
 [\[SENSe:\]FREQuency:CENTer](#).

FIXed
 Selects the time domain (span = 0).
 In the time domain, define the measurement frequency with
 [\[SENSe:\]FREQuency:CENTer](#).

SWEep
 Selects the frequency domain (span > 0).
 In the frequency domain, define the frequency characteristics
 with the following commands:

- [\[SENSe:\]FREQuency:START](#)
- [\[SENSe:\]FREQuency:STOP](#)
- [\[SENSe:\]FREQuency:SPAN](#)
- [\[SENSe:\]FREQuency:CENTer](#)

*RST: SWEep

Example: `FREQ:MODE SWE`
 Selects the frequency domain.

Usage: SCPI confirmed

[SENSe:]FREQuency:OFFSet <Offset>

This command defines the frequency offset.

Parameters:

<Offset> Range: -100 GHz to 100 GHz
 *RST: 0 Hz
 Default unit: Hz

Example: FREQ:OFFS 1GHZ

Manual operation: See "[Frequency Offset](#)" on page 347

[SENSe:]FREQuency:STARt <Frequency>

This command defines the start frequency for measurements in the frequency domain.

Parameters:

<Frequency> 0 to (fmax - min span)
 *RST: 0

Example: FREQ:STAR 20MHz

Manual operation: See "[Start](#)" on page 347

[SENSe:]FREQuency:STOP <Frequency>

This command defines the stop frequency for measurements in the frequency domain.

Parameters:

<Frequency> min span to fmax
 *RST: fmax

Example: FREQ:STOP 2000 MHz

Manual operation: See "[Stop](#)" on page 347

**[SENSe:]FREQuency:SPAN **

This command defines the frequency span.

Parameters:

 *RST: fmax

Example: FREQ:SPAN 10MHz

Manual operation: See "[IF Span Manual](#)" on page 180
 See "[Span Manual](#)" on page 350
 See "[Zero Span](#)" on page 350

[SENSe:]FREQuency:SPAN:FULL

This command sets the frequency span to its maximum.

Example: FREQ:SPAN:FULL

Manual operation: See "[Full Span](#)" on page 180

Tracking Signals

CALCulate<n>:MARKer<m>:FUNCTion:STRack:BANDwidth BWIDth.....	826
CALCulate<n>:MARKer<m>:FUNCTion:STRack[:STATe].....	826
CALCulate<n>:MARKer<m>:FUNCTion:STRack:THReshold.....	827
CALCulate<n>:MARKer<m>:FUNCTion:STRack:TRACe.....	827

CALCulate<n>:MARKer<m>:FUNCTion:STRack:BANDwidth|BWIDth <Bandwidth>

This command defines the bandwidth around the center frequency that is included in the signal tracking process.

Note that you have to turn on signal tracking before you can use the command (CALCulate<n>:MARKer<m>:FUNCTion:STRack[:STATe]).

Suffix:

<n>	Selects the measurement window.
<m>	Selects the marker.

Parameters:

<Bandwidth>	10 Hz to MAX (span)
*RST:	(= span/10 on activating the function)

Example:

```
CALC:MARK:FUNC:STR:BAND 1 MHZ
Sets the search bandwidth to 1 MHz.
CALC:MARK:FUNC:STR:BWID 1 MHZ
Alternative command for the same function.
```

Manual operation: See "Track BW (span > 0)" on page 348

CALCulate<n>:MARKer<m>:FUNCTion:STRack[:STATe] <State>

This command turns signal tracking on and off.

When signal tracking is on, the R&S ESR determines the maximum signal after each frequency sweep. The center frequency is then set to the frequency of this signal. Thus, the center frequency follows the frequency when you measure drifting signals.

Suffix:

<n>	Selects the measurement window.
<m>	Selects the marker.

Parameters:

<State>	ON OFF
*RST:	OFF

Example:

```
CALC:MARK:FUNC:STR ON
Switches on the signal track function.
```

Manual operation: See "Track On/Off (span > 0)" on page 348

CALCulate<n>:MARKer<m>:FUNction:STRack:THReshold <Level>

This command defines a threshold above which the signal is tracked.

Note that you have to turn on signal tracking before you can use the command (`CALCulate<n>:MARKer<m>:FUNction:STRack[:STATE]`).

The unit depends on `CALCulate<n>:UNIT:POWER`.

Suffix:

<n> Selects the measurement window.
<m> Selects the marker.

Parameters:

<Level> Range: -130 dBm to 30 dBm
 *RST: -120 dBm
 Default unit: dBm

Example:

`CALC:MARK:FUNC:STR:THR -50DBM`
Sets the threshold for signal tracking to -50 dBm.

Manual operation: See "[Track Threshold \(span > 0\)](#)" on page 348

CALCulate<n>:MARKer<m>:FUNction:STRack:TRACe <TraceNumber>

This command defines the trace on which the signal is tracked.

Suffix:

<n> Selects the measurement window.
<m> Selects the marker.

Parameters:

<TraceNumber> Range: 1 to 6
 *RST: 1

Example:

`CALC:MARK:FUNC:STR:TRAC 3`
Defines trace 3 as the trace for signal tracking.

Manual operation: See "[Select Trace \(span > 0\)](#)" on page 348

11.5.2.2 Automatic Measurement Configuration

The following commands initiate and perform automatic test routines to configure the current measurement.

<code>[SENSe:]ADJust:ALL</code>	828
<code>[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWer</code>	828
<code>[SENSe:]ADJust:CONFiguration:HYSTeresis:UPPer</code>	828
<code>[SENSe:]ADJust:CONFigure:LEVel:DURation</code>	828
<code>[SENSe:]ADJust:CONFigure:LEVel:DURation:MODE</code>	829
<code>[SENSe:]ADJust:CONFigure:TRIG</code>	829
<code>[SENSe:]ADJust:FREQuency</code>	829
<code>[SENSe:]ADJust:LEVel</code>	830

[SENSe:]ADJust:ALL

This command determines the ideal frequency and level configuration for the current measurement.

Example: ADJ:ALL

Manual operation: See ["Auto All"](#) on page 357

[SENSe:]ADJust:CONFIguration:HYSTeresis:LOWer <Threshold>

This command defines a lower threshold the signal must drop below before the reference level is automatically adjusted when the "Auto Level" function is performed.

For more information see [\[SENSe:\]ADJust:LEVel\)](#).

Parameters:

<Threshold> Range: 0 to 200
 *RST: +1 dB
 Default unit: dB

Example: SENS:ADJ:CONF:HYST:LOW 2

Example: For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level falls below 18 dBm.

Manual operation: See ["Lower Level Hysteresis"](#) on page 358

[SENSe:]ADJust:CONFIguration:HYSTeresis:UPPer <Threshold>

This command defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

For more information see [\[SENSe:\]ADJust:LEVel\)](#).

Parameters:

<Threshold> Range: 0 to 200
 *RST: +1 dB
 Default unit: dB

Example: SENS:ADJ:CONF:HYST:UPP 2

For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level rises above 22 dBm.

Manual operation: See ["Upper Level Hysteresis"](#) on page 358

[SENSe:]ADJust:CONFIgure:LEVel:DURation <Duration>

This command defines the duration of the level measurement used to determine the optimal reference level automatically (for SENS:ADJ:LEV ON).

Parameters:

<Duration> <numeric value> in seconds
 Range: 0.001 to 16000.0
 *RST: 0.001
 Default unit: s

Example: ADJ:CONF:LEV:DUR:5

Manual operation: See "[Meas Time Manual](#)" on page 358

[SENSe:]ADJJust:CONFigure:LEVel:DURation:MODE <Mode>

This command selects the way the R&S ESR determines the length of the measurement that is performed while determining the ideal reference level.

Parameters:

<Mode> **AUTO**
 Automatically determines the measurement length.
MANual
 Manual definition of the measurement length.
 *RST: AUTO

Example: ADJ:CONF:LEV:DUR:MODE:MAN
 Specifies manual definition of the measurement duration.
 ADJ:CONF:LEV:DUR:5
 Specifies the duration manually.

[SENSe:]ADJJust:CONFigure:TRIG <State>

This command defines the behaviour of the measurement when adjusting a setting automatically (using `SENS:ADJ:LEV ON`, for example).

For more information see "[Adjusting settings automatically during triggered measurements](#)" on page 357.

Parameters:

<State> **ON**
 The measurement for automatic adjustment waits for the trigger.
OFF
 The measurement for automatic adjustment is performed immediately, without waiting for a trigger.
 *RST: ON

Example: ADJ:CONF:TRIG:OFF

[SENSe:]ADJJust:FREQuency

This command defines the center frequency and the reference level automatically by determining the highest level in the frequency span.

Example: ADJ:FREQ

Manual operation: See "Auto Freq" on page 357

[SENSe:]ADJust:LEVel

This command automatically sets the optimal reference level for the current measurement.

You can define a threshold that the signal must exceed before the reference level is adjusted, see [SENSe:]ADJust:CONFIguration:HYSTeresis:UPPer and [SENSe:]ADJust:CONFIguration:HYSTeresis:LOWer.

Example: ADJ:LEV

Manual operation: See "Adjust Ref Lvl (span > 0)" on page 292
 See "Adjust Ref Lvl (span > 0)" on page 294
 See "Auto Level" on page 358

11.5.2.3 Bandwidth Settings

The following commands select the measurement filter bandwidths and characteristics.

Selecting the Resolution Bandwidth

Commands useful to configure the RBW described elsewhere:

- [SENSe:]BANDwidth|BWIDth[:RESolution] on page 670
- [SENSe:]BANDwidth|BWIDth[:RESolution]:TYPE on page 671

[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO.....	830
[SENSe:]BANDwidth BWIDth[:RESolution]:FFT.....	831
[SENSe:]BANDwidth BWIDth[:RESolution]:RATio.....	831

[SENSe:]BANDwidth|BWIDth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

The automatic coupling adapts the resolution bandwidth to the current frequency span according to the relationship between frequency span and resolution bandwidth.

Use [SENSe:]BANDwidth|BWIDth[:RESolution]:RATio to define the ratio RBW/span.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BAND:AUTO OFF
 Switches off the coupling of the resolution bandwidth to the span.

Manual operation: See "Res BW Manual" on page 361
 See "Res BW Auto" on page 361
 See "Default Coupling" on page 365

[SENSe:]BANDwidth|BWIDth[:RESolution]:FFT <FilterMode>

This command defines the filter mode of FFT filters by defining the partial span size. The partial span is the span which is covered by one FFT analysis.

This command is only available for sweep type "FFT".

Parameters:

<FilterMode>

AUTO

The firmware determines whether to use wide or narrow filters to obtain the best measurement results.

NARRow

The FFT filters with the smaller partial span are used. This allows you to perform measurements near a carrier with a reduced reference level due to a narrower analog prefilter.

*RST: AUTO

Example:

BAND:TYPE FFT

Select FFT filter.

Example:

BAND:FFT NARR

Select narrow partial span for FFT filter.

Manual operation:See ["Auto"](#) on page 359See ["Narrow"](#) on page 359**[SENSe:]BANDwidth|BWIDth[:RESolution]:RATio <Ratio>**

This command defines the ratio between the resolution bandwidth (Hz) and the span (Hz).

Note that the ratio defined with the remote command (RBW/span) is reciprocal to that of the manual operation (span/RBW).

Parameters:

<Ratio>

Range: 0.0001 to 1

*RST: 0.01

Example:

BAND:RAT 0.01

Manual operation:See ["Span/RBW Manual"](#) on page 365**Selecting the Video Bandwidth**

[SENSe:]BANDwidth BWIDth:VIDeo	831
[SENSe:]BANDwidth BWIDth:VIDeo:AUTO	832
[SENSe:]BANDwidth BWIDth:VIDeo:RATio	832
[SENSe:]BANDwidth BWIDth:VIDeo:TYPE	833

[SENSe:]BANDwidth|BWIDth:VIDeo <Bandwidth>

This command defines the video bandwidth. The available video bandwidths are specified in the data sheet.

Parameters:

<Bandwidth> refer to data sheet
 *RST: (AUTO is set to ON)

Example: BAND:VID 10 kHz

Manual operation: See ["Video BW Manual"](#) on page 361

[SENSe:]BANDwidth|BWIDth:VIDeo:AUTO <State>

This command couples and decouples the VBW to the RBW.

Use [\[SENSe:\]BANDwidth|BWIDth:VIDeo:RATio](#) to define the ratio VBW/RBW.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BAND:VID:AUTO OFF

Manual operation: See ["Video BW Manual"](#) on page 361
 See ["Video BW Auto"](#) on page 362
 See ["Default Coupling"](#) on page 365

[SENSe:]BANDwidth|BWIDth:VIDeo:RATio <Ratio>

This command defines the ratio between video bandwidth (Hz) and resolution bandwidth (Hz).

Note that the ratio defined with the remote command (VBW/RBW) is reciprocal to that of the manual operation (RBW/VBW).

Parameters:

<Ratio> Range: 0.01 to 1000
 *RST: 3

Example: BAND:VID:RAT 3
 Sets the coupling of video bandwidth to video bandwidth = 3*resolution bandwidth

Manual operation: See ["RBW/VBW Sine \[1/1\]"](#) on page 364
 See ["RBW/VBW Pulse \[.1\]"](#) on page 364
 See ["RBW/VBW Noise \[10\]"](#) on page 364
 See ["RBW/VBW Manual"](#) on page 365
 See ["Span/RBW Auto \[100\]"](#) on page 365

[SENSe:]BANDwidth|BWIDth:VIDeo:TYPE <Mode>

This command selects the position of the video filter in the signal path.

Parameters:

<Mode>

LINear

The video filter is applied in front of the logarithmic amplifier. In linear mode, measurements with a logarithmic level scale result in flatter falling edges compared to logarithmic mode. The reason is the conversion of linear power values into logarithmic level values: if you halve the linear power, the logarithmic level decreases by 3 dB.

LOGarithmic

The video filter is applied after the logarithmic amplifier.

*RST: LINear

Example:

BAND:VID:TYPE LIN

Video filter ahead of the logarithmic amplifier

11.5.2.4 Sweep Configuration

Commands useful to configure the sweep described elsewhere:

- [ABORt](#) on page 640
- [INITiate<n>\[:IMMediate\]](#) on page 641
- [INITiate<n>:CONTInuous](#) on page 641

INITiate<n>:CONMeas	833
[SENSe:]SWEep:COUNT	834
[SENSe:]SWEep:POINTs	834
[SENSe:]SWEep:TIME	835
[SENSe:]SWEep:TIME:AUTO	835
[SENSe:]SWEep:TYPE	835
[SENSe:]SWEep:TYPE:USED?	836

INITiate<n>:CONMeas

This command restarts a measurement that has been stopped in single sweep mode.

The measurement is restarted at the first sweep point.

As opposed to [INITiate<n>\[:IMMediate\]](#), this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using max hold or averaging functions.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Suffix:

<n> irrelevant

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
DISP:WIND:TRAC:MODE AVER
```

Switches on trace averaging.

```
SWE:COUN 20
```

Setting the sweep counter to 20 sweeps.

```
INIT;*WAI
```

Starts the measurement and waits for the end of the 20 sweeps.

```
INIT:CONM;*WAI
```

Continues the measurement (next 20 sequences) and waits for the end.

Manual operation: See ["Continue Single Sweep"](#) on page 370

[SENSe:]SWEep:COUNT <NumberSweeps>

This command defines the number of sweeps started with single sweep, which are used for calculating the average or maximum value. If the values 0 or 1 are set, one sweep is performed.

Parameters:

<NumberSweeps> 0 to 32767

*RST: 0 (GSM: 200, PHN:1)

Example:

```
SWE:COUN 64
```

Sets the number of sweeps to 64.

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
INIT;*WAI
```

Starts a sweep and waits for its end.

Manual operation: See ["Sweep Count"](#) on page 372

[SENSe:]SWEep:POINTs <NumberPoints>

This command defines the number of measurement points to be collected during one sweep.

Note: For Spurious Emissions measurements the maximum number of sweep points in all ranges is limited to 100001.

Parameters:

<NumberPoints> Range: 101 to 32001

*RST: 691

Example:

```
SWE:POIN 150
```

Manual operation: See ["Sweep Points"](#) on page 302
See ["Sweep Points"](#) on page 372

[SENSe:]SWEep:TIME <Time>

This command defines the sweep time.

The range depends on the frequency span.

If this command is used in "Spectrum" mode, automatic coupling to resolution bandwidth and video bandwidth is switched off.

Parameters:

<Time> refer to data sheet
*RST: (automatic)

Example: SWE:TIME 1s

Manual operation: See "Sweep Time" on page 243
See "Sweeptime Manual" on page 362
See "Meas Time" on page 460

[SENSe:]SWEep:TIME:AUTO <State>

In realtime mode, this command automatically sets the sweep time to 32 ms.

In analyzer mode, this command controls the automatic coupling of the sweep time to the frequency span and bandwidth settings. If [SENSe:]SWEep:TIME is used, automatic coupling is switched off.

Parameters:

<State> ON | OFF
*RST: ON

Example: SWE:TIME:AUTO ON
Activates automatic sweep time.

Manual operation: See "Sweeptime Manual" on page 362
See "Sweeptime Auto" on page 363
See "Default Coupling" on page 365

[SENSe:]SWEep:TYPE <Type>

This command selects the sweep type.

Parameters:

<Type> **SWE**
Selects analog frequency sweeps.
AUTO
Automatically selects the sweep type (FFT or analog frequency sweep).
FFT
Selects FFT sweeps.
*RST: AUTO

Example: `SWE:TYPE FFT`
Selects FFT sweeps.

Manual operation: See "Sweep" on page 359
See "FFT" on page 359
See "Auto" on page 359

[SENSe:]SWEep:TYPE:USED?

This command queries the sweep type if you have turned on automatic selection of the sweep type.

Return values:
<Type> SWE | FFT
SWE
Normal sweep
FFT
FFT mode
*RST: SWE

Example: `SWE:TYPE:USED?`

Usage: Query only

11.5.2.5 Trigger Configuration

The following commands configure triggered or gated measurements.

Triggering Measurements

TRIGger<n>[:SEQuence]:HOLDoff[:TIME].....	836
TRIGger<n>[:SEQuence]:IFPower:HOLDoff.....	837
TRIGger<n>[:SEQuence]:IFPower:HYSTeresis.....	837
TRIGger<n>[:SEQuence]:LEVel[:EXTernal].....	837
TRIGger<n>[:SEQuence]:LEVel:IFPower.....	838
TRIGger<n>[:SEQuence]:LEVel:RFPower.....	838
TRIGger<n>[:SEQuence]:LEVel:VIDeo.....	838
TRIGger<n>[:SEQuence]:SLOPe.....	839
TRIGger<n>[:SEQuence]:SOURce.....	839
TRIGger<n>[:SEQuence]:TIME:RINTerval.....	840

TRIGger<n>[:SEQuence]:HOLDoff[:TIME] <Delay>

This command defines the length of the trigger delay.

A negative delay time (pretrigger) can be set in zero span only.

Suffix:
<n> irrelevant

Suffix:

<n> irrelevant

Parameters:

<TriggerLevel> Range: 0.5 V to 3.5 V
 *RST: 1.4 V

Example: TRIG:LEV 2V**TRIGger<n>[:SEquence]:LEVel:IFPower <TriggerLevel>**

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Suffix:

<n> irrelevant

Parameters:

<TriggerLevel> *RST: -20 dBm

Example: TRIG:LEV:IFP -30DBM

Manual operation: See ["Trg/Gate Level"](#) on page 377
 See ["Trigger Level"](#) on page 472

TRIGger<n>[:SEquence]:LEVel:RFPower <TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Suffix:

<n> irrelevant

Parameters:

<TriggerLevel> *RST: -20 dBm

Example: TRIG:LEV:RFP -30dBm**TRIGger<n>[:SEquence]:LEVel:VIDeo <Value>**

This command sets the level of the video trigger source.

Suffix:

<n> irrelevant

Parameters:

<Value> 0 to 100 PCT
 *RST: 50 PCT

Example: TRIG:LEV:VID 50PCT

Manual operation: See "Video" on page 186
 See "Trg/Gate Level" on page 377
 See "Trigger Level" on page 472

TRIGger<n>[:SEQuence]:SLOPe <Type>

This command selects the slope of the trigger signal. The selected trigger slope applies to all trigger signal sources.

Suffix:

<n> irrelevant

Parameters:

<Type> POSitive | NEGative
 *RST: POSitive

Example: TRIG:SLOP NEG

Manual operation: See "Trigger Polarity" on page 186
 See "Trg/Gate Polarity" on page 377
 See "Trigger Polarity" on page 472

TRIGger<n>[:SEQuence]:SOURce <Source>

This command selects the trigger source.

Note: Using gating with gate mode "level" (`TRACe<n>:IQ:EGATe:TYPE` on page 897/ `[SENSe:]SWEep:EGATe:TYPE`) and an IFP trigger, the holdoff time for the IFP trigger (see `TRIGger<n>[:SEQuence]:HOLDoff[:TIME]` on page 836) is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

When triggering or gating is activated, the squelch function is automatically disabled (see `[SENSe:]DEMod:SQUelch[:STATe]`).

For details on trigger modes refer to "Trg/Gate Source" on page 375.

For details on trigger modes refer to the "Trg/Gate Source" softkey in the base unit description.

Suffix:

<n> irrelevant

Parameters:

<Source> Note that the availability of the trigger source depends on the measurement you are in.

EXternal

Selects an external trigger.

IFPower

Selects the trigger on the second intermediate frequency.

IMMediate

Selects the free run mode (= no trigger).

MASK

Selects the frequency mask trigger.

TDTRigger

Selects the time domain trigger.

TIME

Selects the time trigger.

VIDeo

Selects the video trigger. The video trigger is available for time domain measurements.

*RST: IMMEDIATE

Example:

TRIG:SOUR EXT

Selects the external trigger input as source of the trigger signal

Manual operation:

See ["External"](#) on page 186

See ["Free Run"](#) on page 186

See ["Video"](#) on page 186

See ["Trg/Gate Source"](#) on page 375

See ["Free Run"](#) on page 375

See ["External"](#) on page 375

See ["Video"](#) on page 376

See ["RF Power"](#) on page 376

See ["IF Power/BB Power"](#) on page 376

See ["Time"](#) on page 377

TRIGger<n>[:SEQUENCE]:TIME:RINTERval <Interval>

This command sets the repetition interval for the time trigger source.

Suffix:

<n> irrelevant

Parameters:

<Interval> 2.0 ms to 5000

*RST: 1.0

Example:

TRIG:SOUR TIME

Selects the time trigger input for triggering.

TRIG:TIME:RINT 50

The sweep starts every 50 s.

Mode:

All

Manual operation: See ["Repetition Interval"](#) on page 378

Gated Measurements

[SENSe:]SWEEp:EGATE	841
[SENSe:]SWEEp:EGATE:HOLDoff	841
[SENSe:]SWEEp:EGATE:LENGth	842

[SENSe:]SWEep:EGATe:POLarity.....	842
[SENSe:]SWEep:EGATe:SOURce.....	842
[SENSe:]SWEep:EGATe:TYPE.....	843

[SENSe:]SWEep:EGATe <State>

This command switches on/off the sweep control by an external gate signal. If the external gate is selected the trigger source is automatically switched to EXTERNAL as well.

In case of measurement with external gate, the measured values are recorded as long as the gate is opened. During a sweep the gate can be opened and closed several times. The synchronization mechanisms with *OPC, *OPC? and *WAI remain completely unaffected.

The sweep end is detected when the required number of measurement points (691 in "Spectrum" mode) has been recorded.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
SWE:EGAT ON
Switches on the external gate mode.
SWE:EGAT:TYPE EDGE
Switches on the edge-triggered mode.
SWE:EGAT:HOLD 100US
Sets the gate delay to 100 µs.
SWE:EGAT:LEN 500US
Sets the gate opening time to 500 µs.
INIT;*WAI
Starts a sweep and waits for its end.
```

Manual operation: See "Gated Trigger (On/Off)" on page 320
 See "Gate Ranges" on page 320
 See "Gated Trigger" on page 378

[SENSe:]SWEep:EGATe:HOLDoff <DelayTime>

This command defines the delay time between the external gate signal and the continuation of the sweep.

Note: Using gate mode "level" (see [SENSe:]SWEep:EGATe:TYPE on page 843) and an IFP trigger (see TRIGger<n>[:SEQUENCE]:SOURCE on page 839), the hold-off time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

Parameters:

<DelayTime> 0 s to 30 s
 *RST: 0s

Example: SWE:EGAT:HOLD 100us

Manual operation: See ["Gate Delay"](#) on page 379

[SENSe:]SWEep:EGATe:LENGth <TimeInterval>

This command defines a gate length.

Parameters:

<TimeInterval> 125 ns to 30 s
 *RST: 400µs

Example: SWE:EGAT:LENG 10ms

Manual operation: See ["Gate Length \(Gate Mode Edge\)"](#) on page 380

[SENSe:]SWEep:EGATe:POLarity <Polarity>

This command determines the polarity of the external gate signal. The setting applies both to the edge of an edge-triggered signal and the level of a level-triggered signal.

Parameters:

<Polarity> POSitive | NEGative
 *RST: POSitive

Example: SWE:EGAT:POL POS

Manual operation: See ["Trg/Gate Polarity"](#) on page 377
 See ["Trigger Polarity"](#) on page 472

[SENSe:]SWEep:EGATe:SOURce <Source>

This command selects the signal source for gated measurements.

If an IF power signal is used, the gate is opened as soon as a signal at > -20 dBm is detected within the IF path bandwidth (10 MHz).

For details see the ["Trg/Gate Source"](#) on page 375 softkey.

Parameters:

<Source> EXTernal | IFPower | VIDEo | RFPower | PSEN
 *RST: IFPower

Example: SWE:EGAT:SOUR IFP
 Switches the gate source to IF power.

Manual operation: See ["Gated Trigger \(On/Off\)"](#) on page 320
 See ["Trg/Gate Source"](#) on page 375
 See ["External"](#) on page 375
 See ["Video"](#) on page 376
 See ["RF Power"](#) on page 376
 See ["IF Power/BB Power"](#) on page 376
 See ["Gated Trigger"](#) on page 378

[SENSe:]SWEep:EGATe:TYPE <Type>

This command sets the type of triggering by the external gate signal.

A delay between applying the gate signal and the start of recording measured values can be defined, see [SENSe:]SWEep:EGATe:HOLDoff on page 841.

Parameters:

<Type>

LEVel | EDGE

LEVel

The gate is level-triggered:

After detection of the gate signal, the gate remains open until the gate signal disappears. The gate opening time cannot be defined with the command [SENSe:]SWEep:EGATe:HOLDoff.

Note: Using gating with gate mode "level" and an IFP trigger (see TRIGger<n>[:SEQuence]:SOURce on page 839), the holdoff time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

EDGE

The gate is edge-triggered:

After detection of the set gate signal edge, the gate remains open until the gate delay ([SENSe:]SWEep:EGATe:HOLDoff) has expired.

*RST: EDGE

Example:

SWE:EGAT:TYPE EDGE

Manual operation: See "Gate Mode (Lvl/Edge)" on page 379

11.5.2.6 Vertical Axis Configuration

The following commands configure the characteristics of the vertical diagram axis.

Commands useful to configure the vertical axis described elsewhere:

- DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing on page 668
- INPut:ATTenuation on page 668
- INPut:COUPling on page 672
- INPut:GAIN:STATe on page 669
- INPut:IMPedance on page 670

CALCulate<n>:UNIT:POWer.....	844
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]	844
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:MODE.....	844
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel.....	845
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet.....	845
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RPOSition.....	846
INPut:ATTenuation:AUTO.....	846
UNIT<n>:POWer.....	846

CALCulate<n>:UNIT:POWER <Unit>

This command selects the unit of the y-axis.

The unit applies to all measurement windows.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT |
DBUA | AMPere
*RST: dBm

Example:

CALC:UNIT:POW DBM
Sets the power unit to dBm.

Manual operation: See ["Unit"](#) on page 354

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE] <Range>

This command defines the display range of the y-axis with logarithmic scaling.

The command works only for a logarithmic scaling. You can select the scaling with [DISPlay\[:WINDow<n>\]:TRACe<t>:Y:SPACing](#) on page 668.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Range> Range: 10 to 200
*RST: 100
Default unit: dB

Example:

DISP:TRAC:Y 110dB

Manual operation: See ["Grid Range / Grid Min Level"](#) on page 183
See ["Range Log 100 dB"](#) on page 317
See ["Range Log 50 dB"](#) on page 317
See ["Range Log 10 dB"](#) on page 318
See ["Range Log 5 dB"](#) on page 318
See ["Range Log 1 dB"](#) on page 318
See ["Range Log Manual"](#) on page 318

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:MODE <Mode>

This command selects the type of scaling of the y-axis.

When `SYSTEM:DISPlay:UPDate` is turned off, this command has no immediate effect on the screen.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Mode> **ABSolute**
absolute scaling of the y-axis

RELative
relative scaling of the y-axis

*RST: ABS

Example: DISP:TRAC:Y:MODE REL

Manual operation: See "Grid Abs/Rel " on page 355

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>

This command defines the reference level.

With the reference level offset $\neq 0$, the value range of the reference level is modified by the offset.

The unit depends on the setting defined with `CALCulate<n>:UNIT:POWer`.

Suffix:

<n> irrelevant.

<t> irrelevant

Parameters:

<ReferenceLevel> The unit is variable.

Range: see datasheet

*RST: -10dBm

Example: DISP:TRAC:Y:RLEV -60dBm

Manual operation: See "Ref Level" on page 352

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Value>

This command defines a reference level offset.

Suffix:

<n> irrelevant.

<t> irrelevant

Parameters:

<Value> Range: -200 to 200

*RST: 0

Default unit: dB

Example: DISP:TRAC:Y:RLEV:OFFS -10dB

Manual operation: See ["Ref Level Offset"](#) on page 354

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOStion <Position>

This command defines the position of the reference level on the display grid..

Suffix:

<n> Selects the measurement window.

<t> irrelevant

Parameters:

<Position> 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border.

Range: 0 to 100

*RST: 100 PCT = frequency domain, 50 PCT = time domain

Default unit: PCT

Example: DISP:TRAC:Y:RPOS 50PCT

Manual operation: See ["Ref Level Position"](#) on page 355
See ["Reference Value Position"](#) on page 478

INPut:ATTenuation:AUTO <State>

This command automatically couples the input attenuation to the reference level (state ON) or switches the input attenuation to manual entry (state OFF).

Parameters:

<State> ON | OFF

*RST: ON

Example: INP:ATT:AUTO ON
Couples the attenuation set on the attenuator to the reference level.

Manual operation: See ["RF Atten Auto"](#) on page 354

UNIT<n>:POWer <Unit>

This command selects the default unit.

The unit is the same for all measurement windows.

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBPT | DBUV | DBMV | VOLT | DBUA | AMPere

*RST: DBM

Example: UNIT:POW DBUV
Sets the power unit to dBm.

Usage: SCPI confirmed

11.5.3 Analyzing Spectrum Measurements

- Trace Configuration..... 847
- Spectrogram..... 856
- Limit Lines..... 860
- Markers..... 861

11.5.3.1 Trace Configuration

Commands to configure trace described elsewhere:

- `DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 683

Commands exclusive in spectrum mode

<code>CALCulate<n>:MATH[:EXpression][:DEFine]</code>	847
<code>CALCulate<n>:MATH:MODE</code>	848
<code>CALCulate<n>:MATH:POSition</code>	848
<code>CALCulate<n>:MATH:STATe</code>	848
<code>DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous</code>	849
<code>DISPlay[:WINDow<n>]:TRACe<t>[:STATe]</code>	849
<code>FORMat[:DATA]</code>	850
<code>FORMat:DEXPort:DSEParator</code>	850
<code>MMEMemory:STORe<n>:TRACe</code>	851
<code>[SENSe:]AVERAge<n>:COUNT</code>	851
<code>[SENSe:]AVERAge<n>[:STATe<Trace>]</code>	852
<code>[SENSe:]AVERAge<n>:TYPE</code>	852
<code>[SENSe:][WINDow:]DETEctor<trace>[:FUNCTion]</code>	853
<code>[SENSe:][WINDow:]DETEctor<trace>[:FUNCTion]:AUTO</code>	853
<code>TRACe<n>:COPY</code>	854
<code>TRACe<n>:DATA</code>	854
<code>TRACe<n>[:DATA]:MEMory?</code>	855
<code>TRACe<n>[:DATA]:X?</code>	856

`CALCulate<n>:MATH[:EXpression][:DEFine]` <Expression>

This command defines the mathematical expression for relating traces to trace1.

Suffix:

<n> irrelevant

Parameters:

<Expression> (TRACe1-TRACe2) | (TRACe1-TRACe3) | (TRACe1-TRACe4) |
(TRACe1-TRACe5) | (TRACe1-TRACe6)

(TRACe1-TRACe2)

Subtracts trace 2 from trace 1.

(TRACe1-TRACe3)

Subtracts trace 3 from trace 1.

(TRACe1-TRACe4)

Subtracts trace 4 from trace 1.

(TRACe1-TRACe5)

Subtracts trace 5 from trace 1.

(TRACe1-TRACe6)

Subtracts trace 6 from trace 1.

Example: `CALC1:MATH (TRACe1 - TRACe2)`
 Selects the subtraction of trace 2 from trace 1.

Manual operation: See ["Trace Math"](#) on page 394

CALCulate<n>:MATH:MODE <Method>

This command selects the method for the trace math calculations.

For details see ["Trace Math Mode"](#) on page 394.**Suffix:**

<n> irrelevant

Parameters:

<Method> LINear | LOGarithmic | POWer

*RST: LOG

Example: `CALC:MATH:MODE LIN`
 Selects linear averaging for trace math calculations.

Manual operation: See ["Lin"](#) on page 394
 See ["Log"](#) on page 395
 See ["Power"](#) on page 395

CALCulate<n>:MATH:POSition <Position>

This command defines the position of the result of the trace mathematics. The indication is in % of the screen height, with 100 % corresponding to the upper diagram border.

Suffix:

<n> Selects the measurement window.

Parameters:

<Position> -100PCT to 200PCT

*RST: 50PCT

Example: `CALC:MATH:POS 50PCT`
 Sets the position to the horizontal diagram center.

Manual operation: See ["Trace Math Position"](#) on page 395

CALCulate<n>:MATH:STATe <State>

This command switches the mathematical relation of traces on or off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MATH:STAT ON
 Switches on the trace mathematics.

Manual operation:

See "Trace Math" on page 394
 See "Trace Math Off" on page 395

DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous <State>

This command defines whether traces in Min Hold, Max Hold and Average mode (see [DISPlay\[:WINDow<n>\]:TRACe<t>:MODE](#) on page 683) are reset after a parameter is changed.

Normally, the measurement is started anew after parameter changes, before the measurement results are evaluated (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<State> **ON**
 The automatic reset is switched off.
OFF
 After certain parameter changes the traces are reset.
 *RST: OFF

Example:

DISP:WIND:TRAC3:MODE:HCON ON
 Switches off the reset function.

Manual operation:

See "Hold/Cont" on page 391

DISPlay[:WINDow<n>]:TRACe<t>[:STATe] <State>

This command switches on or off the display of the corresponding trace. The other measurements are not aborted but continue running in the background.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<State> ON | OFF
 *RST: ON for TRACe1, OFF for TRACe2 to 6

Example: DISP:TRAC3 ON

Manual operation: See ["Blank"](#) on page 172

FORMat[:DATA] <Format>

This command selects the data format for the data transmitted from the R&S ESR to the controlling computer. It is used for the transmission of trace data. The data format of trace data received by the instrument is automatically recognized, regardless of the format which is programmed.

In the "Spectrum" mode, the format setting REAL, 32 is used for the binary transmission of trace data.

Parameters:

<Format> **ASCIi**
 ASCII data are transmitted in plain text, separated by commas.
REAL
 REAL data are transmitted as 32-bit IEEE 754 floating-point numbers in the "definite length block format".
 *RST: ASCII

Example: FORM REAL, 32
 FORM ASC

FORMat:DEXPort:DSEParator <Separator>

This command defines which decimal separator (decimal point or comma) is to be used for outputting measurement data to the file in ASCII format. Different languages of evaluation programs (e.g. MS-Excel) can thus be supported.

Parameters:

<Separator> POINT | COMMA
 *RST: (factory setting is POINT; *RST does not affect setting)

Example: FORM:DEXP:DSEP POIN
 Sets the decimal point as separator.

Manual operation: See ["Peak List Export"](#) on page 195
 See ["ASCII Trace Export"](#) on page 199
 See ["Decim Sep"](#) on page 200
 See ["ASCII File Export"](#) on page 264

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

This command stores the selected trace in the specified window in a file with ASCII format. The file format is described in [Chapter 6.3.1.6, "ASCII File Export Format"](#), on page 399

The decimal separator (decimal point or comma) for floating-point numerals contained in the file is defined with the `FORMat:DEXPort:DSEParator` command (see [FORMat:DEXPort:DSEParator](#) on page 850).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<Trace> 1 to 6

Selected a trace.

When you export all traces (`FORMat:DEXPort:TRACes`), this parameter is not required.

<FileName>

DOS file name

The file name includes indication of the path and the drive name. Indication of the path complies with DOS conventions.

Example:

```
MMEM:STOR:TRAC 3, 'TEST.ASC'
```

Stores trace 3 in the file TEST.ASC.

Manual operation: See ["ASCII Trace Export"](#) on page 199

[SENSe:]AVERAge<n>:COUNT <NoMeasurements>

This command defines the number of measurements which contribute to the average value.

Note that continuous averaging is performed after the indicated number has been reached in continuous sweep mode.

In single sweep mode, the sweep is stopped as soon as the indicated number of measurements (sweeps) is reached. Synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

This command has the same effect as the `[SENSe<source>:]SWEep:COUNT` command. In both cases, the number of measurements is defined whether the average calculation is active or not.

The number of measurements applies to all traces in the window.

Suffix:

<n> Selects the measurement window.

Parameters:

<NoMeasurements> 0 to 32767

*RST: 0

Example:

```
SWE:CONT OFF
Switching to single sweep mode.
AVER:COUN 16
Sets the number of measurements to 16.
AVER:STAT ON
Switches on the calculation of average.
INIT;*WAI
Starts the measurement and waits for the end of the 16 sweeps.
```

[SENSe:]AVERage<n>[:STATe<Trace>] <State>

This command turns averaging for a particular trace in a particular window on and off.

Suffix:

<n> Selects the measurement window.

<Trace> 1...6
Selects the trace.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
AVER OFF
Switches off the average calculation for trace 1.
AVER:STAT3 ON
Switches on the average calculation for trace 3.
```

[SENSe:]AVERage<n>:TYPE <FunctionType>

This command selects the type of average function.

Suffix:

<n> Selects the measurement window.

Parameters:

<FunctionType> VIDEo | LINear | POWer

VIDeo

The logarithmic power values are averaged.

LINear

The power values are averaged before they are converted to logarithmic values.

POWer

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

*RST: VIDEo

Example:

```
AVER:TYPE LIN
Switches to linear average calculation.
```

Manual operation: See "Lin" on page 393
 See "Log" on page 393
 See "Power" on page 394

[SENSe:][WINDow:]DETEctor<trace>[:FUNction] <Function>

This command selects the detector for the data acquisition in the selected trace.

Suffix:

<trace> 1...4
 Selects the trace.

<trace> 1...6
 trace

Parameters:

<Function> APEak | NEGative | POSitive | SAMPlE | RMS | AVERAge |
 QPEak | CAVERage | CRMS
 *RST: APEak

Example: DET POS
 Sets the detector to "positive peak".

Manual operation: See "Trace 1 - 6" on page 199
 See "Auto Peak" on page 392
 See "Positive Peak" on page 392
 See "Negative Peak" on page 392
 See "Sample" on page 392
 See "RMS" on page 392
 See "Average" on page 392
 See "Quasipeak" on page 392
 See "CISPR Average" on page 392
 See "RMS Average" on page 393

[SENSe:][WINDow:]DETEctor<trace>[:FUNction]:AUTO <State>

This command either couples the detector to the current trace setting or turns coupling off.

Suffix:

<trace> 1...6
 trace

Parameters:

<State> ON | OFF
 *RST: ON

Example: DET:AUTO OFF

Manual operation: See "Auto Select" on page 391

TRACe<n>:COPY <TraceNumber>, <TraceNumber>

This command copies data from one trace to another.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<TraceNumber>,
<TraceNumber>

TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6,
TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6
The first argument is the destination of the data to be copied, the second argument describes the source.

Example:

TRAC: COPY TRACE1, TRACE2

Manual operation: See "[Copy Trace](#)" on page 199

TRACe<n>:DATA <Trace>, <Data> | <ResultType>

This command queries current trace data and measurement results.

If you use it as a setting command, it transfers trace data from an external source to the R&S ESR.

The data format depends on `FORMat [:DATA]`.

Parameters:

<Trace> Selects the trace to write data to.

TRACE1 | ... | TRACE6

<Data> Contains the data to transfer.

Query parameters:

<ResultType> Selects the type of result to be returned.

TRACE1 | ... | TRACE6

Returns the trace data for the corresponding trace.

LIST

Returns the results of the peak list evaluation for Spurious Emission and Spectrum Emission Mask measurements.

SPURious

Returns the peak list of Spurious Emission measurements.

Return values:

<TraceData> For more information see tables below.

Example:

TRAC TRACE1, +A\$

Transfers trace data ('+A\$') to trace 1.

Example:

TRAC? TRACE3

Queries the data of trace 3.

Manual operation: See "[List Evaluation \(On/Off\)](#)" on page 264
See "[List Evaluation \(On/Off\)](#)" on page 293

Table 11-24: Return values for TRACE1 to TRACE6 parameter

The trace data consists of a list of power levels that have been measured. The number of power levels in the list depends on the currently selected number of sweep points. The unit depends on the measurement and on the unit you have currently set.

If you are measuring with the auto peak detector, the command returns positive peak values only.

If you are working with the "Real/Imag (I/Q)" result display in I/Q Analyzer mode, the command returns two values for each trace point, first the real parts of the signal, then the imaginary parts ($I_1, \dots, I_n, Q_1, \dots, Q_n$).

For SEM or Spurious Emission measurement results, the x-values should be queried as well, as they are not equi-distant (see [TRACe<n>\[:DATA\]:X?](#) on page 856).

Table 11-25: Return values for LIST parameter

For every measurement range you have defined (range 1...n), the command returns eight values in the following order.

<No>, <StartFreq>, <StopFreq>, <RBW>, <PeakFreq>, <PowerAbs>, <PowerRel>, <PowerDelta>, <LimitCheck>, <Unused1>, <Unused2>

- <No>: range number
- <StartFreq>, <StopFreq>: start and stop frequency of the range
- <RBW>: resolution bandwidth
- <PeakFreq>: frequency of the peak in a range
- <PowerAbs>: absolute power of the peak in dBm
- <PowerRel>: power of the peak in relation to the channel power in dBc
- <PowerDelta>: distance from the peak to the limit line in dB, positive values indicate a failed limit check
- <LimitCheck>: state of the limit check (0 = PASS, 1 = FAIL)
- <Unused1>, <Unused2>: reserved (0.0)

TRACe<n>[:DATA]:MEMory? <Trace>, <OffsSwPoint>, <NoOfSwPoints>

This command queries the previously acquired trace data for the specified trace from the memory. As an offset and number of sweep points to be retrieved can be specified, the trace data can be retrieved in smaller portions, making the command faster than the `TRAC:DATA?` command. This is useful if only specific parts of the trace data are of interest.

If no parameters are specified with the command, the entire trace data is retrieved; in this case, the command is identical to `TRAC:DATA? TRACE1`

Suffix:

<n> 1...4
Selects the measurement window.

Query parameters:

<Trace> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

<OffsSwPoint> The offset in sweep points related to the start of the measurement at which data retrieval is to start.

<NoOfSwPoints> Number of sweep points to be retrieved from the trace.

Example:

`TRAC:DATA:MEM? TRACE1,25,100`

Retrieves 100 sweep points from trace 1, starting at sweep point 25.

Usage: Query only

TRACe<n>[:DATA]:X? <TraceNumber>

This command reads the x-values of the selected trace.

Suffix:

<n> 1...4
window; For applications that have only one measurement screen, the suffix is irrelevant.

Query parameters:

<TraceNumber> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6
Trace number

Example:

TRACe:DATA:X? TRACE1
Returns the x-values for trace 1.

Usage:

Query only

11.5.3.2 Spectrogram**Configuring Spectrograms**

Commands useful to work with markers in the spectrogram described elsewhere:

- [CALCulate<n>:SGRam:CLEAr\[:IMMediate\]](#) on page 649
- [CALCulate<n>:SGRam:HDEPth](#) on page 651
- [CALCulate<n>:SGRam:TSTamp:DATA?](#) on page 652

CALCulate<n>:SGRam:COLor	856
CALCulate<n>:SGRam:CONT	857
CALCulate<n>:SGRam:FRAMe:COUnT	857
CALCulate<n>:SGRam:FRAMe:SElect	858
CALCulate<n>:SGRam:TSTamp[:STATe]	858
CALCulate<n>:SGRam[:STATe]	858

CALCulate<n>:SGRam:COLor <Color>

This command selects the color scheme of the spectrogram result display.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Color> **COLor**
RGB colors

RADar
black - green - white

GRAYscale
black and white

*RST: COLor

Example: `CALC:SGR:COL GRAY`
Selects black and white color scheme.

Manual operation: See ["Color Mapping"](#) on page 406

CALCulate<n>:SGRam:CONT <State>

This command determines whether the results of the last measurement are deleted before starting a new measurement in single sweep mode.

Suffix:
<n> 1...4
Selects the measurement window.

Parameters:
<State> **ON | OFF**
*RST: OFF

Example: `INIT:CONT OFF`
Selects single sweep mode.
`INIT;*WAI`
Starts the sweep and waits for the end of the sweep.
`CALC:SGR:CONT ON`
Repeats the single sweep measurement without deleting the results of the last measurement.

Manual operation: See ["Continue Frame \(On Off\)"](#) on page 373

CALCulate<n>:SGRam:FRAMe:COUNT <Frames>

This command sets the number of frames to be recorded in a single sweep.

Suffix:
<n> 1...4
Selects the measurement window.

Parameters:
<Frames> The maximum number of frames depends on the `.CALCulate<n>:SGRam:HDEPth` on page 651
Range: 1 to depends on history depth
Increment: 1
*RST: 1

Example: `INIT:CONT OFF`
Selects single sweep mode.
`CALC:SGR:FRAM:COUN 200`
Sets the number of frames to 200.

Manual operation: See ["Frame Count"](#) on page 373

CALCulate<n>:SGRam:FRAMe:SElect <Frame>

This command selects a specific frame for further analysis. The command is available only if no measurement is running or after a single sweep has ended.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Frame> **<frame_number> (if time stamp is off)**
Selects the frame. The range is {0...number of recorded frames-1}

<time> (if time stamp is on)
Time distance in seconds. It selects the frame that is x seconds away from frame 0.

Example:

```
INIT:CONT OFF
Stop the continuous sweep.
CALC:SGR:FRAM:SEL -25
Selects frame number -25.
```

Manual operation: See "[Select Frame](#)" on page 373

CALCulate<n>:SGRam:TSTamp[:STATe] <State>

This command activates and deactivates the time stamp.

If the time stamp is active, some commands do not address frames as numbers, but as (relative) time values:

- [CALCulate<n>:DELTaMarker<m>:SGRam:FRAMe](#) on page 659
- [CALCulate<n>:MARKer<m>:SGRam:FRAMe](#) on page 653
- [CALCulate<n>:SGRam:FRAMe:SElect](#) on page 858

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> **ON | OFF**
***RST: OFF**

Example:

```
CALC:SGR:TST ON
Activates the time stamp.
```

Manual operation: See "[Time Stamp \(On Off\)](#)" on page 406

CALCulate<n>:SGRam[:STATe] <State>

This command turns the spectrogram result display on and off.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> **ON | OFF**
*RST: OFF

Example:

CALC:SGR ON
Activates the Spectrogram result display.

Manual operation: See "[Spectrogram \(On Off\)](#)" on page 405

Configuring the Color Map

Commands useful to work with markers in the spectrogram described elsewhere:

- [DISPlay:WINDow:SGRam:COLor:DEFault](#) on page 650
- [DISPlay:WINDow:SGRam:COLor:LOWer](#) on page 650
- [DISPlay:WINDow:SGRam:COLor:SHAPE](#) on page 650
- [DISPlay:WINDow:SGRam:COLor:UPPer](#) on page 650
- [DISPlay:WINDow:SGRam:COLor\[:STYLE\]](#) on page 651

Using Markers and Deltamarkers**Positioning Marker**

Commands useful to work with markers in the spectrogram described elsewhere:

- [CALCulate<n>:MARKer<m>:MAXimum:LEFT](#) on page 691
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) on page 692
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 692
- [CALCulate<n>:MARKer<m>:MAXimum:RIGHT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum:LEFT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum:NEXT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) on page 694
- [CALCulate<n>:MARKer<m>:MINimum:RIGHT](#) on page 694
- [CALCulate<n>:MARKer<m>:SGRam:FRAMe](#) on page 653
- [CALCulate<n>:MARKer<m>:SGRam:SARea](#) on page 654
- [CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum\[:PEAK\]](#) on page 654
- [CALCulate<n>:MARKer<m>:SGRam:XY:MINimum\[:PEAK\]](#) on page 655
- [CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVe](#) on page 655
- [CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELow](#) on page 656
- [CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT](#) on page 656
- [CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum\[:PEAK\]](#) on page 657
- [CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVe](#) on page 657

- `CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW` on page 657
- `CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT` on page 658
- `CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]` on page 658

Using Deltamarkers

Commands useful to work with markers in the spectrogram described elsewhere:

- `CALCulate<n>:DELTamarker<m>:MAXimum:LEFT` on page 698
- `CALCulate<n>:DELTamarker<m>:MAXimum:NEXT` on page 698
- `CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]` on page 699
- `CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT` on page 699
- `CALCulate<n>:DELTamarker<m>:MINimum:LEFT` on page 699
- `CALCulate<n>:DELTamarker<m>:MINimum:NEXT` on page 700
- `CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]` on page 700
- `CALCulate<n>:DELTamarker<m>:MINimum:RIGHT` on page 700
- `CALCulate<n>:DELTamarker<m>:SGRam:FRAME` on page 659
- `CALCulate<n>:DELTamarker<m>:SGRam:SARea` on page 660
- `CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK]` on page 660
- `CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK]` on page 661
- `CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVE` on page 661
- `CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELOW` on page 662
- `CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT` on page 662
- `CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]` on page 662
- `CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVE` on page 663
- `CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW` on page 663
- `CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT` on page 664
- `CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK]` on page 664

11.5.3.3 Limit Lines

Using Display Lines

For commands that control display lines see [Chapter 11.4.8.1, "Using Display Lines"](#), on page 703.

Using Frequency Lines

For commands that control frequency lines see [Chapter 11.4.8.2, "Using Frequency Lines"](#), on page 704.

Using Time Lines

<code>CALCulate<n>:TLINe<Line></code>	861
<code>CALCulate<n>:TLINe<Line>:STATe</code>	861

CALCulate<n>:TLINe<Line> <Time>

This command defines the position of a time line.

Suffix:

<n> irrelevant
 <Line> 1 | 2
 Selects the time line.

Parameters:

<Time> Range: 0 to 30000000000
 *RST: (STATe to OFF)
 Default unit: s

Example: CALC:TLIN 10ms

Manual operation: See ["Time Line 1 / Time Line 2"](#) on page 213

CALCulate<n>:TLINe<Line>:STATe <State>

This command turns a time line on and off.

Suffix:

<n> irrelevant
 <Line> 1 | 2
 Selects the time line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC:TLIN2:STAT ON

Manual operation: See ["Time Line 1 / Time Line 2"](#) on page 213

Using Limit Lines

For commands that control limit lines see [Chapter 11.4.8.3, "Using Limit Lines"](#), on page 705.

11.5.3.4 Markers

- [Using Markers](#).....861
- [Using Delta Markers](#).....866
- [Controlling Fixed Reference Markers](#).....867
- [Using Marker Functions](#).....869

Using Markers

Commands useful to control markers described elsewhere:

- [CALCulate<n>:MARKer<m>:AOFF](#) on page 691
- [CALCulate<n>:MARKer<m>:FUNctIon:CENTer](#) on page 688

- [CALCulate<n>:MARKer<m>:FUNction:CSTep](#) on page 688
- [CALCulate<n>:MARKer<m>:FUNction:ZOOM](#) on page 688
- [CALCulate<n>:MARKer<m>:MAXimum:LEFT](#) on page 691
- [CALCulate<n>:MARKer<m>:MAXimum:NEXT](#) on page 692
- [CALCulate<n>:MARKer<m>:MAXimum\[:PEAK\]](#) on page 692
- [CALCulate<n>:MARKer<m>:MAXimum:RIGHT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum:LEFT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum:NEXT](#) on page 693
- [CALCulate<n>:MARKer<m>:MINimum\[:PEAK\]](#) on page 694
- [CALCulate<n>:MARKer<m>:MINimum:RIGHT](#) on page 694
- [CALCulate<n>:MARKer<m>\[:STATe\]](#) on page 695
- [CALCulate<n>:MARKer<m>:TRACe](#) on page 695
- [CALCulate<n>:MARKer<m>:X](#) on page 695
- [CALCulate<n>:MARKer<m>:X:SLIMits:LEFT](#) on page 689
- [CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT](#) on page 689
- [CALCulate<n>:MARKer<m>:X:SLIMits\[:STATe\]](#) on page 690
- [CALCulate<n>:MARKer<m>:Y](#) on page 696

CALCulate<n>:MARKer<m>:FUNction:REFerence	862
CALCulate<n>:MARKer<m>:LOEXclude	863
CALCulate<n>:MARKer<m>:MAXimum:AUTO	863
CALCulate<n>:MARKer<m>:MINimum:AUTO	863
CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM	864
CALCulate<n>:MARKer<m>:X:SSIZe	864
CALCulate<n>:MARKer<m>:Y:PERCent	865
CALCulate<n>:THReshold	865
CALCulate<n>:THReshold:STATe	865
DISPlay:MTABLE	866

CALCulate<n>:MARKer<m>:FUNction:REFerence

This command sets the reference level to the power measured by a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:MARK2:FUNC:REF`

Sets the reference level to the level of marker 2.

Manual operation: See "["Ref Lvl =Mkr Lvl"](#)" on page 412

CALCulate<n>:MARKer<m>:LOEXclude <State>

This command turns the local oscillator suppression during a peak search on or off.

Suffix:

<n> Selects the measurement window.
 <m> irrelevant

Parameters:

<State> ON | OFF
 *RST: ON

Example: CALC:MARK:LOEX ON

Manual operation: See ["Exclude LO"](#) on page 412

CALCulate<n>:MARKer<m>:MAXimum:AUTO <State>

This command turns an automatic marker peak search for a trace maximum on and off. The command performs the peak search after each sweep.

An automatic peak search may be used during adjustments of a device under test to keep track of the actual peak marker position and level.

If no maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC:MARK:MAX:AUTO ON
 Activates the automatic peak search function for marker 1 at the end of each particular sweep.

Usage: Event

Manual operation: See ["Auto Max Peak/Auto Min Peak"](#) on page 412

CALCulate<n>:MARKer<m>:MINimum:AUTO <State>

This command turns an automatic marker peak search for a trace maximum on and off. The command performs the peak search after each sweep.

An automatic peak search may be used during adjustments of a device under test to keep track of the actual peak marker position and level.

If no maximum value is found on the trace (level spacing to adjacent values < peak excursion), an execution error (error code: -200) is produced.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:MARK:MIN:AUTO ON
```

Activates the automatic minimum value search function for marker 1 at the end of each particular sweep.

Manual operation: See ["Auto Max Peak/Auto Min Peak"](#) on page 412

CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM <State>

This command sets the limits of the marker search range to the zoom area.

Note: The function is only available if the search limit for marker and delta marker is switched on (see [CALCulate<n>:MARKer<m>:X:SLIMits\[:STATE\]](#)).

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:MARK:X:SLIM:ZOOM ON
```

Switches the search limit function on.

```
CALC:MARK:X:SLIM:RIGH 20MHz
```

Sets the right limit of the search range to 20 MHz.

Manual operation: See ["Use Zoom Limits"](#) on page 207

CALCulate<n>:MARKer<m>:X:SSIZE <StepSize>

This command defines the step size of the rotary knob for marker or delta marker value changes. It only takes effect in manual operation.

The marker step size is unavailable for statistical measurements.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<StepSize>

STANDARD

step size corresponds to space between two pixels

POINTS

step size corresponds to space between two measured values

*RST: POINTs

Example: CALC:MARK:X:SSIZ STAN
Sets the measured value step size.

Manual operation: See "[Stepsize Standard](#)" on page 407
See "[Stepsize Sweep Points](#)" on page 407

CALCulate<n>:MARKer<m>:Y:PERCent <Probability>

This command positions the selected marker to the given probability.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Note: The command is only available for CCDF measurements. You can query the associated level value with `CALCulate<n>:MARKer<m>:X`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Probability> Range: 0 to 100
Default unit: PCT

Example: CALC1:MARK:Y:PERC 95PCT
Positions marker 1 to a probability of 95 %.

Manual operation: See "[Percent Marker](#)" on page 322

CALCulate<n>:THReshold <Threshold>

This command defines a threshold value for the marker peak search.

A threshold line is automatically turned on.

Suffix:

<n> irrelevant

Parameters:

<Threshold> The unit depends on `CALCulate<n>:UNIT:POWer`.

*RST: (STATe to OFF)

Example: CALC:THR -82DBM
Sets the threshold value to -82 dBm.

Manual operation: See "[Threshold](#)" on page 206

CALCulate<n>:THReshold:STATe <State>

This command turns the threshold line for the marker peak search on and off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:THR:STAT ON
 Switches on the threshold line.

Manual operation:

See ["Threshold"](#) on page 206
 See ["Search Lim Off"](#) on page 207

DISPlay:MTABLE <DisplayMode>

This command turns the marker table on and off.

Parameters:

<DisplayMode> **ON**
 Marker table is displayed.
OFF
 Marker table is not displayed.
AUTO
 Marker table is only displayed if 2 or more markers are active.
 *RST: AUTO

Example:

To activate the table display:
 DISP:MTAB ON
 To query the current state of the marker table display:
 DISP:MTAB?

Manual operation:

See ["Marker Table"](#) on page 203

Using Delta Markers

Commands useful to control delta markers described elsewhere:

- [CALCulate<n>:DELTaMarker<m>:AOFF](#) on page 697
- [CALCulate<n>:DELTaMarker<m>:LINK](#) on page 697
- [CALCulate<n>:DELTaMarker<m>:MAXimum:LEFT](#) on page 698
- [CALCulate<n>:DELTaMarker<m>:MAXimum:NEXT](#) on page 698
- [CALCulate<n>:DELTaMarker<m>:MAXimum\[:PEAK\]](#) on page 699
- [CALCulate<n>:DELTaMarker<m>:MAXimum:RIGHT](#) on page 699
- [CALCulate<n>:DELTaMarker<m>:MINimum:LEFT](#) on page 699
- [CALCulate<n>:DELTaMarker<m>:MINimum:NEXT](#) on page 700
- [CALCulate<n>:DELTaMarker<m>:MINimum\[:PEAK\]](#) on page 700
- [CALCulate<n>:DELTaMarker<m>:MINimum:RIGHT](#) on page 700
- [CALCulate<n>:DELTaMarker<m>:MODE](#) on page 701
- [CALCulate<n>:DELTaMarker<m>\[:STATE\]](#) on page 701
- [CALCulate<n>:DELTaMarker<m>:TRACe](#) on page 701
- [CALCulate<n>:DELTaMarker<m>:X](#) on page 702

- `CALCulate<n>:DELTamarker<m>:X:RELative?` on page 702
- `CALCulate<n>:DELTamarker<m>:Y` on page 703

`CALCulate<n>:DELTamarker<m>:MREF` 867

`CALCulate<n>:DELTamarker<m>:MREF <RefMarkerNo>`

This command defines the reference marker for a delta marker other than marker 1.

The reference may be another marker or the fixed reference.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<RefMarkerNo> **1 ... 16**
Selects markers 1 to 16 as the reference.

FIXed

Selects the fixed reference as the reference.

Example:

`CALC:DELT3:MREF 2`

Specifies that the values of delta marker 3 are relative to marker 2.

Manual operation: See "[Marker Wizard](#)" on page 202

Controlling Fixed Reference Markers

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:MAXimum[:PEAK]` 867

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:X` 868

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:Y` 868

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:Y:OFFSet` 868

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed[:STATe]` 869

`CALCulate<n>:DELTamarker<m>:FUNction:FIXed:RPOint:MAXimum[:PEAK]`

This command moves the fixed reference marker to the peak power.

When measuring the phase noise, the command defines a new reference point level for delta marker 2.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

`CALC:DELT:FUNC:FIX:RPO:MAX`

Sets the reference point level for delta markers to the peak of the selected trace.

Usage: Event

Manual operation: See "[Peak Search](#)" on page 418

CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed:RPOint:X <Reference>

This command defines the horizontal position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

When measuring the phase noise, the command defines the frequency reference for delta marker 2.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<Reference> Numeric value that defines the horizontal position of the reference.
 For frequency domain measurements, it is a frequency in Hz.
 For time domain measurements, it is a point in time in s.
 *RST: Fixed reference: OFF

Example:

CALC:DELT:FUNC:FIX:RPO:X 128 MHz
 Sets the frequency reference to 128 MHz.

Manual operation: See ["Ref Point Frequency \(span > 0\)/Ref Point Time \(zero span\)"](#) on page 418

CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed:RPOint:Y <RefPointLevel>

This command defines the vertical position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

When measuring the phase noise, the command defines the level reference for delta marker 2.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<RefPointLevel> Numeric value that defines the vertical position of the reference.
 The unit and value range is variable.
 *RST: Fixed reference: OFF

Example:

CALC:DELT:FUNC:FIX:RPO:Y -10dBm
 Sets the reference point level for delta markers to -10 dBm.

Manual operation: See ["Ref Point Level"](#) on page 418

CALCulate<n>:DELTamarker<m>:FUNctioN:FIXed:RPOint:Y:OFFSet <Offset>

This command defines a level offset for the fixed delta marker reference point.

When measuring the phase noise, the command defines an additional level offset for delta marker 2.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Offset> Level offset that is added to the display of all delta markers.

*RST: 0 dB

Example:

```
CALC:DELT:FUNC:FIX:RPO:Y:OFFS 10dB
```

Sets the level offset for the measurement with fixed reference value or the phase-noise measurement to 10 dB.

CALCulate<n>:DELTamarker<m>:FUNCTion:FIXed[:STATe] <State>

This command switches the relative measurement to a fixed reference value on or off. Marker 1 is activated previously and a peak search is performed, if necessary. If marker 1 is activated, its position becomes the reference point for the measurement. The reference point can then be modified with the `CALCulate<n>:DELTamarker<m>:FUNCTion:FIXed:RPOint:X` commands and `CALCulate<n>:DELTamarker<m>:FUNCTion:FIXed:RPOint:Y` independently of the position of marker 1 and of a trace. It applies to all delta markers as long as the function is active.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
CALC:DELT:FUNC:FIX ON
```

Switches on the measurement with fixed reference value for all delta markers.

```
CALC:DELT:FUNC:FIX:RPO:X 128 MHZ
```

Sets the frequency reference to 128 MHz.

```
CALC:DELT:FUNC:FIX:RPO:Y 30 DBM
```

Sets the reference level to +30 dBm.

Manual operation: See "Ref. Fixed On/Off" on page 419

Using Marker Functions

The following commands control the measurements available as marker functions.

- [Signal Count](#).....870
- [Noise Density](#).....871
- [Phase Noise](#).....872
- [Marker Demodulation](#).....874
- [n dB Down Marker](#).....876
- [Marker Peak List](#).....879
- [Band Power](#).....884

Signal Count

<code>CALCulate<n>:MARKer<m>:COUNT</code>	870
<code>CALCulate<n>:MARKer<m>:COUNT:FREQUency?</code>	870
<code>CALCulate<n>:MARKer<m>:COUNT:RESolution</code>	871

CALCulate<n>:MARKer<m>:COUNT <State>

This command turns the frequency counter at the marker position for marker 1 on and off.

The count result is queried with `CALCulate<n>:MARKer<m>:COUNT:FREQUency?`.

The frequency counter works for one marker only. If you perform a frequency count with another marker, the R&S ESR deactivates the frequency count of the first marker.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<code><n></code>	Selects the measurement window.
<code><m></code>	irrelevant

Parameters:

<code><State></code>	ON OFF
<code>*RST:</code>	OFF

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK ON
Switches on marker 1.
CALC:MARK:COUN ON
Switches on the frequency counter for marker 1.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:COUN:FREQ?
Outputs the measured value.
```

Manual operation: See "[Signal Count](#)" on page 417

CALCulate<n>:MARKer<m>:COUNT:FREQUency?

This command queries the result of the frequency counter for marker 1.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<code><n></code>	Selects the measurement window.
<code><m></code>	irrelevant

Return values:

<Frequency> Frequency at the marker position.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK ON
Switches on marker 2.
CALC:MARK:COUN ON
Activates the frequency counter for marker 1.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:COUN:FREQ?
Outputs the measured value of marker 1.
```

Usage: Query only

Manual operation: See "Signal Count" on page 417

CALCulate<n>:MARKer<m>:COUNT:RESolution <Resolution>

This command specifies the resolution of the frequency counter (marker 1).

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Resolution> 0.001 | 0.01 | 0.1 | 1 | 10 | 100 | 1000 | 10000 Hz

*RST: 0.1 Hz

Example:

```
CALC:MARK:COUN:RES 1kHz
Sets the resolution of the frequency counter to 1 kHz.
```

Noise Density

CALCulate<n>:MARKer<m>:FUNCTion:NOISe:RESult.....871

CALCulate<n>:MARKer<m>:FUNCTion:NOISe[:STATe].....872

CALCulate<n>:MARKer<m>:FUNCTion:NOISe:RESult

This command queries the result of the noise measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK2 ON
Switches on marker 2.
CALC:MARK:FUNC:NOIS ON
Switches on noise measurement.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK2:NOIS:RES?
Outputs the noise result of marker 2.
```

Manual operation: See "Noise Meas On/Off" on page 418

CALCulate<n>:MARKer<m>:FUNCTion:NOISe[:STATe] <State>

This command turns the noise measurement for all markers on or off.

If on, the R&S ESR measures the noise power density at the marker position.

The result can be queried with `CALCulate<n>:MARKer<m>:FUNCTion:NOISe:RESult`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
CALC:MARK:FUNC:NOIS ON
Switches on the noise measurement.
```

Manual operation: See "Noise Meas On/Off" on page 418

Phase Noise

<code>CALCulate<n>:DELTamarker<m>:FUNCTion:PNOise:AUTO</code>	872
<code>CALCulate<n>:DELTamarker<m>:FUNCTion:PNOise:RESult?</code>	873
<code>CALCulate<n>:DELTamarker<m>:FUNCTion:PNOise[:STATe]</code>	873

CALCulate<n>:DELTamarker<m>:FUNCTion:PNOise:AUTO <State>

This command turns an automatic peak search for the fixed reference marker at the end of a sweep on and off.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT:FUNC:PNO:AUTO ON

Activates an automatic peak search for the reference marker in a phase-noise measurement.

Manual operation: See "[Ph. Noise Auto Peak Search](#)" on page 419

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:RESult?

This command queries the result of the phase noise measurement.

If necessary, the command activates the measurement first..

Suffix:

<n> Selects the measurement window.

<m> 2
 Marker 2 is always the deltamarker for phase noise measurements.

Example:

CALC:DELT2:FUNC:PNO:RES?

Outputs the result of phase-noise measurement of the delta-marker 2.

Usage:

Query only

Manual operation: See "[Phase Noise On/Off](#)" on page 418

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise[:STATe] <State>

This command turns the phase noise measurement at the delta marker position on and off.

The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

The reference marker for phase noise measurements is either a normal marker or a fixed reference. If necessary, the command turns on the reference marker

A fixed reference point can be modified with the [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X](#) and [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y](#) commands independent of the position of marker 1 and of a trace.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Note: marker 2 is always the deltamarker for phase noise measurement results.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT:FUNC:PNO ON
 Switches on the phase-noise measurement with all delta markers.
 CALC:DELT:FUNC:FIX:RPO:X 128 MHZ
 Sets the frequency reference to 128 MHz.
 CALC:DELT:FUNC:FIX:RPO:Y 30 DBM
 Sets the reference level to +30 dBm

Manual operation: See ["Phase Noise On/Off"](#) on page 418

Marker Demodulation

Commands useful to configure the marker demodulation described elsewhere:

- [\[SENSe:\]DEMod:SQUelch:LEVel](#) on page 648
- [\[SENSe:\]DEMod:SQUelch\[:STATe\]](#) on page 649

CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:CONTinuous	874
CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:HOLDoff	874
CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:SElect	875
CALCulate<n>:MARKer<m>:FUNCTION:DEModulation[:STATe]	875

CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:CONTinuous <State>

This command turns continuous demodulation of the signal at the marker position in the frequency domain on and off.

Thus acoustic monitoring of the signals can be performed.

In the time domain continuous demodulation is always on.

Suffix:

<n> Selects the measurement window.
 <m> Selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC2:MARK3:FUNC:DEM:CONT ON
 Switches on the continuous ' demodulation.

Manual operation: See ["Continuous Demod \(span > 0\)"](#) on page 420

CALCulate<n>:MARKer<m>:FUNCTION:DEModulation:HOLDoff <Duration>

This command defines for how long the the signal at the marker position is demodulated.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<Duration> Range: 10 ms to 1000 s
*RST: Marker demodulation = OFF

Example: CALC:MARK:FUNC:DEM:HOLD 3s

Manual operation: See "Mkr Stop Time" on page 420

CALCulate<n>:MARKer<m>:FUNCTion:DEModulation:SElect <DemodMode>

This command selects the demodulation mode for the audio demodulator.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<DemodMode> AM | FM
*RST: AM

Example: CALC:MARK:FUNC:DEM:SEL FM

Manual operation: See "AM" on page 420
See "FM" on page 420

CALCulate<n>:MARKer<m>:FUNCTion:DEModulation[:STATe] <State>

This command turns the audio demodulator on and off when the measurement reaches a marker position.

In the frequency domain, the hold time can be defined at the corresponding marker position with `CALCulate<n>:MARKer<m>:FUNCTion:DEModulation:HOLDoff`.

In the time domain continuous demodulation is always on.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: CALC:MARK3:FUNC:DEM ON
Switches on the demodulation for marker 3.

Manual operation: See "Mkr Demod On/Off" on page 420

n dB Down Marker

CALCulate<n>:MARKer<m>:FUNction:NDBDown.....	876
CALCulate<n>:MARKer<m>:FUNction:NDBDown:FREquency?.....	876
CALCulate<n>:MARKer<m>:FUNction:NDBDown:QFACTOR.....	877
CALCulate<n>:MARKer<m>:FUNction:NDBDown:RESult?.....	877
CALCulate<n>:MARKer<m>:FUNction:NDBDown:STATE.....	878
CALCulate<n>:MARKer<m>:FUNction:NDBDown:TIME?.....	878

CALCulate<n>:MARKer<m>:FUNction:NDBDown <Distance>

This command defines the distance of the n dB down markers to the reference marker.

The temporary markers T1 and T2 are positioned n dB below the active reference marker. The frequency and time position of these markers can be queried with `CALCulate<n>:MARKer<m>:FUNction:NDBDown:FREquency?` and `CALCulate<n>:MARKer<m>:FUNction:NDBDown:TIME?`. The bandwidth between the markers can be queried with `CALCulate<n>:MARKer<m>:FUNction:NDBDown:RESult?`.

Suffix:

<n>	Selects the measurement window.
<m>	irrelevant

Parameters:

<Distance>	Distance of the temporary markers to the reference marker in dB.
*RST:	6dB

Example:

```
CALC:MARK:FUNC:NDBD 3dB
Sets the level spacing to 3 dB.
```

Manual operation: See "n dB down" on page 421

CALCulate<n>:MARKer<m>:FUNction:NDBDown:FREquency?

This command queries the position of the n dB down markers on the x-axis when measuring in the frequency domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n>	Selects the measurement window.
<m>	irrelevant

Return values:

<Frequency>	<frequency 1> absolute frequency of the n dB marker to the left of the reference marker in Hz
-------------	---

<frequency 2>

absolute frequency of the n dB marker to the right of the reference marker in Hz

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
CALC:MARK:FUNC:NDBD ON
```

Switches on the n dB down function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:NDBD:FREQ?
```

Outputs the frequencies of the temporary markers.

Usage:

Query only

Manual operation: See "[n dB down](#)" on page 421

CALCulate<n>:MARKer<m>:FUNCTion:NDBDown:QFACtor

This command queries the Q factor (quality) of n dB down measurements.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode.

```
CALC:MARK:FUNC:NDBD ON
```

Switches on the n dB down function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:NDBD:QFAC?
```

Queries the Q factor of the measured bandwidth.

Manual operation: See "[n dB down](#)" on page 421

CALCulate<n>:MARKer<m>:FUNCTion:NDBDown:RESult?

This command queries the distance of the n dB down markers from each other.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<Distance> The result depends on the span.
 In case of frequency domain measurements, the command returns the bandwidth between the two n dB down markers in Hz. In case of time domain measurements, the command returns the pulse width between the two n dB down markers in seconds.

Example:

```
INIT:CONT OFF
Switches to single sweep mode.
CALC:MARK:FUNC:NDBD ON
Switches on the n dB down function.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK:FUNC:NDBD:RES?
Outputs the measured value.
```

Usage: Query only

Manual operation: See "[n dB down](#)" on page 421

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATE <State>

This command turns the n dB Down marker function on and off.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
CALC:MARK:FUNC:NDBD:STAT ON
Switches on the "N dB Down" function.
```

Manual operation: See "[n dB down](#)" on page 421

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME?

This command queries the position of the n dB down markers on the x-axis when measuring in the time domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps.

Suffix:

<n> Selects the measurement window.

<m> irrelevant

Return values:

<Time>

<time 1>

absolute position in time of the n dB marker to the left of the reference marker in seconds

<time 2>

absolute position in time of the n dB marker to the right of the reference marker in seconds

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode

```
CALC:MARK:FUNC:NDBD ON
```

Switches on the n dB down function.

```
INIT;*WAI
```

Starts a sweep and waits for the end.

```
CALC:MARK:FUNC:NDBD:TIME?
```

Outputs the time values of the temporary markers.

Usage:

Query only

Manual operation: See "n dB down" on page 421

Marker Peak List

Commands useful to perform a peak search described elsewhere:

- [CALCulate<n>:MARKer<m>:PEXCursion](#) on page 679
- [MMEMorY:STORe:PEAKlist](#) on page 682

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANNotation:LABel:STATe	879
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNt?	880
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:[IMMediate]	880
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE	881
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SEAR:AUTO	881
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT	882
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT	882
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X	882
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?	883

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANNotation:LABel:STATe <State>

This command turns labels for peaks found during a peak search on and off.

The labels correspond to the marker number in the marker peak list.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State>

ON | OFF

*RST: ON

Example: `CALC:MARK:FUNC:FPE:ANN:LAB:STAT OFF`
Removes the peak labels from the diagram

Manual operation: See "[Marker Number](#)" on page 424

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT?

This command queries the number of peaks that have been found during a peak search.

Suffix:

<n> irrelevant
<m> Selects the marker.

Return values:

<NumberOfPeaks>

Example: `CALC:MARK:FUNC:FPE 3`
Searches the 3 highest maxima for trace 1
`CALC:MARK:FUNC:FPE:COUN?`
Queries the number of maxima found

Usage: Query only

Manual operation: See "[Marker Peak List](#)" on page 422

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks[:IMMEDIATE] <NoMaxima>

This command initiates a peak search.

The results can be queried with:

- Position of a peak on the x-axis: `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X`
- Position of a peak on the y-axis: `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?`
- Number of peaks in the list: `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT?`

The order the results are returned in is selected with `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT`.

The trace the peaks search is performed on is selected with `CALCulate<n>:MARKer<m>:TRACe`.

Number of found maxima

The number of maxima found depends on the waveform and value set for the Peak Excursion parameter (see `CALCulate<n>:MARKer<m>:PEXCursion`), however, a maximum number of 200 maxima are determined. Only the signals which exceed their surrounding values at least by the value indicated by the peak excursion parameter are recognized as maxima. Therefore, the number of maxima found is not automatically the same as the number of maxima desired.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<NoMaxima> Range: 1 to 200

Example:

```
INIT:CONT OFF
```

Switches to single sweep mode

```
INIT;*WAI
```

Starts measurement and synchronizes to end

```
CALC:MARK:TRAC 1
```

Sets marker 1 to trace 1

```
CALC:MARK:FUNC:FPE:SORT X
```

Sets the sort mode to increasing X values

```
CALC:MARK:FUNC:FPE 3;*WAI
```

Searches the 3 highest maxima for trace 1 and synchronizes to end

```
CALC:MARK:FUNC:FPE:COUN?
```

Queries the number of maxima found

```
CALC:MARK:FUNC:FPE:Y?
```

Queries the level of maxima found

```
CALC:MARK:FUNC:FPE:X?
```

Queries the frequencies (span <> 0) or time (span = 0) of maxima found.

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:LIST:SIZE <MaxNoPeaks>

This command defines the maximum number of peaks the marker peak list may contain.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<MaxNoPeaks> Maximum number of peaks to be determined.

```
*RST: 50
```

Example:

```
CALC:MARK:FUNC:FPE:LIST:SIZE 10
```

The marker peak list will contain a maximum of 10 peaks.

Manual operation: See "[Max Peak Count](#)" on page 422

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:SEAR:AUTO <State>

This command turns the marker peak search on and off.

This command is retained for compatibility with R&S FSP only. Use [CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:STAT](#) instead.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK:FUNC:FPE:SEAR:AUTO ON
Activates marker peak search

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:SORT <SortMode>

This command selects the order in which the results of a peak search are returned.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<SortMode>

X

Sorts the peaks according to increasing position on the x-axis.

Y

Sorts the peaks according to decreasing position on the y-axis.

Example:

CALC:MARK:FUNC:FPE:SORT Y
Sets the sort mode to decreasing y values

Manual operation: See "[Sort Mode Freq/Lvl](#)" on page 422

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:STAT <State>

This command turns a peak search on and off.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:MARK:FUNC:FPE:STAT ON
Activates marker peak search

Manual operation: See "[Peak List On/Off](#)" on page 422

CALCulate<n>:MARKer<m>:FUNCTion:FPEaks:X

This command queries the position of the peaks on the x-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT` on page 882.

The number of peaks on the number that has been set with `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT?`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<PeakPosition> Position of the peaks on the x-axis. The unit depends on the measurement.

Example:

```
CALC:MARK:FUNC:FPE:SORT Y
```

Sets the sort mode to decreasing y values

```
CALC:MARK:FUNC:FPE 3
```

Searches the 3 highest maxima for trace 1

```
CALC:MARK:FUNC:FPE:COUN?
```

Queries the number of maxima found

```
CALC:MARK:FUNC:FPE:X?
```

Queries the frequencies (span <> 0) or. time (span = 0) of the maxima found

```
107.5E6,153.8E6,187.9E6
```

frequencies in increasing order

```
2.05E-3,2.37E-3, 3.71e-3
```

times in increasing order

Manual operation: See "Marker Peak List" on page 422

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y?

This command queries the position of the peaks on the y-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT` on page 882.

The number of peaks on the number that has been set with `CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT?`.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Return values:

<PeakPosition> Position of the peaks on the y-axis. The unit depends on the measurement.

Example:	<code>CALC:MARK:FUNC:FPE:SORT Y</code> Sets the sort mode to decreasing y values <code>CALC:MARK:FUNC:FPE 3</code> Searches the 3 highest maxima for trace 1 <code>CALC:MARK:FUNC:FPE:COUN?</code> Queries the number of maxima found <code>CALC:MARK:FUNC:FPE:Y?</code> Queries the levels of the maxima found
Usage:	Query only
Manual operation:	See " Marker Peak List " on page 422

Band Power

<code>CALCulate<n>:MARKer<m>:FUNction:BPOWer:MODE</code>	884
<code>CALCulate<n>:MARKer<m>:FUNction:BPOWer:RESult?</code>	884
<code>CALCulate<n>:MARKer<m>:FUNction:BPOWer:SPAN</code>	885
<code>CALCulate<n>:MARKer<m>:FUNction:BPOWer[:STATe]</code>	885
<code>CALCulate<n>:DELTamarker<m>:FUNction:BPOWer:MODE</code>	886
<code>CALCulate<n>:DELTamarker<m>:FUNction:BPOWer:RESult?</code>	886
<code>CALCulate<n>:DELTamarker<m>:FUNction:BPOWer:SPAN</code>	886
<code>CALCulate<n>:DELTamarker<m>:FUNction:BPOWer[:STATe]</code>	887

`CALCulate<n>:MARKer<m>:FUNction:BPOWer:MODE <Mode>`

This command selects the way the results for a band power marker are displayed.

Suffix:

<n>	irrelevant
<m>	irrelevant

Parameters:

<Mode>	POWER Result is displayed as a power in dBm.
	DENSITY Result is displayed as a density in dBm/Hz.
	*RST: POW

Example: `CALC:MARK:FUNC:BPOW:MODE DENS`

Manual operation: See "[Power](#)" on page 424
See "[Density](#)" on page 425

`CALCulate<n>:MARKer<m>:FUNction:BPOWer:RESult?`

This command queries the results of the band power measurement.

Suffix:

<n>	irrelevant
<m>	irrelevant

Return values:

<Power> Signal power over the marker bandwidth.

Example:

Activate the band power marker:

```
CALC:MARK:FUNC:BPOW:STAT ON
```

Select the density mode for the result:

```
CALC:MARK:FUNC:BPOW:MODE DENS
```

Query the result:

```
CALC:MARK:FUNC:BPOW:RES?
```

Response:

```
20dBm/Hz
```

Usage:

Query only

Manual operation:

See ["Power"](#) on page 424

See ["Density"](#) on page 425

**CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:SPAN **

This command defines the bandwidth around the marker position.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

 Numeric value that defines the span in Hz.
The maximum span depends on the marker position and R&S FSV model.

*RST: 5% of current span

Example:

```
CALC:MARK:FUNC:BPOW:SPAN 20
```

Manual operation:

See ["Span"](#) on page 424

CALCulate<n>:MARKer<m>:FUNCTion:BPOWer[:STATe] <State>

This command turns markers for band power measurements on and off.

If necessary, the command also turns on a marker. If a marker is already on, the currently active marker is used as the band power marker (all other marker functions for this marker are deactivated).

For details see ["Performing Band Power Measurements"](#) on page 428.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> **ON | OFF**

*RST: OFF

Example: `CALC:MARK:FUNC:BPOW:STAT ON`

Manual operation: See "Band Power On/Off" on page 424

CALCulate<n>:DELTamarker<m>:FUNction:BPOWer:MODE <Mode>

This command selects the way the results for a band power delta marker are displayed.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<Mode> **POWER**
Result is displayed as a power in dBm.

DENSity
Result is displayed as a density in dBm/Hz.

*RST: POW

Example: `CALC:DELT:BPOW:MODE DENS`

CALCulate<n>:DELTamarker<m>:FUNction:BPOWer:RESult?

This command queries the results of the band power measurement.

Suffix:

<n> irrelevant

<m> irrelevant

Return values:

<Power> Signal power over the delta marker bandwidth.

Example: Activate the delta band power marker:

`CALC:DELT:BPOW:STAT ON`

Select the density mode for the result:

`CALC:DELT:BPOW:MODE DENS`

Query the result:

`CALC:DELT:BPOW:RES?`

Response:

20dBm/Hz

Usage: Query only

**CALCulate<n>:DELTamarker<m>:FUNction:BPOWer:SPAN **

This command defines the bandwidth around the delta marker position. The span is indicated by lines in the diagram.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

 Numeric value that defines the span in Hz.
The maximum span depends on the marker position and R&S FSV model.
*RST: 5% of current span

Example: CALC:DELT:BPOW:SPAN 20

CALCulate<n>:DELTa<m>:FUNCTION:BPOWer[:STATe] <State>

This command turns delta markers for band power measurements on and off.

If necessary, the command also turns on a reference marker.

For details see "[Performing Band Power Measurements](#)" on page 428.

Suffix:

<n> irrelevant

<m> irrelevant

Parameters:

<State> **ON | OFF**
When switched to on, if no marker is active yet, marker 1 is activated. Otherwise, the currently active marker is used as a delta band power marker (all other marker functions for this marker are deactivated).
*RST: OFF

Example: CALC:DELT:BPOW:STAT ON

11.6 Remote Commands in I/Q Analyzer Mode

11.6.1 Using the I/Q Analyzer

CALCulate<n>:FORMat.....	888
CALCulate<n>:MARKer<m>:SEARch.....	888
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALE]:RVALue.....	889
MMEMory:LOAD:IQ:STATe.....	889
TRACe<n>:IQ:BWIDth.....	889
TRACe<n>:IQ:RLENgth.....	890
TRACe<n>:IQ:SET.....	890
TRACe<n>:IQ:SRATe.....	891
TRACe<n>:IQ:DATA.....	892
TRACe<n>:IQ:DATA:FORMat.....	892
TRACe<n>:IQ:AVERAge:COUNT.....	894
TRACe<n>:IQ:AVERAge[:STATe].....	894

TRACe<n>:IQ:DATA:MEMory?	895
TRACe<n>:IQ:EGATe	896
TRACe<n>:IQ:EGATe:GAP	896
TRACe<n>:IQ:EGATe:LENGth	897
TRACe<n>:IQ:EGATe:NOFgateperiods	897
TRACe<n>:IQ:EGATe:TYPE	897
TRACe<n>:IQ:EVAL	898
TRACe<n>:IQ[:STATe]	898
TRACe<n>:IQ:TPISample?	899

CALCulate<n>:FORMat <Format>

This command defines the display type of the IQ data.

Suffix:

<n> irrelevant

Parameters:

<Format>

- RIMag**
IQ data
- MAGNitude**
Magnitude
- FREQuency**
Spectrum
- VECTor**
IQ-Vector

Manual operation: See "I/Q Analyzer" on page 459
See "Display Config" on page 460

CALCulate<n>:MARKer<m>:SEARch <MarkReallmag>

This command selects the trace type a marker search is performed on.

Suffix:

<n> Selects the measurement window.

<m> Selects the marker.

Parameters:

<MarkReallmag>

- REAL**
Marker search functions are performed on the real trace of the "I/Q" measurement.
- IMAG**
Marker search functions are performed on the imaginary trace of the "I/Q" measurement.
- MAGN**
Marker search functions are performed on the magnitude of the I and Q data.

*RST: REAL

Example: CALC4:MARK:SEAR IMAG

Manual operation: See ["Search Settings"](#) on page 469

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue <Value>

The command defines the power value assigned to the reference position in the grid.

Suffix:

<n> irrelevant

<t> irrelevant

Parameters:

<Value> *RST: 0 dB, coupled to reference level

Example: DISP:TRAC:Y:RVAL -20dBm
Defines a reference position of -20 dBm.

Manual operation: See ["Reference Level"](#) on page 460
See ["Reference Value"](#) on page 478

MMEMory:LOAD:IQ:STATe 1, <FileName>

This command loads the I/Q data from the specified .iq.tar file.

Note: switch to single sweep mode (INIT:CONT OFF) before importing I/Q data as otherwise the instrument will continue to measure data and display the current results rather than the imported data.

Parameters:

<FileName> Complete file name including the path

Example: MMEM:LOAD:IQ:STAT 1, 'C:\R_S\Instr\user\data.iq.tar'
Loads I/Q data from the specified file.

Usage: Setting only

Manual operation: See ["IQ Import"](#) on page 534

TRACe<n>:IQ:BWIDth

This command queries the flat, usable filter bandwidth of the final I/Q data.

Suffix:

<n> irrelevant

Example: TRAC:IQ:BWID?

Manual operation: See ["Filter BW"](#) on page 460

TRACe<n>:IQ:RLENgth <NoOfSamples>

This command sets the record length for the acquired I/Q data. Increasing the record length automatically also increases the measurement time.

Note: Alternatively, you can define the measurement time using the `SENS:SWE:TIME` command.

Suffix:

<n> irrelevant

Parameters:

<NoOfSamples> Number of measurement values to record.
 Range: 1 ... 209715200(= 200*1024*1024);
 *RST: 691

Example: `TRAC:IQ:RLEN 256`

Manual operation: See "[Record Length](#)" on page 460

TRACe<n>:IQ:SET NORM,<Placeholder>, <SampleRate>, <TriggerMode>, <TriggerSlope>, <PretriggerSamp>, <NumberSamples>

This command defines the settings of the R&S ESR hardware for the measurement of I/Q data. This allows setting the sample rate, trigger conditions and the record length.

If this command is omitted, the current instrument settings are used for the corresponding parameters.

This command switches to IQ mode automatically (see also `TRACe<n>:IQ[:STATE]` on page 898).

The trigger level can be set using the `TRIGger<n>[:SEQUENCE]:SOURCE` command.

Note: When using the default settings with the `TRACe<n>:IQ:DATA` command, the following minimum buffer sizes for the response data are recommended: ASCII format 10 kBytes, Binary format 2 kBytes.

Tip: To determine the trigger point in the sample (for "External" or "IF Power" trigger mode), use the `TRACe<n>:IQ:TPISample?` on page 899 command.

Parameters:

NORM is not evaluated, but must be inserted

<Placeholder> numeric value
 is not evaluated, but must be inserted

<TriggerMode> IMMEDIATE | EXTERNAL | IFPOWER | BBPOWER | PSE
 Selection of the trigger source used for the measurement.
 For IMM mode, gating is automatically deactivated.
 *RST: IMM

<TriggerSlope>	POSitive NEGative Used trigger slope. *RST: POS
<PretriggerSamp>	Defines the trigger offset in terms of pretrigger samples. Negative values correspond to a trigger delay. This value also defines the interval between the trigger signal and the gate edge in samples. Range: RF input without gating: 0 to (200 MS - 1) RF input with gating: 0 to [(200 MS * SR/128 MHz)-1] Range: 0 to (MaxPreTriggerSamples * 128 MHz/sample rate). *RST: 0
<NumberSamples>	Number of measurement values to record (including the pretrigger samples). Range: 1 ... 209715200(= 200*1024*1024); *RST: 128

Example:

```
TRAC:IQ:SET NORM,10 MHz,32 MHz,EXT,POS,0,2048
```

Reads 2048 I/Q-values starting at the trigger point.

sample rate = 32 MHz

trigger = External

slope = Positive

```
TRAC:IQ:SET NORM,10 MHz,4 MHz,EXT,POS,1024,512
```

Reads 512 I/Q-values from 1024 measurement points before the trigger point.

sample rate = 4 MHz

trigger = External

slope = Positive

Manual operation: See "[Record Length](#)" on page 460

TRACe<n>:IQ:SRATe <SampleRate>

This command sets the final user sample rate for the acquired I/Q data. Thus, the sample rate can be modified without affecting the other settings.

Note: The smaller the user sample rate, the smaller the usable I/Q bandwidth, see [TRACe<n>:IQ:BWIDth](#) on page 889.

Suffix:

<n> irrelevant

Example: `TRAC:IQ:SRAT 4 MHz`

Manual operation: See "[Sample Rate](#)" on page 460

TRACe<n>:IQ:DATA

This command starts a measurement with the settings defined via `TRACe<n>:IQ:SET` and returns the list of measurement results (I/Q samples) immediately after they are corrected in terms of frequency response. The number of measurement results depends on the settings defined with `TRACe<n>:IQ:SET`, the output format depends on the settings of the `FORMat` subsystem. The format of the data list is defined by the command `TRACe<n>:IQ:DATA:FORMat`.

The command requires all response data to be read out completely before the instrument accepts further commands.

The result values are scaled linearly in Volts and correspond to the voltage at the RF or digital input of the instrument. The number of the returned values is 2 * the number of samples.

Note: Using the command with the *RST values for the `TRACe<n>:IQ:SET` command, the following minimum buffer sizes for the response data are recommended:

ASCII format: 10 kBytes

Binary format: 2 kBytes

Suffix:

<n> irrelevant

Example:

```
TRAC:IQ:STAT ON
Enables acquisition of I/Q data
TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,0,4096
Measurement configuration:
Sample Rate = 32 MHz
Trigger Source = External
Trigger Slope = Positive
Pretrigger Samples = 0
Number of Samples = 4096
FORMat REAL,32
Selects format of response data
TRAC:IQ:DATA?
Starts measurement and reads results
```

TRACe<n>:IQ:DATA:FORMat <Format>

This command defines the transfer format of the I/Q data.

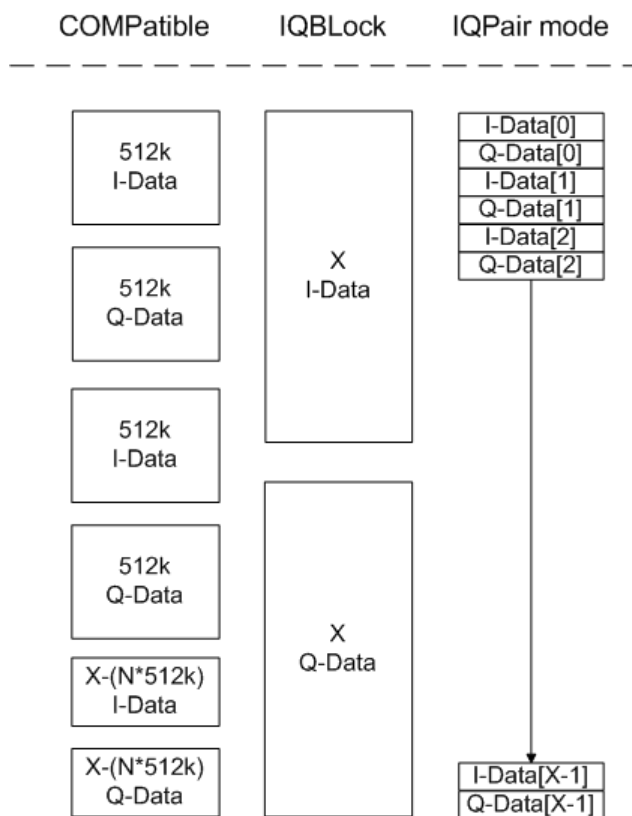


Figure 11-5: IQ data formats

Note: 512k corresponds to 524288 samples

$$\# \text{ of } I\text{-Data} = \# \text{ of } Q\text{-Data} = \frac{\# \text{ of } DataBytes}{8}$$

$$Q\text{-Data} - \text{Offset} = \frac{(\# \text{ of } DataBytes)}{2} + LengthIndicatorDigits$$

Suffix:

<n> irrelevant

Parameters:

<Format> COMPAtible | IQBLock | IQPair

*RST: IQBL

For maximum performance, the formats "Compatible" or "IQPair" should be used. Furthermore, for large amounts of data, the data should be in binary format to improve performance.

For further details on formats refer to [Chapter 5.2.9, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 177 .

TRACe<n>:IQ:AVERAge:COUNT <NumberSets>

This command defines the number of I/Q data sets that are to serve as a basis for averaging.

Suffix:

<n> irrelevant

Parameters:

<NumberSets> 0 to 32767

*RST: 0

Example:

TRAC:IQ ON

Switches on acquisition of I/Q data.

TRAC:IQ:AVER ON

Enables averaging of the I/Q measurement data

TRAC:IQ:AVER:COUN 10

Selects averaging over 10 data sets

TRAC:IQ:DATA?

Starts the measurement and reads out the averaged data.

Usage:

SCPI confirmed

TRACe<n>:IQ:AVERAge[:STATe] <State>

The command enables averaging of the recorded I/Q data, provided that I/Q data acquisition was previously enabled with [TRACe<n>:IQ\[:STATe\]](#) on page 898.

With I/Q data averaging enabled, the maximum amount of I/Q data is limited to 512kS (524288 complex samples).

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

TRAC:IQ ON

Switches on acquisition of I/Q data.

TRAC:IQ:AVER ON

Enables averaging of the I/Q measurement data.

TRAC:IQ:AVER:COUN 10

Selects averaging over 10 data sets.

TRAC:IQ:DATA?

Starts the measurement and reads out the averaged data.

TRACe<n>:IQ:DATA:MEMory? <OffsetSamples>,<NoOfSamples>

This command reads out previously acquired (and frequency response corrected) I/Q data from the memory. Furthermore, the offset related to the start of measurement and the number of I/Q samples are given. Thus, a previously acquired data set can be read out in smaller portions. If no parameters are given, all data is read from the memory. The maximum amount of available data depends on the settings of the [TRACe<n>:IQ:SET](#) command, the output format on the settings in the FORMat subsystem.

The returned values are scaled linear in unit Volt and correspond to the voltage at the RF or digital input of the instrument.

The format of the output buffer corresponds to the [TRACe<n>:IQ:DATA](#) command.

The command requires all response data to be read out completely before the instrument accepts further commands.

If no I/Q data is available in memory because the corresponding measurement was not started, the command causes a query error.

Suffix:

<n> irrelevant

Parameters:

<OffsetSamples>	Offset of the values to be read, in relation to the start of the acquired data. Range: 0 to <# of samples> – 1, with <# of samples> being the value set by the "TRACe:IQ:SET" command *RST: 0
<NoOfSamples>	Number of measurement values to be read. Range: 1 to <# of samples> - <offset samples> with <# of samples> being the value set by the "TRACe:IQ:SET" command *RST: <# of samples>

Example: `TRAC:IQ:STAT ON`
 Enables acquisition of I/Q data
`TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,100,4096`
Measurement configuration:
 Sample Rate = 32 MHz
 Trigger Source = External
 Trigger Slope = Positive
 Pretrigger Samples = 100
 Number of Samples = 4096
`INIT;*WAI`
 Starts measurement and wait for sync
`FORMat REAL,32`
 Determines output format
To read the results:
`TRAC:IQ:DATA:MEM?`
 Reads all 4096 I/Q data
`TRAC:IQ:DATA:MEM? 0,2048`
 Reads 2048 I/Q data starting at the beginning of data acquisition
`TRAC:IQ:DATA:MEM? 2048,1024`
 Reads 1024 I/Q data from half of the recorded data
`TRAC:IQ:DATA:MEM? 100,512`
 Reads 512 I/Q data starting at the trigger point (<Pretrigger Samples> was 100)

Usage: Query only

TRACe<n>:IQ:EGATe <State>

Activates or deactivates the gate function for IQ data measurements. This command is only valid for TRAC:IQ ON and trigger modes "EXT" and "IFP". The gate trigger is specified using `TRACe<n>:IQ:SET` on page 890. For details see [Chapter 11.6.2, "I/Q Gating"](#), on page 899.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example: `TRAC:IQ:EGAT: ON`

TRACe<n>:IQ:EGATe:GAP <Samples>

Defines the interval between several gate periods in samples. For details see [Chapter 11.6.2, "I/Q Gating"](#), on page 899.

Suffix:

<n> irrelevant

Parameters:

<Samples> <numeric value>
 Max = MaxPreTriggerSamples * 128 MHz/sample rate
 pretrigger samples defined by TRACe<n>:IQ:SET;
 sample rate defined by TRACe<n>:IQ:SRATe)
 Range: 1...Max (samples)
 *RST: 100

Example: TRAC:IQ:EGAT:GAP 2

TRACe<n>:IQ:EGATe:LENGth <GateLength>

Defines the gate length in samples in edge mode. For details see [Chapter 11.6.2, "I/Q Gating"](#), on page 899.

Suffix:

<n> irrelevant

Parameters:

<GateLength> <numeric value>
 Max = MaxPreTriggerSamples * 128 MHz/sample rate
 pretrigger samples defined by TRACe<n>:IQ:SET;
 sample rate defined by TRACe<n>:IQ:SRATe)
 Range: 1...Max (samples)
 *RST: 100

Example: TRAC:IQ:EGAT:LENG 2000

TRACe<n>:IQ:EGATe:NOFgateperiods <Number>

Defines the number of gate periods after a trigger signal. For details see [Chapter 11.6.2, "I/Q Gating"](#), on page 899.

Suffix:

<n> irrelevant

Parameters:

<Number> 1...1023
 *RST: 1

Example: TRAC:IQ:EGAT:NOF 2

TRACe<n>:IQ:EGATe:TYPE <Type>

Specifies the gate trigger type used for data collection. For details see [Chapter 11.6.2, "I/Q Gating"](#), on page 899.

Note: Using gating with gate mode "level" and an IFP trigger (TRIGger<n>[: SEQuence] : SOURce), the holdoff time for the IFP trigger (see TRIGger<n>[: SEQuence] : IFPower : HOLDoFF on page 837) is ignored.

Suffix:

<n> irrelevant

Parameters:<Type> LEV | EDGE
*RST: EDGE**Example:**

TRAC:IQ:EGAT:TYPE LEV

TRACe<n>:IQ:EVAL <State>

This command enables or disables the IQ data evaluation mode and is a prerequisite for the IQ Analyzer functions.

Before this command can be executed, IQ data acquisition must be enabled (see [TRACe<n>:IQ\[:STATe\]](#) on page 898). This command automatically disables the IQ data evaluation mode to provide optimum performance for IQ-data acquisition.

If you start the IQ Analyzer manually by selecting the "IQ Analyzer" mode in the R&S ESR, or use the [CALCulate<n>:FORMat](#) command, the IQ data evaluation mode is automatically activated.

The maximum number of samples for RF input is 200 MS. For details see [Chapter 7.5, "Working with I/Q Data"](#), on page 473.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

ON

all functions of the IQ Analyzer are available

OFF

no traces or marker operations are available; IQ data can only be captured, but with a better performance than in active IQ data evaluation mode

*RST: OFF

Example:

TRAC:IQ ON

Enables IQ data acquisition

TRAC:IQ:EVAL ON

Enables the IQ data evaluation mode.

Manual operation: See ["I/Q Analyzer"](#) on page 459**TRACe<n>:IQ[:STATe] <State>**

This command switches the I/Q data acquisition on or off.

I/Q data acquisition is not compatible with other measurement functions. Therefore, all other measurement functions are switched off as soon as the I/Q measurement function is switched on. The trace display is also switched off by this command. Therefore, all traces are set to "BLANK".

To switch trace display back on, use the `TRACe<n>:IQ:EVAL` command.

Note: to enable the evaluation functions of the IQ Analyzer, you must also execute the command `TRACe<n>:IQ:EVAL`.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
*RST: OFF

Example:

`TRAC:IQ ON`
Switches on I/Q data acquisition

Manual operation: See "[I/Q Analyzer](#)" on page 459

TRACe<n>:IQ:TPISample?

This command determines the time offset of the trigger in the sample (trigger position in sample = TPIS). This value can only be determined in triggered measurements using external or IFPower triggers, otherwise the value is 0. The value is not user-definable.

Suffix:

<n> irrelevant

Example:

`TRAC:IQ:TPIS?`

Usage:

Query only

Manual operation: See "[Trigger Offset](#)" on page 378

11.6.2 I/Q Gating


Sometimes in spectrum analysis, measurements are based on a certain length of time called the gate area. With I/Q gating, you can define the gate area using the gate length, the distance between the periods and the number of periods. The gate length and the distance between the capture periods are specified in samples.



I/Q gating is only available using remote commands; manual configuration is not possible.


Using I/Q gating, the gate area can be defined using the following methods:

- Edge triggered recording
After a trigger signal, the gate period is defined by a gate length and a gate distance. All data in the gate period is recorded until the required number of samples has been recorded.

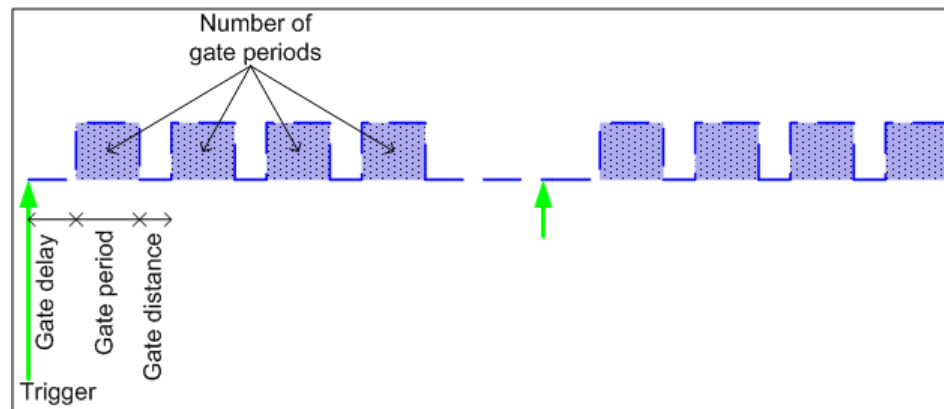

SCPI command: `TRACE:IQ:EGATE:TYPE EDGE`, see [TRACe<n>:IQ:EGATE:TYPE](#) on page 897

- Level triggered recording
After a trigger signal, all data is recorded in which the gate signal is set to 1, which means it has exceeded a level. In this case, the gate signal can be generated by the IFP trigger, for example: each time the IFP level is exceeded, the IFP trigger signal is set to 1 and the samples in this area are recorded as gate samples.

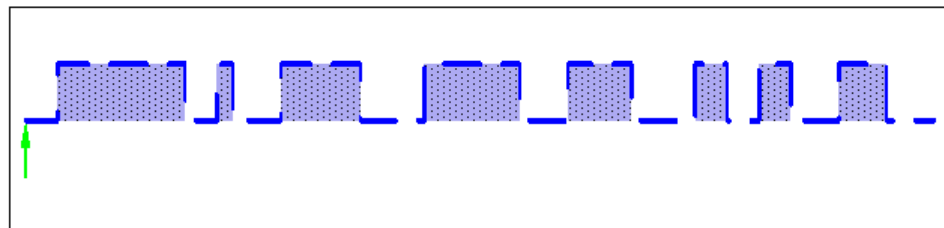

The number of complex samples to be recorded prior to the trigger event can be selected (see [TRACe<n>:IQ:SET](#) on page 890) for all available trigger sources, except for "Free Run".

SCPI command: `TRACE:IQ:EGATE:TYPE LEV`, see [TRACe<n>:IQ:EGATE:TYPE](#) on page 897

11.7 Remote Commands to Control the Tracking Generator

The following commands control the optional (internal or external) tracking generator.

- [Controlling the Internal Tracking Generator](#)..... 900
- [Controlling the External Tracking Generator](#)..... 907

11.7.1 Controlling the Internal Tracking Generator

OUTPut[:STATe]	901
[SENSe:]CORRection:COLLect[:ACQuire]	901
[SENSe:]CORRection:METHod	902
[SENSe:]CORRection:RECall	902

[SENSe:]CORRection[:STATe].....	902
SOURce<n>:AM:STATe.....	903
SOURce<n>:DM:STATe.....	903
SOURce<n>:FM:DEVIation.....	904
SOURce<n>:FM:STATe.....	904
SOURce<n>:FREQUency:OFFSet.....	905
SOURce<n>:POWer[:LEVel][:IMMediate][:AMPLitude].....	905
SOURce<n>:POWer[:LEVel][:IMMediate]:OFFSet.....	905
SOURce<n>:POWer:MODE.....	906
SOURce<n>:POWer:START.....	906
SOURce<n>:POWer:STOP.....	907

OUTPut[:STATe] <State>

This command switches the selected tracking generator on or off.

The command is available with a tracking generator (option R&S FSV-B9).

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

OUTP1 ON
 Switches on the external tracking generator 1.

Usage:

SCPI confirmed

Manual operation: See "[Source RF Internal \(On/ Off\)](#)" on page 477

[SENSe:]CORRection:COLLEct[:ACQuire] <MeasType>

This command initiates a reference measurement (calibration). The reference measurement is the basis for the measurement normalization.

To obtain a correct reference measurement, a complete sweep with synchronization to the end of the sweep must have been carried out. This is only possible in the single sweep mode.

The command is available if a tracking generator is installed and has been turned on.

Parameters:

<MeasType> **THRough**
 "TRANsmission" mode: calibration with direct connection
 between tracking generator and device input
 "REFLection" mode: calibration with short circuit at the input
OPEN
 only allowed in "REFLection" mode: calibration with open input

- Example:** INIT:CONT OFF
 Selects single sweep operation
 CORR:COLL THR;*WAI
 Starts the measurement of reference data using direct connection between generator and device input and waits for the sweep end.
- Usage:** Setting only
 SCPI confirmed
- Manual operation:** See ["Calibrate Reflection Short"](#) on page 477
 See ["Calibrate Reflection Open"](#) on page 477

[SENSe:]CORRection:METhod <Type>

This command selects the type of measurement to be performed with the tracking generator.

The command is available if a tracking generator is installed and has been turned on.

Parameters:

- <Type>
- REFlection**
Selects reflection measurements.
 - TRANsmission**
Selects transmission measurements.
 - *RST: TRANsmission

- Example:** CORR:METH TRAN
 Sets the type of measurement to "transmission".
- Manual operation:** See ["Calibrate Transmission"](#) on page 477
 See ["Calibrate Reflection Short"](#) on page 477
 See ["Calibrate Reflection Open"](#) on page 477

[SENSe:]CORRection:RECall

This command restores the measurement configuration used for calibration.

The command is available if a tracking generator is installed and has been turned on.

- Example:** CORR:REC
- Usage:** Event
 SCPI confirmed
- Manual operation:** See ["Recall"](#) on page 478

[SENSe:]CORRection[:STATe] <State>

This command turns correction of measurement results (normalization) on and off.

The command is available after you have defined a reference trace for the selected measurement type with [\[SENSe:\]CORRection:COLLect\[:ACQuire\]](#) on page 901.

The command is available if a tracking generator is installed and has been turned on.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CORR ON
Activates normalization.

Usage:

SCPI confirmed

Manual operation: See ["Normalize"](#) on page 478

SOURce<n>:AM:STATe <State>

This command turns external amplitude modulation of the tracking generator on and off.

External I/Q modulation is switched off, if active. This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

SOUR2 : AM : STAT ON
Switches on the external amplitude modulation of the tracking generator for screen B.

Usage:

SCPI confirmed

Manual operation: See ["External AM"](#) on page 479
See ["Modulation OFF"](#) on page 479

SOURce<n>:DM:STATe <State>

This command turns external I/Q modulation of the tracking generator on and off.

External AM and external FM are switched off, if active. This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: OFF

Example:	SOUR2:DM:STAT ON Switches on the external I/Q modulation of the tracking generator for screen B.
Usage:	SCPI confirmed
Manual operation:	See " External I/Q " on page 479 See " Modulation OFF " on page 479 See " External IQ " on page 499

SOURce<n>:FM:DEVIation <Frequency>

This command defines the maximum frequency deviation at 1 V input voltage at the FM input of the tracking generator.

This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Frequency> The possible value range is 100 Hz to 10 MHz in steps of 10 Hz.
Range: 100 Hz to 10 MHz
Increment: 10 Hz
*RST: 100 Hz

Example: SOUR1:FM:DEV 1 MHz
Sets the maximum frequency deviation of the tracking generator for screen A to 1 MHz.

Usage: SCPI confirmed

Manual operation: See "[External FM](#)" on page 479

SOURce<n>:FM:STATe <State>

This command turns external frequency modulation of the tracking generator on and off.

External I/Q modulation is switched off, if active. This command is available with a tracking generator (option R&S FSV-B9).

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<State> ON | OFF
*RST: OFF

Example: SOUR2:FM:STAT ON
Switches on the external frequency modulation of the tracking generator for screen B.

Usage: SCPI confirmed

Manual operation: See ["External FM"](#) on page 479
See ["Modulation OFF"](#) on page 479

SOURce<n>:FREQUENCY:OFFSet <Offset>

This command defines a frequency offset of the tracking generator. Frequency-converting DUTs can be measured with this setting.

External I/Q modulation is switched off, if active. This command is available with a tracking generator (option R&S FSV-B9).

Suffix:
<n> 1...4
Selects the measurement window.

Parameters:
<Offset> Note that the values (start frequency – tracking frequency offset) and (stop frequency – tracking frequency offset) are both > 1 kHz or both < –1 kHz.
Range: -200 MHz to 200 MHz
*RST: 0 Hz

Example: SOUR:FREQ:OFFS 10MHz
Defines a frequency offset of the tracking generator of 10 MHz.

Usage: SCPI confirmed

Manual operation: See ["Frequency Offset"](#) on page 487

SOURce<n>:POWER[:LEVel][:IMMediate][:AMPLitude] <Level>

This command defines the output level of the tracking generator.

Parameters:
<Level> Output level in dBm. The level range is specified in the data sheet.
*RST: -20 dBm

Example: SOUR:POW -20dBm
Sets the tracking generator level to -20 dBm.

Usage: SCPI confirmed

Manual operation: See ["Source Power"](#) on page 477
See ["Source Power"](#) on page 486

SOURce<n>:POWER[:LEVel][:IMMediate]:OFFSet <Offset>

This command defines a level offset for the tracking generator level. Thus, for example, attenuators or amplifiers at the output of the tracking generator can be taken into account for the setting.

Parameters:

<Offset> Range: -200 dB to +200 dB
 *RST: 0dB

Example:

SOUR:POW:OFFS -10dB
 Sets the level offset of the tracking generator to – 20 dBm.

Usage:

SCPI confirmed

Manual operation:

See ["Power Offset"](#) on page 486
 See ["Power Offset"](#) on page 489

SOURce<n>:POWER:MODE <Mode>

This command turns the power sweep on and off.

Suffix:

<n> 1...4
 Selects the measurement window.

Parameters:

<Mode>

FIXed

Power sweep is off.

SWEep

Power sweep is on.

If the power sweep is on, the R&S ESR enters the time domain (span = 0 Hz). During the sweep time, the power at the internal tracking generator is changed linearly from start power to stop power. The start and stop power for the power sweep are displayed in the diagram header ("INT TG <start power>... <stop power>").

*RST: FIXed

Example:

SOUR:POW:MODE SWE
 Activates power sweep.

Usage:

SCPI confirmed

Manual operation:

See ["Power Sweep \(On /Off\)"](#) on page 480

SOURce<n>:POWER:START <Power>

This command defines the start power of the power sweep.

Suffix:

<n> 1...4
 Selects the measurement window.

Parameters:

<Power>

Range: -30 dBm to +5 dBm
 *RST: 0 dBm

Example:

SOUR:POW:STAR -20dBm

Usage: SCPI confirmed

Manual operation: See ["Power Sweep Start"](#) on page 480

SOURce<n>:POWER:STOP <Power>

This command defines the stop power of the power sweep. The stop value can be smaller than the start value.

Suffix:

<n> 1...4
Selects the measurement window.

Parameters:

<Power> Range: -30 dBm to +5 dBm
*RST: 0 dBm

Example: SOUR:POW:STOP -20dBm

Usage: SCPI confirmed

Manual operation: See ["Power Sweep Stop"](#) on page 480

11.7.2 Controlling the External Tracking Generator

[SENSe:]CORRection:TRANsducer:GENerator.....	907
SOURce<n>:EXTeRnal<generator>:FREQUency.....	908
SOURce<n>:EXTeRnal<generator>:FREQUency:COUPling[:STATe].....	908
SOURce<n>:EXTeRnal<generator>:FREQUency[:FACtor]:DENominator.....	909
SOURce<n>:EXTeRnal<generator>:FREQUency[:FACtor]:NUMerator.....	909
SOURce<n>:EXTeRnal<generator>:FREQUency:OFFSet<m>.....	910
SOURce<n>:EXTeRnal<generator>:FREQUency:SWEep[:STATe].....	911
SOURce<n>:EXTeRnal<generator>:POWER[:LEVel].....	911
SOURce<n>:EXTeRnal<generator>:ROSCillator[:SOURce].....	911
SOURce<n>:EXTeRnal<generator>[:STATe].....	912
SYSTem:COMMunicate:GPIB:RDEvice:GENerator<generator>:ADDRes.....	913
SYSTem:COMMunicate:RDEvice:GENerator<generator>:INTerface.....	913
SYSTem:COMMunicate:RDEvice:GENerator<generator>:LINK.....	913
SYSTem:COMMunicate:RDEvice:GENerator<generator>:TYPE.....	914

[SENSe:]CORRection:TRANsducer:GENerator <Name>

This command uses the normalized measurement data to generate a transducer factor with up to 625 points. The trace data is converted to a transducer with unit dB and stored in a file with the specified name and the suffix.trd under `c:\r_s\instr\trd`. The frequency points are allocated in equidistant steps between start and stop frequency. The generated transducer factor can be further adapted using the commands of the `[SENSe<source>:]CORRection:TRANsducer` subsystem (see [\[SENSe:\]CORRection:TRANsducer:DELeTe](#) on page 952).

This command is only available if the R&S FSV-B10 option (External Tracking Generator) is installed and normalization is switched on.

Parameters:**<Name>** '<name>**Example:**

CORR:TRAN:GEN 'SMU01'

Creates the transducer file C:\r_s\instr\trd\SMU01.trd.

Manual operation: See "[Save As Trd Factor](#)" on page 479**SOURce<n>:EXTernal<generator>:FREQuency <Frequency>**

This command defines a fixed source frequency for the external tracking generator.

This command is only valid for the External Tracking Generator option (R&S FSV-B10).

Suffix:**<n>** 1...4
window**<m>** 1 | 2
tracking generator**Parameters:****<Frequency>** Source frequency of the external tracking generator.***RST:** RST value**Example:**

SOUR:EXT2:FREQ 10MHz

Manual operation: See "[\(Fixed\) Generator Frequency](#)" on page 488**SOURce<n>:EXTernal<generator>:FREQuency:COUPling[:STATe] <State>**

This command couples or decouples the analyzer and generator frequencies.

This command is only valid for the External Tracking Generator option (R&S FSV-B10).

Suffix:**<generator>** 1 | 2
tracking generator**Parameters:****<State>** ON | OFF**ON****OFF**The fixed frequency defined using [SOURce<n>:](#)[EXTernal<generator>:FREQuency](#) is used as a source frequency.***RST:** OFF**Example:**

SOUR:EXT2:FREQ:COUP ON

Manual operation: See "[Source Frequency Coupling](#)" on page 488

SOURce<n>:EXTernal<generator>:FREQuency[:FACTor]:DENominator <Value>

This command defines the denominator of the factor with which the analyzer frequency is multiplied in order to obtain the transmit frequency of the selected generator.

This command is only valid for the External Tracking Generator option (R&S FSV-B10).

Select the multiplication factor such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$F_{Generator} = \left| F_{Analyzer} * \frac{Numerator}{Denominator} + F_{Offset} \right|$$

Suffix:

<n>	irrelevant
<generator>	1 2 tracking generator For Noise Figure measurements (K30): 1 only

Parameters:

<Value>	<numeric value>
*RST:	1

Example:

```
SOUR:EXT:FREQ:NUM 4"  
"SOUR:EXT:FREQ:DEN 3"
```

Sets a multiplication factor of 4/3, i.e. the transmit frequency of the generator is 4/3 times the analyzer frequency.

Mode: A, NF

Manual operation: See "[Generator Frequency \(Numerator/Denominator/Offset\)](#)" on page 489

SOURce<n>:EXTernal<generator>:FREQuency[:FACTor]:NUMerator <Value>

This command defines the numerator of the factor with which the analyzer frequency is multiplied in order to obtain the transmit frequency of the selected generator.

This command is only valid for the External Tracking Generator option (R&S FSV-B10).

Select the multiplication factor such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$F_{Generator} = \left| F_{Analyzer} * \frac{Numerator}{Denominator} + F_{Offset} \right|$$

Suffix:

<n>	irrelevant
-----	------------

<generator> 1 | 2
tracking generator
For Noise Figure measurements (K30): 1 only

Parameters:

<Value> <numeric value>
*RST: 1

Example:

```
SOUR:EXT:FREQ:NUM 4"
"SOUR:EXT:FREQ:DEN 3"
```

Sets a multiplication factor of 4/3, i.e. the transmit frequency of the generator is 4/3 times the analyzer frequency.

Mode: A, NF

Manual operation: See "[Generator Frequency \(Numerator/Denominator/Offset\)](#)" on page 489

SOURce<n>:EXTernal<generator>:FREQUENCY:OFFSet<m> <Offset>

This command defines the frequency offset of the selected generator with reference to the receive frequency.

This command is only valid for the External Tracking Generator option (R&S FSV-B10).

Suffix:

<n> irrelevant

<generator> 1 | 2
tracking generator
For Noise Figure measurements (K30): 1 only

<m> 1 | 2
offset (for Noise Figure measurements (K30) only)

Parameters:

<Offset> <numeric value>, specified in Hz, kHz, MHz or GHz, rounded to the nearest Hz

*RST: 0 Hz

Select the multiplication factor such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$F_{\text{generator}} = \left[\frac{F_{\text{stop}} - F_{\text{start}}}{\text{Denominator}} + F_{\text{start}} \right]$$

For Noise Figure measurements (R&S FSV-K30), the following formula applies:

Generator Frequency = [(LO + Offset 1) * Factor 1 / Factor 2] + Offset 2

Example:

```
SOUR:EXT:FREQ:OFFS 1GHZ
```

Sets a frequency offset of the generator transmit frequency compared to the analyzer receive frequency of 1 GHz.

Mode: A, NF

Manual operation: See "[Generator Frequency \(Numerator/Denominator/Offset\)](#)" on page 489

SOURce<n>:EXTernal<generator>:FREQuency:SWEep[:STATe] <State>

This command activates or deactivates the frequency sweep for the selected generator.

This command is requires the optional External Tracking Generator.

Suffix:

<n> irrelevant
 <generator> 1 | 2
 external generator

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

SOUR:EXT1:FREQ:SWE ON
 Activates the frequency sweep for external generator 1.

SOURce<n>:EXTernal<generator>:POWer[:LEVel] <Level>

This command sets the output power of the selected generator.

This command is only valid for the External Tracking Generator option (R&S FSV-B10).

Suffix:

<n> irrelevant
 <generator> 1 | 2
 tracking generator
 For Noise Figure measurements (K30): 1 only

Parameters:

<Level> <numeric value>
 *RST: -20 dBm

Example:

SOUR:EXT:POW -30dBm
 Sets the generator level to -30 dBm

Mode: A, NF

Manual operation: See "[Source Power](#)" on page 489

SOURce<n>:EXTernal<generator>:ROSCillator[:SOURce] <Source>

This command controls selection of the reference oscillator for the external tracking generator (requires option R&S FSV-B10).

If the external reference oscillator is selected, the reference signal must be connected to the rear panel of the instrument.

Suffix:

<n> irrelevant

<generator> 1 | 2
tracking generator
For Noise Figure measurements (K30): 1 only

Parameters:

<Source> **INTernal**
the internal reference is used

EXTernal
the external reference is used; if none is available, an error flag is displayed in the status bar

EAUTO
the external reference is used as long as it is available, then the instrument switches to the internal reference (Spectrum mode only)

*RST: INT

Example:

SOUR:EXT:ROSC EXT
Switches to external reference oscillator

Mode: A, NF

Manual operation: See "Reference" on page 491

SOURce<n>:EXTernal<generator>[:STATe] <State>

This command activates or deactivates the external generator indicated by the suffix <generator>.

This command is only valid for the External Tracking Generator option (R&S FSV-B10).

Suffix:

<n> irrelevant

<generator> 1 | 2
external generator

Parameters:

<State> ON | OFF

*RST: OFF

Example:

```
SYST:COMM:RDEV:GEN1:TYPE 'SMP02'
```

Selects SMP02 as generator 1.

```
"SYST:COMM:RDEV:GEN1:LINK TTL"
```

Selects GPIB + TTL link as interface.

```
"SYST:COMM:RDEV:GEN1:ADDR 28"
```

Sets the generator address to 28.

```
"SOUR:EXT1:FREQ:SWE ON"
```

Activates the frequency sweep for generator 1.

```
"SOUR:EXT ON"
```

Activates the external generator

Manual operation: See "[Source RF Internal \(On/ Off\)](#)" on page 477

SYSTem:COMMunicate:GPIB:RDEvice:GENerator<generator>:ADDRess
<Number>

Changes the IEC/IEEE-bus address of the external tracking generator.

This command is only available if the R&S FSV-B10 option (External Tracking Generator) is installed.

Suffix:

<generator> 1 | 2
 tracking generator
 For Noise Figure measurements (K30): 1 only

Parameters:

<Number> Range: 0 to 30
 *RST: 28

Example:

SYST:COMM:GPIB:RDEV:GEN1:ADDR 15

Mode: A, NF

SYSTem:COMMunicate:RDEvice:GENerator<generator>:INTerface <Type>

Defines the interface used for the connection to the external tracking generator.

This command is only available if the R&S FSV-B10 option (External Tracking Generator) is installed.

Suffix:

<generator> 1 | 2
 tracking generator
 For Noise Figure measurements (K30): 1 only

Parameters:

<Type> GPIB | TCPip
 *RST: GPIB

Example:

SYST:COMM:RDEV:GEN1:INT TCP

Mode: A, NF

Manual operation: See "[Interface](#)" on page 491

SYSTem:COMMunicate:RDEvice:GENerator<generator>:LINK <Type>

This command selects the link type of the external generator if the GPIB interface is used.

The difference between the two GPIB operating modes is the execution speed. While, during GPIB operation, each frequency to be set is transmitted to the generator separately, a whole frequency list can be programmed in one go if the TTL interface is also used. Frequency switching can then be performed per TTL handshake which results in considerable speed advantages.

Notes: Only one of the two generators can be operated via the TTL interface at a time. The other generator must be configured via GPIB.

For Noise Figure measurements (K30), TTL synchronization has no effect.

This command is only available if the R&S FSV-B10 option (External Tracking Generator) is installed.

Suffix:

<generator> 1 | 2
 tracking generator
 For Noise Figure measurements (K30): 1 only

Parameters:

<Type> GPIB | TTL

GPIB
 GPIB connection without TTL synchronization (for all generators of other manufacturers and some Rohde & Schwarz devices)

TTL
 GPIB connection with TTL synchronization (if available; for most Rohde&Schwarz devices)

*RST: GPIB

Example:

SYST:COMM:RDEV:GEN:LINK TTL
 Selects GPIB + TTL interface for generator operation.

Mode: A, NF

Manual operation: See "[TTL Synchronization](#)" on page 491
 See "[Address](#)" on page 491

SYSTem:COMMunicate:RDEvice:GENerator<generator>:TYPE <Name>

This command selects the type of external generator. For a list of the available generator types including the associated interface, see [Chapter 8.2.1, "Overview of Generators Supported by the R&S ESR"](#), on page 482.

If no external generator type is currently configured, the query returns "NONE".

This command is only available if the R&S FSV-B10 option (External Tracking Generator) is installed.

Suffix:

<generator> 1 | 2
 tracking generator
 For Noise Figure measurements (K30): 1 only

Parameters:

<Name> Generator name | NONE
 *RST: NONE

Example:

SYST:COMM:RDEV:GEN2:TYPE 'SME02'
 Selects SME02 as generator 2

Mode: A, NF

Manual operation: See "Type" on page 490

11.8 Common Commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CAL?	915
*CLS	916
*ESE	916
*ESR?	916
*IDN?	916
*IST?	916
*OPC	917
*OPT?	917
*PCB	917
*PRE	917
*PSC	917
*RST	918
*SRE	918
*STB?	918
*TRG	918
*TST?	918
*WAI	919

*CAL?

Calibration query

Initiates a calibration of the instrument and subsequently queries the calibration status. Responses > 0 indicate errors.

Note: If you start a self-alignment remotely, then select the "Local" softkey while the alignment is still running, the instrument only returns to the manual operation state after the alignment is completed.

Usage: Query only

Manual operation: See "Self Alignment" on page 511

***CLS**

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONABLE` and the `OPERATION` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

***ESE <Value>**

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

***ESR?**

Event status read

Returns the contents of the event status register in decimal form and subsequently sets the register to zero.

Return values:

<Contents> Range: 0 to 255

Usage: Query only

***IDN?**

Identification

Returns the instrument identification.

Usage: Query only

Manual operation: See "[*IDN Format Leg./New](#)" on page 518

See "[Versions+Options](#)" on page 524

***IST?**

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Return values:

<ISTflag> 0 | 1

Usage: Query only

***OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query form writes a "1" into the output buffer as soon as all preceding commands have been executed. This is used for command synchronization.

***OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description refer to the data sheet.

Usage: Query only

Manual operation: See "[Versions+Options](#)" on page 524

***PCB <Address>**

Pass control back

Indicates the controller address to which remote control is returned after termination of the triggered action.

Setting parameters:

<Address> Range: 0 to 30

Usage: Setting only

***PRE <Value>**

Parallel poll register enable

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

***PSC <Action>**

Power on status clear

Determines whether the contents of the `ENABLE` registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

Parameters:

<Action> 0 | 1

0

The contents of the status registers are preserved.

1

Resets the status registers.

***RST**

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to `SYSTem:PRESet`.

Usage: Setting only

***SRE <Contents>**

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form.
Bit 6 (MSS mask bit) is always 0.
Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the `TRIGger` subsystem.

Usage: Event

***TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code

Note: If you start a self-test remotely, then select the "Local" softkey while the test is still running, the instrument only returns to the manual operation state after the test is completed. In this case, the self-test cannot be aborted.

Return values:

<ErrorCode> **integer > 0 (in decimal format)**
 An error occurred.
 (For details see the Service Manual supplied with the instrument).
0
 No errors occurred.

Usage: Query only

Manual operation: See "Selftest" on page 527

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

Usage: Event

11.9 System Configuration

- [General System Configuration](#)..... 919
- [Checking the System Configuration](#)..... 924
- [Coupling Parameters](#)..... 927
- [Controlling In- and Outputs](#)..... 931
- [Configuring the Reference Frequency](#)..... 933
- [Calibrating the R&S ESR](#)..... 935
- [Using Service Functions](#)..... 938

11.9.1 General System Configuration

SYSTem:APPLication:SRECovery[:STATe]	920
SYSTem:CLOGging	920
SYSTem:COMPatible	920
SYSTem:DISPlay:UPDate	921
SYSTem:FIRMware:UPDate	921
SYSTem:FORMat:IDENt	921
SYSTem:KLOCK	922
SYSTem:PRESet	922
SYSTem:PRESet:COMPatible	922
SYSTem:REBoot	922
SYSTem:SHUTdown	923

SYSTem:SPEaker:VOLume.....	923
SYSTem:TIME.....	923
SYSTem:TIME:TSTamp?.....	923
SYSTem:VERSion?.....	923
SYSTem:DISPlay:FPANel.....	924
SYSTem:DEVice:ID?.....	924
SYSTem:DATE.....	924

SYSTem:APPLication:SRECOvery[:STATe] <State>

Controls instrument behavior when switching between measurement applications, e.g. from "Spectrum" to "Analog Demod" and back.

If activated, the current instrument settings are stored when you switch to a different application. When you switch back to the previous application, the corresponding instrument settings are restored. Thus, the settings of the individual applications are independent of each other.

If deactivated (default), only a few parameters of the current instrument setting are passed between applications (e.g. center frequency, level settings).

Note that although the default value is "OFF", this parameter is not reset using the [PRESET] key. Thus it must be deactivated manually, if necessary.

Parameters:

<State> ON | OFF
 *RST: OFF (not restored using the "PRESET" function)

Example: SYST:APPL:SREC ON

Manual operation: See "[Application Setup Recovery](#)" on page 526

SYSTem:CLOGging <State>

This command turns logging of remote commands on and off.

Parameters:

<State> **ON**
 Writes all remote commands that have been sent to a file.
 The destination is C:
 \R_S\instr\ScpiLogging\ScpiLog.txt.
 OFF
 *RST: OFF

Manual operation: See "[I/O Logging \(On/Off\)](#)" on page 518

SYSTem:COMPatible <Mode>

Sets the device in a state compatible to previous R&S signal analyzers, e.g. regarding the number of sweep points.

Parameters:

<Mode> DEFault | FSU | FSP

- Example:** `SYST:COMP FSP`
- Usage:** SCPI confirmed
- Manual operation:** See "[Compatibility Mode](#)" on page 514
See "[Mode Default](#)" on page 515
See "[Mode R&S FSP](#)" on page 515
See "[Mode R&S FSU](#)" on page 515

SYSTem:DISPlay:UPDate <State>

In remote control mode, this command switches on or off the instrument display. If switched on, only the diagrams, traces and display fields are displayed and updated.

The best performance is obtained if the display output is switched off during remote control.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `SYST:DISP:UPD ON`

Manual operation: See "[Display Update \(On/Off\)](#)" on page 518

SYSTem:FIRMware:UPDate

This command starts a firmware update using the *.msi files in the selected directory. The default path is `D:\FW_UPDATE`. The path is changed via the [MMEMory:COMMeNt](#) command. To store the update files the [MMEMory:DATA](#) command is used.

Only user accounts with administrator rights can perform a firmware update.

Example: `SYST:FIRM:UPD 'D:\FW_UPDATE'`
Starts the firmware update from directory "`D:\FW_UPDATE`".

Usage: Event

Manual operation: See "[Firmware Update](#)" on page 525

SYSTem:FORMat:IDENT <Format>

This command defines the response format to the [*IDN?](#) on page 916 command. This function is intended for re-use of existing control programs together with the R&S ESR.

Parameters:

<Format> FSL | LEGacy | NEW

LEGacy
Format is compatible to the R&S FSP/FSU/FSQ family

NEW
R&S ESR format

FSL
Format is compatible to the R&S FSL family

*RST: not reset!

Example:

SYST:FORM:IDEN LEG

Adapts the return value of *IDN? to the R&S FSP/FSU/FSQ family.

Manual operation: See "[*IDN Format Leg./New](#)" on page 518

SYSTem:KLOCK <State>

This command activates the local lockout (remote control) or returns to the local mode.

Parameters:

<State> **ON**
 LLO (local lockout)

OFF
 GTL (go to local)

*RST: OFF

Example:

SYST:KLOCK ON

Activates LLO (remote control)

SYSTem:PRESet

This command initiates an instrument reset.

The effect of this command corresponds to that of the **PRESET** key with manual operation or to the *RST command. For details on preset settings refer to [Chapter 6.2.1, "Initializing the Configuration – PRESET Key"](#), on page 342.

Example: SYST:PRES

Usage: SCPI confirmed

SYSTem:PRESet:COMPAtible <Mode>

This command selects the type of settings that are restored when you preset the instrument.

Parameters:

<Mode> **RECeiver**
 Restore the default settings defined for Receiver mode.

SANalyzer
 Restore the default settings defined for Spectrum mode.

Manual operation: See "[Preset Receiver](#)" on page 526
 See "[Preset Spectrum](#)" on page 526

SYSTem:REBoot

This command reboots the instrument, including the operating system.

Usage: Event

SYSTem:SHUTdown

This command shuts down the instrument.

Usage: Event

SYSTem:SPEaker:VOLume <Volume>

This command defines the volume of the built-in loudspeaker for demodulated signals.

Parameters:

<Volume> Range: 0 to 1
 *RST: 0.5

Example: SYST:SPE:VOL 0
 Switches the loudspeaker to mute.

SYSTem:TIME <Time>

This command sets the internal clock. The sequence of entry is hour, minute, second.

Only user accounts with administrator rights are able to set the time.

Parameters:

<Time> 0 to 23, 0 to 59, 0 to 59

Example: SYST:TIME 12,30,30

Usage: SCPI confirmed

Manual operation: See "[Time+Date](#)" on page 518

SYSTem:TIME:TSTamp?

This command queries the time and date from the internal real time clock.

Return values:

<TimeStamp>

Example: SYST:TIME:TSTamp?

Usage: Query only

SYSTem:VERSion?

This command queries the number of the SCPI version, which is relevant for the instrument.

This command is a query and therefore has no *RST value.

Example: SYST:VERS?

Usage: Query only
SCPI confirmed

SYSTem:DISPlay:FPANel <State>

This command activates or deactivates the display of the front panel keys on the screen.

With the display activated, the instrument can be operated on the screen using the mouse by pressing the corresponding buttons.

Parameters:

<State> ON | OFF
*RST: OFF

Example: SYST:DISP:FPAN ON

Manual operation: See "[Soft Frontpanel](#)" on page 519

SYSTem:DEvice:ID?

Returns the unique ID of the R&S ESR instrument.

Example: SYST:DEV:ID?
1307.9002K07-100123-aZ

Usage: Query only
SCPI confirmed

Manual operation: See "[Versions+Options](#)" on page 524

SYSTem:DATE <Date>

This command is used to enter the date for the internal calendar.

The sequence of entry is year, month, day.

Only user accounts with administrator rights can set the date.

Parameters:

<Date> 1980 to 2099, 1 to 12, 1 to 31

Example: SYST:DATE 2000,6,1

Usage: SCPI confirmed

Manual operation: See "[Time+Date](#)" on page 518

11.9.2 Checking the System Configuration

DIAGnostic<n>:SERvice:BIOSinfo?	925
DIAGnostic<n>:SERvice:HWInfo?	925
DIAGnostic<n>:SERvice:VERSinfo?	925
SYSTem:IDENtify:FACTory	926

SYSTem:IDENtify[:STRing].....	926
SYSTem:ERRor:CLEar:ALL.....	926
SYSTem:ERRor:LIST?.....	927
SYSTem:ERRor[:NEXT]?.....	927

DIAGnostic<n>:SERVice:BIOSinfo?

This command queries the CPU board BIOS version.

Suffix:

<n> irrelevant

Return values:

<Version> ASCII string containing the BIOS version, e.g. 47.11.

Example:

DIAG:SERV:BIOS?
Returns the BIOS version.

Usage:

Query only

DIAGnostic<n>:SERVice:HWInfo?

This command queries the hardware information.

Suffix:

<n> irrelevant

Return values:

<HardwareInfo> "<component 1>|<serial #>|<order #>|<model>| <hardware code>|<revision>|<subrevision>",
"<component 2>|<serial #>|<order #>|<model>| <hardware code>|<revision>|<subrevision>",
...
Table lines are output as string data and are separated by commas. The individual columns of the table are separated from each other by |.

Example:

DIAG:SERV:HWIN?
Queries the hardware information.
"FRONTEND|100001/003|1300.3009|03|01|00|00",
"MOTHERBOARD|123456/002|1300.3080|02|00|00|00",
...

Usage:

Query only

Manual operation: See "[Hardware Info](#)" on page 524

DIAGnostic<n>:SERVice:VERSinfo?

This command queries information about the hardware and software components.

Suffix:

<n> irrelevant

Return values:

<Information> String containing the version of hardware and software components including the types of licenses for installed firmware options.

Usage: Query only
SCPI confirmed

SYSTem:IDENtify:FACTory

Resets the response to the *IDN? query to the default value, e.g. after a user string was defined using the [ID String User](#) softkey.

Example: SYST:IDEN:FACT
 *IDN?
 Response:
 Rohde&Schwarz,R&S ESR-7,1307.9002K07/101768,
 1.05

Usage: Event
SCPI confirmed

Manual operation: See "[ID String Factory](#)" on page 514

SYSTem:IDENtify[:STRing] <String>

Sets the response to the *IDN? query to the defined string, e.g. after the default value was reset using the [ID String Factory](#) softkey.

Parameters:
<String>

Example: Set the response to 'MyDevice':
 SYST:IDEN:STR 'MyDevice'
 Query the response:
 SYST:IDEN:STR?
 Response:
 MyDevice

Usage: SCPI confirmed

Manual operation: See "[ID String User](#)" on page 514

SYSTem:ERRor:CLEar:ALL

This command deletes all entries in the table SYSTEM MESSAGES.

Example: SYST:ERR:CLE:ALL

Usage: Event

Manual operation: See "[Clear All Messages](#)" on page 525

SYSTem:ERRor:LIST?

This command reads all system messages and returns a list of comma separated strings. Each string corresponds to an entry in the table SYSTEM MESSAGES.

If the error list is empty, an empty string " " is returned.

This command is a query and therefore has no *RST value.

Example: SYST:ERR:LIST?

Usage: Query only

Manual operation: See "[System Messages](#)" on page 524

SYSTem:ERRor[:NEXT]?

This command queries the earliest error queue entry and deletes it.

Positive error numbers indicate device-specific errors, negative error numbers are error messages defined by SCPI. If the error queue is empty, the error number 0, "No error", is returned.

This command is a query and therefore has no *RST value.

Example: STAT:ERR?

Usage: Query only
 SCPI confirmed

11.9.3 Coupling Parameters

INSTrument:COUPle:ATTen	927
INSTrument:COUPle:BANDwidth	928
INSTrument:COUPle:CENTer	928
INSTrument:COUPle:DEMod	928
INSTrument:COUPle:GAIN	929
INSTrument:COUPle:LIMit	929
INSTrument:COUPle:MARKer	929
INSTrument:COUPle:PRESel	930
INSTrument:COUPle:PROT	930
INSTrument:COUPle:SPAN	930

INSTrument:COUPle:ATTen <State>

This command turns synchronization of the attenuation and unit between measurement channels on and off.

Parameters:

<State> **ALL | 1**
 Turns on synchronization.

NONE | 0
 Turns off synchronization.

*RST: ALL

Example: INST:COUP:ATT ALL
Synchronizes the attenuation.

INSTrument:COUPle:BANDwidth <State>

This command turns synchronization of the resolution bandwidth (and filter type) between measurement channels on and off.

Parameters:

<State> **ALL | 1**
Turns on synchronization.

NONE | 0
Turns on synchronization.

*RST: NONE

Example: INST:COUP:BWID ALL
Synchronizes the resolution bandwidth.

INSTrument:COUPle:CENTer <State>

This command turns synchronization of the frequency between measurement channels on and off.

Parameters:

<State> **ALL | 1**
Turns on synchronization.

NONE | 0
Turns off synchronization.

*RST: ALL

Example: INST:COUP:CENT ALL
Synchronizes the receiver (or center) frequency.

INSTrument:COUPle:DEMod <State>

This command turns synchronization of the audio demodulator configuration between measurement channels on and off.

Parameters:

<State> **ALL | 1**
Turns on synchronization.

NONE | 0
Turns off synchronization.

*RST: NONE

Example: INST:COUP:DEM ALL
Synchronizes the audio demodulator configuration.

INSTrument:COUPle:GAIN <State>

This command turns synchronization of the preamplifier configuration between measurement channels on and off.

Parameters:

<State> **ALL | 1**
Turns on synchronization.

NONE | 0
Turns off synchronization.

*RST: NONE

Example:

INST:COUP:GAIN ALL
Synchronizes the preamplifier configuration.

INSTrument:COUPle:LIMit <State>

This command turns synchronization of limit lines between measurement channels on and off.

Parameters:

<State> **ALL | 1**
Turns on synchronization.
Limit lines have to be compatible to the x-axis and y-axis configuration for successful synchronization.

NONE | 0
Turns off synchronization.

*RST: ALL

Example:

INST:COUP:LIM ALL
Synchronizes the limit lines.

INSTrument:COUPle:MARKer <State>

This command turns synchronization of the marker frequency between measurement channels on and off.

Parameters:

<State> **ALL | 1**
Turns on synchronization.

NONE | 0
Turns off synchronization.

*RST: NONE

Example:

INST:COUP:MARK ALL
Synchronizes the receiver frequency and the marker frequency.

INSTrument:COUPle:PRESel <State>

This command turns synchronization of the preselector state between measurement channels on and off.

Note that it is not possible to turn off the preselector in receiver mode. Thus, the preselector is always turned on when you enter receiver mode.

Parameters:

<State> **ALL | 1**
Turns on synchronization.

NONE | 0
Turns off synchronization.

*RST: ALL

Example:

INST:COUP:PRES ALL
Synchronizes the preselector configuration.

INSTrument:COUPle:PROT <State>

This command turns synchronization of the input protection between measurement channels on and off.

(→ 10 dB Min)

Parameters:

<State> **ALL | 1**
Turns on synchronization.

NONE | 0
Turns off synchronization.

*RST: NONE

Example:

INST:COUP:PROT ALL
Synchronizes the "10 dB Min" parameter.

INSTrument:COUPle:SPAN <State>

This command turns synchronization of the start and stop frequency between measurement channels on and off.

Parameters:

<State> **ALL | 1**
Turns on synchronization.

NONE | 0
Turns off synchronization.

*RST: NONE

Example:

INST:COUP:SPAN ALL
Synchronizes the start and stop frequency.

11.9.4 Controlling In- and Outputs

DIAGnostic<n>:SERvice:NSource.....	931
INPut:PRESelection:STATE.....	931
INPut<ip>:UPORt:STATE.....	931
INPut<ip>:UPORt[:VALue].....	932
OUTPut:IF[:SOURce].....	932
OUTPut:TRIGger.....	932
OUTPut:UPORt:STATE.....	933
OUTPut:UPORt[:VALue].....	933

DIAGnostic<n>:SERvice:NSource <State>

This command switches the 28 V supply of the noise source on the front panel on or off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
 *RST: OFF

Example: DIAG:SERV:NSO ON

Manual operation: See "Noise Source" on page 384

INPut:PRESelection:STATE <State>

This command turns the preselector on and off.

Parameters:

<State> ON | OFF
 *RST: ON

Example: INP:PRE:STAT OFF
 Turns off the preselector.

Manual operation: See "Preselector (On Off)" on page 384

INPut<ip>:UPORt:STATE <State>

This command toggles the control lines of the user ports for the **AUX PORT** connector. This 9-pole SUB-D male connector is located on the rear panel of the R&S ESR.

See the R&S ESR Getting Started manual for details.

Suffix:

<ip> 1 | 2
 irrelevant

Parameters:

<State>

ON | 1

User port is switched to INPut

OFF | 0

User port is switched to OUTPut

*RST: 1

Manual operation: See "User Port" on page 187**INPut<ip>:UPORt[:VALue]**

This command queries the control lines of the user ports.

For details see [OUTPut:UPORt\[:VALue\]](#) on page 933.**Suffix:**

<ip> 1 | 2
irrelevant

Example:

```
INP:UPOR?
//Result: #B00100100
Pins 5 and 7 are active.
```

Manual operation: See "User Port" on page 187**OUTPut:IF[:SOURce] <Source>**

This command selects the source of the IF output.

Parameters:

<Source> **IF**
Outputs the intermediate frequency.

OFF
Turns off the output of a signal.

VIDeo
Outputs the video signal (200 mV).

*RST: IF

Example:

```
OUTP:IF VID
Selects the video signal for the IF output connector.
```

Manual operation: See "Video Output" on page 384**OUTPut:TRIGger <PortLevel>**

This command selects level of the Trigger Out port. Thus, you can trigger an additional device via the external trigger port, for example.

Parameters:

<PortLevel> LOW | HIGH
*RST: LOW

Example:

```
OUTP:TRIG HIGH
```

Manual operation: See ["Trigger Out"](#) on page 384

OUTPut:UPORt:STATe <State>

This command toggles the control lines of the user ports for the **AUX PORT** connector. This 9-pole SUB-D male connector is located on the rear panel of the R&S ESR.

Parameters:

<State> **ON | 1**
 User port is switched to OUTPut

OFF | 0
 User port is switched to INPut

*RST: 0

Manual operation: See ["User Port"](#) on page 187

OUTPut:UPORt[:VALue] <Value>

This command sets the control lines of the user ports.

The assignment of the pin numbers to the bits is as follows:

Bit	7	6	5	4	3	2	1	0
Pin	N/A	N/A	5	3	4	7	6	2

Bits 7 and 6 are not assigned to pins and must always be 0.

The user port is written to with the given binary pattern. If the user port is programmed to input instead of output (see [INPut<ip>:UPORt:STATe](#) on page 931), the output value is temporarily stored.

Parameters:

<Value> bit values in hexadecimal format
 TTL type voltage levels (max. 5V)
 Range: #B00000000 to #B00111111

Example: OUTP:UPOR #B00100100
 Sets pins 5 and 7 to 5 V.

Manual operation: See ["User Port"](#) on page 187

11.9.5 Configuring the Reference Frequency

[SENSe:]ROSCillator:EXTernal:FREQUency	933
[SENSe:]ROSCillator:SOURce	934
[SENSe:]ROSCillator:SOURce:EAUTO?	934

[SENSe:]ROSCillator:EXTernal:FREQUency <Frequency>

This command defines the frequency of the external reference oscillator.

If the external reference oscillator is selected, the reference signal must be connected to the rear panel of the instrument.

Parameters:

<Frequency> Range: 1 MHz to 20 MHz

Example:

```
ROSC:EXT:FREQ 13
Sets the frequency to 13 MHz.
SOUR:EXT:ROSC:EXT:FREQ 13
```

Usage: SCPI confirmed

[SENSe:]ROSCillator:SOURce <Source>

This command selects the reference oscillator.

If the external reference oscillator is selected, the reference signal must be connected to the rear panel of the instrument.

Parameters:

<Source>

INTernal

The internal reference is used (10 MHz)

EXTernal

The external reference is used; if none is available, an error flag is displayed in the status bar

EAUTO

The external reference is used as long as it is available, then the instrument switches to the internal reference

Example:

```
ROSC:SOUR EXT
```

Usage:

SCPI confirmed

Manual operation:

See ["Reference Int/Ext"](#) on page 507
 See ["Show Error Flag"](#) on page 507
 See ["Auto select Reference"](#) on page 507

[SENSe:]ROSCillator:SOURce:EAUTO?

This command queries the current reference type in case you have activated an automatic switch to the internal reference if the external reference is missing.

Return values:

<Reference>

INT

internal reference

EXT

external reference

Example:

```
SENS:ROSC:SOUR:EAUT?
Queries the currently available reference type.
```

Usage:

Query only

11.9.6 Calibrating the R&S ESR

CALibration:ABORt.....	935
CALibration[:ALL]?.....	935
CALibration:RESult?.....	935
CALibration:STATe.....	936
DIAGnostic<n>:SERVice:INPut:PULSed:CFRequency.....	936
DIAGnostic<n>:SERVice:INPut:PULSed:MCFRequency.....	937
DIAGnostic<n>:SERVice:INPut[:SElect].....	937
DIAGnostic<n>:SERVice:STESt:RESult?.....	937
DIAGnostic<n>:SERVice:TEMPerature:FRONt?.....	938

CALibration:ABORt

This command aborts the current calibration routine.

Example: CAL:ABORt
 Aborts calibration.

Usage: Event
 SCPI confirmed

CALibration[:ALL]?

This command initiates a calibration routine and queries if calibration was successful.

During the acquisition of correction data the instrument does not accept any remote control commands.

In order to recognize when the acquisition of correction data is completed, the MAV bit in the status byte can be used. If the associated bit is set in the Service Request Enable Register, the instrument generates a service request after the acquisition of correction data has been completed.

Return values:
<CalibrationState> **0**
 The command returns a '0' if calibration was successful.

Example: *CLS
 Resets the status management.
 *SRE 16
 Enables MAV bit in the Service Request Enable Register.
 *CAL?
 Starts the correction data recording, and then a service request is generated.

Usage: Query only
 SCPI confirmed

CALibration:RESult?

This command returns the results collected during calibration.

Return values:

<CalibrationData> String containing the calibration data.

Example:

```
CAL:RES?
would return, e.g.
Total Calibration Status:
PASSED, Date (dd/mm/yyyy): 12/07/2004,
Time: 16:24:54, Runtime: 00.06
```

Usage:

Query only

Manual operation: See "[Show Align Results](#)" on page 512

CALibration:STATe <State>

This command includes or excludes calibration data in the actual measurement.

Parameters:

<State> ON | OFF

Example:

```
CAL:STAT OFF
Sets up the instrument to ignore the calibration data.
```

Usage:

SCPI confirmed

DIAGnostic<n>:SERVice:INPut:PULSed:CFRequency <Frequency>

This command defines the frequency of the calibration signal.

Before you can use the command, you have to feed in a calibration signal with [DIAGnostic<n>:SERVice:INPut\[:SElect\]](#) on page 937.

Suffix:

<n> irrelevant

Parameters:

<Frequency> Possible frequencies of the calibration signal are fixed. If you define a frequency that is not available, the R&S ESR uses the next available frequency. Example: a frequency of 20 MHz is rounded up to the next available frequency (21.33 MHz).

```
*RST: 64 MHz
```

Example:

```
DIAG:SERV:INP:PULS:CFR 128 MHz
Defines a calibration signal frequency of 128 MHz.
```

Usage:

SCPI confirmed

Manual operation: See "[Calibration Frequency RF](#)" on page 527

DIAGnostic<n>:SERVice:INPut:PULSed:MCFRequency <Frequency>

This command sets the calibration frequency for frequencies greater than 7 GHz. This command only takes effect if a microwave calibration signal is selected for input ([DIAGnostic<n>:SERVice:INPut\[:SELection\]](#) on page 937).

Suffix:

<n> irrelevant

Parameters:

<Frequency> **<numeric value>**
*RST: 7 GHz

Example: DIAG:SERV:INP:PULS:MCFR 7,1 GHz

Usage: SCPI confirmed

Manual operation: See "[Calibration Frequency MW](#)" on page 527

DIAGnostic<n>:SERVice:INPut[:SELection] <Signal>

This command selects the source of the signal.

You can feed in a signal from the RF input or the calibration signal.

Suffix:

<n> irrelevant

Parameters:

<Signal> **RF**
RF input
CALibration
Calibration
*RST: RF

Example: DIAG:SERV:INP CAL
Selects the calibration signal as the input signal

Manual operation: See "[RF](#)" on page 527

DIAGnostic<n>:SERVice:STESt:RESult?

This command queries the self test results.

Suffix:

<n> irrelevant

Parameters:

<Results> String of data containing the results.
The rows of the self test result table are separated by commas.

Example: `DIAG:SERV:STES:RES?`
 would return, e.g.:
 "Total Selftest Status:
 PASSED", "Date (dd/mm/yyyy): 09/07/2004 TIME:
 16:24:54", "Runtime: 00:06", "..."

Usage: Query only

Manual operation: See "Selftest Results" on page 528

DIAGnostic<n>:SERVice:TEMPerature:FRONT?

This command queries the temperature of the frontend.

Parameters:

<Temperature> Temperature of the frontend.

Example: `DIAG:SERV:TEMP:FRON?`

Usage: Query only

11.9.7 Using Service Functions

DIAGnostic<n>:SERVice:SFUNction	938
DIAGnostic<n>:SERVice:SFUNction:LASTresult?	939
DIAGnostic<n>:SERVice:SFUNction:RESults:DELete	939
DIAGnostic<n>:SERVice:SFUNction:RESults:SAVE	939
SYSTem:PASSword:RESet	939
SYSTem:PASSword[:CENable]	939

DIAGnostic<n>:SERVice:SFUNction <ServiceFunction>

This command starts a service function.

The service functions are available after you have entered the level 1 or level 2 system password.

Suffix:

<n> irrelevant

Parameters:

<ServiceFunction> String containing the ID of the service function.
 The ID of the service function is made up out of five numbers, separated by a point.

- function group number
- board number
- function number
- parameter 1 (see the Service Manual)
- parameter 2 (see the Service Manual)

Example: `DIAG:SERV:SFUN '2.0.2.12.1'`

Usage: Event

Manual operation: See ["Service Function"](#) on page 528

DIAGnostic<n>:SERvice:SFUNction:LASTresult?

This command queries the results of the most recent service function you have used.

Suffix:

<n> irrelevant

Example:

DIAG:SERV:SFUN:LAST?

Usage:

Query only

DIAGnostic<n>:SERvice:SFUNction:RESults:DELeTe

This command deletes the results of the most recent service function you have used.

Suffix:

<n> irrelevant

Example:

DIAG:SERV:SFUN:RES:DEL

Usage:

Event

DIAGnostic<n>:SERvice:SFUNction:RESults:SAVE <FileName>

This command saves the results of the most recent service function you have used in a file.

Suffix:

<n> irrelevant

Parameters:

<FileName> String containing the file name.

Example:

DIAG:SERV:SFUN:RES:SAVE "C:\diag"

SYSTem:PASSword:RESet

This command resets the service password.

Example:

SYST:PASS:RES

Usage:

Event
SCPI confirmed

Manual operation: See ["Reset Password"](#) on page 527

SYSTem:PASSword[:CENable] <Password>

This command enables access to the service functions by means of the password.

Parameters:

<Password> <password>

Example:	SYST:PASS XXXX
Usage:	Event SCPI confirmed
Manual operation:	See "Password" on page 528

11.10 Data Management

- [Managing Data Files](#)..... 940
- [Saving and Restoring Customized Data](#)..... 945

11.10.1 Managing Data Files

MMEMory:CATalog?	940
MMEMory:CATalog:LONG?	941
MMEMory:CDIRectory	942
MMEMory:COMMeNt	942
MMEMory:COpy	942
MMEMory:DATA	943
MMEMory:DELeTe	943
MMEMory:MDIRectory	944
MMEMory:MOVe	944
MMEMory:MSIS	944
MMEMory:NAME	945
MMEMory:RDIRectory	945

MMEMory:CATalog?

This command reads the indicated directory.

Query parameters:

<Path> <path>

DOS Path name

The path name should conform to DOS conventions and may also include the drive name. According to DOS convention, wild-card characters can be entered in order to query e.g. a list of all files of a certain type.

Return values:

Result List of file names in the form of strings separated by commas

Example:

```
MMEM:CAT? 'C:\R_S\Instr\user\*.DFL'
```

Returns all files in C:\R_S\Instr\user with extension ".DFL"

```
MMEM:CAT? 'C:\R_S\Instr\user\SPOOL?.WMF'
```

Returns all files in C:\R_S\Instr\user whose names start with SPOOL, have 6 letters and the extension ".WMF".

```
SPOOL1.WMF, SPOOL2.WMF, SPOOL3.WMF
```

Usage: Query only
SCPI confirmed

Manual operation: See "Select File" on page 531

MMEMory:CATalog:LONG?

Corresponds to [MMEMory:CATalog?](#) on page 940, but displays extended information on the files contained in the current or specified directory.

This command is an event and therefore has no *RST value and no query.

Query parameters:

<Path> <path>
DOS Path name
The path name should be in conformance with DOS conventions and may also include the drive name.
Following this value, for each file, a string is listed according to the following syntax:
"<File name>, <suffix>, <Length of file in bytes>"

Return values:

Result <total number of bytes the directory contains>,"<File name1>, <suffix1>, <Length of file 2 in bytes>","<File name 2>, <suffix2>, <Length of file2 in bytes>","...","<File name n>, <suffix n>, <Length of file n in bytes>"

The response value consists of a list of strings, separated by commas. It begins with the total number of bytes the directory contains. Then the information for each file is returned.
The <suffix> may be:
– ASCii
– BINary
– STAT

Example: MMEM:CAT:LONG? 'C:\R_S\Instr\user
Returns all files in C:\R_S\Instr\user:
1776,3331993600, "autolog.txt,ASC,1520",
"autologin.reg,BIN,144", "no_autologin.reg,BIN,112"
Query for the current directory:
MMEM:CDIR?
Response:
C:\R_S\Instr\user
MMEM:CAT:LONG?
Returns all files in C:\R_S\Instr\user.

Usage: Query only
SCPI confirmed

MMEMory:CDIRectory <Directory>

This command changes the current directory.

Parameters:

<Directory> <directory_name>

<directory_name>

DOS path name

In addition to the path name, the indication of the directory may contain the drive name. The path name complies with the DOS conventions.

Example: MMEM:CDIR 'C:\R_S\Instr\user'
Selects the directory C:\R_S\Instr\user.

Usage: SCPI confirmed

Manual operation: See "Edit Path" on page 534

MMEMory:COMMent <Comment>

This command defines a comment for the stored settings.

Parameters:

<Comment>

Example: MMEMory:COMMent "ACP measurement with Standard
Tetra from 23.05."
MMEMory::MMEMory:STORel:STATe 1, "ACP_T"
As a result, in the selection list for recall settings, the comment
"ACP measurement with Standard Tetra from
23.05." is added to the ACP entry.

Usage: SCPI confirmed

MMEMory:COPI <FileSource>,<FileDestination>

This command copies the files indicated in <file_source> to the destination directory indicated with <file_destination> or to the destination file indicated by <file_destination> if <file_source> is just a file.

Parameters:

<FileSource>,<FileDestination>,<file_source> = <file_name>

<file_source>,<file_destination> = <file_name>

DOS file name

The indication of the file name may include the path and the drive name. The file names and path information must be in accordance with the DOS conventions.

Example: MMEM:COPI 'C:\R_S\Instr\user\SETUP.CFG', 'E:'

Usage: Event
SCPI confirmed

Manual operation: See "Copy" on page 535

MMEMory:DATA <FileName>, [<Block>]

This command writes the block data contained in <block> into the file characterized by <file_name>. The delimiter must be set to EOI to obtain error-free data transfer.

The associated query command reads the indicated file from the mass memory and transfers it to the remote control computer. It should be noted that the buffer memory of the control computer should be large enough to store the file. The setting of the delimiter is irrelevant in this case.

The command is useful for reading stored settings files or trace data from the instrument or for transferring them to the instrument.

Parameters:

<FileName> '<file name>' (file name in single quotes)
selects the file to be transferred

<Block> binary data block with the following structure: #<digit for the length of the length information><length information (number of bytes) for the binary data><binary data>

Example:

MMEM:DATA 'TEST01.HCP',#216 This is the file where:

#2: the next 2 characters are the length indication

16: number of subsequent binary data bytes

This is the file: 16 bytes stored as binary data in the file

TEST01.HCP

MMEM:DATA? 'TEST01.HCP'

Transfers the file TEST01.HCP from the instrument to the control computer.

Usage: SCPI confirmed

MMEMory:DELeTe <FileName>

This command deletes the indicated files.

Parameters:

<FileName> <file_name> = DOS file name
The indication of the file name contains the path and, optionally, the drive name. Indication of the path complies with DOS conventions.

Example:

MMEM:DEL 'TEST01.HCP'

The file TEST01.HCP is deleted.

Usage: SCPI confirmed

Manual operation: See "Delete" on page 535

MMEMory:MDIRectory <Directory>

This command creates a new directory. The file name includes indication of the path and may also include the drive name. The path name complies with DOS conventions.

Parameters:

<Directory> <directory_name> = DOS path name

Example: MMEM:MDIR 'C:\R_S\Instr\user'

Usage: Event

Manual operation: See "New Folder" on page 534

MMEMory:MOVE <FileSource>,<FileDestination>

This command renames existing files, if <file_destination> contains no path indication. Otherwise the file is moved to the indicated path and stored under the file name specified there, if any.

Parameters:

<FileSource>,<FileDestination>,<file_name> = <file_name> = DOS file name

The file name includes indication of the path and may also include the drive. The path name complies with DOS conventions.

Example:

MMEM:MOVE 'C:\TEST01.CFG', 'SETUP.CFG'

Renames TEST01.CFG in SETUP.CFG in directory C:\.

MMEM:MOVE 'C:\TEST01.CFG', 'C:\R_S\Instr\user'

Moves TEST01.CFG from C:\ to C:\R_S\Instr\user.

MMEM:MOVE 'C:\TEST01.CFG', 'C:

\R_S\Instr\user\SETUP.CFG'

Moves TEST01.CFG from C:\ to C:\R_S\Instr\user and renames the file in SETUP.CFG.

Usage: Event
SCPI confirmed

Manual operation: See "Rename" on page 535

MMEMory:MSIS <Device>

This command changes to the drive indicated. The drive may be the internal hard disk C:.

Parameters:

<Device> <device> = A: | C: ... Z:

*RST: n.a.

The path name complies with DOS conventions.

Example: MMEM:MSIS 'C: '

Usage: SCPI confirmed

Manual operation: See ["Edit Path"](#) on page 534

MMEMory:NAME <FileName>

This command defines a destination file for the printout started with the [HCOPY\[: IMMEDIATE<1|2>\]](#) on page 963 command. In this case the printer output must be routed to a file as destination.

In receiver mode, the command also defines the name and directory of a test report.

Parameters:

<FileName> <file_name> = DOS file name
 The file name includes indication of the path and may also include the drive name. The file name and path information comply with DOS conventions.

Example: MMEM:NAME 'C:\R_S\instr\user\PRINT1.BMP'
 Selects the file name.

Usage: Event
 SCPI confirmed

Manual operation: See ["Configuring and Printing the Test Report"](#) on page 550

MMEMory:RDIRECTory <Directory>

This command deletes the indicated directory. The directory name includes indication of the path and may also include the drive name. The path name complies with DOS conventions.

Parameters:

<Directory> <directory_name> = DOS path name

Example: MMEM:RDIR 'C:\TEST'

Usage: Event

Manual operation: See ["Delete"](#) on page 535

11.10.2 Saving and Restoring Customized Data

MMEMory:CLEar:ALL	946
MMEMory:CLEar:STATE 1 ,.....	946
MMEMory:LOAD:AUTO	946
MMEMory:LOAD:STATE	947
MMEMory:STORe:IQ:COMM	948
MMEMory:STORe:IQ:STATE	948
MMEMory:STORe<n>:STATE	948
MMEMory:STORe<n>:STATE:NEXT	949

MMEMory:CLEar:ALL

This command deletes all instrument configuration files in the current directory.

You can select the directory with `MMEMory:CDIRectory` on page 942. The default directory is `C:\R_S\Instr\user`.

Example: `MMEM:CLE:ALL`

Usage: Event

MMEMory:CLEar:STATe 1, <FileName>

This command deletes the instrument settings file selected by `<file_name>`. All associated files on the mass memory storage are cleared.

Parameters:

`<FileName>` 1,<file_name>
with `<file_name>` = DOS file name without extension
The file name includes indication of the path and may also include the drive. The path name complies with DOS conventions.

Example: `MMEM:CLE:STAT 1, 'TEST'`

Usage: Event

Manual operation: See "[Delete File](#)" on page 532

MMEMory:LOAD:AUTO <Mode>

This command defines which settings file is automatically loaded after the device is switched on. The contents of the file are read after switching on the device and used to define the new device state.

The settings file defined as auto recall set can also be restored by the `*RST` on page 918 command.

Parameters:

`<Mode>` 1,'FACTORY' | 1,<file_name> | with `<file_name>`
1,'FACTORY'
deactivates the startup recall function
1,<file_name>
activates the startup recall function and defines the settings file to be loaded
with <file_name>
DOS file name with or without extension
The file name includes indication of the path and may also include the drive name. The path name complies with DOS conventions.

Example: `MMEM:LOAD:AUTO 1, 'C:\R_S\Instr\user\TEST'`

Usage: Event

Manual operation: See "[Startup Recall \(On/Off\)](#)" on page 533

MMEMory:LOAD:STATe 1, <FileName>

This command restores and activates an instrument configuration stored in a *.dfi file.

Note that files with other formats cannot be loaded with this command.

The contents that are reloaded from the file are defined by the last selection made either in the "Save/Recall" dialogs (manual operation) or through the `MMEMory:SELEct[:ITEM]` commands (remote operation; the settings are identical in both cases).

By default, the selection is limited to the user settings ("User Settings" selection in the dialogs, `HWSettings` in SCPI). The selection is not reset by `[Preset]` or `*RST`.

As a consequence, the results of a SCPI script using the `MMEMory:LOAD:STATe` command without a previous `MMEMory:SELEct[:ITEM]` command may vary, depending on previous actions in the GUI or in previous scripts, even if the script starts with the `*RST` command.

It is therefore recommended that you use the appropriate `MMEMory:SELEct[:ITEM]` command before using `MMEMory:LOAD:STATe`.

Parameters:

1

<FileName> DOS file name with or without extension
The file name includes indication of the path and may also include the drive name. The path name complies with DOS conventions.

Example:

```
MMEM:SEL:ALL
//Save all items (User Settings, All Traces, All Limit Lines) from
the R&S ESR.
MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\TEST01'
//Reloads all items
In the "Recall" dialog, select only "User Settings" and "All Limit
Lines".
MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\TEST01'
//Reloads user settings and all limit lines.
*RST
//Reset instrument.
MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\TEST01'
//Selected items are retained. Reloads user settings and all limit
lines.
Restart the instrument (using the [ON/OFF] key on the front
panel).
MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\TEST01'
// Selected items are set to default. Reloads only the user set-
tings.
```

Usage: SCPI confirmed

Manual operation: See ["Save File / Recall File"](#) on page 531
See ["Recall"](#) on page 532

MMEMory:STORe:IQ:COMM <Description>

Defines a description of the export file which is stored with the data and also displayed in the file selection dialog box for I/Q data import and export.

Parameters:
<Description>

Example: `MMEM:STOR:IQ:COMM 'Device test 1b'`
Creates a description for the export file.
`MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'`
Stores I/Q data and the comment to the specified file.

Manual operation: See ["IQ Export"](#) on page 534

MMEMory:STORe:IQ:STATe 1, <FileName>

This command stores the complex I/Q data to the specified `.iq.tar` file in 32-bit floating point format.

Parameters:
<FileName> Complete file name including the path

Example: `MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'`
Stores I/Q data to the specified file.

Manual operation: See ["IQ Export"](#) on page 534

MMEMory:STORe<n>:STATe <State>

This command stores the current device settings in a `*.dfl` file.

Suffix:
<n> irrelevant

Parameters:
<State> 1,<file_name>
with <file_name>
DOS file name with or without extension
The file name includes the indication of the path and may also include the drive name. The path name complies with DOS conventions.

Example: `MMEM:STOR:STAT 1, 'Save'`
Saves the current device settings in the file `Save.dfl`.

Usage: Event
SCPI confirmed

Manual operation: See "[Save File / Recall File](#)" on page 531

MMEMory:STORe<n>:STATe:NEXT

This command stores the current device settings in a *.df1 file. The file name used in the last saving process is automatically counted up to the next unused name.

Suffix:
<n> irrelevant

Example: `MMEM:STOR:STAT 1, 'Save'`
Saves the current device settings in the file `Save.dfl`.
`MMEM:STOR:STAT:NEXT`
Saves the current device settings in the file `Save_001.dfl`
`MMEM:STOR:STAT:NEXT`
Saves the current device settings in the file `Save_002.dfl`

Usage: Event

Manual operation: See "[Save File / Recall File](#)" on page 531

11.11 Using Transducers



Before making any changes to a transducer factor or set, you have to select one by name with `[SENSe:]CORRection:TRANsducer:SElect`.

Compared to manual configuration of transducers, any changes made to a transducer factor or set via remote control are saved after the corresponding command has been sent.

Designing a transducer factor

```
//Select a transducer factor
CORR:TRAN:SEL 'Transducer1'
//Define a comment for the transducer factor
CORR:TRAN:COMM 'Correction values for device x'
//Define the transducer factor unit
CORR:TRAN:UNIT 'DB'
//Select the scale of the frequency axis
CORR:TRAN:SCAL LOG
//Define the data points of the transducer factor
CORR:TRAN:DATA 1MHZ,-10,10MHZ,-10,100MHZ,-15,1GHZ,-15
//Turn on the transducer
CORR:TRAN ON
//Automatically adjust the reference level
CORR:TRAN:ADJ:RLEV ON
```


Managing a transducer set

```
//Select or create a transducer set
CORR:TSET:SEL 'Transducer Set'
//Define a comment for the transducer set
CORR:TSET:COMM 'Transducer set example'
//Define a unit for the transducer set
CORR:TSET:UNIT 'DB'
//Turn the transducer break on
CORR:TSET:BRE ON
//Define the first transducer range
CORR:TSET:RANG1 150KHZ,1MHZ,'Transducer 1','Transducer 3'
CORR:TSET:RANG2 1MHZ,10MHZ,'Transducer 3','Transducer 4'
CORR:TSET:RANG3 10MHZ,30MHZ,'Transducer 3'
//Turn on the transducer set
CORR:TSET ON
```

[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe].....	950
[SENSe:]CORRection:TRANsducer:ACTive?.....	951
[SENSe:]CORRection:TRANsducer:CATalog?.....	951
[SENSe:]CORRection:TRANsducer:COMMeNt.....	951
[SENSe:]CORRection:TRANsducer:DATA.....	952
[SENSe:]CORRection:TRANsducer:DELeTe.....	952
[SENSe:]CORRection:TRANsducer:SCALing.....	952
[SENSe:]CORRection:TRANsducer:SELeCt.....	953
[SENSe:]CORRection:TRANsducer[:STATe].....	953
[SENSe:]CORRection:TRANsducer:UNIT.....	953
[SENSe:]CORRection:TRANsducer:VIEW.....	954
[SENSe:]CORRection:TSET:BREak.....	954
[SENSe:]CORRection:TSET:CATalog?.....	954
[SENSe:]CORRection:TSET:COMMeNt.....	955
[SENSe:]CORRection:TSET:DELeTe.....	955
[SENSe:]CORRection:TSET:RANGe<range>.....	955
[SENSe:]CORRection:TSET:SELeCt.....	956
[SENSe:]CORRection:TSET[:STATe].....	956
[SENSe:]CORRection:TSET:UNIT.....	956

[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe] <State>

This command turns automatic adjustment of the reference level regarding the transducer factor characteristics on and off.

Before you can use the command, you have to select a transducer factor with

[SENSe:]CORRection:TRANsducer:SELeCt.

Parameters:

<State>

ON

Automatically adjusts the reference level with respect to the transducer factor characteristics.

OFF

Manual adjustment of the reference level with respect to the transducer factor characteristics is necessary.

*RST: OFF

Example: See "Designing a transducer factor" on page 949.

Manual operation: See "Defining characteristics of a transducer factor" on page 508

[SENSe:]CORRection:TRANsducer:ACTive?

This command queries the currently active transducer factor.

Parameters:

<TransducerFactor> String containing the name of the transducer factor.
If no transducer factor is active, the string is empty.

Example: CORR:TRAN:ACT?
Queries the active transducer factor.

Usage: Query only

[SENSe:]CORRection:TRANsducer:CATalog?

This command queries all transducer factors stored on the R&S ESR.

Parameters:

<FileInformation> String containing the file information.
'<NameFileN>,<SizeFileN>'
<NameFileN>
Name of the file.
<SizeFileN>
Size of the file in bytes.

Return values:

<UsedDiskSpace> Size of all available files containing transducer factors in byte.

<FreeDiskSpace> Remaining disk space in bytes.

Example: CORR:TRAN:CAT?
would return, e.g.
1579,34482896896,'FACTOR1,823','FACTOR2,756'

Usage: Query only

[SENSe:]CORRection:TRANsducer:COMMeNt <Comment>

This command defines a comment for a transducer factor.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SElect](#) on page 953.

Parameters:

<Comment> String containing the comment.
*RST: (empty comment)

Example: See ["Designing a transducer factor"](#) on page 949.

Manual operation: See ["Defining characteristics of a transducer factor"](#) on page 508

[SENSe:]CORRection:TRANsducer:DATA <Frequency>,<Level>

This command defines the shape of the transducer factor.

A transducer factor may contain up to 625 reference values. Each reference value is a combination of a frequency and a level value.

Before you can use this command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELEct](#) on page 953.

Parameters:

<Frequency> Numeric value in Hz.
 The frequency values have to be in ascending order.

<Level> The unit depends on [\[SENSe:\]CORRection:TRANsducer:UNIT](#) on page 953. By default, it is dB.

Example: See ["Designing a transducer factor"](#) on page 949.

Manual operation: See ["Defining characteristics of a transducer factor"](#) on page 508

[SENSe:]CORRection:TRANsducer:DELEte

This command deletes a transducer factor.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELEct](#).

Example: CORR:TRAN:SEL 'Transducer 1'
 CORR:TRAN:DEL
 Deletes the selected transducer.

Usage: Event

Manual operation: See ["Defining characteristics of a transducer factor"](#) on page 508

[SENSe:]CORRection:TRANsducer:SCALing <Scale>

This command selects the scale of the transducer factor.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SELEct](#) on page 953 R&S ESR.

Parameters:

<Scale> LINear | LOGarithmic
 *RST: LINear

Example: See ["Designing a transducer factor"](#) on page 949.

Manual operation: See ["Defining characteristics of a transducer factor"](#) on page 508

[SENSe:]CORRection:TRANsducer:SElect <FileName>

This command creates or selects a transducer factor.

Parameters:

<FileName> String containing the name of the transducer factor.
If the name does not exist yet, the R&S ESR creates a transducer factor by that name.

Example: See ["Designing a transducer factor"](#) on page 949.

Manual operation: See ["Using transducer factors or transducer sets"](#) on page 508
See ["Defining characteristics of a transducer factor"](#) on page 508

[SENSe:]CORRection:TRANsducer[:STATe] <State>

This command turns a transducer factor on and off.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SElect](#).

You can turn on up to 8 transducer factors at the same time.

Parameters:

<State> ON | OFF
*RST: OFF

Example: See ["Designing a transducer factor"](#) on page 949.

Manual operation: See ["Using transducer factors or transducer sets"](#) on page 508

[SENSe:]CORRection:TRANsducer:UNIT <Unit>

This command selects the unit of a transducer factor.

Before you can use the command, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer:SElect](#).

Parameters:

<Unit> String containing one of the following units:
DB | DBM | DBMV | DBUV | DBUV/M | DBUA DBUA/M | DBPW | DBPT
*RST: DB

Example: See ["Designing a transducer factor"](#) on page 949.

Manual operation: See ["Defining characteristics of a transducer factor"](#) on page 508

[SENSe:]CORRection:TRANsducer:VIEW <State>

This command includes or excludes a figure of a transducer factor in the diagram.

Before you can use the command, you have to select a transducer factor with

[\[SENSe:\]CORRection:TRANsducer:SElect](#).

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
CORR:TRAN:SEL 'FACTOR'
CORR:TRAN:VIEW ON
Selects and displays a transducer factor.
```

[SENSe:]CORRection:TSET:BREak <State>

This command turns a transducer break on and off.

Before you can use the command, you have to select a transducer set with [\[SENSe:\]CORRection:TSET:SElect](#).

[\[SENSe:\]CORRection:TSET:SElect](#).

Parameters:

<State> ON | OFF
*RST: OFF

Example: See ["Managing a transducer set"](#) on page 950.

Manual operation: See ["Managing transducer sets"](#) on page 510

[SENSe:]CORRection:TSET:CATalog?

This command queries all transducer sets stored on the R&S ESR.

Return values:

<UsedDiskSpace> Size of all available files containing transducer factors in byte.

<FreeDiskSpace> Remaining disk space in bytes.

<FileInfo> String containing the file information.

'<NameFileN>,<SizeFileN>'

<NameFileN>

Name of the file.

<SizeFileN>

Size of the file in bytes.

Example:

```
CORR:TSET:CAT?
would return, e.g.
3298,34482896896,'SET1,1520','SET2,1756'
```

Usage: Query only

[SENSe:]CORRection:TSET:COMMeNt <Comment>

This command defines a comment for a transducer set.

Before you can use the command, you have to select a transducer set with `[SENSe:]CORRection:TSET:SELEct`.

Parameters:

<Comment> String containing the comment.

Example: See "Managing a transducer set" on page 950.

Manual operation: See "Managing transducer sets" on page 510

[SENSe:]CORRection:TSET:DELEte

This command deletes a transducer set.

Before you can use the command, you have to select a transducer set with `[SENSe:]CORRection:TSET:SELEct`.

Example:

```
CORR:TSET:SEL 'Transducer Set'
CORR:TSET:DEL
Deletes the transducer set.
```

Usage: Event

Manual operation: See "Managing transducer sets" on page 510

[SENSe:]CORRection:TSET:RANGe<range> <Frequency>, <Frequency>, <FileName>

This command selects a set of transducer factors used for a particular frequency range.

Ranges 1 to 10 must be sent in ascending order.

Before you can use the command, you have to select a transducer set with `[SENSe:]CORRection:TSET:SELEct`.

Suffix:

<range> 1...10
Selects the range.

Parameters:

<Frequency> Defines the start frequency of the frequency range.

<Frequency> Defines the stop frequency of the frequency range.

<FileName> String containing the name of the transducer factor.
Note that you can assign up to eight transducer factors to a particular frequency range. In that case, add additional strings containing the file name after the first one separated by comma.

Example: See "Managing a transducer set" on page 950.

Manual operation: See "Managing transducer sets" on page 510

[SENSe:]CORRection:TSET:SElect <FileName>

This command creates or selects a transducer set.

Parameters:

<FileName> String containing the name of the transducer set.
If the name does not exist yet, the R&S ESR creates a transducer set by that name.

Example: See "[Managing a transducer set](#)" on page 950.

Manual operation: See "[Using transducer factors or transducer sets](#)" on page 508
See "[Managing transducer sets](#)" on page 510

[SENSe:]CORRection:TSET[:STATe] <State>

This command turns a transducer set on and off.

Before you can use the command, you have to select a transducer set with [\[SENSe:\]CORRection:TSET:SElect](#).

Parameters:

<State> ON | OFF
*RST: OFF

Example: See "[Managing a transducer set](#)" on page 950.

Manual operation: See "[Using transducer factors or transducer sets](#)" on page 508

[SENSe:]CORRection:TSET:UNIT <Unit>

This command selects the unit of a transducer set.

Note that the unit of all transducer factors in a transducer set must be the same or in relative terms (dB).

Before you can use the command, you have to select a transducer set with [\[SENSe:\]CORRection:TSET:SElect](#).

Parameters:

<Unit> String containing one of the following units:
DB | DBM | DBUV | DBUV_M | DBUA | DBUA_M | DBPW |
DBPT
*RST: DB

Example: See "[Managing a transducer set](#)" on page 950.

Manual operation: See "[Managing transducer sets](#)" on page 510

11.12 Documentation

Table 11-26: CMAP assignment

Suffix	Description
CMAP1	Background
CMAP2	Grid
CMAP3*	Common text
CMAP4*	Check status OK
CMAP5*	Check status error
CMAP6*	Text special 1
CMAP7*	Text special 2
CMAP8	Trace 1
CMAP9	Trace 2
CMAP10	Trace 3
CMAP11	Marker info text
CMAP12	Limit lines
CMAP13	Limit and margin check 'PASS'
CMAP14	Limit and margin check 'FAIL'
CMAP15*	Softkey text
CMAP16*	Softkey background
CMAP17*	Selected field text
CMAP18*	Selected field background
CMAP19*	Softkey 3D bright part
CMAP20*	Softkey 3D dark part
CMAP21*	Softkey state 'On'
CMAP22*	Softkey state 'Dialog Open'
CMAP23*	Softkey text disabled
CMAP24	Logo
CMAP25	Trace 4
CMAP26	Grid (minor lines)
CMAP27	Marker
CMAP28	Display lines
CMAP29*	Sweep count text
CMAP30	Limit and margin check 'Text'
CMAP31	Limit and margin check \"Margin\"

Suffix	Description
CMAP32*	Table overall (Title Text)
CMAP33*	Table overall (Title background)
CMAP34*	Table overall (Text)
CMAP35*	Table overall (Background)
CMAP36*	Table value (Title text)
CMAP37*	Table value (Title background)
CMAP38*	Table value (Text)
CMAP39*	Table value (Background)
CMAP40	Trace 5
CMAP41	Trace 6
CMAP42	Bargraph Max Peak
CMAP43	Bargraph Min Peak
CMAP44	Bargraph Quasipeak
CMAP45	Bargraph Average
CMAP46	Bargraph RMS
CMAP47	Final measurement
CMAP48	Bargraph CISPR Average
CMAP49	Bargraph RMS Average
* these settings can only be defined via the theme, see Chapter 11.14, "Display Configuration" , on page 977, and are thus ignored in the SCPI command	

HCOPY:ABORT.....	959
HCOPY:CMAP<item>:DEFault.....	959
HCOPY:CMAP<item>:HSL.....	959
HCOPY:CMAP<item>:PDEFined.....	960
HCOPY:DESTination<1 2>.....	960
HCOPY:DEvice:COLor.....	961
HCOPY:DEvice:LANGUage<1 2>.....	961
HCOPY:ITEM:ALL.....	962
HCOPY:ITEM:WINDow:TABLE:STATe.....	962
HCOPY:ITEM:WINDow:TEXT.....	962
HCOPY:PAGE:ORientation<1 2>.....	963
HCOPY:TDSamp:STATe<1 2>.....	963
HCOPY[:IMMediate<1 2>].....	963
HCOPY[:IMMediate<1 2>]:NEXT.....	964
SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?.....	965
SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?.....	965
SYSTem:COMMunicate:PRINter:SELect <1 2>.....	965

HCOPY:ABORt

This command aborts a running hardcopy output.

Example: HCOPY:ABOR

Usage: Event
SCPI confirmed

HCOPY:CMAP<item>:DEFault <ColorSet>

This command defines the color scheme for print jobs.

Suffix:
<item> Selects the display item. For more information see [Table 11-26](#).

Parameters:
<ColorSet> 1 | 2 | 3 | 4

- 1**
current screen colors with the background in white and the grid in black.
- 2**
optimized color set
- 3**
user defined color set
- 4**
current screen colors without any changes (setting for hardcopies)

Example: HCOPY:CMAP:DEF2
Selects the optimized color set for the color settings of a printout or a hardcopy.

Usage: Event
SCPI confirmed

Manual operation: See "[Set to Default](#)" on page 522
See "[Select Print Color Set](#)" on page 523

HCOPY:CMAP<item>:HSL <hue>,<sat>,<lum>

This command selects the color for various screen elements in print jobs.

The values set are not changed by *RST.

Suffix:
<item> Selects the display item. For more information see [Table 11-26](#).

Parameters:
<hue> numeric value
tint of the color
Range: 0 to 1

<code><sat></code>	numeric value saturation of the color Range: 0 to 1
<code><lum></code>	numeric value brightness of the color Range: 0 to 1
Example:	<code>HCOP:CMAP2:HSL 0.3,0.8,1.0</code> Changes the grid color
Usage:	SCPI confirmed
Manual operation:	See "Select Object" on page 522 See "User Defined Colors" on page 522 See "Print Colors" on page 522

HCOPY:CMAP<item>:PDEFined <Color>

This command selects a predefined color for various screen elements in print jobs.

The values set are not changed by *RST.

Suffix:

`<item>` Selects the display item. For more information see [Table 11-26](#).

Parameters:

`<Color>` BLACK | BLUE | BROWN | GREEN | CYAN | RED | MAGenta |
YELLOW | WHITE | DGRAY | LGRAY | LBLUE | LGREEN | LCYan |
LRED | LMAGenta

Example: `HCOP:CMAP2:PDEF GRE`

Usage: SCPI confirmed

Manual operation: See ["Predefined Colors"](#) on page 522

HCOPY:DESTination<1|2> <Medium>

This command selects the destination of a print job.

The type of instrument is selected with `SYSTEM:COMMunicate:PRINter:SElect <1|2>`, which automatically selects a default output medium. Therefore `HCOPY:DESTination` should always be sent after setting the device type.

The suffix `<1|2>` selects the printing device.

Parameters:

`<Medium>` **'MMEM'**
Sends the hardcopy to a file.
You can select the file name with `MMEMory:NAME`
You can select the file format with `HCOPY:DEVIce:LANGuage<1|2>`.

'SYST:COMM:PRIN'

Sends the hardcopy to the printer.

You can select the printer with `SYSTem:COMMunicate:PRINter:SElect <1|2>`.

'SYST:COMM:CLIP'

Sends the hardcopy to the clipboard.

The format should be WEMF.

*RST: SYST:COMM:CLIP

Example:

```
SYST:COMM:PRIN:SEL2 'LASER on LPT1'
```

Selects the printer and output medium for device 2.

```
HCOP:DEST2 'SYST:COMM:PRIN'
```

Selects the printer interface as device 2.

Usage:

SCPI confirmed

Manual operation: See "[Device Setup](#)" on page 544

HCOPY:DEvice:COLor <State>

This command turns color printing on and off.

Parameters:

<State>

ON | OFF

ON

Color output

OFF

Black and white output

*RST: OFF

Example:

```
HCOP:DEV:COL ON
```

Usage:

SCPI confirmed

Manual operation: See "[Color \(On/Off\)](#)" on page 523

HCOPY:DEvice:LANGUage<1|2> <Format>

This command selects the file format for a print job.

The suffix <1|2> selects the printing device.

Parameters:

<Format>

GDI

Graphics Device Interface:

Default format for the output to a printer configured under Windows. Must be selected for the output to the printer interface.

Can be used for the output to a file. The printer driver configured under Windows is used in this case and a printer-specific file format is thus generated.

(see also `HCOPY:DESTination<1|2>` command)

Available for `HCOPY:MODE SCReen`.

WMF | EWMF

WINDOWS Metafile and Enhanced Metafile Format:

Data formats for output files which can be integrated in corresponding programs for documentation purposes at a later time. WMF can only be used for output to a file and EWMF also for the output to the clipboard.

(see also `HCOPY:DESTINATION<1|2>` command)

Available for `HCOPY:MODE SCREEN`.

BMP | JPG | PNG

Data format for output to files only.

Available for `HCOPY:MODE SCREEN`.

PDF | RTF

Selects the output format of the test report in Receiver mode.

Available for `HCOPY:MODE REPORT`.

- Example:** `HCOP:DEV:LANG WMF`
- Usage:** SCPI confirmed
- Manual operation:** See "Device Setup" on page 544
See "Configuring and Printing the Test Report" on page 550

HCOPY:ITEM:ALL

This command includes all screen elements in the printout.

The screen elements include comments, title, time and date.

Example: `HCOPY:ITEM:ALL`

Usage: Event
SCPI confirmed

Manual operation: See "Print Screen" on page 543

HCOPY:ITEM:WINDOW:TABLE:STATE <State>

This command turns printing of the currently active table on and off.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `HCOPY:ITEM:WINDOW:TABLE:STATE ON`

HCOPY:ITEM:WINDOW:TEXT <Comment>

This command defines a comment added to the printout.

Parameters:

<Comment> String containing the comment with a maximum of 120 characters. The line feed is by means of the characters @.

Example: `HCOP:ITEM:WIND:TEXT 'comment'`

Manual operation: See "[Comment](#)" on page 545

HCOPY:PAGE:ORIENTATION<1|2> <Orientation>

The command selects the format of the printout.

The command is only available if the output device is a printer (see [HCOPY:DESTINATION<1|2>](#) on page 960).

Parameters:

<Orientation> LANDscape | PORTRait
*RST: PORT

Example: `HCOP:PAGE:ORI LAND`

Usage: SCPI confirmed

Manual operation: See "[Device Setup](#)" on page 544

HCOPY:TDSTAMP:STATE<1|2> <State>

This command includes or excludes the time and date in the printout.

The suffix <1|2> selects the printing device.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `HCOP:TDST:STAT OFF`

Manual operation: See "[Device Setup](#)" on page 544

HCOPY[:IMMEDIATE<1|2>]

This command initiates a print job.

If you are printing to a file, the file name depends on [MMEMORY:NAME](#).

The suffix <1|2> selects the printing device.

The command also generates a measurement report when you have selected [HCOPY:MODE REPORT](#). Note that you have to add at least one dataset to the report with [HCOPY:TREPORT:NEW](#) on page 974 or [HCOPY:TREPORT:APPEND](#). Otherwise creating the report results in an error.

- Example:** HCOP:DEV:LANG BMP
Selects the data format.
HCOP:DEST 'MMEM'
Directs the hardcopy to a file.
MMEM:NAME 'C:\R_S\instr\user\Print.bmp'
Selects the file name. If the file Print.bmp already exists, it is replaced.
HCOP
Saves the hardcopy output into the file Print.bmp.
- Example:** HCOP:MODE REpOrt
HCOP:DEV:LANG PDF
HCOP:TREP:NEW
HCOP
Creates a measurement report (in pdf format).
- Usage:** Event
SCPI confirmed
- Manual operation:** See "[ScreenShot](#)" on page 533
See "[Print Screen](#)" on page 543
See "[Configuring and Printing the Test Report](#)" on page 550

HCOPy[:IMMediate<1|2>]:NEXT

This command initiates a print job.

If you are printing to a file, the file name depends on [MMEMory:NAME](#). This command adds a consecutive number to the file name.

The suffix <1|2> selects the printing device.

- Example:** HCOP:DEV:LANG BMP
Selects the data format.
HCOP:DEST 'MMEM'
Directs the hardcopy to a file.
MMEM:NAME 'C:\R_S\instr\user\Print.bmp'
Selects the file name.
HCOP
Saves the hardcopy output into the file Print.bmp.
HCOP:NEXT
Saves the hardcopy output into the file Print_001.bmp.
HCOP:NEXT
Saves the hardcopy output into the file Print_002.bmp.
- Usage:** Event
SCPI confirmed
- Manual operation:** See "[Print Screen](#)" on page 543

SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?

This command queries the name of the first printer (in the list of printers) available under Windows operating system.

The names of other installed printers can be queried with the `SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?` command.

If no printer is configured an empty string is output.

Return values:

<PrinterName> *RST: NONE

Example: SYST:COMM:PRIN:ENUM:FIRS?

Usage: Query only

Manual operation: See "Device Setup" on page 544

SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?

This command queries the name of the next printer installed under Windows operating system. After all available printer names have been output, an empty string enclosed by quotation marks (") is output for the next query. Further queries are answered by a query error.

The `SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?` command should be sent previously to return to the beginning of the printer list and query the name of the first printer.

Example: SYST:COMM:PRIN:ENUM?

Usage: Query only

Manual operation: See "Device Setup" on page 544

SYSTem:COMMunicate:PRINter:SELEct <1|2> <PrinterName>

This command selects one of the printers configured under Windows operating system, including the associated output destination.

The specified printer name must be a string (entered in quotes) as returned by the commands

`SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?` or

`SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?`

The `HCOPY:DESTination<1|2>` on page 960 command is used to select an output medium other than the default one.

Parameters:

<PrinterName> "<printer_name>"
*RST: NONE

Example: SYST:COMM:PRIN:SEL "LASER on LPT1"

11.13 Working with Test Reports

- [Designing a Test Report Template](#)..... 966
- [Creating a Test Report](#)..... 973
- [Deprecated Commands \(Test Report\)](#)..... 976

11.13.1 Designing a Test Report Template

- [Selecting the Test Report Contents](#).....966
- [Designing the Header of the Test Report](#).....968
- [Defining the Contents of the Title Page](#)..... 971
- [Managing Templates](#).....972

11.13.1.1 Selecting the Test Report Contents

- [HCOPy:TREPort:ITEM:DEFault](#).....966
- [HCOPy:TREPort:ITEM:SElect](#).....966

HCOPy:TREPort:ITEM:DEFault

This command restores the default configuration of the test report regarding the information that is part of the report (in the "Configuration" tab of the "Test Report Settings" dialog box).

It also restores the default names of the header titles (in the "Header" tab of the "Test Report Settings" dialog box).

Example: `HCOP:TREP:ITEM:DEF`
Restores the default test report configuration.

Usage: Event

HCOPy:TREPort:ITEM:SElect '<Item>,<Item>,<Item>,...'

This command defines the type of information that a test report is made up out of.

Parameters:

<Item> String containing the information you want to include in the test report.
Note that the items, separated by commas, have to be written into one string (see example below).
The available items depend on the application you are using. See the tables below for a short description of each item. Per default, some items are selected (see tables below).

Example: `HCOP:TREP:ITEM:SEL 'SETT,MARK,SRES,DIAG'`
Each dataset consists of the measurement settings, marker information, the scan results and a screenshot of the scan trace (for Receiver channels).

Manual operation: See "Selecting the Test Report Contents" on page 546

Table 11-27: Available <items> in receiver application

<Item>	Description	Default
DIAGram	Screenshot of the scan results.	x
FRESults	Numerical results for the final measurement.	x
HEADer	Header made up of several lines of information that is (by default) displayed on each page of the test report.	x
IF	Screenshot of the results for IF analysis.	
IFSpectrum	Screenshot of the IF spectrogram.	
MARKers	Contents of the marker table.	
PAGecount	Page numbers.	x
PREResults	Contents of the peak list.	
SCANtable	Measurement configuration as defined in the scan table.	x
SETTings	Settings that have been used during a measurement.	x
SPECtrogram	Screenshot of the spectrogram.	
SRESults	Numerical results for the scan.	
TDSTamp	Date and time of the measurement.	x
TRANsducer	Characteristics of the transducer.	

Table 11-28: Available <items> in spectrum application

<Item>	Description	Default
DIAGram	Screenshot of the scan results.	x
HEADer	Header made up of several lines of information that is (by default) displayed on each page of the test report.	x
PAGecount	Page numbers.	x
RESultlist	Numerical measurement results.	
SETTings	Settings that have been used during a measurement.	x
SPECtrogram	Screenshot of the spectrogram.	
TDSTamp	Date and time of the measurement.	x
TRANsducer	Characteristics of the transducer.	

Table 11-29: Available <items> in I/Q analyzer

<Item>	Description	Default
DIAGram	Screenshot of the result diagram.	x
HEADer	Header made up of several lines of information that is (by default) displayed on each page of the test report.	x
PAGecount	Page numbers.	x

<Item>	Description	Default
RESultlist	Numerical measurement results.	
SETTings	Settings that have been used during a measurement.	x
TDSTamp	Date and time of the measurement.	x
TRANsducer	Characteristics of the transducer.	

Table 11-30: Available <items> in real-time application

<Item>	Description	Default
DIAGram	Screenshot of the persistence spectrum.	
HEADer	Header made up of several lines of information that is (by default) displayed on each page of the test report.	x
PAGecount	Page numbers.	x
REALtime	Screenshot of the real-time spectrum.	
RESultlist	Numerical measurement results.	
SETTings	Settings that have been used during a measurement.	x
SPECtrogram	Screenshot of the spectrogram.	
TDSTamp	Date and time of the measurement.	x
TRANsducer	Characteristics of the transducer.	

11.13.1.2 Designing the Header of the Test Report

Commands useful to design the test report header described elsewhere:

- `HCOPY:TREPort:ITEM:DEFAult` on page 966

<code>HCOPY:TREPort:ITEM:HEADer:LINE<line>:CONTrol</code>	968
<code>HCOPY:TREPort:ITEM:HEADer:LINE<line>:TEXT</code>	969
<code>HCOPY:TREPort:ITEM:HEADer:LINE<line>:TITLe</code>	969
<code>HCOPY:TREPort:ITEM:LOGO</code>	970
<code>HCOPY:TREPort:ITEM:LOGO:CONTrol</code>	971

`HCOPY:TREPort:ITEM:HEADer:LINE<line>:CONTrol` <Repetition>

This command selects how often the items in the report header are displayed in the document.

Suffix:

<line> 1...7
Selects the header line.

Parameters:

<Repetition> **ALWays**
The selected header line is displayed at the top of every page of the report.

NEVer

The selected header line is displayed on no page of the report. Note that a line that does not contain anything is still displayed in the report as a blank line. If you select NEVer, the line is not displayed at all.

ONCE

The selected header line is displayed on the first page each dataset.

*RST: ALWays

Example:

```
HCOP:TREP:ITEM:HEAD:LINE4:TITL ''
HCOP:TREP:ITEM:HEAD:LINE4:TEXT ''
```

Defines an empty string for line 4 of the report header. In the default state (ALWays), the line would be still displayed as a blank line.

```
HCOP:TREP:ITEM:HEAD:LINE4:CONT NEV
```

Removes line 4 from the header of the test report.

Manual operation: See "[Designing the Header of the Test Report](#)" on page 547

HCOPy:TREPort:ITEM:HEADer:LINE<line>:TEXT <Description>

This command defines a descriptive text for one of the items part of the report header.

You can define up to 7 items in the header.

Use [HCOPy:TREPort:ITEM:HEADer:LINE<line>:TITLe](#) on page 969 to define custom titles for each item.

Use [HCOPy:TREPort:ITEM:HEADer:LINE<line>:CONTrol](#) to select the condition under which each item is shown.

Suffix:

<line> 1...7
Selects the header line.

Parameters:

<Description> String containing the description of one of the value fields.
By default, the value fields of the items are empty.

Example:

```
HCOP:TREP:ITEM:HEAD:LINE3:TITL 'Device under
Test'
```

Renames the third title into "Device under Test".

```
HCOP:TREP:ITEM:HEAD:LINE3:TEXT 'Some Device'
```

Labels the third title as "Some Device".

Manual operation: See "[Designing the Header of the Test Report](#)" on page 547

HCOPy:TREPort:ITEM:HEADer:LINE<line>:TITLe <Title>

This command defines a custom name for one of the items part of the report header.

You can define up to 7 items in the header.

Use `HCOPY:TREPort:ITEM:HEADer:LINE<line>:TEXT` to add a value to each item.

Use `HCOPY:TREPort:ITEM:HEADer:LINE<line>:CONTRol` to select the condition under which each item is shown.

Suffix:

<line> 1...7
Selects the header line.

Parameters:

<Title> String containing the title of the item.
The default titles are as follows:

- Line 1: "Heading"
- Line 2: "Meas Type"
- Line 3: "Equipment under Test"
- Line 4: "Manufacturer"
- Line 5: "OP Condition"
- Line 6: "Operator"
- Line 7: "Test Spec"

Make sure that the title string is not too long, because strings that are too long could mess up the layout of the report.

Example:

```
HCOP:TREP:ITEM:HEAD:LINE3:TITL 'Device under
Test'
```

Renames the third title into "Device under Test".

Manual operation: See "[Designing the Header of the Test Report](#)" on page 547

HCOPY:TREPort:ITEM:LOGO <FileName>

This command selects a graphic (for example a company logo) that is shown at the top of each page in the test report.

Use `HCOPY:TREPort:ITEM:LOGO:CONTRol` on page 971 to select the conditions under which the picture is shown.

Parameters:

<FileName> String containing the location and name of the picture.
For reports in **pdf** format, you can use the following file types:
bmp, jpg, png.
For reports in **rtf** format, you can use the following file types:
bmp, jpg.

Example:

```
HCOP:TREP:ITEM:LOGO 'C:\aPicture.jpg'
```

Includes a picture at the top of each page of the report.

Manual operation: See "[Designing the Header of the Test Report](#)" on page 547

HCOPy:TREPort:ITEM:LOGO:CONTRol <Repetition>

This command selects how often the logo is displayed in the document.

Parameters:

<Repetition>

ALWays

The logo is displayed at the top of every page of the report.

NEVer

The logo is displayed on no page of the report.

ONCE

The logo is displayed on the first page of each dataset.

*RST: NEVer

Example:

```
HCOP:TREP:ITEM:LOGO 'c:\logo.png'
```

Selects a picture to be displayed in the report document.

```
HCOP:TREP:ITEM:LOGO:CONT ONCE
```

Displays the logo on the first page of each dataset.

Manual operation: See ["Designing the Header of the Test Report"](#) on page 547

11.13.1.3 Defining the Contents of the Title Page

[HCOPy:TREPort:DESCRiption](#)..... 971

[HCOPy:TREPort:PAGesize](#)..... 971

[HCOPy:TREPort:TITLe](#)..... 972

HCOPy:TREPort:DESCRiption <Description>

This command defines the description of the test report as shown on its title page.

Parameters:

<Description>

String containing the description of the test report.

Example:

```
HCOP:TREP:DESC 'A short summary of the test report.'
```

Adds a description to the test report.

Manual operation: See ["Defining the Contents of the Title Page"](#) on page 548

HCOPy:TREPort:PAGesize <Size>

This command selects the size of the test report document.

Parameters:

<Size>

A4

Document pages have an A4 size.

US

Document pages have a US letter size.

*RST: A4

Example:

```
HCOP:TREP:PAG A4
```

Selects the A4 size for the document.

HCOPy:TREPort:TITLe <Title>

This command defines the title for the test report as shown on its title page.

Parameters:

<Title> String containing the title.

Example: HCOP:TREP:TITL 'My first test report'
Defines a title for a test report.

Manual operation: See "[Defining the Contents of the Title Page](#)" on page 548

11.13.1.4 Managing Templates

HCOPy:TREPort:ITEM:TEMPlate:CATalog?	972
HCOPy:TREPort:ITEM:TEMPlate:DELeTe.	972
HCOPy:TREPort:ITEM:TEMPlate:LOAD	972
HCOPy:TREPort:ITEM:TEMPlate:SAVE	973

HCOPy:TREPort:ITEM:TEMPlate:CATalog?

This command queries the test report templates available in the default report directory (and its subdirectories).

Return values:

<Templates> String containing the name of the templates as a comma-separated list.

Example: HCOP:TREP:ITEM:TEMP:CAT?
would return, e.g.:
'TemplateX, TemplateY, TemplateZ'

Usage: Query only

HCOPy:TREPort:ITEM:TEMPlate:DELeTe <Template>

This command deletes a test report template.

Parameters:

<Template> String containing the name of the template.

Example: HCOP:TREP:ITEM:TEMP:DEL 'myTemplate'
Deletes a test report template.

Usage: Event

HCOPy:TREPort:ITEM:TEMPlate:LOAD <Template>

This command loads a test report template.

Parameters:

<Template> String containing the name of the template.

Example: `HCOP:TREP:ITEM:TEMP:LOAD 'myTemplate'`
Loads a test report template.

Usage: Event

HCOPy:TREPort:ITEM:TEMPlate:SAVE <Template>

This command saves a test report template.

Parameters:

<Template> String containing the name of the template.

Example: `HCOP:TREP:ITEM:TEMP:SAVE 'myTemplate'`
Saves a test report template.

Usage: Event

11.13.2 Creating a Test Report

- [Configuring and Printing the Test Report](#)..... 973
- [Adding and Removing Datasets](#).....974
- [Selecting Datasets for the Report](#)..... 975

11.13.2.1 Configuring and Printing the Test Report

Commands useful to configure and print the test report described elsewhere:

- [HCOPy:DEvice:LANGUage<1|2>](#) on page 961
- [HCOPy\[:IMMediate<1|2>\]](#) on page 963
- [MMEMoRY:NAME](#) on page 945

[HCOPy:MODE](#).....973

HCOPy:MODE <Mode>

Selects the output of the [HCOPy\[:IMMediate<1|2>\]](#) command.

Parameters:

<Mode> **SCReen**
`HCOPy:IMMediate` prints the current screen contents.

REPort

`HCOPy:IMMediate` generates a measurement report.

*RST: SCReen

Example: `HCOP:MODE REPort`
`HCOP`
Creates a file containing the measurement report.

11.13.2.2 Adding and Removing Datasets

HCOPy:TREPort:APPend.....	974
HCOPy:TREPort:NEW.....	974
HCOPy:TREPort:TEST:REMove.....	974
HCOPy:TREPort:TEST:REMove:SElected.....	975

HCOPy:TREPort:APPend

This command adds the current measurement results to the test report.

The saved data depends on the items you have selected with `HCOPy:TREPort:ITEM:SElect` on page 966.

Example: Perform a measurement, then:
`HCOP:TREP:NEW`
 Creates a new test report with the results of the first measurement.
 Perform another measurement, then:
`HCOP:TREP:APP`
 Adds the results of the second measurement to the test report.

Usage: Event

Manual operation: See "Adding and Removing Datasets" on page 551

HCOPy:TREPort:NEW

This command creates a new test report.

Creating a test report deletes all previously saved datasets. The current measurement results are added as the first dataset to the new report.

The R&S ESR saves the data selected with `HCOPy:TREPort:ITEM:SElect` on page 966.

Example: `HCOP:TREP:NEW`
 Creates a test report.

Usage: Event

Manual operation: See "Adding and Removing Datasets" on page 551

HCOPy:TREPort:TEST:REMove <Dataset>

This command deletes one of the datasets that are currently part of a test report.

Parameters:

<Dataset> Index number of the dataset as shown in the "Test Report Content Selection" dialog box.
 If the index number is greater than the number of available datasets, the command returns an error.

Example: `HCOP:TREP:TEST:REM 2`
Deletes the second dataset from the current test report.

Manual operation: See ["Adding and Removing Datasets"](#) on page 551

HCOPy:TREPort:TEST:REMove:SElected

This command deletes all selected datasets that are currently part of a test report.

Example: `HCOP:TREP:TEST:SEL:NONE`
Deselects all datasets.
`HCOP:TREP:TEST:SEL 2,ON`
`HCOP:TREP:TEST:SEL 3,ON`
Selects the second and third datasets.
`HCOP:TREP:TEST:REM:SEL`
Deletes the selected datasets (the second and third).

Usage: Event

Manual operation: See ["Adding and Removing Datasets"](#) on page 551

11.13.2.3 Selecting Datasets for the Report

HCOPy:TREPort:TEST:SElect	975
HCOPy:TREPort:TEST:SElect:ALL	975
HCOPy:TREPort:TEST:SElect:INVert	976
HCOPy:TREPort:TEST:SElect:NONE	976

HCOPy:TREPort:TEST:SElect <Dataset>, <State>

This command includes or excludes datasets from the test report.

Parameters:

<Dataset> Index number of the dataset as shown in the "Test Report Content Selection" dialog box.
If the index number is greater than the number of available datasets, the command does nothing.

<State> ON | OFF

Example: `HCOP:TREP:TEST:SEL 2, OFF`
Excludes the second dataset from the test report.

Manual operation: See ["Selecting Datasets for the Report"](#) on page 551

HCOPy:TREPort:TEST:SElect:ALL

This command includes all available datasets in a test report.

Example: `HCOP:TREP:TEST:SEL:ALL`
Includes all available datasets in the test report.

Usage: Event

Manual operation: See ["Selecting Datasets for the Report"](#) on page 551

HCOPy:TREPort:TEST:SElect:INVert

This command inverts the current selection of datasets to be included in the test report.

Datasets that have been included in the report before will no longer be part of the report. Instead, the previously deselected datasets will be included.

Example: `HCOP:TREP:TEST:SEL:INV`
Inverts the selection of dataset to be included in a test report.

Usage: Event

Manual operation: See ["Selecting Datasets for the Report"](#) on page 551

HCOPy:TREPort:TEST:SElect:NONE

This command excludes all datasets from the test report.

Example: `HCOP:TREP:TEST:SEL:NONE`
Removes all dataset from the test report.

Usage: Event

Manual operation: See ["Selecting Datasets for the Report"](#) on page 551

11.13.3 Deprecated Commands (Test Report)

Following is a list of deprecated remote commands. The remote commands are still supported to maintain compatibility to previous Rohde & Schwarz receivers (like the R&S ESU), but it is strongly recommended to use the command system in the way it is meant to be used in the R&S ESR.

Legacy command	Replaced by	Comment
HCOPy:TREPort:ITEM:HEADer:STATE	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:DIAGram:STATE	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:FRESults:STATE	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:PAGecount:STATE	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:SCANtable:STATE	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOPy:TREPort:ITEM:SRESults:STATE	HCOPy:TREPort:ITEM:SElect	Items now selected by the command parameter.

Legacy command	Replaced by	Comment
HCOpy:TREPort:ITEM: TDSTamp:STAtE	HCOpy:TREPort:ITEM:SElect	Items now selected by the command parameter.
HCOpy:TREPort:ITEM: TRANsducer:STAtE	HCOpy:TREPort:ITEM:SElect	Items now selected by the command parameter.

11.14 Display Configuration

- [Controlling Display Elements](#)..... 977
- [Selecting Items to Store and Restore](#)..... 984

11.14.1 Controlling Display Elements

DISPlay:ANNotation:FREQuency	977
DISPlay:CMAP<item>:DEFault	978
DISPlay:CMAP<item>:HSL	978
DISPlay:CMAP<item>:PDEFined	978
DISPlay:FORMat	979
DISPlay:LOGO	979
DISPlay:PSAVe:HOLDoff	979
DISPlay:PSAVe[:STAtE]	980
DISPlay:SBAR[:STAtE]	980
DISPlay:SKEYs[:STAtE]	980
DISPlay:TBAR[:STAtE]	980
DISPlay:THEMe:CATalog?	981
DISPlay:THEMe:SElect	981
DISPlay:TOUChscreen:STAtE	981
DISPlay[:WINDow<n>][:SUBWindow<m>]:SIZE	981
DISPlay[:WINDow<n>][:SUBWindow<m>]:SElect	982
DISPlay[:WINDow<n>]:TEXT:STAtE	983
DISPlay[:WINDow<n>]:TEXT[:DATA]	983
DISPlay[:WINDow<n>]:TIME	983
DISPlay[:WINDow<n>]:TIME:FORMat	984
INITiate<n>:DISPlay	984

DISPlay:ANNotation:FREQuency <State>

This command switches the x-axis annotation on or off.

Parameters:

<State> ON | OFF
 *RST: ON

Example: DISP:ANN:FREQ OFF

Usage: SCPI confirmed

Manual operation: See "[Annotation \(On/Off\)](#)" on page 521

DISPlay:CMAP<item>:DEFault <Setting>

This command resets the screen colors of all display items to their default settings.

Suffix:

<item> irrelevant

Parameters:

<Setting> 1 | 2
Default settings DEFault1 and DEFault2

Example:

DISP:CMAP:DEF2
Selects default setting 2 for setting the colors.

Usage:

Event
SCPI confirmed

Manual operation:

See "[Select Screen Color Set](#)" on page 521
See "[Set to Default](#)" on page 522

DISPlay:CMAP<item>:HSL <ColorTable>

This command defines the color table of the instrument.

The set values are not changed by *RST.

Suffix:

<item> Selects the display item. For more information see [Table 11-26](#).

Parameters:

<ColorTable> hue | sat | lum
hue
TINT
sat
SATURATION
lum
BRIGHTNESS
The value range is 0 to 1 for all parameters.

Example:

DISP:CMAP2:HSL 0.3,0.8,1.0
Changes the grid color.

Usage:

SCPI confirmed

Manual operation:

See "[Screen Colors](#)" on page 521
See "[Select Object](#)" on page 522
See "[User Defined Colors](#)" on page 522

DISPlay:CMAP<item>:PDEFined <Color>

This command defines the color table of the instrument using predefined color values. Each suffix of CMAP is assigned to one or several graphical elements which can be modified by varying the corresponding color setting.

The values set are not changed by *RST.

Suffix:

<item> Selects the display item. For more information see [Table 11-26](#).

Parameters:

<Color> BLACK | BLUE | BROWN | GREEN | CYAN | RED | MAGenta |
YELLOW | WHITE | DGRAY | LGRAY | LBLUE | LGREEN | LCYan |
LRED | LMAGenta

Example: DISP:CMAP2:PDEF GRE

Usage: SCPI confirmed

Manual operation: See "[Predefined Colors](#)" on page 522

DISPlay:FORMat <Format>

This command switches the measurement result display between FULL SCREEN and SPLIT SCREEN.

Parameters:

<Format> SINGLE | SPLit
SPLit
Show 2 or more screens on the display
SINGLE
Show only 1 screen on the display
*RST: SPL

Example: DISP:FORM SING

DISPlay:LOGO <State>

This command switches the company logo on the screen on or off.

Parameters:

<State> ON | OFF
*RST: ON

Example: DISP:LOGO OFF

Manual operation: See "[Print Logo \(On/Off\)](#)" on page 521

DISPlay:PSAVe:HOLDoff <Minutes>

This command sets the holdoff time for the power-save mode of the display. The available value range is 1 to 60 minutes, the resolution 1 minute. The entry is dimensionless.

Parameters:

<Minutes> 1 to 60
*RST: 15

Example: DISP:PSAV:HOLD 30

Manual operation: See ["Display Pwr Save \(On/Off\)"](#) on page 523

DISPlay:PSAVe[:STATe] <State>

This command switches on or off the power-save mode of the display. With the power-save mode activated the display including backlight is completely switched off after the elapse of the response time (see [DISPlay:PSAVe:HOLDoff](#) command).

This mode is recommended to protect the display, especially if the instrument is operated exclusively via remote control.

Parameters:

<State> ON | OFF
*RST: OFF

Example: DISP:PSAVe ON
Switches on the power-save mode.

Manual operation: See ["Display Pwr Save \(On/Off\)"](#) on page 523

DISPlay:SBAR[:STATe] <State>

This command turns the status bar in the display on and off.

Parameters:

<State> ON | OFF
*RST: ON

Example: DISP:SBAR OFF

Manual operation: See ["Status Bar"](#) on page 520

DISPlay:SKEYs[:STATe] <State>

This command turns the softkey bar in the display on and off.

Parameters:

<State> ON | OFF
*RST: ON

Example: DISP:SKEY OFF

DISPlay:TBAR[STATe] <State>

This command turns the toolbar in the display on or off.

Parameters:

<State> ON | OFF
*RST: OFF

Example: DISP:TOOL ON

Manual operation: See "[Tool Bar State \(On/Off\)](#)" on page 520

DISPlay:THEMe:CATalog?

This command queries the available themes for the display.

Example: DISP:THEMe:CAT?

Usage: Query only

DISPlay:THEMe:SElect <Theme>

This command selects a theme for the screen display. The theme defines the colors used for keys and screen elements, for example.

Parameters:

<Theme> String containing the name of the theme.
*RST: SPL

Example: DISP:THEM:SEL "OceanBlue"

Manual operation: See "[Theme Selection](#)" on page 521

DISPlay:TOUCHscreen:STATe <State>

This command turns the touch screen functionality on, off, or partially on.

Parameters:

<State> ON | OFF | FRAME
ON
 Touch screen function is active for entire screen
OFF
 Touch screen is deactivated for entire screen
FRAME
 Touch screen is deactivated for the diagram area of the screen, but active for the surrounding Softkeys, toolbars and menus.
 *RST: ON

Example: DISP:TOUC:STAT ON

DISPlay[:WINDow<n>][:SUBWindow<m>]:SIZE <Size>

This command configures the measurement display.

Suffix:

<n> 1 | 2
 window;
 Channel and adjacent-channel power measurements: Only "1" is allowed as a suffix for the window.
 Spectrum Emission Mask and Spurious Emissions measurements:
 selects the window that is displayed in full size (if no suffix is defined, "1" is used):
 1: diagram/result list
 2: marker table

<m>

1 | 2
 selects the item in the window to be displayed in full size:
 1: diagram
 2: result list

Parameters:**<Size>**

LARGe | SMALI

LARGe

Channel and adjacent-channel power measurements: diagram in full screen.

Spectrum Emission Mask and Spurious Emissions measurements: diagram or list in full screen, depending on the value of the suffix.

SMALI

split screen (diagram and list and table)

*RST: SMALI

Example:

```
DISP:SIZE LARG
```

Displays the measurement diagram in full screen size.

```
DISP:WIND1:SUBW2:SIZE LARG
```

Displays the result list in full screen size.

```
DISP:WIND2:SIZE LARG
```

Displays the marker table in full screen size.

Mode:

all

DISPlay[:WINDow<n>][:SUBWindow<m>]:SElect

This command selects which window (screen) is active for applications with more than one measurement window. For measurements with additional subwindows (e.g. SEM, ACLR), the subwindow can also be selected.

Suffix:**<n>**

1...4

window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> 1...2
 1: graphic
 2: table
 For applications that do not have subwindows, the suffix <m> is irrelevant.

Example: DISP:WIND1:SEL
 Sets the window 1 active.
 DISP:WIND1:SUBW2:SEL
 Sets the focus on the table of window 1.

DISPlay[:WINDow<n>]:TEXT:STATe <State>

This command turns the display of the comment (screen title) on and off.

Suffix:
 <n> Selects the measurement window.

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: DISP:TEXT:STAT ON
 Switches on the title.

DISPlay[:WINDow<n>]:TEXT[:DATA] <Comment>

This command defines a comment (max. 20 characters) which can be displayed in one of the measurement windows.

Suffix:
 <n> Selects the measurement window.

Parameters:
 <Comment> *RST: (empty)

Example: DISP:WIND:TEXT 'Noise Measurement'
 Defines the screen title.

Manual operation: See ["Screen Title \(On/Off\)"](#) on page 520

DISPlay[:WINDow<n>]:TIME <State>

This command turns the display of date and time on and off.

Suffix:
 <n> irrelevant

Parameters:
 <State> ON | OFF
 *RST: OFF

Example: DISP:TIME ON

Manual operation: See "Screen Title (On/Off)" on page 520
See "Time+Date (On/Off)" on page 520

DISPlay[:WINDow<n>]:TIME:FORMat <Format>

This command selects the time and date display format.

Suffix:

<n> irrelevant

Parameters:

<Format> US | DE
*RST: DE

Example:

DISP:TIME ON
Switches the screen display of date and time on.
DISP:TIME:FORM US
Switches the date and time format to US.

Manual operation: See "Time+Date Format (US/DE)" on page 520

INITiate<n>:DISPlay <State>

This command turns the display during a single sweep measurement on or off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF
*RST: ON

Example:

INIT:CONT OFF
Switches to single sweep mode
INIT:DISP OFF
Sets the display behavior to OFF
INIT;*WAI
Starts the measurement with display switched off.

11.14.2 Selecting Items to Store and Restore

MMEMory:SElect[:ITEM]:ALL.....	985
MMEMory:SElect[:ITEM]:DEFault.....	985
MMEMory:SElect[:ITEM]:HWSettings.....	985
MMEMory:SElect[:ITEM]:LINes:ALL.....	985
MMEMory:SElect[:ITEM]:NONE.....	986
MMEMory:SEL[:ITEM]:SGRam.....	986
MMEMory:SElect[:ITEM]:TRACe[:ACTive].....	986
MMEMory:SElect[:ITEM]:TRANsducer:ALL.....	986
MMEMory:USER<Softkey>.....	987

MMEMory:SElect[:ITEM]:ALL

This command includes all data subsets in the list of device settings to be stored/loaded.

Example: `MMEM:SEL:ALL`

Usage: Event

Manual operation: See ["Enable all Items"](#) on page 532

MMEMory:SElect[:ITEM]:DEFault

This command includes the default list in the settings file to be stored/loaded. For details on hardware settings refer to the [MMEMory:SElect\[:ITEM\]:HWSettings](#) on page 985 command.

Example: `MMEM:SEL:DEFault`

MMEMory:SElect[:ITEM]:HWSettings <State>

This command includes the hardware settings in the settings file to be stored/loaded. The hardware settings include:

- current configuration of general device parameters (general setup)
- current setting of the measurement hardware including markers
- activated limit lines:

A settings file may include 8 limit lines at maximum. This number includes the activated limit lines and, if available, the de-activated limit lines last used.

Therefore the combination of the non-activated restored limit lines depends on the sequence of use with the [MMEMory:LOAD:STATE](#) on page 947 command.

- user-defined color setting
- configuration for the hardcopy output

Parameters:

<State> `ON | OFF`
`*RST: ON`

Example: `MMEM:SEL:HWS ON`

Manual operation: See ["Select Items"](#) on page 531

MMEMory:SElect[:ITEM]:LINES:ALL <State>

This command includes all limit lines (activated and de-activated) in the settings file to be stored/loaded.

Parameters:

<State> `ON | OFF`
`*RST: OFF`

Example: MMEM:SEL:LIN:ALL ON

Manual operation: See "[Select Items](#)" on page 531

MMEMory:SElect[:ITEM]:NONE

This command excludes all items from the settings file to be stored/loaded.

Example: MMEM:SEL:NONE

Usage: Event

Manual operation: See "[Disable all Items](#)" on page 532

MMEMory:SEL[:ITEM]:SGRam <State>

This command includes or excludes spectrogram data when storing or restoring a configuration file.

Parameters:

<State> ON | OFF

Example: MMEM:SEL:SGR ON
Adds spectrogram data to the configuration file.

MMEMory:SElect[:ITEM]:TRACe[:ACTive] <State>

This command includes the active traces in the settings file to be stored/loaded. Active traces are all traces whose state is not blank.

Parameters:

<State> ON | OFF

*RST: OFF, i.e. no traces is stored

Example: MMEM:SEL:TRAC ON

Manual operation: See "[Select Items](#)" on page 531

MMEMory:SElect[:ITEM]:TRANsducer:ALL <State>

This command includes all transducer factors and sets in the settings file to be stored/loaded.

Parameters:

<State> ON | OFF

*RST: OFF

Example: MMEM:SEL:TRAN:ALL ON

Manual operation: See "[Select Items](#)" on page 531

MMEMory:USER<Softkey> <Filename>, <Label>

This command defines the settings file to be loaded when the specified user-definable softkey is selected. The settings file must exist, otherwise an error occurs.

Suffix:

<Softkey> 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8
Number of the softkey in the "User" menu.

Parameters:

<Filename> string
This parameter defines the path and file name of the settings to be loaded.

<Label> string
This parameter defines the label of the user-definable softkey.

*RST: User<Softkey_number>

Example: MMEM:USER1 'C:\MySaveSets\Set1','Set1'
Loads settings file Set1 when the "Set1" softkey in the "User" menu is selected.

Example: MMEM:USER3 'C:\MySaveSets\Set3',' '
Loads settings file Set3 when the "User3" softkey in the "User" menu is selected.

11.15 Network Connection

- [Configuring Network Connections](#).....987
- [Emulating HP Instruments](#).....991

11.15.1 Configuring Network Connections

MMEMory:NETWork:DISConnect	987
MMEMory:NETWork:MAP	988
MMEMory:NETWork:UNUSeddrives?	988
MMEMory:NETWork:USEDdrives?	989
SYSTem:COMMunicate:GPIB[:SELF]:ADDRess	989
SYSTem:COMMunicate:GPIB[:SELF]:RTERminator	989
SYSTem:LXI:INFo?	990
SYSTem:LXI:LANReset	990
SYSTem:LXI:MDEscription	990
SYSTem:LXI:PASSword	990

MMEMory:NETWork:DISConnect <Drive>

This command disconnects the selected drive.

Parameters:

<Drive>

Example:

MME:NETW:DISC 'T: '

Disconnects network drive T:

Usage:

Event

Manual operation: See ["Disconnect Network Drive"](#) on page 536

MME:NETW:MAP <Drive>, <HostName> [, <UserName>, <Password>][, <Reconnect>]

This command maps a drive to a server or server directory of the network.

Note that you have to allow sharing for a server or folder in Microsoft networks first.

Parameters:

<Drive>

String containing the drive name or path of the directory you want to map.

<HostName>

String containing the host name of the computer or the IP address and the share name of the drive.
'<host name or IP address\share name>'

<UserName>

String containing a user name in the network.
The user name is optional.

<Password>

String containing the password corresponding to the <User-Name>.
The password is optional.

<Reconnect>

ON | OFF

ON

Reconnects at logon with the same user name.

OFF

Does not reconnect at logon.

Usage:

Event

Manual operation: See ["Map Network Drive"](#) on page 536**MME:NETW:UNUSdrives?**

This command lists all unused network drive names.

This command is only a query and therefore has no *RST value.

Example:

MME:NETW:UNUS?

Lists all unused network drive names.

Usage:

Query only

Manual operation: See ["Map Network Drive"](#) on page 536

MMEMory:NETWork:USEDdrives? <ResultType>

This command lists all mapped network drives.

Query parameters:

<ResultType> **ON**
 Lists all mapped network drives including the folder information.

OFF
 Lists all mapped network drive names.

*RST: OFF

Example:

MMEM:NETW:USED? ON
 Lists all mapped network drives including the folder information.

Usage: Query only

Manual operation: See "[Map Network Drive](#)" on page 536

SYSTem:COMMunicate:GPIB[:SELF]:ADDRess <Address>

This command changes the GPIB address of the unit.

Parameters:

<Address> 0 to 30

*RST: (no influence on this parameter, factory default 20)

Example:

SYST:COMM:GPIB:ADDR 18

Usage: SCPI confirmed

Manual operation: See "[GPIB Address](#)" on page 514

SYSTem:COMMunicate:GPIB[:SELF]:RTERminator <Terminator>

This command changes the GPIB receive terminator.

According to the standard the terminator in ASCII is <LF> and/or <EOI>. For binary data transfers (e.g. trace data) from the control computer to the instrument, the binary code (0AH) used for <LF> might be included in the binary data block, and therefore should not be interpreted as a terminator in this particular case. This can be avoided by changing the receive terminator to EOI.

Output of binary data from the instrument to the control computer does not require such a terminator change.

Parameters:

<Terminator> LFEOI | EOI

*RST: (no influence on this parameter, factory default LFEOI)

Example:

SYST:COMM:GPIB:RTER EOI

Manual operation: See "[GPIB Terminator LFEOI/EOI](#)" on page 518

SYSTem:LXI:INFo?

This query returns the current parameters of the LXI class C.

Only user accounts with administrator rights are able to use LXI functionality.

Return values:

Return values <current version> | <LXI class> | <Computername> |
(example) <MAC adress> | <IP adress> | <Auto MDIX>

Usage: Query only

Manual operation: See ["Info"](#) on page 513

SYSTem:LXI:LANReset

This command resets the LAN configuration to the values required by the LXI standard. In addition, the password is reset to its initial state as well as the LXI instrument description.

Only user accounts with administrator rights are able to use LXI functionality.

Example: SYST:LXI:LANR

Usage: Event

Manual operation: See ["LAN Reset"](#) on page 514

SYSTem:LXI:MDEscription <String>

This command shows the LXI instrument description. Also, the instrument description can be changed using this command.

Only user accounts with administrator rights are able to use LXI functionality.

Parameters:

<String>

Example: SYST:LXI:MDES

Manual operation: See ["Description"](#) on page 514

SYSTem:LXI:PASSword <Password>

This command shows or changes the LXI password.

Only user accounts with administrator rights are able to use LXI functionality.

Parameters:

<Password> <password>

Example: SYST:LXI:PASS

Manual operation: See ["Password"](#) on page 513

11.15.2 Emulating HP Instruments

SYSTem:REVisIon:FACTory.....	991
SYSTem:REVisIon[:STRing].....	991
SYSTem:RSW.....	992
SYSTem:LANGuage.....	992
SYSTem:HPCoupling.....	992
SYSTem:IFGain:MODE.....	993
SYSTem:TWALking.....	993

SYSTem:REVisIon:FACTory

Resets the response to the REV? query to the default value, e.g. after a user string was defined using the `SYSTem:REVisIon[:STRing]` command. (REV? query available for HP emulation only, see [Chapter 11.18, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 1039.)

Example:

```

Define the system language:
SYST:LANG '8563E'

Set the response back to factory setting:
SYS:REV:FACT

Query the revision:
REV?

Response:
920528

```

Usage: Event
SCPI confirmed

Manual operation: See ["REV String Factory"](#) on page 517

SYSTem:REVisIon[:STRing] <Name>

Sets the response to the REV? query to the defined string (HP emulation only, see [Chapter 11.18, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 1039).

Parameters:
<Name>

Example:

```

Define the system language:
SYST:LANG '8563E'

Query the revision:
REV?

Response:
920528

Set the response to 'NewRevision':
SYST:REV:STR 'NewRevision'

Query the response:
SYST:REV:STR?

Response:
NewRevision

```

Manual operation: See ["REV String User"](#) on page 517

SYSTem:RSW <State>

Controls a repeated sweep of the E1 and MKPK HI/HL HP model commands (for details on the commands refer to [Chapter 11.18, "GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E"](#), on page 1039). If the repeated sweep is OFF, the marker is set without sweeping before.

This command is only available if a HP language is selected using [SYSTem:LANGuage](#).

Parameters:

<State> ON | OFF
*RST: OFF

Example: SYSTem:RSW ON

Usage: SCPI confirmed

Manual operation: See ["Sweep Repeat \(On/Off\)"](#) on page 516

SYSTem:LANGuage <Language>

This command defines the system language. Default is SCPI which defines the standard remote control behavior of the instrument. The other parameters are to simulate the corresponding HP analyzer. The parameter "PSA89600" sets the device in a state in which it can be used for IQ capturing from the 89600 vector signal analyzer software.

Parameters:

<Language> "SCPI" | "8560E" | "8561E" | "8562E" | "8563E" | "8564E" |
"8565E" | "8566A" | "8566B" | "8568A" | "8568A_DC" | "8568B" |
"8568B_DC" | "8591E" | "8594E" | "71100C" | "71200C" |
"71209A" | "PSA89600" | "PSA" | "ESA"
*RST: SCPI

Example: SYST:LANG '8560E'
Sets the system language to 8560E to simulate the HP analyzer.

Manual operation: See ["GPIB Language"](#) on page 515

Note: If you use **"PSA89600"**, you must switch to an HP language first before returning to SCPI (in remote operation only). For the identical language "PSA", this intermediate step is not necessary.

SYSTem:HPCoupling <CouplingType>

Controls the default coupling ratios in the HP emulation mode for:

- span and resolution bandwidth (Span/RBW) and
- resolution bandwidth and video bandwidth (RBW/VBW)

For FSP (=FSV), the standard parameter coupling of the instrument is used. As a result, in most cases a shorter sweeptime is used than in case of HP.

This command is only available if a HP language is selected using [SYSTem:LANGuage](#).

Parameters:

<CouplingType> HP | FSP
*RST: FSP

Example: SYSTem:HPC HP

Usage: SCPI confirmed

Manual operation: See "[Coupling \(FSx/HP\)](#)" on page 517

SYSTem:IFGain:MODE <Mode>

Configures the internal IF gain settings in HP emulation mode due to the application needs. This setting is only taken into account for resolution bandwidth < 300 kHz and is only available if a HP language is selected using [SYSTem:LANGuage](#).

Parameters:

<Mode> NORM | PULS
NORM
Optimized for high dynamic range, overload limit is close to reference level.
PULS
Optimized for pulsed signals, overload limit up to 10 dB above reference level.
*RST: NORM

Example: SYST:IFG:MODE PULS

Usage: SCPI confirmed

Manual operation: See "[IF Gain \(Norm/Puls\)](#)" on page 516

SYSTem:TWALking <Mode>

Defines how remote control programs are evaluated, in particular multiple commands in one command line.

Note that the default setting is `NORM`; however, the setting defined by this command is retained after a [preset] (*RST) operation.

Parameters:

<Mode> **NORM**
SCPI-conform behaviour
The first command is always referenced to the root node. Subsequent commands, however, are referenced to the same tree level as the previous command in a message unit.

ENHanced

If subsequent commands are not found on the same tree level as the previous command, the SCPI parser searches "backwards up the tree" of defined SCPI commands. If the command is found at a higher node, that command is used. Only if the command is not found anywhere, an error message is returned.

*RST: setting is retained

Example:

```
*RST
:SYSTem:TWALKing ENHanced
:SENSe:SWEEp:MODE LIST
INIT:CONT OFF
LIST:RANG4:DEL;RANG3:DEL
```

//without enhanced tree walking this command would deliver an error

Manual operation: See ["Tree Walking"](#) on page 517

11.16 Status Register

For more information on the contents of the status registers see the following sections.

Status registers in receiver mode:

- ["STATus:OPERation Register"](#) on page 580
- ["STATus:QUEStionable Register"](#) on page 581
- ["STATus:QUEStionable:FREQuency Register"](#) on page 582
- ["STATus:QUEStionable:LIMit Register"](#) on page 582
- ["STATus:QUEStionable:LMARgin Register"](#) on page 583
- ["STATus:QUEStionable:POWer Register"](#) on page 584
- ["STATus:QUEStionable:TRANsducer Register"](#) on page 584

Status registers in spectrum mode:

- ["STATus:OPERation Register"](#) on page 586
- ["STATus:QUEStionable Register"](#) on page 587
- ["STATus:QUEStionable:ACPLimit Register"](#) on page 588
- ["STATus:QUEStionable:FREQuency Register"](#) on page 582
- ["STATus:QUEStionable:LIMit Register"](#) on page 582
- ["STATus:QUEStionable:LMARgin Register"](#) on page 583
- ["STATus:QUEStionable:POWer Register"](#) on page 584

11.16.1 General Status Register Commands

STATus:PRESet	995
STATus:QUEue[:NEXT?]	995

STATus:PRESet

This command resets the edge detectors and ENABLE parts of all registers to a defined value. All PTRansition parts are set to FFFFh, i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABLE part of the STATus:OPERation and STATus:QUESTionable registers are set to 0, i.e. all events in these registers are not passed on.

Example: STAT:PRES

Usage: SCPI confirmed

STATus:QUEue[:NEXT]??

This command queries the earliest error queue entry and deletes it.

Positive error numbers indicate device-specific errors, negative error numbers are error messages defined by SCPI. If the error queue is empty, the error number 0, "No error", is returned. This command is identical to the `SYSTEM:ERROR[:NEXT]?` on page 927 command.

Example: STAT:QUES?

Usage: Query only
SCPI confirmed

11.16.2 Reading out the EVENT Part

For more information on the event part see [Chapter 11.1.6.2, "Structure of a SCPI Status Register"](#), on page 575.

STATus:OPERation[:EVENT]?

STATus:QUESTionable[:EVENT]?

STATus:QUESTionable:ACPLimit[:EVENT]?

STATus:QUESTionable:FREQuency[:EVENT]?

STATus:QUESTionable:LIMit<n>[:EVENT]?

STATus:QUESTionable:LMARgin<n>[:EVENT]?

STATus:QUESTionable:POWer[:EVENT]?

STATus:QUESTionable:TRANsducer[:EVENT]?

These commands read out the EVENT section of the status register.

At the same time, the commands delete the contents of the EVENT section.

Usage: Query only

11.16.3 Reading Out the CONDition Part

For more information on the condition part see [Chapter 11.1.6.2, "Structure of a SCPI Status Register"](#), on page 575.

```

STATus:OPERation:CONDition?
STATus:QUESTionable:CONDition?
STATus:QUESTionable:ACPLimit:CONDition?
STATus:QUESTionable:FREQuency:CONDition?
STATus:QUESTionable:LIMit<n>:CONDition?
STATus:QUESTionable:LMARgin<n>:CONDition?
STATus:QUESTionable:POWer:CONDition?
STATus:QUESTionable:TRANsducer:CONDition?

```

These commands read out the CONDition section of the status register.

The commands do not delete the contents of the EVENT section.

Usage: Query only

11.16.4 Controlling the ENABLE Part

For more information on the enable part see [Chapter 11.1.6.2, "Structure of a SCPI Status Register"](#), on page 575.

```

STATus:OPERation:ENABLE <SumBit>
STATus:QUESTionable:ENABLE <SumBit>
STATus:QUESTionable:ACPLimit:ENABLE <SumBit>
STATus:QUESTionable:FREQuency:ENABLE <SumBit>
STATus:QUESTionable:LIMit<n>:ENABLE <SumBit>
STATus:QUESTionable:LMARgin<n>:ENABLE <SumBit>
STATus:QUESTionable:POWer:ENABLE <SumBit>
STATus:QUESTionable:TRANsducer:ENABLE <SumBit>

```

These commands control the ENABLE part of a register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameters:

<SumBit> Range: 0 to 65535

11.16.5 Controlling the Negative Transition Part

For more information on the positive transition part see [Chapter 11.1.6.2, "Structure of a SCPI Status Register"](#), on page 575.

```

STATus:OPERation:NTRansition <SumBit>
STATus:QUESTionable:NTRansition <SumBit>
STATus:QUESTionable:ACPLimit:NTRansition <SumBit>
STATus:QUESTionable:FREQuency:NTRansition <SumBit>
STATus:QUESTionable:LIMit<n>:NTRansition <SumBit>
STATus:QUESTionable:LMARgin<n>:NTRansition <SumBit>

```

STATus:QUESTIONable:POWER:NTRansition <SumBit>

STATus:QUESTIONable:TRANSducer:NTRansition <SumBit>

These commands control the Negative TRansition part of a register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<SumBit> Range: 0 to 65535

11.16.6 Controlling the Positive Transition Part

For more information on the negative transition part see [Chapter 11.1.6.2, "Structure of a SCPI Status Register"](#), on page 575.

STATus:OPERation:PTRansition <SumBit>

STATus:QUESTIONable:PTRansition <SumBit>

STATus:QUESTIONable:ACPLimit:PTRansition <SumBit>

STATus:QUESTIONable:FREQuency:PTRansition <SumBit>

STATus:QUESTIONable:LIMit<n>:PTRansition <SumBit>

STATus:QUESTIONable:LMARgin<n>:PTRansition <SumBit>

STATus:QUESTIONable:POWER:PTRansition <SumBit>

STATus:QUESTIONable:TRANSducer:PTRansition <SumBit>

These commands control the Positive TRansition part of a register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<SumBit> Range: 0 to 65535

11.17 Remote Control – Programming Examples

In this chapter, more complex programming examples are given. In [Chapter 3.6, "Brief Introduction to Remote Control"](#), on page 119, basic steps in remote control programming are provided.

The following programming examples have a hierarchical structure, i.e. subsequent examples are based on previous ones. It is thus possible to compile an operational program from the modules of the given examples very easily. VISUAL BASIC has been used as programming language. However, the programs can be translated into other languages.



In programming languages as C, C++ or programs as MATLAB, NI Interactive Control, a backslash starts an escape sequence (e.g. "\n" is used to start a new line). In these programming languages and programs, two backslashes instead of one must be used in remote commands (for an example refer to [Chapter 3.6.1, "Basic Steps in Remote Control Programming"](#), on page 119.)

11.17.1	Service Request.....	999
11.17.1.1	Initiate Service Request.....	999
11.17.1.2	Waiting for the Arrival of a Service Request.....	1000
11.17.1.3	Waiting Without Blocking the Keyboard and Mouse.....	1001
11.17.1.4	Service Request Routine.....	1002
11.17.1.5	Reading Out the Output Buffer.....	1003
11.17.1.6	Reading Error Messages.....	1003
11.17.1.7	Evaluation of SCPI Status Registers.....	1004
11.17.1.8	Evaluation of Event Status Register.....	1005
11.17.2	Using Marker and Delta Marker.....	1006
11.17.2.1	Shape Factor Measurement (using n dB down).....	1006
11.17.2.2	Measuring the Third Order Intercept Point.....	1007
11.17.2.3	Measuring the AM Modulation Depth.....	1008
11.17.3	Limit Lines and Limit Test.....	1008
11.17.4	Measuring the Channel and Adjacent Channel Power.....	1010
11.17.5	Occupied Bandwidth Measurement.....	1013
11.17.6	Time Domain Power Measurement.....	1014
11.17.7	Fast Power Measurement on Power Ramps.....	1015
11.17.7.1	Power Measurement with Multi-Summary Marker.....	1015
11.17.7.2	Multi-Burst Power Measurement.....	1017
11.17.8	Fast Level Measurement Using Frequency Lists.....	1018
11.17.9	Level Correction of Transducers.....	1020
11.17.10	Measuring the Magnitude and Phase of a Signal.....	1021
11.17.11	Reading and Writing Files.....	1023
11.17.11.1	Reading a File from the Instrument.....	1023
11.17.11.2	Creating a File on the Instrument.....	1024
11.17.12	Spectrum Emission Mask Measurement.....	1024
11.17.12.1	Using Predefined Standard Wibro.....	1025
11.17.12.2	Defining 5 Ranges with all Parameters.....	1025

11.17.13	Spurious Emissions Measurement.....	1028
11.17.14	Averaging I/Q Data.....	1031
11.17.15	Using IQ Gating.....	1032
11.17.16	Usage of Four Spectrum Instances.....	1037

11.17.1 Service Request

The service request routine requires an extended initialization of the instrument in which the relevant bits of the transition and enable registers are set. In addition the service request event must be enabled in the VISA session.

11.17.1.1 Initiate Service Request

```

REM ---- Example of initialization of the SRQ in the case
' of errors -----
PUBLIC SUB SetupSRQ()
CALL InstrWrite (analyzer, "*CLS") 'Reset status reporting system
CALL InstrWrite (analyzer, "*SRE 168") 'Enable service request for
' STAT:OPER, STAT:QUES and ESR
' register
CALL InstrWrite (analyzer, "*ESE 60") 'Set event enable bit for
' command, execution, device-
' dependent and query error
CALL InstrWrite (analyzer, "STAT:OPER:ENAB 32767")
' Set OPERATION enable bit for
' all events
CALL InstrWrite (analyzer, "STAT:OPER:PTR 32767")
' Set appropriate OPERATION
' Ptransition bits
CALL InstrWrite (analyzer, "STAT:QUES:ENAB 32767")
' Set questionable enable bits
' for all events
CALL InstrWrite (analyzer, "STAT:QUES:PTR 32767")
' Set appropriate questionable
' Ptransition bits
CALL viEnableEvent(analyzer, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
' Enable the event for service
' request
Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, VI_NULL,
VI_NULL)
IF (status = VI_SUCCESS) THEN CALL Srq
' If SRQ is recognized =>
' subroutine for evaluation
END SUB
REM *****

```

11.17.1.2 Waiting for the Arrival of a Service Request

There are basically two methods of waiting for the arrival of a service request:

Blocking (user inputs not possible):

This method is appropriate if the waiting time until the event to be signaled by an SRQ is short (shorter than the selected timeout), if no response to user inputs is required during the waiting time, and if – as the main criterion – the event is absolutely certain to occur.

Reason:

From the time the `viWaitOnEvent()` function is called until the occurrence of the expected event, it does not allow the program to respond to mouse clicks or key entries during the waiting time. Moreover, it returns an error if the SRQ event does not occur within the predefined timeout period.

The method is, therefore, in many cases not suitable for waiting for measurement results, especially when using triggered measurements.

The following function calls are required:

```
Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, VI_NULL,
    VI_NULL)
'Wait for service request user
'inputs are not possible during
'the waiting time!
IF (status = VI_SUCCESS) THEN CALL Srq
'If SRQ is recognized =>
'subroutine for evaluation

'----- Sweep in first Spectrum Tab and query marker -----
Dim Status = mbSession.WaitOnEvent( _
MessageBasedSessionEventType.ServiceRequest, SRQWaitTimeout)
'Wait for service request user inputs are not possible
'during the waiting time!
If (Status.EventType() = MessageBasedSessionEventType.ServiceRequest) Then
'If SRQ is recognized => subroutine for evaluation
    Srq()
End If
```

Non-blocking (user inputs possible):

This method is recommended if the waiting time until the event to be signaled by an SRQ is long (longer than the selected timeout), and user inputs should be possible during the waiting time, or if the event is not certain to occur. This method is, therefore, the preferable choice for waiting for the end of measurements, i.e. the output of results, especially in the case of triggered measurements.

The method necessitates a waiting loop that checks the status of the SRQ line at regular intervals and returns control to the operating system during the time the expected

event has not yet occurred. In this way, the system can respond to user inputs (mouse clicks, key entries) during the waiting time.

It is advisable to employ the Hold() auxiliary function, which returns control to the operating system for a selectable waiting time (see section [Waiting Without Blocking the Keyboard and Mouse](#)), so enabling user inputs during the waiting time.

```

result% = 0
For i = 1 To 10 'Abort after max. 10 loop
'iterations
Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, VI_TMO_IMMEDIATE, VI_NULL,
VI_NULL)
'Check event queue
If (status = VI_SUCCESS) Then
result% = 1
CALL Srq 'If SRQ is recognized =>
'subroutine for evaluation
Else
CALL Hold(20) 'Call hold function with
'20 ms 'waiting time. User inputs
'are possible.
Endif
Next i
If result% = 0 Then
Debug.Print "Timeout Error; Program aborted" 'Output error message
STOP 'Stop software
Endif

```

11.17.1.3 [Waiting Without Blocking the Keyboard and Mouse](#)

A frequent problem with remote control programs using Visual Basic is to insert waiting times without blocking the keyboard and the mouse.

If the program is to respond to user inputs also during a waiting time, control over the program events during this time must be returned to the operating system. In Visual Basic, this is done by calling the `DoEvents` function. This function causes keyboard-or mouse-triggered events to be executed by the associated elements. For example, it allows the operation of buttons and input fields while the user waits for an instrument setting to be completed.

The following programming example describes the `Hold()` function, which returns control to the operating system for the period of the waiting time selectable in milliseconds.

```

Rem *****
Rem The waiting function below expects the transfer of the desired
Rem waiting time in milliseconds. The keyboard and the mouse remain
Rem operative during the waiting period, thus allowing desired elements
Rem to be controlled
Rem *****
Public Sub Hold(delayTime As Single)
Start = Timer 'Save timer count on calling the

```

```

'function
Do While Timer < Start + delayTime/1000 'Check timer count
DoEvents 'Return control to operating
'system to enable control of
'desired elements as long as
'timer has not elapsed
Loop
End Sub
Rem *****

```

The waiting procedure is activated simply by calling Hold(<Waiting time in milliseconds>).

11.17.1.4 Service Request Routine

A service request is processed in the service request routine.



The variables userN% and userM% must be pre-assigned usefully!

```

REM ----- Service request routine -----
Public SUB Srq()
ON ERROR GOTO noDevice 'No user existing
CALL viReadSTB(analyzer, STB%) 'Serial poll, read status byte
IF STB% > 0 THEN 'This instrument has bits set in
'the STB
SRQFOUND% = 1
IF (STB% AND 16) > 0 THEN CALL Outputqueue
IF (STB% AND 4) > 0 THEN CALL ErrorQueueHandler
IF (STB% AND 8) > 0 THEN CALL Questionablestatus
IF (STB% AND 128) > 0 THEN CALL Operationstatus
IF (STB% AND 32) > 0 THEN CALL Esrread
END IF
noDevice:
END SUB 'End of SRQ routine
Rem *****

REM ----- Subroutine for evaluation Service Request Routine -----

Public Sub Srq()
Try
Dim mySTB As Short = mbSession.ReadStatusByte()
'Serial poll, read status byte
Console.WriteLine("Reading Service Request Routine:" + mySTB.ToString())
If mySTB > 0 Then 'This instrument has bits set in the STB
If (mySTB And 16) > 0 Then Call Outputqueue()
If (mySTB And 4) > 0 Then Call ErrorQueueHandler()
If (mySTB And 8) > 0 Then Call Questionablestatus()
If (mySTB And 128) > 0 Then Call Operationstatus()

```

```

        If (mySTB And 32) > 0 Then Call Esrread()
    End If
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub 'End of SRQ routine

```

Reading out the status event registers, the output buffer and the error/event queue is effected in subroutines.

11.17.1.5 Reading Out the Output Buffer

```

REM ----- Subroutine for the individual STB bits -----
Public SUB Outputqueue() 'Reading the output buffer
result$ = SPACE$(100) 'Make space for response
CALL InstrRead(analyzer, result$)
Debug.Print "Contents of Output Queue:"; result$
END SUB
REM *****

REM ----- Subroutine for the output queue -----
Public Sub Outputqueue() 'Reading the output buffer
    Try
        Dim result As String = mbSession.ReadString()
        Console.WriteLine("Contents of Output Queue:" + result)
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub

```

11.17.1.6 Reading Error Messages

```

REM ----- Subroutine for reading the error queue -----
Public SUB ErrorQueueHandler()
ERROR$ = SPACE$(100) 'Make space for error variable
CALL InstrWrite (analyzer, "SYSTEM:ERROR?")
CALL InstrRead(analyzer, ERROR$)
Debug.Print "Error Description:"; ERROR$
END SUB
REM *****

REM ----- Subroutine for reading the error queue -----
Sub ErrorQueueHandler()
    Dim result As String
    Dim hasErr As Boolean = True
    Do
        mbSession.Write("SYST:ERR?")
        result = mbSession.ReadString()
        Dim parts As String() = result.Split(",")
        If parts(0) = 0 Then

```

```

        hasErr = False
        Console.WriteLine(result)
    Else
        Console.WriteLine(result)
    End If
    Loop While hasErr
End Sub

```

11.17.1.7 Evaluation of SCPI Status Registers

```

REM ----- Subroutine for evaluating Questionable Status Register -----
Public SUB Questionablestatus()
Ques$ = SPACE$(20)
'Preallocate blanks to text
'variable
CALL InstrWrite (analyzer, "STATus:QUEStionable:EVENT?")
CALL InstrRead(analyzer, Ques$)
Debug.Print "Questionable Status: "; Ques$
END SUB
REM *****
REM ----- Subroutine for evaluating Operation Status Register -----
Public SUB Operationstatus()
Oper$ = SPACE$(20) 'Preallocate blanks to text
'variable
CALL InstrWrite (analyzer, "STATus:OPERation:EVENT?")
CALL InstrRead(analyzer, Oper$)
Debug.Print "Operation Status: "; Oper$
END SUB
REM *****

REM ----- Subroutine for evaluating Questionable Status Register -----
Public Sub Questionablestatus()
    Dim myQSR As String = Nothing
    Try
        myQSR = mbSession.Query("STATus:QUEStionable:EVENT?") 'Read QSR
        Console.WriteLine("Questionable Status:" + myQSR)
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub

REM ----- Subroutine for evaluating Operation Status Register -----
Public Sub Operationstatus()
    Dim myOSR As String = Nothing
    Try
        myOSR = mbSession.Query("STATus:OPERation:EVENT?") 'Read OSR
        Console.WriteLine("Operation Status:" + myOSR)
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub

```

```

    End Try
End Sub

```

11.17.1.8 Evaluation of Event Status Register

```

REM ----- Subroutine for evaluating the Event Status Register -----
Public SUB Esrread()
Esr$ = SPACE$(20) 'Preallocate blanks to text
'variable
CALL InstrWrite (analyzer, "*ESR?") 'Read ESR
CALL InstrRead(analyzer, Esr$)
IF (VAL(Esr$) AND 1) > 0 THEN Debug.Print "Operation complete"
IF (VAL(Esr$) AND 2) > 0 THEN Debug.Print "Request Control"
IF (VAL(Esr$) AND 4) > 0
THEN Debug.Print "Query Error"
IF (VAL(Esr$) AND 8) > 0
THEN Debug.Print "Device dependent error"
IF (VAL(Esr$) AND 16) > 0
THEN Debug.Print "Execution Error; Program aborted" 'Output error message
STOP 'Stop software
END IF
IF (VAL(Esr$) AND 32) > 0
THEN Debug.Print "Command Error; Program aborted" 'Output error message
STOP 'Stop software
END IF
IF (VAL(Esr$) AND 64) > 0 THEN Debug.Print "User request"
IF (VAL(Esr$) AND 128) > 0 THEN Debug.Print "Power on"END SUB
REM *****

REM ----- Subroutine for evaluating the Event Status Register -----
Public Sub Esrread()
    Try
        Dim myESR As Short = mbSession.Query("*ESR?") 'Read ESR
        If (myESR And 1) > 0 Then Console.WriteLine("Operation complete")
        If (myESR And 2) > 0 Then Console.WriteLine("Request Control")
        If (myESR And 4) > 0 Then Console.WriteLine("Query Error")
        If (myESR And 8) > 0 Then Console.WriteLine("Device dependent error")
        If (myESR And 16) > 0 Then
            Console.WriteLine("Execution Error; Program aborted") 'Output error message
            Stop 'Stop software
        End If
        If (myESR And 32) > 0 Then
            Console.WriteLine("Command Error; Program aborted") 'Output error message
            Stop 'Stop software
        End If
        If (myESR And 64) > 0 Then Console.WriteLine("User request")
        If (myESR And 128) > 0 Then Console.WriteLine("Power on")
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub

```



```

End Try
End Sub

```

11.17.2 Using Marker and Delta Marker

11.17.2.1 Shape Factor Measurement (using n dB down)

The n-dB-down function of the R&S ESR is used twice to determine the shape factor of a filter (ratio of bandwidths at 60 dB and 3 dB below the filter maximum).

The following example is again based on a signal with a level of -30 dBm at 100 MHz. The shape factor is determined for the 30 kHz resolution bandwidth. The default setting of the R&S ESR is used for measurements (SetupInstrument).

```

REM *****
Public Sub ShapeFactor()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
'----- Set frequency -----
CALL InstrWrite (analyzer, "FREQ:SPAN 1 MHz")
'Span
CALL InstrWrite (analyzer, "BAND:RES 30 kHz")
'Resolution bandwidth
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
'----- Measure 60 dB value -----
CALL InstrWrite (analyzer, "CALC:MARK:PEXC 6 DB")
'Peak excursion
CALL InstrWrite (analyzer, "CALC:MARK:STAT ON")
'Marker1 on
CALL InstrWrite (analyzer, "CALC:MARK:TRAC 1")
'Assign marker1 to trace1
CALL InstrWrite (analyzer, "CALC:MARK:MAX") 'Set marker1 to 100 MHz
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:NDBD 45 dB")
'Read out bandwidth measured at
'45 dB
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:NDBD:RES?")
CALL InstrRead(analyzer, result$)
result60 = Val(result$)
'----- Measure 3 dB down value-----
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:NDBD 3 dB")
'Read out bandwidth measured at
'3 dB
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:NDBD:RES?")
CALL InstrRead(analyzer, result$)
result3 = Val(result$)
'----- Read out shape factor-----

```

```
Print "Shapefaktor 60 dB/3 dB:";result60/result3
END SUB
REM *****
```

11.17.2.2 Measuring the Third Order Intercept Point

The third order intercept point (TOI) is the (virtual) level of two adjacent useful signals at which the intermodulation products of third order have the same level as the useful signals.

The intermodulation product at f_{s2} is obtained by mixing the first harmonic of the useful signal P_{N2} with signal P_{N1} , the intermodulation product at f_{s1} by mixing the first harmonic of the useful signal P_{N1} with signal P_{N2} .

$$f_{s1} = 2 \times f_{n1} - f_{n2} \quad (1)$$

$$f_{s2} = 2 \times f_{n2} - f_{n1} \quad (2)$$

The following example is based on two adjacent signals with a level of -30 dBm at 100 MHz and 110 MHz. The intermodulation products lie at 90 MHz and 120 MHz according to the above formula. The frequency is set so that the examined mixture products are displayed in the diagram. Otherwise, the default setting of the R&S ESR is used for measurements (SetupInstrument).

```
REM *****
Public Sub TOI()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Set status registers
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: display on'OFF: off
'----- Set frequency -----
CALL InstrWrite (analyzer, "FREQ:START 85 MHz;STOP 125 MHz")
'Span
'----- Set level -----
CALL InstrWrite (analyzer, "DISP:WIND:TRAC:Y:RLEV -20 dBm")
'Reference level
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
'----- TOI measurement -----
CALL InstrWrite (analyzer, "CALC:MARK:PEXC 6 DB")
'Peak excursion
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:TOI ON")
'Switch on TOI measurement
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:TOI:RES?")
'and read out results
CALL InstrRead(analyzer, result$)
'----- Read out result -----
Print "TOI [dBm]:";result$
```

```
END SUB
REM *****
```

11.17.2.3 Measuring the AM Modulation Depth

The example below is based on an AM-modulated signal at 100 MHz with the following characteristics:

Carrier signal level	-30 dBm
AF frequency	100 kHz
Modulation depth	50 %

The default setting of the analyzer for measurements can be used for the measurements described below (SetupInstrument).

```
REM *****
Public Sub AMMod()
result$ = Space$(100)
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "BAND:RES 30 kHz") 'Set appropriate RBW
'----- Peak search -----
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:MARK:PEXC 6 DB")
'Peak excursion
CALL InstrWrite (analyzer, "CALC:MARK:STAT ON")
'Marker 1 on
CALL InstrWrite (analyzer, "CALC:MARK:TRAC 1")
'Assign marker1 to trace1
'----- Measure modulation depth -----
CALL InstrWrite (analyzer, "CALC:MARK:MAX;FUNC:MDEP ON")
'Marker to Peak;
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:MDEP:RES?")
'Measure mod. depth
CALL InstrRead(analyzer, result$) 'Read out result
'----- Read out result -----
Print "AM Mod Depth [%]:";result$
END SUB
REM *****
```

11.17.3 Limit Lines and Limit Test

The example below shows the definition and use of a new limit line 5 for trace 1 with the following characteristics:

- Upper limit line
- Absolute x-axis in the frequency range
- 7 reference values:

- 120 MHz/-70 dB,
- 126 MHz/-40 dB,
- 127 MHz/-40 dB,
- 128 MHz/-10 dB,
- 129 MHz/-40 dB,
- 130 MHz/-40 dB,
- 136 MHz/-70 dB
- Relative y-axis with unit dB
- Absolute threshold at –75 dBm
- No margin

The signal of the integrated calibration source (128 MHz, -30 dBm) is used to check the limit test.

```

REM *****
Public Sub LimitLine()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "FREQUENCY:CENTER 128 MHz;Span 10 MHz")
'Span
CALL InstrWrite (analyzer, "Diag:Serv:Inp Cal")
'Cal signal on
'----- Definition of limit lines -----
CALL InstrWrite (analyzer, "CALC:LIM5:NAME 'TEST1'")
'Define name
CALL InstrWrite (analyzer, "CALC:LIM5:COMM 'Upper limit'")
'Define comment
CALL InstrWrite (analyzer, "CALC:LIM5:TRAC 1")
'Assign trace
CALL InstrWrite (analyzer, "CALC:LIM5:CONT:DOM FREQ")
'Define x-axis range
CALL InstrWrite (analyzer, "CALC:LIM5:CONT:MODE ABS")
'Define x-axis scaling
CALL InstrWrite (analyzer, "CALC:LIM5:UNIT DB")
'Define y-axis unit
CALL InstrWrite (analyzer, "CALC:LIM5:UPP:MODE REL")
'Define y-axis scaling
'----- Definition of data points and threshold -----
xlimit$ = "CALC:LIM5:CONT 120 MHz,126 MHz,127 MHz,128 MHz,129 MHz,130 MHz,136 MHz"
CALL InstrWrite (analyzer, xlimit$) 'Set values for x-axis
CALL InstrWrite (analyzer, "CALC:LIM5:UPP -70,-40,-40,-20,-40,-40,-70")
'Set values for y-axis
CALL InstrWrite (analyzer, "CALC:LIM5:UPP:THR -75 DBM")
'Set y threshold (only
'possible for relative
'y-axis)
'----- Definition of margin or x/y offset-----
'A margin or an x/y offset can be defined here.

```

```

'----- Activate and evaluate the limit line -----
CALL InstrWrite (analyzer, "CALC:LIM5:UPP:STAT ON")
'Activate line 5
CALL InstrWrite (analyzer, "CALC:LIM5:STAT ON")
'Activate limit check
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:LIM5:FAIL?")
'Query result of limit check
CALL InstrRead(analyzer, result$) 'Result: 1 (= FAIL)
'----- Read out result -----
Print "Limit Result Line 5: ";result$
'----- Evaluate limit line by means of status register -----
CALL InstrWrite (analyzer, "*CLS") 'Reset status register
'----- Measure -----
CALL InstrWrite (analyzer, "INIT;*OPC") 'Perform sweep with sync
CALL viEnableEvent(analyzer, VI_EVENT_SERVICE_REQ, VI_QUEUE, 0)
Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, VI_NULL, VI_NULL)
IF (status = VI_SUCCESS) THEN CALL Srq 'If SRQ is recognized =>
'subroutine for evaluation
'----- Read out result -----
IF (status% = 1) THEN
CALL InstrWrite (analyzer, "STAT:QUES:LIM1:COND?")
'Read out STAT:QUES:LIMit
'register
CALL InstrRead(analyzer, result$)
IF ((Val(result$) And 16) <> 0) THEN
Print "Limit5 failed"ELSE
Print "Limit5 passed"END IF
END IF
END SUB
REM *****

```

11.17.4 Measuring the Channel and Adjacent Channel Power

In the following example, the channel and adjacent channel power is first measured on a signal with a level of 0 dBm at 800 MHz to IS95. Then the channel and adjacent channel power is measured on a GSM signal at 935.2 MHz with fast ACP measurement (FAST ACP).

In addition, the limit test is activated.

```

REM *****
Public Sub ACP()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Set status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: display on

```

```

'OFF: off
'----- Set frequency -----
CALL InstrWrite (analyzer, "FREQ:CENT 800 MHz")
'Set frequency
'----- Set level -----
CALL InstrWrite (analyzer, "DISP:WIND:TRAC:Y:RLEV 10 dBm")
'Reference level
'----- Example 1: Configure CP/ACP for CDMA-----
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:SEL ACP")
'ACP measurement on
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:PRES F8CDMA")
'Select CDMA800 FWD
CALL InstrWrite (analyzer, "SENS:POW:ACH:ACP 2")
'Select 2 adjacent channels
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES ACP")
'Optimize settings
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES:RLEV")
'Optimize reference level
CALL InstrWrite (analyzer, "SENS:POW:ACH:MODE ABS")
'Absolute measurement
CALL InstrWrite (analyzer, "SENS:POW:HSP ON")
'Fast ACP measurement
'----- Perform measurement and query results -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:RES? ACP")
'Query result CALL InstrRead(analyzer, result$)
'----- Read out result -----
Print "Result (CP, ACP low, ACP up, Alt low, Alt up):"Print result$
'----- Example 2: Configure CP/ACP manually for GSM-----
result$ = Space$(100)
CALL InstrWrite (analyzer, "FREQ:CENT 935.2 MHz")
'Set frequency
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:SEL ACP")
'ACP measurement on
CALL InstrWrite (analyzer, "SENS:POW:ACH:ACP 1")
'1 adjacent channel
CALL InstrWrite (analyzer, "SENS:POW:ACH:BAND 200 KHZ")
'Channel bandw. 200 kHz
CALL InstrWrite (analyzer, "SENS:POW:ACH:BAND:ACH 200 KHZ")
'Adjacent channel band-
'width 200 kHz
CALL InstrWrite (analyzer, "SENS:POW:ACH:SPAC 200 KHZ")
'Channel spacing 200 kHz
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES ACP")
'Optimize settings
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES:RLEV")
'Optimize reference level
CALL InstrWrite (analyzer, "SENS:POW:ACH:MODE ABS")
'Absolute measurement
'----- Start measurement and query result -----

```

```

CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:RES? ACP")
'Query result
CALL InstrRead(analyzer, result$)
'----- Read out result -----
Print "Result (CP, ACP low, ACP up):"Print result$
'----- Active limit check -----
result$ = Space$(100)
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH 30 DB, 30 DB")
'Set relative limit
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH:ABS -35 DBM,-35 DBM")
'Set absolute limit
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH:STAT ON")
'Rel. limit check on
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH:ABS:STAT ON")
'Abs. limit check on
CALL InstrWrite (analyzer, "CALC:LIM:ACP ON")
'Limit check on
'----- Start measurement and query result -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:LIM:ACP:ACH:RES?")
'Query result of limit check
CALL InstrRead(analyzer, result$)
'----- Read out result -----
Print "Result Limit Check:";result$
END SUB
REM *****

```

Example of channel/adjacent-channel power measurement

```
POW:ACH:ACP 3
```

Sets the number of adjacent/alternate channels to 3.

```
POW:ACH:BAND 30 KHZ
```

Sets the bandwidth of the transmission channel to 30 kHz.

```
POW:ACH:BAND:ACH 40 KHZ
```

Sets the bandwidth of each adjacent channel to 40 kHz.

```
POW:ACH:BAND:ALT1 50 KHZ
```

Sets the bandwidth of each alternate channel to 50 kHz.

```
POW:ACH:BAND:ALT2 60 KHZ
```

Sets the bandwidth of alternate channel 2 to 60 kHz.

```
POW:ACH:SPAC 30 KHZ
```

Sets the spacing between the transmission channel and the adjacent channel to 30 kHz, the spacing between the transmission channel and alternate channel 1 to 60 kHz, and the spacing between the transmission channel and alternate channel 2 to 90 kHz.

```
POW:ACH:SPAC:ALT1 100 KHZ
```

Sets the spacing between the alternate adjacent channels and the TX channel. For details refer to [\[SENSe:\]POWer:ACHannel:SPACing:ALTernate<channel>](#) on page 733.

```
POW:ACH:SPAC:ALT2 140 KHZ
```

Sets the spacing between the transmission channel and alternate channel 2 to 140 kHz.

```
POW:ACH:MODE ABS
```

Switches on absolute power measurement.

```
CALC:MARK:FUNC:POW:SEL ACP
```

Switches on the adjacent-channel power measurement.

```
INIT:CONT OFF
```

Switches over to single sweep mode.

```
INIT;*WAI
```

Starts a sweep and waits for the end of the sweep.

```
CALC:MARK:FUNC:POW:RES? ACP
```

Queries the result of adjacent-channel power measurement.

```
POW:ACH:REF:AUTO ONCE
```

Defines the measured channel power as the reference value for relative power measurements.

If the channel power only is to be measured, all commands relating to adjacent/alternate channel bandwidth and channel spacings are omitted. The number of adjacent/alternate channels is set to 0 with [\[SENSe:\]POWer:ACHannel:ACPairs](#) on page 730.

11.17.5 Occupied Bandwidth Measurement

In the following example, the bandwidth is to be found in which 95 % of the power of a GSM signal is contained. Signal frequency is 935.2 MHz; channel bandwidth is 200 kHz.

```
REM *****
Public Sub OBW()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Set status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: display on
'OFF: off
```



```

'----- Configure R&S FSV for OBW for GSM-----
CALL InstrWrite (analyzer, "FREQ:CENT 935.2 MHz")
'Set frequency
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:SEL OBW")
'OBW measurement on
CALL InstrWrite (analyzer, "SENS:POW:ACH:BAND 200 KHZ")
'Channel bandw. 200 kHz
CALL InstrWrite (analyzer, "SENS:POW:BWID 95PCT")
'Percentage of power
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES OBW")
'Set frequency and optimize reference level
CALL InstrWrite (analyzer, "SENS:POW:ACH:PRES:RLEV")
CALL InstrWrite (analyzer, "SENS:POW:NCOR OFF")
'Noise correction
'OFF: switch off
'ON: switch on
'----- Perform measurement and query results -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:POW:RES? OBW")
'Query result
CALL InstrRead(analyzer, result$)
Print result$
END SUB
REM *****

```

11.17.6 Time Domain Power Measurement

In the following example, the mean carrier power of a signal with 300 kHz bandwidth at 100 MHz is to be determined. In addition, the peak power, the rms value and the standard deviation are measured. To do this, the time-domain-power measurement functions are used.

```

REM *****
Public Sub TimeDomainPower()
result$ = Space$(100)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Set status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: display on
'OFF: off
'----- Configure R&S FSV for time domain power measurement -----
CALL InstrWrite (analyzer, "FREQ:CENT 100 MHz;SPAN 0Hz")
'Set frequency
CALL InstrWrite (analyzer, "BAND:RES 300 kHz")
'Resolution bandwidth
CALL InstrWrite (analyzer, "SWE:TIME 200US") 'Sweep time
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:SUMM:PPE ON")

```

```

'Peak measurement on
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:SUMM:MEAN ON")
'Mean measurement on
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:SUMM:RMS ON")
'RMS measurement on
CALL InstrWrite (analyzer, "CALC:MARK:FUNC:SUMM:SDEV ON")
'Standard deviation on
'----- Perform measurement and query results -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
'Query results:
query$ = "CALC:MARK:FUNC:SUMM:PPE:RES?;" 'Peak measurement
query$ = query$ + ":CALC:MARK:FUNC:SUMM:MEAN:RES?;" 'Mean measurement
query$ = query$ + ":CALC:MARK:FUNC:SUMM:RMS:RES?;" 'RMS measurement
query$ = query$ + ":CALC:MARK:FUNC:SUMM:SDEV:RES?" 'Standard deviation
CALL InstrWrite (analyzer, query$)
CALL InstrRead(analyzer, result$)
Print result$
END SUB
REM *****

```

11.17.7 Fast Power Measurement on Power Ramps

A frequent task in mobile radio tests is measurement of a DUT at various power control levels at the highest possible speed. The R&S ESR offers two test functions for this task, which can be used depending on the signal characteristics.

In the following, the two methods are presented by means of two examples.

11.17.7.1 Power Measurement with Multi-Summary Marker

The multi-summary marker function is suitable for measuring the power of a sequence of pulses with the following characteristics:

- The pulses occur at identical time intervals, which is typical of GSM transmission in slots, for example.
- The level of the first signal is reliably above threshold.
- The subsequent pulses may have any levels.
- The function uses the first pulse as a trigger signal. The power of the subsequent pulses is determined exclusively via the timing pattern selected for the pulse sequence. The function is, therefore, suitable for adjustments where the DUT output power varies considerably and is not reliably above the trigger threshold.
- The measurement accuracy is determined by the ratio of pulse duration to total measurement time; this should not be below 1:50.
- The function always uses TRACE 1.

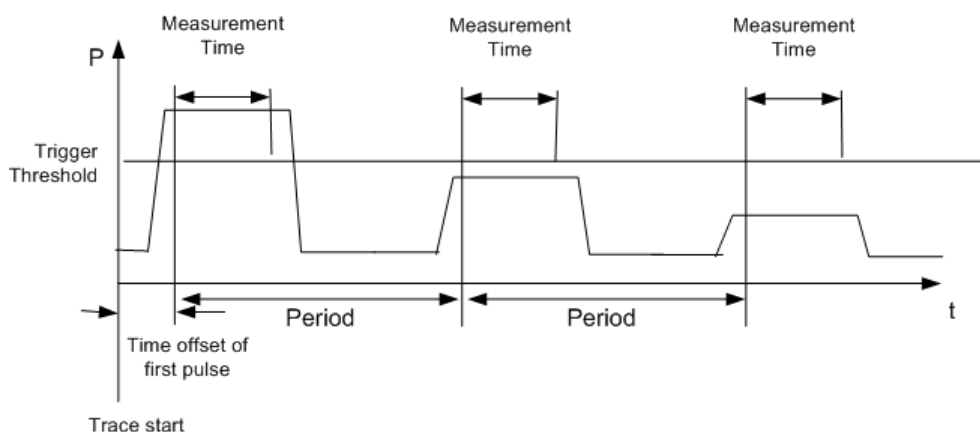


Figure 11-6: Block diagram illustrating signal processing in analyzer

In the example below, a GSM pulse sequence of 8 pulses is measured with an offset of 50 μs of the first pulse, 450 μs measurement time/pulse and 576.9 μs pulse period.

```

REM *****
Public Sub MultiSumMarker()
result$ = Space$(200)
'----- R&S FSV default setting-----
CALL SetupStatusReg 'Configure status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep mode
CALL InstrWrite (analyzer, "SYST:DISP:UPD ON")
'ON: switch display on
'OFF: switch display off
'----- Configure R&S FSV for power measurement in time domain -----
CALL InstrWrite (analyzer, "FREQ:CENT 935.2 MHz;SPAN 0Hz")
'Frequency setting
CALL InstrWrite (analyzer, "DISP:WIND:TRAC:Y:RLEV 10 dBm")
'Set reference level to 10 dB
CALL InstrWrite (analyzer, "INP:ATT 30 dB") 'Set input attenuation to 30 dB
CALL InstrWrite (analyzer, "BAND:RES 1 MHz;VID 3 MHz")
'Bandwidth setting
CALL InstrWrite (analyzer, "DET RMS") 'Select RMS detector
CALL InstrWrite (analyzer, "TRIG:SOUR VID") 'Trigger source: video
CALL InstrWrite (analyzer, "TRIG:LEV:VID 50 PCT")
'Trigger threshold: 50 %
CALL InstrWrite (analyzer, "SWE:TIME 50ms") 'Sweep time  $\geq$  1 frame
'----- Perform measurement and query results -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep with sync
'Query results:
cmd$ = "CALC:MARK:FUNC:MSUM?"cmd$ = cmd$ + "50US," 'Offset of first pulse
cmd$ = cmd$ + "450US," 'Measurement time
cmd$ = cmd$ + "576.9US," 'Pulse period
cmd$ = cmd$ + "8" 'Number of bursts
CALL InstrWrite (analyzer, cmd$)
CALL InstrRead(analyzer, result$) 'Read results

```

```

Print result$
END SUB
REM *****

```

11.17.7.2 Multi-Burst Power Measurement

The multi-burst power measurement function is suitable for measuring the power of a sequence of pulses with the following characteristics:

- The pulses occur at variable time intervals.
- The levels of all pulses of the sequence are reliably above the trigger threshold, or an external trigger signal is used.
- The function requires one trigger event per pulse. This means that if the video trigger or the IF power trigger is used, the levels of all pulses must be above the trigger threshold.
- The function is, therefore, particularly suitable for re-measuring DUTs already adjusted and whose output power is within the specified range. The measurement is optimized for minimum overhead relative to the actual measurement time.

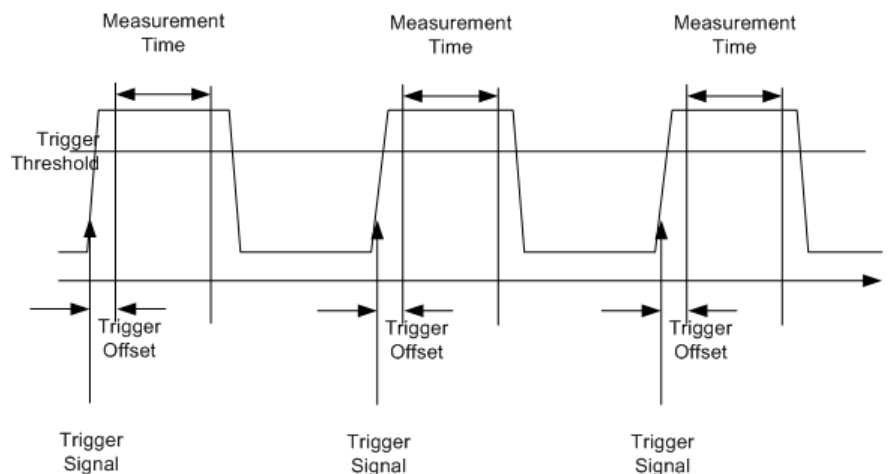


Figure 11-7: Block diagram illustrating signal processing in analyzer

Either the root-mean-square power or the peak power is measured, depending on whether the RMS detector or the PEAK detector is selected. The function always uses TRACE 1.

The following parameters are to be set for this measurement:

- Analyzer frequency
- Resolution bandwidth
- Measurement time per single pulse
- Trigger source
- Trigger threshold
- Trigger offset
- Type of power measurement (PEAK, MEAN)

- Number of pulses to be measured

During the measurement, each pulse is mapped into a pixel of the screen, i.e. any change of the trace can be detected only at the left-hand edge of the screen. Maximum measurement speed is as usual achieved with the display switched off.

In the example below, a GSM pulse sequence of 8 pulses is measured with 5 μ s trigger offset, 434 μ s measurement time/pulse, video trigger with 50 % trigger threshold, and peak detection:

```
REM *****
Public Sub MultiBurstPower()
result$ = Space$(200)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Configure status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep mode
CALL InstrWrite (analyzer, "SYST:DISP:UPD OFF")
'OFF: display off
'----- Perform measurement and query results -----
cmd$ = "MPOW? "cmd$ = cmd$ + "935.2 MHZ," 'Center frequency
cmd$ = cmd$ + "1 MHZ," 'Resolution bandwidth
cmd$ = cmd$ + "434US," 'Measurement time
cmd$ = cmd$ + "VID," 'Trigger source
cmd$ = cmd$ + "50PCT," 'Trigger threshold
cmd$ = cmd$ + "1US," 'Trigger offset
cmd$ = cmd$ + "PEAK," 'Peak detector
cmd$ = cmd$ + "8" 'Number of bursts
CALL InstrWrite (analyzer, cmd$)
CALL InstrRead(analyzer, result$) 'Read results
Print result$
END SUB
REM *****
```

11.17.8 Fast Level Measurement Using Frequency Lists

A typical task for the R&S ESR is power measurement at a number of frequency points, e.g. at multiples of the fundamental (harmonics measurement), or at frequencies defined by a mobile radio standard (e.g. spectrum due to transients at ± 200 kHz, ± 400 kHz, etc about the carrier frequency of a GSM signal). In many cases, different level and/or bandwidth settings are required for the different frequency points to match the channel spacing and meet the requirements of dynamic range.

Especially for this application, the R&S ESR offers a number of remote-control functions (commands available in SENSE:LIST subsystem) that allow level measurement based on a frequency list with different instrument settings assigned to different frequencies. Not only the frequency list can be programmed, but also the measurement types (PEAK, RMS, AVG) to be performed simultaneously can be selected.

The example below describes a harmonics measurement on a dual-band amplifier. The harmonics level in general decreases as the frequency increases. To boost mea-

surement sensitivity, therefore, the reference level is lowered by 10 dB from the third harmonic.

The following settings are used:

Reference level:	10.00 dBm up to first harmonic, 0 dBm from 2nd harmonic
RF attenuation:	20 dB
Electronic attenuation:	0 dB (OFF)
Filter type:	NORMal
RBW:	1 MHz
VBW:	3 MHz
Measurement time:	300 µs
Trigger delay:	100 µs
Trigger:	video, 45 %

Frequency	Type
935.2 MHz	GSM 900 fundamental
1805.2 MHz	GSM 1800 fundamental
1870.4 MHz	GSM 900 2 nd harmonic
2805.6 MHz	GSM 900 3 rd harmonic
3610.4 MHz	GSM 1800 2 nd harmonic
3740.8 MHz	GSM 900 4 th harmonic
5815.6 MHz	GSM 1800 3 rd Harmonic

The frequencies are selected in ascending order to minimize system-inherent waiting times resulting from frequency changes.

At each frequency point the peak power and the rms power are measured. The peak power and the rms power values are stored alternately in the results memory.

```
REM *****
Public Sub FrequencyList()
result$ = Space$(500)
'----- R&S FSV default setting -----
CALL SetupStatusReg 'Configure status register
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Single sweep mode
CALL InstrWrite (analyzer, "SYST:DISP:UPD OFF") 'Display off
'-----Configure R&S FSV for power measurement based on frequency list -
CALL InstrWrite (analyzer, "TRIG:LEV:IFP -20 dBm")
'Set IF power trigger level
CALL InstrWrite (analyzer, "LIST:POWER:SET ON,ON,OFF,IFP,POS,100us,0")
'----- Perform measurement and query results -----
```

```

cmd$ = "LIST:POWer?"cmd$ = cmd$ + "935.2 MHz, 10 dBm, 20 dB,OFF,NORM,1 MHz,3 MHz,
300 us, 0, "
cmd$ = cmd$ + "1805.2 MHz, 10 dBm, 20 dB,OFF,NORM,1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "1870.4 MHz, 10 dBm, 20 dB,OFF,NORM,1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "2805.6 MHz, 0 dBm, 20 dB,OFF,NORM,1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "3610.4 MHz, 10 dBm,20 dB,OFF,NORM,1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "3740.8 MHz, 0 dBm, 20 dB, OFF, NORM, 1 MHz,3 MHz,300 us, 0, "
cmd$ = cmd$ + "5815.6 MHz, 0 dBm, 20 dB, OFF, NORM, 1 MHz, 3 MHz, 300 us, 0"
CALL InstrWrite (analyzer, cmd$)
CALL InstrRead(analyzer, result$)
Print result$
END SUB
REM *****

```

11.17.9 Level Correction of Transducers

In more complex test systems, the frequency response of the test setup must be taken into account in all power measurements to avoid any measurement errors being introduced from sources other than the DUT.

The R&S ESR offers the possibility of defining a frequency-dependent attenuation correction factor (transducer factor).

In the example below, a factor with the following characteristics is defined:

Name:	Transtest
Unit:	dB
Scaling:	lin
Comment:	simulated cable correction
Frequency	Level
10 MHz	0 dB
100 MHz	3 dB
1 GHz	7 dB
3 GHz	10 dB

The factor is defined and can be activated as required.

```

REM *****
Public Sub TransducerFactor()
'----- Define transducer factor -----
CALL InstrWrite (analyzer, "CORR:TRAN:SEL 'TRANSTEST'")
'Define "Transtest" transducer factor
CALL InstrWrite (analyzer, "CORR:TRAN:UNIT 'DB'")
'Unit 'dB'
CALL InstrWrite (analyzer, "CORR:TRAN:SCAL LIN")
'Linear frequency-axis
CALL InstrWrite (analyzer, "CORR:TRAN:COMM 'Simulated cable correction'")

```

```

cmd$ = "CORR:TRAN:DATA" 'Enter frequency and level
cmd$ = cmd$ + "10 MHz, 0," 'values. Level values without
cmd$ = cmd$ + "100 MHz, 3," 'unit!
cmd$ = cmd$ + "1GHz, 7,"cmd$ = cmd$ + "3GHz, 10"
CALL InstrWrite (analyzer,cmd$) 'Enter frequency and level values
'----- Activate transducer -----
CALL InstrWrite (analyzer, "CORR:TRAN:STAT ON")
'Activate transducer factor
END SUB
REM *****

```

11.17.10 Measuring the Magnitude and Phase of a Signal

Due to the R&S ESR's internal architecture, it is capable of measuring and outputting the magnitude and phase of a signal in addition to its power values. This opens up a variety of possibilities for more in-depth analysis (FFT, demodulation, etc).

I/Q data is stored in memory areas each containing 512 k words. Hardware triggering controls the memory.

The following example shows the steps necessary to collect data at a predefined sampling rate and read it from the I/Q memory.

1. Data is output in the form of voltage values referred to the analyzer input. Data can be read in binary or ASCII format.
 - In binary format, the length information carried in the message header is evaluated and used for calculating the x-axis values.
 - In ASCII format, only a list of voltage values is output.
2. Binary data is read in three steps:
3. The number of digits carrying the length information is read.
4. The length information itself is read.
5. The trace data is read.

This procedure is necessary with programming languages like Visual Basic which support only structures of identical data types (arrays), whereas the binary data format uses different data types in the header and the data section.



The arrays for measured data are dimensioned in such a way that they can accommodate the I/Q data of the R&S ESR (2 × 512 k).

```

REM *****
Public Sub ReadIQData()
'----- Create variables -----
Dim IData(131072) As Single 'Buffer for floating-point
'I data (= 512*1024 bytes)
Dim QData(131072) As Single 'Buffer for floating-point

```



```

'Q data (= 512*1024 bytes)
'Note:
'Visual Basic cannot read in
'data volumes larger than
'512 k words!
Dim digits As Byte 'No. of digits as length
Dim IQBytes As Long 'Length of trace data in bytes
Dim IQValues As Long 'No. of meas. values in buffer
Dim retCount As Integer 'Return count from read
asciiResult$ = Space$(6553600) 'Buffer for ASCII I/Q data
' (= 25*2*1024 bytes)
result$ = Space$(100) 'Buffer for simple results
'----- Default setting -----
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "TRAC:IQ:STAT ON")
'Activate I/Q data
'acquisition mode; must be
'done before TRAC:IQ:SET !
'Select number of test points
' (= 512 * 1024 - 512) at
'RBW 10 MHz, 'sample rate 32 MHz,
'trigger free run, pos. trigger
'edge and 0 s trigger delay.
CALL InstrWrite (analyzer, "TRAC:IQ:SET NORM,10 MHz,32 MHz,IMM,POS,0,130560")
'----- Read-out in binary format-----
CALL InstrWrite (analyzer, "FORMAT REAL,32")
'Set binary format
CALL InstrWrite (analyzer, "TRAC:IQ:DATA?")
'Measure + read out I/Q data
CALL viRead(analyzer, result$, 2, retCount)
'Read and store length for
digits = Val(Mid$(result$, 2, 1)) 'number of digits
result$ = Space$(100) 'Re-initialize buffer
CALL viRead(analyzer, result$, digits, retCount)
'Read and store length
IQBytes = Val(Left$(result$, digits))
IQBytes = IQBytes/2 'Divide no. per buffer in half
CALL viRead(analyzer, IData(0), IQBytes, retCount)
'Read I data in buffer
CALL viRead(analyzer, QData(0), IQBytes, retCount)
'Read Q data in buffer
CALL viRead(analyzer, result$, 1, retCount)
'Read in end character <NL>
'----- Output of binary data as frequency/level pair -----
IQValues = IQBytes/4 'Single Precision = 4 Bytes
For i = 0 To IQValues - 1
Print "I-Value["; i; "] = "; IData(i)
Print "Q-Value["; i; "] = "; QData(i)
Next i
'----- Read-out in ASCII format -----

```

```

CALL InstrWrite (analyzer, "FORMAT ASCII") 'Set ASCII format
CALL InstrWrite (analyzer, "TRAC:IQ:DATA?")
'Re-measure and read out
'I/Q data
CALL InstrRead(analyzer, asciiResult$)
CALL InstrWrite (analyzer, "TRAC:IQ:STAT OFF")
'Stop I/Q data aquisition
'mode if no further
'measurements are to be
'done
END SUB
REM *****

```

11.17.11 Reading and Writing Files

11.17.11.1 Reading a File from the Instrument

In the following example, the TEST1.R&S FSV.DFL file stored under C:\R_S\Instr\user is read from the instrument and stored in the controller.

```

REM *****
Public Sub ReadFile()
'----- Generate variables -----
Dim digits As Byte 'Number of digits of
'length information
Dim fileBytes As Long 'Length of file with trace data
'in bytes
result$ = Space$(100) 'Buffer for simple results
'----- Default setting of status register -----
CALL SetupStatusReg 'Configure status register
'----- Read out file -----
CALL InstrWrite (analyzer, "MMEM:DATA? 'C:\R_S\Instr\user\TEST1.R&S FSV.DFL'")
'Select file
CALL ilrd(analyzer, result$, 2) 'Read and store number of
digits = Val(Mid$(result$, 2, 1)) 'digits of length information
CALL ilrd(analyzer, result$, digits) 'Read and store length
fileBytes = Val(Left$(result$, digits)) 'information
FileBuffer$ = Space$(fileBytes) 'Buffer for file
CALL ilrd(analyzer, FileBuffer, fileBytes)
'Read file into buffer
CALL ilrd(analyzer, result$, 1) 'Read terminator <NL>
'----- Store file to controller -----
Open "TEST1.R&S FSV.DFL" For Output As #1
Print #1, FileBuffer; '; to avoid linefeed at
'end of file
Close #1

```

```
END SUB
REM *****
```

11.17.11.2 Creating a File on the Instrument

In the following example, the TEST1.R&S FSV.DFL file available on the controller is stored in the instrument under C:\R_S\Instr\user\DUPLICAT.R&S FSV.DFL.

```
REM *****
Public Sub WriteFile()
'----- Generate variables -----
FileBuffer$ = Space$(100000) 'Buffer for file
Dim digits As Long 'Number of digits of
'length information
Dim fileBytes As Long 'Length of file in bytes
fileSize$ = Space$(100) 'Length of file as a string
result$ = Space$(100) 'Buffer for simple results
'----- Default setting of status register -----
CALL SetupStatusReg 'Configure status register
'----- Prepare the definite length block data -----
fileBytes = FileLen("H:\work\vb\TEST1.R&S FSV.DFL")
'Determine length of file
fileSize$ = Str$(fileBytes)
digits = Len(fileSize$) - 1 'Determine number of digits of
fileSize$ = Right$(fileSize$, digits) 'length information
FileBuffer$ = "#" + Right$(Str$(digits), 1) + fileSize$
'Store length information in
'file buffer
'----- Read file from controller -----
Open "H:\work\vb\TEST1.R&S FSV.DFL" For Binary As #1
FileBuffer$ = FileBuffer$ + Left$(Input(fileBytes, #1), fileBytes)
Close #1
'----- Write file -----
CALL InstrWrite (analyzer, "SYST:COMM:GPIB:RTER EOI") 'Set receive
'terminator on the
'instrument
CALL InstrWrite (analyzer, "MMEM:DATA
'DUPLICAT.R&S FSV.DFL', " + FileBuffer$)
'Select file
END SUB
REM *****
```

11.17.12 Spectrum Emission Mask Measurement

You can configure Spectrum Emission Mask measurements via XML files provided for different standards or by defining ranges and parameters. For both ways an example is given.

11.17.12.1 Using Predefined Standard Wibro

In the following example, the Spectrum Emission Mask measurement is configured using a predefined standard XML file.

```

REM *****
'----- General settings of the instrument -----
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Switch to single sweep
CALL InstrWrite (analyzer, "INIT:IMM;*WAI") 'Make sure no sweep is running
CALL InstrWrite (analyzer, ":SENSE1:SWEep:MODE ESpectrum")
'Set measurement mode
Rem After preset 3 ranges are available where the middle one is
Rem the reference range for calculating the TX power
CALL InstrWrite (analyzer, ":SENSE1:FREQuency:CENTer 2.2 GHz")
'Center frequency 2.2 GHz
CALL InstrWrite (analyzer, ":SENSE1:DETEctor1 RMS")
'Set RMS detector
'----- Setting up the gated trigger -----
CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATE ON")
'Switch on the external gate mode
CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATE:SOURce EXTernal")
'Set external gate source
CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATE:HOLDoff 0s")
'Set delay time to 0 s
CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATE:LENGth 200 US")
'Set time interval
'----- Setting the standard -----
CALL InstrWrite (analyzer, "SENSE1:ESpectrum:PRESet:STANDARD
'WIBRO\DL\PowerClass_29_40.xml")
'Set WiBro standard
'----- Measuring -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end
'----- Reading out results -----
CALL InstrWrite (analyzer, ":TRACe1:DATA? LIST")
'Query list results
CALL InstrWrite (analyzer, ":CALCulate:LIMit:FAIL?")
'Query result of limit check
CALL InstrRead(analyzer, result$)
REM *****

```

11.17.12.2 Defining 5 Ranges with all Parameters

In the following example, the Spectrum Emission Mask measurement is configured by defining ranges and parameters.

```

REM *****
'----- General settings of the instrument -----
CALL InstrWrite (analyzer, "*RST") 'Reset instrument

```

```

CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Switch to single sweep
CALL InstrWrite (analyzer, "INIT:IMM;*WAI") 'Make sure no sweep is running
CALL InstrWrite (analyzer, ":SENSE1:SWEep:MODE ESpectrum")
'Set measurement mode
Rem After preset 3 ranges are available where the middle one is
Rem the reference range for calculating the TX power
CALL InstrWrite (analyzer, ":SENSE1:FREQuency:CENTer 2.2GHz")
'Center frequency 2.2 GHz
CALL InstrWrite (analyzer, ":SENSE1:DETEctor1 RMS")
'Set RMS detector
CALL InstrWrite (analyzer, ":TRIGger1:SEQUence:SOURce IMMEDIATE")
'Trigger setup
'----- Setting up the gated trigger -----
Rem If a free run trigger is not appropriate a gated trigger can
Rem the be set up (just comment in the following lines).
Rem CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATE ON")
Rem Switch on the external gate mode
Rem CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATE:SOURce EXTERNAL")
Rem Set external gate source
Rem CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATE:HOLDoff 0s")
Rem Set delay time to 0 s
Rem CALL InstrWrite (analyzer, ":SENSE1:SWEep:EGATE:LENGth 200 US")
Rem Set time interval
'----- Setting the span -----
CALL InstrWrite (analyzer, ":SENSE1:FREQuency:SPAN 8 MHz")
'Set the span to 8 MHz
'----- Inserting new ranges -----
Rem Enlarge number of ranges to 5 by adding one at the end
Rem and one at the beginnig. This ensures that the reference range
Rem remains in the middle
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:INSert AFTEr")
'Insert a range after range 2
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:INSert BEFOre")
'Insert a range before range 1
'----- Defining the limit check for all ranges -----
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe:LIMit:STATe AND")
'Set check for absolute and 'relative limit
'----- Defining the reference range settings -----
Rem The bandwidth of the reference range limits the minimum span
Rem of the reference range definition later in the script.
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RTYPE CPOWer")
'Set power reference type
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:BWID 2 MHz")
'Set bandwidth
'----- Defining the settings of range 1 -----
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:FREQuency:STARt -4 MHz")
'Set the start frequency
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:FREQuency:STOP -2 MHz")
'Set the stop frequency
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:BANDwidth:RESolution 1 MHz")

```

Remote Control – Programming Examples

```

'Set the resolution bandwidth
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:FILTer:TYPE CFILTer")
'Set the channel filters
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:BANDwidth:VIDeo 3 MHz")
'Set the video bandwidth to 3 MHz
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:SWEep:TIME 20 ms")
'Set the sweep time to 20 ms
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:RLEVel 5 DBM")
'Set the reference level to 5 dBm
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:INPut:ATTenuation 20 DB")
'Set the attenuation to 20 dB
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:LIMit:ABSolute:STARt -50")
'Set an absolute limit of -50 dBm
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:LIMit:ABSolute:STOP -50")
'Set an absolute limit of -50 dBm
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:LIMit:RELative:STARt -70")
'Set a relative limit of -70 dBc
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe1:LIMit:RELative:STOP -60")
'Set a relative limit of -60 dBc
'----- Defining the settings of range 2 -----
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:FREQuency:STARt -2 MHz")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:FREQuency:STOP -1 MHz")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:BANDwidth:RESolution
100 kHz")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:FILTer:TYPE NORM")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:BANDwidth:VIDeo 300 kHz")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:SWEep:TIME 50 ms")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:RLEVel 10 DBM")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:INPut:ATTenuation 30 DB")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:LIMit:ABSolute:STARt
-40")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:LIMit:RELative:STARt
-60")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:LIMit:ABSolute:STOP -40")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe2:LIMit:RELative:STOP -40")
'----- Defining the settings of range 3 -----
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:FREQuency:STARt -1 MHz")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:FREQuency:STOP 1 MHz")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:BANDwidth:RESolution
30 kHz")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:FILTer:TYPE NORM")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:BANDwidth:VIDeo 100 kHz")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:SWEep:TIME 5 ms")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:RLEVel 20 DBM")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:INPut:ATTenuation 30 DB")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:LIMit:ABSolute:STARt 200")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:LIMit:ABSolute:STOP 200")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:LIMit:RELative:STARt 200")
CALL InstrWrite (analyzer, ":SENSE1:ESpectrum:RANGe3:LIMit:RELative:STOP 200")
'----- Defining the settings of range 4 -----

```

```

CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:FREQuency:STARt 1 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:FREQuency:STOP 2 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:BANDwidth:RESolution
100 kHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:FILTer:TYPE NORM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:BANDwidth:VIDeo 300 kHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:SWEep:TIME 50 ms")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:RLEVel 10 DBM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:INPut:ATTenuation 30 DB")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:LIMit:ABSolute:STARt
-40")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:LIMit:ABSolute:STOP -40")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:LIMit:RELative:STARt
-40")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe4:LIMit:RELative:STOP -60")
'----- Defining the settings of range 5 -----
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:FREQuency:STARt 2 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:FREQuency:STOP 4 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:BANDwidth:RESolution 1 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:FILTer:TYPE CFILter")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:BANDwidth:VIDeo 3 MHz")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:SWEep:TIME 20 ms")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:RLEVel 5 DBM")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:INPut:ATTenuation 20 DB")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:LIMit:ABSolute:STARt
-50")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:LIMit:ABSolute:STOP -50")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:LIMit:RELative:STARt -60")
CALL InstrWrite (analyzer, ":SENSe1:ESpectrum:RANGe5:LIMit:RELative:STOP -70")
'----- Measuring -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end
'----- Reading out results -----
CALL InstrWrite (analyzer, ":TRACe1:DATA? LIST")
'Query list results
CALL InstrWrite (analyzer, ":CALCulate:LIMit:FAIL?")
'Query result of limit check
CALL InstrRead(analyzer, result$)
REM *****

```

11.17.13 Spurious Emissions Measurement

In the following example, the Spurious Emissions measurement is configured by defining ranges and parameters.

```

REM *****
'----- General settings of the instrument -----
CALL InstrWrite (analyzer, "*RST") 'Reset instrument
Rem After preset 4 ranges are available. Range settings can be questioned

```

```

Rem independent from the set measurement mode.
'----- Deleting all ranges -----
Rem Delete all ranges to prepare for setting up a new measurement
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:DELeTe")
'Delete range 4
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:DELeTe")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:DELeTe")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:DELeTe")
'----- Defining the start frequency for all ranges -----
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:START 1000000")
Rem Setting the start frequency of range 1 will create the ranges and
Rem every other range value will be set to the default value.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:FREQuency:START 2000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:FREQuency:START 3000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:FREQuency:START 4000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe5:FREQuency:START 5000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe:COUNT?")
'Queries the number of defined
'ranges
'----- Querying the parameters of range 1 -----
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:START?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:STOP?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FILTeR:TYPe?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BANdwidth:RESolution?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BANdwidth:VIDeo?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:SWEep:TIME:AUTO?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:DETeCtor?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:RLEVel?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:INPut:ATTenuation:AUTO?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:INPut:GAIN:STATe?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BReAk?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:TRANsducer?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:SWEep:TIME?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:INPut:ATTenuation?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:POINts?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:LIMit:START?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:LIMit:STOP?")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:LIMit:STATe?")
'----- Changing into the Spurious Emissions measurement mode -----
CALL InstrWrite (analyzer, ":SENSe1:SWEEP:MODE LIST")
Rem In continuous sweep mode, editing the ranges is not allowed.
Rem You have to stop the measurement first.
Rem In single sweep mode, you can edit the ranges at the end of the sweep.
'----- Single sweep version -----
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Switch to single sweep
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:START 500000")
'Change the start frequency
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end
'----- Continuous sweep version -----

```


Remote Control – Programming Examples

```

CALL InstrWrite (analyzer, "INIT:CONT ON") 'Switch to continuous sweep
CALL InstrWrite (analyzer, "ABORT") 'Stop the measurement
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:START 500000")
'Change the start frequency
CALL InstrWrite (analyzer, ":INITiate1:SPURious") 'Restart the measurement
'----- Defining the range settings in single sweep mode -----
CALL InstrWrite (analyzer, "INIT:CONT OFF") 'Switch to single sweep
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end

Rem Edit one range at a time. Make sure to edit the ranges in a correct
Rem order to prevent limit violations. Ranges cannot overlap.
Rem The best way is to start with range 1.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:START 500000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FREQuency:STOP 550000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:FILTer:TYPE NORM")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BANDwidth:RESolution 3000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BANDwidth:VIDeo 10000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:SWEep:TIME:AUTO ON")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:DETEctor RMS")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:RLEVel -10")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:INPut:ATTenuation:AUTO ON")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:POINts 8001")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:INPut:GAIN:STATE OFF")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:BREak OFF")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:LIMit:START -20")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:LIMit:STOP -20")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe1:LIMit:STATE ON")
Rem Proceed with range 2.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:FREQuency:START 1000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:FREQuency:STOP 2000000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:FILTer:TYPE CFILter")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:BANDwidth:RESolution 5000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:DETEctor POS")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:RLEVel -20")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:INPut:ATTenuation 0")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:POINts 32001")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe2:INPut:GAIN:STATE ON")
Rem Proceed with range 3.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:FREQuency:START 2500000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:FREQuency:STOP 10000000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:FILTer:TYPE RRC")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe3:POINts 32001")
Rem Proceed with range 4.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:FREQuency:START 1200000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:FREQuency:STOP 4000000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:FILTer:TYPE PULSe")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe4:POINts 251")
Rem Proceed with range 5.
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe5:FREQuency:START 5000000000")
CALL InstrWrite (analyzer, "SENSe1:LIST:RANGe5:FREQuency:STOP 6000000000")

```

```

CALL InstrWrite (analyzer, "SENSE1:LIST:RANGE5:POINTS 7001")
'----- Defining the limit check for all ranges -----
CALL InstrWrite (analyzer, "SENSE1:LIST:RANGE1:LIMIT:STATE ON")
'Activate the limit check
'----- Setting the span to include all ranges -----
CALL InstrWrite (analyzer, ":SENSE1:FREQUENCY:START 500000")
CALL InstrWrite (analyzer, ":SENSE1:FREQUENCY:STOP 6000000000")
'----- Measuring -----
CALL InstrWrite (analyzer, "INIT;*WAI") 'Perform sweep, wait for sweep
'end
'----- Reading out results -----
CALL InstrWrite (analyzer, ":TRACE1:DATA? LIST")
'Query list results
CALL InstrWrite (analyzer, ":CALCULATE1:PSEARCH[:IMMEDIATE]")
'Deactivate limit line and
'just look for peaks
Rem Or set margin to 200 in order to find all peaks
CALL InstrWrite (analyzer, ":TRACE1:DATA? SPUR")
'Query just the peaks
CALL InstrWrite (analyzer, ":CALCULATE:LIMIT:FAIL?")
'Query result of limit check
CALL InstrRead(analyzer, result$)
REM *****

```

11.17.14 Averaging I/Q Data

The R&S ESR has averaging capability also for I/Q measurements, i.e. I/Q data can be averaged over several test runs. This is subject to the following conditions:

- An external trigger signal must be available for data measurement, and the trigger signal must be phase-locked to the signal measured.
- The same reference-frequency signal must be used for the DUT and the R&S ESR.
- Internal I/Q data averaging is supported up to 512 k I/Q samples.

If all of the above conditions are fulfilled, no phase shift will occur between consecutive test runs. Phase shift may falsify the measured average so that in extreme cases a value of 0 is obtained.

The default setting of the instrument for data measurement without averaging has to be changed as follows:

```

REM *****
'----- R&S FSV default setting -----
CALL SetupInstrument 'Default setting
CALL InstrWrite (analyzer, "TRAC:IQ:STAT ON")
'Activate I/Q data acquisition
'mode; this must be
'done before TRAC:IQ:SET!
'Select max. number of test points (= 512 * 1024) at 10 MHz RBW,

```

```
'32 MHz sampling rate, external
'trigger, pos. trigger edge and
'0 s trigger delay.
CALL InstrWrite (analyzer, "TRAC:IQ:SET NORM,10 MHz,32 MHz,EXT,POS,0,524288")
CALL InstrWrite (analyzer, "TRAC:IQ:AVER ON") 'Switch on I/Q averaging
CALL InstrWrite (analyzer, "TRAC:IQ:AVER:COUN 10") 'Set 10 test runs
'----- Read data in binary format -----
...
REM *****
```

11.17.15 Using IQ Gating

IQ gating refers to recording IQ samples in certain time intervals – the gate areas. There are different modes to define the gate areas:

- Edge triggered recording
- Level triggered recording

For more information, see "IQ Gating" in the "Remote Commands" chapter under "Trace:IQ" subsystem.

Measurement example: Level mode

With IQ gating in level mode, the area in which the gate signal is active is recorded. In this example, the gate signal is generated by the IFP trigger. The [Figure 11-8](#) shows the signal (triggered externally) in IQ mode. The following sample program records the signal in level mode with an external trigger.

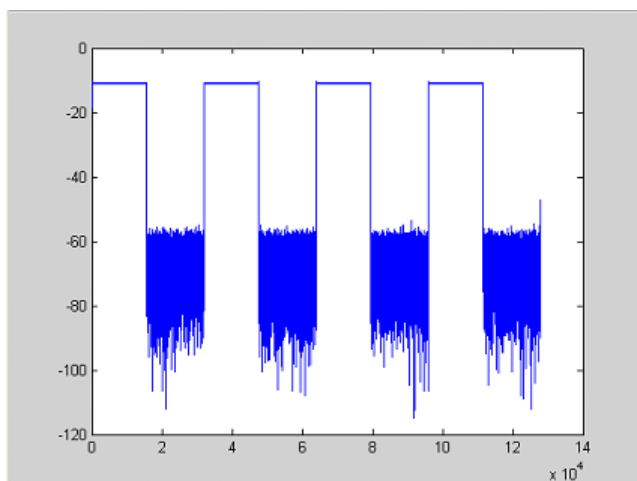


Figure 11-8: Signal to be recorded in IQ mode

Used values

sample rate: 32 MHz

number of IQ samples: 128000

trigger mode: IFP

Program

```
:TRACel:IQ ON
Trace:iq:set NORM,0,32000000,IFP,POS,0,128000
:TRIGger1:SEQuence:LEVel:IFPower -20
:TRACel:IQ:EGATe ON
:TRACel:IQ:EGATe:TYPE LEVel
```

Result

In [Figure 11-9](#), the recorded signal using IQ gating in level mode is displayed. Edges are only visible around the IFP trigger point, otherwise only the signal level is recorded.

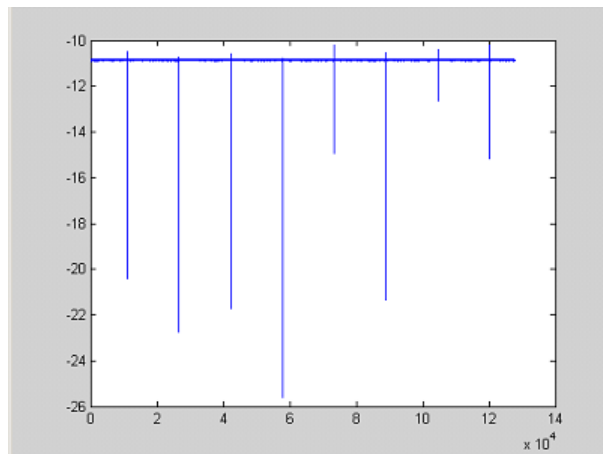


Figure 11-9: Recorded signal using IQ gating in level mode

Measurement example: Edge mode

In edge mode, the gate area is defined by:

- delay (pretrigger samples)
- length
- number of periods
- gap between the periods

The gate starting point can be defined using an IFP or external trigger.

The [Figure 11-10](#) shows the signal to be recorded in IQ mode.

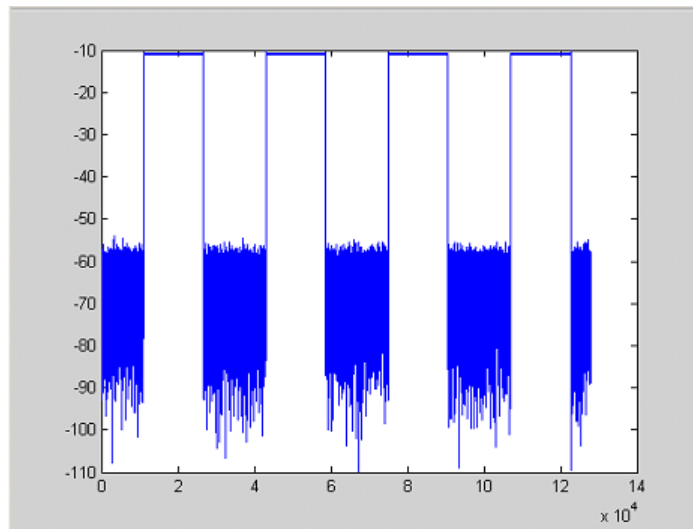


Figure 11-10: Signal to be recorded in IQ mode

Example 1: Signal only

The following sample program records the signal in edge mode and displays only the signal, without gaps and noise.

Used values

sample rate: 32 MHz

number of IQ samples: 128000

delay = 11020 samples

length = 15500 samples

trigger mode: EXT

Program

```
:TRACel:IQ ON
Trace:iq:set NORM,0,32000000,EXT,POS, 11020,128000
:TRACel:IQ:EGATe ON
:TRACel:IQ:EGATe:TYPE EDGE
:TRACel:IQ:EGATe:LENGth 15500
```

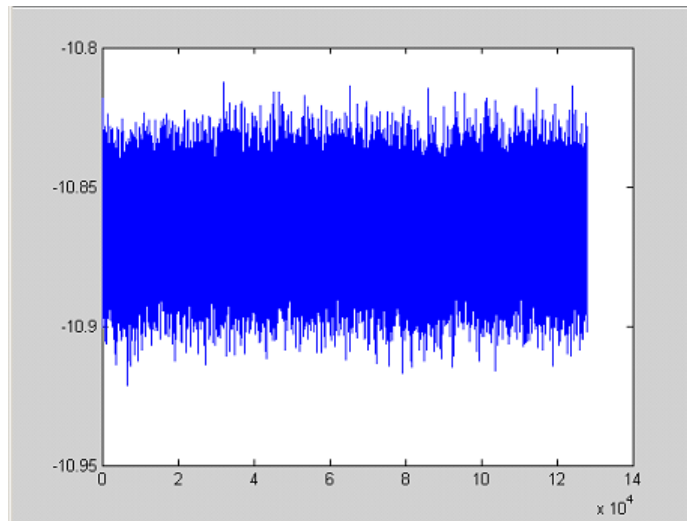
Result

Figure 11-11: Result: signal only (no gaps, no noise)

Example 2: Noise only

The following sample program records the signal in edge mode and displays only the noise.

Used values

sample rate: 32 MHz

number of IQ samples: 128000

delay = 0 samples

length = 9000 samples

trigger mode: EXT

Program

```
:TRACel:IQ ON
Trace:iq:set NORM,0,32000000,EXT,POS, 0,128000
:TRACel:IQ:EGATE ON
:TRACel:IQ:EGATE:TYPE EDGE
:TRACel:IQ:EGATE:LENGTH 9000
```

Result

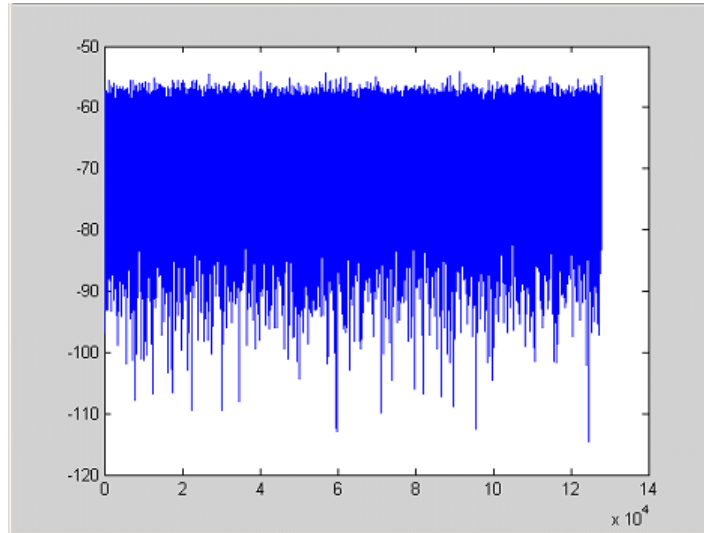


Figure 11-12: Result: noise only

Measurement example: Periodic signal intervals in edge mode

The gate area can also be defined by a number of gate periods and the distance between two periods (gap). In this example, a power ramp is recorded, triggered by the IFP on the highest edge (see [Figure 11-13](#)). As a result, only the levels of the individual ramp areas of the first 3 periods are displayed (see [Figure 11-14](#)).

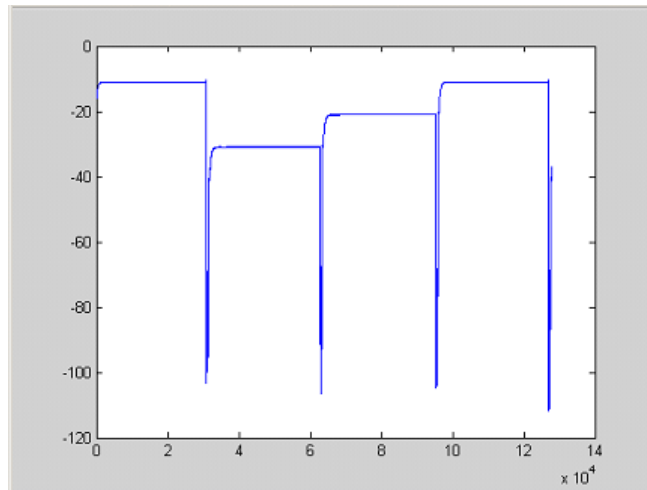


Figure 11-13: Periodic signal recording in edge mode

Used values:

sample rate: 3,2 MHz

number of IQ samples: 228000

trigger mode: IFP

length: 28800

number of periods: 3

gap: 3800 samples

Program

```
:TRACel:IQ ON
:trace:iq:set NORM,0,3200000,IFP,POS,0,228000
:TRIGger1:SEQuence:LEVel:IFPower -20
:TRACel:IQ:EGATe ON
:TRACel:IQ:EGATe:TYPE EDGE
:TRACel:IQ:EGATe:LENGth 28800
:TRACel:IQ:EGATe:NOF 3
:TRACel:IQ:EGATe:GAP 3800
```

Result

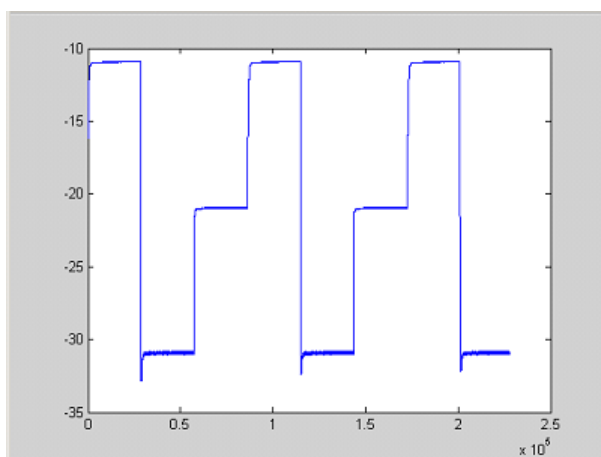


Figure 11-14: Result: periodic power ramp levels

11.17.16 Usage of Four Spectrum Instances

As of R&S ESR firmware version 1.50, you can open up to four tabs for spectrum mode with the softkey "New Spectrum" in the "MODE" menu. The following remote example shows how to set up four tabs with four different measurements on a WCDMA signal.

```
REM *****
Public Sub 4SpectrumTabs()
result$ = Space$(100)

'----- R&S FSV default setting -----
CALL SetupStatusReg           'Set status registers
```


Remote Control – Programming Examples

```

CALL InstrWrite(analyzer,"*RST")          'Reset instrument
CALL InstrWrite(analyzer,"INIT:CONT OFF")  'Single sweep

'----- Setup the first Spectrum tab (Spectrum Overview Measurement) -----
CALL InstrWrite(analyzer,"INIT:CONT OFF")  'Single sweep
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:RLEV 10 dBm")'Reference level
CALL InstrWrite(analyzer,"FREQ:START 100MHz;STOP 6 GHz")  'Span

'----- Setup the Spectrum 2 Tab (ACLR measurement) -----
CALL InstrWrite(analyzer,"INST:CRE SAN,'Spectrum 2'")      'Create Tab 2

'--- After creation the tab is in standard preset setup ---
CALL InstrWrite(analyzer,"INIT:CONT OFF")  'Single sweep
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:RLEV 10 dBm")'Reference level
CALL InstrWrite(analyzer,"FREQ:CENT 2.1175GHz")          'different CF
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:SEL ACP")    'select ACLR meas
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:PRES FW3Gppcdma")
      'select WCDMA BTS standard

'----- Setup the Spectrum 3 Tab (OBW measurement) -----
CALL InstrWrite(analyzer,"INST:CRE SAN,'Spectrum 3'")      'Create Tab 3
CALL InstrWrite(analyzer,"INIT:CONT OFF")  'Single sweep
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:RLEV 10 dBm")'Reference level
CALL InstrWrite(analyzer,"FREQ:CENT 2.1175GHz")          'different CF
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:SEL OBW")    'select OBW meas
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:PRES FW3Gppcdma")
      ' select WCDMA BTS standard

'----- Setup the Spectrum 4 Tab (CCDF measurement) -----
CALL InstrWrite(analyzer,"INST:CRE SAN,'Spectrum 4'")      'Create Tab 4
CALL InstrWrite(analyzer,"INIT:CONT OFF")  'Single sweep
CALL InstrWrite(analyzer,"DISP:WIND:TRAC:Y:SCAL:RLEV 10 dBm")'Reference level
CALL InstrWrite(analyzer,"FREQ:CENT 2.1175GHz")          'different CF
CALL InstrWrite(analyzer," CALC:STAT:CCDF ON")            'select CCDF meas

'----- Sweep in first Spectrum Tab and query marker -----
CALL InstrWrite(analyzer,"INST:SEL SAN")                  'Select Tab 1
CALL InstrWrite(analyzer,"INIT;*WAI")                    'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK1:MAX")               'Marker to peak
CALL InstrWrite(analyzer,"CALC:MARK1:X?")                'Query Marker x value
CALL InstrRead(analyzer,result$)
Print "Spectrum 1 Marker x [Hz]: ";result$
CALL InstrWrite(analyzer,"CALC:MARK1:Y?")                'Query Marker y value
CALL InstrRead(analyzer,result$)
Print "Spectrum 1 Marker y [dBm]: ";result$

'----- Sweep in Spectrum 2 Tab and query ACLR results -----
CALL InstrWrite(analyzer," INST:SEL 'Spectrum 2'")        'Select Tab 2
CALL InstrWrite(analyzer,"INIT;*WAI")                    'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:RES? ACP")  'Query ACLR results
CALL InstrRead(analyzer,result$)
Print "Spectrum 2 ACRL results : ";result$

'----- Sweep in Spectrum 3 Tab and query OBW results -----
CALL InstrWrite(analyzer," INST:SEL 'Spectrum 3'")        'Select Tab 3

```

```

CALL InstrWrite(analyzer,"INIT;*WAI")           'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:MARK:FUNC:POW:RES? OBW") 'Query OBW results
CALL InstrRead(analyzer,result$)
Print "Spectrum 3 OBW results : ";result$

'----- Sweep in Spectrum 4 Tab and query CCDF results -----
CALL InstrWrite(analyzer," INST:SEL 'Spectrum 4'") 'Select Tab 4
CALL InstrWrite(analyzer,"INIT;*WAI")           'Perform sweep with sync
CALL InstrWrite(analyzer,"CALC:STAT:RES1? ALL") 'Query CCDF results
CALL InstrRead(analyzer,result$)
Print "Spectrum 4 CCDF results : ";result$
'----- Now the sweep part can be redone without the need of -----
'----- doing the setup of all 4 measurements again. -----
END SUB
REM *****

```

11.18 GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

The R&S FSV analyzer family supports a subset of the GPIB commands of HP models 8560E, 8561E, 8562E, 8563E, 8564E, 8565E, 8566A, 8566B, 8568A, 8568B and 8594E.

Despite the differences in system architecture and device features, the supported commands have been implemented in a way to ensure a sufficiently high degree of correspondence with the original.

This includes the support of syntax rules for not only newer device families (B and E models) but for the previous A family as well.

In many cases the selection of commands supported by the R&S FSV is sufficient to run an existing GPIB program without adaptation.

After the introduction, this section includes the following topics:

- [GPIB Languages](#).....1040
- [Command Set of Models 8560E, 8561E, 8562E, 8563E, 8564E, 8565E, 8566A/B, 8568A/B, 8591E, 8594E, 71100C, 71200C, and 71209A](#)..... 1041
- [Special Features of the Syntax Parsing Algorithms for 8566A and 8568A Models](#)..... 1065
- [Special Behavior of Commands](#).....1066
- [Model-Dependent Default Settings](#)..... 1067
- [Data Output Formats](#).....1068
- [Trace Data Output Formats](#)..... 1068
- [Trace Data Input Formats](#)..... 1068
- [GPIB Status Reporting](#).....1068

11.18.1 GPIB Languages

The R&S ESR analyzer family supports a subset of the GPIB commands used by other devices. Thus it can emulate other devices in order to use existing remote control programs.

Supported languages

Language	Comment
SCPI	
71100C	Compatible to 8566A/B
71200C	Compatible to 8566A/B
71209A	Compatible to 8566A/B
8560E	
8561E	
8562E	
8563E	
8564E	
8565E	
8566A	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8566B	
8568A	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8568A_DC	Uses DC input coupling by default if supported by the instrument
8568B	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
8568B_DC	Uses DC input coupling by default if supported by the instrument
8591E	Compatible to 8594E
8594E	Command sets A and B are available. Command sets A and B differ in the rules regarding the command structure.
PSA89600	
PSA	
ESA	

Notes:

- If you select a language other than "SCPI", the GPIB address is set to 18 if it was 20 before.
- The Start/stop frequency, reference level and number of sweep points are adapted to the selected instrument model.

- When you switch between remote control languages, the following settings or changes are made:

SCPI:

The instrument performs a PRESET.

8566A/B, 8568A/B, 8594E; FSEA, FSEB, FSEM; FSEK:

- The instrument performs a PRESET.
- The following instrument settings are changed:

Table 11-31: Instrument settings for emulation of 8566A/B, 8568A/B, 8594E; FSEA, FSEB, FSEM; FSEK instruments

Model	# of Trace Points	Start Freq.	Stop Freq.	Ref Level	Input Coupling
8566A/B	1001	2 GHz	22 GHz	0 dBm	AC
8568A/B	1001	0 Hz	1.5 GHz	0 dBm	AC
8560E	601	0 Hz	2.9 GHz	0 dBm	AC
8561E	601	0 Hz	6.5 GHz	0 dBm	AC
8562E	601	0 Hz	13.2 GHz	0 dBm	AC
8563E	601	0 Hz	26.5 GHz	0 dBm	AC
8564E	601	0 Hz	40 GHz	0 dBm	AC
8565E	601	0 Hz	50 GHz	0 dBm	AC
8594E	401	0 Hz	3 GHz	0 dBm	AC

Note: The stop frequency indicated in the table may be limited to the corresponding frequency of the R&S ESR, if required.

11.18.2 Command Set of Models 8560E, 8561E, 8562E, 8563E, 8564E, 8565E, 8566A/B, 8568A/B, 8591E, 8594E, 71100C, 71200C, and 71209A

As with the original units, the R&S ESR includes the command set of the A models in the command set of the B models.



The HP model 8591E is compatible to HP model 8594E, the HP models 71100C, 71200C, and 71209A are compatible to HP models 8566A/B.

Command	Supported subset	Function	Corresp. HP-Models	Status
A1	A1	Clear/Write A	HP 8566A/ HP 8568A	available
A2	A2	Max Hold A	HP 8566A/ HP 8568A	available

Command	Supported subset	Function	Corresp. HP-Models	Status
A3	A3	View A	HP 8566A/ HP 8568A	available
A4	A4	Blank A	HP 8566A/ HP 8568A	available
ABORT ¹⁾	ABORT	Stop previous function	HP 856xE/ HP 8566B/HP 8568B/HP 8594E	available
ADD		Add	HP 8566B/ HP 8568B/ HP 8594E	available
ADJALL	ADJALL	Adjust all	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ADJCRT ²⁾	ADJCRT	Adjust CRT	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ADJIF ²⁾	ADJIF	Auto adjust IF	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
AMB	AMB ON OFF AMB 1 0 AMB?	Trace A – B -> Trace A	HP 856xE/ HP 8594E	available
AMBPL	AMBPL ON OFF AMBPL 1 0 AMBPL?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ANNOT	ANNOT ON OFF ANNOT 1 0 ANNOT?	Annotation	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
APB	APB	Trace A + B -> Trace A	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
AT	AT <numeric_value> DB DM AT DN AT UP AT AUTO AT?	Attenuation	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
AUNITS	AUNITS DBM DBMV DBUV AUNITS?	Amplitude Units	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
AUTOCP	AUTOCP	Coupling default	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
AXB	AXB	Exchange trace A and B	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
B1	B1	Clear/Write B	HP 8566A/ HP 8568A	available
B2	B2	Max Hold B	HP 8566A/ HP 8568A	available
B3	B3	View B	HP 8566A/ HP 8568A	available
B4	B4	Blank B	HP 8566A/ HP 8568A	available
BL	BL	Trace B – Display Line - > Trace B	HP 8566A/ HP 8568A	available
BML	BML	Trace B – Display Line - > Trace B	HP 856xE/ HP8594E	available
BTC	BTC	Transfer Trace B -> C	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
BXC	BXC	Exchange Trace B and C	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
BLANK	BLANK TRA TRB TRC	Blank Trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
C1	C1	A-B off	HP 8566A/ HP 8568A	available
C2	C2	A-B -> A	HP 8566A/ HP 8568A	available
CA	CA	Couple Attenuation	HP 8566A/ HP 8568A	available
CAL ¹⁾	CAL ALL CAL ON CAL OFF	Start analyzer self alignment	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CF	CF <numeric_value> HZ KHZ MHZ GHZ CF UP CF DN CF?	Center Frequency	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CHANPWR	CHANPWR TRA TRB, <numeric_value>,.?	Channel Power Measurement	HP 856xE/ HP 8594E	available
CHPWRBW	CHPWRBW <numeric_value> HZ KHZ MHZ GHZ	Channel Power Bandwidth	HP 856xE/ HP 8594E	available
CLRW	CLRW TRA TRB TRC	Clear/Write Trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CLS ¹⁾	CLS	Clear all status bits	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CONTS	CONTS		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
COUPLE	COUPLE AC DC	Input coupling	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
CR	CR	Couple RBW	HP 8566A/ HP 8568A	available
CS	CS	Couple Step Size	HP 8566A/ HP 8568A	available
CT	CT	Couple SWT	HP 8566A/ HP 8568A	available
CTA		Convert to absolute units	HP 8566B/ HP 8568B/ HP 8594E	available
CV	CV	Couple VBW	HP 8566A/ HP 8568A	available
D1 ²⁾	D1	Display Size normal	HP 8566A/ HP 8568A	available
DA ²⁾	DA	Display address		available
DEMOMD ¹⁾	DEMOMD ON OFF AM FM	AF Demodulator	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DEMOMDAGC ²⁾	DEMOMDAGC ON OFF 1 0 DEMOMDAGC?	Demodulation AGC	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DEMOMDT	DEMOMDT <numeric_value> S MS US SC DEMOMDT UP DN DEMOMDT?	Demodulation time	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DET	DET POS SMP NEG DET?	Detector	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DISPOSE ²⁾	ONEOS TRMATH ONSWP ALL <numeric_value>			available

Command	Supported subset	Function	Corresp. HP-Models	Status
DIV		Divide	HP 8566B/ HP 8568B/ HP 8594E	available
DL	DL <numeric_value> DB DM DL DN DL UP DL ON DL OFF DL?	Display Line	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DLE	DLE ON OFF	Display Line enable	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DONE	DONE DONE?	Done query	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
DW ²⁾	DW	Write to display and increment address		available
E1	E1	Peak Search	HP 8566A/ HP 8568A	available
E2	E2	Marker to Center Freq.	HP 8566A/ HP 8568A	available
E3	E3	Deltamarker Step Size	HP 8566A/ HP 8568A	available
E4	E4	Marker to Ref. Level	available	available
EDITDONE		limit line edit done	HP 856xE	available
EDITLIML		edit limit line	HP 856xE	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
ERR	ERR 250 cal level error ERR 300 LO unlock ERR 472 cal error digital filter ERR 473 cal error analog filter ERR 552 cal error log amp ERR 902 unscale tracking generator ERR 906 oven cold ERR 117 numeric unit error ERR 112 Unrecognized Command	Now some FSx errors are mapped to HP errors.	HP8568A HP856xE	not yet available
ERR?	ERR?	Error queue query	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not yet available
EX	EX	Exchange trace A and B	HP 8566A/ HP 8568A	available
FA	FA <numeric_value> HZ KHZ MHZ GHZ FA UP FA DN FA?	Start Frequency	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
FB	FB <numeric_value> HZ KHZ MHZ GHZ FB UP FB DN FB?	Stop Frequency	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
FDSP		Frequency display off	8560E 8561E 8562E 8563E 8564E 8565E	available
FOFFSET ¹⁾	FOFFSET <numeric_value> HZ KHZ MHZ GHZ FOFFSET?	Frequency Offset	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
FREF	FREF INT EXT	Reference Frequency	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
FS	FS	Full Span	HP 8566A/ HP 8568A	available
FUNCDEF		Define Function Function must be in one line between delimiters @	HP 8594E/ HP 856xE/ HP 8566B	available
GATE ¹⁾	GATE ON OFF GATE 1 0		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GATECTL ¹⁾	GATECTL EDGE LEVEL GATECTL?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GD ¹⁾	GD <numeric_value> US MS SC GD DN GD UP GD?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GL ¹⁾	GL <numeric_value> US MS SC GL DN GL UP GL?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GP ¹⁾	GP POS NEG GP?		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
GRAT ²⁾	GRAT ON OFF	Graticule	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
I1	I1		HP 8566A/ HP 8568A	available
I2	I2		HP 8566A/ HP 8568A	available

Command	Supported subset	Function	Corresp. HP-Models	Status
ID	ID ID?	Identify	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
INZ ¹⁾	INZ 75 INZ 50 INZ?	Input Impedance	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
IP	IP	Instrument preset	HP 8566A/ HP 8568A	available
KEYDEF	KEYDEF	Key definition	HP 8566B/ HP 856xE/ HP 859xE	available
KEYEXEC	KEYEXEC	Key execute	HP 8566B	available
KS=	KS= <numeric_value> HZ KHZ MHZ GHZ KS= DN KS= UP KS=?	Marker Frequency Counter Resolution	HP 8566A/ HP 8568A	available
KS/	KS/	Manual Peaking	HP 8566A/ HP 8568A	available
KS(KS(Lock register	HP 8566A/ HP 8568A	available
KS)	KS)	Unlock register	HP 8566A/ HP 8568A	available
KS91	KS91	Read Amplitude Error	HP 8566A/ HP 8568A	available
KSA	KSA	Amplitude Units in dBm	HP 8566A/ HP 8568A	available
KSB	KSB	Amplitude Units in dBmV	HP 8566A/ HP 8568A	available
KSC	KSC	Amplitude Units in dBuV	HP 8566A/ HP 8568A	available
KSD	KSD	Amplitude Units in V	HP 8566A/ HP 8568A	available
KSE	KSE <numeric_value> <char data>@	Title mode	HP 8566A/ HP 8568A	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
KSG	KSG KSG ON KSG <numeric_value>	Video Averaging on	HP 8566A/ HP 8568A	available
KSH	KSH	Video Averaging Off	HP 8566A/ HP 8568A	available
KSK		Marker to Next Peak	HP 8566A/ HP 8568A	available
KSL		Marker Noise off	HP 8566A/ HP 8568A	available
KSM		Marker Noise on	HP 8566A/ HP 8568A	available
KSO	KSO	Deltamarker to span	HP 8566A/ HP 8568A	available
KSP	KSP <numeric_value>	HPIB address	HP 8566A/ HP 8568A	available
KSQ ²⁾	KSQ	Band lock off	HP 8566A/ HP 8568A	available
KST	KST	Fast Preset	HP 8566A/ HP 8568A	available
KSV	KSV <numeric_value> HZ KHZ MHZ GHZ KSV?	Frequency Offset	HP 8566A/ HP 8568A	available
KSW	KSW	Error Correction Routine	HP 8566A/ HP 8568A	available
KSX	KSX	Correction Values On	HP 8566A/ HP 8568A	available
KSY	KSY	Correction Values Off	HP 8566A/ HP 8568A	available
KSZ	KSZ <numeric_value> DB KSZ?	Reference Value Offset	HP 8566A/ HP 8568A	available
KSa	KSa	Normal Detection	HP 8566A/ HP 8568A	available
KSb	KSb	Pos Peak Detection	HP 8566A/ HP 8568A	available
KSd	KSd	Neg Peak Detection	HP 8566A/ HP 8568A	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
KSe	KSe	Sample Detection	HP 8566A/ HP 8568A	available
KSg		CRT beam off		available
KSh		CRT beam on		available
KSj	KSj	View Trace C	HP 8566A/ HP 8568A	available
KSk	KSk	Blank Trace C	HP 8566A/ HP 8568A	available
KSl	KSl	Transfer B to C	HP 8566A/ HP 8568A	available
KSm	KSm	Graticule off	HP 8566A/ HP 8568A	available
KSn ²⁾	KSn	Grid on	HP 8566A/ HP 8568A	available
KSo	KSn	Character display off	HP 8566A/ HP 8568A	available
KSp	KSp	Character display on	HP 8566A/ HP 8568A	available
KSr	KSr	Create service request	HP 8566A/ HP 8568A	available
KSt ²⁾	KSt	Band lock on	HP 8566A/ HP 8568A	available
KSv ²⁾	KSv	Signal ident on	HP 8566A/ HP 8568A	available
L0	L0	Display line off	HP 8566A/ HP 8568A	available
LB	LB <numeric_value> <char data>@	Label	HP 8566A/ HP 8568A	available
LF	LF	Low frequency band pre- set	HP 8566A/ HP 8568A	available
LIMD		limit line delta	HP 856xE	available
LIMF		limit line frequency	HP 856xE	available
LIMIFAIL		limit fail query	HP 856xE	available
LIMIPURGE		purge limit line	HP 856xE	available
LIMIRCL		recall limit line	HP 856xE	available
LIMIREL		relative limit line	HP 856xE	available

Command	Supported subset	Function	Corresp. HP-Models	Status
LIMISAV		save limit line	HP 856xE	available
LIMITEST		limit line test	HP 856xE	available
LIML		lower limit line value	HP 856xE	available
LIMM		middle limit line value	HP 856xE	available
LIMTFL		flat limit line segment	HP 856xE	available
LIMITSL		slope limit line segment	HP 856xE	available
LIMU		upper limit line value	HP 856xE	available
LG	LG <numeric_value> DB DM LG?	Amplitude Scale Log	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
LL ²⁾	LL	Plot command	HP 8566A/ HP 8568A	available
LN	LN	Amplitude Scale Lin	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
M1	M1	Marker Off	HP 8566A/ HP 8568A	available
M2	M2 M2 <numeric_value> HZ KHZ MHZ GHZ M2 DN M2 UP M2?	Marker Normal	HP 8566A/ HP 8568A	available
M3	M3 M3 <numeric_value> HZ KHZ MHZ GHZ M3 DN M3 UP M3?	Delta Marker	HP 8566A/ HP 8568A	available
M4	M4 <numeric_value> HZ KHZ MHZ GHZ	Marker Zoom	HP 8566A/ HP 8568A	available
MA	MA	Marker Amplitude	HP 8566A/ HP 8568A	available
MC0	MC0	Marker Count off	HP 8566A/ HP 8568A	available

Command	Supported subset	Function	Corresp. HP-Models	Status
MC1	MC1	Marker Count on	HP 8566A/ HP 8568A	available
MDS	MDS	Measurement data size	HP 8566B	available
MEAS		Measurement status	HP 856xE	available
MF	MF MF?	Marker Frequency	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MINH ¹⁾	MINH TRC	Minimum Hold	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKA	MKA <numeric_value> MKA?	Marker Amplitude	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKACT	MKACT 1 MKACT?	Select the active marker	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available
MKBW ¹⁾	MKBW <numeric_value> MKBW ON MKBW OFF	N dB Down	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKD	MKD MKD <numeric_value> HZ KHZ MHZ GHZ MKD DN MKD UP MKD ON MKD OFF MKD?	Delta Marker	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKDR	MKDR <numeric_value> HZ KHZ MHZ GHZ S SC MS MSEC USMKDR?	Delta Marker reverse	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
MKDR?		Delta Marker reverse query		available
MKF	MKF <numeric_value> HZ KHZ MHZ GHZ MKF?	Set Marker Frequency	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKFC	MKFC ON OFF	Frequency Counter on/off	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKFCR ¹⁾	MKFCR <numeric_value> HZ KHZ MHZ GHZ MKFCR DN MKFCR UP MKFCR?	Frequency Counter Resolution	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKMIN	MKMIN	Marker -> Min	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKN	MKN MKN <numeric_value> HZ KHZ MHZ GHZ MKN DN MKN UP MKN ON MKN OFF MKN?	Normal Marker	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKNOISE	MKNOISE ON OFF MKNOISE 1 0 MKNOISE?	Noise Measurement	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKOFF	MKOFF MKOFF ALL	Marker off	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKP	MKP <numeric_value> MKP?	Marker position	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
MKPK	MKPK MKPK HI MKPK NH MKPK NR MKPK NL	Marker Search	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKPT	MKPT MKPT HI MKPT NH MKPT NR MKPT NL	Marker Peak Threshold	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKPX	MKPX <numeric_value> DB MKPX DN MKPX UP MKPX?	Peak Excursion	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKRL	MKRL	Ref Level = Marker Level	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKSP	MKSP	Deltamarker to span	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKSS	MKSS	CF Stepsize = Marker Freq	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKT	MKT <numeric_value> S MS US SC MKT?	$MKF = f_{start} + MKT / SWT * Span$	HP 856xE/ HP 8594E	available
MKTRACE	MKTRACE TRA TRB TRC	Marker to Trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MKTRACK	MKTRACK ON OFF MKTRACK 1 0 MKTRACK?	Signal Track	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
MKTYPE	MKTYPE AMP MK TYPE?	Marker type	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ML		Mixer level	HP 856xE	available
MOV	MOV TRA TRB TRC, TRA TRB T RC	Move Trace Contents	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
MPY		Multiply	HP 8566B/ HP 8568B/ HP 8594E	available
MT0	MT0	Marker Track Off	HP 8566A/ HP 8568A	available
MT1	MT1	Marker Track On	HP 8566A/ HP 8568A	available
MXMH	MXMH TRA TRB	Maximum Hold	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
NORMALIZE	NORMALIZE	Normalize trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available available
NRL ¹⁾	NRL <numeric_value> DB DM NRL?	Normalized Reference Level	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
NRPOS	NRPOS <numeric_value> NRL?	Normalize position	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
O1	O1	Format ASCII, Values 0 to 4095	HP 8566A/ HP 8568A	available
O2	O2	Format Binary, Values 0 to 4095	HP 8566A/ HP 8568A	available
O3	O3	Format ASCII	HP 8566A/ HP 8568A	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
OA	OA	Output All	HP 8566A/ HP 8568A	available
OL	OL <80 characters> OL?	Output Learn String	HP 8566A/ HP 8568A	available
OT	OT	Output Trace Annotations	HP 8566A/ HP 8568A	available
PA	PA <numeric_value>, <numeric_value	Plot command	HP 8566A/ HP 8568A	available
PD	PD <numeric_value>, <numeric_value	Plot command	HP 8566A/ HP 8568A	available
PH_MKF		Spot frequency in Hz	HP 856xE	available
PH_FMIN		Min offset frequency to be measured	HP 856xE	available
PH_FMAX		Max offset frequency to be measured	HP 856xE	available
PH_MKA		Queries amplitude at the spot frequency	HP 856xE	available
PH_DRIFT		0: for stable signals, 1: for drifty	HP 856xE	available
PH_RLVL		Reference level for the log plot	HP 856xE	available
PH_SMTHV		Trace smoothing	HP 856xE	available
PH_VBR		Filtering	HP 856xE	available
PH_RMSPT		Amount of data points to skip when doing the integration	HP 856xE	available
PH_RMSFL		Lower integration frequency in Hz	HP 856xE	available
PH_RMSFU		Upper integration frequency in Hz	HP 856xE	available
PH_EXIT		Quits phase noise	HP 856xE	available
PH_F_UDT		Updates internal frequency variables	HP 856xE	available
PH_LMT_L		Apply limits to PH_FMIN and PH_FMAX	HP 856xE	available
PH_MEAS		Generates log frequency plot	HP 856xE	available
PH_MKF_D		Updates the spot frequency	HP 856xE	available

Command	Supported subset	Function	Corresp. HP-Models	Status
PH_RMS		Requests the rms phase noise	HP 856xE	available
PH_RMSFT		Updates internal frequency variables	HP 856xE	available
PH_RMSX		Calculates the rms phase noise	HP 856xE	available
PH_SPOTF		Executes the spot frequency measurement	HP 856xE	available
PLOTORG ²⁾	PLOTORG DSP GRT	Plot command	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PLOTSRC ²⁾	PLOTSRC ANNT GRT TRB TRA ALLDSP GRT	Plot command	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PP	PP	Preselector Peaking	HP 8566A/ HP 8568A	available
PRINT ¹⁾	PRINT PRINT 1 0	Hardcopy	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PSDAC ²⁾	PSDAC <numeric_value> PSDAC UP DN	Preselector DAC value	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PSTATE ²⁾	PSTATE ON OFF 1 0	Protect State	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
PU	PU	Pen Up	HP 8566A/ HP 8568A	available
PWRBW	PWRBW	Power Bandwidth	HP 8566B/ HP 859x/ HP 856xE	available
R1	R1	Set Status Bit Enable	HP 8566A/ HP 8568A	available
R2	R2	Set Status Bit Enable	HP 8566A/ HP 8568A	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
R3	R3	Set Status Bit Enable	HP 8566A/ HP 8568A	available
R4	R4	Set Status Bit Enable	HP 8566A/ HP 8568A	available
RB	RB <numeric_value> HZ KHZ MHZ GHZ RB DN RB UP RB AUTO RB?	Resolution Bandwidth	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RBR	RBR <numeric_value> RBR DN RBR UP RBR?	Resolution Bandwidth Ratio	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RC1...6	RC1...6	Recall Last State	HP 8566A/ HP 8568A	available
RCLS	RCLS <numeric_value>	Recall State Register	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RCLT	RCLT TRA TRB, <number>	Recall Trace	HP856xE/ HP8594E	available
RESET	RESET	Instrument preset	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
REV	REV REV?	Firmware revision	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RL	RL <numeric_value> DB DM RL DN RL UP RL?	Reference Level	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RLCAL	RLCAL <numeric_value> RL?	Reference Level Calibration	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
RCLOSCAL	RCLOSCAL	Recall Open/Short Average	HP 856xE/ HP 8594E	not available
RCLTHRU	RCLTHRU	Recall Thru	HP 856xE/ HP 8594E	not available
RLPOS ¹⁾	RLPOS <numeric_value> RLPOS DN RLPOS UP RLPOS?	Reference Level Position	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ROFFSET	ROFFSET <numeric_value> DB DM ROFFSET?	Reference Level Offset	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
RQS	RQS	Service Request Bit mask	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
S1	S1	Continuous Sweep	HP 8566A/ HP 8568A	available
S2	S2	Single Sweep	HP 8566A/ HP 8568A	available
SADD		add a limit line segment	HP 856xE	available
SAVES	SAVES <numeric_value>	Save State Register	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SAVET	SAVET TRA TRB,<number>	Save Trace	HP856xE/ HP8594E	available
SDEL		delete limit line segment	HP 856xE	available
SDON		limit line segment done	HP 856xE	available
SEDI		edit limit line segment	HP 856xE	available
SMOOTH	SMOOTH TRA TRB TRC, <number of points>	Smooth Trace	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SNGLS	SNGLS	Single Sweep	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
SQUELCH ²⁾	SQUELCH <numeric_value> DM DB SQUELCH UP DN SQUELCH ON OFF	Squelch	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SP	SP <numeric_value> HZ KHZ MHZ GHZ SP DN SP UP SP?	Span	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SRCNORM ¹⁾	SRCNORM ON OFF SRCNORM 1 0	Source Normalization	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available
SRCPOFS ¹⁾	SRCPOFS <numeric_value> DB DM SRCPOFS DN SRCPOFS UP SRCPOFS?	Source Power Offset	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available
SRCPWR ¹⁾	SRCPWR <numeric_value> DB DM SRCPWR DN SRCPWR UP SRCPWR ON SRCPWR OFF SRCPWR?	Source Power	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	not available
SS	SS <numeric_value> HZ KHZ MHZ GHZ SS DN SS UP SS AUTO SS?	CF Step Size	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
ST	ST <numeric_value> US MS SC ST DN ST UP ST AUTO ST?	Sweep Time	HP 8566A/ HP 8568A/ HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
STB	STB	Status byte query	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
STOREOPEN	STOREOPEN	Store Open	HP 856xE/ HP 8594E	not available
STORESHORT	STORESHORT	Store Short	HP 856xE/ HP 8594E	not available
STORETHRU	STORETHRU	Store Thru	HP 856xE/ HP 8594E	not available
SUB		Subtract	HP 8566B/ HP 8568B/ HP 8594E	available
SUM		sum of trace amplitudes	HP 8566B/ HP 8568B/ HP 8594E	available
SV1...6	SV1...6	Save State	HP 8566A/ HP 8568A	available
SWPCPL ²⁾	SWPCPL SA SR SWPCPL?	Sweep Couple	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
SWPOUT ²⁾	SWPOUT FAV FAVA RAMP SWPOUT?	Sweep Output	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
T0	T0	Threshold off	HP 8566A/ HP 8568A	available
T1	T1	Free Run Trigger	HP 8566A/ HP 8568A	available
T2 ²⁾	T2	Line Trigger	HP 8566A/ HP 8568A	available
T3	T3	External Trigger	HP 8566A/ HP 8568A	available
T4	T4	Video Trigger	HP 8566A/ HP 8568A	available
TA	TA	Transfer A	HP 8566A/ HP 8568A	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
TACL	TACL?	Returns instantaneous measurement results. See TRACe<trace #>:IMMediate:LEVel? for full description.		not available
TBCL	TBCL?			
TCCL	TCCL?			
TACR	TACR?	Returns instantaneous measurement results. See TRACe<trace #>:IMMediate:LEVel? for full description.		not available
TBCR	TBCR?			
TCCR	TCCR?			
TB	TB	Transfer B	HP 8566A/ HP 8568A	available
TDF	TDF P TDF M TDF B TDF A TDF I	Trace Data Format	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TH	TH <numeric_value> DB DM TH DN TH UP TH ON TH OFF TH AUTO TH?	Threshold	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
THE	THE ON OFF	Threshold Line enable	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TIMEDSP ¹⁾	TIMEDSP ON OFF TIMEDSP 1 0 TIMEDSP?	Time Display	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TM	TM FREE VID EXT LINE ²⁾ TM?	Trigger Mode	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TM LINE ²⁾	TM LINE	Trigger Line	HP 8566B	available

GPIB Commands of HP Models 856xE, 8566A/B, 8568A/B and 8594E

Command	Supported subset	Function	Corresp. HP-Models	Status
TRA	TRA B TRA A TRA I	Transfer A	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TRB	TRB B TRB A TRB I	Transfer B	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TRSTAT	TRSTAT?	Trace State Query	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
TS	TS	Take Sweep	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
UR ²⁾	UR	Plot Command	HP 8566A/ HP 8568A	available
VARDEF	VARDEF	Variable definition, arrays are not supported	HP 8566B/ HP 8568B/ HP 8594E	available
VAVG	VAVG VAVG TRA TRB TRC	Video Averaging	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
VB	VB <numeric_value> HZ KHZ MHZ GHZ VB DN VB UP VB AUTO VB?	Video Bandwidth	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
VBR ¹⁾	VBR <numeric_value> VBR DN VBR UP VBR?	Video Bandwidth Ratio	HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available
VIEW	VIEW TRA TRB TRC		HP 856xE/ HP 8566B/ HP 8568B/ HP 8594E	available

Command	Supported subset	Function	Corresp. HP-Models	Status
VTL	VTL <numeric_value> DB DM VTL DN VTL UP VTL?	Video Trigger Level	HP 856xE/ HP 8594E	not available
1) HP 8594E only				
2) Command is accepted without error message, but is ignored				

11.18.3 Special Features of the Syntax Parsing Algorithms for 8566A and 8568A Models

The command syntax is very different for models A and B. Different names are assigned to identical instrument functions, and the command structure likewise differs considerably between models A and models B.

The command structure for models A is as follows:

```
<command> ::= <command
code> [<SPC>] [<data> | <step>] [<SPC>] [<delimiter>] [<command
code>] ... <delimiter>
```

```
<data> ::= <Value> [<SPC>] [<units
code>] [<SPC>] [<delimiter>] [<SPC>] [<data>] ...
```

```
<step> ::= UP | DN
```

where

<command code> = see Table "Supported Commands"

<Value> = integer or floating-point numerical value

<units code> = DM | -DM | DB | HZ | KZ | MZ | GZ | MV | UV | SC | MS | US

<delimiter> = <CR> | <LF> | <, > | <; > | <ETX>

<SPC> = 32₁₀

<ETX> = 3₁₀

Command sections given in [] are optional.

The R&S ESR GPIB hardware differs from that used in the HP analyzers. Therefore, the following constraint exists:

<LF> | <EOI> are still used as delimiters since the GPIB hardware is able to identify them. The other delimiters are identified and evaluated during syntax analysis.

11.18.4 Special Behavior of Commands

Command	Known Differences
ABORT	Does not automatically set the command complete bit (bit 4) in the status byte. An additional DONE is required for that purpose.
ANNOT	Only frequency axis annotation is affected.
AT	AT DN/UP: Step size
CAL	The CAL commands do not automatically set the command complete bit (bit 4) in the status byte. An additional DONE command is required for that purpose.
CF	Default value, range, step size
CR	Default ratio Span/RBW
CT	Formula for coupled sweep time
CV	Default ratio RBW/VBW
DET	DET? returns SAMP instead of SMP on the R&S ESR. DET not automatically set the command complete bit (bit 4) in the status byte. An additional DONE is required for that purpose.
ERR?	Deletes the error bit in the status register but always returns a '0' in response.
FA	Default value, range, step size
FB	Default value, range, step size
ID	
M2	Default value, range, step size
M3	Default value, range, step size
MKACT	Only marker 1 is supported as the active marker.
MKBW	Default value
MKPT	Step size
MKPX	Step size
OL?	Storage of instrument settings: 80 characters are returned as information on the instrument settings. The contents of the 80 characters returned does not correspond to the original data contents of the 8566A/8568A family.
OL	Readout of instrument settings: The 80 characters read by means of OL? are accepted as information on the corresponding instrument settings. The contents of the 80 characters read does not correspond to the original data contents of the 8566A/8568A family.
RB	Default value, range, step size
RL	Default value, step size

Command	Known Differences
RLPOS	Adapts the position of the reference level even if the tracking generator normalization is not active.
RQS	Supported bits: 1 (Units key pressed) 2 (End of Sweep) 3 (Device error) 4 (Command complete) 5 (Illegal command)

11.18.5 Model-Dependent Default Settings

If the GPIB language is switched over to an 85xx model, the GPIB address is automatically switched over to 18 provided that the default address of the R&S ESR (20) is still set. If a different value is set, this value is maintained. Upon return to SCPI, this address remains unchanged.

The following table shows the default settings obtained after a change of the GPIB language and for the commands IP, KST and RESET:

Model	# of Trace Points	Start Freq.	Stop Freq.	Ref Level	Input Coupling
8566A/B	1001	2 GHz	22 GHz	0 dBm	AC
8568A/B	1001	0 Hz	1.5 GHz	0 dBm	AC
8560E	601	0 Hz	2.9 GHz	0 dBm	AC
8561E	601	0 Hz	6.5 GHz	0 dBm	AC
8562E	601	0 Hz	13.2 GHz	0 dBm	AC
8563E	601	0 Hz	26.5 GHz	0 dBm	AC
8564E	601	0 Hz	40 GHz	0 dBm	AC
8565E	601	0 Hz	50 GHz	0 dBm	AC
8594E	401	0 Hz	3 GHz	0 dBm	AC



Stop frequency

The stop frequency given in the table may be limited to the corresponding frequency range of the R&S ESR.

Command LF sets the stop frequency for 8566A/B to a maximum value of 2 GHz.

Test points (trace points)

The number of trace points is switched over only upon transition to the REMOTE state.

11.18.6 Data Output Formats

In the case of the SCPI and IEEE488.2 standards, the output formats for numerical data are flexible to a large extent. The output format for the HP units, by contrast, is accurately defined with respect to the number of digits. The memory areas for reading instrument data have therefore been adapted accordingly in the remote-control programs for instruments of this series.

Therefore, in response to a query, the R&S ESR returns data of the same structure as that used by the original instruments; this applies in particular to the number of characters returned.

Two formats are currently supported when trace data is output: Display Units (command O1) and physical values (command O2, O3 or TDF P). As to the "Display Units" format, the level data of the R&S ESR is converted to match the value range and the resolution of the 8566/8568 series. Upon transition to the **REMOTE** state, the R&S ESR is reconfigured such that the number of test points (trace points) corresponds to that of the 85xx families (1001 for 8566A/B and 8568A/B, 601 for 8560E to 8565E, 401 for 8594E).

11.18.7 Trace Data Output Formats

All formats are supported for trace data output: display units (command O1), display units in two byte binary data (command O2 or TDF B and MDS W), display units in one byte binary data (command O4 or TDF B and MDS B) and physical values (commands O3 or TDF P). With format "display units" the level data is converted into value range and resolution of the 8566/8568 models. On transition to REMOTE state the number of trace points are reconfigured in order to be conform to the selected instrument model (1001 for 8566A/B and 8568 A/B, 601 for 8560E to 8565E, 401 for 8594E).

11.18.8 Trace Data Input Formats

Trace data input is only supported for binary date (TDF B, TDF A, TDF I, MDS W, MDS B).

11.18.9 GPIB Status Reporting

The assignment of status bits by commands R1, R2, R3, R4, RQS is supported.

The STB command and the serial poll respond with an 8-bit value with the following assignment:

Bit enabled by RQS	Description
0	not used (value 0)
1	Units key pressed
2	End of Sweep

Bit enabled by RQS	Description
3	Device Error
4	Command Complete
5	Illegal Command
6	Service Request
7	not used (value 0)

Bits 0 and 7 are not used and always have the value 0.

Please note that the R&S ESR reports any key pressed on the front panel rather than only the unit keys if bit 1 was enabled.

Another difference is the behavior of bit 6 when using the STB? query. On the HP analyzers this bit monitors the state of the SRQ line on the bus. On the R&S ESR this is not possible. Therefore this bit is set, as soon as one of the bits 1 to 5 is set. It won't be reset by performing a serial poll.

12 Maintenance

The following chapter contains information on the maintenance of the R&S ESR. The instrument does not need a periodic maintenance. What is necessary is essentially the cleaning of the instrument. However, it is recommended to check the rated data from time to time.

Follow the instructions in the service manual and the safety instructions when exchanging modules or ordering spares. The order no. for spare parts is included in the service manual. The service manual includes further information particularly on troubleshooting, repair, exchange of modules (including battery exchange, adjustment of the OCXO oscillator) and alignment.

The address of our support center and a list of all Rohde & Schwarz service centers can be found at the beginning of this manual.

12.1 Cleaning

⚠ WARNING**Risk of electric shock**

If moisture enters the casing, for example if you clean the instrument using a moist cloth, contact with the instrument can lead to electric shock. Before cleaning the instrument other than with a dry cloth, make sure that the instrument is switched off and disconnected from all power supplies.

NOTICE**Instrument damage caused by cleaning agents**

Cleaning agents contain substances such as solvents (thinners, acetone, etc.), acids, bases, or other substances. Solvents can damage the front panel labeling, plastic parts, or screens, for example.

Never use cleaning agents to clean the outside of the instrument. Use a soft, dry, lint-free dust cloth instead.

NOTICE**Risk of instrument damage due to obstructed fans**

If the instrument is operated in dusty areas, the fans become obstructed by dust or other particles over time. Check and clean the fans regularly to ensure that they always operate properly. If the instrument is run with obstructed fans for a longer period, the instrument overheats, which can disturb the operation and even cause damage.

1. Clean the outside of the instrument using a soft, dry, lint-free dust cloth.
2. Check and clean the fans regularly to ensure that they always operate properly.
3. Clean the touchscreen as follows:
 - a) Apply a small amount of standard screen cleaner to a soft cloth.
 - b) Wipe the screen gently with the moist, but not wet, cloth.
 - c) If necessary, remove any excess moisture with a dry, soft cloth.

12.2 Storing and Packing

The storage temperature range of the instrument is given in the data sheet. If the instrument is to be stored for a longer period of time, it must be protected against dust.

Repack the instrument as it was originally packed when transporting or shipping. The two protective foam plastic parts prevent the control elements and connectors from being damaged. The antistatic packing foil avoids any undesired electrostatic charging to occur.

If you do not use the original packaging, provide for sufficient padding to prevent the instrument from slipping inside the package. Wrap antistatic packing foil around the instrument to protect it from electrostatic charging.

12.3 List of Available Power Cables

Table 12-1: List of power cables available

Stock No.	Earthed-contact connector	Preferably used in
DS 006.7013.00	BS1363: 1967' complying with IEC 83: 1975 standard B2	Great Britain
DS 006.7020.00	Type 12 complying with SEV-regulation 1011.1059, standard sheet S 24 507	Switzerland
DS 006.7036.00	Type 498/13 complying with US-regulation UL 498, or with IEC 83	USA/Canada
DS 006.7107.00	Type SAA3 10 A, 250 V, complying with AS C112-1964 Ap.	Australia
DS 0025.2365.00	DIN 49 441, 10 A, 250 V, angular	Europe (except Switzerland)
DS 0099.1456.00	DIN 49 441, 10 A, 250 V, straight	

13 Error Messages

Error messages are entered in the error/event queue of the status reporting system in the remote control mode and can be queried with the command `SYSTem:ERRor?`. The answer format of R&S ESR to the command is as follows:

```
<error code>, "<error text with queue query>;
<remote control command concerned>"
```

The indication of the remote control command with prefixed semicolon is optional.

Example:

The command `"TEST:COMMAND"` generates the following answer to the query `SYSTem:ERRor?`

```
-113, "Undefined header;TEST:COMMAND"
```

There are two types of error messages:

- Error messages defined by SCPI are marked by negative error codes. These messages are defined and described in the SCPI standard and not listed here.
- Device-specific error messages use positive error codes. These messages are listed below.

The right-hand column in the following tables contains the error text in bold which is entered in the error/event queue and can be read out by means of query `SYSTem:ERRor?`. A short explanation of the error cause is given. The left-hand column contains the associated error code.

Additionally, option-specific warnings and error messages displayed in the status bar are explained.

Table 13-1: Device-specific error messages

Error code	Error text in the case of queue poll Error explanation
1052	Frontend LO is Unlocked This message is displayed when the phase regulation of the local oscillator fails in the RF front-end.
1060	Trigger-Block Gate Delay Error- gate length < Gate Delay This message is displayed when the gate signal length is not sufficient for the pull-in delay with a predefined gate delay.
1064	Tracking LO is Unlocked This message is displayed when the phase regulation of the local oscillator fails on the tracking generator module.
2028	Hardcopy not possible during measurement sequence This message is displayed when a printout is started during scan sequences that cannot be interrupted. Such sequences are for example: <ul style="list-style-type: none"> • Recording the system error correction data (alignment) • Instrument self test In such cases synchronization to the end of the scan sequence should be performed prior to starting the printout.

Error code	Error text in the case of queue poll Error explanation
2033	Printer Not Available This message is displayed when the selected printer is not included in the list of available output devices. A possible cause is that the required printer driver is missing or incorrectly installed.
2034	CPU Temperature is too high This message is displayed when the temperature of the processor exceeds 70 °C.

14 Appendix: LAN Interface

In this appendix, additional information on the LAN interface is given. How to connect the instrument to the network and configure the network protocols is described in [Chapter 11.2.6, "Setting Up a Network \(LAN\) Connection"](#), on page 623.



Network restrictions and entering passwords

Only user accounts with administrator rights can configure LAN networks. For details see [Chapter 3.2.5.3, "Login"](#), on page 57.

In some of the following step-by-step instructions, user names and passwords must be entered. This requires using the touchscreen and the on-screen keyboard, or a mouse and an external keyboard (see [Chapter 3.4, "Basic Operations"](#), on page 63 and [Chapter 3.2.2, "Connecting USB Devices"](#), on page 46).

- [Configuring the Network](#).....1074
- [Operation with Windows Remote Desktop](#)1081
- [Operation with a VNC Client](#).....1085
- [Starting and Terminating Remote Operation](#).....1086
- [Deactivating the R&S ESR via Remote Operation](#).....1088

14.1 Configuring the Network

After network support has been installed, data can be exchanged between the instrument and other computers, and network printers can be used.

Network operation is only possible if you are authorized to access network resources. Typical resources are file directories of other computers or even central printers. Authorization is assigned by the network or server administrator.

WARNING

Connection to networks

Before connecting the instrument to the network or configuring the network, consult your network administrator, particularly for large LAN installations. Errors may affect the entire network.

Never connect your analyzer to a network unprotected against virus infection because this may cause damage to the instrument software.

To integrate the instrument into your network, you can change the following system properties:

- Computer name
- Domain
- Workgroup

Operation on the network includes the following administrative tasks:

• Changing the Computer Name	1075
• Changing the Domain or Workgroup	1075
• Operating the Instrument Without a Network	1076
• Creating Users	1077
• Changing the User Password	1077
• Logging on to the Network	1077
• Automatic Login Function	1078
• Mapping Network Drives	1079
• Sharing Directories (only with Microsoft Networks)	1080

14.1.1 Changing the Computer Name

1. Press the [SETUP] function key on the front panel of the R&S ESR.
2. Press the "General Setup" softkey.
3. Press the "Network Address" softkey.
The submenu is displayed.
4. Press the "Computer Name" softkey and enter the computer name.
5. If you enter an invalid name, the error "message out of range" is displayed in the status line. The edit dialog box remains open, and you can start again.
If the settings are correct, the configuration is saved, and you are prompted to restart the instrument.
6. Confirm the displayed message ("Yes" button) to restart the instrument.


14.1.2 Changing the Domain or Workgroup



Changing settings

Before you change other settings than described here, contact your network administrator.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. Select "Start > Settings > System > About > Rename PC".

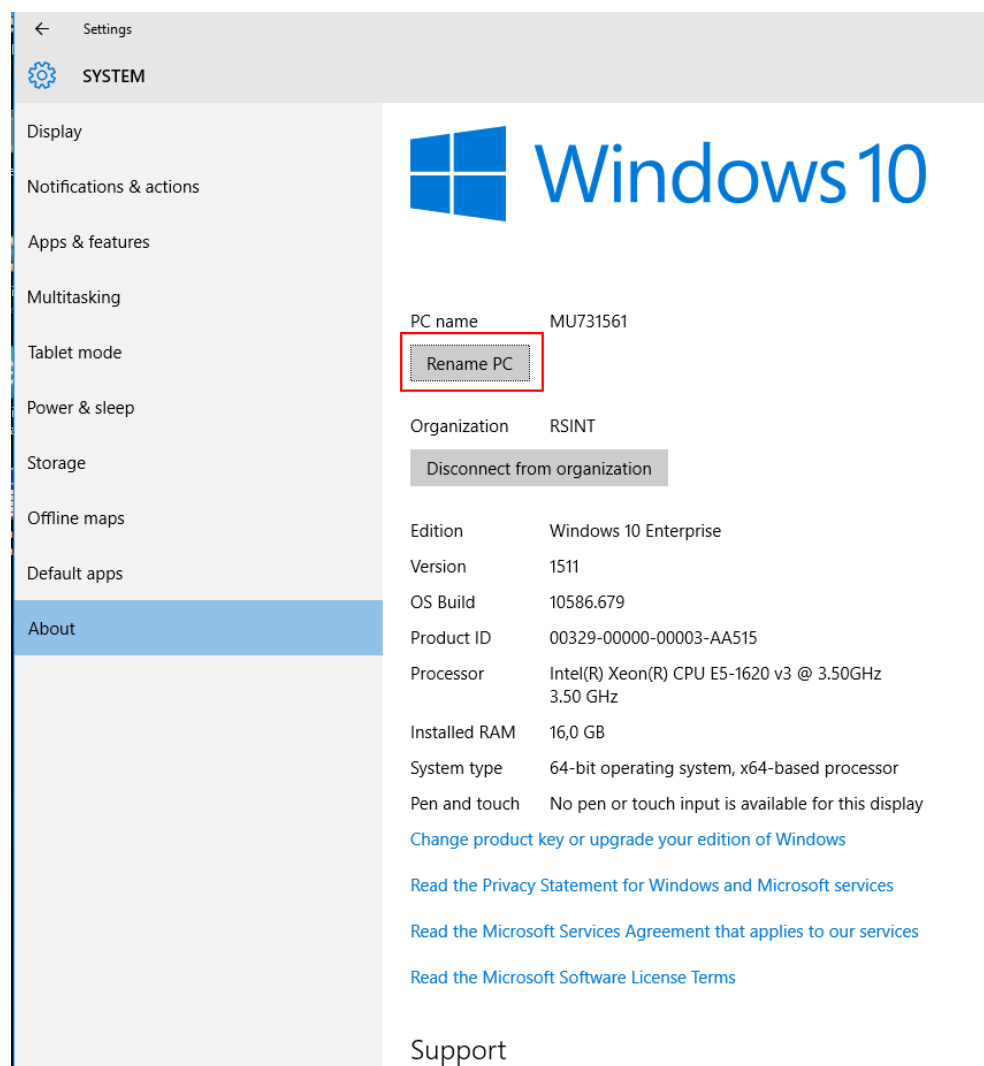

3. Select "Change..."
The dialog box for computer name and domain changes is displayed.
4. Enter a "Domain" or "Workgroup."
5. Confirm the changes with "OK".
6. Confirm the prompt to restart the instrument.

14.1.3 Operating the Instrument Without a Network

To operate the instrument without a network connection either temporarily or permanently, no special measures are necessary. Windows automatically detects the interruption of the network connection and does not set up the connection when the instrument is switched on.

If you are not prompted to enter the user name and password, see "[Automatic Login Function](#)" on page 57.

14.1.4 Creating Users

After the software for the network has been installed, the instrument issues an error message the next time it is switched on because there is no user named "instrument" (= user ID for Windows automatic login) in the network. Thus, a matching user must be created in Windows and in the network, the password must be adapted to the network password, and the automatic login mechanism must then be deactivated.

The network administrator is responsible for creating new users in the network.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. Select "Start > Settings > Accounts > Other users".
3. Select "Add someone else to this PC".
4. In the "Microsoft account" dialog box, enter the new user name and password.
5. Select "OK".
6. Select "Finish".
The new user is created.

14.1.5 Changing the User Password

After the new user has been created on the instrument, the password must be adapted to the network password.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. Press [Ctrl + Alt + Delete], then select "Change a password".
3. Enter the user account name.
4. Enter the old password.
5. Enter the new password in the upper text line and repeat it in the following line.
6. Press [Enter].
The new password is now active.

14.1.6 Logging on to the Network

At the same time you log on to the operating system, you are automatically logged on to the network. As a prerequisite, the user name and the password must be identical under Windows and on the network.

14.1.7 Automatic Login Function

When shipped, the instrument automatically logs on the default "Instrument" user to Microsoft Windows using the default password.

Switching users when using the automatic login function

Which user account is used is defined during login. If automatic login is active, the login window is not displayed. However, you can also switch the user account to be used when the automatic login function is active.



1. Press the "Windows" key or the [CTRL + ESC] key combination on your keyboard to access the operating system of the R&S ESR (see also [Chapter 3.2.5.4, "Accessing the Start Menu"](#), on page 59).
2. Press [CTRL + ALT + DEL], then select "Sign out".
The "Login" dialog box is displayed, in which you can enter the different user account name and password.

Deactivating the automatic login function

To deactivate the automatic login function, perform the following steps:



1. Press the "Windows" key or the [CTRL + ESC] key combination on your keyboard to access the operating system of the R&S ESR (see also [Chapter 3.2.5.4, "Accessing the Start Menu"](#), on page 59).
2. In the "Start" menu, select "All applications > Windows System > Run".
The "Run" dialog box is displayed.
3. Enter the command `C:\R_S\INSTR\USER\NO_AUTOLOGIN.REG`.
4. Press the [ENTER] key to confirm.
This command deactivates the automatic login function. The next time you switch on the instrument, the operating system prompts you to enter your user name and password before it starts the firmware.

Adapting the automatic login function to a new password

If you change the "Instrument" user's password, which is used during automatic login, this function no longer works. Adapt the settings for the command that activates the auto login function first.

1. Open the `C:\R_S\INSTR\USER\NO_AUTOLOGIN.REG` file in any text editor (e.g. Notepad).
2. In the line `"DefaultPassword"="894129"`, replace the default password (894129) by the new password for automatic login.
3. Save the changes to the file.


Reactivating the automatic login function




1. Press the "Windows" key or the [CTRL + ESC] key combination on your keyboard to access the operating system of the R&S ESR (see also [Chapter 3.2.5.4, "Accessing the Start Menu"](#), on page 59).
2. In the "Start" menu, select "All applications > Windows System > Run". The "Run" dialog box is displayed.
3. Enter the command `C:\R_S\INSTR\USER\AUTOLOGIN.REG`.
4. Press the [ENTER] key to confirm. This command reactivates automatic login function. It is active the next time the instrument reboots.

14.1.8 Mapping Network Drives

1. Press the [SAVE/ RCL] key on the front panel of the R&S ESR.
2. Press the "File Manager" softkey.
3. Press the "More" softkey.
4. Press the "Network Drive" softkey. The "Map Network Drive" dialog box is displayed.

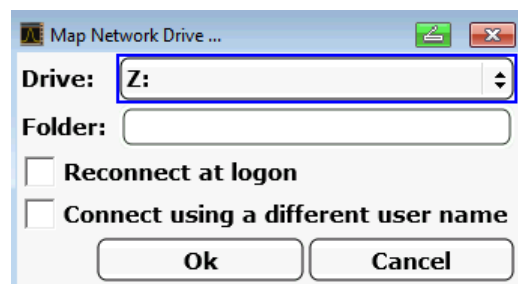

5. Press the "Drive" list to open the network drive list and select the drive you want to map. Alternatively:
 - Press the "Map Network Drive" softkey to set the focus on the "Drive" list.
 - Press [ENTER] to open the network drive list and select the drive you want to map using the arrow keys.
6. To have the connection set up automatically each time the instrument is started, in the "Map Network Drive" dialog box, activate the "Reconnect at logon" option.
7. To connect using a different user name, activate the "Connect using a different user name" option. The "Map Network Drive" dialog box is extended by the "User name" and "Password" fields.

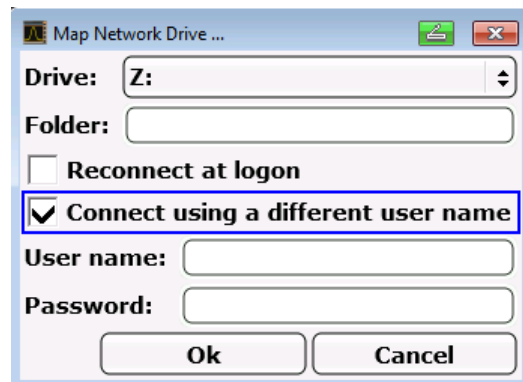

8. Enter your user name and password.
 9. Confirm with "OK".
The drive is displayed in the Explorer.
- Note:** Only networks that you authorized to access are connected.

Disconnecting network drives

1. Press the [SAVE/ RCL] key on the front panel of the R&S ESR.
2. Press the "File Manager" softkey.
3. Press the "More" softkey.
4. Press the "Network Drive" softkey.
5. Press the "Disconnect Network Drive" softkey.
The "Disconnect Network Drive" dialog box is displayed.
6. In the "Drive" list, select the drive you want to disconnect.
7. Confirm with "OK".

14.1.9 Sharing Directories (only with Microsoft Networks)

Sharing directories makes data available for other users. This is only possible in Microsoft networks. Sharing is a property of a file or directory.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. Open the "Windows Explorer".
3. Select the desired folder with the right mouse button.
4. In the context menu, select "Share with > Specific people".
5. Select the users on your network you want to allow access to the directory to.
6. Select "Share" to confirm the settings.

7. Select "Done" to close the dialog box.
The drive is shared and can be accessed by the selected users.

14.2 Operation with Windows Remote Desktop

In production test and measurement, a common requirement is central monitoring of the T&M instruments for remote maintenance and remote diagnostics. Equipped with the Windows Remote Desktop software, the R&S ESR ideally meets requirements for use in production. (The computer that is used for remote operation is called "controller" here.)

- Access to the control functions via a virtual front panel (soft front panel)
- Printout of measurement results directly from the controller
- Storage of measured data on the controller's hard disk

Note that monitoring real time measurements is not possible with the remote desktop. Use the [VNC client](#) instead.

The R&S ESR is connected via a LAN, in which case the Windows operating system also supports a connection via a modem. This section describes the configuration of the R&S ESR and the Remote Desktop Client of the controller. Details on how to set up a modem connection are described in the Windows documentation.

14.2.1 Configuring the R&S ESR for Remote Operation



To avoid problems, use a fixed IP address.

When a DHCP server is used, a new IP address is assigned each time the instrument is restarted. This address must first be determined on the instrument itself. Thus, using a DHCP server is not suitable for remote operation of the R&S ESR via Remote Desktop.




With the factory settings, the default "instrument" user can connect to the R&S ESR with the Remote Desktop program of the controller immediately. No further configuration is required. However, if the connection fails or other users need to connect, this section provides basic instructions on setting up the Remote Desktop for the R&S ESR.

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. In the Windows "Start" menu, select "Settings > System".
3. Search for "remote access".
4. Select "Allow remote access to your computer".

5. Define which users are to be given access to the R&S ESR via Remote Desktop.

Note: The user account under which configuration is carried out is automatically enabled for Remote Desktop.

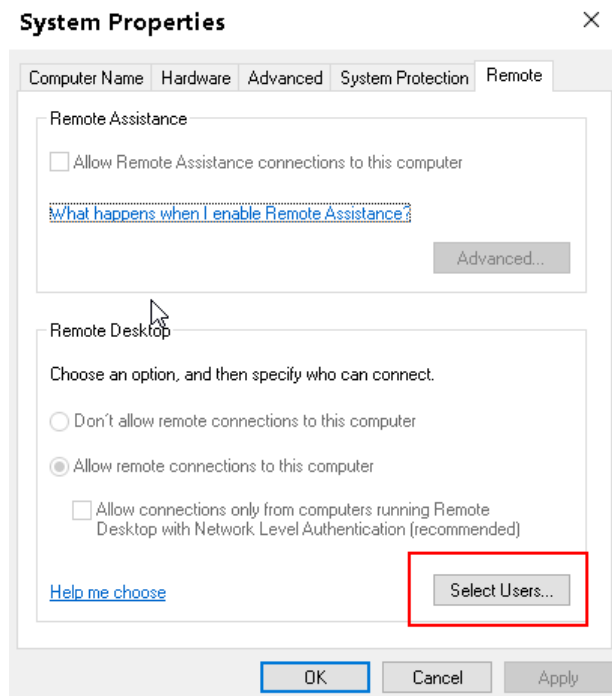

- a) Select the "Select Users" button.
 - b) Select the users or create new user accounts as described in [Chapter 14.1.4, "Creating Users"](#), on page 1077.
 - c) Select "OK" to confirm the settings.
6. The R&S ESR is now ready for connection setup with the Remote Desktop program of the controller.

14.2.2 Configuring the Controller




Remote Desktop Client


The Windows Remote Desktop Client is part of the operating system and can be accessed via "Start > All Applications > Windows Accessories > Remote Desktop Connection".

1. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
2. From the "Start" menu, select "All Programs > Accessories > Remote Desktop Connection".
The "Remote Desktop Connection" dialog box is displayed.

3. Select the "Options >>" button.
The dialog box is expanded to display the configuration data.

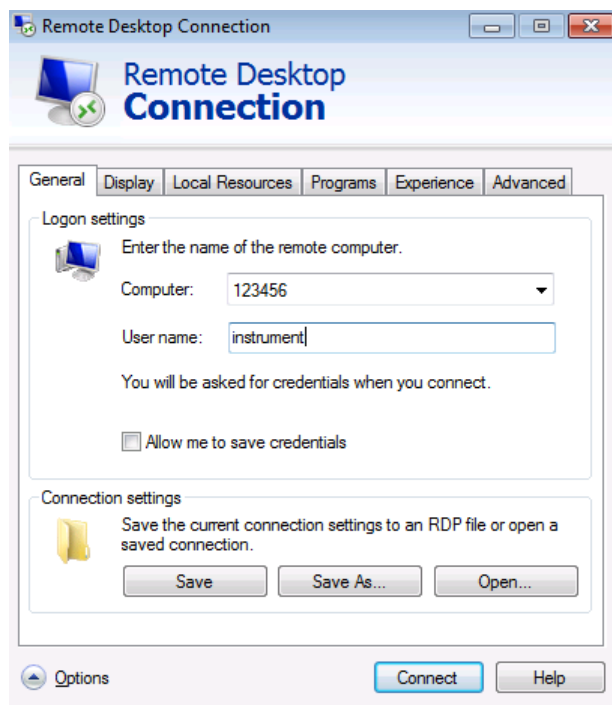

4. Open the "Experience" tab.
The settings on this tab are used to select and optimize the connection speed.
5. In the list, select the appropriate connection (for example: LAN (10 Mbps or higher)).
Depending on your selection (and how powerful the connection is), the options are activated or deactivated.
6. To improve the performance, you can deactivate the "Desktop background", "Show contents of window while dragging" and "Menu and window animation" options.
7. Open the "Local Resources" tab for enabling printers, local drives and serial interfaces.
8. If you will need to access drives of the controller from the R&S ESR (e.g. in order to store settings or to copy files from the controller to the R&S ESR), select "More", then enable the "Drives" option.

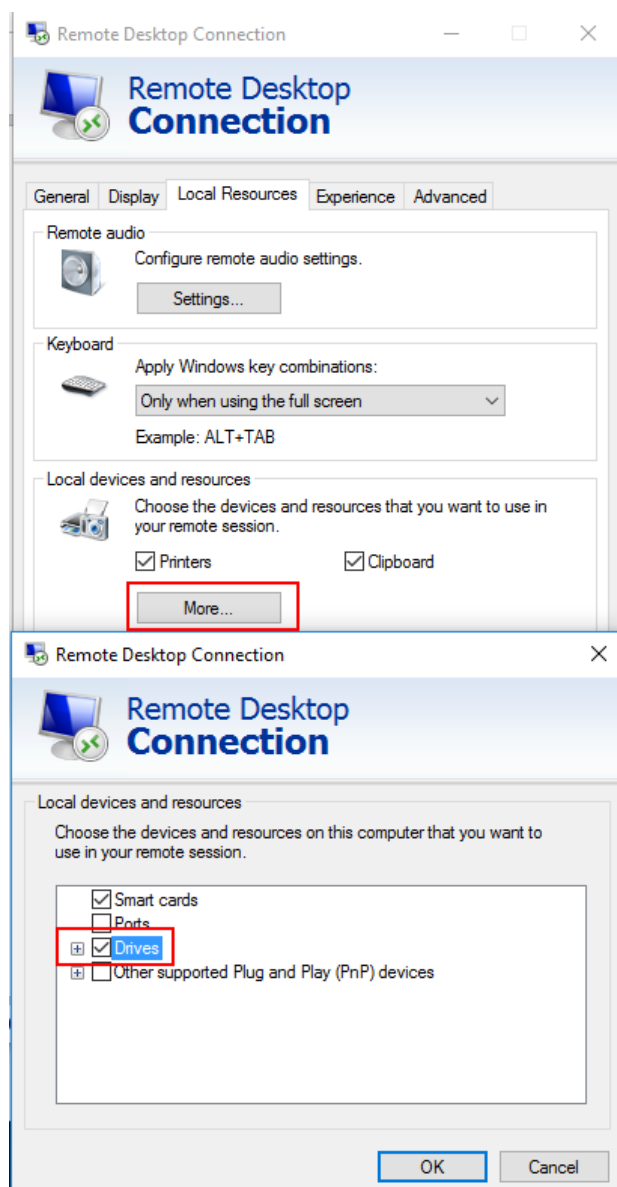

Windows will then map drives of the controller to the corresponding network drives.

9. To use printers connected to the controller while accessing them from the R&S ESR, activate the "Printers" option. Do not change the remaining settings.
10. Open the "Display" tab.
The options for configuring the R&S ESR screen display are displayed.
11. Under "Remote desktop size", you can set the size of the R&S ESR window on the desktop of the controller.
12. Under "Colors", do not change the settings.
13. Set the "Display the connection bar when I use the full screen" option:

- If activated, a bar showing the network address of the R&S ESR will appear at the top edge of the screen. You can use this bar to reduce, minimize or close the window.
- If deactivated, the only way you can return to the controller desktop from the R&S ESR screen in full screen mode is to select "Disconnect" from the "Start" menu.

14.3 Operation with a VNC Client

Virtual Network Computing (VNC) allows you to control the R&S ESR (the VNC server) from a remote computer (the VNC client), for example to monitor the instruments in a production line. The handling of a VNC system is similar to using the Windows Remote Desktop, but VNC has some advantages compared to the Remote Desktop.

- You can view the contents of the instrument display on more than one client
- VNC clients are available for many operating systems. Thus, a VNC is independent of the platform you are using.
- You can still control the instrument itself when a remote connection has been established, and see what is happening on both the instrument display and the client. With the display running, you can also change settings both on the instrument and with the client simultaneously. (Using the Remote Desktop turns off the display and viewing the display contents is only possible on the controlling computer.)
- The complete mini soft front panel is available on the client ("Alt-M" opens the mini soft front panel).
- Monitoring real time measurements is possible with the VNC client (this does not work with the Remote Desktop).

All R&S ESR instruments support a VNC and are delivered with a version of the TightVNC software. On the client side, you can use a web browser or a VNC client to access the instrument.

Using a web browser

If you are using a web browser (for example Microsoft Internet Explorer), enter the IP address of the instrument and the port you are using for the connection into the address bar to establish a connection (for example "192.0.2.0:5800").

The browser then opens an interface that allows you to control the instrument after you have entered the password.

The default port is 5800 and the default password is 894129, but you can change this on the VNC software that comes with the instrument if required.

Note that using a browser requires you to install Java in order to run properly.


Using a VNC client

Alternatively, you can install a VNC client on your computer (for example a program like TightVNC) and use that to access the instrument. In that case, start the client and enter the IP address of the instrument to establish a connection.

14.4 Starting and Terminating Remote Operation

Setting up a connection to the R&S ESR


1. In the "Remote Desktop Connection" dialog box (see [Chapter 14.2, "Operation with Windows Remote Desktop"](#), on page 1081), open the "General" tab.
2. In the "Computer" field, enter the IP address of the R&S ESR.
In the "User name" field, enter *instrument* to log in as an administrator, or *Normal User* to log in as a standard user.
In the "Password" field, enter *894129*.
3. To save the connection configuration for later use:
 - a) Select the "Save As" button.
The "Save As" dialog box is displayed.
 - b) Enter the name for the connection information (*.RDP).
4. To load an existing connection configuration:
 - a) Select the "Open" button.
The "Open" dialog box is displayed.
 - b) Select the *.RDP file.
5. Select the "Connect" button.
The connection is set up.
6. If the "Drives" option is activated on the "Local Resources" tab, a warning is displayed indicating that the drives are enabled for access from the R&S ESR.
Select "OK" to confirm the warning.
7. After a few moments, the R&S ESR screen is displayed.
If a dark screen appears or a dark square appears in the upper left-hand corner of the screen, you must restart the R&S ESR in order to see the modified screen resolution.

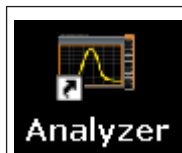

- Press the key combination [ALT] + [F4].
- The R&S ESR firmware is shut down, which may take a few seconds.
- On the desktop, double-tap the "Analyzer" icon.

The firmware restarts and then automatically opens the "Soft Front Panel", i.e. the user interface on which all front panel controls and the rotary knob are mapped to buttons.

8. To deactivate or activate the "Soft Front Panel", press the [F6] key. After the connection is established, the R&S ESR screen is displayed in the "Remote Desktop" application window.

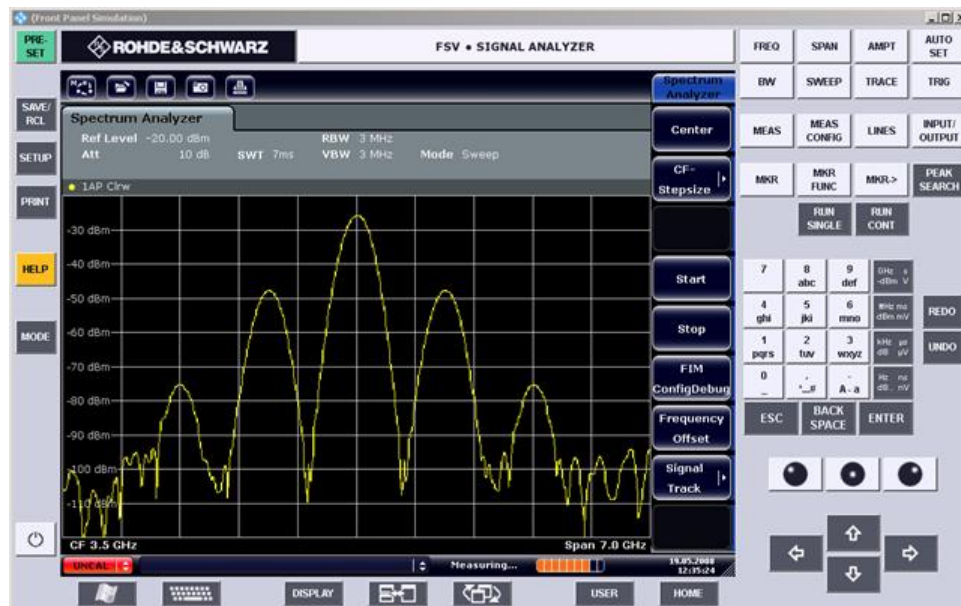

You can operate all keys and softkeys using the mouse. The rotary knob is simulated using the knob buttons.

The Windows "Start" menu can be made available by expanding the "Remote Desktop" window to full size.

During the connection with the controller, the login entry is displayed on the R&S ESR screen.

Terminating Remote Desktop control

The connection can be terminated by the controller or by a user at the R&S ESR:

- ▶ ● On the controller, close the "Remote Desktop" window.
The connection to the R&S ESR is terminated (any time is possible).
- On the R&S ESR, a user logs on.
The connection to the controller is terminated as a result. A message is displayed on the controller display indicating that another user has assumed control of the instrument.

Restoring the connection to the R&S ESR

Follow the instructions above for setting up a connection to the R&S ESR. If the connection is terminated and then restored, the R&S ESR remains in the same state.

14.5 Deactivating the R&S ESR via Remote Operation

1. Click the R&S ESR soft front panel and close the application with the key combination [ALT] + [F4].
2. Click the desktop and press the key combination [ALT] + [F4] to shut down the R&S ESR.
A safety query is displayed to warn you that the instrument cannot be reactivated via remote operation and asks you whether you want to continue the shutdown process.
3. Respond to the safety query with "Yes".
The connection with the controller is terminated and the R&S ESR is shut down.

List of Commands

[[SENSe:]SWEep:SPACing.....	678
[SENSe:][WINDow:]DETEctor<trace>[:FUNction].....	683
[SENSe:][WINDow:]DETEctor<trace>[:FUNction].....	853
[SENSe:][WINDow:]DETEctor<trace>[:FUNction]:AUTO.....	853
[SENSe:]ADJust:ALL.....	828
[SENSe:]ADJust:CONFIguration:HYSteresis:LOWer.....	828
[SENSe:]ADJust:CONFIguration:HYSteresis:UPPer.....	828
[SENSe:]ADJust:CONFIgure:LEVel:DURation.....	828
[SENSe:]ADJust:CONFIgure:LEVel:DURation:MODE.....	829
[SENSe:]ADJust:CONFIgure:TRIG.....	829
[SENSe:]ADJust:FREQuency.....	829
[SENSe:]ADJust:LEVel.....	830
[SENSe:]AVERAge<n>:COUNT.....	851
[SENSe:]AVERAge<n>:TYPE.....	852
[SENSe:]AVERAge<n>[:STATe<Trace>].....	852
[SENSe:]BANDwidth:IF.....	670
[SENSe:]BANDwidth BWIDth:VIDeo.....	831
[SENSe:]BANDwidth BWIDth:VIDeo:AUTO.....	832
[SENSe:]BANDwidth BWIDth:VIDeo:RATio.....	832
[SENSe:]BANDwidth BWIDth:VIDeo:TYPE.....	833
[SENSe:]BANDwidth BWIDth[:RESolution].....	670
[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO.....	671
[SENSe:]BANDwidth BWIDth[:RESolution]:AUTO.....	830
[SENSe:]BANDwidth BWIDth[:RESolution]:FFT.....	831
[SENSe:]BANDwidth BWIDth[:RESolution]:RATio.....	831
[SENSe:]BANDwidth BWIDth[:RESolution]:TYPE.....	671
[SENSe:]CORRection:COLLect[:ACQuire].....	901
[SENSe:]CORRection:METHod.....	902
[SENSe:]CORRection:RECall.....	902
[SENSe:]CORRection:TRANsducer:ACTive?.....	951
[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe].....	950
[SENSe:]CORRection:TRANsducer:CATalog?.....	951
[SENSe:]CORRection:TRANsducer:COMMeNt.....	951
[SENSe:]CORRection:TRANsducer:DATA.....	952
[SENSe:]CORRection:TRANsducer:DELeTe.....	952
[SENSe:]CORRection:TRANsducer:GENerator.....	907
[SENSe:]CORRection:TRANsducer:SCALing.....	952
[SENSe:]CORRection:TRANsducer:SELect.....	953
[SENSe:]CORRection:TRANsducer:UNIT.....	953
[SENSe:]CORRection:TRANsducer:VIEW.....	954
[SENSe:]CORRection:TRANsducer[:STATe].....	953
[SENSe:]CORRection:TSET:BReak.....	954
[SENSe:]CORRection:TSET:CATalog?.....	954
[SENSe:]CORRection:TSET:COMMeNt.....	955
[SENSe:]CORRection:TSET:DELeTe.....	955
[SENSe:]CORRection:TSET:RANGe<range>.....	955
[SENSe:]CORRection:TSET:SELect.....	956

[SENSe:]CORRection:TSET:UNIT.....	956
[SENSe:]CORRection:TSET[:STATe].....	956
[SENSe:]CORRection[:STATe].....	902
[SENSe:]DEMod.....	648
[SENSe:]DEMod:SQUelch:LEVel.....	648
[SENSe:]DEMod:SQUelch[:STATe].....	649
[SENSe:]DETEctor:RECeiver[:FUNction].....	639
[SENSe:]DETEctor<t>:FMEasurement.....	642
[SENSe:]ESPEctrum:BWID.....	771
[SENSe:]ESPEctrum:FILTer[:RRC]:ALPHa.....	771
[SENSe:]ESPEctrum:FILTer[:RRC][:STATe].....	772
[SENSe:]ESPEctrum:HighSPeed.....	762
[SENSe:]ESPEctrum:PRESet:REStore.....	760
[SENSe:]ESPEctrum:PRESet:StORe.....	760
[SENSe:]ESPEctrum:PRESet[:STANdard].....	760
[SENSe:]ESPEctrum:RANGe<range>:BANDwidth:VIDeo.....	763
[SENSe:]ESPEctrum:RANGe<range>:BANDwidth[:RESolution].....	763
[SENSe:]ESPEctrum:RANGe<range>:COUnT.....	764
[SENSe:]ESPEctrum:RANGe<range>:DELEte.....	764
[SENSe:]ESPEctrum:RANGe<range>:FILTer:TYPE.....	764
[SENSe:]ESPEctrum:RANGe<range>:INPut:ATTenuation.....	766
[SENSe:]ESPEctrum:RANGe<range>:INPut:ATTenuation:AUTO.....	766
[SENSe:]ESPEctrum:RANGe<range>:INPut:GAIN:STATe.....	766
[SENSe:]ESPEctrum:RANGe<range>:INSert.....	767
[SENSe:]ESPEctrum:RANGe<range>:LIMit<source>:ABSolute:StARt.....	767
[SENSe:]ESPEctrum:RANGe<range>:LIMit<source>:ABSolute:StOP.....	767
[SENSe:]ESPEctrum:RANGe<range>:LIMit<source>:RELative:StARt.....	768
[SENSe:]ESPEctrum:RANGe<range>:LIMit<source>:RELative:StOP.....	768
[SENSe:]ESPEctrum:RANGe<range>:LIMit<source>:STATe.....	769
[SENSe:]ESPEctrum:RANGe<range>:RLVeL.....	769
[SENSe:]ESPEctrum:RANGe<range>:SWEep:TIME.....	769
[SENSe:]ESPEctrum:RANGe<range>:SWEep:TIME:AUTO.....	770
[SENSe:]ESPEctrum:RANGe<range>:TRANsducer.....	770
[SENSe:]ESPEctrum:RANGe<range>[:FREQuency]:StARt.....	765
[SENSe:]ESPEctrum:RANGe<range>[:FREQuency]:StOP.....	765
[SENSe:]ESPEctrum:RRANGe.....	772
[SENSe:]ESPEctrum:RTYPE.....	772
[SENSe:]FMEasurement:AUTO.....	643
[SENSe:]FMEasurement:LISN:FILTer:HPAS[:STATe].....	684
[SENSe:]FMEasurement:LISN:PHASe.....	684
[SENSe:]FMEasurement:LISN[:TYPE].....	685
[SENSe:]FMEasurement:TIME.....	643
[SENSe:]FREQuency:CENTer.....	665
[SENSe:]FREQuency:CENTer.....	822
[SENSe:]FREQuency:CENTer:StEP.....	665
[SENSe:]FREQuency:CENTer:StEP:AUTO.....	823
[SENSe:]FREQuency:CENTer:StEP:LINK.....	823
[SENSe:]FREQuency:CENTer:StEP:LINK:FACTor.....	824
[SENSe:]FREQuency:MODE.....	666
[SENSe:]FREQuency:MODE.....	824

[SENSe:]FREQUency:OFFSet.....	824
[SENSe:]FREQUency:SPAN.....	825
[SENSe:]FREQUency:SPAN:FULL.....	825
[SENSe:]FREQUency:STARt.....	666
[SENSe:]FREQUency:STARt.....	825
[SENSe:]FREQUency:STOP.....	666
[SENSe:]FREQUency:STOP.....	825
[SENSe:]LIST:POWer:RESult?.....	816
[SENSe:]LIST:POWer:SET.....	819
[SENSe:]LIST:POWer:STATe.....	820
[SENSe:]LIST:POWer[:SEQUence].....	817
[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo.....	751
[SENSe:]LIST:RANGe<range>:BANDwidth[:RESolution].....	750
[SENSe:]LIST:RANGe<range>:BREak.....	751
[SENSe:]LIST:RANGe<range>:COUNt.....	751
[SENSe:]LIST:RANGe<range>:DELeTe.....	752
[SENSe:]LIST:RANGe<range>:DETEctor.....	752
[SENSe:]LIST:RANGe<range>:FILTer:TYPE.....	752
[SENSe:]LIST:RANGe<range>:INPut:ATTenuation.....	754
[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO.....	754
[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe.....	754
[SENSe:]LIST:RANGe<range>:LIMit:STARt.....	755
[SENSe:]LIST:RANGe<range>:LIMit:STATe.....	755
[SENSe:]LIST:RANGe<range>:LIMit:STOP.....	756
[SENSe:]LIST:RANGe<range>:POINts.....	756
[SENSe:]LIST:RANGe<range>:RLEVel.....	756
[SENSe:]LIST:RANGe<range>:SWEep:TIME.....	757
[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO.....	757
[SENSe:]LIST:RANGe<range>:TRANsducer.....	757
[SENSe:]LIST:RANGe<range>[:FREQUency]:STARt.....	753
[SENSe:]LIST:RANGe<range>[:FREQUency]:STOP.....	753
[SENSe:]MPOWer:FTYPE.....	812
[SENSe:]MPOWer:RESult:MIN?.....	813
[SENSe:]MPOWer:RESult[:LIST]?.....	812
[SENSe:]MPOWer[:SEQUence].....	813
[SENSe:]POWer:ACHannel:ACPairs.....	730
[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ACHannel.....	730
[SENSe:]POWer:ACHannel:BANDwidth BWIDth:ALTErnatE<channel>.....	730
[SENSe:]POWer:ACHannel:BANDwidth BWIDth[:CHANnel<channel>].....	731
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel.....	734
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTErnatE<channel>.....	734
[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<channel>.....	735
[SENSe:]POWer:ACHannel:FILTer:ALPHa[:ALL].....	734
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel.....	735
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALL.....	736
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTErnatE<channel>.....	735
[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<channel>.....	735
[SENSe:]POWer:ACHannel:MODE.....	746
[SENSe:]POWer:ACHannel:NAME:ACHannel.....	731
[SENSe:]POWer:ACHannel:NAME:ALTErnatE<channel>.....	732

[SENSe:]POWer:ACHannel:NAME:CHANnel<channel>.....	732
[SENSe:]POWer:ACHannel:PRESet.....	725
[SENSe:]POWer:ACHannel:PRESet:RLEVel.....	726
[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE.....	736
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO.....	736
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual.....	737
[SENSe:]POWer:ACHannel:SPACing:ALTErnate<channel>.....	733
[SENSe:]POWer:ACHannel:SPACing:CHANnel<channel>.....	733
[SENSe:]POWer:ACHannel:SPACing[:ACHannel].....	732
[SENSe:]POWer:ACHannel:TXCHannel:COUNT.....	733
[SENSe:]POWer:BANDwidth BWIDth.....	749
[SENSe:]POWer:HSPeed.....	747
[SENSe:]POWer:NCORrection.....	747
[SENSe:]POWer:TRACe.....	725
[SENSe:]ROSCillator:EXTernal:FREQuency.....	933
[SENSe:]ROSCillator:SOURce.....	934
[SENSe:]ROSCillator:SOURce:EAUTO?.....	934
[SENSe:]SCAN:RANGes[:COUNT].....	676
[SENSe:]SCAN:TDOMain.....	647
[SENSe:]SCAN<range>:BANDwidth:RESolution.....	675
[SENSe:]SCAN<range>:INPut:ATTenuation.....	675
[SENSe:]SCAN<range>:INPut:ATTenuation:AUTO.....	675
[SENSe:]SCAN<range>:INPut:GAIN:AUTO.....	676
[SENSe:]SCAN<range>:INPut:GAIN[:STATE].....	676
[SENSe:]SCAN<range>:INPut:TYPE.....	676
[SENSe:]SCAN<range>:START.....	677
[SENSe:]SCAN<range>:STEP.....	677
[SENSe:]SCAN<range>:STOP.....	677
[SENSe:]SCAN<range>:TIME.....	678
[SENSe:]SWEep:COUNT.....	673
[SENSe:]SWEep:COUNT.....	834
[SENSe:]SWEep:COUNT:CURRent.....	673
[SENSe:]SWEep:EGATe.....	841
[SENSe:]SWEep:EGATe:HOLDoff.....	841
[SENSe:]SWEep:EGATe:LENGth.....	842
[SENSe:]SWEep:EGATe:POLarity.....	842
[SENSe:]SWEep:EGATe:SOURce.....	842
[SENSe:]SWEep:EGATe:TRACe<k>: PERiod.....	795
[SENSe:]SWEep:EGATe:TRACe<k>: STOP<range>.....	796
[SENSe:]SWEep:EGATe:TRACe<k>:COMMENT.....	794
[SENSe:]SWEep:EGATe:TRACe<k>:START<range>.....	795
[SENSe:]SWEep:EGATe:TRACe<k>[:STATE<range>].....	795
[SENSe:]SWEep:EGATe:TYPE.....	843
[SENSe:]SWEep:MODE.....	761
[SENSe:]SWEep:POINts.....	834
[SENSe:]SWEep:TIME.....	639
[SENSe:]SWEep:TIME.....	835
[SENSe:]SWEep:TIME:AUTO.....	835
[SENSe:]SWEep:TYPE.....	835
[SENSe:]SWEep:TYPE:USED?.....	836

*CAL?	915
*CLS	916
*ESE	916
*ESR?	916
*IDN?	916
*IST?	916
*OPC	917
*OPT?	917
*PCB	917
*PRE	917
*PSC	917
*RST	918
*SRE	918
*STB?	918
*TRG	918
*TST?	918
*WAI	919
ABORT	640
CALCulate:PEAKsearch PSEarch:CLEar[:IMMediate]	679
CALCulate:SGRam:TRACe	651
CALCulate:TFLine:STATe	705
CALCulate<n>:DELTamarker<m>:AOFF	697
CALCulate<n>:DELTamarker<m>:FUNctio:n:BPOWer:MODE	886
CALCulate<n>:DELTamarker<m>:FUNctio:n:BPOWer:RESult?	886
CALCulate<n>:DELTamarker<m>:FUNctio:n:BPOWer:SPAN	886
CALCulate<n>:DELTamarker<m>:FUNctio:n:BPOWer[:STATe]	887
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed:RPOint:MAXimum[:PEAK]	867
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed:RPOint:X	868
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed:RPOint:Y	868
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed:RPOint:Y:OFFSet	868
CALCulate<n>:DELTamarker<m>:FUNctio:n:FIXed[:STATe]	869
CALCulate<n>:DELTamarker<m>:FUNctio:n:FMEasurement:DETEctor	779
CALCulate<n>:DELTamarker<m>:FUNctio:n:FMEasurement:LIMit<k>:CONDition ?	781
CALCulate<n>:DELTamarker<m>:FUNctio:n:FMEasurement:LIMit<k>:DELTA?	782
CALCulate<n>:DELTamarker<m>:FUNctio:n:FMEasurement:RESult?	782
CALCulate<n>:DELTamarker<m>:FUNctio:n:PNOise:AUTO	872
CALCulate<n>:DELTamarker<m>:FUNctio:n:PNOise:RESult?	873
CALCulate<n>:DELTamarker<m>:FUNctio:n:PNOise[:STATe]	873
CALCulate<n>:DELTamarker<m>:LINK	697
CALCulate<n>:DELTamarker<m>:MAXimum:LEFT	698
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT	698
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHT	699
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]	699
CALCulate<n>:DELTamarker<m>:MINimum:LEFT	699
CALCulate<n>:DELTamarker<m>:MINimum:NEXT	700
CALCulate<n>:DELTamarker<m>:MINimum:RIGHT	700
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]	700
CALCulate<n>:DELTamarker<m>:MODE	701
CALCulate<n>:DELTamarker<m>:MREF	867
CALCulate<n>:DELTamarker<m>:SGRam:FRAMe	659

CALCulate<n>:DELTamarker<m>:SGRam:SARea.....	660
CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK].....	660
CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK].....	661
CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVe.....	661
CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELOW.....	662
CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT.....	662
CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK].....	662
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVe.....	663
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELOW.....	663
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT.....	664
CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK].....	664
CALCulate<n>:DELTamarker<m>:TRACe.....	701
CALCulate<n>:DELTamarker<m>:X.....	702
CALCulate<n>:DELTamarker<m>:X:RELative?.....	702
CALCulate<n>:DELTamarker<m>:Y.....	703
CALCulate<n>:DELTamarker<m>[:STATe].....	701
CALCulate<n>:DLINe<k>.....	704
CALCulate<n>:DLINe<k>:STATe.....	704
CALCulate<n>:ESPectrum:PSEarch]:PEAKsearch[:IMMediate].....	777
CALCulate<n>:ESPectrum:PSEarch]:PEAKsearch:AUTO.....	777
CALCulate<n>:ESPectrum:PSEarch]:PEAKsearch:MARGIn.....	777
CALCulate<n>:ESPectrum:PSEarch]:PEAKsearch:PSHOW.....	778
CALCulate<n>:FEED.....	637
CALCulate<n>:FLINe<k>.....	704
CALCulate<n>:FLINe<k>:STATe.....	705
CALCulate<n>:FORMat.....	888
CALCulate<n>:LIMit<k>:ACPowEr:ACHannel:ABSolute.....	738
CALCulate<n>:LIMit<k>:ACPowEr:ACHannel:ABSolute:STATe.....	738
CALCulate<n>:LIMit<k>:ACPowEr:ACHannel:RESult.....	740
CALCulate<n>:LIMit<k>:ACPowEr:ACHannel[:RELative].....	739
CALCulate<n>:LIMit<k>:ACPowEr:ACHannel[:RELative]:STATe.....	740
CALCulate<n>:LIMit<k>:ACPowEr:ALTErnate<Channel>:ABSolute.....	741
CALCulate<n>:LIMit<k>:ACPowEr:ALTErnate<Channel>:ABSolute:STATe.....	742
CALCulate<n>:LIMit<k>:ACPowEr:ALTErnate<Channel>:RESult?.....	744
CALCulate<n>:LIMit<k>:ACPowEr:ALTErnate<channel>[:RELative].....	743
CALCulate<n>:LIMit<k>:ACPowEr:ALTErnate<Channel>[:RELative]:STATe.....	743
CALCulate<n>:LIMit<k>:ACPowEr[:STATe].....	745
CALCulate<n>:LIMit<k>:ACTive?.....	706
CALCulate<n>:LIMit<k>:CLEAr[:IMMediate].....	717
CALCulate<n>:LIMit<k>:COMMEnt.....	706
CALCulate<n>:LIMit<k>:CONTRol:DOMain.....	709
CALCulate<n>:LIMit<k>:CONTRol:MODE.....	709
CALCulate<n>:LIMit<k>:CONTRol:OFFSet.....	710
CALCulate<n>:LIMit<k>:CONTRol:SHIFt.....	710
CALCulate<n>:LIMit<k>:CONTRol:SPACing.....	711
CALCulate<n>:LIMit<k>:CONTRol[:DATA].....	709
CALCulate<n>:LIMit<k>:COPY.....	706
CALCulate<n>:LIMit<k>:DELeTe.....	707
CALCulate<n>:LIMit<k>:ESPectrum:LIMits.....	773
CALCulate<n>:LIMit<k>:ESPectrum:MODE.....	773

CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:COUNT.....	774
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:LIMit[:STATe].....	774
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MAXimum.....	775
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>:MINimum.....	775
CALCulate<n>:LIMit<k>:ESpectrum:PCLass<Class>[:EXCLusive].....	774
CALCulate<n>:LIMit<k>:ESpectrum:RESTore.....	760
CALCulate<n>:LIMit<k>:ESpectrum:VALue.....	776
CALCulate<n>:LIMit<k>:FAIL?.....	718
CALCulate<n>:LIMit<k>:LOWer:MARGin.....	711
CALCulate<n>:LIMit<k>:LOWer:MODE.....	712
CALCulate<n>:LIMit<k>:LOWer:OFFSet.....	712
CALCulate<n>:LIMit<k>:LOWer:SHIFt.....	713
CALCulate<n>:LIMit<k>:LOWer:SPACing.....	713
CALCulate<n>:LIMit<k>:LOWer:STATe.....	713
CALCulate<n>:LIMit<k>:LOWer:THReshold.....	714
CALCulate<n>:LIMit<k>:LOWer[:DATA].....	711
CALCulate<n>:LIMit<k>:NAME.....	707
CALCulate<n>:LIMit<k>:STATe.....	718
CALCulate<n>:LIMit<k>:TRACe.....	707
CALCulate<n>:LIMit<k>:UNIT.....	708
CALCulate<n>:LIMit<k>:UPPer:MARGin.....	715
CALCulate<n>:LIMit<k>:UPPer:MODE.....	715
CALCulate<n>:LIMit<k>:UPPer:OFFSet.....	715
CALCulate<n>:LIMit<k>:UPPer:SHIFt.....	716
CALCulate<n>:LIMit<k>:UPPer:SPACing.....	716
CALCulate<n>:LIMit<k>:UPPer:STATe.....	717
CALCulate<n>:LIMit<k>:UPPer:THReshold.....	717
CALCulate<n>:LIMit<k>:UPPer[:DATA].....	714
CALCulate<n>:MARKer<m>:AOFF.....	691
CALCulate<n>:MARKer<m>:COUNT.....	870
CALCulate<n>:MARKer<m>:COUNT:FREQuency?.....	870
CALCulate<n>:MARKer<m>:COUNT:RESolution.....	871
CALCulate<n>:MARKer<m>:COUPled[:STATe].....	687
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:MODE.....	884
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:RESult?.....	884
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer:SPAN.....	885
CALCulate<n>:MARKer<m>:FUNCTion:BPOWer[:STATe].....	885
CALCulate<n>:MARKer<m>:FUNCTion:CENTer.....	688
CALCulate<n>:MARKer<m>:FUNCTion:CSTep.....	688
CALCulate<n>:MARKer<m>:FUNCTion:DEModulation:CONTinuous.....	874
CALCulate<n>:MARKer<m>:FUNCTion:DEModulation:HOLDoff.....	874
CALCulate<n>:MARKer<m>:FUNCTion:DEModulation:SElect.....	875
CALCulate<n>:MARKer<m>:FUNCTion:DEModulation[:STATe].....	875
CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:DETEctor.....	780
CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:DWELl.....	780
CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:LIMit<k>:CONDition ?.....	782
CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:LIMit<k>:DELTA?.....	783
CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:PSEarch:AUTO.....	781
CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:RESult?.....	783
CALCulate<n>:MARKer<m>:FUNCTion:FMEasurement:STATe.....	779

CALCulate<n>:MARKer<m>:FUNction:FPEaks:ANNotation:LABel:STATe.....	879
CALCulate<n>:MARKer<m>:FUNction:FPEaks:COUNT?.....	880
CALCulate<n>:MARKer<m>:FUNction:FPEaks:LIST:SIZE.....	881
CALCulate<n>:MARKer<m>:FUNction:FPEaks:SEAR:AUTO.....	881
CALCulate<n>:MARKer<m>:FUNction:FPEaks:SORT.....	882
CALCulate<n>:MARKer<m>:FUNction:FPEaks:STAT.....	882
CALCulate<n>:MARKer<m>:FUNction:FPEaks:X.....	882
CALCulate<n>:MARKer<m>:FUNction:FPEaks:Y?.....	883
CALCulate<n>:MARKer<m>:FUNction:FPEaks[:IMMediate].....	880
CALCulate<n>:MARKer<m>:FUNction:HARMonics:BANDwidth:AUTO.....	786
CALCulate<n>:MARKer<m>:FUNction:HARMonics:DISTortion?.....	787
CALCulate<n>:MARKer<m>:FUNction:HARMonics:LIST?.....	787
CALCulate<n>:MARKer<m>:FUNction:HARMonics:NHARmonics.....	788
CALCulate<n>:MARKer<m>:FUNction:HARMonics:PRESet.....	788
CALCulate<n>:MARKer<m>:FUNction:HARMonics[:STATe].....	789
CALCulate<n>:MARKer<m>:FUNction:MDEPth:RESult?.....	784
CALCulate<n>:MARKer<m>:FUNction:MDEPth:SEARChsignal ONCE.....	784
CALCulate<n>:MARKer<m>:FUNction:MDEPth[:STATe].....	785
CALCulate<n>:MARKer<m>:FUNction:NDBDown.....	876
CALCulate<n>:MARKer<m>:FUNction:NDBDown:FREQuency?.....	876
CALCulate<n>:MARKer<m>:FUNction:NDBDown:QFACtor.....	877
CALCulate<n>:MARKer<m>:FUNction:NDBDown:RESult?.....	877
CALCulate<n>:MARKer<m>:FUNction:NDBDown:STATe.....	878
CALCulate<n>:MARKer<m>:FUNction:NDBDown:TIME?.....	878
CALCulate<n>:MARKer<m>:FUNction:NOISe:RESult.....	871
CALCulate<n>:MARKer<m>:FUNction:NOISe[:STATe].....	872
CALCulate<n>:MARKer<m>:FUNction:POWer:MODE.....	724
CALCulate<n>:MARKer<m>:FUNction:POWer:PRESet.....	728
CALCulate<n>:MARKer<m>:FUNction:POWer:RESult:PHZ.....	746
CALCulate<n>:MARKer<m>:FUNction:POWer:RESult?.....	721
CALCulate<n>:MARKer<m>:FUNction:POWer:SELect.....	720
CALCulate<n>:MARKer<m>:FUNction:POWer:STANdard:CATalog?.....	729
CALCulate<n>:MARKer<m>:FUNction:POWer:STANdard:DELeTe.....	729
CALCulate<n>:MARKer<m>:FUNction:POWer:STANdard:SAVE.....	729
CALCulate<n>:MARKer<m>:FUNction:POWer[:STATe].....	724
CALCulate<n>:MARKer<m>:FUNction:REFerence.....	862
CALCulate<n>:MARKer<m>:FUNction:STRack:BANDwidth BWiDth.....	826
CALCulate<n>:MARKer<m>:FUNction:STRack:THReshold.....	827
CALCulate<n>:MARKer<m>:FUNction:STRack:TRACe.....	827
CALCulate<n>:MARKer<m>:FUNction:STRack[:STATe].....	826
CALCulate<n>:MARKer<m>:FUNction:SUMMary:AOFF.....	799
CALCulate<n>:MARKer<m>:FUNction:SUMMary:AVERAge.....	799
CALCulate<n>:MARKer<m>:FUNction:SUMMary:MEAN:AVERAge:RESult?.....	802
CALCulate<n>:MARKer<m>:FUNction:SUMMary:MEAN:PHOLd:RESult?.....	803
CALCulate<n>:MARKer<m>:FUNction:SUMMary:MEAN:RESult?.....	803
CALCulate<n>:MARKer<m>:FUNction:SUMMary:MEAN[:STATe].....	804
CALCulate<n>:MARKer<m>:FUNction:SUMMary:MODE.....	800
CALCulate<n>:MARKer<m>:FUNction:SUMMary:PHOLd.....	800
CALCulate<n>:MARKer<m>:FUNction:SUMMary:PPEak:AVERAge:RESult?.....	804
CALCulate<n>:MARKer<m>:FUNction:SUMMary:PPEak:PHOLd:RESult?.....	805

CALCulate<n>:MARKer<m>:FUNction:SUMMary:PPEak:RESult?.....	805
CALCulate<n>:MARKer<m>:FUNction:SUMMary:PPEak[:STATe].....	806
CALCulate<n>:MARKer<m>:FUNction:SUMMary:REFerence:AUTO ONCE.....	801
CALCulate<n>:MARKer<m>:FUNction:SUMMary:RMS:AVERage:RESult?.....	806
CALCulate<n>:MARKer<m>:FUNction:SUMMary:RMS:PHOLd:RESult?.....	807
CALCulate<n>:MARKer<m>:FUNction:SUMMary:RMS:RESult?.....	808
CALCulate<n>:MARKer<m>:FUNction:SUMMary:RMS[:STATe].....	808
CALCulate<n>:MARKer<m>:FUNction:SUMMary:SDEViation:AVERage:RESult?.....	809
CALCulate<n>:MARKer<m>:FUNction:SUMMary:SDEViation:PHOLd:RESult?.....	809
CALCulate<n>:MARKer<m>:FUNction:SUMMary:SDEViation:RESult?.....	810
CALCulate<n>:MARKer<m>:FUNction:SUMMary:SDEViation[:STATe].....	810
CALCulate<n>:MARKer<m>:FUNction:SUMMary[:STATe].....	801
CALCulate<n>:MARKer<m>:FUNction:TOI:RESult?.....	791
CALCulate<n>:MARKer<m>:FUNction:TOI:SEARChsignal ONCE.....	790
CALCulate<n>:MARKer<m>:FUNction:TOI[:STATe].....	790
CALCulate<n>:MARKer<m>:FUNction:ZOOM.....	688
CALCulate<n>:MARKer<m>:LOEXclude.....	863
CALCulate<n>:MARKer<m>:MAXimum:AUTO.....	863
CALCulate<n>:MARKer<m>:MAXimum:LEFT.....	691
CALCulate<n>:MARKer<m>:MAXimum:NEXT.....	692
CALCulate<n>:MARKer<m>:MAXimum:RIGHT.....	693
CALCulate<n>:MARKer<m>:MAXimum[:PEAK].....	692
CALCulate<n>:MARKer<m>:MINimum:AUTO.....	863
CALCulate<n>:MARKer<m>:MINimum:LEFT.....	693
CALCulate<n>:MARKer<m>:MINimum:NEXT.....	693
CALCulate<n>:MARKer<m>:MINimum:RIGHT.....	694
CALCulate<n>:MARKer<m>:MINimum[:PEAK].....	694
CALCulate<n>:MARKer<m>:PEXCursion.....	679
CALCulate<n>:MARKer<m>:SCOupled[:STATe].....	689
CALCulate<n>:MARKer<m>:SEARCh.....	888
CALCulate<n>:MARKer<m>:SGRam:FRAMe.....	653
CALCulate<n>:MARKer<m>:SGRam:SARea.....	654
CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK].....	654
CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK].....	655
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVE.....	655
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELOW.....	656
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT.....	656
CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK].....	657
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVE.....	657
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELOW.....	657
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT.....	658
CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK].....	658
CALCulate<n>:MARKer<m>:TRACe.....	695
CALCulate<n>:MARKer<m>:X.....	695
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT.....	689
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT.....	689
CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM.....	864
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe].....	690
CALCulate<n>:MARKer<m>:X:SSIZe.....	864
CALCulate<n>:MARKer<m>:Y.....	696

CALCulate<n>:MARKer<m>:Y:PERCent.....	865
CALCulate<n>:MARKer<m>[:STATe].....	695
CALCulate<n>:MATH:MODE.....	848
CALCulate<n>:MATH:POSition.....	848
CALCulate<n>:MATH:STATe.....	848
CALCulate<n>:MATH[:EXPRession][:DEFine].....	847
CALCulate<n>:PEAKsearch PSEarch:ADD.....	679
CALCulate<n>:PEAKsearch PSEarch:AUTO.....	758
CALCulate<n>:PEAKsearch PSEarch:MARGin.....	680
CALCulate<n>:PEAKsearch PSEarch:METHod.....	680
CALCulate<n>:PEAKsearch PSEarch:PSHow.....	758
CALCulate<n>:PEAKsearch PSEarch:SUBRanges.....	680
CALCulate<n>:PEAKsearch PSEarch:SUBRanges.....	759
CALCulate<n>:PEAKsearch PSEarch:SUBRanges:PCOunt.....	681
CALCulate<n>:PEAKsearch PSEarch[:IMMEDIATE].....	680
CALCulate<n>:PEAKsearch PSEarch[:IMMEDIATE].....	758
CALCulate<n>:SGRam:CLear[:IMMEDIATE].....	649
CALCulate<n>:SGRam:COLor.....	856
CALCulate<n>:SGRam:CONT.....	857
CALCulate<n>:SGRam:FRAME:COUnT.....	857
CALCulate<n>:SGRam:FRAME:SELEct.....	858
CALCulate<n>:SGRam:HDEPth.....	651
CALCulate<n>:SGRam:TSTamp:DATA?.....	652
CALCulate<n>:SGRam:TSTamp[:STATe].....	858
CALCulate<n>:SGRam[:STATe].....	858
CALCulate<n>:STATistics:APD[:STATe].....	792
CALCulate<n>:STATistics:CCDF:X<Trace>.....	793
CALCulate<n>:STATistics:CCDF[:STATe].....	792
CALCulate<n>:STATistics:NSAMples.....	793
CALCulate<n>:STATistics:PRESet.....	796
CALCulate<n>:STATistics:RESult<Trace>.....	794
CALCulate<n>:STATistics:SCALE:AUTO ONCE.....	797
CALCulate<n>:STATistics:SCALE:X:RANGe.....	797
CALCulate<n>:STATistics:SCALE:X:RLEVel.....	798
CALCulate<n>:STATistics:SCALE:Y:LOWer.....	798
CALCulate<n>:STATistics:SCALE:Y:UNIT.....	798
CALCulate<n>:STATistics:SCALE:Y:UPPer.....	799
CALCulate<n>:THReshold.....	865
CALCulate<n>:THReshold:STATe.....	865
CALCulate<n>:TLINe<Line>.....	861
CALCulate<n>:TLINe<Line>:STATe.....	861
CALCulate<n>:UNIT:POWER.....	667
CALCulate<n>:UNIT:POWER.....	844
CALibration:ABORT.....	935
CALibration:RESult?.....	935
CALibration:STATe.....	936
CALibration[:ALL]?.....	935
DIAGnostic<n>:SERVice:BIOSinfo?.....	925
DIAGnostic<n>:SERVice:HWInfo?.....	925
DIAGnostic<n>:SERVice:INPut:PULSed:CFRequency.....	936

DIAGnostic<n>:SERvice:INPut:PULSed:MCFRequency.....	937
DIAGnostic<n>:SERvice:INPut[:SElect].....	937
DIAGnostic<n>:SERvice:NSource.....	931
DIAGnostic<n>:SERvice:SFUNction.....	938
DIAGnostic<n>:SERvice:SFUNction:LASTresult?.....	939
DIAGnostic<n>:SERvice:SFUNction:RESults:DElete.....	939
DIAGnostic<n>:SERvice:SFUNction:RESults:SAVE.....	939
DIAGnostic<n>:SERvice:STESt:RESult?.....	937
DIAGnostic<n>:SERvice:TEMPerature:FRONt?.....	938
DIAGnostic<n>:SERvice:VERSInfo?.....	925
DISPlay:ANNotation:FREquency.....	977
DISPlay:BARGraph:LEVel:LOWer?.....	638
DISPlay:BARGraph:LEVel:UPPer?.....	638
DISPlay:BARGraph:PHOLd:RESet.....	638
DISPlay:BARGraph:PHOLd[:STATe].....	638
DISPlay:BARGraph:TCOupling[:STATe].....	638
DISPlay:CMAP<item>:DEFault.....	978
DISPlay:CMAP<item>:HSL.....	978
DISPlay:CMAP<item>:PDEFined.....	978
DISPlay:FORMat.....	979
DISPlay:LOGO.....	979
DISPlay:MTABLE.....	866
DISPlay:PSAVe:HOLDoff.....	979
DISPlay:PSAVe[:STATe].....	980
DISPlay:SBAR[:STATe].....	980
DISPlay:SKEYs[:STATe].....	980
DISPlay:TBAR[STATe].....	980
DISPlay:THEMe:CATalog?.....	981
DISPlay:THEMe:SElect.....	981
DISPlay:TOUCHscreen:STATe.....	981
DISPlay:WINDow:SGRam:COLor:DEFault.....	650
DISPlay:WINDow:SGRam:COLor:LOWer.....	650
DISPlay:WINDow:SGRam:COLor:SHApe.....	650
DISPlay:WINDow:SGRam:COLor:UPPer.....	650
DISPlay:WINDow:SGRam:COLor[:STYLe].....	651
DISPlay[:WINDow<n>]:MINFo:STATe.....	690
DISPlay[:WINDow<n>]:TEXT:STATe.....	983
DISPlay[:WINDow<n>]:TEXT[:DATA].....	983
DISPlay[:WINDow<n>]:TIME.....	983
DISPlay[:WINDow<n>]:TIME:FORMat.....	984
DISPlay[:WINDow<n>]:TRACe<t>:MODE.....	683
DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous.....	849
DISPlay[:WINDow<n>]:TRACe<t>:SYMBol.....	682
DISPlay[:WINDow<n>]:TRACe<t>:X:SPACing.....	665
DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing.....	668
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe].....	844
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:BOTTom.....	667
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE.....	844
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel.....	845
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	845

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition.....	846
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RVALue.....	889
DISPlay[:WINDow<n>]:TRACe<t>[:STATe].....	849
DISPlay[:WINDow<n>][:SUBWindow<m>]:SELect.....	982
DISPlay[:WINDow<n>][:SUBWindow<m>]:SIZE.....	981
FORMat:DEXPort:DSEParator.....	850
FORMat:DEXPort:TRACes.....	646
FORMat[:DATA].....	850
HCOPy:ABORt.....	959
HCOPy:CMAP<item>:DEFault.....	959
HCOPy:CMAP<item>:HSL.....	959
HCOPy:CMAP<item>:PDEFined.....	960
HCOPy:DESTination<1 2>.....	960
HCOPy:DEVice:COLor.....	961
HCOPy:DEVice:LANGUage<1 2>.....	961
HCOPy:ITEM:ALL.....	962
HCOPy:ITEM:WINDow:TABLE:STATe.....	962
HCOPy:ITEM:WINDow:TEXT.....	962
HCOPy:MODE.....	973
HCOPy:PAGE:ORientation<1 2>.....	963
HCOPy:TDSamp:STATe<1 2>.....	963
HCOPy:TREPort:APPend.....	974
HCOPy:TREPort:DESCRiption.....	971
HCOPy:TREPort:ITEM:DEFault.....	966
HCOPy:TREPort:ITEM:HEADer:LINE<line>:CONTRol.....	968
HCOPy:TREPort:ITEM:HEADer:LINE<line>:TEXT.....	969
HCOPy:TREPort:ITEM:HEADer:LINE<line>:TITLe.....	969
HCOPy:TREPort:ITEM:LOGO.....	970
HCOPy:TREPort:ITEM:LOGO:CONTRol.....	971
HCOPy:TREPort:ITEM:SELect.....	966
HCOPy:TREPort:ITEM:TEMPlate:CATalog?.....	972
HCOPy:TREPort:ITEM:TEMPlate:DELete.....	972
HCOPy:TREPort:ITEM:TEMPlate:LOAD.....	972
HCOPy:TREPort:ITEM:TEMPlate:SAVE.....	973
HCOPy:TREPort:NEW.....	974
HCOPy:TREPort:PAGESize.....	971
HCOPy:TREPort:TEST:REMOve.....	974
HCOPy:TREPort:TEST:REMOve:SELected.....	975
HCOPy:TREPort:TEST:SELect.....	975
HCOPy:TREPort:TEST:SELect:ALL.....	975
HCOPy:TREPort:TEST:SELect:INVert.....	976
HCOPy:TREPort:TEST:SELect:NONE.....	976
HCOPy:TREPort:TITLe.....	972
HCOPy[:IMMEdiate<1 2>].....	963
HCOPy[:IMMEdiate<1 2>]:NEXT.....	964
HOLD.....	640
INITiate<n>:CONMeas.....	640
INITiate<n>:CONMeas.....	833
INITiate<n>:CONTInuous.....	641
INITiate<n>:DISPlay.....	984

INITiate<n>:EMITest.....	642
INITiate<n>:ESpectrum.....	761
INITiate<n>:FMEasurement.....	642
INITiate<n>:SPURious.....	749
INITiate<n>[:IMMEDIATE].....	641
INPut:ATTenuation.....	668
INPut:ATTenuation:AUTO.....	668
INPut:ATTenuation:AUTO.....	846
INPut:ATTenuation:PROTection[:STATe].....	669
INPut:COUPling.....	672
INPut:GAIN:AUTO.....	669
INPut:GAIN:STATe.....	669
INPut:IMPedance.....	670
INPut:LISN:FILTer:HPAS[:STATe].....	685
INPut:LISN:PHASe.....	686
INPut:LISN[:TYPE].....	686
INPut:PRESelection:STATe.....	931
INPut:TYPE.....	672
INPut<ip>:UPORt:STATe.....	931
INPut<ip>:UPORt[:VALue].....	932
INSTRument:COUPlE:ATTen.....	927
INSTRument:COUPlE:BANDwidth.....	928
INSTRument:COUPlE:CENTer.....	928
INSTRument:COUPlE:DEMod.....	928
INSTRument:COUPlE:GAIN.....	929
INSTRument:COUPlE:LIMit.....	929
INSTRument:COUPlE:MARKer.....	929
INSTRument:COUPlE:PRESel.....	930
INSTRument:COUPlE:PROT.....	930
INSTRument:COUPlE:SPAN.....	930
INSTRument:CREate[:NEW].....	635
INSTRument:DELeTe.....	636
INSTRument[:SElect].....	636
MMEMory:CATalog:LONG?.....	941
MMEMory:CATalog?.....	940
MMEMory:CDIRectory.....	942
MMEMory:CLEar:ALL.....	946
MMEMory:CLEar:STATe 1,.....	946
MMEMory:COMMeNt.....	942
MMEMory:COpy.....	942
MMEMory:DATA.....	943
MMEMory:DELeTe.....	943
MMEMory:LOAD:AUTO.....	946
MMEMory:LOAD:IQ:STATe.....	889
MMEMory:LOAD:STATe.....	947
MMEMory:MDIRectory.....	944
MMEMory:MOVE.....	944
MMEMory:MSIS.....	944
MMEMory:NAME.....	945
MMEMory:NETWork:DISConnect.....	987

MMEMory:NETWork:MAP.....	988
MMEMory:NETWork:UNUSeddrives?.....	988
MMEMory:NETWork:USEDdrives?.....	989
MMEMory:RDIRectory.....	945
MMEMory:SEL[:ITEM]:SGRam.....	986
MMEMory:SELEct[:ITEM]:ALL.....	985
MMEMory:SELEct[:ITEM]:DEFault.....	985
MMEMory:SELEct[:ITEM]:HWSettings.....	985
MMEMory:SELEct[:ITEM]:LINES:ALL.....	985
MMEMory:SELEct[:ITEM]:NONE.....	986
MMEMory:SELEct[:ITEM]:TRACe[:ACTive].....	986
MMEMory:SELEct[:ITEM]:TRANSDucer:ALL.....	986
MMEMory:STORe:FINAL.....	682
MMEMory:STORe:IQ:COMM.....	948
MMEMory:STORe:IQ:STATe.....	948
MMEMory:STORe:PEAKlist.....	682
MMEMory:STORe:SGRam.....	652
MMEMory:STORe<n>:LIST.....	777
MMEMory:STORe<n>:SPURious.....	750
MMEMory:STORe<n>:STATe.....	948
MMEMory:STORe<n>:STATe:NEXT.....	949
MMEMory:STORe<n>:TRACe.....	851
MMEMory:USER<Softkey>.....	987
OUTPut:IF[:SOURce].....	932
OUTPut:TRIGger.....	932
OUTPut:UPORt:STATe.....	933
OUTPut:UPORt[:VALue].....	933
OUTPut[:STATe].....	901
PROBe:ID:PARTnumber?.....	821
PROBe:ID:SRNumber?.....	821
PROBe:SETup:MODE.....	821
PROBe:SETup:NAME?.....	821
PROBe:SETup:STATe?.....	821
PROBe[:STATe].....	822
SOURce<n>:AM:STATe.....	903
SOURce<n>:DM:STATe.....	903
SOURce<n>:EXTErnal<generator>:FREQUency.....	908
SOURce<n>:EXTErnal<generator>:FREQUency:COUPling[:STATe].....	908
SOURce<n>:EXTErnal<generator>:FREQUency:OFFSet<m>.....	910
SOURce<n>:EXTErnal<generator>:FREQUency:SWEp[:STATe].....	911
SOURce<n>:EXTErnal<generator>:FREQUency[:FACtor]:DENominator.....	909
SOURce<n>:EXTErnal<generator>:FREQUency[:FACtor]:NUMerator.....	909
SOURce<n>:EXTErnal<generator>:POWEr[:LEVel].....	911
SOURce<n>:EXTErnal<generator>:ROSCillator[:SOURce].....	911
SOURce<n>:EXTErnal<generator>[:STATe].....	912
SOURce<n>:FM:DEVIation.....	904
SOURce<n>:FM:STATe.....	904
SOURce<n>:FREQUency:OFFSet.....	905
SOURce<n>:POWEr:MODE.....	906
SOURce<n>:POWEr:STARt.....	906

SOURce<n>:POWer:STOP.....	907
SOURce<n>:POWer[:LEVel][:IMMediate]:OFFSet.....	905
SOURce<n>:POWer[:LEVel][:IMMediate]:AMPLitude.....	905
STATus:OPERation:CONDition?.....	996
STATus:OPERation:ENABle.....	996
STATus:OPERation:NTRansition.....	996
STATus:OPERation:PTRansition.....	997
STATus:OPERation[:EVENT]?.....	995
STATus:PRESet.....	995
STATus:QUEStionable:ACPLimit:CONDition?.....	996
STATus:QUEStionable:ACPLimit:ENABle.....	996
STATus:QUEStionable:ACPLimit:NTRansition.....	996
STATus:QUEStionable:ACPLimit:PTRansition.....	997
STATus:QUEStionable:ACPLimit[:EVENT]?.....	995
STATus:QUEStionable:CONDition?.....	996
STATus:QUEStionable:ENABle.....	996
STATus:QUEStionable:FREQuency:CONDition?.....	996
STATus:QUEStionable:FREQuency:ENABle.....	996
STATus:QUEStionable:FREQuency:NTRansition.....	996
STATus:QUEStionable:FREQuency:PTRansition.....	997
STATus:QUEStionable:FREQuency[:EVENT]?.....	995
STATus:QUEStionable:LIMit<n>:CONDition?.....	996
STATus:QUEStionable:LIMit<n>:ENABle.....	996
STATus:QUEStionable:LIMit<n>:NTRansition.....	996
STATus:QUEStionable:LIMit<n>:PTRansition.....	997
STATus:QUEStionable:LIMit<n>[:EVENT]?.....	995
STATus:QUEStionable:LMARgin<n>:CONDition?.....	996
STATus:QUEStionable:LMARgin<n>:ENABle.....	996
STATus:QUEStionable:LMARgin<n>:NTRansition.....	996
STATus:QUEStionable:LMARgin<n>:PTRansition.....	997
STATus:QUEStionable:LMARgin<n>[:EVENT]?.....	995
STATus:QUEStionable:NTRansition.....	996
STATus:QUEStionable:POWer:CONDition?.....	996
STATus:QUEStionable:POWer:ENABle.....	996
STATus:QUEStionable:POWer:NTRansition.....	997
STATus:QUEStionable:POWer:PTRansition.....	997
STATus:QUEStionable:POWer[:EVENT]?.....	995
STATus:QUEStionable:PTRansition.....	997
STATus:QUEStionable:TRANSDucer:CONDition?.....	996
STATus:QUEStionable:TRANSDucer:ENABle.....	996
STATus:QUEStionable:TRANSDucer:NTRansition.....	997
STATus:QUEStionable:TRANSDucer:PTRansition.....	997
STATus:QUEStionable:TRANSDucer[:EVENT]?.....	995
STATus:QUEStionable[:EVENT]?.....	995
STATus:QUEue[:NEXT]?.....	995
SYSTem:APPLication:SRECovery[:STATe].....	920
SYSTem:CLOGging.....	920
SYSTem:COMMunicate:GPIB:RDEvice:GENerator<generator>:ADDResS.....	913
SYSTem:COMMunicate:GPIB[:SELF]:ADDResS.....	989
SYSTem:COMMunicate:GPIB[:SELF]:RTERminator.....	989

SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?	965
SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?	965
SYSTem:COMMunicate:PRINter:SElect <1 2>	965
SYSTem:COMMunicate:RDEvice:GENerator<generator>:INTerface	913
SYSTem:COMMunicate:RDEvice:GENerator<generator>:LINK	913
SYSTem:COMMunicate:RDEvice:GENerator<generator>:TYPE	914
SYSTem:COMPatible	920
SYSTem:DATE	924
SYSTem:DEvice:ID?	924
SYSTem:DISPlay:FPANel	924
SYSTem:DISPlay:UPDate	921
SYSTem:ERRor:CLEar:ALL	926
SYSTem:ERRor:LIST?	927
SYSTem:ERRor[:NEXT]?	927
SYSTem:FIRMware:UPDate	921
SYSTem:FORMat:IDENt	921
SYSTem:HPCoupling	992
SYSTem:IDENtify:FACTory	926
SYSTem:IDENtify[:STRing]	926
SYSTem:IFGain:MODE	993
SYSTem:KLOCK	922
SYSTem:LANGuage	992
SYSTem:LXI:INFo?	990
SYSTem:LXI:LANReset	990
SYSTem:LXI:MDEscription	990
SYSTem:LXI:PASSword	990
SYSTem:PASSword:RESet	939
SYSTem:PASSword[:CENable]	939
SYSTem:PRESet	922
SYSTem:PRESet:COMPatible	922
SYSTem:REBoot	922
SYSTem:REVision:FACTory	991
SYSTem:REVision[:STRing]	991
SYSTem:RSW	992
SYSTem:SHUTdown	923
SYSTem:SPEaker:VOLume	923
SYSTem:TIME	923
SYSTem:TIME:TSTamp?	923
SYSTem:TWALking	993
SYSTem:VERsion?	923
TRACe[:DATA]	646
TRACe<n>:COPY	854
TRACe<n>:DATA	726
TRACe<n>:DATA	854
TRACe<n>:FEED:CONTRol<t>	674
TRACe<n>:IF[:DATA]	647
TRACe<n>:IQ:AVERage:COUNT	894
TRACe<n>:IQ:AVERage[:STATE]	894
TRACe<n>:IQ:BWIDth	889
TRACe<n>:IQ:DATA	892

TRACe<n>:IQ:DATA:FORMat.....	892
TRACe<n>:IQ:DATA:MEMory?.....	895
TRACe<n>:IQ:EGATe.....	896
TRACe<n>:IQ:EGATe:GAP.....	896
TRACe<n>:IQ:EGATe:LENGth.....	897
TRACe<n>:IQ:EGATe:NOFgateperiods.....	897
TRACe<n>:IQ:EGATe:TYPE.....	897
TRACe<n>:IQ:EVAL.....	898
TRACe<n>:IQ:RENGth.....	890
TRACe<n>:IQ:SET.....	890
TRACe<n>:IQ:SRATe.....	891
TRACe<n>:IQ:TPISample?.....	899
TRACe<n>:IQ[:STATe].....	898
TRACe<n>:POINts.....	674
TRACe<n>[:DATA]:MEMory?.....	855
TRACe<n>[:DATA]:X?.....	856
TRIGger<n>[:SEQuence]:HOLDoff[:TIME].....	836
TRIGger<n>[:SEQuence]:IFPower:HOLDoff.....	837
TRIGger<n>[:SEQuence]:IFPower:HYSteresis.....	837
TRIGger<n>[:SEQuence]:LEVel:IFPower.....	838
TRIGger<n>[:SEQuence]:LEVel:RFPower.....	838
TRIGger<n>[:SEQuence]:LEVel:VIDeo.....	838
TRIGger<n>[:SEQuence]:LEVel[:EXTernal].....	837
TRIGger<n>[:SEQuence]:SLOPe.....	839
TRIGger<n>[:SEQuence]:SOURce.....	839
TRIGger<n>[:SEQuence]:TIME:RINTerval.....	840
UNIT:THD.....	789
UNIT<n>:POWer.....	846

Index

Symbols

*OPC	573
*OPC?	573
*RST	592
*WAI	573
6 dB bandwidth	166
9.91E37	
Remote control	571
75 Ω (enhancement label)	66

A

AC supply fuse	43
ACLR	
absolute limit	242
adjacent channel name (remote control)	731
alternate channel name (remote control)	732
Channel Bandwidth	238
channel name (remote control)	732
channel names	240
Channel Spacing	239
limit check	241
Limit Checking	241
number of channels	237
reference	239
relative limit	242
Weighting Filter	240
ACLR User Standard	244
Delete	245
Load	245
Save	245
Acquisition time	
Statistics	313
ACT	
Statistics	313
Active probes	
Activating	384
Configuring	386
Connecting	385
State	387
Using	385
Administrator rights	60
Aligning	
Touchscreen	50
Alignment	
Results	512
Touch screen	512
Alphanumeric parameters	78
AM demodulation	420
AM modulation	479, 499
depth	336
Depth	224
AM Modulation depth	
Measurement	336
Results	336
Amplitude	
Menu	351
Amplitude distribution	312
AMPT key	351
Analysis	
Bandwidth, definition	474
Annotation	521

AP (trace information)	67
Application cards	26
Application notes	26
APX	
tracking generator	492, 500
Arrow Keys	74
ASCII Trace export	399
Att (hardware setting)	65
Attenuation	
Automatic	354, 467
Manual	181
Audio demodulation	
volume (remote control)	923
Auto adjustment	
triggered measurement	829
Auto level	
Hysteresis	358
Auto Peak detector	399
Auto peak search	299, 303
AUTO SET key	356
Automatic loading	
Settings	118
AUX PORT	
Connector	38
AV (trace information)	67
Average detector	399
Average trace mode	390
averaging	
continuous sweep	397
single sweep	397
sweep count	397

B

Band Power	
remote control	885, 887
softkey	424
Bandwidth	166
Maximum usable	474
Menu	360
Occupied	252
Resolution	361, 380
Video	361
Baseband power	
Trigger mode	376, 471
Blank trace mode	172, 390
Block data	569
Boolean parameters	568
Brackets	569
Brochures	26
BW key	360

C

CA (trace information)	67
calibration	
reflection measurement	493
tracking generator	492
transmission measurement	477, 493
Calibration	
Remote	915
Canceling entry	73

- Case-sensitivity
 - SCPI 565
 - Center frequency 345
 - Step size 345
 - channel
 - bandwidth 238, 255
 - number 237
 - spacing 239
 - Channel 64
 - Bandwidth 251, 463
 - Channel bar
 - Information 65
 - Channel Power
 - Configuring 231
 - Fast ACLR 227
 - Measurement Repeatability 227
 - Measurements 225
 - Methods 226
 - Performing 231
 - Results 229
 - CISPR bandwidth 166, 301
 - Cleaning 1070
 - Clear status
 - Remote 916
 - Clear Write trace mode 171, 389
 - CLRWR (trace information) 67
 - CNT (marker functions) 68, 410
 - Colon 569
 - Color printout 522
 - Color settings
 - Default 521
 - Color setup dialog box 522
 - Colors
 - Screen 50
 - Comma 569
 - Command sequence
 - recommendation 592
 - Remote 919
 - Commands 555
 - Brackets 569
 - Colon 569
 - Comma 569
 - Command line structure 570
 - Common 555
 - Double dagger 569
 - GBIP, addressed 562
 - GBIP, universal 562
 - Instrument control 555
 - Overlapping 572
 - Question mark 569
 - Quotation mark 569
 - SCPI confirmed 555
 - Sequential 572
 - Syntax elements 569
 - Tracking 518
 - Vertical stroke 569
 - White space 569
 - Commands
 - Programming examples 997
 - Common commands
 - Syntax 564
 - Compatible mode (hardware setting) 65
 - Computer name
 - Changing 628, 1075
 - Concluding entry 73
 - CONDition 576
 - Connector
 - AC power supply 36
 - AF output 34
 - AUX PORT 38
 - EXT TRIGGER / GATE IN 37
 - GPIO interface 37
 - IF/VIDEO 37
 - LAN 36
 - MONITOR (VGA) 36
 - Noise source control 33
 - OCXO 38
 - Probe power 34
 - REF IN 37
 - REF OUT 37
 - RF Input 50Ω 33
 - Tracking generator 34
 - TRIGGER OUTPUT 37
 - USB 33, 37
 - Connectors
 - Front panel 33
 - Continuous sweep 370
 - Controller 553
 - Correction
 - inherent noise 245, 355, 468
 - coupling
 - default settings 365
 - Coupling
 - Resolution bandwidth 361
 - Sweep time 363, 371
 - Video bandwidth 362
 - create folder 535
- ## D
- Data Acquisition
 - Softkey 460
 - Data sheets 26
 - Date 520
 - Setting 49
 - DC power supply
 - Option B30 43
 - DCL 562
 - DEF 567
 - Default color settings 521
 - default scalings of x- and y-axis 319, 325
 - Default values
 - Remote 918
 - definition of transducer factors 1020
 - delay
 - gate signal 379
 - Delta markers 200
 - Density
 - remote control 884, 885, 886
 - softkey 425
 - detector
 - overview 399
 - Detector 167
 - Auto Peak 392
 - Autoselect 391
 - Average 392
 - CISPR Average 392
 - Negative Peak 392
 - Positive Peak 392
 - Quasi Peak 392
 - RMS 392
 - RMS Average 393
 - Sample 392

- Device ID 524
- Device-specific commands 555
- DHCP 625
- DHCP server
 - LAN configuration 628
- Diagram area
 - Enhancement labels 65
 - Hardware settings 65
 - Status display 69
 - Trace information 67
- diagram header
 - tracking generator 500
- Diagram title 520
- Dialog boxes
 - Working with 77
- Display
 - Date 520
 - Enlarging 86
 - maximized 83, 981
 - Power-save mode 523
 - split 83, 981
 - Split screen 83
 - Table 83
 - Time 520
 - Update Rate 91
- Display Config
 - Softkey 460
- Display lines 212, 213
- display range
 - level 317, 318, 323, 324, 352, 353, 465, 466
- Display range
 - Frequency 345
- display settings
 - Softkey Bar State (remote control) 980
 - Status Bar State (remote control) 980
- DNS server
 - LAN configuration 628
- Double dagger 569
- DOWN 567
- Dwell time 300, 305
- Dynamic range
 - Intermodulation-free 333
 - Measuring 338
- E**
- Edit dialog box 77
- Edit Limit Line dialog box 216, 219
- Electrostatic discharge 40
- EMI detector 167
- EMI marker 303
- EMI marker evaluation 300, 305
- ENABLE 576
- Enable registers
 - Remote 917
- Enhancement labels 65
- Entry
 - Canceling 73
 - Concluding 73
- error messages
 - device-specific 1072
- Error messages 1072
 - see User Manual 69
- Error queue 579
- Error queues
 - recommendations 592
- ESD 40
- ESE (Event Status Enable register) 580
- ESR (Event Status Register) 574, 580
- EVENT 576
- Event status enable register (ESE)
 - Remote 916
- Event Status Enable register (ESE) 580
- Event status register (ESR)
 - Remote 916
- Event Status Register (ESR) 580
- Export
 - I/Q data (remote) 948
- export format 399
- Exporting
 - I/Q data (remote) 948
- EXREF (status display) 70
- Ext 69
- EXT TRIGGER
 - Connector 37
- external noise source 384
- external trigger 375, 470
- F**
- Fast ACLR 227
- FFT Filter Mode
 - Auto 359, 364, 372
 - Narrow 359, 364, 372
 - softkey 359, 364, 372
- file
 - copying 535
 - deleting 535
 - renaming 535
- File Manager dialog box 534
- Filter bandwidth
 - Baseband Digital 460
 - Digital I/Q (remote control) 889
- Filter type (EMI) 301
- Filter types
 - 5-Pole 366
 - Normal (3dB) 366
 - RRC 366
- Filters
 - Overview 367
 - Selecting 366
 - Types 366
- Final evaluation 300, 305
- Firmware
 - Options 62
 - Update 60
 - Version 524
- fixed reference 419
- FM demodulation 420
- FM modulation 479, 499
- Focus
 - Changing 83
- folder
 - renaming 535
- FREQ key 344
- frequency
 - line 214
 - offset 347
 - reference 48
 - start 347
 - stop 347
- Frequency
 - Axis 344
 - Center 345

Display 521
 Lines 213
 tracking generator 488
 Frequency axis scaling 302
 Frequency Denominator
 tracking generator 489
 Frequency Max.
 tracking generator 487, 492
 Frequency menu 344
 Frequency Min.
 tracking generator 487, 492
 Frequency Numerator
 tracking generator 489
 Frequency Offset
 tracking generator 487, 489
 FRQ
 tracking generator 500
 Frq (enhancement label) 66
 Full screen
 see Display, maximized 83
 Fuse 43
 FXD (marker functions) 68, 410

G

GAT (enhancement label) 66
 gate
 delay 379
 length 380
 ranges 327
 Gate
 External/internal 378
 MODE <mode> 379
 GATE IN
 Connector 37
 gated statistics
 configuration 327
 configuration example 329
 example 329
 gated trigger 327
 generator type
 tracking generator 490
 GET 562
 Getting started 25
 GPIB
 Address 562
 Characteristics 559
 interface messages 560
 Remote control interface 553
 tracking generator 491
 GPIB bus control
 Remote 917
 GPIB interface
 Configuring 59, 623
 Connector 37
 GPIB Language 1040
 GTL 562

H

Hardware information dialog box 524
 Hardware settings
 Display 65
 input 65
 Harmonic Distortion
 Measurement 337
 Results 340

Harmonics
 Measurement 225, 340
 HiSLIP 621
 Protocol 557, 622
 Resource string 556, 621
 HOME key 141
 HP emulation 1039
 Hysteresis
 Lower (Auto level) 358
 Upper (Auto level) 358

I

I/Q Analyzer
 Softkey 459
 I/Q data
 Export (remote control) 948
 Import (remote control) 889
 Maximum bandwidth 474
 Sample rate 474
 trigger point in sample (TPIS) 899
 I/Q data acquisition 1021
 I/Q Gating
 edge triggered 899
 level triggered 899
 I/Q modulation 479, 499
 I/Q-Vector
 I/Q Analyzer 460
 Icons
 Toolbar 71
 ID String User 1040
 Identification
 Remote 916
 IECWIN 592
 Accessing 59
 IF power
 Trigger mode 376, 471
 IF/VIDEO
 Connector 37
 IFC 562
 IFOVL
 tracking generator 492, 500
 IFOVL (status display) 69
 Impedance
 Input 184, 355, 468
 Importing
 I/Q data (remote) 889
 INF 567
 Inherent noise
 correction 245, 355, 468
 initial configuration 343
 Input (hardware setting) 65
 Input sample rate (ISR)
 Definition 474
 Input/Output menu 383
 Instrument messages 555
 Interface
 LAN 1074
 Interface functions
 RSIB 559
 Interface messages 555
 Interfaces
 GPIB 559
 LAN 621
 intermodulation product 330
 Interrupt 589

Invalid results	
Remote control	571
IP address	556, 621
Changing	625
IP configuration	
LXI	630
IQ Export	
Softkey	534
IQ Import	
Softkey	534
IST	574
IST flag	579
Remote	916
K	
key	
AMPT	351
AUTO SET	356
BW	360
DISPLAY	981
ESC	717
LINES	208, 430
MEAS	222
MEAS CONFIG	341
MKR FUNC	416
MKR->	204
MKR→	411
PEAK SEARCH	415
PRESET	342, 922
PRINT	543
RUN CONT	341
RUN SINGLE	341
SAVE/RCL	529
SETUP	504
SPAN	349
SWEEP	369
TRACE	198, 387
TRIG	374
USER	503
Key	
Alphanumeric	73
BACK	73
Decimal point	73
DNARROW	74
ENTER	73
ESC/CANCEL	73
FREQ	344
GHz/dBm	73
HOME	75, 141
Hz/-dB	73
kHz/dB	73
LEFTARROW	75
MKR	200
MODE	140
REDO	75
RIGHTARROW	75
Sign	73
UNDO	75
Unit	73
UPARROW	74
Keyboard	
On-screen	72
Keys	
SPLIT/MAXIMIZE key	83
Keywords	
see Mnemonics	564

L

labels	
tracking generator	500
LAN	
Configuration	623
Configuring	629
Connector	36
Interface	556, 621
IP address	556, 621
Remote control interface	553, 621
RSIB protocol	558
VISA	556, 621
VXI protocol	557, 622
LAN interface	1074
level	
axis	354, 467
display range ... 317, 318, 323, 324, 352, 353, 465, 466	
range	317, 318, 323, 324, 352, 353, 465, 466
trigger	377
Level	
Reference	352, 464
Softkey	460
limit	
ACLR measurement	242
Limit	
Evaluation range	296
limit check	
ACLR measurement	241
limit line	214
scaling	217
shift	219
span setting	217
Limit lines	
Copying	211
Deleting	212
Editing	211, 219
New	210
Offset	212
Recalling	529
Saving	529
Spurious Emissions	286
Time Domain Power measurement	295
line	
frequency	214
limit	214
threshold	206, 423
time	214
Linear scaling	302
Lines	
display	213
Frequency (Frequency Line 1, 2)	213
Menu	209
Time (Time Line 1, 2)	213
LINES key	208, 430
LISN	173, 302
LLO	562
LO exclude	412
Loading	
Instrument configuration	118
Measurement data	118
local menu	502
Logarithmic scaling	302
Login	
Operating system	57
Logo	521
LOUNL (status display)	69

- Lower Level Hysteresis
 - Softkey 358
- LVL
 - tracking generator 500
- LXI
 - Browser interface 629
 - LAN configuration 630
 - Ping 631
- M**
- Magnitude
 - I/Q Analyzer 460
- maintenance 1070
- Maintenance 45
- Malfunctions
 - reacting 592
- manual operation 502
 - changing to 502
- Manual peak search 299
- marker
 - center frequency to 412
 - peak 205
 - reference level to 412
 - search limit 206
- Marker
 - Zoom 408
- Marker Function menu 416
- Marker Number
 - softkey 424
- Marker Peak List
 - Activating/Deactivating 422
 - Configuring 422
 - Number display 424
 - Number of entries 422
- Marker table 305
- Marker wizard 303
- Marker Wizard
 - softkey 202
- Markers 200
 - Field 200
 - Set to trace 202
 - Signal track 348
- MAX 567
- Max Hold trace mode 171, 390
- Max Peak Count
 - softkey 422
- MAXH (trace information) 67
- maximum search 205
- maximum value 296
- MC-ACLR 236
- Mean power (GSM burst) 296
- MEAS CONFIG key 341
- MEAS key 222
- Meas Time
 - Baseband Digital 460
- measurement
 - reflection 494
 - transmission 494
- measurement accuracy
 - tracking generator 492
- Measurement data
 - Loading 118
 - Storing 118
- measurement example
 - amplitude distribution 455
 - harmonics 431
 - high-sensitivity harmonics 339
 - intermodulation 330
 - modulated signals 448
 - noise 441
 - signals in the vicinity of noise 436
 - spectra of complex signals 433
 - test setup 430
- Measurement example
 - AF of AM-modulated signal 104
 - AF of FM-modulated signal 113
 - AM modulation 103
 - First and second harmonic 96
 - Level and frequency 92
 - Power of burst signals 106
 - Separating signals 99
 - Signal frequency using frequency counter 94
 - Signal-to-noise ratio 110
- Measurement menu 222
- Measurement modes
 - Changing 140
 - Displaying main menus 141
- Measurement time 305
- menu
 - Auto Set 356
 - Input/Output 383
 - Marker Function 416
 - Phase Noise 418
 - Print 543
 - SAVE/RCL 530
 - Span 350
 - Sweep 369
 - Trigger 374, 469
 - User 503
- Menu
 - Amplitude 351
 - Bandwidth 360
 - Frequency 344
 - Lines 209
 - Meas 222
 - Setup 505
- Messages
 - Commands 555
 - Instrument 555
 - Instrument responses 556
 - Interface 555
- MI (trace information) 67
- Microsoft Windows 56
 - Access 59
- MIL Std bandwidth 301
- MIN 567
- Min Hold trace mode 172, 390
- MINH (trace information) 67
- Mini Front Panel 83
- minimum search 205
- MKR FUNC key 416
- MKR key 200
- MKR-> key 204
- MKR→ key 411
- Mnemonics 564
 - Optional 566
- MOD (marker functions) 68, 410
- mode
 - trigger 375, 470
- Mode
 - see also Measurement modes 140
- Mode (hardware setting) 65
- MODE key 140

- Modulation
 - Depth 224, 336
- Modulation depth 336
- Modulation index 336
- MONITOR (VGA)
 - Connector 36
- More
 - Softkey 75
- More Traces
 - softkey 199
- MT (hardware setting) 65
- Multi-carrier
 - ACLRL 236
- multi-carrier ACLRL measurement 226
- Multiple signals measurement 99

- N**
- n dB down
 - marker function 421
- NAN 567
- NAN (not a number)
 - Remote control 571
- NCoR (enhancement label) 67
- Negative Peak detector 399
- Network 631, 1074
 - Automatic logon 1077
 - Changing configuration 1075
 - Changing user passwords 633, 1077
 - Connecting drives 633, 1079
 - Creating users 632, 1077
 - Disconnecting drives 633, 1079
 - Setting up 594
 - Sharing directories 635, 1080
- NINF 567
- NOI (marker functions) 68, 410
- noise
 - correction 245, 355, 468
 - source, external 384
- Noise source control
 - Connector 33
- NOR
 - tracking generator 492, 500
- normalization
 - tracking generator 500
- NTRansition 576
- Numeric parameters 78, 567
- Numeric values
 - Special 567

- O**
- OBW
 - Multi-carrier signal 253
 - Search limits 253
- Occupied bandwidth 252
- OCXO 44
 - Connector 38
- offset
 - frequency 347
 - gate signal 379
 - reference level 354, 467
- Offset
 - Limit line 212
 - Trigger 378, 472
- Offset (hardware setting) 65
- On-screen keyboard 72

- Online help
 - Working with 22
- Operating system 56
 - Login 57
 - service packs 56
- Operation complete
 - Remote 917
- Options
 - Activating 62
 - B30 43
 - Identification (remote) 917
 - Installed 524
 - Licenses 62
 - RF Preamplifier (B22) 181, 354, 460, 467
- Output
 - Sample rate, definition 474
- Output buffer 574
- OVEN (status display) 70
- Overlapping commands 572
 - Preventing 573
- overload
 - tracking generator 492
- Overwrite mode 171, 389
- OVLDR
 - tracking generator 492, 500
- OVLDR (status display) 69

- P**
- Pa (enhancement label) 66
- packing 1071
- Paint
 - Accessing 59
- Parallel poll register enable
 - Remote 917
- Parameters
 - Block data 569
 - Boolean 568
 - Entering 78
 - Numeric values 567
 - SCPI 566
 - Special numeric values 567
 - String 568
 - Text 568
- Passwords
 - Changing 633, 1077
- path 531
- Peak List On/Off
 - softkey 422
- Peak search 299, 303
- PEAK SEARCH key 415
- PEAKSEARCH 205
- Ph. Noise Auto Peak Search
 - remote control 872
- Phase 173, 302
- PHN (marker functions) 68, 410
- Ping 631
- PK (trace information) 67
- polarity
 - external trigger 472
 - external trigger/gate 377
 - trigger edge 377, 472
- Ports
 - User 933
- Positive Peak detector 399
- power
 - bandwidth percentage 255

- Power
 Mean 296
 remote control 884, 885, 886
 Remote control 886
 softkey 424
power cables 1071
Power Classes
 SEM 266
Power Max.
 tracking generator 487, 492
power measurement 222
 trace 243
 zero span 294
Power measurement
 Occupied bandwidth 252
Power Min.
 tracking generator 487, 492
Power Offset
 tracking generator 486, 489
Power supply
 Connector 36
 Switching on 44
power sweep
 tracking generator 480
PPC 562
PPE 574
PPE register 579
PPU 562
pre-trigger 378, 472
Preamplifier (B22) 181, 354, 460, 467
preset instrument 342
PRESET key 342
print
 screen 543
PRINT key 543
Print menu 543
Printers
 Selecting 54
Printers and Faxes window 545
Probe power
 Connector 34
Probes
 Activating 384
 Active 385
 Configuration (Softkey) 384
programming examples
 averaging I/Q data 1031
 channel power measurement 1010
 I/Q data 1021
 level measurement 1018
 limit lines and limit test 1008
 occupied bandwidth measurement 1013
 power ramp measurement 1015
 reading files 1023
 Spectrum Emission Mask measurement 1024
 Spurious Emissions measurement 1028
 time domain power measurement 1014
 transducers 1020
 writing files 1024
Programming examples
 Service request 999
Protocol
 RSIB 558
 VXI 557, 622
PTRansition 576
- Q**
QP (trace information) 67
Queries 555, 571
 Status 590
Question mark 569, 571
Quotation mark 569
- R**
R&S Digital I/Q Interface (B17)
 settings (remote control) 890
RA (trace information) 67
Rackmounting 42
RBW (hardware setting) 65
Ready for trigger
 Status register 586
Real/Imag (I/Q)
 I/Q Analyzer 460
Rebooting
 Remote control 922
Recall dialog box 532, 536
Recalling
 Settings 536
Recommendations
 remote control programming 592
Record Length
 Baseband Digital 460
Ref (hardware setting) 65
REF IN
 Connector 37
REF OUT
 Connector 37
reference
 external 48
 fixed 419
 internal 48
 level to marker level 412
 tracking generator 491
 value (channel power) 244
Reference
 External 507
 Internal 507
Reference frequency
 OCXO 38
reference level
 channel power 246
 offset 354, 467
 to marker level 412
Reference level 352, 464
Reference Level
 Baseband Digital 460
reference point
 frequency 418, 419
 level 418, 419
 peak search 418, 420
 time 418, 419
reflection measurement 494
 calibration 493
Registers 574
Release notes 26
remote 898
remote control
 changing to 502
Remote control
 Basics 553
 Command synchronization 125, 607

- Configuration 594, 1081
- Deactivating the instrument 600, 1088
- Display power save 123, 605
- Ending session 598, 1086
- Global variables 122, 604
- GPIB address 562
- Improving performance 91
- Initialization 122, 604
- Instrument settings 124, 606
- Interfaces 553, 621
- Library 119, 601
- Programming examples 997
- Protocols 553, 621
- Sending commands 124, 605
- Setting up a connection 598, 1086
- Starting 563
- Stopping 564
- Switching screen display on and off 123, 605
- Using markers 125, 606
- VNC 600, 1085
- Remote control programming example
 - Changing default settings 127, 608
 - Printout 137, 618
 - Reading out trace data 134, 615
 - Storing and loading settings 135, 617
 - Using markers and delta markers 129, 610
- Remote operation
 - Setting up 594
- Repetition interval
 - Time trigger 378, 473
- Report 546
- reset
 - switch on or off 391
- Reset values
 - Remote 918
- Resolution bandwidth 361, 380
- Resolution bandwidth (EMI) 301
- Result Frequency Start
 - tracking generator 487, 490
- Result Frequency Stop
 - tracking generator 487, 490
- REV string factory
 - Softkey 517
- REV string user
 - Softkey 517
- RF Input
 - Active probes 385
- RF Power trigger 376, 470
- RF Preamplifier (B22) 181, 354, 460, 467
- RM (trace information) 67
- RMS
 - VBW 362, 399
- RMS detector 399
- RMS value 296
- Rotary knob 74
- RSIB
 - interface functions 559
 - protocol 558
- RUN CONT key 341
- RUN SINGLE key 341
- S**
- SA (trace information) 67
- Safety instructions 26
- Sample detector 399
- sample number 317, 322
- Sample rate
 - Definition 474
 - Maximum 474
- Sample Rate
 - I/Q Analyzer 460
- Samples
 - Statistics 313
- Save dialog box 531, 536
- SAVE/RCL key 529
- SAVE/RCL menu 530
- Saving
 - Results 536
- scalar reflection measurement 494
- scaling
 - level axis 355, 468
 - x- and y-axis (signal statistic) 317, 323
- SCPI
 - Parameters 566
 - Syntax 564
 - Version 554
- SCPI confirmed commands 555
- Screen
 - Colors 50
- SDC 562
- search
 - minimum 205
 - peak 205
 - range 206
- Search
 - Bandwidth 348
- Search limits
 - OBW 253
- Search Settings
 - softkey (B17) 469
- Select Limit Line dialog box 219
- Select screen color set dialog box 521
- Self test 527
- Self-test
 - Remote 918
- SEM
 - Results 268
- sensitivity
 - APD measurement 320, 321, 326, 327
 - CCDF measurement 320, 321, 326, 327
- Sequential commands 572
- Service manual 25
- Service packs 56
- Service request (SRQ) 578, 579, 589
- Service request enable register (SRE) 578
 - Remote 918
- Setting commands 555
- Settings
 - Automatic loading 118
 - Loading 118
 - Recalling 536
 - Saving 536
 - Storing 117
- setup
 - general 512
- SETUP key 504
- Setup menu 505
- Sgl (enhancement label) 66
- shutdown
 - remote control 923
- signal count 417

Signal Source	
I/Q Analyzer	459
Softkey	459
Signal tracking	348
Search bandwidth	348
Sinusoidal signal measurements	91
Harmonics	96
Soft Front Panel	83
mini	83
softkey	243, 255
-	320, 321, 326, 327
(remote control)	911, 912
# of Adj Chan	237
# of Adj Chan (remote control)	730
# of Samples	317, 322
# of Samples (remote control)	793
# of TX Chan	237
# of TX Chan (remote control)	733
% Power Bandwidth	255
% Power Bandwidth (remote control)	749
= Center	346
= Marker	346
0.1 * RBW	345
0.1 * RBW (remote control)	823, 824
0.1 * Span	345
0.1 * Span (remote control)	823, 824
0.1*Demod BW (K7)	345
0.5 * RBW	346
0.5 * RBW (remote control)	823, 824
0.5 * Span	346
0.5 * Span (remote control)	823, 824
0.5*Demod BW (K7)	346
ACLR Abs/Rel	243
ACLR Abs/Rel (remote control)	746
ACLR Ref Setting (remote control)	736
ACLR Ref Spacing (remote control)	737
Active On/Off (remote control)	953
Adjust Ref Level	246
Adjust Ref Level (remote control)	726
Adjust Ref Lvl	255
Adjust Settings (remote control)	725, 797
All Functions off	224, 225
All Functions off (remote control)	799
All Marker Off	203
AM (remote control)	875
Ampere	354, 467
APD (remote control)	792, 794
Application Setup Recovery(remote control)	920
ASCII File Export	264, 423
ASCII File Export (remote control)	777
ASCII Trace Export	199, 533
ASCII Trace Export (remote control)	750
Auto (remote control)	835
Auto All	357
Auto Max Peak	412
Auto Max Peak (remote control)	863
Auto Min Peak	412
Auto Min Peak (remote control)	863
Average Mode (remote control)	852
Band Power	424
Band Power On/Off	424
C/N (remote control)	720, 721
C/No (remote control)	720, 721
Calibrate Reflection Open	477
Calibrate Reflection Short	477
Calibrate Transmission	477
Calibration Frequency MW	937
Calibration Frequency RF	936
CCDF (remote control)	792, 794
Center =Mkr Freq	412
Center =Mkr Freq (remote control)	688
CF StepSize (remote control)	665
Chan Pwr/Hz	242
Chan Pwr/Hz (remote control)	746
Channel Bandwidth	255
Channel Bandwidth (remote control)	730, 731
Channel Settings	237
Channel Spacing (remote control)	732, 733
Clear All Messages (remote control)	926, 927
Clear/Write	242
Color (On/Off)	545
Color On/Off (remote control)	961
Colors	544
Comment	545
Cont Demod (remote control)	874
Continue Single Sweep (remote control)	833
Copy	535
Copy (remote control)	942
Copy to (remote control)	706
Copy Trace	199
Copy Trace (remote control)	854
Corr Data On/Off (remote control)	935, 936
Coupling (FSx/HP)(remote control)	992
Coupling Ratio	364
CP, ACP, MC-ACLR (remote control)	720, 721
CP/ACLR Config	237
CP/ACLR Standard	236
Current File List (1/2)	535
Cut	535
Date	535
dBm	354, 467
dBmV	354, 467
dBpW	354, 467
dB μ A	354, 467
dB μ V	354, 467
Decim Sep	200, 265, 294, 424, 534
Default Coupling	365
Default Settings	319, 325
Default Settings (remote control)	796, 798
Delete	535
Delete (remote control)	707, 943, 945, 952
Delete File	532
Delete File (remote control)	946
Delete Range	262, 292
Delete Range (remote control)	764
Density	425
Description	990
Detector Auto Select (remote control)	853
Detector Manual Select (remote control)	853
Deviation Lin/Log (remote control)	668
Device (1/2)	544
Device 1/2 (remote control)	945
Device Setup	544
Device Setup (remote control)	960, 961, 963, 965
Disable all Items	532
Disable all Items (remote control)	986
Disconnect Network Drive	536
Disconnect Network Drive (remote control)	987
Display Line 1 (remote control)	704
Display Line 2 (remote control)	704
Edit (remote control)	706, 708, 709, 711, 714, 715, 716, 951
Edit ACLR Limit (remote control)	738, 739, 740, 741, 742, 743

- Edit Comment 531
- Edit File Name 531
- Edit Name (remote control) 953
- Edit Path 534
- Edit Path (remote control) 942, 944
- Edit Power Classes 266
- Edit Reference Range 263, 265
- Edit Reference Range (remote control) 771, 772
- Edit Unit (remote control) 953
- Edit Values (remote control) 952
- Enable all Items 532
- Enable all Items (remote control) 985
- Exclude LO (remote control) 863
- Export 533
- Extension 535
- External 375, 470
- External AM 479, 499
- External AM (remote control) 903
- External FM 479, 499
- External FM (remote control) 904
- External I/Q 479
- External IQ (remote control) 903
- Fast ACLR On/Off 244
- Fast ACLR On/Off (remote control) 747
- File Lists (1/2) 535
- File Manager 534
- Filter Type 301, 366
- Filter Type (remote control) 671, 831
- Firmware Update (remote control) 921
- FM (remote control) 875
- Free Run 375, 470
- Frequency Line 1 (remote control) 704, 705
- Frequency Line 2 (remote control) 704, 705
- Frequency Offset 347
- Full Span (remote control) 825
- Gate Delay (remote control) 841
- Gate Length (remote control) 842
- Gate Mode Lvl/Edge (remote control) 836, 843
- Gate Ranges 320, 326
- Gate Ranges (remote control) 794, 795, 796
- Gated Trigger (On/Off) 320, 326
- Gated Trigger (remote control) 841, 842
- GPIO Address (remote control) 989
- GPIO Language (remote control) 992
- GPIO Terminator LFEOI/EOI (remote control) 989
- Grid Abs/Rel 355, 468
- Grid Abs/Rel (remote control) 844
- Hardware Info (remote control) 925
- Hold/Cont 391
- ID String Factory (remote control) 926, 991
- ID String User (remote control) 926
- IF Gain (Norm/Puls)(remote control) 993
- IF Output IF/Video (remote control) 932
- Import 534
- Info 990
- Input 50 W/75 W (remote control) 670
- Input RF/Cal/TG (remote control) 937
- Insert after Range 262, 292
- Insert after Range (remote control) 767
- Insert before Range 262, 292
- Insert before Range (remote control) 767
- Install Printer 545
- Installed Options (remote control) 925
- Interpolation Lin/Log (remote control) 952
- LAN Reset 990
- Last Span 180
- Left Limit 206, 423
- Left Limit (remote control) 689
- Limit Chk On/Off (remote control) 740, 744, 745
- Limit Line Select dialog box (remote control) 713, 717
- Limits On/Off (remote control) 690
- Lin 393, 394
- Link Mkr1 and Delta1 408
- Link Mrk1 and Delta1 (remote control) 697
- List Evaluation 263
- List Evaluation On/Off 264
- List Evaluation On/Off (remote control) 777
- Load Standard 267
- Local 502
- Log 395
- Manual 347
- Manual (remote control) 665
- Map Network Drive 536
- Map Network Drive (remote control) 988, 989
- Margin 264
- Margin (remote control) 777
- Marker 1 (remote control) 701
- Marker 1 to 4 (remote control) 695, 702, 703
- Marker 1-16 201, 335, 337
- Marker 1, Marker 2 ...16 201, 335, 337
- Marker 2 (remote control) 701
- Marker 3 (remote control) 701
- Marker 4 (remote control) 701
- Marker List (remote control) 880
- Marker Norm/Delta 201, 335, 337
- Marker Norm/Delta (remote control) 701
- Marker Stepsize 407
- Marker Stepsize (remote control) 864
- Marker Table (Off/On/Aut) (remote control) 866
- Marker Table (On/Off) 203
- Marker to Trace (remote control) 701, 867
- Marker Wizard 202
- Marker Zoom (remote control) 688
- Max Hold 243
- Mean (remote control) 803, 804
- Meas Start/Stop 267
- Meas Start/Stop (remote control) 749, 761
- Meas Time Auto 358, 829
- Meas Time Manual 358, 828, 829
- Min 205
- Min (remote control) 694, 700
- Mkr Demod On/Off (remote control) 875
- Mkr List On/Off (remote control) 880
- Mkr Stop Time (remote control) 874
- Modulation 479
- Modulation OFF 479
- More Markers 202
- n dB down 421
- n dB down (remote control) 876, 877, 878
- Name 535
- Name (remote control) 707
- Network Drive 536
- New (remote control) . 706, 708, 709, 711, 714, 715, 716
- New Folder 534
- New Folder (remote control) 944
- Next Min 205
- Next Min (remote control) 693, 694, 700
- Next Mode </abs/> 205
- Next Peak 205
- Next Peak (remote control) 691, 692, 693, 694, 698, 699, 700
- Noise Correction 245, 355, 468
- Noise Meas On/Off 418
- Noise Meas On/Off (remote control) 871, 872

Noise Source	384	Ref Point Level	418, 419
Noise Src On/Off (remote control)	931	Ref Point Level (remote control)	868
Normalize	478	Ref Point Time (remote control)	868
NORMALIZE	494	Ref Value (remote control)	889
OBW (remote control)	720	Ref Value Position (remote control)	846
Password	990	Reference Fixed On/Off	419
Password (remote control)	939	Reference Int/Ext (remote control)	911, 933, 934
Paste	535	Reference Position (remote control)	846
Peak	205	Reference Value	478
Peak (remote control)	692, 699, 805, 806	Reference Value Position	478
Peak Excursion	207, 423	Rename	535
Peak Excursion (remote control)	679	Rename (remote control)	944
Peak Search	418, 420	Res BW	316, 322
Peak Search (remote control)	867, 880, 882, 883	Res BW (remote control)	670
Percent Marker	322, 793	Res BW Auto (remote control)	830, 831
Percent Marker (remote control)	865	Res BW Manual (remote control)	670, 830
Ph Noise On/Off (remote control)	869, 873	Restore Standard Files	267
Ph Noise/Ref Fixed (remote control)	869, 873	Right Limit	206, 423
Phase Noise	418	Right Limit (remote control)	689
Phase Noise Auto Peak Search	419	RMS (remote control)	808
Phase Noise On/Off	418	Save	531
Power	394, 395, 424	Save As Standard	267
Power Mode	242	Save As Standard (remote control)	760
Power Mode (remote control)	724	Save As Trd Factor	479
Power Sensor	383	Save Evaluation List	264
Power Sweep	480	Save Evaluation List (remote control)	777
Power Sweep (On/Off)	480	Save File	531
Power Sweep (On/Off) (remote control)	906	Save File (remote control)	948, 949
Power Sweep Start	480, 906	Scaling	317, 323
Power Sweep Start (remote control)	906	Screen Colors (remote control)	959
Power Sweep Stop	480	ScreenShot	533
Power Sweep Stop (remote control)	907	Search Lim Off	207
Predefined Colors	545	Search Lim Off (remote control)	690, 865
Predefined Colors (remote control)	960	Search Limits	206
Print Screen	543	Search Limits (remote control)	690
Print Screen (remote control)	945, 962, 963, 964	Select 1 2 3 4 (remote control)	695
Range	352, 465	Select Dataset	533
Range Lin. Unit	319, 325, 354, 466	Select Directory (remote control)	953
Range Lin. Unit (remote control)	668	Select File	531
Range Linear %	318, 324, 353, 466	Select Items	531
Range Linear % (remote control)	668	Select Items (remote control)	985, 986
Range Log (remote control)	668, 844	Select Marker (No)	417, 419, 424
Range Log 1 dB	318, 324, 353, 466	Select Object	545
Range Log 5 dB	318, 324, 353, 466	Select Path	531
Range Log 10 dB	318, 323, 352, 465	Select Print Color Set	545
Range Log 50 dB	317, 323, 352, 465	Select Print Color Set (remote control)	959
Range Log 100 dB	317, 323, 352, 465	Select Trace	243
Range Log Manual	318, 324, 353, 466	Select Trace (remote control)	725, 827
RBW/VBW Manual	365	Select Traces to check (remote control)	707, 718
RBW/VBW Noise [10]	364	Self Align (remote control)	935
RBW/VBW Pulse [1]	364	Selftest Results (remote control)	937
RBW/VBW Sine [1/3]	364	Service Function (remote control)	938, 939
Recall	478, 532	Set CP Reference	244
Recall (remote control)	760	Set Standard (remote control)	760
Recall File	531	Set to Default	545
Recall File (remote control)	947	Set to Default (remote control)	959
Ref Fixed	419	Settings	358
Ref Level (remote control)	798	Shift X Limit Line (remote control)	710
Ref Level Adjust Man/Auto (remote control)	950	Shift Y Limit Line (remote control)	716
Ref Level Offset	354, 467	Show Align Results (remote control)	935
Ref Level Offset (remote control)	845	Show Peaks	264
Ref Level Position	355, 468	Show Peaks (remote control)	778
Ref Level Position (remote control)	846	Sig Count	417
Ref Lvl =Mkr Lvl	412	Sig Count On/Off (remote control)	870
Ref Lvl =Mkr Lvl (remote control)	862	Signal Track (remote control)	826
Ref Point Frequency	418, 419	Size	535
Ref Point Frequency (remote control)	868	Soft Frontpanel (remote control)	924

Sort Mode	535	Trigger Out (Low/High)(remote control)	932
Sort Mode Freq/Lvl (remote control)	882	Trigger Polarity	472
Source Cal	477	Unit	354, 467
Source Config	481	Unit (remote control)	844, 846
Source Power	477	Update Path (remote control)	921
Source Power (remote control)	905, 911	Use Zoom Limits	207
Source RF (On/ Off)	477	Use Zoom Limits (remote control)	864
Source RF (On/Off) (remote control)	901	User Defined Colors	545
Span	424	User Defined Colors (remote control)	959
Span Manual	350	User Pref Setup	503
Span Manual (remote control)	825	Value (remote control)	709, 711, 714
Span/RBW Auto [50]	365	Versions + Options (remote control)	925
Span/RBW Manual	365	Versions+Options (remote control)	924
Start	347	Video	376, 470
Start (remote control)	825	Video BW Auto (remote control)	832
Start Frequency (remote control)	825	Video BW Manual (remote control)	831
Startup Recall	532	Video Output	384
Startup Recall (On/Off)	533	Volt	354, 467
Startup Recall On/Off(remote control)	946	Watt	354, 467
Std Dev (remote control)	810	Weight ADJ (On/Off) (remote control)	735
Stepsize Standard	407	Weight TX (On/Off) (remote control)	735
Stepsize Standard (remote control)	864	Weighting Filter (remote control)	734, 735, 736
Stepsize Sweep Points	407	X * RBW	346
Stepsize Sweep Points (remote control)	864	X * RBW (remote control)	823, 824
Stop	347	X * Span	346
Stop (remote control)	825	X * Span (remote control)	823, 824
Stop Frequency (remote control)	825	x Offset (remote control)	710
Sweep Count	372	x-Axis Range	317, 323
Sweep List (remote control)	750, 751, 752, 753, 754, 755, 756, 757, 763, 764, 765, 766, 767, 768, 769, 770	x-Axis Range (remote control)	797
Sweep Points	372	x-Axis Ref Level	317, 323
Sweep Points (remote control)	834	x-Axis Ref Level (remote control)	798
Sweep Rep (On/Off)(remote control)	992	x*Demod BW (K7)	346
Sweep Time	243, 380	y Offset (remote control)	715
SweepTime Auto (remote control)	835	y-Axis Max Value	319, 325
System Messages (remote control)	926, 927	y-Axis Max Value (remote control)	799
T1-T2 ->T1	394	y-Axis Min Value	319, 325
T1-T3 ->T1	394	y-Unit %/Abs	319, 325
T1-T4 ->T1	394	y-Unit %/Abs (remote control)	798
T1-T5 ->T1	394	Zero Span	350
T1-T6 ->T1	394	Zero Span (remote control)	825
THD Unit %/DB (remote control)	789	Softkey	75
Threshold	206, 423	*IDN format legacy	518
Threshold (remote control)	865	= Marker (remote control)	688
Time Domain Power (remote control)	801	Adjust Settings	252, 341, 463
Time Line 1 (remote control)	861	Adjust X-Axis	292, 294
Time Line 2 (remote control)	861	Alignment	511
Time+Date (remote control)	920, 923, 924	AM	420
Trace 1 2 3 4 5 6 (remote control)	849	AM Mod Depth	224, 336
Trace Math	394	AM Mod Depth (remote control)	784, 785
Trace Math (remote control)	847, 848	Annotation (On/Off)	521
Trace Math Mode	394	Annotation On/Off (remote control)	977, 979, 981
Trace Math Mode (remote control)	848	APD	224, 316
Trace Math Off	395	Application setup recovery	526
Trace Math Position	395	ASCII File Export	293
Trace Mode (remote control) ...	799, 800, 802, 803, 804, 805, 806, 807, 809, 844	AUTO	359, 363, 371
Track BW (remote control)	826	Auto Freq	357
Track On/Off (remote control)	826	Auto Level	358
Track Threshold (remote control)	827	Auto select reference	507
Tracking Generator	383	Average	390
Trg/Gate Level	377	Average Mode	393
Trg/Gate Level (remote control)	838	Band Power (remote control)	885, 887
Trg/Gate Polarity Pos/Neg	377	BB Power	376, 471
Trg/Gate Polarity Pos/Neg (remote control)	839, 842	Blank	172, 390
Trg/Gate Source (remote control)	837, 838, 842	C/N	251, 463
Trigger Holdoff (remote control)	836	C/N (remote control)	724
		C/N, C/No	223, 251, 462
		C/No	251, 463

C/No (remote control)	724	GPIOB	514
Calibrate Reflection Open (remote control)	901, 902	GPIOB address	514
Calibrate Reflection Short (remote control)	902	GPIOB language	515
Calibrate Transmission (remote control)	902	GPIOB terminator LFEOI/EOI	518
Calibration frequency MW	527	Handle missing Ext. ref	507
Calibration frequency RF	527	Hardware info	524
CCDF	224, 321	Harmonic Distortion	225, 340
Center	345	Harmonic RBW Auto	341
Center (remote control)	822	Harmonic Sweep Time	341
CF Stepsize	345	I/O logging (On/Off)	518
Ch Power ACLR	223, 236	ID string factory	514
Channel Bandwidth	251, 463	ID string user	514
Clear all messages	525	IF gain (Norm/Puls)	516
Clear Write	171, 389	IF Power	376, 471
Close Sweep List	262, 292	IF Power Retrigger Holdoff (remote control)	837
Color (On/Off)	522, 523	IF Power Retrigger Hysteresis (remote control)	837
Colors	521	Import (remote control)	889
Compatibility mode	514	Info (LXI)	513
Computer name	512	Input (AC/DC)	187, 355, 384, 468
Configure monitor	519	Input (AC/DC)(remote control)	672
Cont Demod	420	Input 50 Ω/75 Ω	184, 355, 468
Continue Single Sweep	370	Input source	527
Continuous Sweep	370	Insert Value	211
Copy to	211	Install option	526
Coupling (FSx/HP)	517	Install option by XML	526
CP, ACP, MC-ACLR (remote control)	724	IP address	513
CP/ACLR Standard (remote control)	728	IQ Export	534
Decim Sep (remote control)	850	IQ Import	534
Default Colors 1 (remote control)	978	LAN reset	514
Default Colors 2 (remote control)	978	Left Limit	297
Delete	212	Limits On/Off	296
Delete (ACLR User Standard)	245	List Evaluation	292
Delete Value	211	List Evaluation On/Off	293
Density (remote control)	884, 885, 886	Load (ACLR User Standard)	245
Description	514	Log	393
Deselect all	210	Logo (On/Off)	521
Details On/Off	293	Logo On/Off (remote control)	979
DHCP (On/Off)	513	LXI	513
Display Line 1	212	Margin	293
Display Line 2	212	Marker 1 to 4 (remote control)	696
Display lines	212	Marker Demod	420
Display pwr save	523	Marker Number	424
Display Pwr Save (remote control)	979, 980	Marker Number (remote control)	879
Display setup	519	Marker Peak List	422
Display update (On/Off)	518	Marker to Trace	202
Edit	211	Marker to Trace (remote control)	695
Edit (remote control)	712, 713, 714	Marker Zoom	408
Edit Comment	210	Max Hold	171, 390
Edit Margin	211	Max Peak Count	422
Edit Name	210	May Peak Size (remote control)	881
Edit Value	211	Mean	296
Exclude LO	412	Meas Start/Stop	294
Export (remote control)	948	Mech Atten Auto (remote control)	846
FFT	359, 363, 371	Min Hold	172, 390
FFT Filter Mode	359, 364, 372	Mkr Demod On/Off	420
Firmware update	525	Mkr Stop Time	420
FM	420	Mode default	515
Frequency Line 1	213	Mode R&S FSP	515
Frequency Line 2	213	Mode R&S FSU	515
Frequency Offset (remote control)	824	Network address	512
Full Span	180	New	210
Gate Delay	379	New (remote control)	712, 713, 714
Gate Length	380	New Spectrum (remote control)	635
Gate Mode Lvl/Edge	379	No. of Harmonics	341
Gate Settings	379	Normalize (remote control)	902
Gated Trigger	378	OBW	223, 254
General setup	512	OBW (remote control)	724

- Option licenses 525
- Other LAN settings 512
- Password 513, 528
- Peak 296
- Peak List (remote control) 881
- Peak List On/Off 422
- Peaks per Range 293
- Power (remote control) 884, 885, 886
- Preamplifier On/Off 181, 354, 460, 467
- Preamplifier On/Off (remote control) 669
- Predefined colors 522
- Predefined Colors (remote control) 978
- Print colors 522
- Recall (remote control) 902
- Ref Level 352, 464
- Ref Level (remote control) 845
- Reference Int/Ext 507
- Res BW Auto 361
- Res BW Manual 361, 380
- Reset password 527
- RF 527
- RF Atten Auto 354, 467
- RF Atten Auto (remote control) 846
- RF Atten Manual 181
- RF Power 376, 470
- Right Limit 297
- RMS 296
- Save (ACLR User Standard) 245
- Save (remote control) 851
- Save As Trd Factor (remote control) 907
- Save Evaluation List 293
- Save Limit Line 211
- Screen Colors (remote control) 978
- Screen title 520
- Screen Title (remote control) 983
- Search Signals 335, 337
- Select 1 2 3 4 (remote control) 696
- Select color set 521, 523
- Select object 522
- Select Trace 348
- Select Traces to check 210
- Self-Alignment 511
- Selftest 527
- Selftest results 528
- Service 527
- Service function 528
- Set to default 522
- Set to Default (remote control) 978
- Shift Y Limit Line (remote control) 713
- Show align results 512
- Show error flag 507
- Show Peaks 293
- Signal Track 347
- Single Sweep 370
- Soft frontpanel 519
- Sort Mode Freq/Lvl 422
- Spectrum Emission Mask 223, 258
- Spurious Emissions 224, 289
- Squelch 421
- Squelch (remote control) 648, 649
- Squelch Level 421
- Std Dev 296
- Subnet mask 513
- Sweep 359, 363, 371
- Sweep Count (remote control) 834
- Sweep List 258, 289
- Sweep repeat (On/Off) 516
- Sweep Time (remote control) 835
- Sweep Type 358, 363, 371
- Sweptime Auto 363, 371
- Sweptime Manual 362, 370
- Sweptime Manual (remote control) 835
- System info 523
- System messages 524
- Theme selection 521
- Time Domain Power 224, 296
- Time Line 1 213
- Time Line 2 213
- Time+date 518
- Time+date (On/Off) 520
- Time+date format 520
- Time+Date Format (remote control) 984
- Time+Date On/Off (remote control) 983
- TOI 224, 335
- TOI (remote control) 790, 791
- Tool bar state (On/Off) 520
- Tool Bar State On/Off (remote control) 980
- Touch screen alignment 512
- Trace 1 389
- Trace 2 389
- Trace 3 389
- Trace 4 389
- Trace 5 389
- Trace 6 389
- Trace Mode (remote control) 683
- Track BW 348
- Track On/Off 348
- Track Threshold 348
- Trg/Gate Source 375, 470
- Trg/Gate Source (remote control) 838, 839
- Trigger Holdoff 378, 473
- Trigger Hysteresis 378, 473
- Trigger Offset 378, 472
- Trigger Out 384
- User Standard 244
- User-Defined colors 522
- Versions+options 524
- Video BW Auto 362
- Video BW Manual 361
- View 172, 390
- X Offset 212
- Y Offset 212
- y Offset (remote control) 712
- Softkeys
 - Autoselect 391
 - Detector Auto Peak 392
 - Detector Average 392
 - Detector CISPR Average 392
 - Detector Manual Select 391
 - Detector Negative Peak 392
 - Detector Positive Peak 392
 - Detector Quasi Peak 392
 - Detector RMS 392
 - Detector RMS Average 393
 - Detector Sample 392
 - Firmware Update 60
 - Lower Level Hysteresis 358
 - More 75
 - Probe Config 384
 - Up 75
 - Upper Level Hysteresis 358
- Source Power
 - tracking generator 486, 489

- Span
 - softkey 424
 - SPAN key 349
 - Span menu 350
 - SPD 562
 - SPE 562
 - Speaker
 - remote control 923
 - Spectrogram
 - Menu 405
 - Spectrum Emission Mask
 - Measurements 256
 - Power Classes 266
 - Softkey 223, 258
 - SPLIT/MAXIMIZE
 - Key 83, 981
 - Spurious Emissions
 - Limit lines 286
 - Measurements 283
 - Results 285
 - Softkey 224
 - Squelch
 - Remote control 648, 649
 - Softkey 421
 - Squelch Level
 - Softkey 421
 - SRE 574
 - SRE (service request enable register) 578
 - SRQ (service request) 578, 589
 - Stand-alone operation 632, 1076
 - start frequency 347
 - statistic measurements
 - gated trigger 327
 - Status
 - Queries 590
 - Status bar
 - Hiding/restoring 520
 - Status byte
 - Remote 916, 918
 - Status byte (STB) 579
 - Status display 69
 - Status registers 574
 - CONDition 576
 - ENABle 576
 - EVENt 576
 - model 576
 - NTRansition 576
 - parts 576
 - PTRansition 576
 - STATus:OPERation 580, 586
 - STATus:QUEStionable 581, 587
 - STATus:QUEStionable:ACPLimit 588
 - STATus:QUEStionable:FREQuency 582
 - STATus:QUEStionable:LIMit 582
 - STATus:QUEStionable:LMARgin 583
 - STATus:QUEStionable:POWer 584
 - Status reporting system 574
 - Application 589
 - Common commands 915
 - STB 574
 - Step size
 - Center frequency 345
 - stop frequency 347
 - storing 1071
 - Storing
 - Instrument configuration 117
 - Measurement data 118
 - String in remote commands 568
 - Suffixes 565
 - supply voltage, external noise source 384
 - sweep
 - count 372
 - Free Run 375, 470
 - gated 381
 - Sweep
 - Continue single sweep 370
 - Continuous 370
 - Gated 378
 - Single 370
 - Time 362, 370
 - SWEEP key 369
 - sweep list
 - Fast SEM (remote control) 762
 - Sweep List
 - Symmetrical 262
 - Sweep menu 369
 - Sweep points 298
 - Sweep status
 - Status register 586
 - Sweep time
 - Coupling 363, 371
 - Statistics 313
 - SWT (hardware setting) 65
 - Syntax elements
 - SCPI 569
 - System messages dialog box 524
- ## T
- Task bar
 - Accessing 59
 - TCP/IP
 - tracking generator 491
 - TCP/IP address
 - tracking generator 491
 - Tdf (enhancement label) 66
 - Template 546
 - Test
 - Self test 527
 - Test report 546
 - Text paramters in remote commands 568
 - Themes
 - Display 90
 - threshold
 - line 206, 423
 - Threshold
 - Signal tracking 348
 - Time 520
 - Setting 49
 - softkey 377, 472
 - Time Domain Power
 - Restricting range 295
 - Results 294
 - time line 214
 - Time line 213
 - Time trigger
 - Repetition interval 378, 473
 - timestamp
 - instrument (remote control) 923
 - Title
 - Diagram 520
 - Toggleing
 - Span values 73

- TOI
 - Measurement 330
 - Results 334
 - TOI (marker functions) 68, 410
 - Toolbar
 - Icon 71
 - Toggle 71
 - Touch screen
 - Alignment 512
 - Touchscreen
 - Aligning 50
 - Display 31
 - TPIS
 - I/Q data 899
 - trace
 - power measurement 243
 - Trace
 - Clear Write 171, 389
 - Signal tracking 348
 - Trace information
 - Detector type 67
 - Trace number 67
 - TRACE key 198, 387
 - Trace mode 389
 - Average 390
 - Blank 172, 390
 - Clear Write 171, 389
 - Max Hold 171, 390
 - Min Hold 172, 390
 - View 172, 390
 - Traces
 - Loading 118
 - Storing 118
 - tracking generator
 - configuration (remote control) 913
 - display 500
 - error messages 500
 - Power Offset (remote control) 905
 - power sweep 480
 - reverse sweep 480
 - selecting 486, 488
 - TTL Synchronization (remote control) 913
 - Tracking generator
 - Connector 34
 - Tracking Generator
 - Denominator (remote control) 909
 - Frequency Offset (remote control) 905, 910
 - Numerator (remote control) 909
 - Transducer 174
 - Transducer break 175
 - Transducer factors 175, 508
 - Transducer set 175, 510
 - Transducers
 - Recalling 529
 - Saving 529
 - transmission measurement
 - calibration 493
 - tracking generator 494
 - Tree walking
 - Softkey 517
 - TRG (enhancement label) 66
 - TRIG key 374
 - trigger
 - external 375, 470
 - level 377
 - slope 377, 472
 - Trigger
 - Event (remote) 918
 - External gate 378
 - Gated sweep 379
 - Holdoff 378, 473
 - Hysteresis 378, 473
 - Level 472
 - Offset 378, 472
 - Status register 586
 - Trigger menu 374, 469
 - trigger mode 375, 470
 - External 375, 470
 - Free Run 375, 470
 - Video 376, 470
 - Trigger mode
 - BB power 376, 471
 - IF power 376, 471
 - RF power 376, 470
 - TRIGGER OUTPUT
 - Connector 37
 - TRK (marker functions) 68, 410
 - Troubleshooting
 - see User Manual 69
 - TTL synchronization
 - tracking generator 491
- ## U
- UNCAL (status display) 69
 - Unit 182
 - Up
 - Softkey 75
 - UP 567
 - Update rate
 - Display 91
 - Updates 60
 - Upper Level Hysteresis
 - Softkey 358
 - Usable I/Q bandwidth
 - Definition 474
 - USB
 - Connector 37
 - User account 60
 - USER key 503
 - Remote 987
 - User ports
 - Remote control 933
 - User sample rate
 - Definition 474
 - user-defined menu 503
- ## V
- V network 173, 302
 - VBW
 - RMS detector 362, 399
 - VBW (hardware setting) 65
 - Versions/Options dialog box 524
 - Vertical stroke 569
 - Video bandwidth 361
 - video triggering 376, 470
 - View Filter 216
 - View trace mode 172, 390
 - Virus protection 56
 - VISA 554, 556, 621
 - Libraries 555
 - Resource string 555, 556, 621

VNC600, 1085
Volume
 remote control 923
VXI protocol557, 622

W

Wait
 Remote 919
Waiting for trigger
 Status register586
Web browser
 Configuration interface629
weighting filter240
White papers26
White space569
WordPad
 Accessing59

Y

Y-Axis Max
 I/Q Analyzer465

Z

zero span350
Zero span measurements106
Zoom408
 Amplitude172, 390