


ETCR[®] Leakage/Current Monitoring Recorder

ETCR 8000
ETCR 8000B

<http://www.etcrc.com>

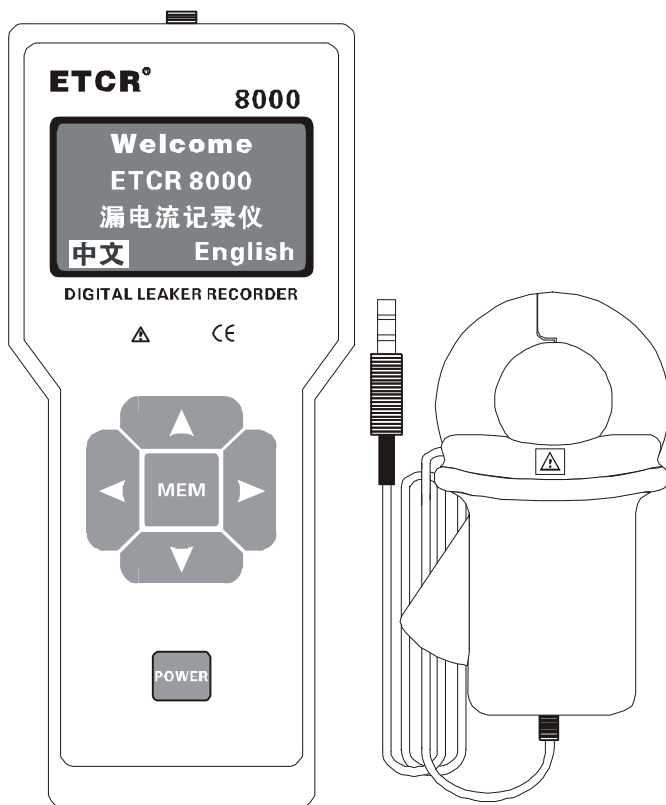

MANUAL

ETCR Electronic Technology Company

CONTENT

Warning.....	1
I. Brief Introduction.....	3
II. Electrical Symbol	4
III. Series Model	4
IV. Technical Specifications	4
V. Instrument Structure	6
VI. Instrument Operation	7
1 Turning on and off	7
2. Language Selection	7
3. Changeover Display Modes	7
4. Selecting Power-saving Mode	8
5. Setting Time	8
6. Data Inquiry	9
7. Deleting Data.....	10
8. Leakage/current measurement.....	10
9. Real-time Monitoring.....	13
10. Data Download.....	13
VII. How to operate the monitor software.....	14
1. Home Page	14
2. Real-time Monitoring Menu.....	15
3. Alarm Prompt	15
4. Storing Waveform.....	16
5. Historical Inquiry Display.....	16
6. Reading Historical Data	17
7. Historical Data Queuing in Ascending Order	17
8. Historical Data Queuing in Descending Order.....	18
9. Historical Data Storage	19
VIII. Replacing Battery.....	20
IX. Accessories.....	21



Warning





Thank you for buying **ETCR8000 Leakage/Current Monitoring Recorder** manufactured by our company. Please keep to the following requirements in order to use the product properly:

——**Read the User Manual carefully.**

——keep to **the safety rules and precaution given in the manual strictly.**

- u Pay special attention to safety when using this instrument in any case.
- u Observe the text and symbols attached to the front and rear panels of the instrument.
- u Please replace the battery with a new one when the batter voltage is so low that the LCD display is dim.
- u This instrument can not be turned off automatically. Please turn off it after use.
- u Don not use the instrument to measure a line with a voltage higher than 600V.
- u It is forbidden to use the instrument when neither rear cover of the instrument nor the batter cover is in place.
- u Never use the instrument when the instrument case or measuring wire is broken and therefore any metallic part is exposed.
- u Don not place the instrument at a environment with high temperature, high humidity, condensation and direct sunshine for a long time
- u It is necessary to maintain the instrument and clamp periodically to keep them clean. Don not wipe the clamp by using corrosive medium or abrasive object.
- u Avoid impact upon the current clamp, especially its mating surface
- u Please observe the correct polarity when replacing the battery. Remove the battery from the instrument if you expect not to use the instrument for a long time.
- u Operation, disassembly and maintenance of the instrument must be carried

out only by a authorized and qualified person.

- u When there is an instrument fault, never use it because continual use may result in danger. In this case, isolate the instrument immediately and delivered to an authorized agency for dealing with it.
- u The user must follow the safety instructions preceded by “” warning symbol on the instrument and manual.
- u The user must strictly follow the instructions preceded by “” danger symbol on the instrument and manual.

I. Brief Introduction

ETCR8000 series Current/Leakage Monitoring Recorder is well designed and manufactured for online measurement, monitoring and recording of AC leakage / current. It is composed of a tester, monitoring software, current clamp and communication cable, etc. This instrument has been widely applied in many fields, such as electrical power, telecommunication, meteorology, railway, oil fields, construction, metering, research agencies, universities, mines and enterprises.







Both Chinese and English MMI is built in the instrument. Therefore, it is suitable for use by engineers and technicians of different countries. The instrument has a large LCD display with blue background and a large storage space. 4200 sets of data can be stored in the instrument. In addition, the instrument can automatically store data at an interval, which is adjustable from 1 to 60 min.

ETCR leakage/current monitor software provides online and real-time monitoring and historical data inquiry. With the software developed by our technical department, the instrument can display leakage current dynamically, display current waveform, maximum value, minimum value and average value. The users can preset the alarm limit. The instrument will generate an alarm when the measured current exceeds the limit. In addition, the users can read, inquire, store, analyze, process, sequence historical data and generate and print a fitting curve and report.

The current clamp is made of a special alloy, adopts the latest CT technique and magnetic shielding technique and is not almost interfered by external magnetic field. This ensures high accuracy, high stability and high reliability of the values which are measured continuously.

The Leakage/Current Monitor Recorder is suitable for measuring AC lines up to AC600V. With the instrument, the users can easily find out the cause of insulation fault and circuits with an insulation fault, monitor intermittent electric leakage, find out the time when an insulation fault occurs and repair lines.

II. Electrical Symbol

	Extremely dangerous! The operators must keep to the safety rules strictly, otherwise, electric shock will result in death or injury.
	Dangerous! The operators must keep to the safety rules strictly, otherwise, electric shock will result in will result in death or injury.
	Warning! The operators must keep to the safety rules strictly, otherwise, personal injury or equipment damage will occur..
	Double insulation
	Alternating current (AC)
	Direct current (DC)

III. Series Model


Model	Range	Resolution	Accuracy	Clamp size
ETCR8000	0.0A-500A	0.1A	±2%±5dgt	35mm×40mm
ETCR8000B	0.00mA-20A	0.01mA	±2%±5dgt	25mm×30mm

IV. Technical Specifications

Functions	Measuring AC leakage current and AC current, on-line monitoring and recording, locating insulation faults and repairing electrical lines.
Power source	DC6V, alkaline battery LR6 1.5V×4
Testing Method	Clamp CT, true RMS
Display Method	LCD: 128dots×64dots
Instrument Dimension	Tester(L×W×H): 75mm ×170mm ×30mm Current clamp(L×W×H): 170mm ×70mm ×38mm
Weight	Tester: 240g (battery included) Current clamp: 170g

LCD Dimension	Display field: 44mm×27mm
Shield Type	Type B: Double shielding
Sampling Rate	2 samples/s
Data storage	4200 sets (data loss does not occur after power failure or replacing the battery)
Time Setting	Recording interval adjustable from 1 to 60 min, If set to 0 min, the auto-store function is turned off
Recording Time	Continuously operate for about 10 days at the power-saving mode
Line Voltage	Line with a voltage up to AC600V
Overflow Display	The “OL” symbol is displayed when a measured value is beyond the measurement range
Battery Voltage	A Low-Battery symbol is displayed and the user should replace the battery with a new one when the battery voltage drops to 4.6V to 4.8V. In this case, the measured values are still accurate.
Rated Power	about 5mA at the power-saving mode, maximum current consumption: 20mA
Lead Length	2 m
Temperature and Humidity	Working: -10℃～40℃; below 80%rh
	Storage: -10℃～60℃; below 70%rh
Insulation Resistance	Higher than 100MΩ, 1000V
Safety Codes	IEC1010-1, IEC1010-2-032, Pollution Class 2, CAT III(600V), IEC61326(EMC standard)

V. Instrument Structure

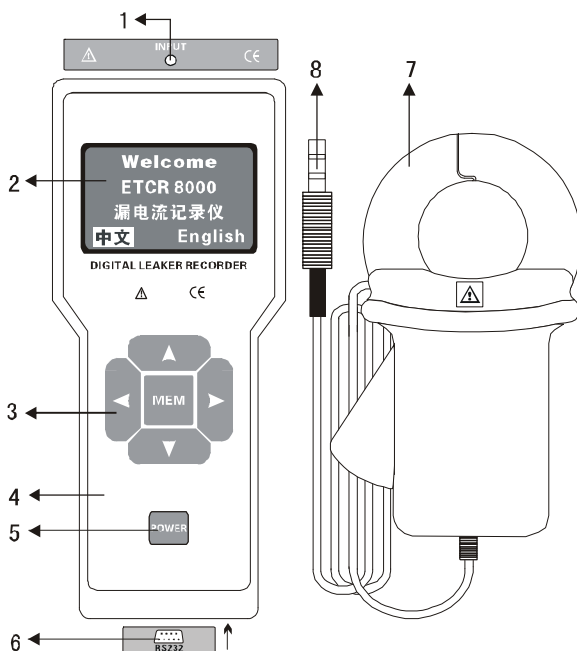

1. Current clamp interface
2. LCD (128dots×64dots, Chinese and English MMI)
3. Up, down, left, right keys and MEM control key
4. Instrument body
5. **POWER** key (for turning on and turning off the instrument)
6. RS232 interface for data download
7. Round-end current clamp
8. Current clamp signal output plug

VI. Instrument Operation

1 Turning on and off

Turn on the instrument by pressing the **POWER** key.


The LCD will light up. The display on the LCD is as shown in the left figure. If the LCD display is dim, the battery voltage may be low. If so, replace the battery



with a new one. Press the **POWER** key again to turn off the instrument. This instrument can not be turned off automatically. Please turn off it after use.

2. Language Selection

Both Chinese and English MMI is built in the instrument to facilitate use by engineers and technicians of different countries. After the instrument has been turned on normally, select the language by pressing the LEFT and RIGHT arrow keys, press the **MEM** key to confirm the selected language and enter the measurement status.

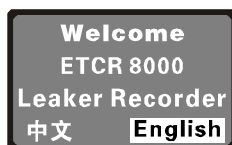

Selecting Chinese MMI

Selecting English MMI

3. Changeover Display Modes

After confirming the selected language and entering the measurement status, press the LEFT and RIGHT arrow keys to change over between measurement display modes. The measured values can be displayed in two modes as shown in Figures A and B. Only the measured leakage current is displayed in Fig. A. The measured leakage current, number of stored data sets, date & time and preset storage interval are displayed in detail in Fig. B. Press the RIGHT arrow key to change over to the display mode as shown in Fig. B, and the LEFT arrow key to change over to the display mode as shown in Fig. A.



Fig. A



Fig. B

4. Selecting Power-saving Mode

Press the DOWN arrow key at the measurement status to turn off the LCD back-light and enter the power-saving mode. Press the UP arrow key to turn on the backlight. The power consumption at the power-saving mode is only 20 percent of the one at the common mode (the backlight is turned on). It is recommended that the power-saving mode be adopted for long-time online measurement and recording.


5. Setting Time

Press the **[MEM]** key at the measurement state to access the function menu, press the UP or DOWN arrow keys to move the cursor to the Time Setting item, and press the **[MEM]** key again to enter the date& time setting mode. At the date& time setting mode, press the UP/DOWN arrow keys to change values, press the LEFT or RIGHT keys to move the cursor, press **[MEM]** key to “confirm” or “cancel” the setting.


After the recording interval has been set, return to the measurement state. The instrument will automatically store the measured values at the set interval. The instrument can store up to 4200 data sets. If the memory is full, FULL will be displayed on the LCD. The instrument can store new data only after some of stored data is deleted.



Function Menu in English

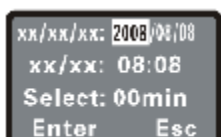

Date & Time Setting Display in English




	The instrument doesn't have automatic clock function. The date and time will reset to the default value (08.08 AM, Aug 8, 2008) each time the instrument is turned on.
	Press the MEM key to “Cancel” or maintain the previous setting.
	The storage interval is defaulted to “00” min each time the instrument is turned on, that is to say, no measured value is stored.

6. Data Inquiry

At the measurement state, press the MEM key to access the function menu, press the UP or DOWN arrow keys to move the cursor to “Data Inquiry” item, and press the MEM key to enter the inquiry submenu. Inside the inquiry submenu, the first left line display the current page number and total pages, the third line displays three sets of recorded values, and the right side displays the page number increment. It is allowed to rapidly navigate to the desired page number. Press the UP or DOWN arrow keys to move the cursor and select the page number increment and then press the MEM key to confirm the selection.

Press the LEFT and RIGHT arrow keys under the inquiry submenu to move the cursor. Press the MEM key with the cursor located at certain data set to display the detailed information about this data set, including the set number /stored data sets, current amplitude and recording time, etc.

Generally speaking, press the arrow keys to move the cursor and press MEM key to confirm the selection under the inquiry submenu. The relevant display is as shown in the following figure:

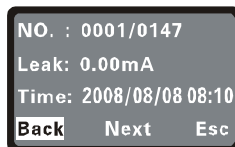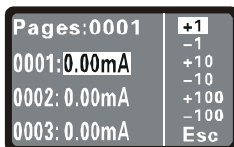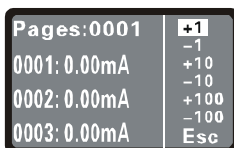

7. Deleting Data


At the measurement state, press the **[MEM]** key to access the function menu, press the UP or DOWN arrow keys to move the cursor to “Deleting Data” item, When press the **[MEM]** key again, a data deleting tips will pop up. Press the **[MEM]** key with the cursor located at “OK” to delete the stored data. Press the MEM key with the cursor at Cancel to cancel the deletion and return to the main menu.


	It is impossible to recover the deleted data. Take care to delete any data.
	The deletion operation will delete all of the stored data.

8. Leakage/current measurement


	Electric shock, dangerous ! The instrument can be operated only by the trained and authorized person. The operators must keep to the safety rules strictly; otherwise, electric shock will result in personal injury or damage to the equipment.
	Don not use the instrument to measure the lines with a voltage of higher than 600V and current of higher than 20A, Otherwise, electric shock will result in personal injury or damage to the equipment.

- 1) Connect the current clamp with the instrument body properly, turn on the instrument and enter the measurement mode.
- 2) Clamp the measured object with the current clamp (ensure that the clamp end should be fully closed). Observe the reading. If an **OL** symbol is displayed on the instrument LCD, the measured current exceeds the upper measurement limit of the instrument.
- 3) Reference legend:


	In order to measure the leakage current of an electrical equipment, clamp the phase line and neutral line. (take care to clamp the two lines)
	In order to measure the leakage current of a ground conductor, clamp the ground conductor. (take care to clamp only one conductor)
	In order to measure the total current of a main line, clamp this main line. (Take care to clamp only one line).
	For the sake of safety, remove the instrument away from the conductor with high voltage and current after measurement has been completed correctly.

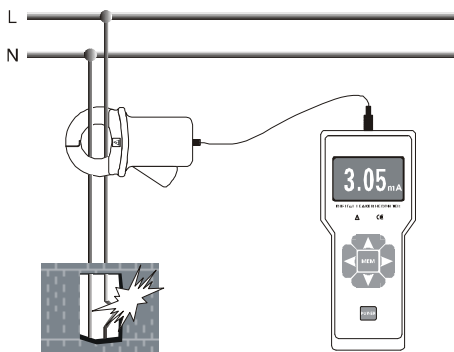


Detect electric leakage of cables embedded in wall

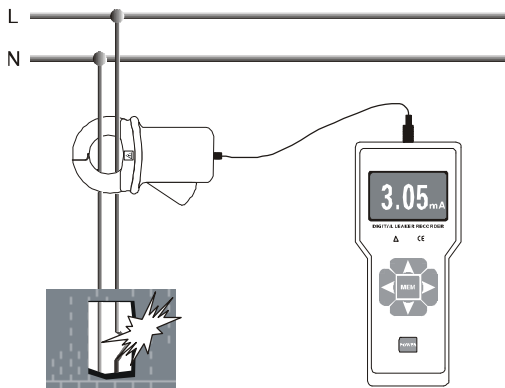

Detect electric leakage of equipments

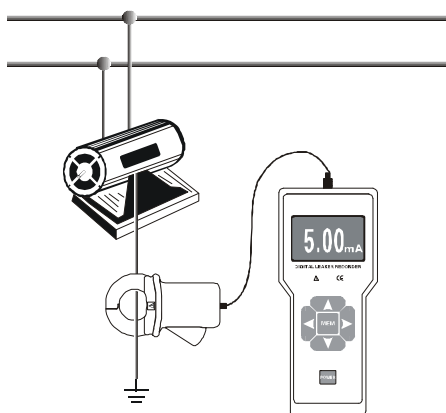

Detect electric leakage of ground conductors

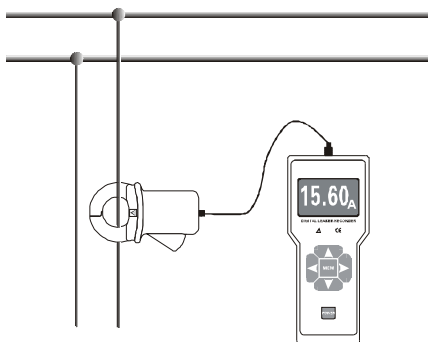

Measure line current

9. Real-time Monitoring

Turn on the instrument and enter the measurement state. Connect a PC with the instrument via a RS232 communication cable supplied with the instrument. Run the **software** installed in the PC. If the communication is normal, the users can monitor current in real-time manner via the PC.

10. Data Download

Connect the instrument with the PC via the RS232 communication cable (supplied with the instrument) and turn on the instrument. Run **software**, select the Historical Inquiry and read the data. The more the data is, longer time it takes to read them. If the instrument memory is full, it takes about 2min to read all data.

VII. How to operate the monitor software


ETCR Leakage/Current Monitoring software needs to be installed in Windows XP/2000 systems. The monitor software provides online and real-time monitoring and historical data inquiry. With the ETCR software, the instrument can display current dynamically, display current waveform, maximum value, minimum value and average value. The users can preset the alarm limit. The instrument will generate an alarm when the measured current exceeds the limit. In addition, the users can read, inquire, store, analyze, process, sequence historical data and generate and print a fitting curve and report. The following paragraphs will describe these functions briefly.

1. Home Page




Enter the real-time monitoring menu by clicking “Enter” with a mouse. Visit the company website for inquiry if the users require other services.

2. Real-time Monitoring Menu

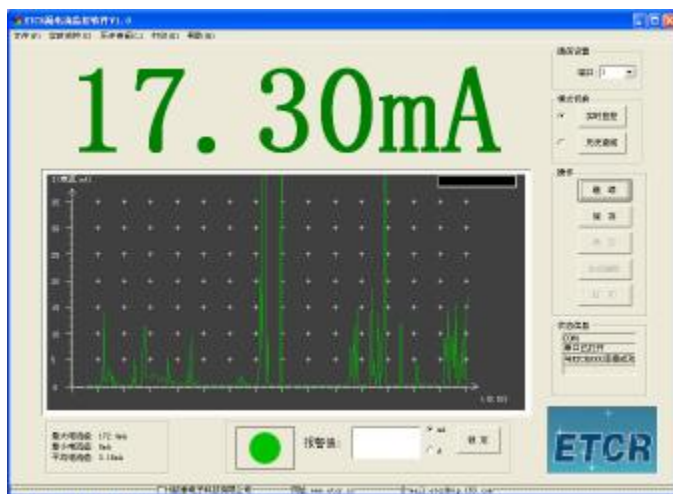


Special notes: You can zoom the waveform by pressing the left key of mouse and dragging the cursor upward or downward when the cursor is located within the waveform display area.

3. Alarm Prompt

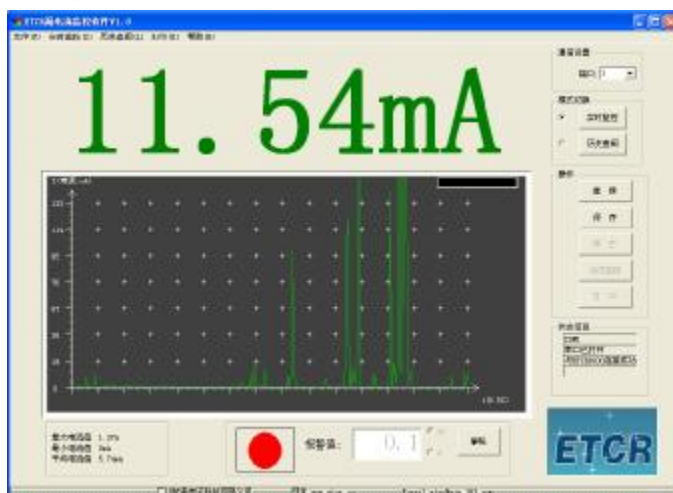


A red alarm lamp will blink when the measured current value exceeds the preset alarm limit. The users may cancel the alarm setting value.

4. Storing Waveform

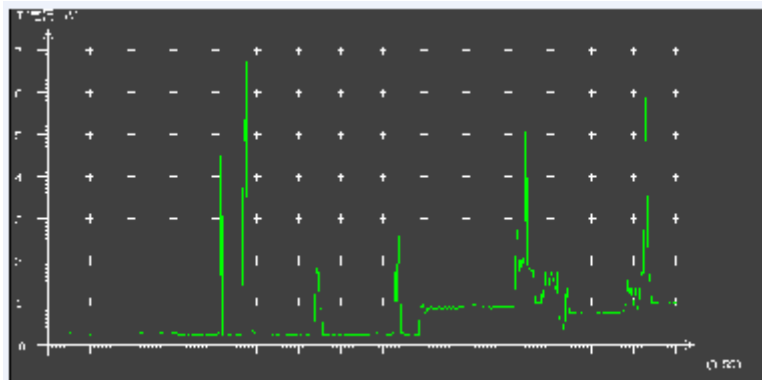


A waveform may be stored while the current is monitored in a real-time manner. A waveform is stored in BMP format.

5. Historical Inquiry Display

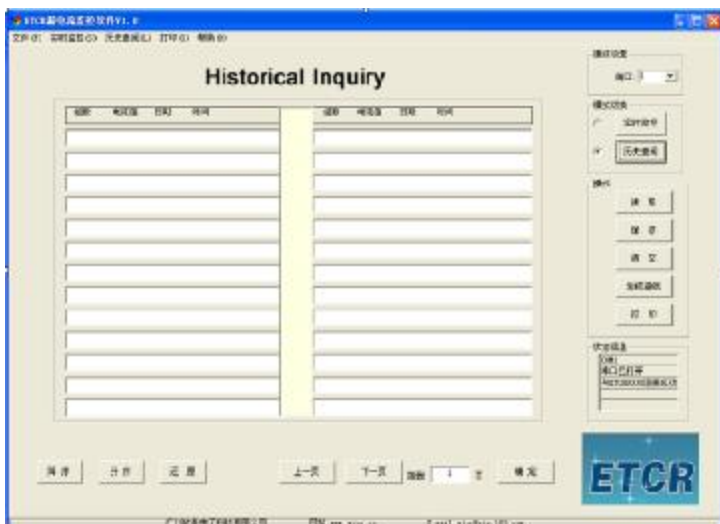

The historical inquiry functions include such functions as reading, storing and clearing historical data, generating a curve, printing data, queuing data in ascending or descending order, data backup and page-up and page-down.

6. Reading Historical Data

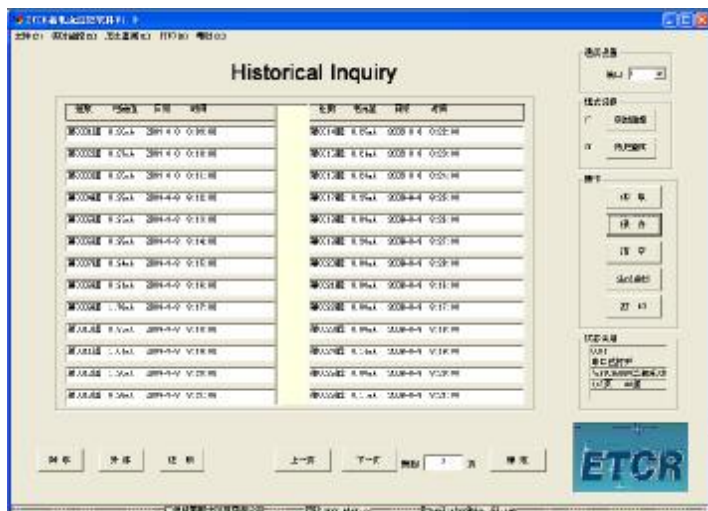

The more the historical data is, longer time it takes to read them. The software provides a reading progress indication.

7. Historical Data Queuing in Ascending Order

设备	中流站	日期	时间	设备	中流站	日期	时间
000001	0.0000	2000-00-00	00:00:00	000001	0.0000	2000-00-00	00:00:00
000002	0.0000	2000-00-00	00:00:00	000002	0.0000	2000-00-00	00:00:00
000003	0.0000	2000-00-00	00:00:00	000003	0.0000	2000-00-00	00:00:00
000004	0.0000	2000-00-00	00:00:00	000004	0.0000	2000-00-00	00:00:00
000005	0.0000	2000-00-00	00:00:00	000005	0.0000	2000-00-00	00:00:00
000006	0.0000	2000-00-00	00:00:00	000006	0.0000	2000-00-00	00:00:00
000007	0.0000	2000-00-00	00:00:00	000007	0.0000	2000-00-00	00:00:00
000008	0.0000	2000-00-00	00:00:00	000008	0.0000	2000-00-00	00:00:00
000009	0.0000	2000-00-00	00:00:00	000009	0.0000	2000-00-00	00:00:00
000010	0.0000	2000-00-00	00:00:00	000010	0.0000	2000-00-00	00:00:00
000011	0.0000	2000-00-00	00:00:00	000011	0.0000	2000-00-00	00:00:00
000012	0.0000	2000-00-00	00:00:00	000012	0.0000	2000-00-00	00:00:00
000013	0.0000	2000-00-00	00:00:00	000013	0.0000	2000-00-00	00:00:00
000014	0.0000	2000-00-00	00:00:00	000014	0.0000	2000-00-00	00:00:00
000015	0.0000	2000-00-00	00:00:00	000015	0.0000	2000-00-00	00:00:00


Queue the historical leakage current values in ascending order. If one value equals to another value, queue them in chronological order.

8. Historical Data Queuing in Descending Order

设备	中流站	日期	时间	设备	中流站	日期	时间
000001	0.0000	2000-00-00	00:00:00	000001	0.0000	2000-00-00	00:00:00
000002	0.0000	2000-00-00	00:00:00	000002	0.0000	2000-00-00	00:00:00
000003	0.0000	2000-00-00	00:00:00	000003	0.0000	2000-00-00	00:00:00
000004	0.0000	2000-00-00	00:00:00	000004	0.0000	2000-00-00	00:00:00
000005	0.0000	2000-00-00	00:00:00	000005	0.0000	2000-00-00	00:00:00
000006	0.0000	2000-00-00	00:00:00	000006	0.0000	2000-00-00	00:00:00
000007	0.0000	2000-00-00	00:00:00	000007	0.0000	2000-00-00	00:00:00
000008	0.0000	2000-00-00	00:00:00	000008	0.0000	2000-00-00	00:00:00
000009	0.0000	2000-00-00	00:00:00	000009	0.0000	2000-00-00	00:00:00
000010	0.0000	2000-00-00	00:00:00	000010	0.0000	2000-00-00	00:00:00
000011	0.0000	2000-00-00	00:00:00	000011	0.0000	2000-00-00	00:00:00
000012	0.0000	2000-00-00	00:00:00	000012	0.0000	2000-00-00	00:00:00
000013	0.0000	2000-00-00	00:00:00	000013	0.0000	2000-00-00	00:00:00
000014	0.0000	2000-00-00	00:00:00	000014	0.0000	2000-00-00	00:00:00
000015	0.0000	2000-00-00	00:00:00	000015	0.0000	2000-00-00	00:00:00

Queue the historical leakage current values in descending order. If one value equals to another value, queue them in reverse chronological order.


9. Historical Data Storage

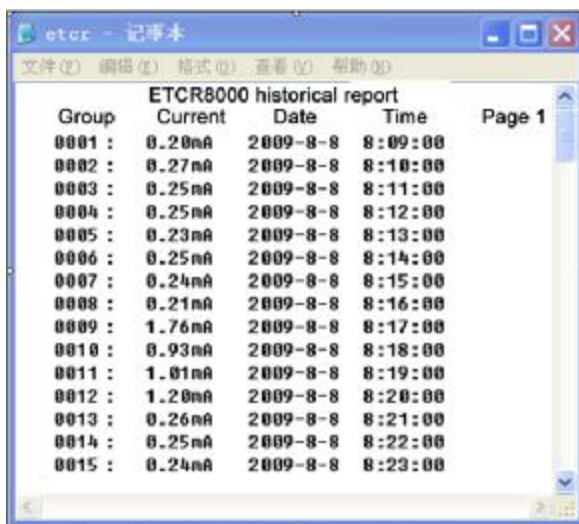


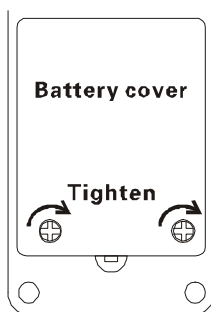
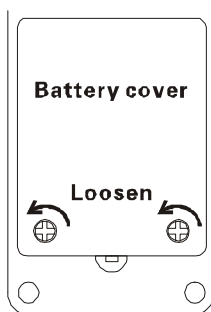
Group	Current	Date	Time	Page 1
0001 :	0.20mA	2009-8-8	8:09:00	
0002 :	0.27mA	2009-8-8	8:10:00	
0003 :	0.25mA	2009-8-8	8:11:00	
0004 :	0.25mA	2009-8-8	8:12:00	
0005 :	0.23mA	2009-8-8	8:13:00	
0006 :	0.25mA	2009-8-8	8:14:00	
0007 :	0.24mA	2009-8-8	8:15:00	
0008 :	0.21mA	2009-8-8	8:16:00	
0009 :	1.76mA	2009-8-8	8:17:00	
0010 :	0.93mA	2009-8-8	8:18:00	
0011 :	1.01mA	2009-8-8	8:19:00	
0012 :	1.20mA	2009-8-8	8:20:00	
0013 :	0.26mA	2009-8-8	8:21:00	
0014 :	0.25mA	2009-8-8	8:22:00	
0015 :	0.24mA	2009-8-8	8:23:00	

The historical data is stored in TXT format in page

VIII. Replacing Battery


	Observe the correct battery polarity, Otherwise, the instrument will be damaged.
	Replace the battery with a new one as soon as possible when the battery voltage is low.
	Don not use the new battery together with a old battery.

- 1) When the battery voltage drops to 4.6V to 4.8V, a  symbol will be displayed on the instrument, indicating the battery voltage is low. Replace the battery immediately.
- 2) Press the **POWER** key to turn off the instrument. After confirming that the instrument has been turned off, open the battery cover and replace with a new battery recommended by the manufacturer. Pay special attention to the correct battery polarity. Replace the battery cover, turn on the instrument and confirm that the instrument can operate properly. (as shown in the following figure)



IX. Accessories

Tester	1 PCS
Current clamp	1 PCS
RS232 communication cable	1 PCS
ETCR monitor software (CD-ROM)	1 PCS
Instrument bag	1 PCS
User manual	1 Copy
Warranty card and quality certificate	1 Copy

 **Manufactured by**

ETCR Electronic Technology Company

Address: F-3F, No.4 Pengshang Zhifu Road, Jiahe, Baiyun District, Guangzhou, Guangdong, China

Post Code: 510440

Tel: (86-20)62199556 62199553

Fax: (86-20)62199550

E-mail: info@etcr.cc

Website: www.etcr.cc