Transmitter for angular position



Ruggedized version





Application

The KINAX WT 707 (Figs. 1 to 6) converts the angular position of a shaft into a load-independent direct current signal, proportional to the angular position. The unit is contact free. The robust housing has made this unit ideal for machines and ship building.



Fig. 1. KINAX WT 707 with plug-in connector.



Fig. 2. KINAX WT 707 with plug-in connector and foot.

Features / Benefits

Measuring input: Angular position

Measured variable	Measuring range limits
Angular position	05 to 0270 ∢ °

- Measuring output: DC current signal (load-independent, 2-, 3- or 4wire connection)
- Potentiometer for adjusting span / Optimum matching of desired measuring range
- Direction of rotation: output signal increases for clockwise or counterclockwise rotation

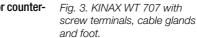




Fig. 4. KINAX WT 707 with additional gear, plug-in connector and foot.

- Capacitive scanning system / No wear and low annual maintenance
- Continuous shaft rotation / No damage when overshooting angle measuring range
- Available with type of protection "Intrinsic safety" EEx ia IIC T6 / Can be mounted in hazardous areas (see "Table 4: Data on explosion protection")
- Ancillary unit in ruggedized housing / Vibration and shock-resistant, for applications on large machines and in ship building
- Marine version also available as per Lloyd's Register of Shipping



Fig. 5. KINAX WT 707 with additional gear, plug-in connector and mounting flange.



Fig. 6. KINAX WT 707 with additional gear, screw terminals, cable glands and foot.

Camille Bauer WT 707 Le 08.98

Transmitter for angular position

Technical data

Measuring input -

 R_{ext} max. $[k\Omega] = \frac{12 \text{ V}}{I_A \text{ [mA]}}$

Angle of rotation α ∢° Measured quantity:

Measuring principle: Capacitive method

> Differential capacitor with contactfree, non-wearing positional pick-up. Drive shaft fully rotatable without

> > mechanical stops

Measuring ranges: 0...≥ 5 to 0... ≤ 270 **∢**°

(without gear)

Preferred ranges

0...10, 0...30, 0...60, 0...90, 0...180 or 0...270 **∢**°

0...≥ 10 **∢**° to 0...1600 turns

(with additional gear)

Frictional torque: Approx. 25 Ncm

Sense of rotation: Clockwise or counterclockwise (seen

from the shaft side).

The same transmitter can be used for both directions of rotation. A switch has to be changed, however, to reverse the direction on transmitters with ranges 0...> 150 to 0...≤ 270 **∢**°, see "Settings".

See Feature 13 and 14 in "Table 3: Specification and ordering information" for direction of rotation on trans-

mitters with additional gear.

External resistance (load):

(for instruments with DC/AC power supply by AC/DC power pack, with

electric isolation)

 R_{ext} max. $[k\Omega] = \frac{H[V] - 12V}{L[m]}$

(for instruments with DC power supply, without electric isolation)

I = Output signal end value

Residual ripple in

output current: < 0.3% p.p.Response time: $< 5 \, \text{ms}$

Accuracy

Reference value: Measuring range

Limit of error ≤ 0.5% for ranges Basic accuracy:

0...≤ 150 **∢**°

Limit of error ≤ 1.5% for ranges from

0...> 150 to 0...270 **∢**°

< 0.2% Reproducibility:

Reference conditions:

23 °C ± 2 K Ambient temperature Power supply H = 18 VExternal resistance $R_{oxt} = 0 \Omega$

Influence effects (maxima): (included in basic error)

Linearity error ± 0.4% for ranges 0...≤ 150 **∢**°

> ± 1.4% for ranges from 0...> 150 to 0...270 **∢**°

Dependence on external

± 0.1% resistance ΔR_{out} max. Power supply influence $\pm 0.1\%$

Additional errors (maxima):

Temperature influence

 \pm 0.2% / 10 K $(-25...+70^{\circ}C)$ Bearing play influence $\pm 0.1\%$

Power supply H →

DC and

AC voltage: Nominal voltages and tolerances see

"Table 1"

Table 1:

Nominal voltages U, Tolerances 24... 60 V DC / AC DC - 15...+ 33% AC ± 15% 85...230 V DC / AC

> (only possible with standard version, non-Ex, with electric isolation. with AC/DC power pack (DC and 45...400 Hz)

Measuring output →

Output variable I,: Load-independent DC current, proportional to the input angle

Zero point correction: Approx. ± 5%

Approx. + 5 / -30%, Span adjustment: see "Feature 9"

Current limitation: I, max. 40 mA

Standard ranges: 0...1 mA, 3- or 4-wire connection

0...5 mA, 3- or 4-wire connection 0...10 mA, 3- or 4-wire connection

4...20 mA, 2-wire connection

0...20 mA, 3- or 4-wire connection adjustable with potentiometer

4...20 mA, 3- or 4-wire connection

0...20 mA, 4-wire connection

Non-standard ranges: 0...> 1.00 to 0...< 20 mA

3- or 4-wire connection

Power consumption: < 0.9 W resp. < 1.8 VA

Power supply

effect on accuracy: ≤ 0.1% within the admissible power

supply tolerance

DC voltage **only**¹: 12...33 V

(possible with standard version, non-

Ex, without electric isolation)

12...30 V

(necessary with **Ex** version, type of protection "Intrinsic safety" EEx ia IIC T6, **without** electric isola-

tion)

Max. residual ripple: 10% p.p.

Max. current consumption: Approx. 5 mA + I_A

Power supply

effect on accuracy: < 0.2% within the admissible power

supply tolerance



Permissible vibration: 0...200 Hz,

(without additional gear) 10 g continuous, 15 g for 2 h

200...500 Hz,

5 g continuous, 10 g for 2 h

Shock: 3×50 g every 10 impulses

in all 3 axes

Permissible static load

on the shaft: Max. 1000 N (radial)

Max. 500 N (axial)

If subjected to vibration the shaft load should be as low as possible to en-

sure optimum life of the bearing

Mounting position: Any

Housing data

Material of housing: Steel

(main part) Finish QPQ

(nitro-carbonated)

Material of back: Plastic (polyester), when plug-in

cable specified

or

metal (aluminium), when cable access via screw terminals and cable

glands

Material of

plug-in connector: Plastic

Material of

cable glands: Metal

The **plug-in connector** consists of a socket mounted on the transmitter and plug on the end of the connecting cable (screw gland) with 7 screw terminals (wire gauges up to 1 mm²). The socket can be mounted so that the cable is routed to either the rear (see Fig. 7) or the front (see Fig. 8).

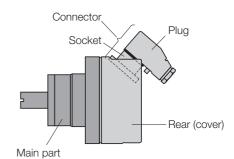


Fig. 7. Cable routed to rear.

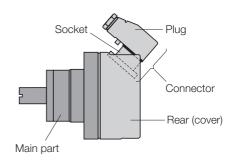


Fig. 8. Cable routed to front.

On units with **screw terminals** and **cable glands PG 11** (see Fig. 9) there are 4 screw terminals and a grounding terminal in the rear cover. The screw terminals accept gauges up to 1.5 mm² and are accessible after removing the cover.

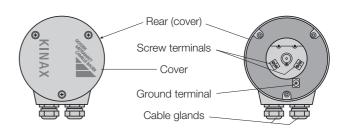


Fig. 9. KINAX WT 707 with screw terminals and cable glands.

Mounting: Directly

(instrument without foot, without

3

flange)

Mounting with foot Mounting with flange

Weight: See Table 2

Table 2:

Weight	Description of parts
Approx. 2.9 kg	KINAX WT 707 without additional gear (also without foot or without flange)
Approx. 3.9 kg	KINAX WT 707 with additional gear (also without foot or without flange)
0.5 kg	Foot (on its own)
0.5 kg	Flange (on its own)

¹ Polarity reversal protection. The voltage must not fall below 12 V.

Transmitter for angular position

Regulations Environmental conditions

Electromagnetic

compatibility: The standards DIN EN 50 081-2 and

DIN EN 50 082-2 are observed

Intrinsic safety: Acc. to EN 50 020: 1994

Test voltage: 2.2 kVrms, 50 Hz, 1 min. between...

... power supply and housing

... power supply and measuring

output

(with DC/AC power supply, with

electric isolation)

500 Vrms, 50 Hz, 1 min.

all electrical connections to housing

(with DC power supply, without

electric isolation)

Housing protection: IP 66 acc. to EN 60 529

Impulse voltage withstand: 1 kV, 1.2/50 $\mu s,$ 0.5 Ws IEC 255-4, Cl. II

Permissible common-

mode voltage: 100 V, 50 Hz

Climatic rating: Standard version

Temperature -25 to + 70 °C

Annual mean relative humidity ≤ 90%

or

version with improved climatic rating

Temperature -40 to + 70 °C

Annual mean relative humidity ≤ 95%

Ex-version

Temperature – 40 to + 60 °C at T6

resp. - 40 to + 75 °C at T5

Transportation and

storage temperature: -40 to 80 °C

Table 3: Specification and ordering information

Order Code 707 –			
Features, Selection	*SCODE	no-go	
1. Version of the transmitter]
Standard, Measuring output non intrinsically safe	A		1
EEx ia IIC T6, ATEX Measuring output intrinsically safe	В		2
6) Ex ia IIC T6, FTZU (Czech republic) Measuring output intrinsically safe	В		6
9) Other versions on request	В		9
2. Sense of rotation			
1) Clockwise	D		. 1
2) Counterclockwise	D		. 2
3) V characteristic	E] . 3
4) Both senses of rotation, marked and calibrated	М] . 4
Lines 1 and 2: Instruments with ranges 0≥ 5 to 0≤ 150 ∢ ° are usable in both senses of rotation. Instruments with ranges 0> 150 to 0≤ 270 ∢ ° can be changed to the other direction. (Beginning and end of the measuring range must be readjusted) Sense of rotation for transmitters with additional gear see "Feature 13 and 14"			
Line 3: V characteristic not possible for instruments with gear			
Line 4: For measuring ranges ≤ 90° only			

atures, Selection	*SCODE	no-go	A	A A		
Measuring range (measuring input) —						
1) 0 10 ∢ °		E	1			
2) 0 30 ∢°		E	2			
3) 0 60 ❖°		E	3			
4) 0 90 ∢ °		Е	4			
5) 0180 ∢ °		EM	5			
6) 0270 ∢ °		EM	6			
9) Non-standard [⊀ °] 0 ≥ 5 to 0< 270		Е	9			
A) V characteristic [± ∢ °]		DM	Α			
both angles separated by an oblique stroke, e.g. [± ◀°] 15 / 90! The stroke of the						
Output signal (measuring output) →						
A) 0 1 mA, 3- or 4-wire connection				Α.		
B) 0 5 mA, 3- or 4-wire connection				В.		
C) 010 mA, 3- or 4-wire connection				С.		
D) 420 mA, 2-wire connection	Н			D.		
020 mA, 3- or 4-wire connection (adjustable with potentiometer) E) 420 mA, 3- or 4-wire connection				Ε.		
F) 020 mA, 4-wire connection	L			Г. F.		
Z) Non-standard, 3- or 4-wire connection [mA]	-			z .		
0 > 1.00 to 0 < 20						
Lines A to Z: R _{ext} max. see Section "Technical data". 4-wire connection, with electric isolation only possible with DC/AC power supply (AC/DC power pack). 2-, 3- or 4-wire connection, without electric isolation only possible with DC power supply. Line F: Only possible with DC/AC power supply (AC/DC power pack)						
Improved climatic rating →						
1) 24 60 V DC/AC, with electric isolation	F	ВН		. 1		
2) 85 230 V DC/AC, with electric isolation	F	BH		. 2		
A) 12 33 V DC, without electric isolation	K	BL		. А		
7 12 Ge V De, William Geome Geometric						

Transmitter for angular position

Order Code 707 –		
Features, Selection	*SCODE	no-go
6. Mounting mode 0) Without foot, without flange 1) With foot (mounted) 2) With flange (mounted)		
7. Material of transmitter rear cover /		
Routing of connecting cable 1) Plastic / connector less cable plug, socket mounted for cable routed to the rear (see Fig. 7, but less plug)		
 Plastic / connector less cable plug, socket mounted for cable routed to the front (see Fig. 8, but less plug) 		
3) Plastic / connector with cable plug, cable routed to the rear (see Fig. 7)		
4) Plastic / connector with cable plug, cable routed to the front (see Fig. 8)		
5) Metal / screw terminals and PG 11 glands (see Fig. 9)		
Line 5: Recommended for DC/AC power supply, 4-wire connection with electric isolation		
8. Special features 0) Without	Y	
1) With		
Without special features (line 0): Order code complete. With special features (line 1): The features to be omitted must be replaced by an oblique stroke (/) in the order code until reaching the required features		
9. Settings (span adjustment)		
 A) Extended setting range + 5% / − 60% Restriction: for angle ≥ 60°, supplementary error 0.2% (also possible on versions with additional gear) 		Y
10. Improved climatic rating		
H) Temperature – 40 to + 70 °C, annual mean relative humidity \leq 95%		BY
J) With Ex version Temperature – 40 to + 60 °C at T6 resp. – 40 to + 75 °C at T5, annual mean relative humidity ≤ 95%		AY
11. Marine version		
L) Version GL ("Germanischer Lloyd")		Υ
12. Increased vibration resistance		
M) Version with DC power supply, without electric isolation	G	FY
N) Version with DC/AC power supply (AC/DC power pack), with electric isolation	G	KY
0200 Hz, 25 g continuous, 30 g for 2 h 200500 Hz, 15 g continuous Not possible with additional gear		

Order Code 707 –				
Features, Selection		*SCODE	no-go	
13. Additional gear 2 : 1 to 144 : 1 Choose the full scale value of KINAX \ ME ≤ 150 ❖°. Limit of error: ≤ 0.5% for ME ≤ 150 < ≤ 1.5% for ME > 150 < Determine the required reduction ratio	I° and I°.			
	uction ratio of turns (end of range of object g measured)			
ME = Full scale value of KINAX WT 70	07 (without gear).			
If "ME" is higher but max. 150 ❖° and then the hysteresis error will be smalle				
Example of calculation of the error of the	∢ ° and j = approx. 1.0 ∢ °			
Gear backlash approx. 1.0 ⊀° for 2 approx. 1.5 ⊀° for 12 approx. 2,0 ≮° for 60	≤i≤ 12,5 ,5 < i≤ 60			
1) Transformation 2:1	\rightarrow / \rightarrow	J	EGY	1
2) Transformation 4:1	\rightarrow / \rightarrow	J	EGY	2
3) Transformation 5:1	→/←	J	EGY	3
4) Transformation 6:1	→/←	J	EGY	4
5) Transformation 8:1	→/←	J	EGY	5
A) Transformation 10:1	\rightarrow / \rightarrow	J	EGY	A
B) Transformation 12:1	\rightarrow / \rightarrow	J	EGY	B
C) Transformation 12,5:1	→/←	J	EGY	C
D) Transformation 15:1	\rightarrow / \rightarrow	J	EGY	D
E) Transformation 16:1	\rightarrow / \rightarrow	J	EGY	<u>E</u>
F) Transformation 20:1	→/←	J	EGY	-
G) Transformation 22:1	→/←	J	EGY	$\left\{ \begin{array}{cccccccccccccccccccccccccccccccccccc$
H) Transformation 24:1	→/←	J	EGY	
J) Transformation 25:1	\rightarrow / \rightarrow	J	EGY	J
K) Transformation 30:1 L) Transformation 32:1	\rightarrow / \rightarrow	J	EGY EGY	_ ``
	→/←	J	EGY	Н
M) Transformation 36:1 N) Transformation 40:1	$\begin{array}{c} \rightarrow / \rightarrow \\ \rightarrow / \rightarrow \end{array}$	J	EGY	- N
O) Transformation 50:1	\rightarrow / \leftarrow	J	EGY	0
P) Transformation 60:1	\rightarrow / \leftarrow	J	EGY	H _ ` ` ` ` ` ` ` ` ` `
Q) Transformation 64:1	\rightarrow / \rightarrow	J	EGY	
		J	EGY	Q R
R) Transformation 72:1 S) Transformation 75:1	\rightarrow / \leftarrow	J	EGY	-
T) Transformation 75:1	\rightarrow / \rightarrow	J	EGY	
U) Transformation 100:1	→/←	J	EGY	_ T
,	\rightarrow / \rightarrow	J		- - - V
V) Transformation 120 : 1 W) Transformation 144 : 1	\rightarrow / \rightarrow	J	EGY EGY	
vvj IIaHSIOHHAUOH 144. I	\rightarrow / \rightarrow	U	LGI	W

Transmitter for angular position

			· ———
Order Code 707 –			
Features, Selection	*SCODE	no-go	1
14. Additional gear 150 : 1 to 1600 : 1			1
Additional gear built-in:			
1) Transformation 150:1 \rightarrow / \leftarrow		EGJY	1
2) Transformation 160:1 $\rightarrow / \rightarrow$		EGJY	2
3) Transformation 180:1 \rightarrow / \leftarrow		EGJY	3
4) Transformation 200:1 \rightarrow / \leftarrow		EGJY	4
A) Transformation 240:1 \rightarrow / \leftarrow		EGJY	_ A
B) Transformation 250:1 $\rightarrow / \rightarrow$		EGJY	В
C) Transformation 300:1 $\rightarrow / \rightarrow$		EGJY	C
D) Transformation 330:1 \rightarrow / \leftarrow		EGJY	D
E) Transformation 360:1 $\rightarrow / \rightarrow$		EGJY] E
F) Transformation 375:1 \rightarrow / \leftarrow		EGJY	F
G) Transformation 400:1 $\rightarrow / \rightarrow$		EGJY	G
H) Transformation 450:1 \rightarrow / \leftarrow		EGJY] н
J) Transformation 480:1 $\rightarrow / \rightarrow$		EGJY	J
K) Transformation 500:1 \rightarrow / \leftarrow		EGJY	К
L) Transformation 550:1 $\rightarrow / \rightarrow$		EGJY] L
M) Transformation 600:1 \rightarrow / \leftarrow		EGJY	M
N) Transformation 660: 1 $\rightarrow / \rightarrow$		EGJY	N
O) Transformation 720:1 \rightarrow/\leftarrow		EGJY	0
P) Transformation 750:1 $\rightarrow / \rightarrow$		EGJY	P
Q) Transformation 800:1 \rightarrow/\leftarrow		EGJY	Q
R) Transformation 880:1 $\rightarrow / \rightarrow$		EGJY	R
S) Transformation 900:1 $\rightarrow / \rightarrow$		EGJY	S
T) Transformation 1000 : 1 \rightarrow / \rightarrow		EGJY	1 т
U) Transformation 1024 : 1 $\rightarrow / \rightarrow$		EGJY] U
V) Transformation 1200 : 1 \rightarrow / \rightarrow		EGJY	V
W) Transformation 1600 : 1 $\rightarrow / \rightarrow$		EGJY	W
\rightarrow / \rightarrow The direction of rotation specified under 2.			1
is not reversed by the reduction gear;			
\rightarrow / \leftarrow The direction of rotation specified under 2.			
is reversed by the reduction gear!			


^{*}Lines with letter(s) under "no-go" cannot be combined with preceding lines having the same letter under "SCODE".

Table 4: Data on explosion protection $\langle \xi_x \rangle$ II 2 G


Order Code	Type of protection Mark Instrument	on "Intrinsic safety" king Measuring output	Certificates	Mounting location of the instrument
707 - 2	EEx ia IIC T6	$U_{i} = 30 \text{ V}$ $I_{i} = 160 \text{ mA}$ $P_{i} = 1 \text{ W}$ $C_{i} \le 10 \text{ nF}$ $L_{i} = 0$	Type Examination Certificate PTB 97 ATEX 2271	Within the hazardous area
707 - 6	Ex ia IIC T6		Czech republic FTZU 98 Ex 0280	

Electrical connections


2-, 3- or 4-wire connection without electric isolation

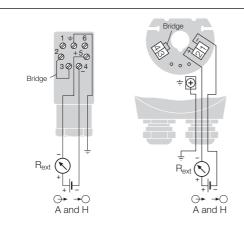

2-wire connection (4...20 mA)

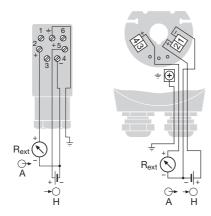

3-wire connection (different mA signals)

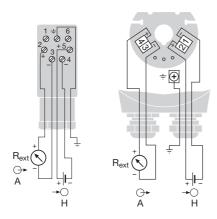


4-wire connection (different mA signals)

- A = Measuring output...
 - ... as 2-wire connection (4...20 mA, signal in output/powering circuit)
 - ... as 3- or 4-wire connection (different mA signals)
- H = **DC** power supply H = 12...33 V resp. H = 12...30 V with **Ex** version

R_{oxt} = External resistance

4-wire connection with electric isolation

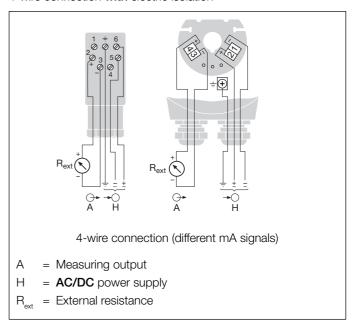

Settings



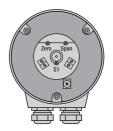


Fig. 10. Position of settings.

Left: Transmitter with plug-in connector.

Right: Transmitter with screw terminals and cable glands.

ZERO = Potentiometer for zero point

SPAN = Potentiometer for measuring range end value

S1 = Switch for reversing direction of rotation for $4 > 150^{\circ}$.

Transmitters with the ordering code $707 - \dots D$ (see "Table 3: Specification and ordering information") are designed for either a 2-wire connection with an output range of 4...20 mA or a 3- or 4-wire connection with an output range of 0...20 mA.

If, however, a transmitter be changed from one to the other (see "Electrical connections"), the beginning and end of the measuring range, ZERO and SPAN must be readjusted.

A switch is provided on angular transmitters with a measuring range $> 150 \, 4^{\circ}$ for reversing the direction of rotation. It is marked S1.

Standard accessories

- 1 Operating Instructions in three languages: German, French, English
- 1 Ex approval, for instruments in Ex version only

Transmitter for angular position

Dimensional drawings

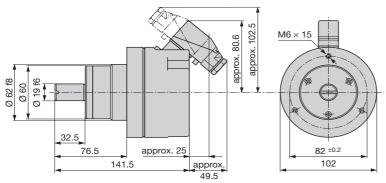


Fig. 11. KINAX WT 707 with plug-in connector.

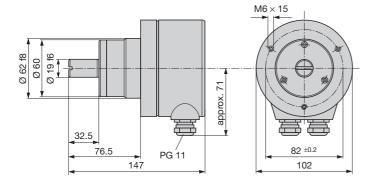


Fig. 12. KINAX WT 707 with screw terminals and cable glands.

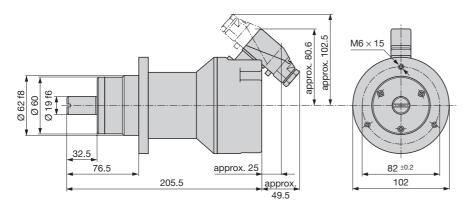


Fig. 13. KINAX WT 707 with additional gear and plug-in connector.

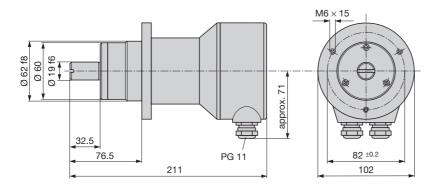


Fig. 14. KINAX WT 707 with additional gear, screw terminals and cable glands.

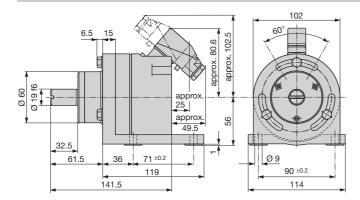


Fig. 15. KINAX WT 707 with plug-in connector and foot.

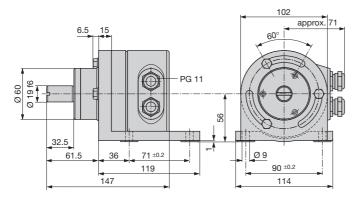


Fig. 16. KINAX WT 707 with screw terminals, cable glands and foot.

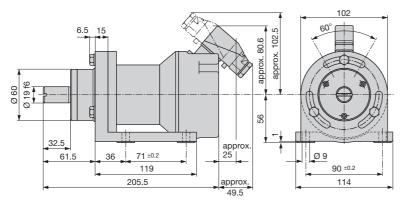


Fig. 17. KINAX WT 707 with additional gear, plug-in connector and foot.

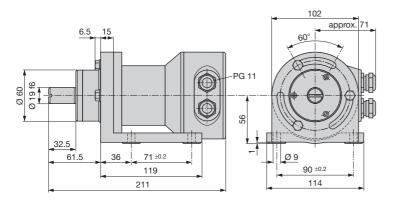


Fig. 18. KINAX WT 707 with additional gear, screw terminals, cable glands and foot.

Transmitter for angular position

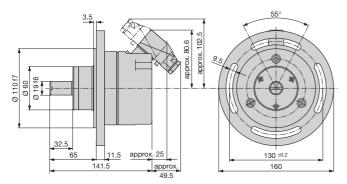


Fig. 19. KINAX WT 707 with plug-in connector and flange.

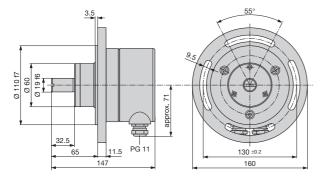


Fig. 20. KINAX WT 707 with screw terminals, cable glands and flange.

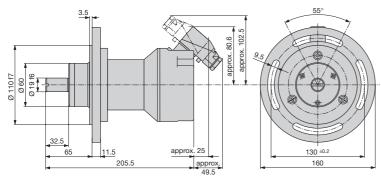


Fig. 21. KINAX WT 707 with additional gear, plug-in connector and flange.

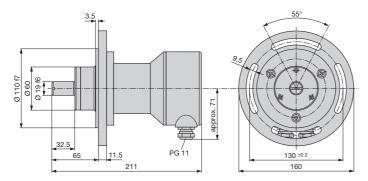


Fig. 22. KINAX WT 707 with additional gear, screw terminals, cable glands and flange.

Printed in Switzerland • Subject to change without notice • Edition 08.98 • Data sheet No. WT 707 Le

COSH PANNET BALLA