# 25MHz DIFFERENTIAL PROBE USER' S MANUAL [LDP-6001]

This probe is in compliance with IEC-61010-031 CAT III, Pollution Degree 2.

## 1. Safety Terms and Symbols

Terms appear in this manual:



WARNING. Warning statements identify conditions or practice that could result in injury or loss life.



CAUTION. Caution statements identify conditions or practice that could result in damage to this product or other property.

#### Symbols appear on the product:







Danger High Voltage Protective (Earth) Terminal

Attention Refer to Manual

# 2. General Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this probe or any products that connected to it.

## **Observe Maximum Working Voltage**

To avoid any injury, do not use the probe under the condition that the voltage between either input lead or earth is above 1000Vrms CAT III. This voltage rating applies to both of 1/10 & 1/100 settings.

#### **Must be Grounded**

This probe is grounded with the shell of BNC connector and an auxiliary grounding terminal, through the grounding conductor of the power cord of the measurement instrument.

Before making connections to the input leads of this probe, ensure that the output BNC connector is attached to the BNC connector of the measurement instrument and the auxiliary grounding terminal is connected to a proper ground, while the measurement instrument is properly grounded.

#### **Use Fused Test Prods if Necessary**

If this probe is intended to use for measurements in circuits of INSTALLATION CATEGORY III, it should incorporate with fused test prods.

#### **Do Not Operate Without Covers**

To avoid electric shock or fire hazard, do not operate this probe with covers removed.

#### **Do Not Operate in Wet/Damp Conditions**

To avoid electric shock, do not operate this probe in wet of damp conditions.

#### Do Not Operate in Explosive Atmosphere

To avoid injury or fire hazard, do not operate this probe in an explosive atmosphere.

### **Avoid Exposed Circuit**

To avoid injury, remove jewelry such as rings, watches, and other metallic objects. Do not touch exposed connections and components when power is present.

#### **Use Proper Power Source**

To ensure this probe function well, use four AA cells or 6VDC/60mA or regulated 9VDC/40mA mains adaptor or power lead. Do not operate this probe from a power source that applies more than the voltage specified.

## **Do Not Operated With Suspected Failures**

If you suspect there is damage to this probe, have it inspected by qualified service personnel.

## 3. Description

By enabling conventional oscilloscopes to display and measure in-circuit waveforms that are referenced to high common mode voltages. The differential probe extends the measurement capability of oscilloscopes in electronic power converters, inverters, motor speed controls, switch mode power supplies, and many applications.

#### 4. Installation

- a. Simply plug-in the BNC output connector to the vertical input of a general purposed oscilloscope or other measurement instrument, and connects the auxiliary grounding terminal to a proper ground. The measurement instrument must have a ground referenced.
- b. Connect an appropriate power source to this probe and then turn it on.
- c. Select the proper attenuation ratio. When measuring signals below 70V, switch the attenuation ratio to 1/10 in order to get higher resolution and less noise ratio. Otherwise, set the attenuation ratio to 1/100 when measuring signals up to 700V.



WARNING. To protect against electric shock, use only the accessories supplied with this probe.


d. Using the appropriate probe accessories, connect the inputs to the circuits under measurement.



CAUTION. This probe is to carry out differential measurement between two points on the circuit under measurement. This probe is not for electrically insulating the circuit under measurement and the measuring instrument.

## 5. Appearance

The differential probe looks as follows.

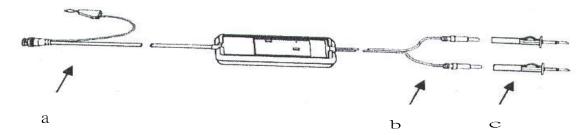

a. Output Cable The BNC output connector and an auxiliary grounding terminal

are connected to the oscilloscope.

b. Input Leads The input leads of the differential probe connect to sprung hooks

that come with the probe.

c. Sprung Hooks The sprung hooks are connected safely to test points in circuits

under measurement.


#### 6. Power Leads

We offer the following power leads;

a. Adaptor-Lead<sup>®</sup>: For the oscilloscope whose power connector is Lemo<sup>®</sup> connector.

b. Adaptor-Probus<sup>®</sup> Lead: For the oscilloscope whose power connector is Probus<sup>®</sup> connector.

c. USB Power Cord: For the oscilloscope which offers USB connector.

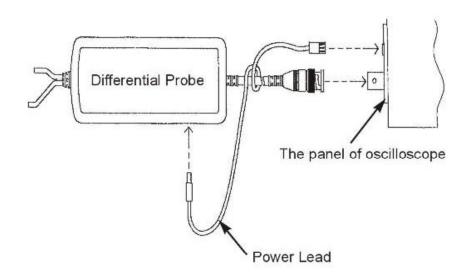

## 7. Specifications

Bandwidth DC to 25MHz (-3dB)

Attenuation Ratio 1:10/100Accuracy  $\pm 2\%$ Rise Time 14ns

Input Impedance  $4M\Omega//5.5pF$  each side to ground

Input Voltage

-Differential Range  $\pm 70 \text{V(DC+Peak AC)}$  or 70 Vrms @1/10

±700V(DC+Peak AC) or 700Vrms @1/100

- Common Mode Range  $\pm 700 \text{V}(\text{DC+Peak AC})$  or 700 Vrms @ 1/10 & 1/100 - Absolute Max. Voltage  $\pm 1400 \text{V}(\text{DC+Peak AC})$  or 1000 Vrms CAT III @ 1/10

(Differential or Common Mode) & 1/100

Output Voltage

- Swing  $\pm 7V$  (into  $50k\Omega$  load)

- Offset (typical) <±5mV - Noise (typical) 0.7mVrms

- Source Impedance (typical)  $50\Omega$  (for using  $1M\Omega$  input system oscilloscope)

CMRR (typical) -86dB @50Hz, -66dB @20kHZ

Ambient Operating Temperature -10 to 40
Ambient Storage Temperature -30 to 70

Ambient Operating Humidity 25 to 85% RH Ambient Storage Humidity 25 to 85% RH

Power Requirements\*

- Standard 4xAA cells

- Options Power leads, Mains adaptor\* (6VDC/60mA

or regulated 9VDC/40mA), USB power cord

Length of BNC Cable 95cm Length of Input Leads 45cm

Weight 400gms (probe and PVC jacket)

Dimensions (LxWxH) 170mm x 63mm x 21mm


a. The supplied voltage must be less than 12V and greater than 4.4V, otherwise the probe could be damaged or can't be operated properly.

b. polarity is "+" inside and "-" outside. For wrong polarity, built-in circuit protects the probe, no danger or damage will occur.

c. When the voltage of the cells become too low, the power indicator on the panel will flicker.

## 8. Derating Curve

The derating curve of the absolute maximum input voltage in common mode is shown as follows;

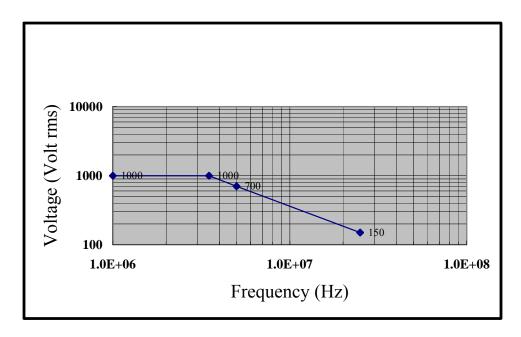

# 9. Inspection Procedure

- a. Connect the BNC output connector to the vertical input of a general purposed oscilloscope.
- b. To install four AA cells or connect an appropriate mains adaptor or power lead to the correct line voltage.
- c. Set the oscilloscope input coupling to DC and the 1V/div. Center the trace on the display.
- d. Connect the inputs of the probe to power lines.
- e. Set the range of the probe to 1/100.
- f. Then, a 50Hz/60Hz sine-wave of proper amplitude will be displayed on the screen of the oscilloscope and this means the probe is working properly.

# 10. Cleaning

Use a soft cloth to clean the dirt. Prevent damage to probe.

- a. Avoid immersing the probe.
- b. Avoid using abrasive cleaners.
- c. Avoid using chemicals contains benzene or similar solvents.

Lemo® and Probus® are the registered trademarks

Date: May 1,2009