

ETCR068C Clamp current sensor

User Manual

Thanks for your purchase of ETCR068C Clamp current Sensor of our company. For better use of the product, please make sure:

- to read this user manual in details.
- to abide by the safety regulations and precautions strictly.

Note:

- ◆ Under any circumstance, it shall pay special attention on safety in use of this sensor.
- ◆ Pay attention to words and symbols stick on the panel.
- ◆ Keep the pliers clean, maintenance regularly.
- ◆ Stop using the sensor when there is a rupture or break.
- ◆ Please don't keep or store the sensor in the spot with high-temperature and moisture, or condensation, and under direct daylight radiation for a long time.
- ◆ This sensor is only to be used, disassembled, and repaired by qualified personnel with authorization.
- ◆ When it may cause hazard by continuous use for the reason of the sensor itself, it shall immediately stop using it and deposit it at once, leaving it for disposal by authorized agency.
- ◆ For risk of danger icon in manual “”, users must perform safety operations strictly in compliance with the manual content.

I . Introduction

ETCR068C Clamp current Sensor is used for measurement of AC current, phase, power energy, power, power factor. Adopt the latest CT technology. It is portable, large clamp design, no need to disconnect the measured circuits, non-contact, safe and fast. It can be connected with phase detection analyzer, industrial control equipment, data recorder, oscilloscope, harmonic analyzer, electric power quality analyzer, high precision digital multi-meter, etc. Widely applied in electricity, communication, meteorology, railway, oilfield, construction, measurement, scientific and research teaching unit, industrial and mining enterprises.

ETCR068C can be used to test AC strong current, and the price is low.


II . Technical Specifications

Function	Measurement of AC current, phase, power energy, power, power factor
Test mode	Clamp CT
Clamp Size	Φ68mm
Range	0.00mA~2000A AC
Resolution	0.1A
Accuracy	±2.0%FS(50Hz/60Hz; 23°C±2°C, below 70%RH, keep the wire be in the center of clamp)
Coils Turn	Standard 2400:1(Customize is allowed)
Phase Error	≤3°(50Hz/60Hz; 23°C±2°C)
Reference Load	RL: 0~200mA≤2Kohm; 0~20A≤20ohm; 0~2000A≤0.2ohm;
Output Mode	Current induction output
Output Interface	2 thread or chose standard probe of multi-meter
Output Wire Length	2m

Electric Field Interference	About 0.3A when the external electric field 100A, 10mm nearby
Measured Wire Position	Approximately in the geometric center of the clamp
Current Frequency	45Hz-60Hz(the frequency of current)
Frequency Feature	40Hz~75kHz
Voltage of circuit	Below AC 600V
Dimension	185mmx115mmx43mm
Weight	530g
Working Environment	-20°C~50°Cbelow 80%rh
Storage Environment	-10°C~60°C;below 70%rh
Insulation Strength	AC 3700V/rms.(between coil and shell)
Safety Rules	IEC1010-1,IEC1010-2-032,Pollution degree:2 CAT III(600V)

III. Principle and Structure

The sensor induced output a current I_1 , the current I_1 generate voltage U on the external sampling load resistance RL , so the measured current I can be calculated by measuring I_1 or U . Among them, $I=n \times I_1$; $U=I_1 \times RL$. n is the coils turn (current ratio).

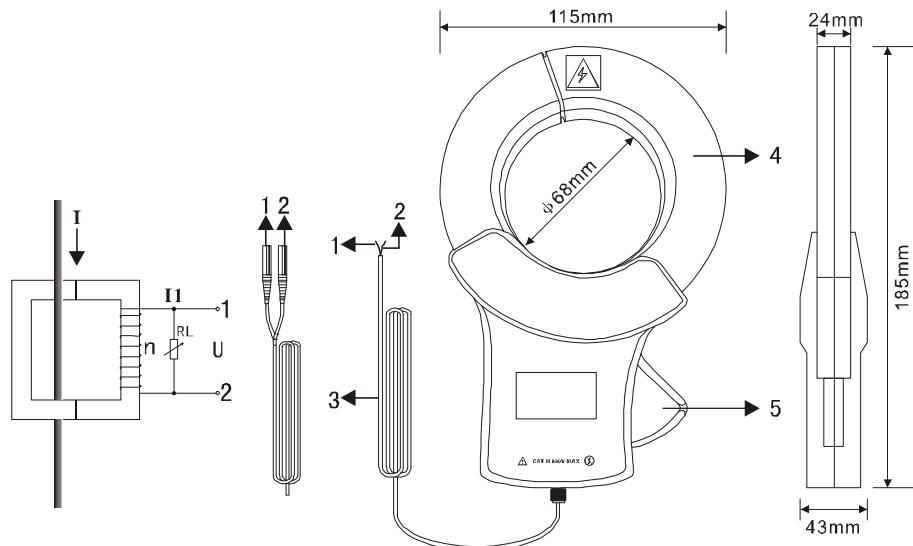

- 1. Coil tap
- 2. Coil tap
- 3. Sensor output wires (2m)
- 4. Clamp
- 5. Trigger. (Open and close the clamp).

(Note: The coil tap can connect to wire directly or you can purchase probe of multi-meter or BNC probe for output.)

Manufactured by

ETCR Electronic Technology Company

Address: F-3F, No.4 Pengshang Zhifu Road, Jiahe, Baiyun District, Guangzhou, Guangdong, China

Post Code: 510440

Tel: (86-20)62199556 62199553

Fax: (86-20)62199550

E-mail: info@etcrc.cc

Website: www.etcrc.cc